

## YASKAWA AC Drive Option

# Analog Input Installation Manual

Type AI-A3

 
To properly use the product, read this manual thoroughly and retain for easy reference, inspection, and maintenance. Ensure the end user receives this manual.

## 安川インバータ オプション

# アナログ入力 取扱説明書

形式 AI-A3

製品を安全にお使いいただくために、この取扱説明書を必ずお読みください。  
また、本書をお手元に保管していただくとともに、最終的に本製品をご使用になるユーザー様のお手元に確実に届けられるよう、お取り計らい願います。

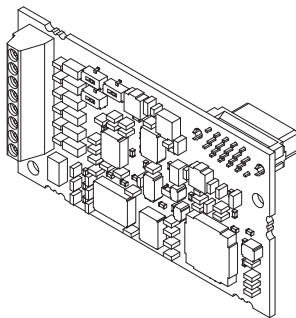

---

## **Copyright © 2016 YASKAWA ELECTRIC CORPORATION**

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, mechanical, electronic, photocopying, recording, or otherwise, without the prior written permission of Yaskawa. No patent liability is assumed with respect to the use of the information contained herein. Moreover, because Yaskawa is constantly striving to improve its high-quality products, the information contained in this manual is subject to change without notice. Every precaution has been taken in the preparation of this manual. Yaskawa assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information contained in this publication.

# Table of Contents

---

<b>1</b>	<b>PREFACE AND SAFETY</b> .....	<b>4</b>
<b>2</b>	<b>OVERVIEW</b> .....	<b>8</b>
<b>3</b>	<b>RECEIVING</b> .....	<b>9</b>
<b>4</b>	<b>OPTION COMPONENTS</b> .....	<b>10</b>
<b>5</b>	<b>INSTALLATION PROCEDURE</b> .....	<b>11</b>
<b>6</b>	<b>RELATED PARAMETERS</b> .....	<b>39</b>
<b>7</b>	<b>TROUBLESHOOTING</b> .....	<b>46</b>
<b>8</b>	<b>EUROPEAN STANDARDS</b> .....	<b>51</b>
<b>9</b>	<b>SPECIFICATIONS</b> .....	<b>54</b>

## 1 Preface and Safety

YASKAWA Electric supplies component parts for use in a wide variety of industrial applications. The selection and application of YASKAWA products remain the responsibility of the equipment designer or end user.

YASKAWA accepts no responsibility for the way its products are incorporated into the final system design. Under no circumstances should any YASKAWA product be incorporated into any product or design as the exclusive or sole safety control. Without exception, all controls should be designed to detect faults dynamically and fail safely under all circumstances. All products designed to incorporate a component part manufactured by YASKAWA must be supplied to the end user with appropriate warnings and instructions as to the safe use and operation of that part. Any warnings provided by YASKAWA must be promptly provided to the end user. YASKAWA offers an express warranty only as to the quality of its products in conforming to standards and specifications published in the manual. **NO OTHER WARRANTY, EXPRESS OR IMPLIED, IS OFFERED.** YASKAWA assumes no liability for any personal injury, property damage, losses, or claims arising from misapplication of its products.

### ◆ Applicable Documentation

The following manuals are available for the option:

#### Analog Input AI-A3 Option

<b>YASKAWA AC Drive Option Analog Input AI-A3 Installation Manual Manual No: TOBP C730600 78 (This book)</b>	This guide is packaged together with the product and contains information necessary to install the option and set related drive parameters.
--	---

#### Yaskawa Drive

<b>YASKAWA AC Drive Manuals</b>	Drive manuals contain basic installation and wiring information in addition to detailed parameter setting, fault diagnostic, and maintenance information. The most recent versions of these manuals are available for download on our documentation websites: U.S.: <a href="http://www.yaskawa.com">http://www.yaskawa.com</a> Europe: <a href="http://www.yaskawa.eu.com">http://www.yaskawa.eu.com</a> Japan: <a href="http://www.e-mechatronics.com">http://www.e-mechatronics.com</a> Other areas: Check the back cover of these manuals. For questions, contact Yaskawa or a Yaskawa representative.
-------------------------------------	--



## ◆ Terms

<b>Note:</b>	Indicates supplemental information that is not related to safety messages
<b>Option:</b>	YASKAWA AC Drive Option Analog Input
<b>Drive:</b>	<ul style="list-style-type: none"><li>• YASKAWA AC Drive 1000-Series (A1000, U1000)</li><li>• YASKAWA AC Drive GA700</li><li>• YASKAWA AC Drive GA800</li><li>• YASKAWA AC Drive CR700</li><li>• YASKAWA AC Drive CH700</li><li>• YASKAWA AC Drive FP605</li></ul>
<b>Keypad:</b>	<ul style="list-style-type: none"><li>• LCD Operator for YASKAWA AC Drive 1000-Series</li><li>• LED Operator for YASKAWA AC Drive 1000-Series</li><li>• LCD Keypad for YASKAWA AC Drive GA700, GA800, CR700, CH700, and FP605</li><li>• LED Keypad for YASKAWA AC Drive GA700, GA800, CR700, CH700, and FP605</li></ul>

## ◆ Registered Trademarks

Trademarks are the property of their respective owners.

## ◆ Supplemental Safety Information

Read and understand this manual before installing, operating, or servicing this option. Install the option according to this manual and local codes.

The following conventions indicate safety messages in this manual. Failure to heed these messages could cause fatal injury or damage products and related equipment and systems.

### **DANGER**

Indicates a hazardous situation, which, if not avoided, will cause death or serious injury.

### **WARNING**

Indicates a hazardous situation, which, if not avoided, could cause death or serious injury.

# 1 Preface and Safety

---

## CAUTION

Indicates a hazardous situation, which, if not avoided, could cause minor or moderate injury.

## NOTICE

Indicates an equipment damage message.

### ■ General Safety

#### General Precautions

- The diagrams in this book may include options and drives without covers or safety shields to illustrate details. Be sure to reinstall covers or shields before operating any devices. Use the option according to the instructions described in this manual.
- The diagrams in this manual are provided as examples only and may not pertain to all products covered by this manual.
- The products and specifications described in this manual or the content and presentation of the manual may be changed without notice to improve the product and/or the manual.
- Contact Yaskawa or a Yaskawa representative and provide the manual number shown on the front cover to order new copies of the manual.

## DANGER

**Heed the safety messages in this manual.**

Failure to comply will cause death or serious injury.

The operating company is responsible for any injuries or equipment damage resulting from failure to heed the warnings in this manual.

### **WARNING**

#### **Electrical Shock Hazard**

**Do not attempt to modify or alter the drive or drive circuitry in any way not explained in this manual.**

Failure to comply could cause death or serious injury and will void warranty. Yaskawa is not responsible for any modification of the product made by the user. Do not modify this product.

### **NOTICE**

**Do not modify the drive or option circuitry.**

Failure to comply could result in damage to the drive or option and will void warranty. Yaskawa is not responsible for any modification of the product made by the user.

**Do not expose the drive or the option to halogen group disinfectants. Do not pack the drive or the option in fumigated or sterilized wooden materials. Do not sterilize the entire package after packing the product.**

Failure to comply could damage electrical components in the option.

# 2 Overview

Installation of the Analog Input Option AI-A3 allows the user to input a high precision, high resolution analog signal reference to the drive. The option terminals can be set either as separate functions for each terminal to use the multi-function analog input terminals on the option for a higher resolution signal, or as a combined input where the drive adds the input of all signals to the option to build the frequency reference.

The option has an input signal of -10 to 10 Vdc (20 k $\Omega$ ) or 4 to 20 mA (250  $\Omega$ ) with three input channels, DIP switches to select voltage/current input, 13-bit signed (1/8192) input voltage resolution, and 1/4096 current input resolution.

---

### ◆ Compatible Products

The option can be used with the products in [Table 1](#).

**Table 1 Compatible Products**

Product Series	Model(s)
A1000	All models
U1000	All models
GA700	All models
GA800	All models
CR700	All models
CH700	All models
FP605	All models

## 3 Receiving




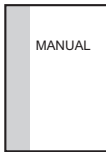
After receiving the option package:

1. Make sure that the option is not damaged and no parts are missing. Contact your sales outlet if the option or other parts appear damaged.

**NOTICE:** Do not use damaged parts to connect the drive and the option. Failure to comply could damage the drive and option.

2. Confirm that the model number on the option nameplate and the model listed in the purchase order are the same. Refer to [Figure 1](#) on page 10 for details. Contact the distributor where the option was purchased or contact Yaskawa or a Yaskawa representative about any problems with the option.

### ◆ Option Package Contents

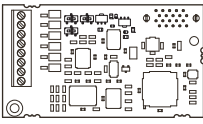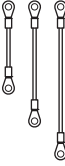Description:	Option	Ground Wires <1>	Screws (M3)	Installation Manual
-				
Quantity:	1	3	3 <2>	1

<1> GA700, GA800, CR700, and CH700 drives do not use the ground wire.

 
<2> GA700, GA800, CR700, CH700, and FP605 drives use two screws only.

### ◆ Installation Tools

- A Phillips screwdriver. Phillips screw sizes vary by drive capacity.
- A flat-blade screwdriver (blade depth: 0.4 mm (0.02 in), width: 2.5 mm (0.1 in)).
- A pair of diagonal cutting pliers.
- A small file or medium-grit sandpaper.

# 4 Option Components

## ◆ Analog Input Option

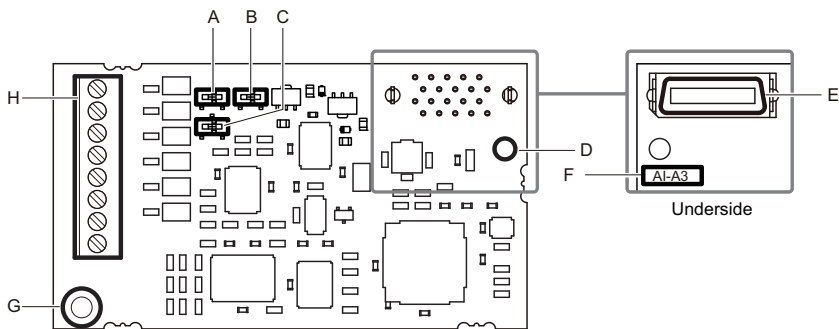

A – DIP switch S1 for terminal V1 input signal selection (voltage/current)

B – DIP switch S2 for terminal V2 input signal selection (voltage/current)

C – DIP switch S3 for terminal V3 input signal selection (voltage/current)

D – Installation Hole

E – Connector (CN5)

F – Option model number


G – Ground terminal (FE) and installation hole <1>

H – Terminal block TB1

<1> Connect the provided ground wire during installation. Installation on GA700, GA800, CR700, and CH700 drives does not require the ground wire.

Figure 1 Analog Input AI-A3 Option Components

## ◆ Terminal Block TB1

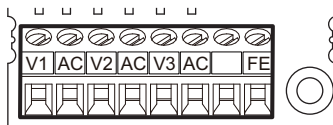 

Refer to [Table 5](#) on page 38 for details on TB1 terminal functions and signal levels.

## 5 Installation Procedure

### ◆ Section Safety

#### DANGER

##### **Electrical Shock Hazard**

**Do not inspect, connect, or disconnect any wiring while the drive is energized.**

Failure to comply will cause death or serious injury.

Before servicing, disconnect all power to the equipment and wait for at least the time specified on the warning label. The internal capacitor remains charged even after the drive is de-energized. The charge indicator LED will extinguish when the DC bus voltage is below 50 Vdc. When all indicators are OFF, measure for unsafe voltages to confirm the drive is safe.

#### WARNING

##### **Electrical Shock Hazard**

**Do not operate equipment with covers removed.**

Failure to comply could cause death or serious injury.

The diagrams in this section may include options and drives without covers or safety shields to illustrate details. Reinstall covers and shields before operating the drive and run the drive according to the instructions described in this manual.

**Do not allow unqualified personnel to perform work on the drive or option.**

Failure to comply could cause death or serious injury.

Only authorized personnel familiar with installation, adjustment, and maintenance of AC drives and options may perform work.

**Do not remove covers or touch circuit boards while the drive is energized.**

Failure to comply could cause death or serious injury.

## 5 Installation Procedure

### WARNING

**Do not use damaged wires, stress the wiring, or damage the wire insulation.**

Failure to comply could cause death or serious injury.

#### **Fire Hazard**

**Tighten all terminal screws to the specified tightening torque.**

Loose or overtightened connections could cause erroneous operation and damage to the terminal block or start a fire and cause death or serious injury.

### NOTICE

#### **Damage to Equipment**

**Observe proper electrostatic discharge (ESD) procedures when handling the option, drive, and circuit boards.**

Failure to comply could cause ESD damage to circuitry.

**Never connect or disconnect the motor from the drive while the drive is outputting voltage.**

Improper equipment sequencing could damage the drive.

**Do not connect or operate any equipment with visible damage or missing parts.**

Failure to comply could further damage the equipment.

**Do not use unshielded wire for control wiring.**

Failure to comply may cause electrical interference resulting in poor system performance. Use shielded, twisted-pair wires and ground the shield to the ground terminal of the drive.

**Properly connect all pins and connectors on the option and drive.**

Failure to comply could prevent proper operation and damage equipment.

**Confirm that all connections are correct after installing the option and connecting peripheral devices.**

Failure to comply could damage the option.



### ◆ Option Installation and Wiring Procedures

Procedures for installing and wiring options differ depending on the product.

Refer to [Table 2](#) to check the procedures for installing and wiring options on a drive.

**Table 2 Option Installation and Wiring Procedures**

Product Series	Option Installation and Wiring Procedures	Page
A1000	Procedure A	<a href="#">14</a>
U1000	Procedure A	<a href="#">14</a>
GA700	Procedure B	<a href="#">21</a>
GA800	Procedure B	<a href="#">21</a>
CR700	Procedure B	<a href="#">21</a>
CH700	Procedure B	<a href="#">21</a>
FP605	Procedure C	<a href="#">28</a>

## 5 Installation Procedure

### ■ Procedure A

 
This section shows the procedure to install and wire the option on a 1000-series drive.

#### Prepare the Drive for the Option

1. Correctly wire the drive as specified by the manual packaged with the drive.

2. Make sure that the drive functions correctly.

Refer to [Figure 2](#) for an exploded view of the drive with the option and related components for reference in the installation procedure.

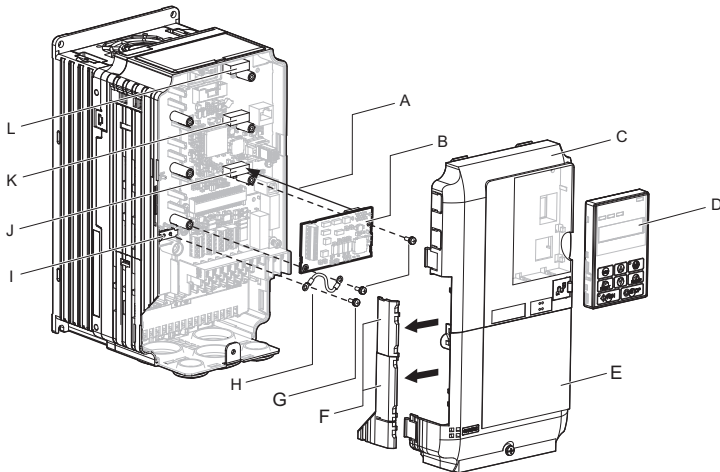

A – Insertion point for CN5

B – Option card

C – Front cover

D – Keypad

E – Terminal cover

F – Removable tabs for wire routing

G – Included screws

H – Ground wire

I – Drive grounding terminal (FE)

J – Connector CN5-A

K – Connector CN5-B

L – Connector CN5-C

Figure 2 Drive Components with Option

### Install the Option

Refer to the instructions below to install the option.

**DANGER!** *Electrical Shock Hazard. Do not inspect, connect, or disconnect any wiring while the drive is energized. Failure to comply will cause death or serious injury. Before servicing, disconnect all power to the equipment and wait for at least the time specified on the warning label. The internal capacitor remains charged even after the drive is de-energized. The charge indicator LED will extinguish when the DC bus voltage is below 50 Vdc. When all indicators are OFF, measure for unsafe voltages to confirm the drive is safe.*

1. Shut off power to the drive, wait the appropriate amount of time for voltage to dissipate, then remove the keypad (D) and front covers (C, E). Refer to the manual packaged with the drive for details on keypad and cover removal.

**NOTICE:** *Damage to Equipment. Observe proper electrostatic discharge (ESD) procedures when handling the option, drive, and circuit boards. Failure to comply could cause ESD damage to circuitry.*


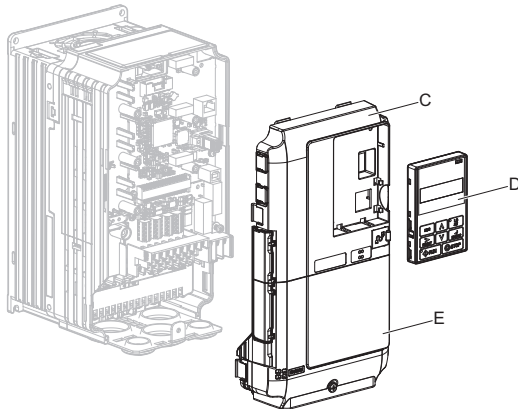 


Figure 3 Remove the Keypad, Front Cover, and Terminal Cover

## 5 Installation Procedure


2. Insert the option card (B) into the CN5-A (J), CN5-B (K), or CN5-C (L) connector on the drive and fasten it into place using one of the included screws (G). Tighten both screws to 0.5 to 0.6 N·m (4.4 to 5.3 in·lb).

**Note:** Install the option to ports CN5-B and CN5-C on the drive for monitoring purposes only and input levels will be displayed in monitors U1-21 to U1-23. The option will not set the frequency reference or replace the drive analog input with higher resolution inputs when connected to ports CN5-B or CN5-C.

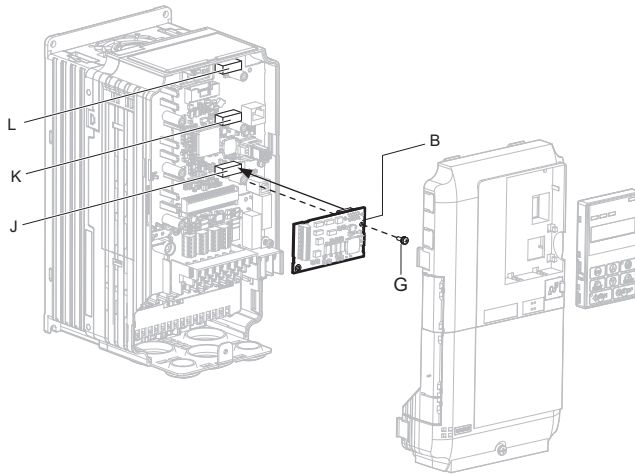 


**Figure 4** Insert the Option Card

3. Connect one end of the ground wire (H) to the ground terminal (I) using one of the remaining provided screws (G). Connect the other end of the ground wire (H) to the remaining ground terminal and installation hole on the option (B) using the last remaining provided screw (G). Tighten both screws to 0.5 to 0.6 N·m (4.4 to 5.3 in·lb).

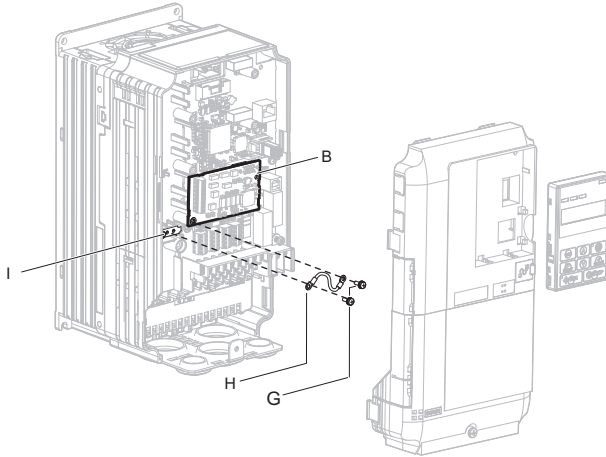 

**Figure 5 Connect the Ground Wire**

- Note:**
1. The option package includes three ground wires. Use the longest wire to connect the option to CN5-C. Use the next longest wire to connect the option to CN5-B. Use the shortest wire to connect the option to CN5-A. Refer to [Option Package Contents on page 9](#) for more information.
  2. The drive has only two ground terminal screw holes (I). Two ground wires should share the same ground terminal when connecting three options.
4. Set DIP switches S1, S2, and S3 on the option for current or voltage input on terminals V1, V2, and V3. The default configuration is set to voltage input for all terminals.

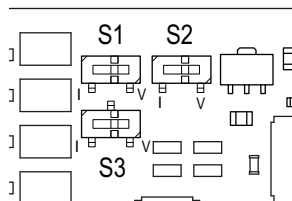 


**Figure 6 Option DIP Switches**

## 5 Installation Procedure

5. Prepare and connect the wire ends as shown in [Figure 7](#) and [Figure 8](#). Refer to [Wire Gauges and Tightening Torques on page 37](#) to confirm that the proper tightening torque is applied to each terminal. Take particular precaution to ensure that each wire is properly connected and wire insulation is not accidentally pinched into electrical terminals.


**WARNING! Fire Hazard.** Tighten all terminal screws according to the specified tightening torque. Loose electrical connections could result in death or serious injury by fire due to overheating electrical connections. Tightening screws beyond the specified tightening torque may cause erroneous operation, damage the terminal block, or cause a fire.

**NOTICE:** Heat shrink tubing or electrical tape may be required to ensure that cable shielding does not contact other wiring. Insufficient insulation may cause a short circuit and damage the option or drive.

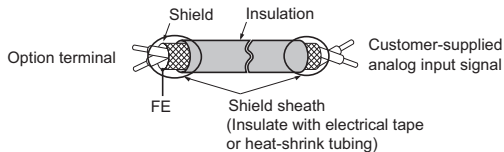 

**Figure 7 Prepare Ends of Shielded Cable**

6. Wire the customer-supplied analog input signal to terminal block on the option according to [Figure 8](#). Refer to [Figure 29](#) for the AI-A3 Option connection diagram. Refer to [Table 5](#) for a detailed description of the option terminal functions.

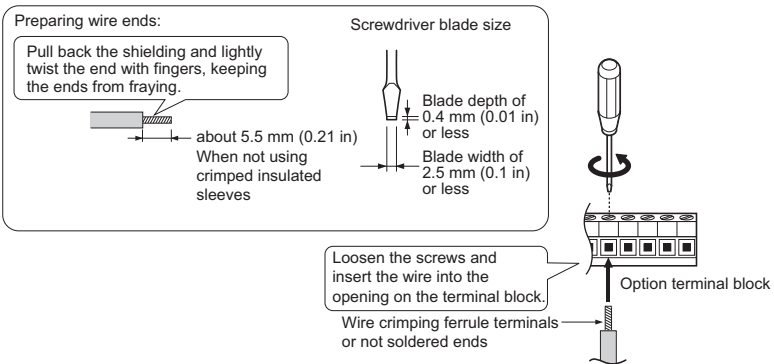 

**Figure 8 Connect Cable Wiring**

7. Route the option wiring inside the enclosure as shown in [Figure 9-B](#). Take proper precautions so that the front covers will easily fit back onto the drive. Users may also choose to route the option wiring through openings on the front cover of some models. Remove the perforated tabs on the left side of the front cover as shown in [Figure 9-A](#) to create the necessary openings on these models. Refer to the Peripheral Devices & Options section of the drive instruction manual for more information.

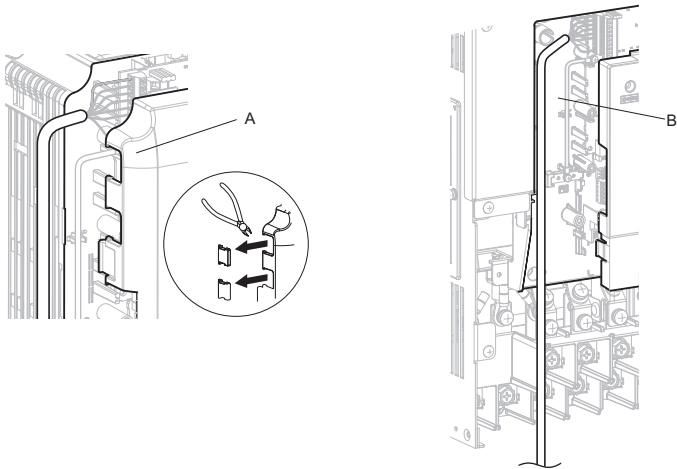 



Figure 9 Wire Routing Examples

## 5 Installation Procedure

---

8. Reattach the drive front covers (C, E) and the keypad (D).

**NOTICE:** Do not pinch cables between the front covers and the drive. Failure to comply could cause erroneous operation.

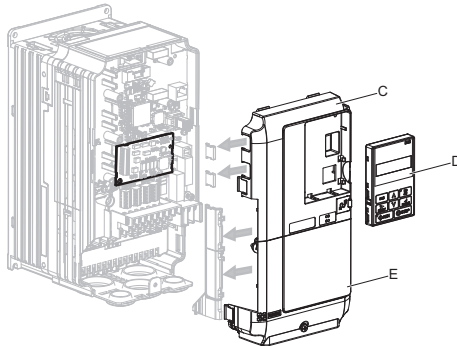 

**Figure 10** Replace the Front Covers and Keypad

9. Set drive parameters in [Table 6](#) for correct option performance.



### ■ Procedure B

This section shows the procedure to install and wire the option on a GA700, GA800, CR700, or CH700 drive.

#### Prepare the Drive for the Option

1. Correctly wire the drive as specified by the manual packaged with the drive.
2. Make sure that the drive functions correctly.  
Refer to [Figure 11](#) for an exploded view of the drive with the option and related components for reference in the installation procedure.

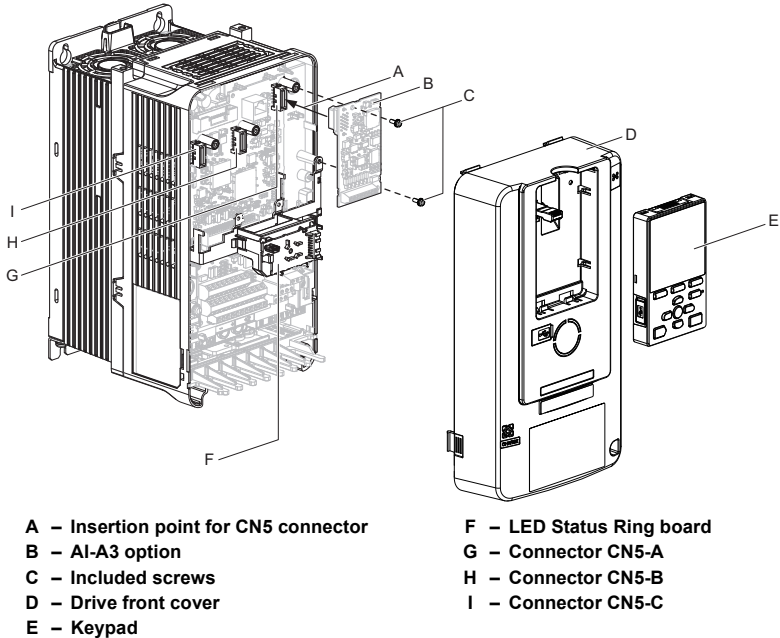 


Figure 11 Drive Components with Option

## 5 Installation Procedure

### Install the Option

**DANGER! Electrical Shock Hazard.** Do not inspect, connect, or disconnect any wiring while the drive is energized. Failure to comply will cause death or serious injury. Before servicing, disconnect all power to the equipment and wait for at least the time specified on the warning label. The internal capacitor remains charged even after the drive is de-energized. The charge indicator LED will extinguish when the DC bus voltage is below 50 Vdc. When all indicators are OFF, measure for unsafe voltages to confirm the drive is safe.

1. Shut off power to the drive, wait the appropriate amount of time for voltage to dissipate, confirm all charge indicator LEDs extinguish, then remove the front cover (D) including the keypad (E). Refer to the manual packaged with the drive for details on cover removal.

**NOTICE:** Observe proper electrostatic discharge (ESD) procedures when handling the option, drive, and circuit boards. Failure to comply could cause ESD damage to circuitry.


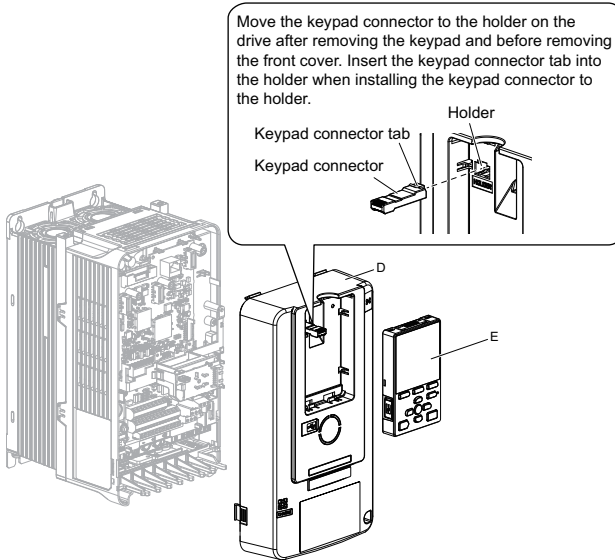 


Figure 12 Remove the Front Cover Including Keypad

- Carefully remove the LED Status Ring board (F) and place it on the right side of the drive using the temporary placement holes. Refer to the manual packaged with the drive for details on removing the LED Status Ring board.

**NOTICE:** Do not remove the LED Status Ring board cable connector. Failure to comply could cause erroneous operation and damage the drive.

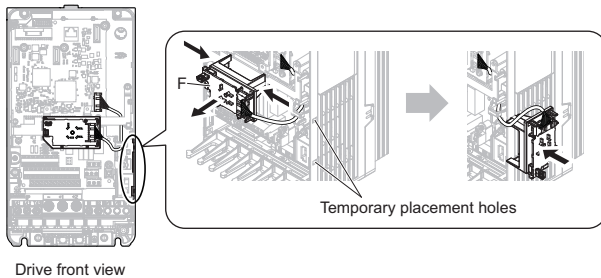 

**Figure 13 Remove the LED Status Ring Board**

## 5 Installation Procedure

3. Insert the option card (B) into the CN5-A (G), CN5-B (H) and CN5-C (I) connector on the drive and fasten it into place using the included screws (C). Tighten both screws to 0.5 to 0.6 N·m (4.4 to 5.3 in·lb).

- Note:**
1. Installing the option card on GA700, GA800, CR700, and CH700 drives requires only two screws and does not require a ground wire. The option package ships with three screws and ground wires for installation on other product series. Do not use the ground wire or the extra screw.
  2. Install the option to ports CN5-B and CN5-C on the drive for monitoring purposes only and input levels will be displayed in monitors U1-21 to U1-23. The option will not set the frequency reference or replace the drive analog input with higher resolution inputs when connected to ports CN5-B or CN5-C.

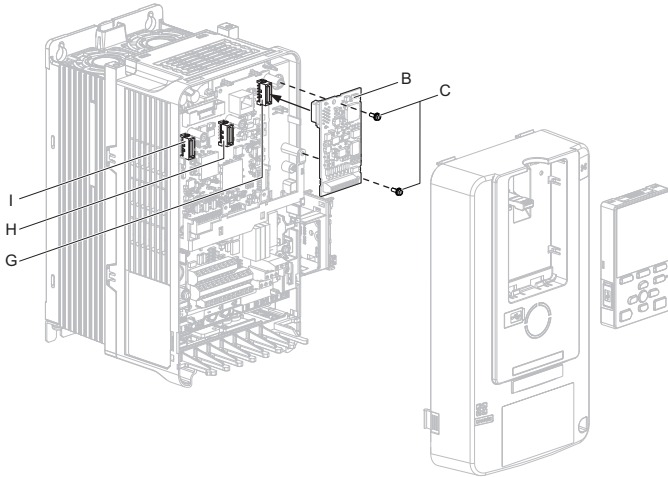 


Figure 14 Insert the Option Card

4. Set DIP switches S1, S2, and S3 on the option for current or voltage input on terminals V1, V2, and V3. The default configuration is set to voltage input for all terminals.


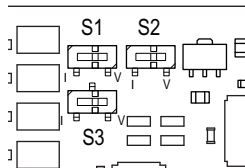 



Figure 15 Option DIP Switches

5. Prepare the wire ends as shown in **Figure 16**.

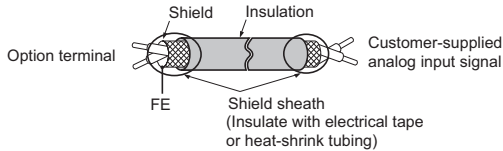 

**Figure 16 Prepare Ends of Shielded Cable**

6. Wire the customer-supplied analog input signal to terminal block on the option according to **Figure 17**. Refer to **Figure 29** for the AI-A3 Option connection diagram. Refer to **Table 5** for a detailed description of the option terminal functions.

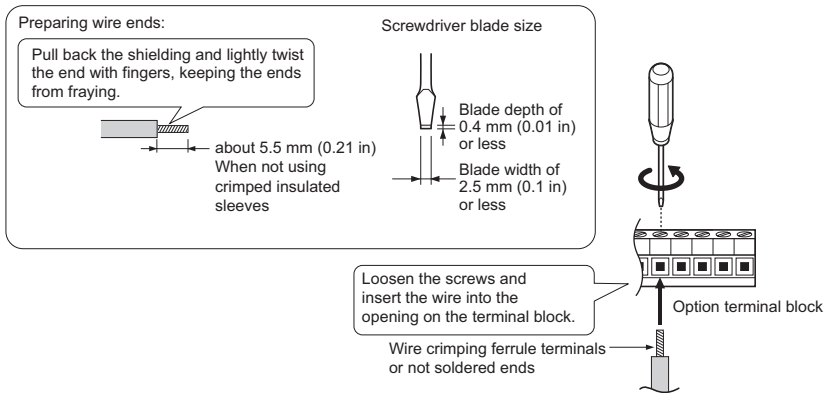 

**Figure 17 Connect Cable Wiring**

## 5 Installation Procedure

7. Reattach the LED Status Ring board (F) and the front cover of the drive (D) including the keypad (E).


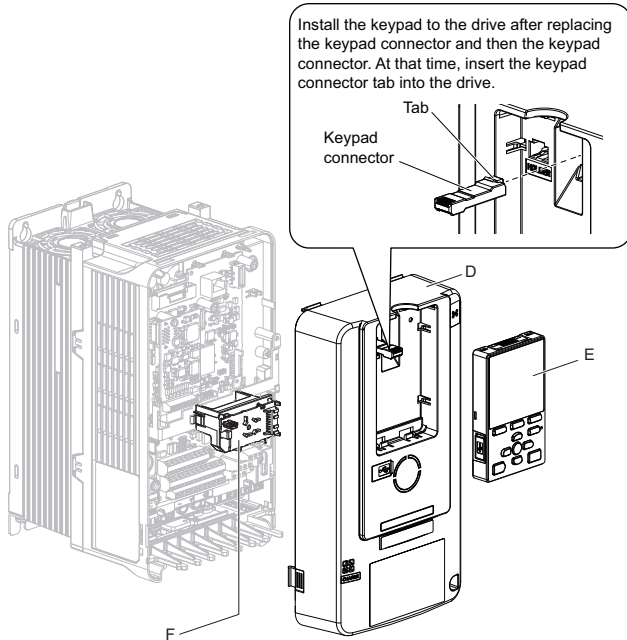 


Figure 18 Replace the LED Status Ring Board, Front Cover, and Keypad

Reattach the LED Status Ring board (F).

Use the open space provided inside the LED Status Ring board to route option wiring when using connector CN5-B.

 **NOTICE:** Do not pinch cables between the front cover or the LED Status Ring board and the drive. Failure to comply could cause erroneous operation.

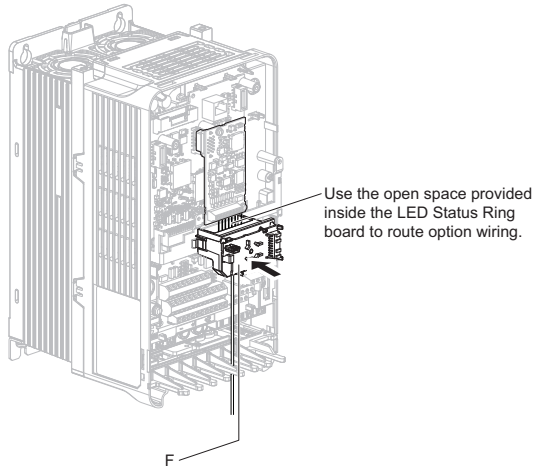

8. Set drive parameters in [Table 6](#) for correct option performance.


## 5 Installation Procedure
 
### ■ Procedure C

This section shows the procedure to install and wire the option on an FP605 drive.

#### Prepare the Drive for the Option

1. Correctly wire the drive as specified by the manual packaged with the drive.
2. Make sure that the drive functions correctly.  
Refer to [Figure 19](#) for an exploded view of the drive with the option and related components for reference in the installation procedure.

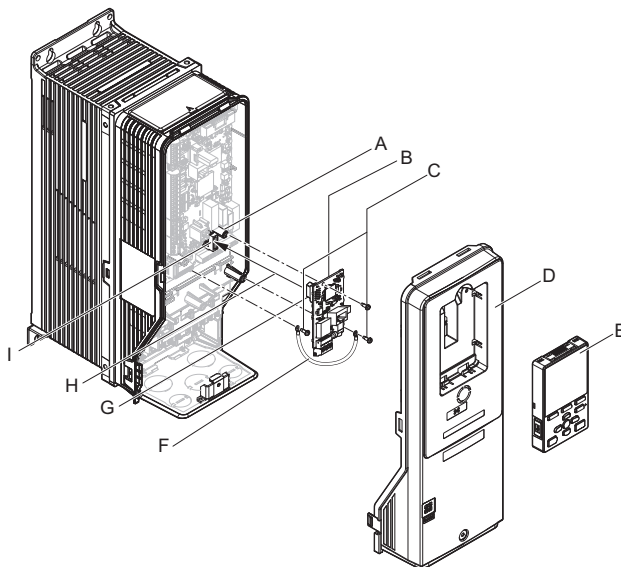

A – Drive grounding terminal (FE)

B – Option card

C – Included screws

D – Drive front cover

E – Keypad

F – Ground wire

G – Option modular connector CN1

H – Insertion point for connector (CN5-B)

I – Connector CN5-B

Figure 19 Drive Components with Option




### Install the Option

 Refer to the instructions below to install the option.

**DANGER!** *Electrical Shock Hazard. Do not inspect, connect, or disconnect any wiring while the drive is energized. Failure to comply will cause death or serious injury. Before servicing, disconnect all power to the equipment and wait for at least the time specified on the warning label. The internal capacitor remains charged even after the drive is de-energized. The charge indicator LED will extinguish when the DC bus voltage is below 50 Vdc. When all indicators are OFF, measure for unsafe voltages to confirm the drive is safe.*

1. Shut off power to the drive, wait the appropriate amount of time for voltage to dissipate, then remove the keypad (B) and front covers (A). Refer to the manual packaged with the drive for details on keypad and cover removal.

**NOTICE:** *Damage to Equipment. Observe proper electrostatic discharge (ESD) procedures when handling the option, drive, and circuit boards. Failure to comply could cause ESD damage to circuitry.*

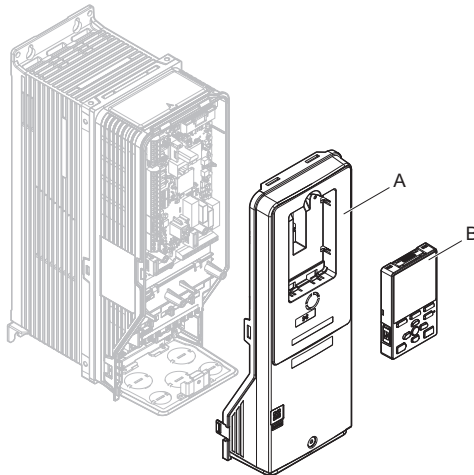

A – Drive front cover


B – Keypad

Figure 20 Remove the Front Cover and Keypad

## 5 Installation Procedure

 ---

2. Remove the screw (B) installed in the drive grounding terminal (A).

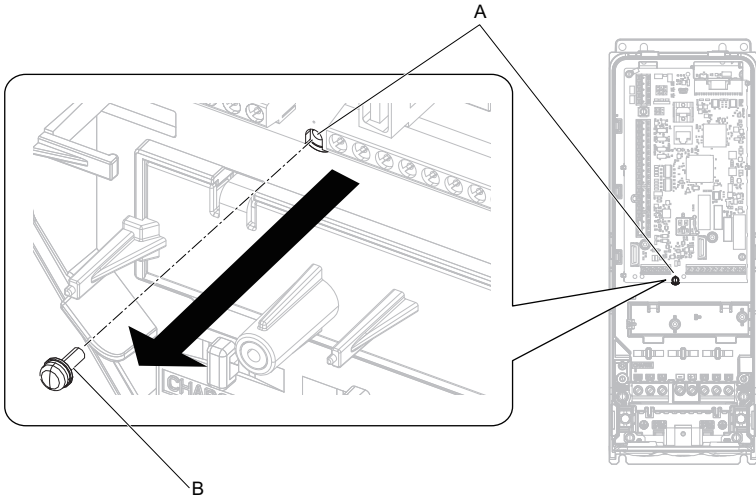


A – Drive grounding terminal (FE)

B – Included screw

Figure 21 Remove the Screw from the Drive Grounding Terminal

- Use the screw (B) installed in the FE ground terminal of the drive (A) to connect one end of the included ground wire (C) to the ground terminal on the drive. Tighten the screw to a correct tightening torque:
  - 0.5 N·m to 0.6 N·m (4.4 in·lb to 5.3 in·lb)

 **Note:** Route ground wire on the right side of the stud (D).

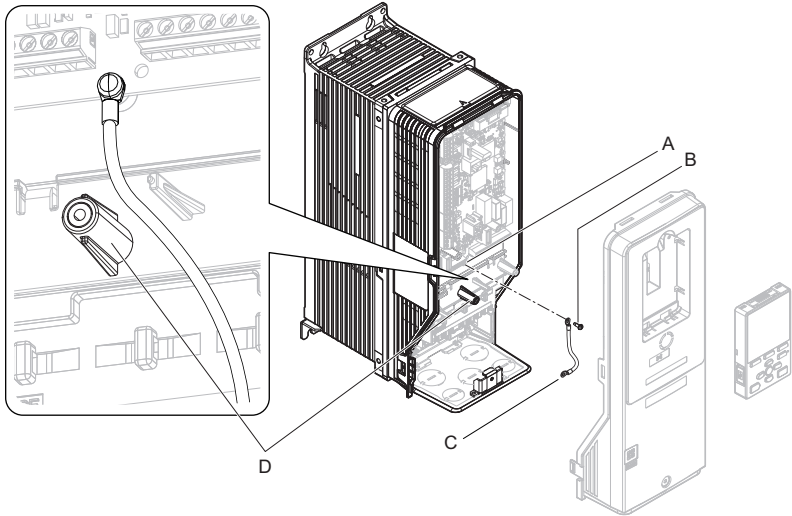

**A** – Drive grounding terminal (FE)

**B** – Included screw

**C** – Ground wire

**D** – Stud


**Figure 22** Connect the Ground Wire

## 5 Installation Procedure

 4. Install the option (A) into the CN5-B connector (C) on the drive and use the included screw (B) to put it in place.  
Tighten the screw to a correct tightening torque:
  - 0.5 N·m to 0.6 N·m (4.4 in·lb to 5.3 in·lb)

**Note:**

1. Only two screws are necessary to install the option on FP605 drive.
2. The option package contains three screws and three ground wires.

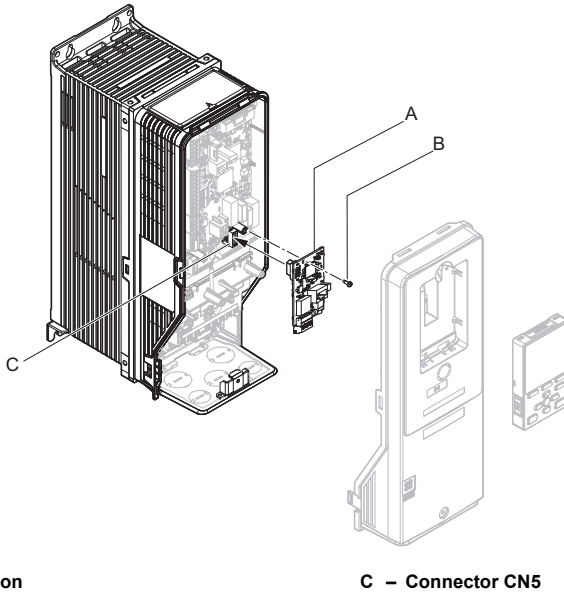

A - Option  
B - Included screw

C - Connector CN5


**Figure 23 Install the Option**

5. Use one of the remaining included screws (B) to connect the ground wire (A) to the ground terminal and installation hole on the option.

Tighten the screw to a correct tightening torque:

- 0.5 N·m to 0.6 N·m (4.4 in·lb to 5.3 in·lb)

 **Note:** Refer to [Figure 24](#) for instruction about crimp terminal orientation (C) and wire routing.

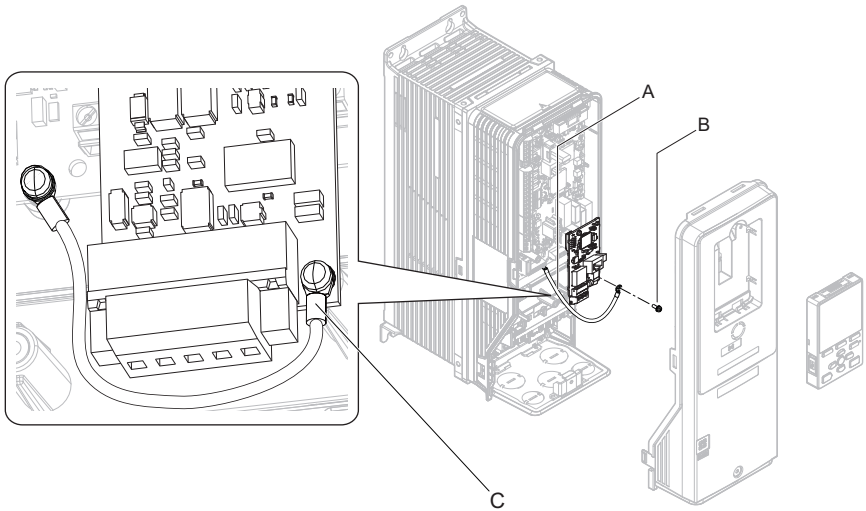

**A** – Ground wire  
**B** – Included screw

**C** – Crimp terminal

**Figure 24** Connect the Ground Wire

## 5 Installation Procedure

- Set DIP switches S1, S2, and S3 on the option for current or voltage input on terminals V1, V2, and V3. The default configuration is set to voltage input for all terminals.

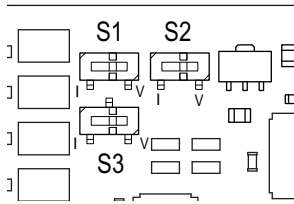 


Figure 25 Option DIP Switches

- Prepare and connect the wire ends as shown in [Figure 26](#) and [Figure 27](#). Refer to [Wire Gauges and Tightening Torques on page 37](#) to confirm that the proper tightening torque is applied to each terminal. Take particular precaution to ensure that each wire is properly connected and wire insulation is not accidentally pinched into electrical terminals.

**WARNING! Fire Hazard.** Tighten all terminal screws according to the specified tightening torque. Loose electrical connections could result in death or serious injury by fire due to overheating electrical connections. Tightening screws beyond the specified tightening torque may cause erroneous operation, damage the terminal block, or cause a fire.

**NOTICE:** Heat shrink tubing or electrical tape may be required to ensure that cable shielding does not contact other wiring. Insufficient insulation may cause a short circuit and damage the option or drive.


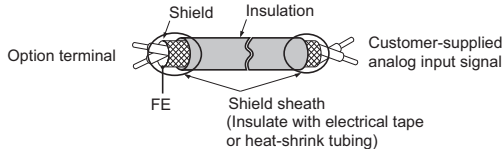 


Figure 26 Prepare Ends of Shielded Cable

8. Wire the customer-supplied analog input signal to terminal block on the option according to **Figure 27**. Refer to **Figure 29** for the AI-A3 Option connection diagram. Refer to **Table 5** for a detailed description of the option terminal functions.

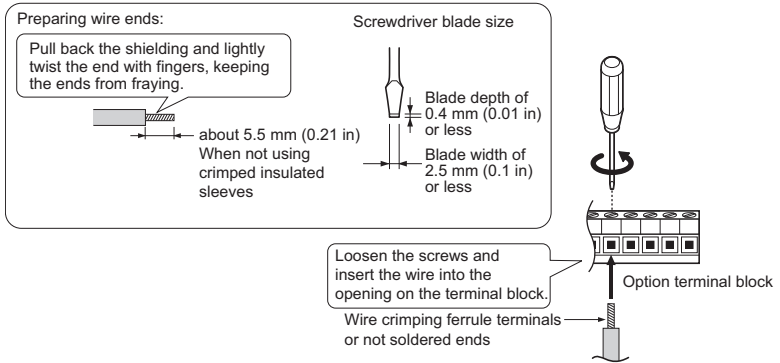 


**Figure 27 Connect Cable Wiring**

## 5 Installation Procedure

---

9. Reattach the drive front covers (A) and the keypad (B).

 **NOTICE:** Do not pinch cables between the front covers and the drive. Failure to comply could cause erroneous operation.

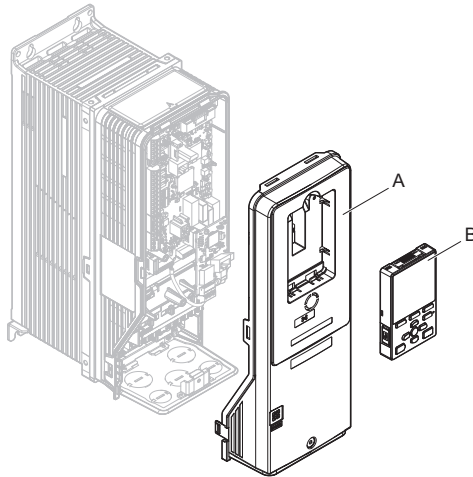

A – Drive front cover

B – Keypad


Figure 28 Replace the Front Covers and Keypad

10. Set the drive parameters in [Table 6](#) for correct option performance.



## ◆ Option Connection Diagram

 Refer to [Table 5](#) on page 38 for a detailed description of the option board terminal functions. To ensure accurate control, use a stable power supply for the voltage reference source.

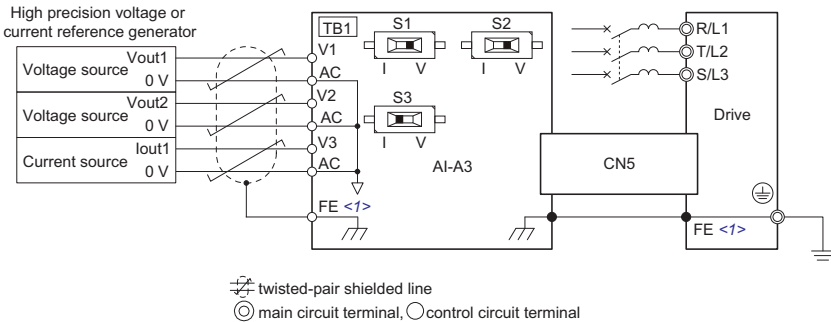

<1> Connect the provided ground wire for installations on 1000-series and FP605 drives. The ground wire is not necessary for installation on GA700, GA800, CR700, and CH700 drives.

Figure 29 Option Connection Diagram

## ◆ Wire Gauges, Tightening Torques and Ferrule-Type Terminals

### ■ Wire Gauges and Tightening Torques

Wire gauge and torque specifications are listed in [Table 3](#).

Table 3 Wire Gauges and Tightening Torques

Terminal signal	Screw Size	Tightening Torque N·m (in·lb)	Bare Wire		Ferrule-Type Terminals		Wire Type
			Recommended Gauge mm <sup>2</sup>	Applicable Gauges mm <sup>2</sup>	Recommended Gauge mm <sup>2</sup>	Applicable Gauges mm <sup>2</sup>	
V1, V2, V3, AC, FE	M2	0.22 to 0.25 (1.95 to 2.21)	0.75 (18 AWG)	Stranded wire: 0.25 to 1.0 (24 to 17 AWG) Solid wire: 0.25 to 1.5 (24 to 16 AWG)	0.5 (20 AWG)	0.25 to 0.5 (24 to 20 AWG)	Shielded twisted pair, etc.


## 5 Installation Procedure

### ■ Ferrule-Type Terminals

Yaskawa recommends using CRIMPFOX 6 by Phoenix Contact or equivalent ferrule-type terminals with the specifications listed in *Table 4* for wiring to ensure proper connections.

**Note:** Properly trim wire ends so loose wire ends do not extend from the crimp terminals.

**Table 4 Ferrule-Type Terminal Sizes**

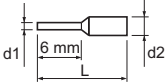Ferrule-Type Terminal	Wire Gauge mm <sup>2</sup>	Phoenix Contact Model	L mm (in)	d1 mm (in)	d2 mm (in)
	0.25 (24 AWG)	AI 0.25 - 6YE	10.5 (13/32)	0.8 (1/32)	2 (5/64)
	0.34 (22 AWG)	AI 0.34 - 6TQ	10.5 (13/32)	0.8 (1/32)	2 (5/64)
	0.5 (20 AWG)	AI 0.5 - 6WH	14 (9/16)	1.1 (3/64)	2.5 (3/32)

### ◆ Terminal Functions

**Table 5 Option Terminal Functions**

Terminal	Function	Signal Level	Description	Voltage/Current DIP switch	Linear Accuracy
V1	Analog signal input 1	-10 to 10 V or 4 to 20 mA	<ul style="list-style-type: none"> <li>Input terminals for an analog voltage or current signal from voltage/current reference source</li> <li>Use jumpers S1, S2, and S3 to select the type of input signal &lt;1&gt;</li> </ul>	S1	±0.1% F.S. <2>
V2	Analog signal input 2			S2	
V3	Analog signal input 3			S3	
AC	Common	–	Common for analog voltage/current input	–	–
FE	Ground	–	Used for grounding shielded lines	–	–

<1> Default setting is for voltage input.

<2> At an ambient temperature of 25 °C (77 °F).

## 6 Related Parameters

The parameters outlined in the following sections are used to set up the drive for operation with the option. Set parameters as needed. Refer to the manual packaged with the drive for details on setting parameters.

### ◆ Parameter F2-01

Set parameter F2-01 to select between separate input channels or combined inputs on the option.

#### ■ Setting 0: 3 Independent Channels

To set separate input channels, set parameter b1-01 to 1(Analog Input).

The multi-function analog signal can be input from terminals V1 to V3 for AI-A3. This setting replaces drive analog inputs A1, A2, and A3 with higher resolution signals in terminals V1, V2, and V3 on the AI-A3. Signals can be set to have negative numbers by adjusting gain and bias adjustments when current is input.

Set parameter F2-01 to 0 to increase the accuracy of A/D conversion while using the functions for terminals A1 to A3 of the drive as they are with their current settings. The function for terminal A1 of the drive is replaced in terminal V1 on the option. The function for terminal A2 of the drive is replaced in terminal V2 on the option. The function for terminal A3 of the drive is replaced in terminal V3 on the option.

- Note:**
1. An oPE05 is triggered when F2-01 is set to 0 while b1-01 is set to 3 (Option PCB). The following block diagram illustrates the separate channel of analog inputs. H3-□□ parameters as illustrated in the following figure are used to select the function to input the analog reference received from the option and to adjust the gain and bias of these signals.
  2. When F2-01 is set to 0, the drive automatically detects the selected signal level for each input. Parameters H3-01, H3-05, and H3-09 do not need to be set, and the previous settings for these parameters are disregarded.

## 6 Related Parameters

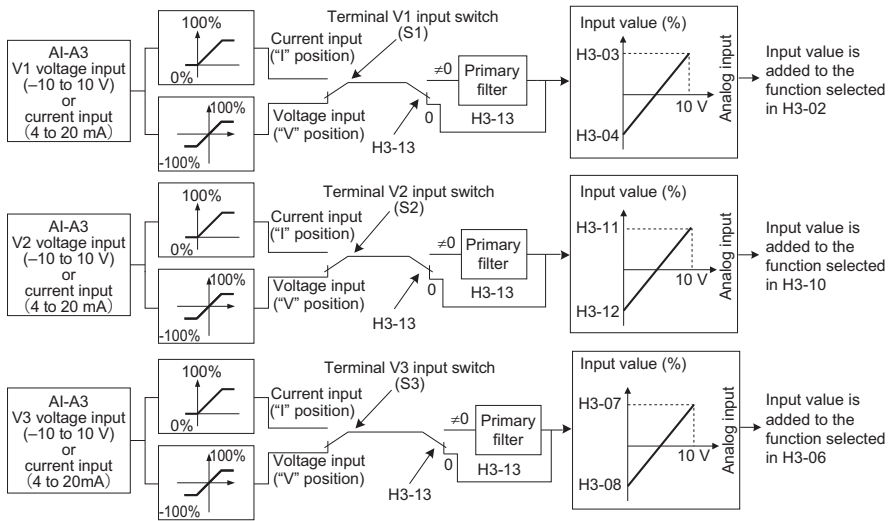 


Figure 30 Using the Option for Multi-Function Analog Inputs

### ■ Setting 1: 3 Channels Added Together

To set a combined input, set b1-01 to 3 (Option PCB) or F2-01 to 1 (3 Channels Added Together).

The resulting value of adding the input from terminals V1 to V3 becomes the frequency reference.

The following block diagram illustrates combined input. Use parameters F2-02 and F2-03 to adjust the analog reference gain and bias for combined input.

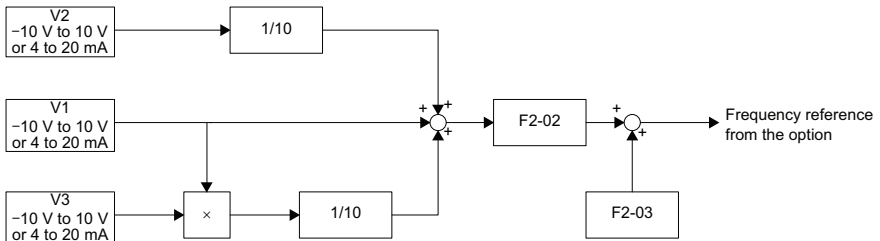 


Figure 31 Combining Inputs for the Frequency Reference

### 2 : 3 Additional Channels


You can use six analog input functions in total with the functions for A1 to A3 on the drive when you connect an AI-A3 option card.

Set F2-01 = 2 to enable F2-04 (Terminal V1 Signal Level Select) to F2-15 (Terminal V3 Bias Setting). You can use these parameters to select an analog input function, and set the gain and bias for terminals V1, V2, and V3 for AI-A3 individually.

When you select the signal level, set the DIP switch S1 to S3 on the AI-A3 option card to align with the input source and set these parameters:


- F2-04 (Terminal V1 Signal Level Select)
- F2-08 (Terminal V2 Signal Level Select)
- F2-12 (Terminal V3 Signal Level Select)

**Figure 32** shows the analog input for terminal A1, and **Figure 33** shows the additional input for AI-A3 terminal V1.

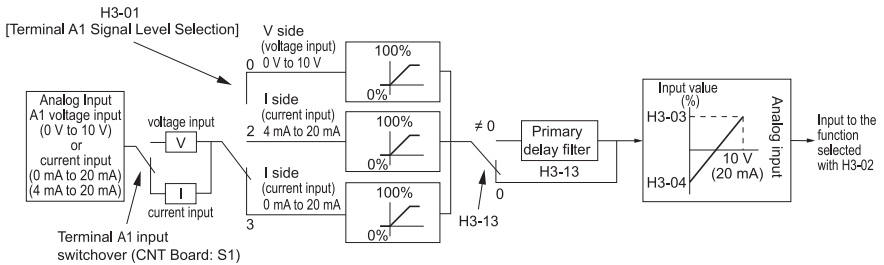 

**Figure 32 Analog Input Reference Individual Input for Terminal A1**

You can use the same diagram for terminals A2 and A3.

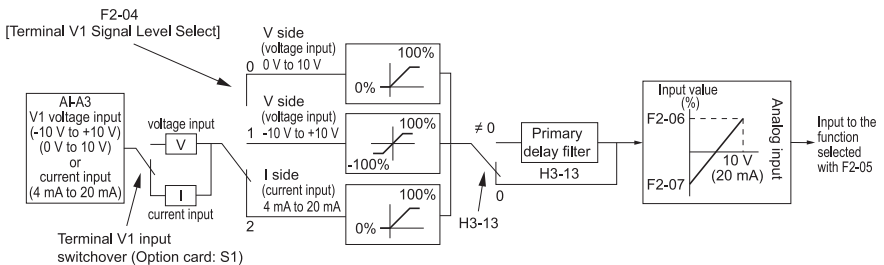 

**Figure 33 Analog Input Reference Individual Input for Terminal V1**

You can use the same diagram for terminals V2 and V3.

## 6 Related Parameters

---

### Adjust the Input State using F2-02 and F2-03

The ratio (%) of the maximum output frequency that is output as the frequency reference when the bias set by F2-03 is 0% is determined by the gain set by F2-02 and the combined input signal.

**Note:** For a single channel, a voltage input of 10 V or a current input of 20 mA is referred as 100%.  
The gain set to parameter F2-02 along with the combined input signal determines the percentage of maximum output frequency used as the frequency reference when the bias set to F2-03 is 0.  
For a single channel, a voltage input of 0 V or a current input of 4 mA is referred as 100%.

*Example 1:* If the gain in F2-02 is set to 50% and the bias in F2-03 is set to 0%, a combined input signal of 100% yields a frequency reference 50% of the maximum frequency reference. A combined input of 200% yields a frequency reference equal to the maximum output frequency.

*Example 2:* If the gain in F2-02 is set to 200% and the bias in F2-03 is set to 0%, a combined input signal of 50% yields a frequency reference equal to the maximum output frequency. Increasing the combined input signal of 50% or higher will not create a higher reference since the maximum frequency reference has already been reached.

*Example 3:* If the gain in F2-02 is set to 100% and the bias in F2-03 is set to 30%, a combined input signal of 0% yields a frequency reference 30% of the maximum frequency reference. Inputting a combined reference of 70% will yield a reference of equal to the maximum output frequency. Increasing the combined input signal of 70% or higher will not create a higher reference since the maximum frequency reference has already been reached.

### ◆ Parameter Table

“RUN” indicates that the parameter can be changed during run.

**Note:** Hex.: MEMOBUS addresses that you can use to change parameters over network communication are represented in hexadecimal numbers.

**Table 6 Related Parameters**

No. (Hex.)	Name	Description	Values
b1-01 (180)	Reference 1 Source	Selects the input method for frequency reference. 0: Keypad 1: Analog Input 2: Memobus/Modbus Communications 3: Option PCB 4: Pulse Train Input	Default: 1 Range: 0 to 4 (Set to 3)
F2-01 (38F) <3>	Analog Input Function Selection	Determines how the input terminals on the option are to be used. 0: 3 Independent Channels 1: 3 Channels Added Together 2: 3 Additional Channels <3>	Default: 0 Range: 0, 1, 2 <3>
F2-02 (388) RUN <2>	Analog Input Option Card Gain	Sets the gain for the input signal to the analog card.	Default: 100.0% Min: -999.9 Max: 999.9
F2-03 (369) RUN <2>	Analog Input Option Card Bias	Sets the bias for the input signal to the analog card.	Default: 0.0% Min: -999.9 Max: 999.9
F2-04 (3160) <3>	Terminal V1 Signal Level Select	Sets the input signal level for MFAI terminal V1. 0: 0 V to 10 V 1: -10 V to 10 V 2: 4 mA to 20 mA	Default: 0 Range: 0 to 2
F2-05 (3161) <3>	Terminal V1 Function Selection	Sets the function for MFAI terminal V1.	Default: F Range: 4 to 2D
F2-06 (3162) <3>	Terminal V1 Gain Setting	Sets the gain of the analog signal input to MFAI terminal V1.	Default: 100.0% Min: -999.9 Max: 999.9
F2-07 (3163) <3>	Terminal V1 Bias Setting	Sets the bias of the analog signal input to MFAI terminal V1.	Default: 0.0% Min: -999.9 Max: 999.9

## 6 Related Parameters

No. (Hex.)	Name	Description	Values
F2-08 (3164) <>	Terminal V2 Signal Level Select	Sets the input signal level for MFAI terminal V2. 0: 0 V to 10 V 1: -10 V to 10 V 2: 4 mA to 20 mA	Default: 0 Range: 0 to 2
F2-09 (3165) <>	Terminal V2 Function Selection	Sets the function for MFAI terminal V2.	Default: F Range: 4 to 2D
F2-10 (3166) <>	Terminal V2 Gain Setting	Sets the gain of the analog signal input to MFAI terminal V2.	Default: 100.0% Min: -999.9 Max: 999.9
F2-11 (3167) <>	Terminal V2 Bias Setting	Sets the bias of the analog signal input to MFAI terminal V2.	Default: 0.0% Min: -999.9 Max: 999.9
F2-12 (3168) <>	Terminal V3 Signal Level Select	Sets the input signal level for MFAI terminal V3. 0: 0 V to 10 V 1: -10 V to 10 V 2: 4 mA to 20 mA	Default: 0 Range: 0 to 2
F2-13 (3169) <>	Terminal V3 Function Selection	Sets the function for MFAI terminal V3.	Default: F Range: 4 to 2D
F2-14 (316A) <>	Terminal V3 Gain Setting	Sets the gain of the analog signal input to MFAI terminal V3.	Default: 100.0% Min: -999.9 Max: 999.9
F2-15 (316B) <>	Terminal V3 Bias Setting	Sets the bias of the analog signal input to MFAI terminal V3.	Default: 0.0% Min: -999.9 Max: 999.9
H3-02 (434)	Terminal A1 Function Selection	Selects the function assigned to analog input terminal A1.	Default: 0 Range: 0 to 32
H3-03 (411) RUN	Terminal A1 Gain Setting	Sets the level of the selected input value that is equal to 10 Vdc input at terminal A1 (gain).	Default: 100.0% Min: -999.9 Max: 999.9
H3-04 (412) RUN	Terminal A1 Bias Setting	Sets the bias of the analog signal to be input to the multi-function analog input terminal A1.	Default: 0.0% Min: -999.9 Max: 999.9
H3-06 (414)	Terminal A3 Function Selection	Selects the function assigned to analog input terminal A3.	Default: 2 Range: 0 to 32
H3-07 (415) RUN	Terminal A3 Gain Setting	Sets the gain of the analog signal to be input to the multi-function analog input terminal A3.	Default: 100.0% Min: -999.9 Max: 999.9
H3-08 (416) RUN	Terminal A3 Bias Setting	Sets the bias of the analog signal to be input to the multi-function analog input terminal A3.	Default: 0.0% Min: -999.9 Max: 999.9



## 6 Related Parameters

No. (Hex.)	Name	Description	Values
H3-10 (418)	Terminal A2 Function Selection	Selects the function assigned to analog input terminal A2.	Default: 0 Range: 0 to 32
H3-11 (419) RUN	Terminal A2 Gain Setting	Sets the bias of the analog signal to be input to the multi-function analog input terminal A2.	Default: 100.0% Min: -999.9 Max: 999.9
H3-12 (41A) RUN	Terminal A2 Bias Setting	Sets the bias of the analog signal to be input to the multi-function analog input terminal A2.	Default: 0.0% Min: -999.9 Max: 999.9
H3-13 (41B)	Analog Input Filter Time Constant	Sets the time constant when applying a first order filter to the multi-function analog input terminal.	Default: 0.03 s Min: 0.00 Max: 2.00

<1> When the option is not installed in the drive, the functionality of analog input terminals A1 to A3 on the drive are enabled regardless of the setting of F2-01.

<2> This parameter is only enabled when F2-01 is set to 1 (Analog Input Function Selection = 3 Channels Added Together).

<3> This parameter is available only with FP605.

No. (Hex.)	Name	Description	Analog Output Level	Unit
U1-21 (77)	AI-A3 Term V1 Monitor	Displays the analog reference of terminal V1 on analog input option card AI-A3.	10 V = Maximum frequency (-10 V to +10 V)	0.1%
U1-22 (72A)	AI-A3 Term V2 Monitor	Displays the analog reference of terminal V2 on analog input option card AI-A3.	10 V = Maximum frequency (-10 V to +10 V)	0.1%
U1-23 (72B)	AI-A3 Term V3 Monitor	Displays the analog reference of terminal V3 on analog input option card AI-A3.	10 V = Maximum frequency (-10 V to +10 V)	0.1%

# 7 Troubleshooting

### ◆ Drive-Side Error Codes

 

 
*Table 7* lists the various fault codes related to the option. Refer to the drive Technical Manual for further details on fault codes.

Confirm the following items upon receiving an error notification on the drive keypad:

1. Correct and secure cable connections including ground wiring.
2. Proper option installation.
3. No momentary power loss occurred.

**Table 7 Fault Displays, Causes, and Possible Solutions**

Keypad Display		Fault Name
oFA01	oFA01	Option is not properly connected.
<b>Cause</b>		<b>Possible Solution</b>
The option connected to option port CN5-A was changed during run.		De-energize the drive and plug the option into the drive according to <i>Installation Procedure on page 11</i> .
Keypad Display		Fault Name
oFb01	oFb01	Option Card Fault (CN5-B) Option is not properly connected.
<b>Cause</b>		<b>Possible Solution</b>
Option in drive port CN5-B was changed during run.		De-energize the drive and plug the option into the drive according to <i>Installation Procedure on page 11</i> .
Keypad Display		Fault Name
oFb02	oFb02	Option Fault (CN5-B) Two identical options are connected at the same time.
<b>Cause</b>		<b>Possible Solution</b>
AI-A3 option connected to CN5-B port while another option was connected to CN5-A port.		Only one of the options: AI-A3, DI-A3, or SI-□□ can be connected to the drive at the same time.
Keypad Display		Fault Name
oFC01	oFC01	Option is not properly connected.
<b>Cause</b>		<b>Possible Solution</b>
Option at drive port CN5-C was changed during run.		De-energize the drive and plug the option into the drive according to <i>Installation Procedure on page 11</i> .

Keypad Display		Fault Name
	oFC02	Option Fault (CN5-C)
		Two identical options are connected at the same time.
Cause		Possible Solution
AI-A3 option connected to CN5-C connector while another option was connected to CN5-A port.		Only one of these options, AI-A3, DI-A3, or SI-□□ can be connected to the drive at the same time.
Keypad Display		Fault Name
	oPE05	Run command/frequency reference source selection error.
		Cause
Frequency reference is assigned to an option (b1-01 = 3) but an option is not connected.		Reconnect the option to the drive.
These parameters are set at the same time: <ul style="list-style-type: none"> <li>• b1-01 = 3 (Frequency Reference Selection 1 = Option PCB)</li> <li>• F2-01 = 0 or 2 (Analog Input Function Selection = 3 Independent Channels or 3 Additional Channels)</li> </ul>		Correct the parameter settings.
The following values have been set while an option is installed: <ul style="list-style-type: none"> <li>• H1-□□ = 2 (External Reference 1/2 Selection)</li> <li>• b1-15 = 3 (Option PCB)</li> <li>• The action for the analog card is set for separate terminal input (F2-01 = 0).</li> </ul>		Make sure parameters are set properly.
Keypad Display		Fault Name
	oPE07	Multi-Function Analog Input Selection Error
		Cause
At least two analog input terminals are set to the same function (i.e., at least two of these parameters has the same setting: H3-02, H3-10, or H3-06).		Change the settings to H3-02, H3-10, or H3-06 so that functions no longer conflict. <b>Note:</b> It is possible to set these functions to multiple analog input terminals at the same time: <ul style="list-style-type: none"> <li>• Setting value 0 (Frequency Reference)</li> <li>• Setting values F and 1F (Not Used)</li> </ul>
The following simultaneous contradictory settings: <ul style="list-style-type: none"> <li>• H3-02, H3-10, or H3-06 = B (PID Feedback) while H6-01 = 1 (PID Feedback)</li> <li>• H3-02, H3-10, or H3-06 = C (PID Target Value) while H6-01 = 2 (pulse train input sets the PID target value)</li> <li>• H3-02, H3-10, or H3-06 = C (PID Target Value) while b5-18 = 1 (enables b5-19 as the target PID value)</li> </ul>		Disable one of the PID selections.

## 7 Troubleshooting

<p>These parameters are set at the same time when F2-01 = 2 (Analog Input Function Selection = 3 Additional Channels):</p> <ul style="list-style-type: none"> <li>• F2-05, F2-09, F2-13 (Terminal Vx Function Selection), H3-40, H3-41, H3-42 = B (PID Feedback)</li> <li>• H6-01 = 1</li> </ul>	<ul style="list-style-type: none"> <li>• Remove the function settings that are not in use.</li> <li>• When you use H6-01 and F2-05, F2-09, F2-13 at the same time, set F2-01 <math>\neq</math> 2.</li> </ul>
<p>These parameters are set at the same time when F2-01 = 2:</p> <ul style="list-style-type: none"> <li>• F2-05, F2-09, F2-13, H3-40, H3-41, H3-42 = C (PID Setpoint)</li> <li>• H6-01 = 2</li> </ul>	
<p>The settings for F2-05, F2-09, and F2-13 overlap when F2-01 = 2.</p>	<ul style="list-style-type: none"> <li>• Set the parameters correctly to prevent overlap.</li> <li>• Set F2-01 <math>\neq</math> 2.</li> </ul>
<p>The settings for F2-05, F2-09, F2-13 and the settings for these parameters overlap when F2-01 = 2:</p> <ul style="list-style-type: none"> <li>• H3-02, H3-06, H3-10</li> <li>• H3-40, H3-41, H3-42</li> <li>• H7-30</li> </ul>	
<p>The settings for these parameters overlap:</p> <ul style="list-style-type: none"> <li>• H3-02, H3-06, H3-10</li> <li>• H3-40, H3-41, H3-42</li> <li>• H7-30</li> </ul>	<p>Set these parameters correctly to prevent overlap</p>

## ◆ Option Compatibility

Users may connect up to 3 options simultaneously depending on the type of option. Refer to [Table 8](#) for details.

- Note:**
1. You can connect two options to an FP605 drive. Connect the communication option to the CN5-B connector.
  2. Compatible communication options are different for different models. Refer to the drive manuals for more information.

**Table 8 Option Compatibility**

Option Card	Connector	Number of Cards Possible
PG-B3 <1>, PG-X3 <1>	CN5-B, C	2 <2>
PG-RT3 <1> <3> <4>, PG-F3 <1> <3> <4>	CN5-C	1
DO-A3, AO-A3	CN5-A, B, C	1
SI-C3, SI-N3, SI-P3, SI-S3, SI-T3, SI-ET3, SI-ES3, SI-B3, SI-M3, SI-W3 <4>, SI-EM3 <4>, SI-EM3D <4>, SI-EN3 <4>, SI-EN3D <4>, SI-EP3, JOHB-SMP3, AI-A3 <5>, DI-A3 <5>	CN5-A	1

<1> Not available with FP605.

<2> When connecting two PG option cards, use both CN5-B and CN5-C. When connecting only one PG option card, use the CN5-C connector.

<3> Not available for the application with Motor 2 Selection.

<4> Not available with 1000-Series products with a capacities between 450 and 630 kW.

<5> When you use the input status of AI-A3 and DI-A3 as a monitor, you can connect AI-A3 and DI-A3 to CN5-A, CN5-B, and CN5-C.


## ◆ Preventing Electrical Signal Interference

Take the following steps to prevent erroneous operation caused by electrical signal interference:

- Use shielded wire for the signal lines.
- Limit the length of wiring under 10 m (32 ft).
- Separate the control wiring to the option, main circuit wiring, and power lines.

## 7 Troubleshooting

### ■ Interface Circuit

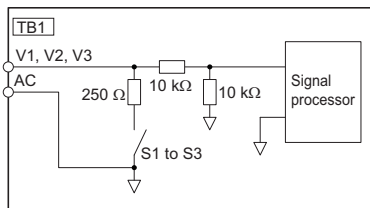 

**Figure 34 Interface Circuit**

## 8 European Standards



Figure 35 CE Mark

The CE mark indicates compliance with European safety and environmental regulations.

European standards include the Machinery Directive for machine manufacturers, the Low Voltage Directive for electronics manufacturers, and the EMC guidelines for controlling noise.

It is required for engaging in business and commerce in Europe.

This option displays the CE mark based on the EMC guidelines.

### **EMC Guidelines: 2014/30/EU**

Drives used in combination with this option and devices used in combination with the drive must also be CE certified and display the CE mark.

When using drives displaying the CE mark in combination with other devices, it is ultimately the responsibility of the user to ensure compliance with CE standards. Verify that conditions meet European standards after setting up the device.

---

### ◆ **EMC Guidelines Compliance**

This option is tested according to European standards EN 61800-3:2004/A1:2012 and complies with EMC guidelines. The CE marking is declared based on the harmonized standards.

### ■ **EMC Guidelines Installation Conditions**

Verify the following installation conditions to ensure that other devices and machinery used in combination with this option and drives also comply with EMC guidelines:

1. Use dedicated shield cable for the option and external device (encoder, I/O device, master), or run the wiring through a metal conduit.
2. Keep wiring as short as possible and ground the largest possible surface area of the shield to the metal panel according to [Figure 36](#) and [Figure 37](#).

## 8 European Standards


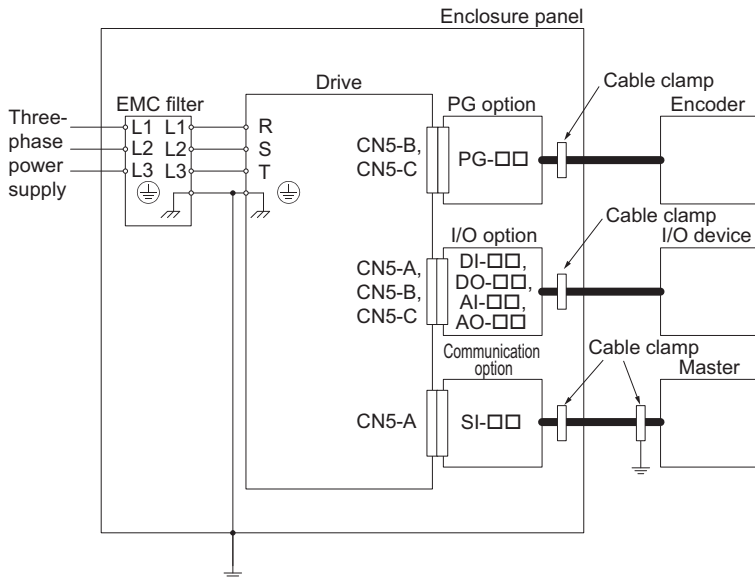 



Figure 36 Option Installation for CE Compliance: 1000-Series, GA700, GA800, CR700, CH700

 

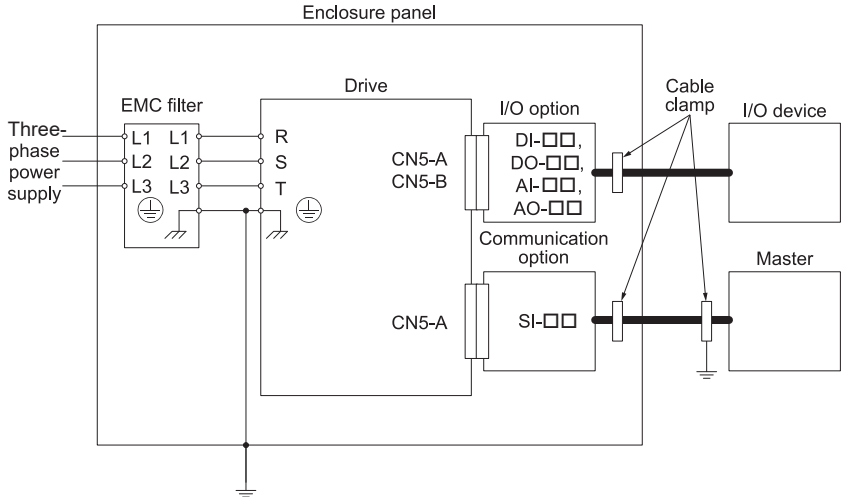

**Figure 37 Option Installation for CE Compliance: FP605**

 3. Ground the largest possible surface area of the shield to the metal panel. Yaskawa recommends using cable clamps.

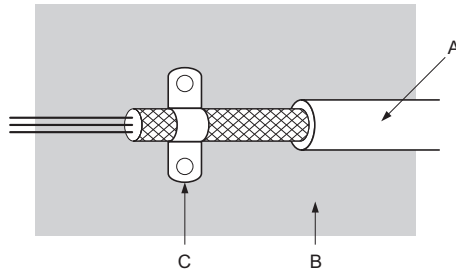

**A – Braided shield cable**  
**B – Metal panel**

**C – Cable clamp (conductive)**

**Figure 38 Ground Area**

# 9 Specifications

**Table 9 Option Specifications**

 
Item	Description
Model	AI-A3
Input Terminals	3 terminals
Voltage Input	<ul style="list-style-type: none"> <li>• Input signal voltage: -10 to 10 Vdc</li> <li>• Impedance: 20 kΩ</li> <li>• Input resolution: 13 bit plus sign (1/8192)</li> </ul>
Current Input	<ul style="list-style-type: none"> <li>• Input signal voltage: 4 to 20 mA</li> <li>• Impedance: 250 Ω</li> <li>• Input resolution: 12 bit (1/4096)</li> </ul>
Linear Precision	± 0.1% at 25°C (77°F)
Ambient Temperature	-10°C to +50°C (14°F to 122°F)
Humidity	95% RH or lower with no condensation
Storage Temperature	-20°C to +60°C (-4°F to +140°F) allowed for short-term transport of the product
Area of use	Indoors and free from: <ul style="list-style-type: none"> <li>• Oil mist, corrosive gas, flammable gas, and dust</li> <li>• Radioactive materials or flammable materials, including wood</li> <li>• Harmful gas or fluids</li> <li>• Salt</li> <li>• Direct sunlight</li> <li>• Falling foreign objects</li> </ul>
Altitude	1000 m (3280 ft) or lower

## 10 Disposal

### ◆ Disposal Instructions

Correctly dispose of the product and packing material as specified by applicable regional, local, and municipal laws and regulations.

### ◆ WEEE Directive

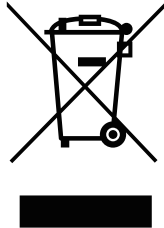

The wheeled bin symbol on this product, its manual, or its packaging identifies that you must recycle it at the end of its product life.

You must discard the product at an applicable collection point for electrical and electronic equipment (EEE). Do not discard the product with usual waste.

## 10 Disposal

### ◆ Revision History

Revision dates and manual numbers are located on the bottom of the back cover.

MANUAL NO.

TOBP C730600 78B <1>-0

Web revision number

Revision number

Published in Japan April 2017

Date of publication

Date of Publication	Revision Number	Web Rev. No.	Section	Revised Content
February 2022	<5>	0	All	Addition: Information on FP605. Revision: Reviewed and corrected entire documentation.
July 2020	<4>	0	Back cover	Revision: Address
October 2018	<3>	0	All	Addition: Applicable product series Revision: Reviewed and corrected entire documentation.
			Back cover	Revision: Address
October 2017	<2>	0	Back cover	Revision: Address
April 2017	<1>	0	All	Addition: Applicable product series Revision: Reviewed and corrected entire documentation.
			Back cover	Revision: Address
April 2016	-	-	-	First edition

# YASKAWA AC Drive Option Analog Input Installation Manual

---

## **DRIVE CENTER (INVERTER PLANT)**

2-13-1, Nishimiyaich, Yukuhashi, Fukuoka, 824-8511, Japan  
Phone: +81-930-25-2548 Fax: +81-930-25-3431  
www.yaskawa.co.jp

## **YASKAWA ELECTRIC CORPORATION**

New Pier Takeshiba South Tower, 1-16-1, Kaigan, Minatoku, Tokyo, 105-6891, Japan  
Phone: +81-3-5402-4502 Fax: +81-3-5402-4580  
www.yaskawa.co.jp

## **YASKAWA AMERICA, INC.**

2121, Norman Drive South, Waukegan, IL 60085, U.S.A.  
Phone: +1-800-YASKAWA (827-5292) or +1-847-887-7000 Fax: +1-847-887-7310  
www.yaskawa.com

## **YASKAWA ELÉTRICO DO BRASIL LTDA.**

777, Avenida Piraporinha, Diadema, São Paulo, 09950-000, Brasil  
Phone: +55-11-3585-1100 Fax: +55-11-3585-1187  
www.yaskawa.com.br

## **YASKAWA EUROPE GmbH**

Hauptstraße 185, 65760 Eschborn, Germany  
Phone: +49-6196-569-300 Fax: +49-6196-569-398  
www.yaskawa.eu.com E-mail: info@yaskawa.eu.com

## **YASKAWA ELECTRIC KOREA CORPORATION**

SFR, Three IFC, 10 Guksegyeumyung-ro, Yeongdeungpo-gu, Seoul, 07326, Korea  
Phone: +82-2-784-7844 Fax: +82-2-784-8495  
www.yaskawa.co.kr

## **YASKAWA ASIA PACIFIC PTE. LTD.**

30A, Kallang Place, #06-01, 339213, Singapore  
Phone: +65-6282-3003 Fax: +65-6289-3003  
www.yaskawa.com.sg

## **YASKAWA ELECTRIC (THAILAND) CO., LTD.**

59, 1F-5F, Flourish Building, Soi Ratchadapisek 18, Ratchadapisek Road, Huaykwang, Bangkok, 10310, Thailand  
Phone: +66-2-017-0099 Fax: +66-2-017-0799  
www.yaskawa.th

## **YASKAWA ELECTRIC (CHINA) CO., LTD.**

22F, Link Square 1, No.222, Hubin Road, Shanghai, 200021, China  
Phone: +86-21-5385-2200 Fax: +86-21-5385-3299  
www.yaskawa.com.cn

## **YASKAWA ELECTRIC (CHINA) CO., LTD. BEIJING OFFICE**

Room 1011, Tower W3 Oriental Plaza, No. 1, East Chang An Avenue,  
Dong Cheng District, Beijing, 100738, China  
Phone: +86-10-8518-4086 Fax: +86-10-8518-4082

## **YASKAWA ELECTRIC TAIWAN CORPORATION**

12F, No. 207, Section 3, Beishin Road, Shindian District, New Taipei City 23143, Taiwan  
Phone: +886-2-8913-1333 Fax: +886-2-8913-1513 or +886-2-8913-1519  
www.yaskawa.com.tw

## **YASKAWA INDIA PRIVATE LIMITED**

#17/A, Electronics City, Hosur Road, Bengaluru, 560 100 (Karnataka), India  
Phone: +91-80-4244-1900 Fax: +91-80-4244-1901  
www.yaskawaindia.in

---

# YASKAWA

**YASKAWA ELECTRIC CORPORATION**

In the event that the end user of this product is to be the military and said product is to be employed in any weapons systems or the manufacture thereof, the export will fall under the relevant regulations as stipulated in the Foreign Exchange and Foreign Trade Regulations. Therefore, be sure to follow all procedures and submit all relevant documentation according to any and all rules, regulations and laws that may apply.

Specifications are subject to change without notice for ongoing product modifications and improvements.

© 2016 YASKAWA ELECTRIC CORPORATION

MANUAL NO.

TOBP C730600 78D <5>-0

Published in Japan February 2022  
20-2-22