

INTEGRAL-MOUNTING OPTION ANALOG OPERATOR

IMPORTANT

Before installing this option, a **TECHNICALLY QUALIFIED INDIVIDUAL**, who is familiar with this type of equipment and hazards involved, should **READ** this ENTIRE INSTRUCTION SHEET.

DESCRIPTION

The Analog Operator mounts within the GPD 602 enclosure. Its front panel (controls and indicators) is accessible with the Drive front cover in place.

RECEIVING

All equipment is tested against defect at the factory. Any damages or shortages evident when the equipment is received must be reported immediately to the commercial carrier who transported the equipment. Assistance, if required, is available from the nearest MagneTek Sales Office.

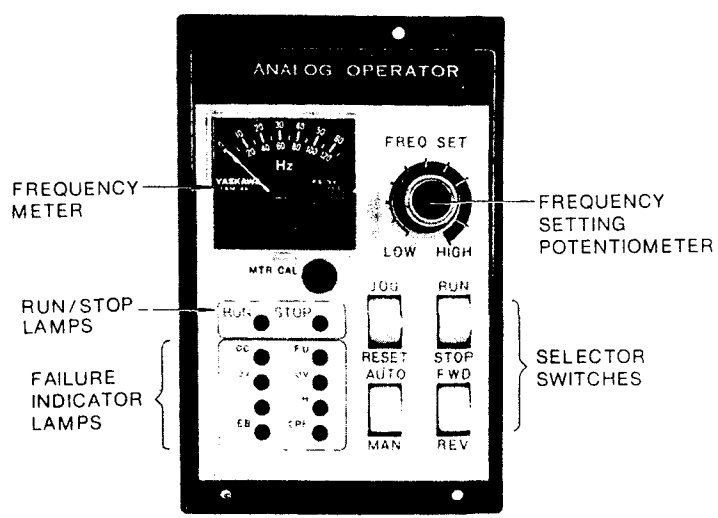


Figure 1. Analog Operator - Front View

Table 1. Analog Operator Specifications

Storage Temp Range	-20°C to +70°C (-4°F to 158°F)
Operating Temp Range	-10°C to +60°C (14°F to 140°F)
Operating Humidity	90% max relative (No condensation)
Environmental Conditions	- Protected from direct sunlight - Protected from corrosive gases or liquids
Vibration	1G at frequency less than 20HZ 0.2G at 20 to 50HZ
Approx Wt	0.55 lbs
Dimensions (W X H x D)	3.86" x 5.91" x 1.97"

CHANGE RECORD				DWG. NO. 02Y00025-0248 SHEET 1 OF 5 EFF. 11/30/87 (G)
1	STD-3002	3/15/88		
2	STD-3067	5/26/88		
3	STD-3278	10/4/88		

INSTALLATION

WARNING

HAZARDOUS VOLTAGE CAN CAUSE SEVERE INJURY OR DEATH.

LOCK ALL POWER SOURCES FEEDING DRIVE IN "OFF" POSITION.

1. Turn off all electrical power to the GPD 602.
2. Verify that the "CHARGE" lamp is out. Then loosen mounting screws and remove the front cover.
3. See Figure 2. Remove the indicator lamp plate from the Drive by removing three mounting screws.

4. Position the Analog Operator on the three standoffs on the Control PCB and secure using the mounting screws.

5. Align connector 8CN of the ribbon cable with the pins of header 8CN on the Control PCB. Push downward to seat the connector, then squeeze two lock levers inward until they click in place.

6. Align connector 4CN of wire harness with the pins of header 4CN on the Control PCB. Push downward on the connector until the locking clip clicks in place.

7. On the Control PCB, set the Auxiliary Frequency Reference Signal Selector shunt to the "L" position.

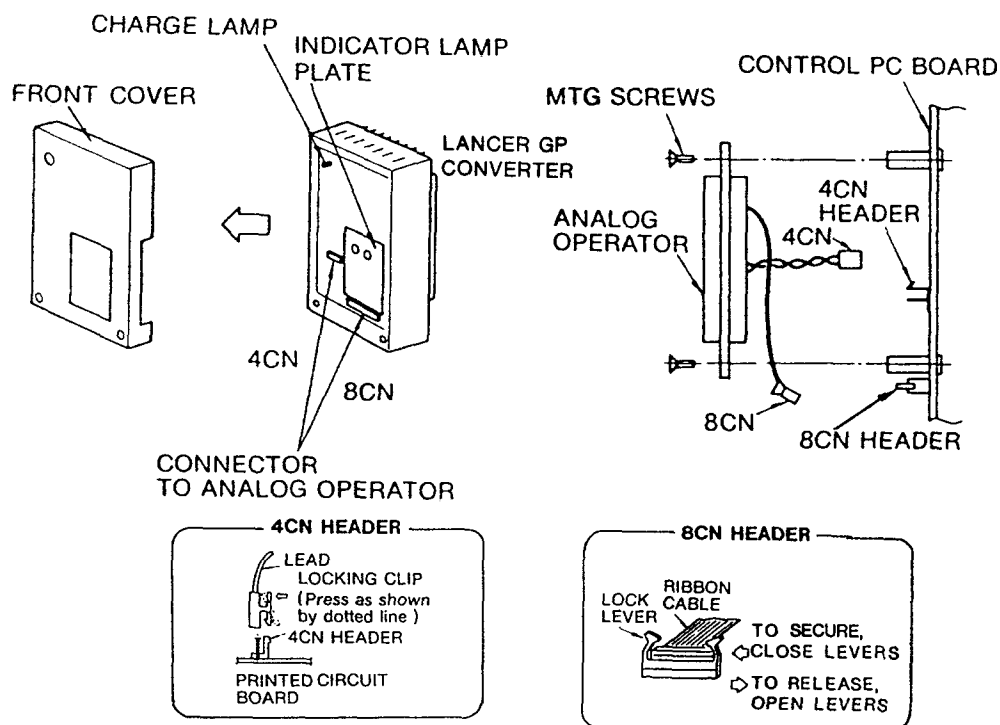


Figure 2. Installation

DWG. NO. 02Y00025-0248
SHEET 2 OF 5
EFF. 11/30/87 (G)

NOTE

With the shunt in this position, any external SPEED pot wired to the Drive will be disabled.

8. Replace and secure the GPD 602 front cover.

FUNCTION OF SELECTOR SWITCHES

AUTO/MAN - This two position switch selects whether the Drive will operate in Automatic mode (responding to external control signal inputs) or in Manual mode (responding to settings on the Analog Operator).

JOG/RESET - This two position, center off switch is used to select jog operation (in Manual mode only) or for resetting fault conditions.

For jog operation, speed is not controlled by the FREQ SET pot. Jog speed of 1/10 maximum frequency is standard, and cannot be adjusted.

Switch 6S notch 7 on the Control PCB selects the manner of jog operation:

OFF - Full-voltage (normal jog) operation.

ON - Soft jog, with frequency acceleration to or deceleration from jog speed.

Setting this switch momentarily to the RESET position will reset any fault indication and reset the Drive's fault relay. This function is disabled when the AUTO/MAN switch is set to AUTO.

RUN/STOP - This two position, center off switch is used to start the Drive (in Manual mode) or to Stop the drive. Regardless of whether the Drive is operating in Manual or Auto mode, the Stop command takes priority over any other control signal.

FWD/REV - This two position switch selects the direction of motor rotation when the Drive is in Manual mode.

STATUS INDICATORS

RUN Lamp. This green lamp is illuminated whenever the Drive is running, regardless of Auto or Manual mode of operation.

STOP Lamp. This amber lamp is illuminated whenever the Drive is in stopped condition with power applied.

Fault Indicator Lamps. When Drive fault shutdown occurs, the STOP lamp will be illuminated and one of the eight red fault indicator lamps will illuminate to identify the type of fault that has occurred (see Table 2).

If several fault conditions were sensed by the Drive's control circuit before the Fault relay tripped, only the first fault in sequence will be identified.

If the settings of switches 1S thru 6S on the Control PCB are changed while power is applied to the Drive, the new setting will not be acknowledged by the control circuit, and the CPF lamp will blink. This condition can be cleared in one of two manners:

a. Set the switches as they were before they were changed, and momentarily set the JOG/RESET switch to RESET. The CPF lamp will go out.

DWG. NO. 02Y00025-0248
SHEET 3 OF 5
EFF. 11/30/87 (C)

Table 2. Failure Indication

INDICATION	SYMPTOM
OC (Overcurrent)	More than 200% of rated current flow in Drive output side. (instantaneous operation)
OV (Overvoltage)	DC bus voltage higher than 790V for 460V units, 375V for 230V units.
OL (Overload)	Overload of motor and Drive detected by electronic thermal circuit.
EB (External Failure)	External fault signal input at Drive terminal 7.
FU (Fuse blown)	Main circuit fuse blown.
UV (Undervoltage)	DC bus voltage lower than 450V for 460V units, 225V for 230V units.
OH (Heat Sink Overheat)	Thermoswitch on semiconductor heat sink detected excessive temperature.
CPF (Control Function Error)	Detection of the failure of CPU or main control function by self-diagnostic function.

b. Remove input power and wait for "CHARGE" lamp to go out. Then re-apply power. The new switch settings are now accepted by the control circuit.

When switch 6S notch 5 on the Control PCB is set to ON, and a momentary power failure (2 seconds or less) occurs, the Drive will continue to operate; the UV lamp will blink for approximately 2 seconds and then go out. If a power failure of longer than 2 seconds occurs, a normal UV fault shutdown will occur.

FAULT RESET

After a fault shutdown, once the fault indication has been noted, the indicator lamp can be turned off and the Fault relay reset as follows:

a. If necessary, set the AUTO/MAN switch to MAN.

b. Momentarily place the JOG/RESET switch to RESET.

If the above procedure does not turn off the indicator lamp, the fault is still present.

The reset function will occur automatically if power is removed from the Drive and then reapplied.

FREQUENCY METER CALIBRATION

The frequency meter on the Analog Operator has been adjusted prior to shipping so that the meter reading synchronizes with the rated frequency. After installation of the Analog Operator in the Drive, if the accuracy of meter indication is questioned, perform the following calibration procedure.

1. Remove input power.

2. Note the setting of switch 2S on the Control PCB, then turn it to notch F.

DWG. NO. 02Y00025-0248
 SHEET 4 OF 5
 EFF. 11/30/87 (G)

3. Apply input power to the Drive.

4. Insert an insulated screwdriver through the hole in the front panel of the Analog Operator and adjust the MTR CAL potentiometer so that the meter indicates maximum frequency.

5. Remove input power. Return switch 2S to the setting noted in step 2.

DWG. NO. 02Y00025-0248
SHEET 5 OF 5
EFF. 11/30/87 (G)