
YASKAWA

Σ -X-Series AC Servo Drive

Rotary Servomotor Product Manual

Model: SGMXJ/SGMXA/SGMXP/SGMXG

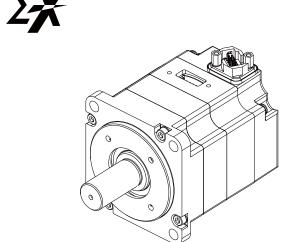

Basic Information on Servomotors

Capacity Selection

Specifications, Ratings, and External Dimensions of SGMXJ Servomotors

Specifications, Ratings, and External Dimensions of SGMXA Servomotors

Specifications, Ratings, and External Dimensions of SGMXP Servomotors

Specifications, Ratings, and External Dimensions of SGMXG Servomotors

Servomotor Installation

Connections between Servomotors and **SERVOPACKs**

Maintenance and Inspection

Appendices

Table of Contents

i.	Prefa	ace ar	nd General Precautions	9
	i.1	Abou	ıt this Manual	. 10
	i.2	Outli	ne of Manual	11
	i.3	Rela	ted Documents	. 12
		i.3.1	Related Documents.	13
	i.4	Using	g This Manual	. 17
		i.4.1	Technical Terms Used in This Manual	17
		i.4.2	Trademarks	17
		i.4.3	Visual Aids	17
	i.5	Safe	ty Precautions	. 18
		i.5.1	Safety Information	18
		i.5.2	Safety Precautions That Must Always Be Observed	18
	i.6	Warr	antyanty	. 30
		i.6.1	Details of Warranty	30
		i.6.2	Limitations of Liability	30
		i.6.3	Suitability for Use	30
		i.6.4	Specifications Change	31
	i.7		pliance with UL Standards, EU Directives, and Other Safety dards	. 32
		i.7.1	North American Safety Standards (UL)	32
		i.7.2	EU Directives	32
		i.7.3	Safety Standards	33
		i.7.4	UK Conformity Assessed (UKCA)	33
1.	Basic	c Info	rmation on Servomotors	. 35
	1.1	Serv	omotor Part Names	. 36
		1.1.1	SGMXJ servomotors, SGMXA servomotors (Up to 1.0 kW), SGMXP servomotors (Up to 400 W)	36
		1.1.2	SGMXG Servomotors (Up to 450 W)	
		1.1.3	SGMXA (1.5 kW to 5.0 kW) and SGMXG (600 W or more) Servomotors	36
		1.1.4	SGMXA Servomotors (7.0 kW)	37

		1.1.5 1.1.6	SGMXP Servomotors (200 W, 400 W) (400 V Specification)	
	1.2	Interp	preting the Nameplate	38
	1.3	Outlir	ne of Model Designations	39
		1.3.1	Servomotor	39
		1.3.2	SERVOPACKs	40
	1.4	Comb	binations of Servomotors and SERVOPACKs	41
		1.4.1	Servomotors with 200 V Specification	41
		1.4.2	Servomotors with 400 V Specification	43
	1.5	26-Bi	t Compact Batteryless Absolute Encoder	44
		1.5.1	Encoder Internal Battery Level	44
2.	Capa	icity S	Selection	45
	•	•		
	2.1		cting the Servomotor Capacity	
		2.1.1	Capacity Selection Example for a Rotary Servomotor (Speed Control)	
		2.1.2	Capacity Selection Example for a Rotary Servomotor (Position Control)	48
3.	Spec	ificati	ons, Ratings, and External Dimensions of SGMXJ	
	Canu	amata	ors	
	Servi	אוווטונ	ло	51
	3.1		el Designations	
		Mode		52
	3.1	Mode	el Designations	52
	3.1	Mode Spec	el Designations	52 53
	3.1	Mode Spec 3.2.1	el Designationsifications and Ratings	52 53 53
	3.1	Mode Spec 3.2.1 3.2.2	el Designationsifications and Ratings	52 53 53 54
	3.1	Mode Spec 3.2.1 3.2.2 3.2.3	el Designations	52 53 53 54 57 58
	3.1	Mode Spec 3.2.1 3.2.2 3.2.3 3.2.4	el Designations ifications and Ratings Specification. Servomotor Ratings. Torque-Rotation Speed Characteristics Servomotor Overload Protection Characteristics	52 53 54 57 58
	3.1	Mode Spec 3.2.1 3.2.2 3.2.3 3.2.4 3.2.5 3.2.6	el Designations ifications and Ratings Specification. Servomotor Ratings. Torque-Rotation Speed Characteristics Servomotor Overload Protection Characteristics Allowable Load Moment of Inertia	52 53 54 57 58 58
	3.1 3.2	Mode Spec 3.2.1 3.2.2 3.2.3 3.2.4 3.2.5 3.2.6	el Designations ifications and Ratings Specification. Servomotor Ratings. Torque-Rotation Speed Characteristics Servomotor Overload Protection Characteristics Allowable Load Moment of Inertia Derating Rates.	52 53 54 57 58 58 59
	3.1 3.2	Mode Spec 3.2.1 3.2.2 3.2.3 3.2.4 3.2.5 3.2.6 Exter	el Designations ifications and Ratings Specification. Servomotor Ratings. Torque-Rotation Speed Characteristics Servomotor Overload Protection Characteristics Allowable Load Moment of Inertia Derating Rates. rnal Dimensions	52 53 54 57 58 58 59 61
	3.1 3.2	Spec 3.2.1 3.2.2 3.2.3 3.2.4 3.2.5 3.2.6 Exter 3.3.1	el Designations ifications and Ratings Specification. Servomotor Ratings. Torque-Rotation Speed Characteristics Servomotor Overload Protection Characteristics Allowable Load Moment of Inertia Derating Rates. cnal Dimensions SGMXJ-A5 to -C2	52 53 54 57 58 58 59 61 61
	3.1 3.2	Mode Spec 3.2.1 3.2.2 3.2.3 3.2.4 3.2.5 3.2.6 Exter 3.3.1 3.3.2	el Designations ifications and Ratings Specification. Servomotor Ratings. Torque-Rotation Speed Characteristics Servomotor Overload Protection Characteristics Allowable Load Moment of Inertia Derating Rates. Thal Dimensions SGMXJ-A5 to -C2 SGMXJ-02 to -06	52 53 54 57 58 59 61 61 64 67
4.	3.1 3.2 3.3	Mode Spec 3.2.1 3.2.2 3.2.3 3.2.4 3.2.5 3.2.6 Exter 3.3.1 3.3.2 3.3.3 3.3.4	el Designations ifications and Ratings Specification. Servomotor Ratings. Torque-Rotation Speed Characteristics Servomotor Overload Protection Characteristics Allowable Load Moment of Inertia Derating Rates. rnal Dimensions SGMXJ-A5 to -C2 SGMXJ-02 to -06. SGMXJ-08	52 53 54 57 58 59 61 61 64 67
4.	3.1 3.2 3.3	Spec 3.2.1 3.2.2 3.2.3 3.2.4 3.2.5 3.2.6 Exter 3.3.1 3.3.2 3.3.3 3.3.4	el Designations ifications and Ratings Specification. Servomotor Ratings. Torque-Rotation Speed Characteristics Servomotor Overload Protection Characteristics Allowable Load Moment of Inertia Derating Rates. rnal Dimensions SGMXJ-A5 to -C2 SGMXJ-02 to -06. SGMXJ-08 Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXJ-poll)	52 53 54 57 58 58 59 61 61 64 67
4.	3.1 3.2 3.3	Spec 3.2.1 3.2.2 3.2.3 3.2.4 3.2.5 3.2.6 Exter 3.3.1 3.3.2 3.3.3 3.3.4	ifications and Ratings Specification. Servomotor Ratings. Torque-Rotation Speed Characteristics Servomotor Overload Protection Characteristics Allowable Load Moment of Inertia Derating Rates That Dimensions SGMXJ-A5 to -C2 SGMXJ-02 to -06 SGMXJ-08 Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXJ-DDMX) ons, Ratings, and External Dimensions of SGMXA	52 53 54 57 58 59 61 61 64 67 69

		4.2.1	Specification	73
		4.2.2	Servomotor Ratings	74
		4.2.3	Torque-Rotation Speed Characteristics	79
		4.2.4	Servomotor Overload Protection Characteristics	80
		4.2.5	Allowable Load Moment of Inertia	80
		4.2.6	Derating Rates	81
	4.3	Spec	cifications and Ratings (400 V Specification)	84
		4.3.1	Specification	84
		4.3.2	Servomotor Ratings	85
		4.3.3	Torque-Rotation Speed Characteristics	87
		4.3.4	Servomotor Overload Protection Characteristics	87
		4.3.5	Allowable Load Moment of Inertia	88
		4.3.6	Derating Rates	88
	4.4	Exter	rnal Dimensions (200 V Specification)	90
		4.4.1	SGMXA-A5 to -C2	
		4.4.2	SGMXA-02 to -06	93
		4.4.3	SGMXA-08 and -10	96
		4.4.4	SGMXA-15 to -25	98
		4.4.5	SGMXA-30 to -50	102
		4.4.6	SGMXA-70 (Without Holding Brakes)	106
		4.4.7	Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXA-□□□W)	109
	4.5	Exter	rnal Dimensions (400 V Specification)	110
		4.5.1	SGMXA-15 to -25	110
		4.5.2	SGMXA-30 to -50	114
		4.5.3	Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXA-□□□W)	118
5.	-		ions, Ratings, and External Dimensions of SGMXP	119
	Serv	OHIOR	ors	119
	5.1	Mode	el Designations	120
	5.2	Spec	cifications and Ratings (200 V Specification)	121
		5.2.1	Specification	121
		5.2.2	Servomotor Ratings	122
		5.2.3	Torque-Rotation Speed Characteristics	124
		5.2.4	Servomotor Overload Protection Characteristics	124
		5.2.5	Allowable Load Moment of Inertia	125
		5.2.6	Derating Rates	126
	5.3	Spec	cifications and Ratings (400 V Specification)	127
		5.3.1	Specification	
		5.3.2	Servomotor Ratings	
		5.3.3	Torque-Rotation Speed Characteristics	

		5.3.4	Servomotor Overload Protection Characteristics	
		5.3.5	Allowable Load Moment of Inertia	
		5.3.6	Derating Rates	132
	5.4	Exter	rnal Dimensions (200 V Specification)	133
		5.4.1	SGMXP-01 to -04	133
		5.4.2	SGMXP-08, -15	135
		5.4.3	Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXP-□□□W)	137
	5.5	Exter	rnal Dimensions (400 V Specification)	138
		5.5.1	SGMXP-02, -04	
		5.5.2	SGMXP-08, -15	
		5.5.3	Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXP-□□□W)	
6.	Spec	ificati	ons, Ratings, and External Dimensions of SGMXG	
	Serv	omoto	ors	145
	6.1	Mode	el Designations	147
	6.2	Spec	ifications and Ratings (200 V, 1500-min ⁻¹ Specification)	148
		6.2.1	Specification	148
		6.2.2	Servomotor Ratings (SGMXG-03A□A to -20A□A)	149
		6.2.3	Servomotor Ratings (SGMXG-30A□A to -1EA□A)	151
		6.2.4	Torque-Rotation Speed Characteristics	153
		6.2.5	Servomotor Overload Protection Characteristics	154
		6.2.6	Allowable Load Moment of Inertia	155
		6.2.7	Derating Rates	156
	6.3	Spec	eifications and Ratings (200 V, 1000-min ⁻¹ Specification)	158
		6.3.1	Specification	158
		6.3.2	Servomotor Ratings	159
		6.3.3	Torque-Rotation Speed Characteristics	161
		6.3.4	Servomotor Overload Protection Characteristics	161
		6.3.5	Allowable Load Moment of Inertia	162
		6.3.6	Derating Rates	163
	6.4	Spec	ifications and Ratings (400 V, 1500-min ⁻¹ Specification)	165
		6.4.1	Specification	165
		6.4.2	Servomotor Ratings (SGMXG-05D□A to -30D□A)	166
		6.4.3	Servomotor Ratings (SGMXG-44D□A to -1ED□A)	167
		6.4.4	Torque-Rotation Speed Characteristics	170
		6.4.5	Servomotor Overload Protection Characteristics	171
		6.4.6	Allowable Load Moment of Inertia	172
		6.4.7	Derating Rates	172
	6.5	Exter	rnal Dimensions (200 V Specification)	174
		6.5.1	SGMXG-03A□A, -05A□A, -03A□B	174

		6.5.2	SGMXG-09A□A to -20A□A, -06A□B to -12A□B	178
		6.5.3	SGMXG-30A□A to -75A□A, -20A□B to -55A□B	182
		6.5.4	SGMXG-1A, -1E	188
		6.5.5	Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXG-□□□W)	193
	6.6	Exter	nal Dimensions (400 V Specification)	194
		6.6.1	SGMXG-05D□A	194
		6.6.2	SGMXG-09D□A to -20D□A.	197
		6.6.3	SGMXG-30D□A to -75D□A.	201
		6.6.4	SGMXG-1A, -1E	206
		6.6.5	Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXG-uuuW)	210
7.	Servo	omoto	or Installation	213
	7.1	Instal	lation Conditions	214
		7.1.1	Installation Precautions	
		7.1.2	Installation Environment	
		7.1.3	Installation Orientation	214
		7.1.4	Using Servomotors with Oil Seals	214
		7.1.5	Using Servomotors with Holding Brakes	215
	7.2	Coup	ling to the Machine	216
		7.2.1	Using a Coupling	216
		7.2.2	Using a Belt	217
	7.3	Oil ar	nd Water Countermeasures	218
	7.4	Servo	omotor Temperature Increase	219
8.	Conn	oction	ns between Servomotors and SERVOPACKs	221
0.				
	8.1	Cable	es for the SGMXJ Servomotors	223
		8.1.1	System Configurations	
		8.1.2	Servomotor Main Circuit Cables	
		8.1.3	Encoder Cables (When Not Relaying the Encoder Cable)	
		8.1.4	Encoder Cables (When Relaying the Encoder Cable)	233
	8.2	Cable	es for the SGMXA Servomotors	235
		8.2.1	System Configurations	235
		8.2.2	Servomotor Main Circuit Cables	
		8.2.3	Encoder Cables (When Not Relaying the Encoder Cable)	
		8.2.4	Encoder Cables (When Relaying the Encoder Cable)	
	8.3		es for the 200 V SGMXP Servomotors	
		8.3.1	System Configurations	
		8.3.2	Servomotor Main Circuit Cables	
		8.3.3	Encoder Cables (When Not Relaying the Encoder Cable)	262

		8.3.4	Encoder Cables (When Relaying the Encoder Cable)
	8.4	Cable	es for the 400 V SGMXP Servomotors
		8.4.1	System Configurations
		8.4.2	Servomotor Main Circuit Cables
		8.4.3	Encoder Cables (When Not Relaying the Encoder Cable)
		8.4.4	Encoder Cables (When Relaying the Encoder Cable)
	8.5	Cable	es for the SGMXG Servomotors
		8.5.1	System Configurations
		8.5.2	Servomotor Main Circuit Cables
		8.5.3	Encoder Cables (When Not Relaying the Encoder Cable)
		8.5.4	Encoder Cables (When Relaying the Encoder Cable)
	8.6	Wiring	g Servomotors and SERVOPACKs
		8.6.1	Wiring Precautions
		8.6.2	Wiring Procedure 288
^	N.4		
9.	Main	tenan	ce and Inspection
	9.1	Perio	dic Inspections
	9.2	Servi	ce Lives of Parts
	9.3	Dispo	sing of Servomotors
10	. Appe	ndice	s
	10.1	Refer	ence Information for Servomotor Capacity Selection
		10.1.1	Formulas Required to Select the Servomotor Capacity
		10.1.2	GD ² for Simple Diagrams
		10.1.3	Conversions between Engineering Units and SI Units
		10.1.4	Application Examples by Type of Application
Re	vision	Histo	ry

Preface and General Precautions

i.1	Abou	About this Manual10				
i.2	Outline of Manual1					
i.3	Relat	ed Documents	12			
	i.3.1	Related Documents	13			
i.4	Using	This Manual	17			
	i.4.1	Technical Terms Used in This Manual	17			
	i.4.2	Trademarks	17			
	i.4.3	Visual Aids	17			
i.5	Safet	y Precautions	18			
	i.5.1	Safety Information	18			
	i.5.2	Safety Precautions That Must Always Be Observed	18			
i.6	Warra	anty	30			
	i.6.1	Details of Warranty	30			
	i.6.2	Limitations of Liability	30			
	i.6.3	Suitability for Use	30			
	i.6.4	Specifications Change	31			
i.7		oliance with UL Standards, EU Directives, and Other Safety lards	ວາ			
	i.7.1					
	i.7.1 i.7.2	North American Safety Standards (UL) EU Directives				
	i.7.3	Safety Standards				
	i.7.4	UK Conformity Assessed (UKCA)	33			

i.1 About this Manual

This manual provides the information needed for the selection, installation, connection, and maintenance of the rotary servomotor of the Σ -X-series AC servo drives.

Read and understand this manual to ensure correct usage of the Σ -X-series AC servo drives.

Keep this manual in a safe place so that it can be referred to whenever necessary.


i.2 Outline of Manual

The contents of the chapters of this manual are described in the following table. Refer to these chapters as required.

Chapter	Chapter Title	Contents
1	Basic Information on Servomotors	Provides basic information on rotary servomotors, including servomotor part names and combinations with SERVOPACKs.
2	Capacity Selection	Describes calculation methods to use when selecting servomotor capacities.
3	Specifications, Ratings, and External Dimensions of SGMXJ Servomotors	Describes how to interpret the model numbers of SGMXJ servomotors and gives their specifications, ratings, and external dimensions.
4	Specifications, Ratings, and External Dimensions of SGMXA Servomotors	Describes how to interpret the model numbers of SGMXA servomotors and gives their specifications, ratings, and external dimensions.
5	Specifications, Ratings, and External Dimensions of SGMXP Servomotors	Describes how to interpret the model numbers of SGMXP servomotors and gives their specifications, ratings, and external dimensions.
6	Specifications, Ratings, and External Dimensions of SGMXG Servomotors	Describes how to interpret the model numbers of SGMXG servomotors and gives their specifications, ratings, and external dimensions.
7	Servomotor Installation	Describes the installation conditions, procedures, and precautions for servomotors.
8	Connections between Servomotors and SERVOPACKs	Describes the cables that are used to connect the servomotors and SERVOPACKs and provides related precautions.
9	Maintenance and Inspection	Describes the maintenance, inspection, and disposal of a servomotor.
10	Appendices	Provide reference information on selecting servomotor capacity.

i.3 Related Documents

The relationships between the documents that are related to the servo drives are shown in the following figure. The numbers in the figure correspond to the numbers in the table on the following pages. Refer to these documents as required.

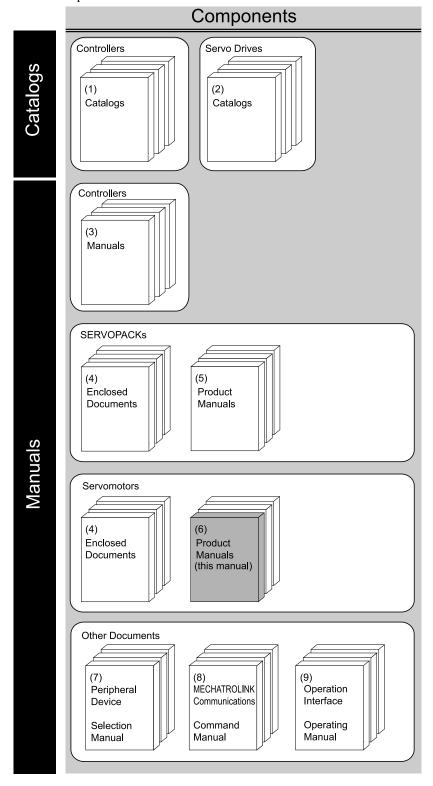

i.3.1 Related Documents

(1) Machine Controllers Catalogs

You can check for products related to YASKAWA machine controllers. Refer to these documents as required.

(2) Servo Drives Catalogs

Document Name	Document No.	Description
AC Servo Drives Sigma-X Series	TK VED C210815 03	Provides detailed information on Σ-X-series AC servo drives, including features and specifications.

(3) Machine Controllers Manuals

The machine controller to use depends on the SERVOPACK that is used. Refer to the manual for the machine controller as required.

(4) Included Documents

Document Name	Document No.	Description
Σ-X-Series AC Servo Drive Σ-XS/Σ-XW SERVOPACK Safety Precautions	TOMP C710812 00	Provide detailed information for the safe usage of Σ -X-
Σ-X-Series AC Servo Drive Σ-XT SERVOPACK Safety Precautions	TOMP C710812 16	series SERVOPACKs.
Σ-X-Series AC Servo Drive Advanced Safety Module Safety Precautions	TOMP C710812 25	Provides detailed information for the safe usage of the advanced safety module.
Σ-X-Series AC Servo Drive Advanced Safety Module Installation Guide	TOMP C710812 26	Provides detailed procedures for installing the advanced safety module in a SERVOPACK.
Σ-X-Series AC Servo Drive Σ-LINK II Sensor Hub Instructions	TOMP C710812 06	Provides detailed information for the safe usage of the Σ -LINK II sensor hub, as well as specifications, installation, and connection information.
Σ-X-Series AC Servo Drive Σ-LINK II Booster Unit Instructions	TOMP C710812 08	Provides detailed information for the safe usage of the Σ -LINK II booster unit, as well as specifications, installation, and connection information.
Σ-V-Series/Σ-V-Series for Large-Capacity Models/Σ-7-Series/Σ-X-Series Installation Guide Fully-closed Module	TOBP C720829 03	Provides detailed procedures for installing the fully-closed module in a SERVOPACK.
AC Servo Drive Rotary Servomotor Safety Precautions	TOBP C230260 00	Provides detailed information for the safe usage of rotary servomotors and direct drive servomotors.

(5) SERVOPACK Product Manuals

Document Name	Document No.	Description	
Σ-X-Series AC Servo Drive Σ-XS SERVOPACK with MECHATROLINK-4/III Communications References Product Manual	SIEP C710812 01		
Σ-X-Series AC Servo Drive Σ-XS SERVOPACK with EtherCAT Communications References Product Manual	SIEP C710812 02		
Σ-X-Series AC Servo Drive Σ-XS SERVOPACK with Analog Voltage/Pulse Train References Product Manual	SIEP C710812 03	Provide detailed information on selecting Σ -X-series Σ -XS or Σ -XW SERVOPACKs; installing, connecting, setting, testing in trial operation, tuning, monitoring, and maintaining servo drives; and other information.	
Σ-X-Series AC Servo Drive Σ-XW SERVOPACK with MECHATROLINK-4/III Communications References Product Manual	SIEP C710812 04		
Σ-X-Series AC Servo Drive Σ-XW SERVOPACK with EtherCAT Communications References Product Manual	SIEP C710812 05		
Σ-X-Series AC Servo Drive Σ-XT SERVOPACK with MECHATROLINK-4/III Communications References Product Manual	SIEP C710812 16	Provide detailed information on selecting Σ -X-series Σ XT SERVOPACKs; installing, connecting, setting, test	
Σ-X-Series AC Servo Drive Σ-XT SERVOPACK with EtherCAT Communications References Product Manual	SIEP C710812 17	ing in trial operation, tuning, monitoring, and maintain- ing servo drives; and other information.	
Σ-X-Series AC Servo Drive Advanced Safety Module with Safety over EtherCAT (FSoE) Commu- nications References Product Manual	SIEP C710812 25	Provide detailed information on selecting the advanced safety module; installing, connecting, setting, testing in	
Σ-X-Series AC Servo Drive Advanced Safety Module Digital I/O Product Manual	SIEP C710812 26	trial operation, tuning, monitoring, and maintaining servo drives; and other information.	
Σ-X-Series AC Servo Drive Σ-XW/Σ-XT SERVOPACK Hardware Option Specifications HWBB Function Product Manual	SIEP C710812 13	Provides information on servo drives equipped with the HWBB safety function (SGDXW-□□□□40□1000, SGDXW-□□□□A0□1000, SGDXT-□□□□A0□1000)). The differences in specifications from SERVOPACKs not equipped with the HWBB are given in this manual.	
Σ-X-Series AC Servo Drive Σ-XS/Σ-XW/Σ-XT SERVOPACK Hardware Option Specifications Dynamic Brake Product Manual	SIEP C710812 14	Provides information on Σ-X-series AC servo drives (SGDX□-□□□□□□0020) with the dynamic brake option. The differences in specifications from SERVO-PACKs without the dynamic brake option are given in this manual.	

Continued on next page.

Continued from previous page.

Document Name	Document No.	Description	
Σ-X-Series AC Servo Drive Σ-XS/Σ-XW SERVOPACK			
with MECHATROLINK-4/III Communications References FT Specification	SIEP C710812 19		
for Gantry Applications Product Manual		Provide information on the gantry application function and torque/force assistance in the Σ -X-series Σ -XS/ Σ -	
Σ-X-Series AC Servo Drive Σ-XS/Σ-XW SERVOPACK with EtherCAT Communications References FT Specification for Gantry Applications Product Manual	SIEP C710812 20	XW SERVOPACK.	
Σ-X-Series AC Servo Drive Σ-XS SERVOPACK with MECHATROLINK-4/III Communications References FT Specification for Press and Injection Molding Applications Product Manual	SIEP C710812 22	Provide information on the press and injection molding	
Σ-X-Series AC Servo Drive Σ-XS SERVOPACK with EtherCAT Communications References FT Specification for Press and Injection Molding Applications Product Manual	SIEP C710812 23	function in the Σ-X-series Σ-XS SERVOPACK.	
Σ-X-Series AC Servo Drive Σ-XS SERVOPACK with FT Specification Customized Sensing Data Function Option Product Manual	SIEP C710812 18	Provides information on the customized sensing data function in the Σ -X-series Σ -XS SERVOPACK.	
Σ-X-Series AC Servo Drive Σ-XS SERVOPACK with FT Specification Customized Sensing Data Function Option (with Custom Motion Function) Product Manual	SIEP C710812 21	Provides information on the customized sensing data function (with custom motion function) in the Σ -X-series Σ -XS SERVOPACK.	
Σ-X-Series AC Servo Drive Σ-XS SERVOPACK with FT Specification Customized Sensing Data Function Option (with Standalone Custom Motion Function) Product Manual	SIEP C710812 32	Provides information on the customized sensing data function (with standalone custom motion function) in the Σ -X-series Σ -XS SERVOPACK.	
Σ-X-Series AC Servo Drive Σ-XS SERVOPACK with FT/EX Specification for Indexing Application Product Manual	SIEP C710812 34	Provides information on the Σ -X-series Σ -XS SERVO-PACK for indexing applications.	

(6) Servomotor Product Manuals

Document Name	Document No.	Description
Σ-X-Series AC Servo Drive Rotary Servomotor Product Manual	LSTEP C230210 00	Provides detailed information on selecting, installing, and connecting the Σ -X-series servomotors.

(7) Peripheral Device Selection Manual

Document Name	Document No.	Description
Σ-X-Series AC Servo Drive Peripheral Device Selection Manual	SIEP C710812 12	 Provides the following information in detail for Σ-X-series servo systems. Cables: Models, dimensions, wiring materials, connector models, and connection specifications Peripheral devices: Models, specifications, diagrams, and selection (calculation) methods

(8) MECHATROLINK Communications Command Manuals

Document Name	Document No.	Description
Σ-7/Σ-X-Series AC Servo Drive MECHATROLINK-III Communications Standard Servo Profile Command Manual	SIEP S800001 31	Provides detailed information on the MECHATRO-LINK-III communications standard servo profile commands that are used for a Σ -7/ Σ -X-series servo system.
Σ-7/Σ-X-Series AC Servo Drive MECHATROLINK-4 Communications Standard Servo Profile Command Manual	SIEP S800002 32	Provides detailed information on the MECHATRO-LINK-4 communications standard servo profile commands that are used for a Σ -7/ Σ -X-series servo system.

(9) Operation Interface Operating Manuals

Document Name	Document No.	Description
System Integrated Engineering Tool MPE720 Ver.7 User's Manual	SIEP C880761 03	Describes in detail how to operate MPE720 version 7.
AC Servo Drive Engineering Tool SigmaWin+ Application Editor Operation Manual	SIEP C710812 33	Describes the operating procedures for SigmaWin+ Application Editor.
Σ-7/Σ-X-Series AC Servo Drive Digital Operator Operating Manual	SIEP S800001 33	Describes the operating procedures for a digital operator for a Σ -7/ Σ -X-series servo system.
AC Servo Drive Engineering Tool SigmaWin+ Operation Manual	SIET S800001 34	Provides detailed operating procedures for the SigmaWin + engineering tool for a Σ -7/ Σ -X series servo system.

i.4 Using This Manual

i.4.1 Technical Terms Used in This Manual

The following terms are used in this manual.

Term	Meaning
servomotor	Σ-X-series rotary servomotors
SERVOPACK	Σ-X-series servo amplifier
servo drive	The combination of a servomotor and SERVOPACK.
main circuit cable	One of the cables that connect to the SERVOPACK main circuit terminals, including the main circuit power supply cable, control power supply cable, and servomotor main circuit cable.
harlet and a	The general term used for absolute encoders with batteries, batteryless absolute encoders, and compact batteryless absolute encoders.
absolute encoder	If the explanation is difficult to understand, "batteryless absolute encoder" or "compact batteryless absolute encoder" may also be used for clarity.

i.4.2 Trademarks

- EtherCAT® is a registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.
- QR code is a trademark of Denso Wave Inc.
- MECHATROLINK is a trademark of the MECHATROLINK Members Association.
- Σ-LINK is a trademark of the MECHATROLINK Members Association.
- Other product names and company names are the trademarks or registered trademarks of their respective companies. "TM" and the ® mark do not appear with product or company names in this manual.

i.4.3 Visual Aids

The following aids are used to indicate certain types of information for easier reference.



Indicates precautions or restrictions that must be observed.

Also indicates alarm displays and other precautions that will not result in machine damage.



Indicates definitions of difficult terms or terms that have not been previously explained in this manual.

Information

Indicates supplemental information to deepen understanding or useful information.

i.5 Safety Precautions

i.5.1 Safety Information

To prevent personal injury and equipment damage in advance, the following signal words are used to indicate safety precautions in this document. The signal words are used to classify the hazards and the degree of damage or injury that may occur if a product is used incorrectly. Information marked as shown below is important for safety. Always read this information and heed the precautions that are provided.

A DANGER

This signal word identifies a hazard that will cause serious injury or death if you do not prevent it.

⚠ WARNING

This signal word identifies a hazard that can cause death or serious injuries if you do not prevent it.

⚠ CAUTION

This signal word identifies a hazard that can cause moderate injuries if you do not prevent it.

NOTICE

This signal word identifies a property damage message that is not related to personal injury.

i.5.2 Safety Precautions That Must Always Be Observed

(1) General Precautions

▲ DANGER

Make sure to observe all information related to safety contained in this manual.

If you fail to observe these warnings, there is a risk of equipment damage or product failure. There is also a risk of injury, fire, or electric shock that causes death or serious injury.

Yaskawa bears no responsibility to you or your customers for injuries and equipment damage that occur from failing to observe the warnings and precautions listed in this manual.

Keep this manual in a safe, convenient place so that it can be referred to whenever necessary. Make sure that it is delivered to the final user of the product.

Install and remove covers, cables, connectors, and optional devices when the power is turned OFF.

There is a risk of equipment damage or product failure. There is also a risk of fire or electric shock that causes death or serious injury. Additionally, there is a risk of death or serious injury due to unexpected machine operation.

MARNING

Make sure to connect the ground terminals on the SERVOPACK and servomotor to ground poles in the state shown below.

- SERVOPACK with 200-VAC power supply input: 100 Ω max.
- SERVOPACK with 400-VAC power supply 10 Ω max.

There is a risk of product failure. A fire or electric shock may also occur resulting in death or serious injury.

A SERVOPACK with 400-VAC power supply input can be used only in a power system with grounded neutral. Make sure to connect the SERVOPACK to a power supply with grounded neutral.

If the SERVOPACK is connected to a power supply without a grounded neutral, there is a risk of electric shock and product failure. A fire or electric shock may also occur resulting in death or serious injury.

Do not modify or alter the product in any manner that is not described in this manual.

If you modify or alter the product, there is a risk of fire or electric shock that causes death or serious injury. Repairs for product damage caused by modifying or altering the product in a manner not described in this manual are outside the scope of the Yaskawa warranty. Yaskawa bears no responsibility for product alterations performed by you or your customers.

Do not damage, pull on, apply excessive force to, place heavy objects on, or pinch cables.

There is a risk of fire or electric shock due to cable failure or damage that causes death or serious injury.

Do not place the product in locations where it is subject to water, corrosive gases, flammable gases, potentially explosive atmospheres, or near flammable materials.

There is a risk of product failure. A fire or electric shock may also occur resulting in death or serious injury.

Install external emergency stop circuits that can turn OFF the power and stop operation immediately in case an error occurs.

There is a risk of equipment damage and death or serious injury due to unexpected machine operation.

Always use a servomotor and SERVOPACK in one of the specified combinations.

There is a risk of product failure. There is also a risk of fire that causes death or serious injury. Additionally, there is a risk of death or serious injury due to unexpected machine operation.

Do not touch a SERVOPACK or servomotor with wet hands.

There is a risk of product failure if the SERVOPACK and servomotor get wet. A fire or electric shock may also occur resulting in death or serious injury.

A CAUTION

The SERVOPACK heat sinks, regenerative resistors, external dynamic brake resistors, servomotors, and other components can be very hot while power is ON or soon after the power is turned OFF. Implement safety measures, such as installing covers, so that hands and parts such as cables do not come into contact with hot components.

There is a risk of burns from touching hot components.

NOTICE

Do not attempt to use a SERVOPACK or servomotor that is damaged or that has missing parts.

There is a risk that the product may not function correctly.

Before selecting a brake power supply for the servomotor with holding brake, be sure to check the supply voltage and capacity that matches the servomotor model from the manual or catalog. Also, be sure to always check the input voltage to the holding brake.

NOTICE

Before operation, be sure to configure a protective circuit (surge absorber) between the brake power supply and servomotor.

There is a risk of damage to the servomotor.

The time until the holding brake is activated will vary depending on the type of protective circuit. Also, if multiple holding brakes are connected in parallel, the time required to brake will vary in the same way. For this reason, be sure to always check that time until the holding brake is activated in the actual equipment before running the servomotor.

(2) Storage Precautions

MARNING

Do not place an excessive load on the product. Follow the labels on the shipping box regarding product loading.

There is a risk of the product falling and causing product damage or failure. There is also a risk of death or serious injury.

Do not install or store the product in any of the following locations.

- · Locations that are subject to direct sunlight
- Locations that are subject to surrounding air temperatures that exceed product specifications
- Locations that are subject to relative humidities that exceed product specifications
- Locations that are subject to condensation as the result of extreme changes in temperature
- Locations that are subject to corrosive or flammable gases
- · Locations that are near flammable materials
- Locations that are subject to dust, salts, or iron powder
- Locations that are subject to water, oil, or chemicals
- · Locations that are subject to vibration or shock that exceeds product specifications
- · Locations that are subject to radiation

If you store or install the product in any of the above locations, there is a risk of product failure. A fire or electric shock may also occur resulting in death or serious injury.

NOTICE

An anti-rust coating was applied before shipping as an anti-corrosive treatment, but rust may still form on the motor shafts and bolts under certain storage conditions and storage periods. If storing for longer than six months, reapply anti-corrosive coating to the machined surfaces, particularly the motor shaft and similar parts.

If you will store the product for an extended period of time, contact your Yaskawa representative.

(3) Transportation Precautions

MARNING

Transport the product in a way that is suitable to the mass of the product.

There is a risk of the product falling and causing product damage or failure. There is also a risk of death or serious injury.

Do not place an excessive load on the product. Follow the labels on the shipping box regarding product loading.

There is a risk of the product falling and causing product damage or failure. There is also a risk of death or serious injury.

Do not overtighten the lifting hardware on the SERVOPACK and servomotor.

If you use a tool to overtighten the lifting hardware, the product may be damaged. The product may also be damaged and fall causing death or serious injury.

CAUTION

Do not hold onto the cables or motor shaft when you move the servomotor.

There is a risk of broken cables, damage, or injury.

When you handle a SERVOPACK or servomotor, be careful of sharp edges, such as the corners.

There is a risk of injury.

Use the eyebolts on the servomotor to move only the servomotor. Never use the eyebolts on the servomotor to move the servomotor while it is installed on the machine.

There is a risk of damage to the servomotor or injury.

If you move the servomotor while the cables are connected, always hold onto the main body of the servomotor.

If you lift the servomotor by the cables when you move it, the connectors may be damaged or the cables may be broken.

NOTICE

A SERVOPACK or servomotor is a precision device. Do not drop it or subject it to impact or excessive force.

There is a risk of product damage or failure.

Avoid applying mechanical shock or impact to connectors.

There is a risk of product damage or failure.

If disinfectants or insecticides must be used to treat packing materials such as wooden frames, plywood, or pallets, use a method other than fumigation.

For example, use heat sterilization (core temperature of 56°C or higher for 30 minutes or longer).

Treat the packing materials before the product is packaged instead of using a method that treats the entire packaged product.

If the electronic products, which include stand-alone products and products installed in machines, are packed with fumigated wooden materials, the electrical components may be greatly damaged by the gases or fumes resulting from the fumigation process. In particular, disinfectants containing halogen, which includes chlorine, fluorine, bromine, or iodine, can contribute to product failure by corroding the insides of capacitors.

(4) Installation Precautions

MARNING

To prevent electric shock, ground the servomotor securely.

Install the SERVOPACK and the servomotor using mounting that can support their mass. Check the masses of the SERVOPACK and the servomotor in the respective instruction manuals, and install the SERVOPACK and the servomotor by following the chapters related to installation in the respective product manuals.

In case of improper installation, there is a risk of the SERVOPACK and servomotor falling and causing damage or failure to equipment and the product. There is also a risk of death or serious injury.

Install SERVOPACKs, servomotors, regenerative resistors, and external dynamic brake resistors on nonflammable materials.

Installation directly onto or near flammable materials may result in fire that causes death or serious injury.

Do not allow any foreign matter to enter the SERVOPACK or servomotor.

There is a risk of product failure. There is also a risk of fire that causes death or serious injury.

Do not install or store the product in any of the following locations.

- · Locations that are subject to direct sunlight
- Locations that are subject to surrounding air temperatures that exceed product specifications
- Locations that are subject to relative humidities that exceed product specifications
- Locations that are subject to condensation as the result of extreme changes in temperature
- · Locations that are subject to corrosive or flammable gases
- · Locations that are near flammable materials
- Locations that are subject to dust, salts, or iron powder
- Locations that are subject to water, oil, or chemicals
- · Locations that are subject to vibration or shock that exceeds product specifications
- Locations that are subject to radiation

If you store or install the product in any of the above locations, there is a risk of product failure. A fire or electric shock may also occur resulting in death or serious injury.

A CAUTION

For motors with shaft end key grooves, do not touch the key grooves with your bare hands.

There is a risk of injury.

Anchor the servomotor securely to the machine.

If the servomotor is not secured properly, the servomotor could separate from the machine during operation.

Do not step on or place a heavy object on the product.

There is a risk of product damage or failure because the product cannot withstand the load.

Implement safety measures, such as by installing covers, so that the rotating parts of the servomotor cannot be touched during operation.

Do not connect a servomotor with an absolute encoder, a servomotor with a batteryless absolute encoder, or a servomotor with a compact batteryless absolute encoder in a location where there is a magnetic field with a magnetic flux density of 0.01 tesla (100 gauss) or higher.

NOTICE

Use the product in an environment that is appropriate for the product specifications.

There is a risk of product damage or failure if you use the product in an environment that exceeds the product specifications.

A SERVOPACK or servomotor is a precision device. Do not drop it or subject it to impact or excessive force.

There is a risk of product damage or failure.

Servomotors are precision devices. Do not subject the servomotor output shaft or servomotor body to impact or excessive force.

Properly design the system so that the thrust and radial loads applied to the motor shaft during operation are within the tolerances given in the catalog.

When you attach the key to the motor shaft, do not subject the key groove to direct shock.

Do not allow any foreign matter to enter a SERVOPACK or a servomotor with a cooling fan and do not cover the outlet from the servomotor's cooling fan.

There is a risk of product failure.

The servomotor can be installed either horizontally or vertically. When the servomotor includes an oil seal, if the output shaft is installed facing upwards, oil may enter inside the motor under certain operating conditions. If the shaft is installed facing upwards, be sure to carefully check the operating conditions.

For servomotors with an oil seal, use the oil seal in a lubricated state exposed only to splashing of oil.

If using in an environment where the oil seal would be below the oil surface, oil could enter the inside of the servomotor and cause the servomotor to fail.

The shaft opening section of the servomotor does not have a waterproof or oilproof structure, and so implement measures at the machine side so that water, cutting oil, and other substances will not get inside the servomotor.

There is a risk of failure.

If using for applications where the servomotor will be exposed to large amounts of water or oil droplets, implement measures to protect the servomotor such as by adding covers to shield from water or oil droplets to ensure that the servomotor is not exposed to large amounts of liquids.

In environments with large amounts of humidity or oil mist, install the servomotor so that the lead wires and connectors are facing downward, and provide a cable trap.

There is a risk of failure or fire due to deteriorated insulation, short-circuit, or other causes.

Mount the servomotor to the machine so that the cables and connectors are not subjected to stress.

Continuous operation in one direction, such as for a fan, may damage the bearings due to electrolytic corrosion. Contact your Yaskawa representative if you will use a servomotor for this type of application.

Using a servomotor for oscillating operation may reduce the service life of the bearings. (Oscillating operation is defined as a continuous forward-reverse operation within a 150° rotation angle of the motor shaft.) Rotate the servomotor one full turn or more at least once a day.

(5) Wiring Precautions

A DANGER

Do not change any wiring while power is being supplied.

There is a risk of equipment damage or product failure. There is also a risk of fire or electric shock that causes death or serious injury. Additionally, there is a risk of death or serious injury due to unexpected machine operation.

WARNING

Wiring and inspections must be performed only by qualified engineers.

If work is performed by a worker who is not a qualified engineer, there is a risk of fire or electric shock that causes death or serious injury.

Check all wiring and power supplies carefully.

Incorrect wiring or incorrect voltage application to the output circuits may cause short-circuit failures. If this failure occurs, there is a risk of fire that causes death or serious injury. There is also a risk of equipment and product damage because the holding brake may fail to operate properly.

Observe the precautions and instructions for wiring and trial operation precisely as described in "Wiring" and "Holding Brake" in the product manual for your SERVOPACK.

If a mistake is made in wiring or trial operation, there is a risk of product failure due to incorrect wiring or incorrect voltage application in the brake circuit. A fire or electric shock may also occur resulting in death or serious injury. Additionally, there is a risk of death or serious injury due to unexpected machine operation.

Check the wiring to be sure it has been performed correctly. Connectors and pin layouts may vary depending on the model. Always confirm the pin layout examples in the chapter related to pin layouts in the product manual for your model.

If the wiring is not performed correctly, there is a risk of product failure. There is also a risk of fire or electric shock that causes death or serious injury. Additionally, there is a risk of death or serious injury due to unexpected machine operation.

Connect wires to main circuit terminals and motor connection terminals securely with the specified methods and tightening torque. Refer to "SERVOPACK Main Circuit Wires" in the peripheral selection manual for your SERVOPACK for the specified methods and tightening torque.

Insufficient tightening may cause wires and terminal blocks to generate heat due to poor contact, possibly resulting in product failure. There is also a risk of fire that causes death or serious injury.

Make sure the cables do not exceed the following lengths:

- I/O signal cable: 3 m max.
- Servomotor main circuit cable: 50 m max.
- Encoder cable: 50 m max.
- Control power supply cable for 400-V power supply input SERVOPACK (+24 V and 0 V): 10 m max.

If a cable is longer than the specified length, there is a risk of equipment damage due to product malfunction that causes death or serious injury. There is also a risk of electric shock due to a short circuit or ground fault that causes death or serious injury.

Observe the following precautions when wiring the SERVOPACK's main circuit terminals.

- Turn ON the power to the SERVOPACK only after all wiring, including the main circuit terminals, has been completed.
- If a connector is used for the main circuit terminals, remove the main circuit connector from the SERVOPACK before you wire it.
- Insert only one wire per insertion hole in the main circuit terminals.
- When you insert a wire, make sure that the conductor wire (e.g., whiskers) does not come into contact with adjacent wires and cause a short-circuit.

If the SERVOPACK power is turned ON with incorrect wiring, there is a risk of fire due to electric shock or product failure that causes death or serious injury.

MARNING

Install a battery at either the host controller or on the encoder cable.

If you install batteries both at the host controller and on the encoder cable at the same time, you will create a loop circuit between the batteries, and this may result in a fire from product failure or damage that causes death or serious injury.

When connecting a battery, connect the polarity correctly.

There is a risk of encoder failure if the battery ruptures and a risk of fire that causes death or serious injury.

CAUTION

Select a cable that is appropriate for your servomotor model.

The cables are different between the standard specification and the Σ -7 compatible specification. Connecting the wrong cable could lead to a product failure.

Use shielded twisted-pair cables or shielded multi-core twisted-pair cables for I/O signal cables and encoder cables.

There is a risk of injury from product malfunction.

Do not connect the servomotor directly to an industrial power supply.

Doing so will damage the servomotor. You cannot operate a servomotor without a SERVOPACK that is designed for it.

Do not subject the cables to excessive bending stress or tension. The conductors in the encoder cable and servomotor main circuit cable are as thin as 0.2 mm² or 0.3 mm². Wire them so that they are not subjected to excessive stress.

If you secure the cables with cable ties, protect the cables with cushioning material.

If the cable will be bent repeatedly, e.g., if the servomotor will move in the machine, use flexible cables.

If you do not use flexible cables, the cables may break.

Before you connect the wires, make sure that there are no mistakes in the wiring.

Always use the connectors specified by Yaskawa and insert them correctly.

When you connect a connector, check it to make sure there is no foreign matter, such as metal clippings, inside.

The connectors are made of resin. To prevent damage, do not apply any strong impact.

Perform all wiring so that stress is not applied to the connectors.

The connectors may break if they are subjected to stress.

NOTICE

Use the cables specified by Yaskawa. If you use any other cables, confirm the rated current and application environment of your model and use the wiring materials specified by Yaskawa or equivalent materials. Refer to the peripheral selection manual for your SERVOPACK for Yaskawa-specified cables and wiring materials.

Be careful not to drop or lose screws when connecting and disconnecting the connectors.

When connecting and disconnecting a connector, make sure that the cable connector and the servomotor connector are parallel to each other.

If you connect or disconnect a connector at an angle or by twisting the connector, you may break the housing and bend or deform pins, causing a failure.

Securely tighten connector screws and lock mechanisms.

Insufficient tightening may result in connectors falling off during operation.

NOTICE

Do not bundle power lines (e.g., the main circuit cable) and low-current lines (e.g., the I/O signal cables or encoder cables) together or run them through the same duct. If you do not place power lines and low-current lines in separate ducts, separate them by at least 30 cm.

There is a risk that the product may not function correctly due to the effects of noise on low-current lines.

Before using a motor with a cooling fan, check the fan rotation direction after wiring the cooling fan.

Always connect the servomotor main circuit cable before you connect the encoder cable.

If you connect the encoder cable first, the encoder may be damaged due to the difference in electrical potential from the FG.

Never touch the connector pins on the servomotor directly with your hands.

Particularly the encoder may be damaged by static electricity.

For the following servomotor models, use the screws to secure the connectors to the servomotor. Make sure that they are securely attached.

- SGMXJ servomotors
- SGMXA servomotors (Up to 1.0 kW)
- SGMXP servomotors

If they are not securely attached, the protective structure specifications may not be satisfied.

Do not remove rubber packings or O-rings. Also, make sure that rubber packings and O-rings do not come off.

If the rubber packings or O-rings are not securely attached, the protective structure specifications may not be satisfied.

Do not connect magnetic contactors, reactors, or other devices on the cables that connect the SERVOPACK and servomotor.

Failure to observe this caution may result in malfunction or damage.

(6) Operation Precautions

MARNING

Before starting operation with a machine connected, configure the settings of the switches and parameters to match the machine. Always check the settings of the switches and parameters in the product manual for your SERVOPACK.

If operation is performed without configuring the settings, there is a risk of equipment damage and death or serious injury due to unexpected machine operation.

Do not significantly change the settings of the parameters.

There is a risk of equipment damage and death or serious injury due to unexpected machine operation.

Install safety equipment (e.g., limit switches or stoppers) in an appropriate manner at the ends of the moving parts of the machine to prevent unexpected accidents.

If safety equipment is not installed in an appropriate manner, there is a risk of equipment damage and death or serious injury due to unexpected machine operation.

For trial operation, securely mount the servomotor and disconnect it from the machine.

There is a risk of equipment damage and death or serious injury due to unexpected machine operation.

Forced stops for overtravel is disabled when the Jog, Origin Search, or Easy FFT utility function is executed. Ensure that appropriate safety measures are in place around moving parts.

There is a risk of equipment damage and death or serious injury due to unexpected machine operation.

WARNING

When an alarm occurs, the servomotor will coast to a stop or stop with the dynamic brake according to the SERVOPACK option and settings. The coasting distance will change with the moment of inertia of the load and the external dynamic brake resistance. Check the coasting distance during trial operation and implement suitable safety measures on the machine.

Refer to the product manual for your SERVOPACK for the specifications of SERVOPACK options.

There is a risk of equipment damage and death or serious injury due to unexpected machine operation.

Do not enter the machine's range of motion during operation.

There is a risk of death or serious injury from entrapment or the machine making contact with your body due to unexpected equipment or system operation.

Do not touch the moving parts of the servomotor or machine during operation.

There is a risk of death or serious injury from entrapment or the machine making contact with your body due to unexpected equipment or system operation.

When overtravel occurs, the power to the motor is turned OFF and the brake is released. If you use the servomotor to drive a vertical load, set the servomotor to enter a zero-clamped state after the servomotor stops. Also, install safety devices (such as an external brake or counterweight) to prevent the moving parts of the machine from falling.

There is a risk of equipment damage and death or serious injury due to the moving parts of the machine falling.

A CAUTION

Do not use the holding brake in the servomotor as a brake to stop the servomotor. The holding brake is used for holding the motor shaft in place, and it is not a stopping device for ensuring machine safety. Install a stopping device for ensuring safety on the machine side.

There is a risk of brake wear and failure, machine damage, or injury.

Before running the servomotor, energize the holding brake, and then release the holding brake.

For details, refer to the timechart in the manual.

Check that the holding brake operates correctly when conducting trial operation.

Always turn OFF the servo before you turn OFF the power supply. If you turn OFF the main circuit power or control power during operation before you turn OFF the servo, the servomotor will stop as follows:

- If you turn OFF the main circuit power during operation without turning OFF the servo, the servomotor will stop abruptly with the dynamic brake.
- If you turn OFF the control power without turning OFF the servo, the stopping method that is used by the servomotor depends on the model of the SERVOPACK. For details, refer to the manual for the SERVOPACK.

NOTICE

Be sure to measure the vibrations while the servomotor is installed in the machine, and check that the vibrations are within the tolerances.

If the vibrations are large, the servomotor could fail prematurely and bolts could be loosened.

When you adjust the gain during system commissioning, use a measuring instrument to monitor the torque waveform and speed waveform and confirm that there is no vibration.

If a high gain causes vibration, the servomotor will be damaged quickly.

An alarm or warning may occur if communications are performed with the host controller while the SigmaWin+ or digital operator is operating.

If an alarm or warning occurs, it may interrupt the current process and stop the system.

(7) Maintenance and Inspection Precautions

A DANGER

Do not change any wiring while power is being supplied.

There is a risk of equipment damage or product failure. There is also a risk of fire or electric shock that causes death or serious injury. Additionally, there is a risk of death or serious injury due to unexpected machine operation.

Wait for at least 20 minutes (or 100 minutes when using DC power supply input) after turning OFF the power and then make sure that the CHARGE indicator is not lit before starting wiring or inspection work. Do not touch the main circuit terminals while the CHARGE indicator is lit because high voltage may still remain in the SERVOPACK even after turning OFF the power.

There is a risk of electric shock that causes death or serious injury.

MARNING

Wiring and inspections must be performed only by qualified engineers.

If work is performed by a worker who is not a qualified engineer, there is a risk of fire or electric shock that causes death or serious injury.

Before replacing the servomotor with holding brake, secure the machine side in place.

There is a risk of device damage or injury due to falling of a device.

⚠ CAUTION

Replace the battery by following the correct procedure.

If the battery is removed while the control power of the SERVOPACK is OFF (including when the encoder cable is removed), the data stored in the absolute encoder will be lost, and the position may be shifted.

(8) Troubleshooting Precautions

MARNING

The product may suddenly start to operate when the power supply is recovered after a momentary power interruption. Design the machine to ensure human safety when operation restarts.

There is a risk of equipment damage and death or serious injury due to unexpected machine operation.

When an alarm occurs, remove the cause of the alarm and ensure safety. Then reset the alarm or turn the power OFF and ON again to restart operation.

There is a risk of equipment damage or product failure. There is also a risk of injury, fire, or electric shock that causes death or serious injury.

If the Servo ON signal is input to the SERVOPACK and an alarm is reset, the servomotor may suddenly restart operation. Make sure to confirm that the servo is OFF and ensure safety before you reset an alarm.

There is a risk of equipment damage and death or serious injury due to unexpected machine operation.

The holding brake alone on a servomotor will not ensure safety if there is the possibility that an external force (including gravity) may move the current position and create a hazardous situation when power is interrupted or an error occurs. To ensure safety, make sure to install an external braking mechanism.

There is a risk of equipment damage and death or serious injury due to unexpected machine operation.

(9) Disposal Precautions

 Correctly discard the product as stipulated by regional, local, and municipal laws and regulations. Be sure to include these contents in all labelling and warning notifications on the final product as necessary.



(10) General Precautions

- Figures provided in this manual are typical examples or conceptual representations. There may be differences between them and actual
 wiring, circuits, and products.
- The products shown in illustrations in this manual are sometimes shown with their covers or protective guards removed to illustrate
 detail. Always replace all covers and protective guards before you use the product.
- If you need a new copy of this manual because it has been lost or damaged, contact your nearest Yaskawa representative or one of the
 offices listed on the back of this manual.
- This manual is subject to change without notice for product improvements, specifications changes, and improvements to the manual itself. We will update the manual number of the manual and issue revisions when changes are made.
- Any and all quality guarantees provided by Yaskawa are null and void if the customer modifies the product in any way. Yaskawa disavows any responsibility for damages or losses that are caused by modified products.

i.6 Warranty

i.6.1 Details of Warranty

(1) Warranty Period

The warranty period for a product that was purchased (hereinafter called the "delivered product") is one year from the time of delivery to the location specified by the customer or 18 months from the time of shipment from the Yaskawa factory, whichever is sooner.

(2) Warranty Scope

Yaskawa shall replace or repair a defective product free of charge if a defect attributable to Yaskawa occurs during the above warranty period. This warranty does not cover defects caused by the delivered product reaching the end of its service life and replacement of parts that require replacement or that have a limited service life.

This warranty does not cover failures that result from any of the following causes.

- Improper handling, abuse, or use in unsuitable conditions or in environments not described in product catalogs or manuals, or in any separately agreed-upon specifications
- · Causes not attributable to the delivered product itself
- · Modifications or repairs not performed by Yaskawa
- Use of the delivered product in a manner in which it was not originally intended
- Causes that were not foreseeable with the scientific and technological understanding at the time of shipment from Yaskawa
- Events for which Yaskawa is not responsible, such as natural or human-made disasters

i.6.2 Limitations of Liability

- Yaskawa shall in no event be responsible for any damage or loss of opportunity to the customer that arises due to failure of the delivered product.
- Yaskawa shall not be responsible for any programs (including parameter settings) or the results of program execution of the programs provided by the user or by a third party for use with programmable Yaskawa products.
- The information described in product catalogs or manuals is provided for the purpose of the customer purchasing the appropriate product for the intended application. The use thereof does not guarantee that there are no infringements of intellectual property rights or other proprietary rights of Yaskawa or third parties, nor does it construe a license.
- Yaskawa shall not be responsible for any damage arising from infringements of intellectual property rights or other proprietary rights of third parties as a result of using the information described in catalogs or manuals.

i.6.3 Suitability for Use

- It is the customer's responsibility to confirm conformity with any standards, codes, or regulations that apply if the Yaskawa product is used in combination with any other products.
- The customer must confirm that the Yaskawa product is suitable for the systems, machines, and equipment used by the customer.
- Consult with Yaskawa to determine whether use in the following applications is acceptable. If use in the application is acceptable, use the product with extra allowance in ratings and specifications, and provide safety measures to minimize hazards in the event of failure.
 - Outdoor use, use involving potential chemical contamination or electrical interference, or use in conditions or environments not described in product catalogs or manuals

- Nuclear energy control systems, combustion systems, railroad systems, aviation systems, vehicle systems, medical equipment, amusement machines, and installations subject to separate industry or government regulations
- Systems, machines, and equipment that may present a risk to life or property
- Systems that require a high degree of reliability, such as systems that supply gas, water, or electricity, or systems that operate continuously 24 hours a day
- Other systems that require a similar high degree of safety
- Never use the product for an application involving serious risk to life or property without first ensuring that the system is designed to secure the required level of safety with risk warnings and redundancy, and that the Yaskawa product is properly rated and installed.
- The circuit examples and other application examples described in product catalogs and manuals are for reference. Check the functionality and safety of the actual devices and equipment to be used before using the product.
- Read and understand all use prohibitions and precautions, and operate the Yaskawa product correctly to prevent accidental harm to third parties.

i.6.4 Specifications Change

The names, specifications, appearance, and accessories of products in product catalogs and manuals may be changed at any time based on improvements and other reasons. The next editions of the revised catalogs or manuals will be published with updated code numbers. Consult with your Yaskawa representative to confirm the actual specifications before purchasing a product.

i.7 Compliance with UL Standards, EU Directives, and Other Safety Standards

Certification marks for the standards for which the product has been certified by certification bodies are shown on nameplate. Products that do not have the marks are not certified for the standards.

i.7.1 North American Safety Standards (UL)



Product	Model	North American Safety Standards (UL File No.)
Rotary Servomotor	SGMXASGMXJSGMXPSGMXG	UL 1004-1 UL 1004-6 (E165827)

i.7.2 EU Directives



Product	Model	EU Directives	Harmonized Standards
Rotary Servomotor	• SGMXP	EMC Directive 2014/30/EU	EN 55011 group 1, class A EN 61000-6-2 EN 61000-6-4 EN 61800-3 (Category C2, Second environment)
		Low Voltage Directive 2014/35/EU	EN 60034-1 EN 60034-5
		RoHS Directive 2011/65/EU (EU)2015/863	EN IEC 63000
		WEEE Directive 2012/19/EU	-

Note:

- We declared the CE Marking based on the harmonized standards in the above table. These products complied with the corresponding IEC standards. For the edition of each standard, refer to declaration of conformity.
- These products are for industrial use. In home environments, these products may cause electromagnetic interference and additional noise reduction measures may be necessary.
- The 26-bit compact batteryless absolute encoder (model SGMX - H) is equipped with the PSB401010H all-solid-state battery, and this battery complies with the EU Battery Regulation (EU) 2023/1542.

i.7.3 Safety Standards

Product	Model	Designated Standards
Rotary Servomotor	• SGMXJ • SGMXA	IEC 61800-5-3:2021
•	• SGMXG	

Note:

The designated standard is a standard for encoders with functional safety that are built into the rotary servomotors.

i.7.4 UK Conformity Assessed (UKCA)



Product	Model	UK Regulations	Designated Standards
Rotary Servomotor • SC	SGMXJ SGMXA SGMXP	Electromagnetic Compatibility Regulations S.I. 2016/1091 Electrical Equipment (Safety)	EN 55011 group 1, class A EN 61000-6-2 EN 61000-6-4 EN 61800-3 (Category C2, Second environment) EN 600034-1
	• SGMXG	Regulations S.I. 2016/1101	EN 600034-5
		RoHS Directive S.I. 2012/3032	EN IEC 63000

Note:

- We declared the UKCA marking based on the designated standards in the above table.
- These products are for industrial use. In home environments, these products may cause electromagnetic interference and additional noise reduction measures may be necessary.

Basic Information on Servomotors


This chapter provides basic information on rotary servomotors, including servomotor part names and combinations with SERVOPACKs.

Servo	motor Part Names	36
1.1.1	SGMXJ servomotors, SGMXA servomotors (Up to 1.0 kW), SGMXP servomotors (Up to 400 W)	36
1.1.2	SGMXG Servomotors (Up to 450 W)	36
1.1.3	SGMXA (1.5 kW to 5.0 kW) and SGMXG (600 W or more) Servomotors	36
1.1.4	SGMXA Servomotors (7.0 kW)	37
1.1.5	SGMXP Servomotors (200 W, 400 W) (400 V Specification)	37
1.1.6	SGMXP Servomotors (750 W, 1.5kW)	37
Interp	reting the Nameplate	38
Outlir	ne of Model Designations	39
1.3.1	Servomotor	39
1.3.2	SERVOPACKs	40
Comb	inations of Servomotors and SERVOPACKs	41
1.4.1	Servomotors with 200 V Specification	41
1.4.2	Servomotors with 400 V Specification	43
26-Bit	Compact Batteryless Absolute Encoder	44
1.5.1	Encoder Internal Battery Level	
	1.1.1 1.1.2 1.1.3 1.1.4 1.1.5 1.1.6 Interp Outlin 1.3.1 1.3.2 Comb 1.4.1 1.4.2	servomotors (Up to 400 W) 1.1.2 SGMXG Servomotors (Up to 450 W) 1.1.3 SGMXA (1.5 kW to 5.0 kW) and SGMXG (600 W or more) Servomotors 1.1.4 SGMXA Servomotors (7.0 kW) 1.1.5 SGMXP Servomotors (200 W, 400 W) (400 V Specification) 1.1.6 SGMXP Servomotors (750 W, 1.5kW) Interpreting the Nameplate Outline of Model Designations 1.3.1 Servomotor 1.3.2 SERVOPACKS Combinations of Servomotors and SERVOPACKS 1.4.1 Servomotors with 200 V Specification. 1.4.2 Servomotors with 400 V Specification. 26-Bit Compact Batteryless Absolute Encoder.


1.1 Servomotor Part Names

1.1.1 SGMXJ servomotors, SGMXA servomotors (Up to 1.0 kW), SGMXP servomotors (Up to 400 W)

· Standard Servomotors

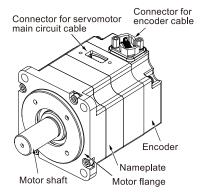


· Servomotors with Brakes

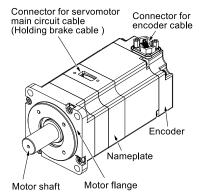


1.1.2 SGMXG Servomotors (Up to 450 W)

· Standard Servomotors

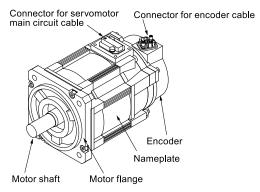


· Servomotors with Brakes

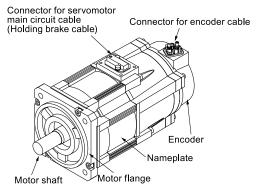


1.1.3 SGMXA (1.5 kW to 5.0 kW) and SGMXG (600 W or more) Servomotors

· Standard Servomotors

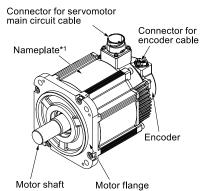


· Servomotors with Brakes

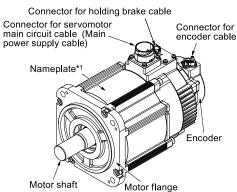


*1 The position of the nameplate depends on the model and motor output.

1.1.4 SGMXA Servomotors (7.0 kW)

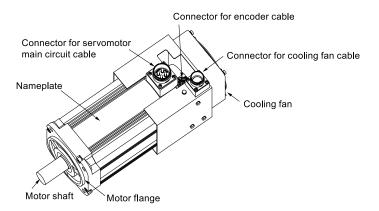


1.1.5 SGMXP Servomotors (200 W, 400 W) (400 V Specification)


· Standard Servomotors

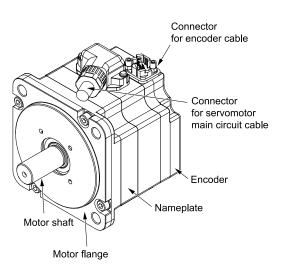


· Servomotor with Brakes

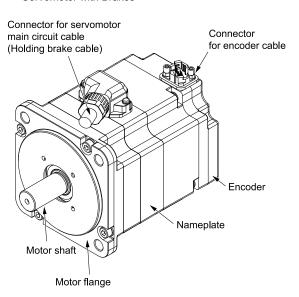

1.1.6 SGMXP Servomotors (750 W, 1.5kW)

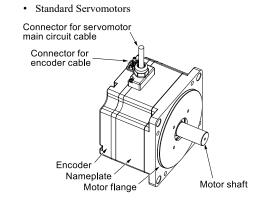


· Servomotors with Brakes

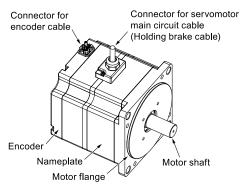

1.2 Interpreting the Nameplate

The nameplate is printed on the servomotor.

The layout of the nameplate depends somewhat on the model of the servomotor.

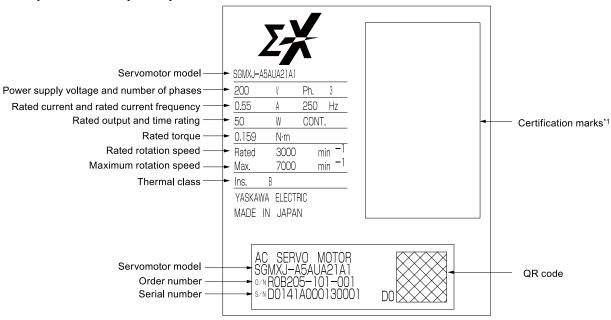

^{*1} Certification marks for the standards for which the product has been certified by certification bodies are shown on nameplate.

Destination

Standard

Standard

Compatible

Ancillary Specification

Specification

(200 VAC: Σ -7 compatible, 400 VAC: Σ -V compatible)

(encoder with functional safety)

9th digit

Code

1.3 Outline of Model Designations

1.3.1 Servomotor

This section outlines the model numbers of Σ -X-series servomotors. For details, refer to the chapter for your type of servomotor.

SGM□□ - 01 A U A 2 1 A 1

Series (st+2nd digits 3rd digit) 4th digit 5th digit 6th digit 7th digit 8th digit 9th digit

Series Σ-X-Series Servomotors

Code	Specification	Reference
SGMXJ	Medium inertia, high speed	Chapter 3
SGMXA	Low inertia, high speed	Chapter 4
SGMXP	Medium inertia, flat	Chapter 5
SGMXG	Medium inertia, low speed, high torque	Chapter 6

1st+2nd digits Rated Output

3rd digit Power Supply Voltage

Code	Specification
Α	AC 200 V
D	AC 400 V

4th digit Serial Encoder Specification 8th digit

- 26-bit compact batteryless absolute encoder*1
- 26-bit absolute encoder
- · 26-bit batteryless absolute encoder



6th digit Shaft End Specification

- Straight without key (excluding SGMXG-30 to -1E)
- Straight without key, with tap (excluding SGMXG-30 to -1E)
- Straight with key and tap
- · With two flat seats

7th digit Option Specification

- With holding brake (24 VDC)
- · With oil seal
- *1 This encoder is equipped with an internal rechargeable battery, and it holds multi-turn position data without using an external battery. Refer to the following section for details on the battery.

■ 1.5 26-Bit Compact Batteryless Absolute Encoder on page 44

- *2 The following models are not supported.
 - Serial encoder specification: 26-bit compact batteryless absolute encoder
 - Shaft end: With two flat seats

Contact your Yaskawa representative beforehand if you require a model with support for functional safety.



Servomotors with Functional Safety

Servomotors with functional safety only operate in accordance with safety standard IEC 61800-5-3 if used in combination with an advanced safety module (ASM-X), a SERVOPACK, and the specified cables. Refer to the advanced safety module manual for details on the specifications of the advanced safety module.

- Ω Σ-X-Series Advanced Safety Module with Safety over EtherCAT (FSoE) Communications References Product Manual (Manual No.: SIEP C710812 25)
- Σ-X-Series Advanced Safety Module Digital I/O Product Manual (Manual No.: SIEP C710812 26)

Only cables, connectors, and wiring materials described in the Peripheral Device Selection Manual can be used. Using components with a model number not described in the manual will result in non-compliance with safety standards, even if the specifications are the same.



Standard specification:

Only cables that support Σ -LINK II can be used.

Term

Σ -7 compatible specification :

Cables for the Σ -7-series servomotors can be used.

Σ -V Compatible Specification :

Cables for the Σ -V-series servomotors can be used.

1.3.2 SERVOPACKs

This section outlines the model numbers of Σ -X-series SERVOPACKs. For details, refer to the manual for your SERVOPACK.

- 💢 Σ-X-Series Σ-XS SERVOPACK with MECHATROLINK-4/III Communications References Product Manual (Manual No.: SIEP C710812 01)
- C-X-Series Σ-XS SERVOPACK with EtherCAT Communications References Product Manual (Manual No.: SIEP C710812 02)
- C-X-Series Σ-XS SERVOPACK with Analog Voltage/Pulse Train References Product Manual (Manual No.: SIEP C710812 03)
- Σ-X-Series Σ-XW SERVOPACK with MECHATROLINK-4/III Communications References Product Manual (Manual No.: SIEP C710812 04)
- Σ-X-Series Σ-XW SERVOPACK with EtherCAT Communications References Product Manual (Manual No.: SIEP C710812 05)

SGDXD - R70 A 00 A 0001

Series 1st+2nd+3rd digits 5th+6th digits 7th digit 8th+9th+10th+11th digits

Series Σ -X-Series SERVOPACKs

Code	Specification	
SGDXS	Single-axis SERVOPACKs	
SGDXW	Two-axis SERVOPACKs	

1st+2nd+3rd digits Maximum Applicable Motor Capacity

0.05 kW to 15 kW

4th digit Power Supply Voltage

Code	Specification	
Α	200 VAC	
D	400 VAC	

5th+6th digits Interface

- Analog voltage/pulse train reference
- MECHATROLINK-4/-III communications reference
- EtherCAT communications reference

8th+9th+10th+11th digits Options

- Rack-mounted installation
- Varnished

1.4 Combinations of Servomotors and SERVOPACKs

1.4.1 Servomotors with 200 V Specification

		Capacit-	SERVOPACK Model */			
Rotary Servomotor Mo	del	у	SGDXS-	SGDXW-	SGDXT-	
	SGMXJ-A5A	50 W	R70A	1R6A *2, 2R8A *2	1R6A *2, 2R8A *2	
	SGMXJ-01A	100 W	R90A	1R6A *2, 2R8A *2	1R6A *2, 2R8A *2	
	SGMXJ-C2A	150 W	1R6A	1R6A, 2R8A *2	1R6A, 2R8A *2	
(, , ,	SGMXJ-02A	200 W	1R6A	1R6A, 2R8A *2	1R6A, 2R8A *2	
Speed) 3000 min ⁻¹	SGMXJ-04A	400 W	2R8A	2R8A, 5R5A *2, 7R6A *2	2R8A	
	SGMXJ-06A	600 W	5R5A	5R5A, 7R6A	-	
	SGMXJ-08A	750 W	5R5A	5R5A, 7R6A	-	
	SGMXA-A5A	50 W	R70A	1R6A *2, 2R8A *2	1R6A *2, 2R8A *2	
	SGMXA-01A	100 W	R90A	1R6A *2, 2R8A *2	1R6A *2, 2R8A *2	
	SGMXA-C2A	150 W	1R6A	1R6A, 2R8A *2	1R6A, 2R8A *2	
	SGMXA-02A	200 W	1R6A	1R6A, 2R8A *2	1R6A, 2R8A *2	
	SGMXA-04A	400 W	2R8A	2R8A, 5R5A *2, 7R6A *2	2R8A	
	SGMXA-06A	600 W	5R5A	5R5A, 7R6A	-	
SGMXA Servomotors (Low Inertia, High	SGMXA-08A	750 W	5R5A	5R5A, 7R6A	-	
Speed) 3000 min ⁻¹	SGMXA-10A	1.0 kW	120A	-	-	
peed) 3000 min ⁻¹	SGMXA-15A	1.5 kW	120A	-	-	
	SGMXA-20A	2.0 kW	180A	_	_	
	SGMXA-25A	2.5 kW	200A	-	-	
	SGMXA-30A	3.0 kW	200A	_	_	
	SGMXA-40A	4.0 kW	330A	_	_	
	SGMXA-50A	5.0 kW	330A	-	-	
	SGMXA-70A	7.0 kW	550A	_	_	
	SGMXP-01A	100 W	R90A	1R6A *2, 2R8A *2	1R6A *2, 2R8A *2	
	SGMXP-02A	200 W	2R8A	2R8A, 5R5A *2, 7R6A *2	2R8A	
SGMXP Servomotors (Medium Inertia, Flat) 3000 min ⁻¹	SGMXP-04A	400 W	2R8A	2R8A, 5R5A *2, 7R6A *2	2R8A	
	SGMXP-08A	750 W	5R5A	5R5A, 7R6A	-	
	SGMXP-15A	1.5 kW	120A	-	-	

Continued on next page.

Continued from previous page.

		Capacit-	SERVOPACK Model */		
Rotary Servomotor Mo	del	у	SGDXS-	SGDXW-	SGDXT-
	SGMXG-03A□A	300 W	3R8A	5R5A *2, 7R6A *2	_
	SGMXG-05A□A	450 W	3R8A	5R5A *2, 7R6A *2	-
	SGMXG-09A□A	850 W	7R6A (120A)	7R6A	-
	SGMXG-13A□A	1.3 kW	120A (180A)	-	-
SGMXG Servomotors (Medium Inertia, Low	SGMXG-20A□A	1.8 kW	180A (200A)	ľ	ľ
Speed, Large Torque) 1500 min ⁻¹	SGMXG-30A□A	2.9 kW *3	330A (470A)	-	-
	SGMXG-44A□A	4.4 kW	330A (550A)	-	-
	SGMXG-55A□A	5.5 kW	470A	-	-
	SGMXG-75A□A	7.5 kW	550A	-	1
	SGMXG-1AA□A	11 kW	590A	-	-
	SGMXG-1EA□A	15 kW	780A	-	_
	SGMXG-03A□B	300 W	3R8A	5R5A *2	_
	SGMXG-06A□B	600 W	5R5A	5R5A	_
	SGMXG-09A□B	900 W	7R6A	7R6A	-
SGMXG Servomotors (Medium Inertia, Low	SGMXG-12A□B	1.2 kW	120A	_	
Speed, Large Torque) 1000 min ⁻¹	SGMXG-20A□B	2.0 kW	180A (200A)	_	_
	SGMXG-30A□B	3.0 kW	200A		
	SGMXG-40A□B	4.0 kW	330A	-	
	SGMXG-55A□B	5.5 kW	470A	_	_

^{*1} To increase the instantaneous maximum torque, use the SERVOPACK model in parentheses ().

^{*2} If you use a servomotor together with a Σ-XW SERVOPACK, the control gain may not increase as much as with a Σ-XS SERVOPACK and other performances may be lower than those achieved with a Σ-XS SERVOPACK.

^{*3} The rated output is 2.4 kW if you use the SGDXS-200A.

1.4.2 Servomotors with 400 V Specification

Rotary Servomotor Model		Capacity	SERVOPACK Model
	actor to	1.51 ***	SGDXS-
	SGMXA-15D	1.5 kW	5R4D
	SGMXA-20D	2.0 kW	8R4D
SGMXA Servomotors (Low Inertia, High Speed) 3000 min-1	SGMXA-25D	2.5 kW	120D
SOME TO SELECTION OF THE SELECTION OF TH	SGMXA-30D	3.0 kW	120D
	SGMXA-40D	4.0 kW	170D
	SGMXA-50D	5.0 kW	170D
	SGMXP-02D	200 W	1R9D
	SGMXP-04D	400 W	1R9D
SGMXP Servomotors (Medium Inertia, Flat) 3000 min ⁻¹	SGMXP-08D	750 W	3R5D
	SGMXP-15D	1.5 kW	5R4D
	SGMXG-05D	450 W	1R9D
	SGMXG-09D	850 W	3R5D (5R4D)
	SGMXG-13D	1.3 kW	5R4D (8R4D)
	SGMXG-20D	1.8 kW	8R4D (120D)
SGMXG Servomotors (Medium Inertia, Low Speed, Large Torque) 1500 min-1	SGMXG-30D	2.9 kW	120D (210D)
	SGMXG-44D	4.4 kW	170D (260D)
	SGMXG-55D	5.5 kW	210D (370D)
	SGMXG-75D	7.5 kW	260D
	SGMXG-1AD	11 kW	280D
	SGMXG-1ED	15 kW	370D

^{*1} To increase the instantaneous maximum torque, use the SERVOPACK model in parentheses ().

1.5 26-Bit Compact Batteryless Absolute Encoder

The 26-bit compact batteryless absolute encoder is model SGMX□-□□□H.

The encoder is equipped with an internal all-solid-state battery, and this battery is automatically charged when the control power is turned ON.

Information Battery manufacturer: Maxell, Ltd., part no.: PSB401010H

Refer to the following section for conformity to the EU Battery Regulation.

■ i.7.2 EU Directives on page 32

1.5.1 **Encoder Internal Battery Level**

The status of the encoder changes according to the level of the battery inside the encoder.

If the battery level falls below 20%, alarms and warnings occur prompting you to charge the battery, but the multi-turn position is retained.

If the battery level drops to 0%, the multi-turn position will be lost, so make sure to charge the battery before

Refer to the manual for the SERVOPACK for checking the battery level and handling the alarms and warnings. The following table shows the approximate charging times and multi-turn position retention times when the power is OFF.

Encoder Internal Battery Level		0%	10%	20%	30% to 90%	100%
Status		Alarm or warning occurs		Charging		Charging complete
Alarm No. Warning No.		 A.810 (Encoder Backup Alarm) A.830 (Encoder Battery Alarm) A.930 (Absolute Encoder Battery Error) 	A.830 (Encoder Battery Alarm) A.930 (Absolute Encoder Battery Error)	-		
Charging Time from 0%		-		15 minutes	15 minutes to 10 hours	10 hours
Multi-Turn Position Retention Time When	Standard Value	_		7 months	Proportional to encoder internal bat- tery level	36 months
Power is OFF (When Axis Is Stopped)	Minimum Value	_		1 month	Proportional to encoder internal bat- tery level	5 months

Note:

The values will depend on the number of days the encoder is used and the environment in which it is used.

Capacity Selection

This chapter describes calculation methods to use when selecting servomotor capacities.


2.1	Selec	ting the Servomotor Capacity	46
	2.1.1	Capacity Selection Example for a Rotary Servomotor (Speed Control)	46
	2.1.2	Capacity Selection Example for a Rotary Servomotor (Position Control)	48

2.1 Selecting the Servomotor Capacity

Contact your Yaskawa representative for information on the servomotor capacity selection software. Refer to the following selection examples to select servomotor capacities with manual calculations.


2.1.1 Capacity Selection Example for a Rotary Servomotor (Speed Control)

1. Machine Specifications

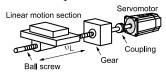

Item	Symbol	Value
Load Speed	υ_L	15 m/min
Linear Motion Section Mass	m	250 kg
Ball Screw Length	ℓB	1.0 m
Ball Screw Diameter	d _B	0.02 m
Ball Screw Lead	P _B	0.01 m
Ball Screw Material Density	ρ	$7.87\times10^3~kg/m^3$
Gear Ratio	R	2 (gear ratio: 1/2)
External Force on Linear Motion Section	F	0 N
Gear and Coupling Moment of Inertia	J _G	$0.40 \times 10^{-4} \text{ kg} \cdot \text{m}^2$
Number of Feeding Operations	n	40 rotations/min
Feeding Distance	ℓ	0.275 m
Feeding Time	tm	1.2 s max.
Friction Coefficient	μ	0.2
Mechanical Efficiency	η	0.9 (90%)

2. Operation Pattern

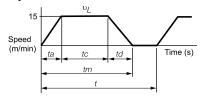

$$t = \frac{60}{n} = \frac{60}{40} = 1.5 \text{ (s)}$$

If ta = td,

$$ta = tm - \frac{60 \,\ell}{v_L} = 1.2 - \frac{60 \times 0.275}{15} = 1.2 - 1.1 = 0.1$$
 (s)
 $tc = 1.2 - 0.1 \times 2 = 1.0$ (s)

- 3. Rotation Speed
 - · Load Shaft Speed

$$n_L = \frac{v_L}{P_B} = \frac{15}{0.01} = 1500 \text{ (min}^{-1}\text{)}$$

- Motor Shaft Speed $n_M = n_L \cdot R = 1500 \times 2 = 3000 \text{ (min}^{-1})$
- 4 Load Torque

$$T_L = \frac{(9.8 \cdot \mu \cdot m + F) \cdot P_B}{2\pi R \cdot \eta} = \frac{(9.8 \times 0.2 \times 250 + 0) \times 0.01}{2\pi \times 2 \times 0.9} = 0.43 \text{ (N·m)}$$

- 5. Load Moment of Inertia
 - Linear Motion Section

$$J_{L1} = m \left(\frac{P_B}{2\pi R}\right)^2 = 250 \times \left(\frac{0.01}{2\pi \times 2}\right)^2 = 1.58 \times 10^{-4} \text{ (kg·m}^2\text{)}$$

· Ball Screw

$$J_B = \frac{\pi}{32} \rho \cdot \ell_B \cdot d_B^4 \cdot \frac{1}{R^2} = \frac{\pi}{32} \times 7.87 \times 10^3 \times 1.0 \times (0.02)^4 \cdot \frac{1}{2^2} = 0.31 \times 10^{-4} \text{ (kg·m²)}$$

Coupling

$$J_G = 0.40 \times 10^{-4} (\text{kg} \cdot \text{m}^2)$$

• Load Moment of Inertia at Motor Shaft

$$J_L = J_{L1} + J_B + J_G = (1.58 + 0.31 + 0.40) \times 10^{-4} = 2.29 \times 10^{-4} (\text{kg} \cdot \text{m}^2)$$

6. Load Moving Power

$$P_O = \frac{2\pi n_M \cdot T_L}{60} = \frac{2\pi \times 3000 \times 0.43}{60} = 135 \text{ (W)}$$

7. Load Acceleration Power

$$Pa = \left(\frac{2\pi}{60} n_{M}\right)^{2} \frac{J_{L}}{ta} = \left(\frac{2\pi}{60} \times 3000\right)^{2} \times \frac{2.29 \times 10^{-4}}{0.1} = 226 \text{ (W)}$$

- 8. Servomotor Provisional Selection
 - a. Selection Conditions
 - $T_L \leq$ Motor rated torque
 - $\frac{(Po + Pa)}{2}$ < Provisionally selected servomotor rated output < (Po + Pa)
 - $n_M \le \text{Motor rated speed}$
 - $J_L \le$ Allowable load moment of inertia

The following servomotor meets the selection conditions.

- SGMXJ-02A servomotor
- b. Specifications of the Provisionally Selected Servomotor

Item	Value
Rated Output	200 (W)
Rated Rotation Speed	3000 (min ⁻¹)
Rated Torque	0.637 (N·m)
Instantaneous Maximum Torque	2.23 (N·m)
Rotor Moment of Inertia	0.263 × 10 ⁻⁴ (kg·m²)
Allowable Load Moment of Inertia	$0.263 \times 10^{-4} \times 15 = 3.94 \times 10^{-4} \text{ (kg·m}^2\text{)}$

- 9. Verification of the Provisionally Selected Servomotor
 - Verification of Required Acceleration Torque

$$T_P = \frac{2\pi n_M \left(J_M + J_L\right)}{60ta} + T_L = \frac{2\pi \times 3000 \times (0.263 + 2.29) \times 10^{-4}}{60 \times 0.1} + 0.43$$

- ≈ 1.23 (N·m) < Maximum instantaneous torque...Satisfactory
- Verification of Required Deceleration Torque

$$T_{S} = \frac{2\pi n_{M} (J_{M} + J_{L})}{60td} - T_{L} = \frac{2\pi \times 3000 \times (0.263 + 2.29) \times 10^{-4}}{60 \times 0.1} - 0.43$$


- ≈ 0.37 (N·m) < Maximum instantaneous torque...Satisfactory
- Verification of Effective Torque Value

Trms =
$$\int \frac{T\rho^2 \cdot ta + T_L^2 \cdot tc + Ts^2 \cdot td}{t} = \int \frac{(1.23)^2 \times 0.1 + (0.43)^2 \times 1.0 + (0.37)^2 \times 0.1}{1.5}$$

- ≈ 0.483 (N·m) < Rated torque...Satisfactory
- 10. Selection Result


It has been verified that the provisionally selected servomotor is applicable.

The torque diagram is shown below.

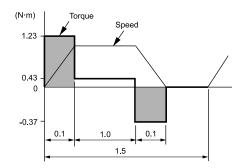


2.1.2 Capacity Selection Example for a Rotary Servomotor (Position Control)

1. Machine Specifications

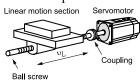

Item	Symbol	Value
Load Speed	υμ	15 m/min
Linear Motion Section Mass	m	80 kg
Ball Screw Length	ℓ_{B}	0.8 m
Ball Screw Diameter	d _B	0.016 m
Ball Screw Lead	P _B	0.005 m
Ball Screw Material Density	ρ	$7.87 \times 10^3 \text{ kg/m}^3$
External Force on Linear Motion Section	F	0 N
Coupling Mass	m _C	0.3 kg
Coupling Outer Diameter	d_C	0.03 m
Number of Feeding Operations	n	40 rotations/min
Feeding Distance	ℓ	0.25 m
Feeding Time	tm	1.2 s max.
Electrical Stopping Precision	δ	±0.01 mm
Friction Coefficient	μ	0.2
Mechanical Efficiency	η	0.9 (90%)

2. Speed Diagram

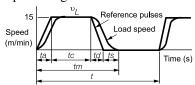

$$t = \frac{60}{n} = \frac{60}{40} = 1.5 \text{ (s)}$$

If
$$ta = td$$
, $ts = 0.1$ (s)

$$ta = tm - ts - \frac{60 \,\ell}{v_L} = 1.2 - 0.1 - \frac{60 \times 0.25}{15} = 0.1$$
 (s)

$$tc = 1.2 - 0.1 - 0.1 \times 2 = 0.9$$
 (s)

3. Rotation Speed

· Load Shaft Speed

$$n_L = \frac{v_L}{P_B} = \frac{15}{0.005} = 3000 \text{ (min}^{-1}\text{)}$$

· Motor Shaft Speed

Direct coupling gear ratio 1/R = 1/1

Therefore, $n_M = n_L \cdot R = 3000 \times 1 = 3000 \text{ (min}^{-1)}$

Load Torque

$$T_L = \frac{(9.8 \,\mu \cdot m + F) \cdot P_B}{2\pi R \cdot \eta} = \frac{(9.8 \times 0.2 \times 80 + 0) \times 0.005}{2\pi \times 1 \times 0.9} = 0.139 \text{ (N·m)}$$

- 5. Load Moment of Inertia
 - · Linear Motion Section

$$J_{L1} = m \left(\frac{P_B}{2\pi R}\right)^2 = 80 \times \left(\frac{0.005}{2\pi \times 1}\right)^2 = 0.507 \times 10^{-4} \text{ (kg·m}^2)$$

· Ball Screw

$$J_B = \frac{\pi}{32} \rho \cdot \ell_B \cdot d_B^4 = \frac{\pi}{32} \times 7.87 \times 10^3 \times 0.8 \times (0.016)^4 = 0.405 \times 10^4 \text{ (kg·m}^2)$$

• Coupling

$$JC = \frac{1}{8} m_C \cdot d_C^2 = \frac{1}{8} \times 0.3 \times (0.03)^2 = 0.338 \times 10^4 \text{ (kg·m}^2)$$

- Load Moment of Inertia at Motor Shaft $J_L = J_{L1} + J_B + J_C = 1.25 \times 10^{-4} \text{ (kg·m}^2\text{)}$
- 6. Load Moving Power

$$P_O = \frac{2\pi n_M \cdot T_L}{60} = \frac{2\pi \times 3000 \times 0.139}{60} = 43.7 \text{ (W)}$$

7. Load Acceleration Power

$$Pa = \left(\frac{2\pi}{60} n_M\right)^2 \frac{J_L}{ta} = \left(\frac{2\pi}{60} \times 3000\right)^2 \times \frac{1.25 \times 10^{-4}}{0.1} = 123.4 \text{ (W)}$$

- 8. Servomotor Provisional Selection
 - a. Selection Conditions
 - $T_L \leq$ Motor rated torque

•
$$\frac{(Po + Pa)}{2}$$
 < Provisionally selected servomotor rated output < $(Po + Pa)$

- $n_M \leq$ Motor rated speed
- $J_L \le$ Allowable load moment of inertia

The following servomotor meets the selection conditions.

- SGMXJ-01A servomotor
- b. Specifications of the Provisionally Selected Servomotor

Item	Value
Rated Output	100 (W)
Rated Rotation Speed	3000 (min ⁻¹)
Rated Torque	0.318 (N·m)
Instantaneous Maximum Torque	1.11 (N·m)
Rotor Moment of Inertia	0.0669 × 10 ⁻⁴ (kg·m²)
Allowable Load Moment of Inertia	$0.0659 \times 10^{-4} \times 35 = 2.31 \times 10^{-4} (\text{kg} \cdot \text{m}^2)$
Encoder Resolution	67108864 (pulses/rev) (26 bits)

- 9. Verification of the Provisionally Selected Servomotor
 - · Verification of Required Acceleration Torque

$$T_P = \frac{2\pi n_M \left(J_M + J_L\right)}{60ta} + T_L = \frac{2\pi \times 3000 \times (0.0659 + 1.25) \times 10^{-4}}{60 \times 0.1} + 0.139$$

- ≈ 0.552 (N·m) < Maximum instantaneous torque...Satisfactory
- · Verification of Required Deceleration Torque

$$T_S = \frac{2\pi n_M \left(J_M + J_L\right)}{60to} - T_L = \frac{2\pi \times 3000 \times (0.0659 + 1.25) \times 10^{-4}}{60 \times 0.1} - 0.139$$

- ≈ 0.274 (N·m) < Maximum instantaneous torque...Satisfactory
- Verification of Effective Torque Value

$$Trms = \sqrt{\frac{T_P^2 \cdot ta + T_L^2 \cdot tc + Ts^2 \cdot td}{t}} = \sqrt{\frac{(0.552)^2 \times 0.1 + (0.139)^2 \times 0.9 + (0.274)^2 \times 0.1}{1.5}}$$

≈ 0.192 (N·m) < Rated torque...Satisfactory

It has been verified that the provisionally selected servomotor is applicable in terms of capacity. Position control is considered next.

10. Positioning Resolution

The electrical stopping precision $\delta = \pm 0.01$ mm, so the positioning resolution $\Delta \ell = 0.01$ mm.

The ball screw lead $P_B = 0.005$ m, so the number of pulses per motor rotation is calculated using the following formula.

Number of pulses per rotation (pulses) =
$$\frac{P_B}{\Delta \ell}$$
 = $\frac{5 \text{ mm/rev}}{0.01 \text{ mm}}$ = 500 (P/rev) < Encoder resolution (67108864 (P/rev))

The number of pulses per motor rotation is less than the encoder resolution (pulses/rev), so the provisionally selected servomotor can be used.

11. Reference Pulse Frequency

The load speed ${}^{\circ}L = 15 \text{ m/min} = 1000 \times 15/60 \text{ mm/s}$ and the positioning resolution (travel distance per pulse) = 0.01 mm/pulse, so the reference pulse frequency is calculated with the following formula.

$$VS = \frac{1000 \text{ }^{10}L}{60 \times \Delta \ell} = \frac{1000 \times 15}{60 \times 0.01} = 25,000 \text{ (pps)}$$

The reference pulse frequency is less than the maximum input pulse frequency *1, so the provisionally selected servomotor can be used.

*1 Refer to the specifications in the SERVOPACK manual for the maximum input pulse frequency.

It has been verified that the provisionally selected servomotor is applicable for position control.

Specifications, Ratings, and External Dimensions of SGMXJ Servomotors

This chapter describes how to interpret the model numbers of SGMXJ servomotors and gives their specifications, ratings, and external dimensions.

3.1	Mode	l Designations	52
3.2	Speci	fications and Ratings	53
	3.2.1	Specification	53
	3.2.2	Servomotor Ratings	54
	3.2.3	Torque-Rotation Speed Characteristics	57
	3.2.4	Servomotor Overload Protection Characteristics	58
	3.2.5	Allowable Load Moment of Inertia	58
	3.2.6	Derating Rates	59
3.3	Exteri	nal Dimensions	61
	3.3.1	SGMXJ-A5 to -C2	61
	3.3.2	SGMXJ-02 to -06	64
	3.3.3	SGMXJ-08	67
	3.3.4	Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXJ-□□□W)	69

3.1 Model Designations

SGMXJ - 01 A U A 2 1 A 1

 Σ -X-Series Servomotor SGMXJ model



1st+2nd digits Rated Output

Code		Specification
A5	50 W	
01	100 W	
C2	150 W	
02	200 W	
04	400 W	
06	600 W	
08	750 W	
	A5 01 C2 02 04 06	A5 50 W 01 100 W C2 150 W 02 200 W 04 400 W 06 600 W

3rd digit Power Supply Voltage

ĺ	Code	Specification
İ	Α	200 VAC

4th digit Serial Encoder

Code	Specification
H*1	26-bit compact batteryless absolute encoder
U	26-bit absolute encoder
W	26-bit batteryless absolute encoder

5th digit Design Revision Order

6th digit Shaft End

Code	Specification
2	Straight without key
6	Straight with key and tap
В	With two flat seats

7th digit Options

Code	Specification
1	Without options
С	With holding brake (24 VDC)
E	With oil seal With holding brake (24 VDC)
S	With oil seal

8th digit Destination

Α

9th digit Ancillary Specification

Code	Specification
1	Standard
2*2	Compatible
3*3	Standard (encoder with functional safety)

- *1 This encoder is equipped with an internal rechargeable battery, and it holds multi-turn position data without using an external battery. Refer to the following section for details on the battery.
 - 1.5 26-Bit Compact Batteryless Absolute Encoder on page 44
- *2 Main circuit cables and encoder cables for the Σ -7-series SGM7J servomotors can be used.
- *3 The following models are not supported.
 - Serial encoder specification: 26-bit compact batteryless absolute encoder
 - · Shaft end: With two flat seats

Contact your Yaskawa representative beforehand if you require a model with support for functional safety.


3.2 Specifications and Ratings

3.2.1 Specification

Vol	tage	200 V										
Model	SGMXJ-	A5A 01A C2A 02A 04A 06A 08A										
Time Rating					Continuous							
Thermal Class					UL: B, CE: B							
Insulation Res	istance			500	VDC, 10 MΩ 1	min.						
Withstand Vol	tage			1,50	00 VAC for 1 mi	nute						
Excitation				P	ermanent magn	et						
Mounting					Flange-mounted	d						
Drive Method					Direct drive							
Rotation Direc	tion	,	Counterclockwis	se (CCW) for fo	rward reference	when viewed f	from the load sid	e				
Vibration Clas	s * <i>I</i>				V15							
	Surrounding Air Temperature		0°C to 40°C (With derating, usage is possible between 40°C and 60°C.) *3									
	Surrounding Air Humidity	20% to 80% relative humidity (with no condensation)										
Environmental Conditions	Installation Site	 Must be we Must facilit Must have a *3 	 Must be well-ventilated and free of dust and moisture. Must facilitate inspection and cleaning. Must have an altitude of 1000 m or less. (With derating, usage is possible between 1000 m and 2000 m.) 									
	Storage Environment	Storage tempe	Store the servomotor in the following environment if you store it with the power cable disconnected. Storage temperature: -20°C to +60°C (with no freezing) Storage humidity: 20% to 80% relative humidity (with no condensation)									
Impact Resistance *2	Impact Acceleration (at Flange)	490 m/s ²										
resistance 2	Number of Impacts	2 times										
Vibration Resistance *2	Vibration Acceleration (at Flange)	49 m/s ²										
	SGDXS-	R70A	R90A	1R6A	1R6A	2R8A	5R5A	5R5A				
Applicable SERVO- PACKs	SGDXW-	1R6A *4, 2R8A *4	1R6A *4, 2R8A *4	1R6A, 2R8A *4	1R6A, 2R8A *4	2R8A, 5R5A *4, 7R6A *4	5R5A, 7R6A	5R5A, 7R6A				
	SGDXT-	1R6A *4, 2R8A *4	1R6A *4, 2R8A *4	1R6A, 2R8A *4	1R6A, 2R8A *4	2R8A	-	-				

^{*1} A vibration class of V15 indicates a vibration amplitude of 15 μm maximum on the servomotor without a load at the rated rotation speed.

*2 The given values are for when the servomotor shaft is mounted horizontally and impact or vibration is applied in the directions shown in the following figures. The strength of the vibration that the servomotor can withstand depends on the application. Always check the vibration acceleration that is applied to the servomotor with the actual equipment.

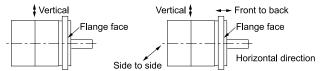

Impact Applied to the Servomotor Vibration Applied to the Servomotor

- Refer to the following section for the derating rates.
 - 3.2.6 Derating Rates on page 59
- *4 If you use this combination, performance may not be as good, e.g., the control gain may not increase, in comparison with using a Σ-XS SERVOPACK.

3.2.2 Servomotor Ratings

Voltage	200 V							
Model SGMX	J-	A5A	01A	C2A	02A	04A	06A	08A
Rated Output *1	W	50	100	150	200	400	600	750
Rated Torque *1, *2	N·m	0.159	0.318	0.477	0.637	1.27	1.91	2.39
Instantaneous Maximum Torque */	N·m	0.557	1.11	1.67	2.23	4.46	6.69	8.36
Rated Current *1	Arms	0.55	0.85	1.6	1.6	2.5	4.2	4.4
Instantaneous Maximum Current *I	Arms	2.0	3.1	5.7	5.8	9.3	15.3	16.9
Rated Rotation Speed *1	min-1				3000			
Continuous Allowable Rotation Speed	min-1		70	00			6000	
Maximum Rotation Speed */	min-1	7000						
Torque Constant	N·m/Arms	0.316	0.413	0.321	0.444	0.544	0.493	0.584

Continued on next page.

Continued from previous page.


	Voltage			200 V						
N	Model SGMX	J-	A5A	01A	C2A	02A	04A	06A	08A	
Rotor Moment of Inertia	Without Holding Brakes		0.0421	0.0669	0.0946	0.263	0.486	0.800	1.59	
	With Hold- ing Brakes		0.0501	0.0749	0.103	0.323	0.546	0.860	1.76	
	Without Holding Brake and with Bat- teryless Absolute Encoder		0.0458	0.0706	0.0983	0.267	0.490	0.804	1.59	
	With Hold- ing Brake and Battery- less Encoder	× 10-4 kg·m ²	0.0538	0.0786	0.107	0.327	0.550	0.864	1.76	
	Without Holding Brake and with Com- pact Bat- teryless Absolute Encoder		0.0457	0.0705	0.0982	0.267	0.490	0.804	1.59	
	With Hold- ing Brake and Com- pact Bat- teryless Absolute Encoder		0.0537	0.0785	0.107	0.327	0.550	0.864	1.76	
Rated Power Rate	Without Holding Brakes	kW/s	6.00	15.1	24.0	15.4	33.1	45.6	35.9	
*1	With Hold- ing Brakes		5.04	13.5	22.1	12.5	29.5	42.4	32.4	
Rated Angular	Without Holding Brakes	rad/s²	37700	47500	50400	24200	26100	23800	15000	
Acceleration */	With Hold- ing Brakes		31700	42400	46400	19700	23200	22200	13500	
Derating Rate for Servomotor with Oil Seal 80 90		90 95								
Heat Sink Sinum) *3	ze (alumi-	mm	200 ×2	200 ×6			250 ×250 × 6	250 ×250 × 6		
Protective St	ructure *4				Totally en	closed, self-co	oled, IP67	Continued		

Continued on next page.

Continued from previous page.


	Voltage					200 V		intinued from	1 0	
N	lodel SGMX	J-	A5A	01A	C2A	02A	04A	06A	08A	
	Rated Voltage	V				24 VDC±10%	24 VDC±10%			
	Capacity	W		5.5		(6	6	.5	
	Holding Torque	N·m	0.159	0.318	0.477	0.637	1.27	1.91	2.39	
Holding	Coil Resistance	Ω (at 20°C)		104.8±10%		96 ±10% 88			±10%	
Brake Specifications *5	Rated Current	A (at 20°C)		0.23		0.3	25	0.3	27	
	Time Required to Release Brake	ms			60	8			0	
	Time Required to Brake	ms				100				
Allowable Load	At 6000 min ⁻¹		35 times	35 times	35 times	15 times	10 times	20 times	12 times	
Moment of Inertia	At 7000 min-	1				10 times	5 times	15 times	8 times	
(Rotor Moment of Inertia	With Exter- nal Regener-	At 6000 min-1								
Ratio) *6	ative Resistor and External Dynamic Brake Resistor *7	At 7000 min ⁻¹	35 times	35 times	35 times	25 times	25 times	20 times	15 times	
	LF	mm		20			25			
Allowable Shaft Loads	Allowable Radial Load	N		78		245			392	
Allowable Load Moment of Inertia (Rotor Moment of Inertia Ratio) *6	Allowable Thrust Load	N		54		74			147	

- *1 These values are for operation in combination with a SERVOPACK when the temperature of the armature winding is 100°C. The values for other items are at 20°C. These are typical values.
- *2 The rated torques are the continuous allowable torque values at a surrounding air temperature of 40°C with an aluminum heat sink of the dimensions given in the table.
- *3 Refer to the following section for the relation between the heat sinks and derating rate.
- (1) Servomotor Heat Dissipation Conditions on page 59
- *4 This does not apply to the shaft opening. Protective structure specifications apply only when the special cable is used.

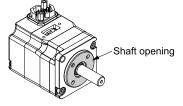

- Observe the following precautions if you use a servomotor with a holding brake.
 - The holding brake cannot be used to stop the servomotor.
 - The time required to release the brake and the time required to brake depend on which discharge circuit is used. Confirm that the
 operation delay time is appropriate for the actual equipment.
 - The 24-VDC power supply is not provided by Yaskawa.
- *6 The rotor moment of inertia scaling factor is the value for a standard servomotor without a holding brake.


- *7 To externally connect a dynamic brake resistor, select hardware option specification 0020 for the SERVOPACK. However, you cannot externally connect a dynamic brake resistor if you use the following SERVOPACKs (maximum applicable motor capacity: 400 W).
 - SGDXS-R70A□□A0020 to -2R8A□□A0020
 - SGDXW-1R6A□□A0020, -2R8A□□A0020
 - SGDXT-1R6A \square A0020, -2R8A \square A0020
- *8 Design the mechanical system so that the thrust and radial loads applied to the servomotor shaft end during operation do not exceed the values given in the table.

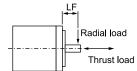



3.2.3 Torque-Rotation Speed Characteristics


A : Continuous duty zone (solid lines): Three-phase, 200 V


B : Intermittent duty zone (dotted lines): Single-phase, 200 V

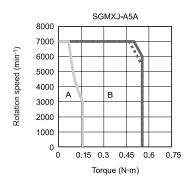


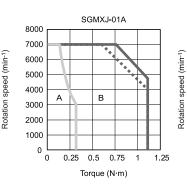

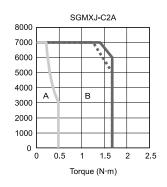


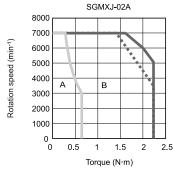

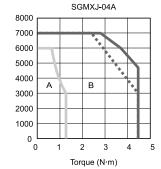

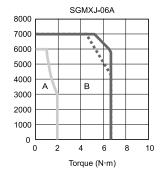

speed (min-1

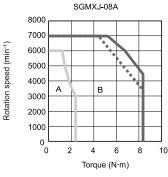

Note:

- 1. These values (typical values) are for operation in combination with a SERVOPACK when the temperature of the armature winding is
- 2. The characteristics in the intermittent duty zone depend on the power supply voltage.


speed (min-1)

- 3. If the effective torque is within the allowable range for the rated torque, the servomotor can be used within the intermittent duty zone.
- 4. If you use a servomotor main circuit cable that exceeds 20 m, the intermittent duty zone in the torque-rotation speed characteristics will become smaller because the voltage drop increases.

3.2.4 Servomotor Overload Protection Characteristics

The overload detection level is set for hot start conditions with a servomotor surrounding air temperature of 40° C

For the overload detection level, priority is given to the lower of the detection levels in the overload protection characteristics of the connected SERVOPACK and servomotor.

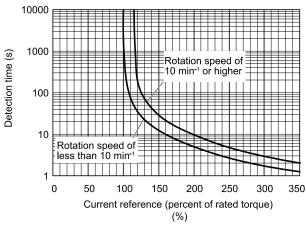

Note:

The above overload protection characteristics do not mean that you can perform continuous duty operation with an output of 100% or higher. Use the servomotor so that the effective torque remains within the continuous duty zone given in "3.2.3 Torque-Rotation Speed Characteristics on page 57".

3.2.5 Allowable Load Moment of Inertia

The allowable load moments of inertia (rotor moment of inertia ratios) for the servomotors are given in "3.2.2 Servomotor Ratings on page 54". The values are determined by the regenerative energy processing capacity of the SERVOPACK and are also affected by the drive conditions of the servomotor. Perform the required steps for each of the following cases.

(1) Exceeding the Allowable Load Moment of Inertia

Use one of the following measures to adjust the load moment of inertia to within the allowable value.

- Reduce the torque limit.
- Reduce the deceleration rate.
- · Reduce the maximum rotation speed.

If the above steps are not possible, install an external regenerative resistor.

Information

An Overvoltage Alarm (A.400) is likely to occur during deceleration if the load moment of inertia exceeds the allowable load moment of inertia. SERVOPACKs with a built-in regenerative resistor may generate a Regenerative Overload Alarm (A.320).


Refer to the following catalog for the regenerative power (W) that can be processed by the SERVOPACKs.


AC Servo Drives Σ-X Series (Document No.: KAEP C710812 03)


Install an external regenerative resistor when the built-in regenerative resistor cannot process all of the regenerative power.


(2) SERVOPACKs without Built-in Regenerative Resistors


The following graph shows the allowable load moment of inertia scaling factor of the rotation speed (reference values for deceleration operation at or above the rated torque). Application is possible without an external regenerative resistor within the allowable value.

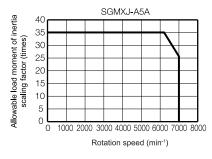

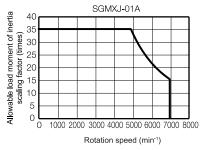

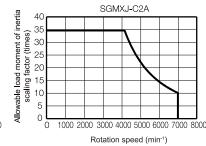

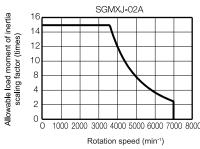

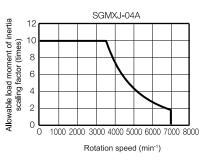

Note:

Applicable SERVOPACK models: SGDXS-R70A, SGDXS-R90A, SGDXS-1R6A, and SGDXS-2R8A

(3) When an External Regenerative Resistor Is Required

Install the external regenerative resistor.


Refer to the following catalog for details on external regenerative resistors.


AC Servo Drives Σ-X Series (Document No.: KAEP C710812 03)


3.2.6 Derating Rates

(1) Servomotor Heat Dissipation Conditions

The servomotor ratings are the continuous allowable values at a surrounding air temperature of 40°C when a heat sink is installed on the servomotor. If the servomotor is mounted on a small device component, the servomotor temperature may rise considerably because the surface for heat dissipation becomes smaller. Refer to the following graphs for the relation between the heat sink size and derating rate.

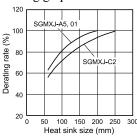

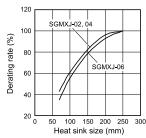

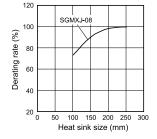




The actual temperature rise depends on the following conditions. Always check the servomotor temperature with the actual equipment.


Important

- \bullet How the heat sink (the servomotor mounting section) is attached to the installation surface
- Status between heat sink and servomotor (sealant, reduction gear, etc.)
- What material is used for the servomotor mounting section
- · Servomotor rotation speed

(2) Applications Where the Surrounding Air Temperature Exceeds 40°C


The servomotor ratings are the continuous allowable values at a surrounding air temperature of 40° C. If you use a servomotor at a surrounding air temperature that exceeds 40° C (60° C max.), apply a suitable derating rate from the following graphs.

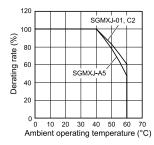


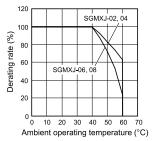

(3) Applications Where the Altitude Exceeds 1000 m

The servomotor ratings are the continuous allowable values at an altitude of 1000 m or less. If you use a servomotor at an altitude that exceeds 1000 m (2000 m max.), the heat dissipation effect of the air is reduced. Apply the appropriate derating rate from the following graphs.

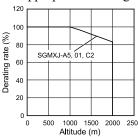

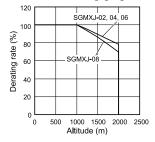

Note:


- When using servomotors with derating, change the detection timing of overload warning and overload alarm based on the overload detection level of the motor given in "3.2.4 Servomotor Overload Protection Characteristics on page 58".
- Use the combination of the SERVOPACK and servomotor so that the derating conditions are satisfied for both the SERVOPACK and servometer
- The derating rates are applicable only when the average rotation speed is less than or equal to the rated rotation speed. If the average rotation speed exceeds the rated rotation speed, consult with your Yaskawa representative.

External Dimensions 3.3

3.3.1 SGMXJ-A5 to -C2

Standard Specification

Models with the additional specification "3 Standard (Functional Safety-Compatible Encoder)" have the same dimensions as those indicated below.

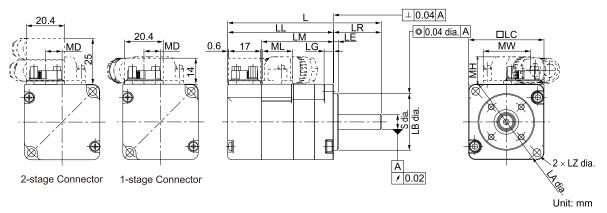


Model	1 *1	L */ LL */				Flan	ge Dimens	sions		
SGMXJ-	L *1	LL *I	LM	LR	LE	LG	LC	LA	LB	LZ
A5A□A2□A□	80.5 (121.0)	55.5 (96.0)	37.5	25	2.5	5	40	46	30-0.021	4.3
01A□A2□A□	92.5 (133.0)	67.5 (108.0)	49.5	25	2.5	5	40	46	30-0.021	4.3
C2A _□ A2 _□ A _□	104.5 (153.0)	79.5 (128.0)	61.5	25	2.5	5	40	46	30-0.021	4.3

Model SGMXJ-	s	MD	MW	МН	ML	Approx. Mass [kg] */
A5A□A2□A□	8-0.009	8.4	25	14.5	16	0.3 (0.6)
01A□A2□A□	8-0.009	8.4	25	14.5	16	0.4 (0.7)
C2AnA2nAn	8-0.009	8.4	25	14.5	16	0.5 (0.8)

For models that have a batteryless absolute encoder (SGMX \square - \square \square W), L and LL are +7.5 mm greater and the approximate mass is 0.1 kg greater than the given value. Refer to the following section for the values for individual models. 3.3.4 Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXJ-□□□W) on page 69

- 1. The values in parentheses are for servomotors with holding brakes.
- The values for a straight shaft end without key specification are given. Refer to the information given below for other shaft end specifications and option specifications.
 - (3) Shaft End Specification on page 62 (4) Option Specification on page 62

(2) Σ -7 Compatible Specification

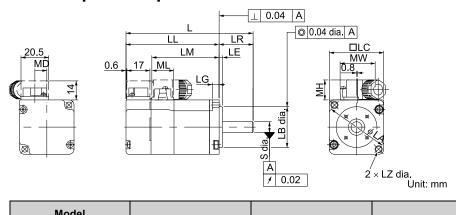


Model SGMXJ-	MD	MW	МН	ML
A5A□A2□A2	8.8	25.8	14.7	16.1
01A□A2□A2	8.8	25.8	14.7	16.1
C2A□A2□A2	8.8	25.8	14.7	16.1

Note:


The dimensions for non-connector parts are identical to those for models with standard specifications.

(3) Shaft End Specification

• Straight with Key and Tap

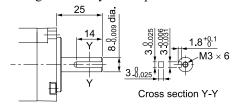

• With Two Flat Seats

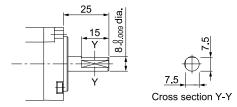


(4) Option Specification

• With Oil Seal




(5) Connector Mounting Dimensions

• Cable Installed on Load Side

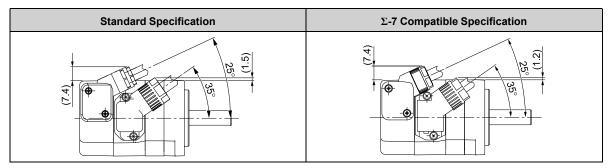


• Cable Installed on Non-load Side

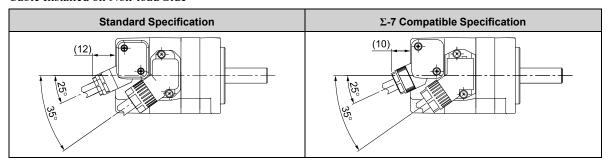

3.3.2 SGMXJ-02 to -06

(1) Standard Specification

Information Models with the additional specification "3 Standard (Functional Safety-Compatible Encoder)" have the same dimensions as those indicated below.

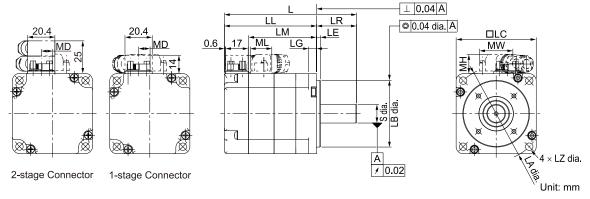

Model						Flan	ge Dimens	sions			
SGMXJ-	L *1	LL *1	LL 'I	LM	LR	LE	LG	LC	LA	LB	LZ
02A□A2□A□	98.5 (139.0)	68.5 (109.0)	50.5	30	3	6	60	70	50-0.025	5.5	
04A□A2□A□	115 (155.5)	85 (125.5)	67	30	3	6	60	70	50-0.025	5.5	
06A□A2□A□	137 (191.0)	107 (161.0)	89	30	3	6	60	70	50-0.025	5.5	

Model SGMXJ-	S	MD	MW	МН	ML	Approx. Mass [kg] */
02A□A2□A□	14-0.011	8.4	25	14.5	16	0.8 (1.4)
04A□A2□A□	14-0.011	8.4	25	14.5	16	1.1 (1.7)
06A□A2□A□	14-0.011	8.4	25	14.5	16	1.6 (2.2)


^{*1} For models that have a batteryless absolute encoder (SGMXD-DDDW), L and LL are +7.5 mm greater and the approximate mass is 0.1 kg greater than the given value. Refer to the following section for the values for individual models.

3.3.4 Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXJ-\u00a1\u00a1W) on page 69

Note:

- 1. The values in parentheses are for servomotors with holding brakes.
- 2. The values for a straight shaft end without key specification are given. Refer to the information given below for other shaft end specifications and option specifications.
 - (3) Shaft End Specification on page 65
 - (4) Option Specification on page 65

(2) Σ -7 Compatible Specification

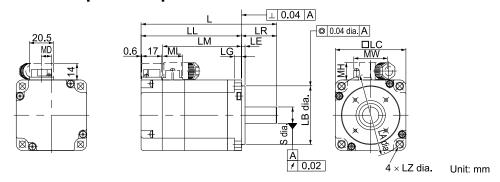


Model SGMXJ-	MD	MW	МН	ML
02A□A2□A2	8.5	28.7	14.7	17.1
04A□A2□A2	8.5	28.7	14.7	17.1
06A□A2□A2	8.5	28.7	14.7	17.1

Note:


The dimensions for non-connector parts are identical to those for models with standard specifications.

(3) Shaft End Specification

• Straight with Key and Tap

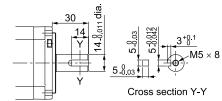


• With Two Flat Seats

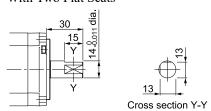


(4) Option Specification

• With Oil Seal

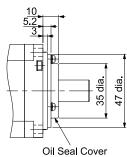


(5) Connector Mounting Dimensions

• Cable Installed on Load Side

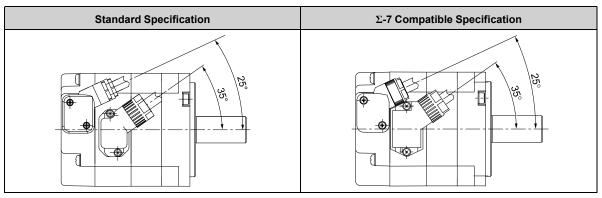


• Cable Installed on Non-load Side

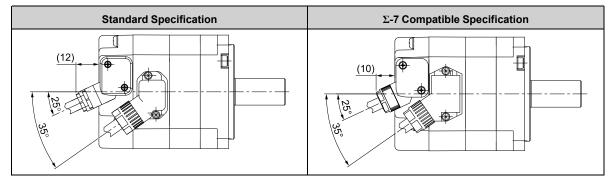

3.3.3 SGMXJ-08

Standard Specification

Models with the additional specification "3 Standard (Functional Safety-Compatible Encoder)" have the same dimensions as those indicated below.

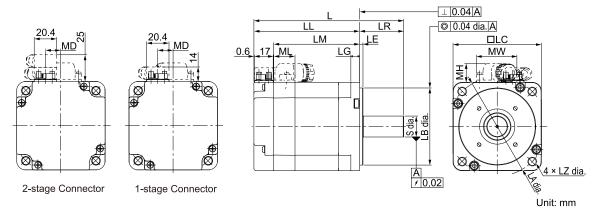

Model	I *1	1 1 *1	1.04	Flange Dimensions						
SGMXJ-	L *1	LL * <i>I</i>	LM	LR	LE	LG	LC	LA	LB	LZ
08A□A2□A□	136 (183.0)	96 (143.0)	78	40	3	8	80	90	70-0.030	7

Model SGMXJ-	S	MD	MW	МН	ML	Approx. Mass */[kg]
08A□A2□A□	19-0.013	14	37	17	19.3	2.2 (2.8)


For models that have a batteryless absolute encoder (SGMXu-uuu), L and LL are 6.5 mm greater and the approximate mass is 0.1 kg greater than the given value. Refer to the following section for the values for individual models.

■ 3.3.4 Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXJ-□□□W) on page 69

- 1. The values in parentheses are for servomotors with holding brakes.
- The values for a straight shaft end without key specification are given. Refer to the information given below for other shaft end specifications and option specifications.

(3) Shaft End Specification on page 68 (4) Option Specification on page 68

(2) Σ -7 Compatible Specification

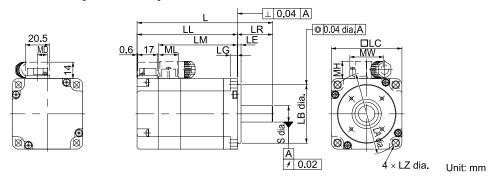


Model SGMXJ-	MD	MW	МН	ML
08A□A2□A2	14	38	17	19.3

Note:


The dimensions for non-connector parts are identical to those for models with standard specifications.

(3) Shaft End Specification

• Straight with Key and Tap

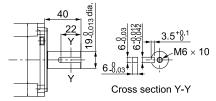


• With Two Flat Seats

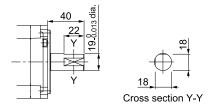


(4) Option Specification

• With Oil Seal

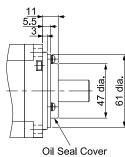


(5) Connector Mounting Dimensions

• Cable Installed on Load Side

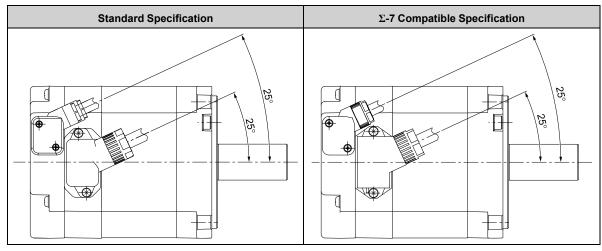

• Cable Installed on Non-load Side

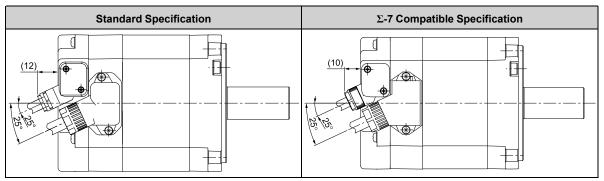

3.3.4 Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXJ-□□□W)

Model SGMXJ-	L	ш	Approx. Mass [kg]
A5AWA2□A□	88 (128.5)	63 (103.5)	0.4 (0.7)
01AWA2□A□	100 (140.5)	75 (115.5)	0.5 (0.8)
C2AWA2□A□	112 (160.5)	87 (135.5)	0.6 (0.9)
02AWA2□A□	106 (146.5)	76 (116.5)	0.9 (1.5)
04AWA2□A□	122.5 (163.0)	92.5 (133.0)	1.2 (1.8)
06AWA2□A□	144.5 (198.5)	114.5 (168.5)	1.7 (2.3)
08AWA2□A□	142.5 (189.5)	102.5 (149.5)	2.3 (2.9)

Note:

The values in parentheses are for servomotors with holding brakes.

Specifications, Ratings, and External Dimensions of SGMXA Servomotors

This chapter describes how to interpret the model numbers of SGMXA servomotors and gives their specifications, ratings, and external dimensions.

4.1	Mode	l Designations	72				
4.2	Speci	fications and Ratings (200 V Specification)	73				
	4.2.1	Specification	73				
	4.2.2	Servomotor Ratings	74				
	4.2.3	Torque-Rotation Speed Characteristics	79				
	4.2.4	Servomotor Overload Protection Characteristics	80				
	4.2.5	Allowable Load Moment of Inertia	80				
	4.2.6	Derating Rates	81				
4.3	Speci	fications and Ratings (400 V Specification)	84				
	4.3.1	Specification	84				
	4.3.2	Servomotor Ratings	85				
	4.3.3	Torque-Rotation Speed Characteristics	87				
	4.3.4	Servomotor Overload Protection Characteristics	87				
	4.3.5	Allowable Load Moment of Inertia	88				
	4.3.6	Derating Rates	88				
4.4	External Dimensions (200 V Specification)						
	4.4.1	SGMXA-A5 to -C2	90				
	4.4.2	SGMXA-02 to -06	93				
	4.4.3	SGMXA-08 and -10	96				
	4.4.4	SGMXA-15 to -25	98				
	4.4.5	SGMXA-30 to -50	102				
	4.4.6	SGMXA-70 (Without Holding Brakes)	106				
	4.4.7	Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXA-□□□W)	109				
4.5	Exter	nal Dimensions (400 V Specification)	110				
	4.5.1	SGMXA-15 to -25	110				
	4.5.2	SGMXA-30 to -50	114				
	4.5.3	Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXA-□□□W)	118				

Model Designations 4.1

SGMXA -01 1st+2nd digits

 Σ -X-Series Servomotor SGMXA model

3rd digit

1st+2nd digits Rated Output

	0 '5 '	Power Sup	ply Voltage
Code	Specification	200 VAC	400 VAC
A5	50 W	0	-
01	100 W	0	-
C2	150 W	0	-
02	200 W	0	-
04	400 W	0	-
06	600 W	0	-
08	750 W	0	-
10	1.0 kW	0	-
15	1.5 kW	0	0
20	2.0 kW	0	0
25	2.5 kW	0	0
30	3.0 kW	0	0
40	4.0 kW	0	0
50	5.0 kW	0	0
70	7.0 kW	0	-

3rd digit Power Supply Voltage

Code	Specification
Α	AC 200 V
D	AC 400 V

4th digit Serial Encoder

Code	Specification
H*1	26-bit compact batteryless absolute encoder
J	26-bit absolute encoder
W	26-bit batteryless absolute encoder

5th digit Design Revision Order

6th	digit	Shaft	End

Code	Specification
2	Straight without key
6	Straight with key and tap
B*2	With two flat seats

7th digit Options*3

Code	Specification
1	Without options
С	With holding brake (24 VDC)
Е	With oil seal With holding brake (24 VDC)
S	With oil seal

Destination

Ancillary Specification

Code	Specification
1	Standard
2*4	Compatible
3*5	Standard (encoder with functional safety)

- This encoder is equipped with an internal rechargeable battery, and it holds multi-turn position data without using an external battery. Refer to the following section for details on the battery.
 - 1.5 26-Bit Compact Batteryless Absolute Encoder on page 44
- *2 Code B does not support models above 1.5 kW.
- SGMXA-70A has no models with holding brake.
- *4 200 VAC: Σ-7 compatible specification: Main circuit cables and encoder cables for the Σ-7-series SGM7A servomotors can be used. 400 VAC: Σ-V compatible specification: Main circuit cables and encoder cables for the Σ-V-series SGMSV servomotors can be used.
- *5 The following models are not supported.
 - Serial encoder specification: 26-bit compact batteryless absolute encoder
 - · Shaft end: With two flat seats

Contact your Yaskawa representative beforehand if you require a model with support for functional safety.


4.2 Specifications and Ratings (200 V Specification)

4.2.1 Specification

Vo	Itage		200 V										
Model	SGMXA-	A5A	01A	C2A, 02A	04A	06A, 08A	10A	15A	20A	25A, 30A	40A, 50A	70A	
Time Rat	ing				•	Co	ntinuous				•		
Thermal	Class			UL: B,	CE: B				Į	JL: F, CE:	F		
Insulation	n Resistance					500 VDC	C, 10 MΩ r	nin.					
Withstand	d Voltage		1500 VAC for 1 minute										
Excitation	n		Permanent magnet										
Mounting	,					Flang	e-mounted	l					
Drive Me	thod					Dir	ect drive						
Rotation	Direction		Cou	nterclockw	ise (CCW) i	for forward	l reference	when view	wed from t	the load si	de		
Vibration	Class *1						V15						
	Surrounding Air Temperature		0°C to 40°C (With derating, usage is possible between 40°C and 60°C.) *3										
Environ-	Surround- ing Air Humidity		20% to 80% relative humidity (with no condensation)										
mental Condi- tions	Installation Site	Must beMust faMust ha	The state of the s										
	Storage Environ- ment	Store the servomotor in the following environment if you store it with the power cable disconnected. Storage temperature: -20°C to +60°C (with no freezing) Storage humidity: 20% to 80% relative humidity (with no condensation)											
Impact Resist- ance *2	Impact Accelera- tion (at Flange)					49	90 m/s²						
ance 2	Number of Impacts					2	times						
Vibra- tion Resist- ance *2	Vibration Accelera- tion (at Flange)	49 m/s ² 49 m/s ² (24.5 m/s ² front to back)								14.7 m/ s ²			
	SGDXS	R70A	R90A	1R6A	2R8A	5R5A	120A	120A	180A	200A	330A	550A	
Applica- ble SERVO-	SGDXW	1R6A *4, 2R8A *4	1R6A *4, 2R8A *4	1R6A, 2R8A *4	2R8A, 5R5A *4, 7R6A *4	5R5A, 7R6A	_	_	_	_	_	_	
PACKs	SGDXT-	1R6A *4, 2R8A *4	1R6A *4, 2R8A *4	1R6A, 2R8A *4	2R8A	_	_	_	_	_	_	_	

^{*1} A vibration class of V15 indicates a vibration amplitude of 15 µm maximum on the servomotor without a load at the rated rotation speed.

*2 The given values are for when the servomotor shaft is mounted horizontally and impact or vibration is applied in the directions shown in the following figures. The strength of the vibration that the servomotor can withstand depends on the application. Always check the vibration acceleration that is applied to the servomotor with the actual equipment.

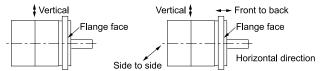

Impact Applied to the Servomotor Vibration Applied to the Servomotor

- *3 Refer to the following section for the derating rates.
 - 4.2.6 Derating Rates on page 81
- *4 If you use this combination, performance may not be as good, e.g., the control gain may not increase, in comparison with using a Σ-XS SERVOPACK.

4.2.2 Servomotor Ratings

(1) SGMXA-A5 to -10

Voltage		200 V									
Model SGM	XA-	A5A	01A	C2A	02A	04A	06A	08A	10A		
Rated Output *1	W	50	100	150	200	400	600	750	1000		
Rated Torque *1, *2	N·m	0.159	0.318	0.477	0.637	1.27	1.91	2.39	3.18		
Instantaneous Maximum Torque *1	N·m	0.557	1.11	1.67	2.23	4.46	6.69	8.36	11.1		
Rated Current *1	Arms	0.57	0.89	1.5	1.5	2.4	4.5	4.4	6.4		
Instantaneous Maximum Current */	Arms	2.1	3.2	5.6	5.9	9.3	16.9	16.8	23.2		
Rated Rotation Speed	min-1				3	3000					
Continuous Allowable Rotation Speed	min-1	7000 6000									
Maximum Rotation Speed *I	min-1	7000									
Torque Constant	N·m/Arms	0.304 0.384 0.332 0.458 0.576 0.456 0.584						0.541			

Continued on next page.

Continued from previous page.


	Voltage		200 V										
N	Nodel SGM	KA-	A5A	01A	C2A	02A	04A	06A	08A	10A			
	Without Holding Brakes		0.0220	0.0340	0.0461	0.139	0.216	0.315	0.773	0.969			
	With Hold- ing Brakes		0.0300	0.0420	0.0541	0.199	0.276	0.375	0.943	1.14			
Rotor Moment of	Without Holding Brake and with Bat- teryless Absolute Encoder	× 10 ⁻⁴ kg·m ²	0.0257	0.0377	0.0498	0.143	0.220	0.319	0.777	0.973			
	With Hold- ing Brake and Bat- teryless Encoder		0.0337	0.0457	0.0578	0.203	0.280	0.379	0.947	1.14			
	Without Holding Brake and with Com- pact Bat- teryless Absolute Encoder		0.0256	0.0376	0.0497	0.143	0.220	0.319	0.777	0.973			
	With Hold- ing Brake and Com- pact Bat- teryless Absolute Encoder		0.0336	0.0456	0.0577	0.203	0.280	0.379	0.947	1.14			
Rated Power	Without Holding Brakes	kW/s	11.5	29.7	49.4	29.1	74.7	116	73.7	104			
Rate */	With Hold- ing Brakes		8.42	24.1	42.1	20.4	58.5	97.3	60.4	88.8			
Rated Angular	Without Holding Brakes	rad/s²	72200	93500	103500	45700	58800	60600	30800	32800			
Acceleration *1	With Hold- ing Brakes	1au/S²	53000	75700	88200	31900	46000	50900	25300	27900			
	Derating Rate for Servomotor with Oil Seal		80	80 90				95					
Heat Sink S num) *3	Heat Sink Size (aluminum) *3		200 × 2) × 200 × 6 250 × 250 × 6			6	300 × 300 × 12 *4	250 × 250 × 6	300 × 300 × 12			
Protective S	Protective Structure *5			Totally enclosed, self-cooled, IP67									

Continued on next page.

Continued from previous page.


	Voltage					2	00 V			revious page.	
N	lodel SGM	KA-	A5A	01A	C2A	02A	04A	06A	08A	10A	
	Rated Voltage	V				24 VI	DC ±10%				
	Capacity	W		5.5			6		6.5		
	Holding Torque	N·m	0.159	0.318	0.477	0.637	1.27	1.91	2.39	3.18	
Holding	Coil Resistance	Ω (at 20°C)		104.8 ±10%		96 :	±10%	88.6 ±10%			
Brake Specifica- tions *6	Rated Current	A (at 20°C)		0.23		0.25			0.27		
	Time Required to Release Brake	ms				80					
	Time Required to Brake	ms									
	At 6000 min	n-1	40 times	40	40	30 times	20 times	20 times	20 times	20 times	
Allowable	At 7000 min	At 7000 min-1		40 times	40 times	25 times	15 times	20 times	15 times	20 times	
Load Moment of Inertia	With External	At 6000 min ⁻¹									
(Rotor Moment of Inertia Ratio) *7	Regenera- tive Resis- tor and External Dynamic Brake Resistor *8	At 7000 min ⁻¹	40 times	40 times	40 times	30 times	20 times	20 times	20 times	30 times	
	LF	mm		20			25		3	5	
Allowable Shaft	Allowable Radial Load	N		78		245			392		
Loads *9	Allowable Thrust Load	N	54			74			147		

- *1 These values are for operation in combination with a SERVOPACK when the temperature of the armature winding is 100°C. The values for other items are at 20°C. These are typical values.
- *2 The rated torques are the continuous allowable torque values at a surrounding air temperature of 40°C with an aluminum heat sink of the dimensions given in the table.
- *3 Refer to the following section for the relation between the heat sinks and derating rate.
 - (1) Servomotor Heat Dissipation Conditions on page 81
- *4 If the heat sink is 250 mm × 250 mm × 6 mm, the rated output is 550 W and the rated torque is 1.75 N·m. Refer to the following section for details.
 - (1) Servomotor Heat Dissipation Conditions on page 81
- *5 This does not apply to the shaft opening. Protective structure specifications apply only when the special cable is used.

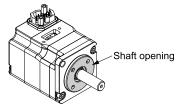

- *6 Observe the following precautions if you use a servomotor with a holding brake.
 - The holding brake cannot be used to stop the servomotor.
 - The time required to release the brake and the time required to brake depend on which discharge circuit is used. Confirm that the
 operation delay time is appropriate for the actual equipment.
 - The 24-VDC power supply is not provided by Yaskawa.
- *7 The rotor moment of inertia scaling factor is the value for a standard servomotor without a holding brake.

- *8 To externally connect a dynamic brake resistor, select hardware option specification 0020 for the SERVOPACK. However, you cannot externally connect a dynamic brake resistor if you use the following SERVOPACKs (maximum applicable motor capacity: 400 W).
 - SGDXS-R70A \square A0020 to -2R8A \square A0020
 - SGDXW-1R6A□□A0020, -2R8A□□A0020
 - SGDXT-1R6A \square A0020, -2R8A \square A0020
- *9 Design the mechanical system so that the thrust and radial loads applied to the servomotor shaft end during operation do not exceed the values given in the table.

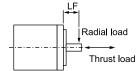

(2) SGMXA-15 to -70

	Voltage					200 V			
	Model SGMXA-		15A	20A	25A	30A	40A	50A	70A
Rated Output *1		kW	1.5	2.0	2.5	3.0	4.0	5.0	7.0
Rated Torque *1,	*2	N·m	4.90	6.36	7.96	9.80	12.6	15.8	22.3
Instantaneous M	aximum Torque */	N·m	14.7	19.1	23.9	29.4	37.8	47.6	54.0
Rated Current */		Arms	9.3	12.1	15.6	17.9	25.4	27.6	38.3
Instantaneous M	aximum Current */	Arms	28	42	51	56	77	84	105
Rated Rotation S	Speed *I	min-1				3000			
Continuous Allo	wable Rotation Speed	min-1	60	000	5000	6	000	5000	6000
Maximum Rotat	ion Speed *I	min-1	6000 *3						
Torque Constant	*1	N·m/Arms	0.590	0.561	0.538	0.582	0.519	0.604	0.604
Rotor Moment	Without Holding Brakes		2.00	2.47	3.19	7.00	9.60	12.3	12.3
of Inertia *4	With Holding Brakes	× 10-4 kg·m²	2.25	2.72	3.44	9.20	11.8	14.5	_
Rated Power	Without Holding Brakes		120	164	199	137	165	203	404
Rate */	With Holding Brakes	kW/s	107	149	184	104	134	172	_
Rated Angular	Without Holding Brakes		24500	25700	24900	14000	13100	12800	18100
Acceleration *1	With Holding Brakes	rad/s ²	21700	23300	23100	10600	10600	10800	_
Heat Sink Size (a	Heat Sink Size (aluminum) *5 mm		3	00 × 300 × 1	12		400 ×	400 × 20	•
Protective Structure *6			Totally enclosed, self-cooled, IP67					Totally enclosed, forced ven tilation (with fan).	


Continued on next page.

IP22


Continued from previous page.

	Voltage				200 V							
	Model SGMXA-		15A	20A	25A	30A	40A	50A	70A			
	Rated Voltage	V			24 VD	C±10%			ļ			
	Capacity	W		12			10					
	Holding Torque	N·m	7.	84	10	20						
Holding Brake	Coil Resistance	Ω (at 20°C)		48		59			_			
Specifications *7	Rated Current	A (at 20°C)	0.5			0.41						
	Time Required to Release Brake	ms	170				100					
	Time Required to Brake	ms	80									
Allowable Load	Without External Dev	vices	10 times			5 times						
Moment of Inertia (Rotor Moment of Inertia Ratio) *8	With External Regenerative Resistor and External Dynamic Brake Resistor *9		20 times			15 times						
	LF	mm		45		63						
Allowable Shaft Loads *10	Allowable Radial Load	N		686		980 1176						
	Allowable Thrust Load	N	196			392						

- *1 These values are for operation in combination with a SERVOPACK when the temperature of the armature winding is 20°C. These are typical values.
- *2 The rated torques are the continuous allowable torque values at a surrounding air temperature of 40°C with an aluminum heat sink of the dimensions given in the table.
- *3 For SGMXA-25A and -50A servomotors, the maximum rotation speed in the continuous duty zone is 5000 min⁻¹. Use the servomotor in a range where the average motor speed and effective torque stay in the continuous zone.
- *4 The values for SGMXA-15A to -70A servomotors with batteryless absolute encoders (and holding brakes) are the same as those in the table.
- *5 Refer to the following section for the relation between the heat sinks and derating rate.
 - (1) Servomotor Heat Dissipation Conditions on page 81
- *6 This does not apply to the shaft opening. Protective structure specifications apply only when the special cable is used.

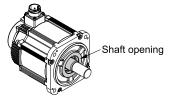

- *7 Observe the following precautions if you use a servomotor with a holding brake.
 - The holding brake cannot be used to stop the servomotor.
 - The time required to release the brake and the time required to brake depend on which discharge circuit is used. Confirm that the operation delay time is appropriate for the actual equipment.
 - The 24-VDC power supply is not provided by Yaskawa.
- *8 The rotor moment of inertia scaling factor is the value for a standard servomotor without a holding brake.
- *9 To externally connect a dynamic brake resistor, select hardware option specification 0020 for the SERVOPACK. However, you cannot externally connect a dynamic brake resistor if you use the following SERVOPACKs (maximum applicable motor capacity: 400 W).
 - SGDXS-R70A \square A0020 to -2R8A \square A0020
 - SGDXW-1R6A□□A0020 to -2R8A□□A0020
- *10 Design the mechanical system so that the thrust and radial loads applied to the servomotor shaft end during operation do not exceed the values given in the table.

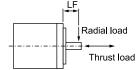


Torque-Rotation Speed Characteristics 4.2.3

12 16

Torque (N·m)

A : Continuous duty zone ——— (solid lines): Three-phase, 200 V B: Intermittent duty zone (dotted lines): Single-phase, 200 V

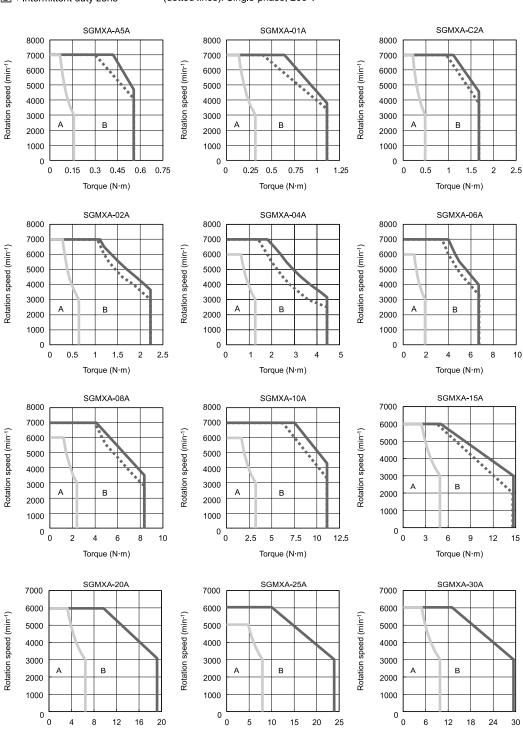

20

10 15


Torque (N·m)


18


Torque (N·m)

24

12

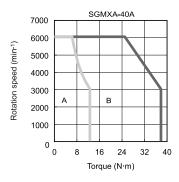

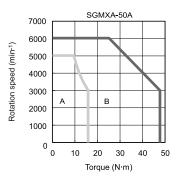

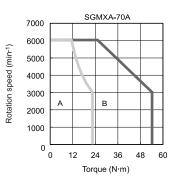



- SGMXA-A5A to -10: These values (typical values) are for operation in combination with a SERVOPACK when the temperature of the armature winding is 100°C.
 SGMXA-15A to -70: These values (typical values) are for operation in combination with a SERVOPACK when the temperature of the armature winding is 20°C.
- 2. The characteristics in the intermittent duty zone depend on the power supply voltage.
- 3. If the effective torque is within the allowable range for the rated torque, the servomotor can be used within the intermittent duty zone.
- If you use a servomotor main circuit cable that exceeds 20 m, the intermittent duty zone in the torque-rotation speed characteristics will become smaller because the voltage drop increases.
- The SGMXA-10A and -15A can use a single-phase power input in combination with the SGDXS-120A□□A0008.

4.2.4 Servomotor Overload Protection Characteristics

The overload detection level is set for hot start conditions with a servomotor surrounding air temperature of 40° C.

For the overload detection level, priority is given to the lower of the detection levels in the overload protection characteristics of the connected SERVOPACK and servomotor.

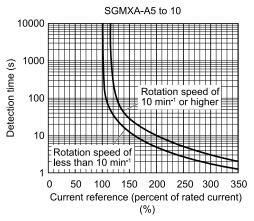

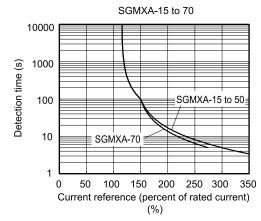

Note:

The above overload protection characteristics do not mean that you can perform continuous duty operation with an output of 100% or higher. Use the servomotor so that the effective torque remains within the continuous duty zone given in "4.2.3 Torque-Rotation Speed Characteristics on page 79".

4.2.5 Allowable Load Moment of Inertia

The allowable load moments of inertia (rotor moment of inertia ratios) for the servomotors are given in "4.2.2 Servomotor Ratings on page 74". The values are determined by the regenerative energy processing capacity of the SERVOPACK and are also affected by the drive conditions of the servomotor. Perform the required Steps for each of the following cases.

(1) Exceeding the Allowable Load Moment of Inertia

Use one of the following measures to adjust the load moment of inertia to within the allowable value.

• Reduce the torque limit.

- Reduce the deceleration rate.
- Reduce the maximum rotation speed.

If the above steps are not possible, install an external regenerative resistor.

Information

An Overvoltage Alarm (A.400) is likely to occur during deceleration if the load moment of inertia exceeds the allowable load moment of inertia. SERVOPACKs with a built-in regenerative resistor may generate a Regenerative Overload Alarm (A.320).


Refer to the following catalog for the regenerative power (W) that can be processed by the SERVOPACKs.


AC Servo Drives Σ-X Series (Document No.: KAEP C710812 03)


Install an external regenerative resistor when the built-in regenerative resistor cannot process all of the regenerative power.


(2) SERVOPACKs without Built-in Regenerative Resistors


The following graph shows the allowable load moment of inertia scaling factor of the rotation speed (reference values for deceleration operation at or above the rated torque). Application is possible without an external regenerative resistor within the allowable value.

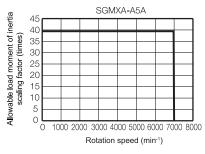

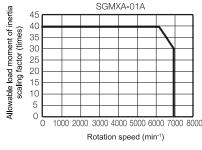

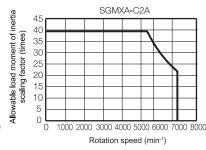

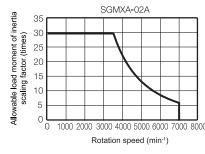

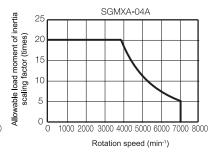

Note:

Applicable SERVOPACK models: SGDXS-R70A, SGDXS-R90A, SGDXS-1R6A, and SGDXS-2R8A

(3) When an External Regenerative Resistor Is Required

Install the external regenerative resistor.


Refer to the following catalog for details on external regenerative resistors.


 \square AC Servo Drives Σ -X Series (Document No.: KAEP C710812 03)


4.2.6 Derating Rates


(1) Servomotor Heat Dissipation Conditions

The servomotor ratings are the continuous allowable values at a surrounding air temperature of 40° C when a heat sink is installed on the servomotor. If the servomotor is mounted on a small device component, the servomotor temperature may rise considerably because the surface for heat dissipation becomes smaller. Refer to the following graphs for the relation between the heat sink size and derating rate.

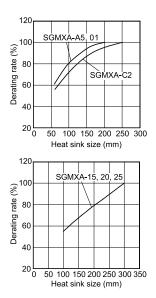

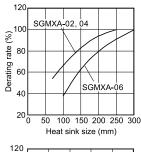

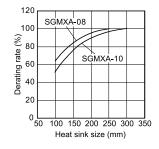

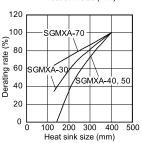



The actual temperature rise depends on the following conditions. Always check the servomotor temperature with the actual equipment.

• How the heat sink (the servomotor mounting section) is attached to the installation surface


- Status between heat sink and servomotor (sealant, reduction gear, etc.)
- What material is used for the servomotor mounting section


120

· Servomotor rotation speed


(2) Applications Where the Surrounding Air Temperature Exceeds 40°C

The servomotor ratings are the continuous allowable values at a surrounding air temperature of 40°C. If you use a servomotor at a surrounding air temperature that exceeds 40°C (60°C max.), apply a suitable derating rate from the following graphs.

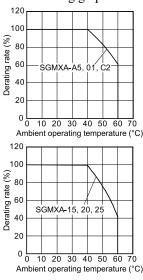

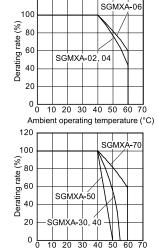



Ambient operating temperature (°C)

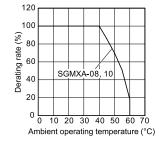



(3) Applications Where the Altitude Exceeds 1000 m

The servomotor ratings are the continuous allowable values at an altitude of 1000 m or less. If you use a servomotor at an altitude that exceeds 1000 m (2000 m max.), the heat dissipation effect of the air is reduced. Apply the appropriate derating rate from the following graphs.

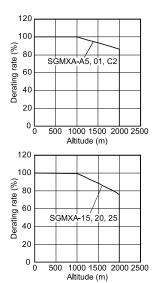

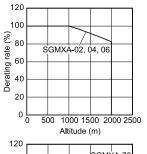

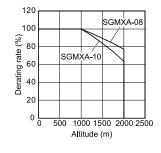

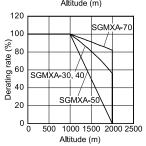

- When using servomotors with derating, change the detection timing of overload warning and overload alarm based on the overload detection level of the motor given in "4.2.4 Servomotor Overload Protection Characteristics on page 80".
- Use the combination of the SERVOPACK and servomotor so that the derating conditions are satisfied for both the SERVOPACK and servomotor.
- The derating rates are applicable only when the average rotation speed is less than or equal to the rated rotation speed. If the average rotation speed exceeds the rated rotation speed, consult with your Yaskawa representative.


4.3 Specifications and Ratings (400 V Specification)

4.3.1 Specification

Vo	oltage	400 V								
Model	I SGMXA-	15D	20D	25D	30D	40D	50D			
Time Rating				Continu	ious	•				
Thermal Class			UL: F, CE: F							
Insulation Resi	stance			500 VDC, 10	$M\Omega$ min.					
Withstand Volta	age		1,800 VA	C for 1 minute, or	2,200 VAC for 1	second				
Excitation		Permanent magnet								
Mounting				Flange-me	ounted					
Drive Method				Direct o	lrive					
Rotation Direct	tion	Coun	terclockwise (CCV	W) for forward refe	erence when view	ed from the load	side			
Vibration Class	; * <i>1</i>	V15								
	Surrounding Air Temperature	0°C to 40°C (With derating, usage is possible between 40°C and 60°C.) *3								
	Surrounding Air Humidity		20% to 80	% relative humidit	y (with no conder	nsation)				
Environmental Conditions	Installation Site	 Must be well- Must facilitate Must have an am.) *3 	 Must facilitate inspection and cleaning. Must have an altitude of 1000 m or less. (With derating, usage is possible between 1000 m and 2000 							
	Storage Environment	Storage temperat	ure: -20°C to +60°	ng environment if C (with no freezin tive humidity (with	g)	•	isconnected.			
Impact Resistance *2	Impact Acceleration (at Flange)			490 m	/ _S 2					
ance 2	Number of Impacts	/ times								
Vibration Resistance *2	Vibration Acceleration (at Flange)			49 m/	's²					
Applicable SERVO- PACKs	SGDXS	5R4D 8R4D 120D 120D 170D 170D								

^{*1} A vibration class of V15 indicates a vibration amplitude of 15 µm maximum on the servomotor without a load at the rated rotation speed

^{*2} The given values are for when the servomotor shaft is mounted horizontally and impact or vibration is applied in the directions shown in the following figures. The strength of the vibration that the servomotor can withstand depends on the application. Always check the vibration acceleration that is applied to the servomotor with the actual equipment.

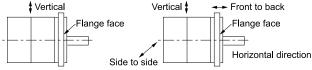

Impact Applied to the Servomotor Vibration Applied to the Servomotor

4.3.6 Derating Rates on page 88

^{*3} Refer to the following section for the derating rates.

4.3.2 **Servomotor Ratings**


	Voltage		400 V							
	Model SGMX	A-	15D	20D	25D	30D	40D	50D		
Rated Output	*1	w	1.5	2.0	2.5	3.0	4.0	5.0		
Rated Torque	*1, *2	N·m	4.90	6.36	7.96	9.80	12.6	15.8		
Instantaneous que *1	Maximum Tor-	N·m	14.7	19.1	23.9	29.4	37.8	47.6		
Rated Current	*1	Arms	4.5	5.9	7.4	8.9	12.5	13.8		
Instantaneous Maximum Current *1		Arms	14	20	25	28	39	42		
Rated Rotation	n Speed */	min-1			30	000				
Continuous Attion Speed	llowable Rota-	min-1	60	000	5000	60	000	5000		
Maximum Ro	tation Speed *1	min-1			60	000				
Torque Consta	nt	N·m/Arms	1.23	1.18	1.15	1.16	1.06	1.21		
Rotor Moment of	Without Holding Brakes	× 10-4 kg·m²	2.00	2.47	3.19	7.00	9.60	12.3		
Inertia *3	With Holding Brakes		2.25	2.72	3.44	9.20	11.8	14.5		
Rated Power	Without Holding Brakes	kW/s	120	164	199	137	165	203		
Rate *1	With Holding Brakes		107	149	184	104	135	172		
Rated Angu- lar Accelera-	Without Holding Brakes	rad/s²	24500	25700	24900	14000	13100	12800		
tion *1	With Holding Brakes		21700	23300	23100	10600	10600	10800		
Heat Sink Size	e (aluminum)	mm		300 × 300 × 12		400 ×400 × 20				
Protective Stru	acture *5			Т	otally enclosed	, self-cooled, IP	67			
	Rated Voltage	V			24 VD	C±10%				
	Capacity	W		12			10			
	Holding Torque	N·m	7.	84	10		20			
Holding	Coil Resistance	Ω (at 20°C)		48			59			
Brake Speci-	Rated Current	A (at 20°C)		0.5			0.41			
fications *6	Time Required to Release Brake	ms		170			100			
	Time Required to Brake	ms			{	80				

Continued on next page.


Continued from previous page.

	Voltage		400 V								
	Model SGMX	Α-	15D	20D	25D	30D 40D 50I					
Allowable	Without Extern	nal Devices	10 times			5 times					
Load Moment of Inertia (Rotor Moment of Inertia Ratio) *7	With External Resistor and E Brake Resistor	xternal Dynamic	20 times			15 times					
	LF	mm	45			63					
Allowable Shaft Loads	Allowable Radial Load	N	686			980 1176					
*9	Allowable Thrust Load	N		196			392				

- *1 These values are for operation in combination with a SERVOPACK when the temperature of the armature winding is 20°C. These are typical values.
- *2 The rated torques are the continuous allowable torque values at a surrounding air temperature of 40°C with an aluminum heat sink of the dimensions given in the table.
- *3 The values for SGMXA-15D to -50D servomotors with batteryless absolute encoders (and holding brakes) are the same as those in the table.
- *4 Refer to the following section for the relation between the heat sinks and derating rate.
 - (1) Servomotor Heat Dissipation Conditions on page 88
- *5 This does not apply to the shaft opening. Protective structure specifications apply only when the special cable is used.

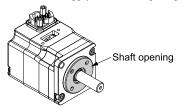


- *6 Observe the following precautions if you use a servomotor with a holding brake.
 - The holding brake cannot be used to stop the servomotor.
 - The time required to release the brake and the time required to brake depend on which discharge circuit is used. Confirm that the
 operation delay time is appropriate for the actual equipment.
 - The 24-VDC power supply is not provided by Yaskawa.
- *7 The rotor moment of inertia scaling factor is the value for a standard servomotor without a holding brake.
- *8 To externally connect a dynamic brake resistor, select hardware option specification 0020 for the SERVOPACK.
- *9 Design the mechanical system so that the thrust and radial loads applied to the servomotor shaft end during operation do not exceed the values given in the table.

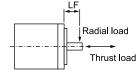



4.3.3 Torque-Rotation Speed Characteristics


A : Continuous duty zone (solid lines): Three-phase, 400 V


B : Intermittent duty zone

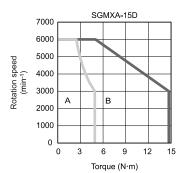


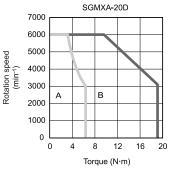

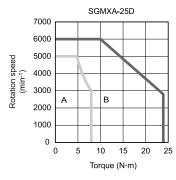

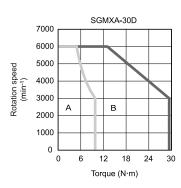

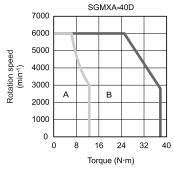

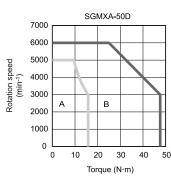


Note:

- These values (typical values) are for operation in combination with a SERVOPACK when the temperature of the armature winding is 20°C.
- 2. The characteristics in the intermittent duty zone depend on the power supply voltage.
- 3. If the effective torque is within the allowable range for the rated torque, the servomotor can be used within the intermittent duty zone.
- 4. If you use a servomotor main circuit cable that exceeds 20 m, the intermittent duty zone in the torque-rotation speed characteristics will become smaller because the voltage drop increases.

4.3.4 Servomotor Overload Protection Characteristics

The overload detection level is set for hot start conditions with a servomotor surrounding air temperature of 40°

For the overload detection level, priority is given to the lower of the detection levels in the overload protection characteristics of the connected SERVOPACK and servomotor.

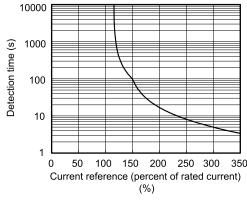

Note:

The above overload protection characteristics do not mean that you can perform continuous duty operation with an output of 100% or higher. Use the servomotor so that the effective torque remains within the continuous duty zone given in "4.3.3 Torque-Rotation Speed Characteristics on page 87".

4.3.5 Allowable Load Moment of Inertia

The allowable load moments of inertia (rotor moment of inertia ratios) for the servomotors are given in "4.3.2 Servomotor Ratings on page 85". The values are determined by the regenerative energy processing capacity of the SERVOPACK and are also affected by the drive conditions of the servomotor. Perform the required steps for each of the following cases.

(1) Exceeding the Allowable Load Moment of Inertia

Use one of the following measures to adjust the load moment of inertia to within the allowable value.

- Reduce the torque limit.
- Reduce the deceleration rate.
- Reduce the maximum rotation speed.

If the above steps are not possible, install an external regenerative resistor.

Information

An Overvoltage Alarm (A.400) is likely to occur during deceleration if the load moment of inertia exceeds the allowable load moment of inertia. SERVOPACKs with a built-in regenerative resistor may generate a Regenerative Overload Alarm (A.320).

Refer to the following catalog for the regenerative power (W) that can be processed by the SERVOPACKs.

AC Servo Drives Σ-X Series (Document No.: KAEP C710812 03)

Install an external regenerative resistor when the built-in regenerative resistor cannot process all of the regenerative power.

(2) SERVOPACKs without Built-in Regenerative Resistors

The allowable load moments of inertia (rotor moment of inertia ratios) for the servomotors are given in "4.3.2 Servomotor Ratings on page 85". Application is possible without an external regenerative resistor if the multiplier for "Without External Devices" is within the allowable value. An external regenerative resistor is required if the multiplier is not within the allowable value.

(3) When an External Regenerative Resistor Is Required

Install the external regenerative resistor.


Refer to the following catalog for details on external regenerative resistors.


AC Servo Drives Σ-X Series (Document No.: KAEP C710812 03)

4.3.6 Derating Rates

(1) Servomotor Heat Dissipation Conditions

The servomotor ratings are the continuous allowable values at a surrounding air temperature of 40°C when a heat sink is installed on the servomotor. If the servomotor is mounted on a small device component, the servomotor temperature may rise considerably because the surface for heat dissipation becomes smaller. Refer to the following graphs for the relation between the heat sink size and derating rate.

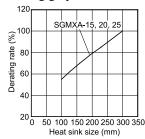

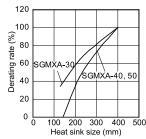




The actual temperature rise depends on the following conditions. Always check the servomotor temperature with the actual equipment.


Important

- How the heat sink (the servomotor mounting section) is attached to the installation surface
- Status between heat sink and servomotor (sealant, reduction gear, etc.)
- What material is used for the servomotor mounting section
- · Servomotor rotation speed

(2) Applications Where the Surrounding Air Temperature Exceeds 40°C


The servomotor ratings are the continuous allowable values at a surrounding air temperature of 40° C. If you use a servomotor at a surrounding air temperature that exceeds 40° C (60° C max.), apply a suitable derating rate from the following graphs.

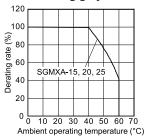


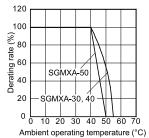

(3) Applications Where the Altitude Exceeds 1000 m

The servomotor ratings are the continuous allowable values at an altitude of 1000 m or less. If you use a servomotor at an altitude that exceeds 1000 m (2000 m max.), the heat dissipation effect of the air is reduced. Apply the appropriate derating rate from the following graphs.

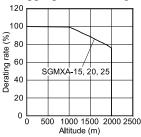

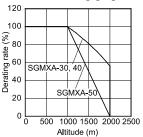

Note:


- When using servomotors with derating, change the detection timing of overload warning and overload alarm based on the overload detection level of the motor given in "4.3.4 Servomotor Overload Protection Characteristics on page 87".
- Use the combination of the SERVOPACK and servomotor so that the derating conditions are satisfied for both the SERVOPACK and servomotor.
- The derating rates are applicable only when the average rotation speed is less than or equal to the rated rotation speed. If the average rotation speed exceeds the rated rotation speed, consult with your Yaskawa representative.

4.4 External Dimensions (200 V Specification)

4.4.1 SGMXA-A5 to -C2

(1) Standard Specification

Information Models with the additional specification "3 Standard (Functional Safety-Compatible Encoder)" have the same dimensions as those indicated below.

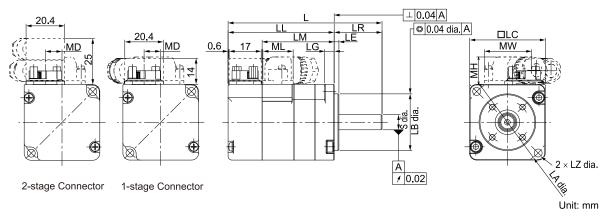

Model	• *1	L */ LL */	11 *1	Flange Dimensions								
SGMXA-	L *1	LL *1	LM	LR	LE	LG	LC	LA	LB	LZ		
A5A□A2□A□	80.5 (121.0)	55.5 (96.0)	37.5	25	2.5	5	40	46	30-0.021	4.3		
01A□A2□A□	92.5 (133.0)	67.5 (108.0)	49.5	25	2.5	5	40	46	30-0.021	4.3		
C2A□A2□A□	104.5 (153.0)	79.5 (128.0)	61.5	25	2.5	5	40	46	30-0.021	4.3		

Model SGMXA-	S	MD	MW	МН	ML	Approx. Mass [kg] */
A5A□A2□A□	8-0.009	8.4	25	14.5	16	0.3 (0.6)
01A□A2□A□	8-0.009	8.4	25	14.5	16	0.4 (0.7)
C2A□A2□A□	8-0.009	8.4	25	14.5	16	0.5 (0.8)


^{*1} For models that have a batteryless absolute encoder (SGMXD-DDDW), L and LL are +7.5 mm greater and the approximate mass is 0.1 kg greater than the given value. Refer to the following section for the values for individual models.

Note:

- 1. The values in parentheses are for servomotors with holding brakes.
- 2. The values for a straight shaft end without key specification are given. Refer to the information given below for other shaft end specifications and option specifications.
 - (3) Shaft End Specification on page 91
 - (4) Option Specification on page 91

^{■ 4.4.7} Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXA-□□□W) on page 109

(2) Σ -7 Compatible Specification

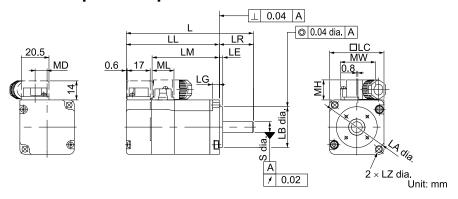


Model SGMXA-	MD	MW	МН	ML
A5A□A2□A2	8.8	25.8	14.7	16.1
01A□A2□A2	8.8	25.8	14.7	16.1
C2A□A2□A2	8.8	25.8	14.7	16.1

Note:


The dimensions for non-connector parts are identical to those for models with standard specifications.

(3) Shaft End Specification

• Straight with Key and Tap

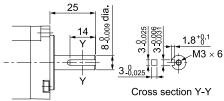


· With Two Flat Seats

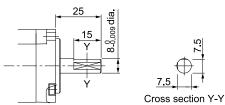


(4) Option Specification

• With Oil Seal

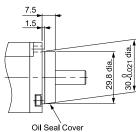


(5) Connector Mounting Dimensions

· Cable Installed on Load Side

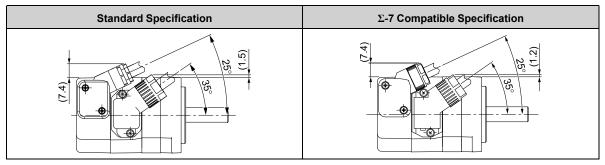


• Cable Installed on Non-load Side

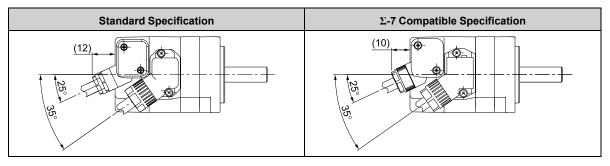

4.4.2 SGMXA-02 to -06

(1) Standard Specification

Information Models with the additional specification "3 Standard (Functional Safety-Compatible Encoder)" have the same dimensions as those indicated below.

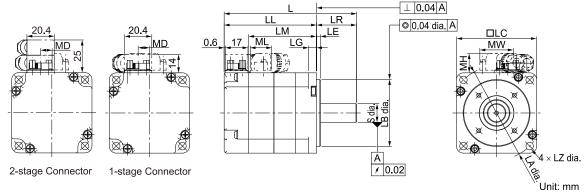

Model SGMXA-	l *1	*1	LM	Flange Dimensions							
	L *1	LL *1		LR	LE	LG	LC	LA	LB	LZ	
02A□A2□A□	98.5 (139.0)	68.5 (109.0)	50.5	30	3	6	60	70	50-0.025	5.5	
04A□A2□A□	115 (155.5)	85 (125.5)	67	30	3	6	60	70	50-0.025	5.5	
06A□A2□A□	137 (191.0)	107 (161.0)	89	30	3	6	60	70	50-0.025	5.5	

Model SGMXA-	S	MD	MW	МН	ML	Approx. Mass [kg] */
02A□A2□A□	14-0.011	8.4	25	14.5	16	0.8 (1.4)
04A□A2□A□	14-0.011	8.4	25	14.5	16	1.2 (1.8)
06A□A2□A□	14-0.011	8.4	25	14.5	16	1.6 (2.2)

^{*1} For models that have a batteryless absolute encoder (SGMXD-DDDW), L and LL are +7.5 mm greater and the approximate mass is 0.1 kg greater than the given value. Refer to the following section for the values for individual models.

4.4.7 Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXA-pp W) on page 109


Note:

- 1. The values in parentheses are for servomotors with holding brakes.
- 2. The values for a straight shaft end without key specification are given. Refer to the information given below for other shaft end specifications and option specifications.

(3) Shaft End Specification on page 94

(4) Option Specification on page 94

(2) Σ -7 Compatible Specification

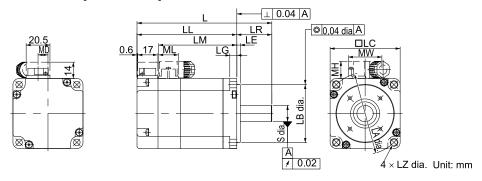


Model SGMXA-	MD	MW	МН	ML
02A□A2□A2	8.5	28.7	14.7	17.1
04A□A2□A2	8.5	28.7	14.7	17.1
06A□A2□A2	8.5	28.7	14.7	17.1

Note:


The dimensions for non-connector parts are identical to those for models with standard specifications.

(3) Shaft End Specification

• Straight with Key and Tap

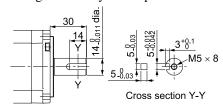


• With Two Flat Seats

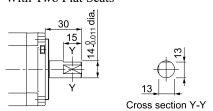


(4) Option Specification

• With Oil Seal

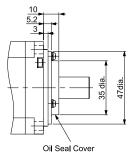


(5) Connector Mounting Dimensions

• Cable Installed on Load Side

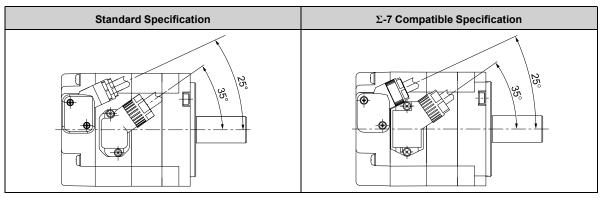


• Cable Installed on Non-load Side

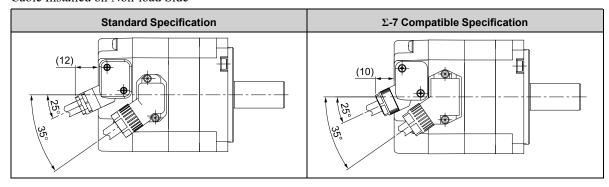

4.4.3 SGMXA-08 and -10

(1) Standard Specification

Information Models with the additional specification "3 Standard (Functional Safety-Compatible Encoder)" have the same dimensions as those indicated below.

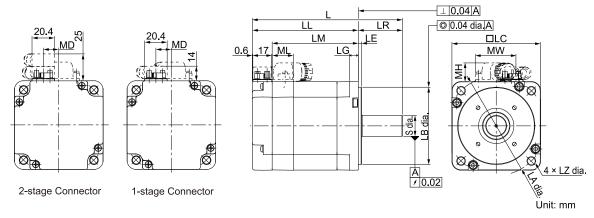

Model SGMXA-	*1			Flange Dimensions						
	L *1	LL *1	LM	LR	LE	LG	LC	LA	LB	LZ
08A□A2□A□	136 (183.0)	96 (143.0)	78	40	3	8	80	90	70-0.030	7
10A□A2□A□	161 (208.0)	121 (168.0)	103	40	3	8	80	90	70-0.030	7

Model SGMXA-	S	MD	MW	МН	ML	Approx. Mass */[kg]
08A□A2□A□	19-0.013	14	37	17	19.3	2.3 (2.9)
10A□A2□A□	19-0.013	14	37	17	19.3	3.1 (3.7)


^{*1} For models that have a batteryless absolute encoder (SGMXD-DDDW), L and LL are 6.5 mm greater and the approximate mass is 0.1 kg greater than the given value. Refer to the following section for the values for individual models.

4.4.7 Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXA-uuw) on page 109

Note:

- 1. The values in parentheses are for servomotors with holding brakes.
- The values for a straight shaft end without key specification are given. Refer to the information given below for other shaft end specifications and option specifications.
 - (3) Shaft End Specification on page 97
 - (4) Option Specification on page 97

(2) Σ -7 Compatible Specification

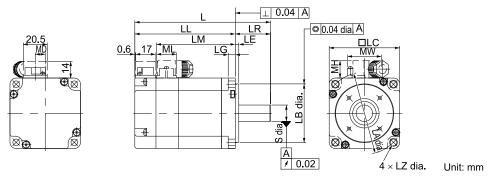


Model SGMXA-	MD	MW	МН	ML	
08A□A2□A2	14	38	17	19.3	
10A□A2□A2	14	38	17	19.3	


The dimensions for non-connector parts are identical to those for models with standard specifications.

(3) Shaft End Specification

• Straight with Key and Tap

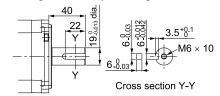


• With Two Flat Seats

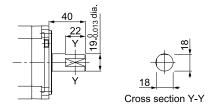


(4) Option Specification

• With Oil Seal

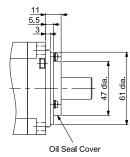


(5) Connector Mounting Dimensions

• Cable Installed on Load Side

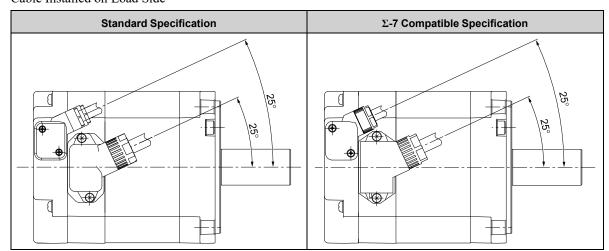

· Cable Installed on Non-load Side

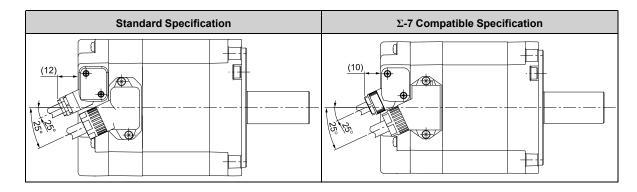


4.4.4 SGMXA-15 to -25

(1) Servomotors without Holding Brakes

(a) Standard Specification

Models with the additional specification "3 Standard (Functional Safety-Compatible Encoder)" have the same dimensions as those indicated below.

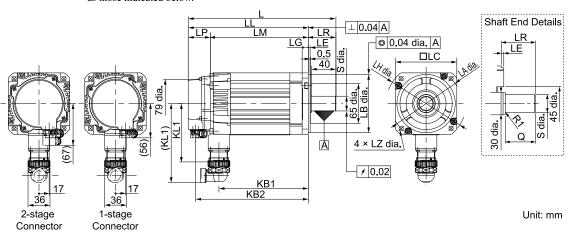

Model SGMXA-	L *1	LL */	LM	LP */	LR	KB1	KB2 */	KL1 (KL1 *2)
15A□A21A□	200	155	121	34	45	107	143	95 (129)
20A□A21A□	216	171	137	34	45	123	159	95 (129)
25A□A21A□	239	194	160	34	45	146	182	95 (129)

Model		Flange Dimensions								Approx. Mass
SGMXA-	LA	LB	LC	LE	LG	LH	LZ	S	Q	[kg]
15A□A21A□	115	95-0.035	100	3	10	130	7	24-0.013	40	4.6
20A□A21A□	115	95-0.035	100	3	10	130	7	24-0.013	40	5.4
25A□A21A□	115	95-0.035	100	3	10	130	7	24-0.013	40	6.8

^{*1} For models that have a batteryless absolute encoder (SGMXD-DDDW), L, LL, LP, and KB2 are 8 mm greater than the given value. Refer to the following section for the values for individual models.

^{4.4.7} Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXA-□□□W) on page 109


^{*2} These are the values when the flexible connectors are connected.

- 1. The dimensions are same for models with oil seals.
- 2. The values for a straight shaft end without key specification are given. Refer to the information given below for other shaft end specifications.

specifications.

(c) Shaft End Specification on page 99

(b) Σ -7 Compatible Specification

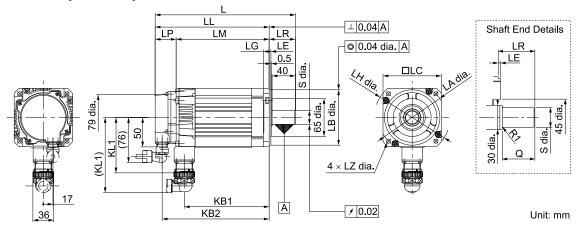


Note:

The difference from the model with standard specifications is the shape of the encoder cable connector.

The dimensions for non-connector parts are identical to those for models with standard specifications.


(c) Shaft End Specification

• Straight with Key and Tap

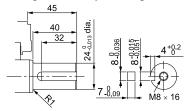

(d) Connector Specifications

• Encoder Connector (26-bit Encoder): Standard Specification The encoder cable is installed in the following direction.

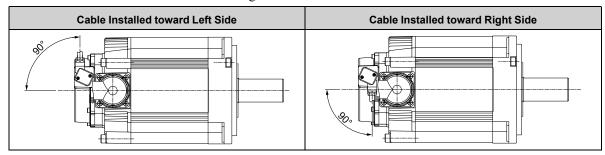

For details on selecting cables, refer to the following section and manual.

■ 8.2 Cables for the SGMXA Servomotors on page 235

Ω Σ-X-Series Peripheral Device Selection Manual (Manual No.: SIEP C710812 12)

• Encoder Connector (26-bit Encoder): Σ-7 Compatible Specification



1	PS	6 * <i>I</i>	BAT(+)
2	/PS	7	_
3	_	8	_
4	PG5V	9	PG0V
5	BAT(-)	10	FG (frame ground)

*1 A battery is required only for an absolute encoder.

Receptacle: CMV1-R10P

Applicable plug (not provided by Yaskawa)

Plug: CM10-AP10S-□-D (R1) (right-angle type), CM10-SP10S-□-D (R1) (straight), CMV1-AP10S-□□ (right-angle type), CMV1-SP10S-\(\text{\text{\text{G}}}\) (straight), CMV1S-AP10S-\(\text{\titt{\text{\titt}\text{\ti}\text{\texicr{\texi}\titt{\text{\ti}\text{\text{\text{\text{\text{\text{\text{\text{\texi}\text{\te

(
varies depending on the applicable cable size.)

Manufacturer: Fujikura Ltd.

• Servomotor Connector: Same for both Standard Specifications and Σ -7 Compatible Specifications

/		1	\
	D o	о A	$/\!/$
$\ $	c	٥	$/\!/$
//	<u>\</u>	B	/


A	Phase U	С	Phase W
В	Phase V	D	FG (frame ground)

Manufacturer: Japan Aviation Electronics Industry, Ltd.

Servomotors with Holding Brakes

(a) Standard Specification

Information Models with the additional specification "3 Standard (Functional Safety-Compatible Encoder)" have the same dimensions as those indicated below.

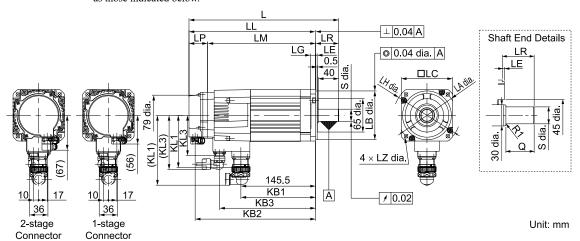

Model SGMXA-	L *1	LL *1	LM	LP *1	LR	KB1	KB2 */	KB3	KL1 (KL1 *2)	KL3 (KL3 *2)
15A□A2CA□	241	196	162	34	45	107	184	139	102 (136)	80 (105)
20A□A2CA□	257	212	178	34	45	123	200	155	102 (136)	80 (105)
25A□A2CA□	290	245	211	34	45	156	233	188	102 (136)	80 (105)

Model	Flange Dimensions								Shaft End Dimensions	
SGMXA-	LA	LB	LC	LE	LG	LH	LZ	S	Q	[kg]
15A□A2CA□	115	95-0.035	100	3	10	130	7	24-0.013	40	6.0
20A□A2CA□	115	95-0.035	100	3	10	130	7	24-0.013	40	6.8
25A□A2CA□	115	95-0.035	100	3	10	130	7	24-0.013	40	8.7

For models that have a batteryless absolute encoder (SGMXD-DDW), L, LL, LP, and KB2 are 8 mm greater than the given value. Refer to the following section for the values for individual models.

^{■ 4.4.7} Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXA-□□□W) on page 109


These are the values when the flexible connectors are connected.

- 1. The dimensions are same for models with oil seals.
- 2. The values for a straight shaft end without key specification are given. Refer to the information given below for other shaft end specifications.

specifications.

(c) Shaft End Specification on page 101

(b) Σ -7 Compatible Specification

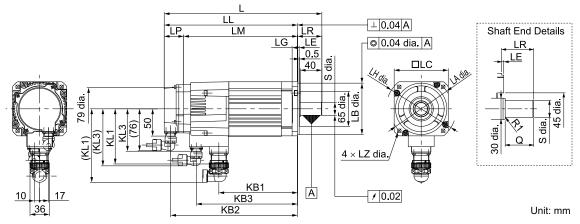


Note:

The difference from the model with standard specifications is the shape of the encoder cable connector.

The dimensions for non-connector parts are identical to those for models with standard specifications.


(c) Shaft End Specification

· Straight with Key and Tap

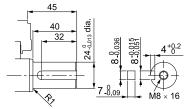

(d) Connector Specifications

• Encoder Connector (26-bit Encoder): Standard Specification The encoder cable is installed in the following direction.

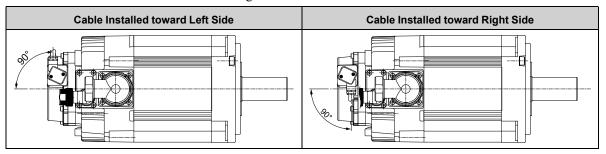

For details on selecting cables, refer to the following section and manual.

■ 8.2 Cables for the SGMXA Servomotors on page 235

Ω Σ-X-Series Peripheral Device Selection Manual (Manual No.: SIEP C710812 12)

• Encoder Connector (26-bit Encoder): Σ-7 Compatible Specification



	, , , , , , , , , , , , , , , , , , , ,		
1	PS	6 * <i>I</i>	BAT(+)
2	/PS	7	_
3	_	8	_
4	PG5V	9	PG0V
5	BAT(-)	10	FG (frame ground)

*1 A battery is required only for an absolute encoder.

Receptacle: CMV1-R10P

Applicable plug (not provided by Yaskawa)

Plug: CM10-AP10S-□-D (R1) (right-angle type), CM10-SP10S-□-D (R1) (straight), CMV1-AP10S-□□ (right-angle type), CMV1-SP10S-\(\text{\tint}\text{\tinte\text{\tin}\text{\text{\text{\text{\text{\text{\text{\text{\text{\tinit}\text{\tinit}}}\\text{\texi\tinc{\tinchi}\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\text{\tex{

(□ varies depending on the applicable cable size.) Manufacturer: Fujikura Ltd.

Servomotor Connector: Same for both Standard Specifications and Σ-7 Compatible Specifications



A	Phase U	C	Phase W
В	Phase V	D	FG (frame ground)

Manufacturer: Japan Aviation Electronics Industry, Ltd.

• Brake Connector: Same for both Standard Specifications and Σ-7 Compatible Specifications



1	Brake terminal
2	Brake terminal

Note:

There is no voltage polarity for the brake terminals.

Receptacle: CMV1-R2P-D

Applicable plug (not provided by Yaskawa)

Plug: CM10-AP2S- \square -D (right-angle type), CM10-SP2S- \square -D (straight), CMV1-AP2S- \square -D (right-angle type), CMV1-SP2S- \square -D (straight), CMV1S-AP2S-□-D (right-angle type), CMV1S-SP2S-□-D (straight)

(□ varies depending on the applicable cable size.)

Manufacturer: Fujikura Ltd.

SGMXA-30 to -50 4.4.5


Connector

Connector

Servomotors without Holding Brakes

(a) Standard Specification

Information Models with the additional specification "3 Standard (Functional Safety-Compatible Encoder)" have the same dimensions as those indicated below.

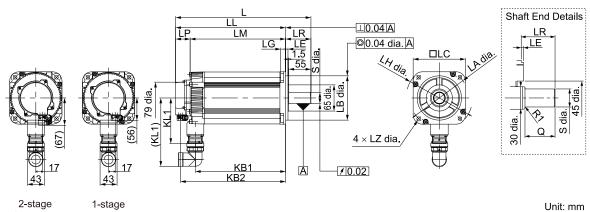

Model SGMXA-	L * <i>1</i>	LL *1	LM	LP */	LR	KB1	KB2 */	KL1 (KL1 *2)
30A□A21A□	255	192	158	34	63	145	180	114 (170)
40A□A21A□	294	231	197	34	63	184	219	114 (170)
50A□A21A□	334	271	237	34	63	224	259	114 (170)


Model									Shaft End Dimensions	
SGMXA-	LA	LB	LC	LE	LG	LH	LZ	S	ø	[kg]
30A□A21A□	145	110-0.035	130	6	12	165	9	28-0.013	55	10.5
40A□A21A□	145	110-0.035	130	6	12	165	9	28-0.013	55	13.5
50A□A21A□	145	110-0.035	130	6	12	165	9	28-0.013	55	16.5

^{*1} For models that have a batteryless absolute encoder (SGMX□-□□□W), L, LL, LP, and KB2 are 8 mm greater than the given value. Refer to the following section for the values for individual models.

- 1. The dimensions are same for models with oil seals.
- 2. The values for a straight shaft end without key specification are given. Refer to the information given below for other shaft end specifications.

(c) Shaft End Specification on page 103

(b) Σ -7 Compatible Specification

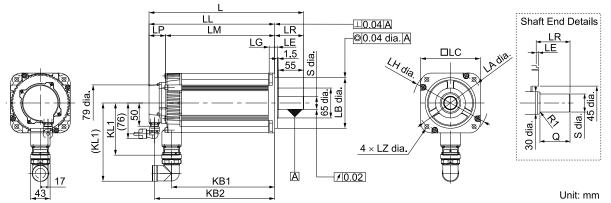


Note:

The difference from the model with standard specifications is the shape of the encoder cable connector.

The dimensions for non-connector parts are identical to those for models with standard specifications.

(c) Shaft End Specification

• Straight with Key and Tap

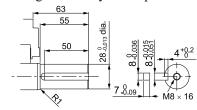


(d) Connector Specifications

• Encoder Connector (26-bit Encoder): Standard Specification The encoder cable is installed in the following direction.

^{■ 4.4.7} Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXA-□□□W) on page 109

^{*2} These are reference dimensions when the JL10 connector (flexible type) is connected.

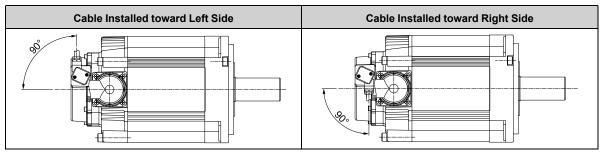

For details on selecting cables, refer to the following section and manual.

■ 8.2 Cables for the SGMXA Servomotors on page 235

Σ-X-Series Peripheral Device Selection Manual (Manual No.: SIEP C710812 12)

• Encoder Connector (26-bit Encoder): Σ-7 Compatible Specification



1	PS	6 * <i>I</i>	BAT(+)
2	/PS	7	-
3	_	8	-
4	PG5V	9	PG0V
5	BAT(-)	10	FG (frame ground)

*1 A battery is required only for an absolute encoder.

Receptacle: CMV1-R10P

Applicable plug (not provided by Yaskawa)

Plug: CM10-AP10S-□-D (R1) (right-angle type), CM10-SP10S-□-D (R1) (straight), CMV1-AP10S-□□ (right-angle type), CMV1-

SP10S
(straight), CMV1S-AP10S
(right-angle type), CMV1S-SP10S
(straight)

(\square varies depending on the applicable cable size.)

Manufacturer: Fujikura Ltd.

• Servomotor Connector: Same for both Standard Specifications and Σ-7 Compatible Specifications




A	Phase U	C	Phase W
В	Phase V	D	FG (frame ground)

Manufacturer: Japan Aviation Electronics Industry, Ltd.

(2) Servomotors with Holding Brakes

(a) Standard Specification

Information Models with the additional specification "3 Standard (Functional Safety-Compatible Encoder)" have the same dimensions

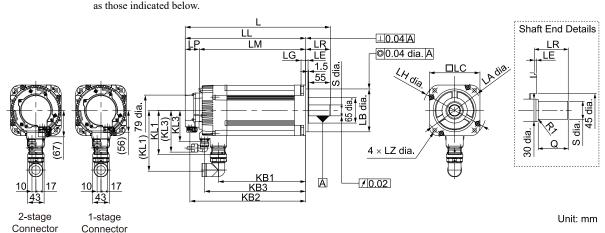

Model SGMXA-	L * <i>1</i>	LL */	LM	LP */	LR	KB1	KB2 */	КВ3	KL1 (KL1 *2)	KL3 (KL3 *2)
30А□А2СА□	291	228	194	34	63	145	216	181	114 (170)	81 (106)
40A□A2CA□	330	267	233	34	63	184	255	220	114 (170)	81 (106)
50A□A2CA□	370	307	273	34	63	224	295	260	114 (170)	81 (106)


Model									Shaft End Dimensions	
SGMXA-	LA	LB	LC	LE	LG	LH	LZ	s	ø	[kg]
30A□A2CA□	145	110-0.035	130	6	12	165	9	28-0.013	55	13
40A□A2CA□	145	110-0.035	130	6	12	165	9	28-0.013	55	16
50A□A2CA□	145	110-0.035	130	6	12	165	9	28-0.013	55	19

^{*1} For models that have a batteryless absolute encoder (SGMX□-□□□W), L, LL, LP, and KB2 are 8 mm greater than the given value. Refer to the following section for the values for individual models.

- 1. The dimensions are same for models with oil seals.
- 2. The values for a straight shaft end without key specification are given. Refer to the information given below for other shaft end specifications.

(c) Shaft End Specification on page 105

(b) Σ -7 Compatible Specification

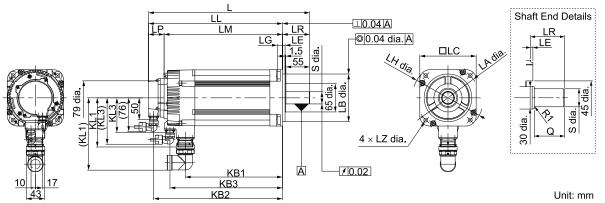


Note:

The difference from the model with standard specifications is the shape of the encoder cable connector.

The dimensions for non-connector parts are identical to those for models with standard specifications.

(c) Shaft End Specification

• Straight with Key and Tap

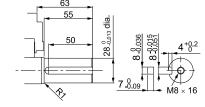


(d) Connector Specifications

• Encoder Connector (26-bit Encoder): Standard Specification The encoder cable is installed in the following direction.

^{■ 4.4.7} Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXA-□□□W) on page 109

^{*2} These are reference dimensions when the JL10 connector (flexible type) is connected.

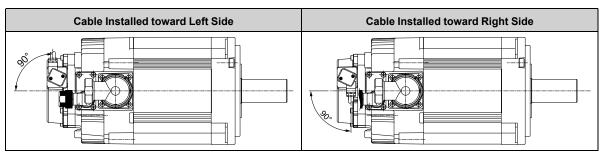

For details on selecting cables, refer to the following section and manual.

■ 8.2 Cables for the SGMXA Servomotors on page 235

Ω Σ-X-Series Peripheral Device Selection Manual (Manual No.: SIEP C710812 12)

Encoder Connector (26-bit Encoder): Σ-7 Compatible Specification



1	PS	6 * <i>I</i>	BAT(+)
2	/PS	7	_
3	_	8	_
4	PG5V	9	PG0V
5	BAT(-)	10	FG (frame ground)

A battery is required only for an absolute encoder.

Receptacle: CMV1-R10P

Applicable plug (not provided by Yaskawa)

Plug: CM10-AP10S-□-D (R1) (right-angle type), CM10-SP10S-□-D (R1) (straight), CMV1-AP10S-□□ (right-angle type), CMV1-

SP10S
(straight), CMV1S-AP10S
(right-angle type), CMV1S-SP10S
(straight)

(

varies depending on the applicable cable size.)

Manufacturer: Fujikura Ltd.

Servomotor Connector: Same for both Standard Specifications and Σ-7 Compatible Specifications



A	Phase U	C	Phase W
В	Phase V	D	FG (frame ground)

Manufacturer: Japan Aviation Electronics Industry, Ltd.

Brake Connector: Same for both Standard Specifications and Σ-7 Compatible Specifications

		\searrow
H	o 1	\mathbb{N}
7	o 2	
10	2	97

1	Brake terminal
2	Brake terminal

Note:

There is no voltage polarity for the brake terminals.

Receptacle: CMV1-R2P-D

Applicable plug (not provided by Yaskawa)

 $Plug: CM10-AP2S- \\ \square-D \ (right-angle \ type), CM10-SP2S- \\ \square-D \ (straight), CMV1-AP2S- \\ \square-D \ (right-angle \ type), CMV1-SP2S- \\ \square-D \ (straight), CMV1-AP2S- \\ \square-D \ (right-angle \ type), CMV1-SP2S- \\ \square-D \ (right-angle \ type), CMV1-SP2$ CMV1S-AP2S-□-D (right-angle type), CMV1S-SP2S-□-D (straight)


(□ varies depending on the applicable cable size.)

Manufacturer: Fujikura Ltd.

SGMXA-70 (Without Holding Brakes) 4.4.6

Standard Specification (1)

Models with the additional specification "3 Standard (Functional Safety-Compatible Encoder)" have the same dimensions as those indicated below.

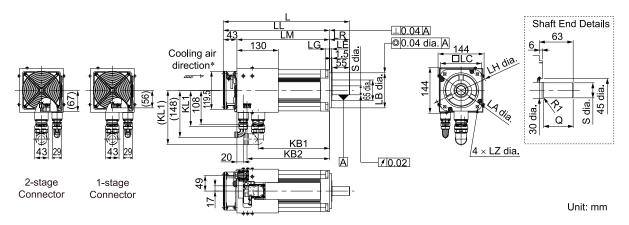

Mount the servomotor 70 mm or more from walls, machines, and other objects to ensure sufficient cooling air.

Model SGMXA-	L	LL	LM	LR	KB1	KB2 */	KL1 (KL1)
70A□A21A□	397	334	291	63	224	259	114 (170)

Model Flange Dimensions						Shaft End Dimensions		Approx. Mass		
SGMXA-	LA	LB	LC	LE	LG	LH	LZ	S	Q	[kg]
70A□A21A□	145	110-0.035	130	6	12	165	9	28-0.013	55	18.5

^{*1} For models that have a batteryless absolute encoder (SGMX\(\sigma\)-\(\sigma\)\(\pi\) W), KB2 is 8 mm greater than the given value. Refer to the following section for the values for individual models.


■ 4.4.7 Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXA-□□□W) on page 109

Note

- 1. The dimensions are same for models with oil seals.
- 2. The values for a straight shaft end without key specification are given. Refer to the information given below for other shaft end specifications.

(4) Shaft End Specification on page 108

(2) Σ -7 Compatible Specification

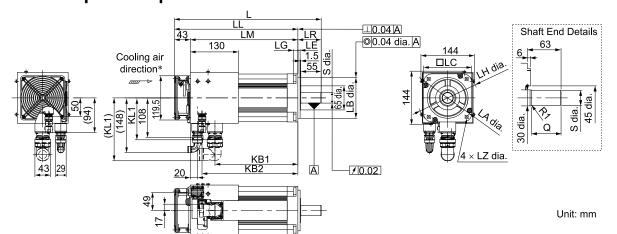

Note

- 1. Mount the servomotor 70 mm or more from walls, machines, and other objects to ensure sufficient cooling air.
- The difference from the model with standard specifications is the shape of the encoder cable connector. The dimensions for non-connector parts are identical to those for models with standard specifications.


(3) Cooling Fan Specifications

- Single-phase 220 VAC
- 50/60 Hz

- 17/15 W
- 0.11/0.09 A


(4) Shaft End Specification

· Straight with Key and Tap

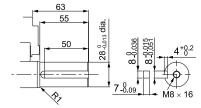

Connector Specifications

• Encoder Connector (26-bit Encoder): Standard Specification The encoder cable is installed in the following direction.

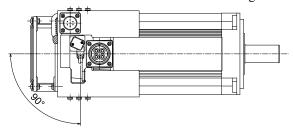

For details on selecting cables, refer to the following section and manual.

■ 8.2 Cables for the SGMXA Servomotors on page 235

Σ-X-Series Peripheral Device Selection Manual (Manual No.: SIEP C710812 12)

• Encoder Connector (26-bit Encoder): Σ-7 Compatible Specification



1	PS	6 *1	BAT(+)
2	/PS	7	-
3	_	8	_
4	PG5V	9	PG0V
5	BAT(-)	10	FG (frame ground)

A battery is required only for an absolute encoder.

Receptacle: CMV1-R10P

Applicable plug (not provided by Yaskawa) Plug: CM10-AP10S-□-D (R1) (right-angle type), CM10-SP10S-□-D (R1) (straight), CMV1-AP10S-□□ (right-angle type), CMV1-SP10S-00 (straight), CMV1S-AP10S-00 (right-angle type), CMV1S-SP10S-00 (straight)

(□ varies depending on the applicable cable size.)

Manufacturer: Fujikura Ltd.

• Servomotor Connector: Same for both Standard Specifications and Σ -7 Compatible Specifications

//			\
	0 0	o A	$/\!/$
\mathbb{I}	0	о В,	$/\!/$
//			/

A	Phase U	C	Phase W
В	Phase V	D	FG (frame ground)

Manufacturer: Japan Aviation Electronics Industry, Ltd.

Fan Connector



A	Fan motor	D	_
В	Fan motor	Е	_
C	-	F	FG (frame ground)

Receptacle: MS3102A14S-6P

Applicable plug (not provided by Yaskawa)

Plug: MS3108B14S-6S Cable clamp: MS3057-6A Manufacturer: Japan Aviation Electronics Industry, Ltd.

Note

The motor connector (receptacle) complies with RoHS Directives.

Contact each connector manufacturer for customer-prepared cable connectors that comply with RoHS Directives.

4.4.7 Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXA-□□□W)

Model SGMXA-	L	LL	LP	KB2	Approx. Mass [kg]
A5AWA	88 (128.5)	63 (103.5)	-	-	0.4 (0.7)
01AWA	100 (140.5)	75 (115.5)	_	_	0.5 (0.8)
C2AWA	112 (160.5)	87 (135.5)	_	_	0.6 (0.9)
02AWA	106 (146.5)	76 (116.5)	_	-	0.9 (1.5)
04AWA	122.5 (163.0)	92.5 (133.0)	_	_	1.3 (1.9)
06AWA	144.5 (198.5)	114.5 (168.5)	_	_	1.7 (2.3)
08AWA	142.5 (189.5)	102.5 (149.5)	_	_	2.4 (3.0)
10AWA	167.5 (214.5)	127.5 (174.5)	-	-	3.2 (3.8)
15AWA====	208 (249)	163 (204)	42 (42)	151 (192)	4.6 (6.0)
20AWA	224 (265)	179 (220)	42 (42)	167 (208)	5.4 (6.8)
25AWA	247 (298)	202 (253)	42 (42)	190 (241)	6.8 (8.7)
30AWA	263 (299)	200 (236)	42 (42)	188 (224)	10.5 (13)
40AWA	302 (338)	239 (275)	42 (42)	227 (263)	13.5 (16)
50AWA	342 (378)	279 (315)	42 (42)	267 (303)	16.5 (19)
70AWA	397	334	-	269	18.5

Notes

The values in parentheses are for servomotors with holding brakes.


External Dimensions (400 V Specification) 4.5

4.5.1 **SGMXA-15 to -25**

Servomotors without Holding Brakes

Standard Specification

Information Models with the additional specification "3 Standard (Functional Safety-Compatible Encoder)" have the same dimensions

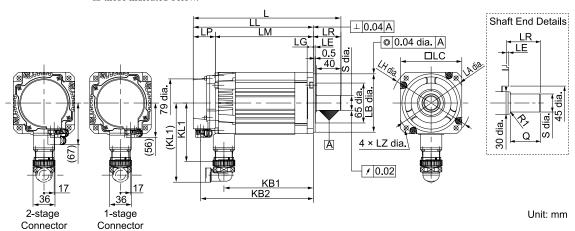

Model SGMXA-	L *1	LL *1	LM	LP */	LR	KB1	KB2 */	KL1 (KL1 *2)
15DaAa1aa	200	155	121	34	45	107	143	95 (129)
20DaAa1aa	216	171	137	34	45	123	159	95 (129)
25DaAa1aa	239	194	160	34	45	146	182	95 (129)

Model			Flan	ge Dimens	sions			Shaft End Dimensions		Approx. Mass
SGMXA-	LA	LB	LC	LE	LG	LH	LZ	S	ø	[kg]
15D¤A¤1¤¤	115	95-0.035	100	3	10	130	7	24-0.013	40	4.6
20D□A□1□□	115	95-0.035	100	3	10	130	7	24-0.013	40	5.4
25DaAa1aa	115	95-0.035	100	3	10	130	7	24-0.013	40	6.8

For models that have a batteryless absolute encoder (SGMX \square - \square \square W), L, LL, LP, and KB2 are 8 mm greater than the given value. Refer to the following section for the values for individual models.


- 1. The dimensions are same for models with oil seals.
- 2. The values for a straight shaft end without key specification are given. Refer to the information given below for other shaft end specifications.

 (c) Shaft End Specification on page 111

^{■ 4.5.3} Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXA-□□□W) on page 118

^{*2} These are the values when the flexible connectors are connected.

(b) Σ -V Compatible Specification

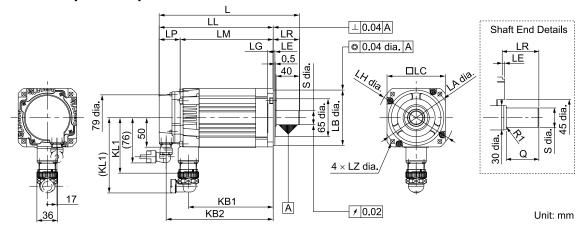


Note:

The difference from the model with standard specifications is the shape of the encoder cable connector.

The dimensions for non-connector parts are identical to those for models with standard specifications.


(c) Shaft End Specification

• Straight with Key and Tap

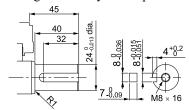

(d) Connector Specifications

• Encoder Connector (26-bit Encoder): Standard Specification The encoder cable is installed in the following direction.

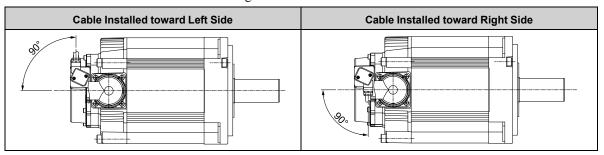

For details on selecting cables, refer to the following section and manual.

■ 8.2 Cables for the SGMXA Servomotors on page 235

Ω Σ-X-Series Peripheral Device Selection Manual (Manual No.: SIEP C710812 12)

• Encoder Connector (26-bit Encoder): Σ-V Compatible Specification



1	PS	6 * <i>1</i>	BAT(+)
2	/PS	7	-
3	_	8	-
4	PG5V	9	PG0V
5	BAT(-)	10	FG (frame ground)

*1 A battery is required only for an absolute encoder. Receptacle: CMV1-R10P

Applicable plug (not provided by Yaskawa)

Plug: CM10-AP10S-□-D (R1) (right-angle type), CM10-SP10S-□-D (R1) (straight), CMV1-AP10S-□□ (right-angle type), CMV1-SP10S-□□ (straight), CMV1S-AP10S-□□ (right-angle type), CMV1S-SP10S-□□ (straight)

(□ varies depending on the applicable cable size.)

Manufacturer: Fujikura Ltd.

• Servomotor Connector: Same for both Standard Specifications and Σ-V Compatible Specifications




A	Phase U	С	Phase W
В	Phase V	D	FG (frame ground)

Manufacturer: Japan Aviation Electronics Industry, Ltd.

Servomotors with Holding Brakes

(a) Standard Specification

Models with the additional specification "3 Standard (Functional Safety-Compatible Encoder)" have the same dimensions as those indicated below.

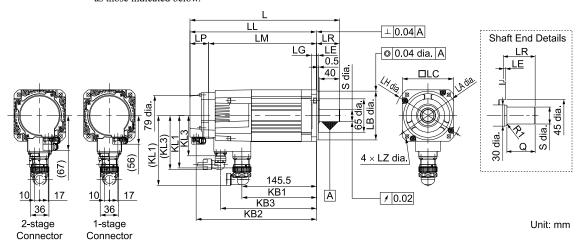

Model SGMXA-	L *1	LL *1	LM	LP */	LR	KB1	KB2 */	KB3	KL1 (KL1 *2)	KL3 (KL3 *2)
15DaAa1aa	241	196	162	34	45	107	184	139	102 (136)	80 (105)
20DaAa1aa	257	212	178	34	45	123	200	155	102 (136)	80 (105)
25DaAa1aa	290	245	211	34	45	156	233	188	102 (136)	80 (105)

Model SGMXA-				Shaft End Dimensions		Approx. Mass				
	LA	LB	LC	LE	LG	LH	LZ	S	Q	[kg]
15D0A0100	115	95-0.035	100	3	10	130	7	24-0.013	40	6.0
20D□A□1□□	115	95-0.035	100	3	10	130	7	24-0.013	40	6.8
25DaAa1aa	115	95-0.035	100	3	10	130	7	24-0.013	40	8.7

For models that have a batteryless absolute encoder (SGMX \square - \square DW), L, LL, LP, and KB2 are 8 mm greater than the given value. Refer to the following section for the values for individual models.


- 1. The dimensions are same for models with oil seals.
- The values for a straight shaft end without key specification are given. Refer to the information given below for other shaft end specifications.

 (c) Shaft End Specification on page 113

^{■ 4.5.3} Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXA-□□□W) on page 118

^{*2} These are the values when the flexible connectors are connected.

(b) Σ -V Compatible Specification

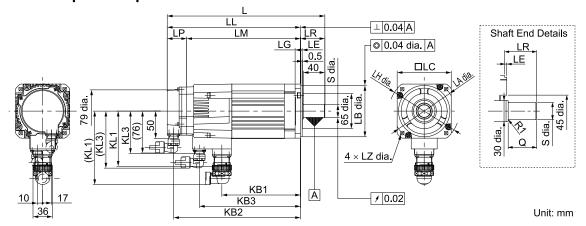


Note:

The difference from the model with standard specifications is the shape of the encoder cable connector.

The dimensions for non-connector parts are identical to those for models with standard specifications.


(c) Shaft End Specification

• Straight with Key and Tap

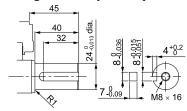

(d) Connector Specifications

• Encoder Connector (26-bit Encoder): Standard Specification The encoder cable is installed in the following direction.

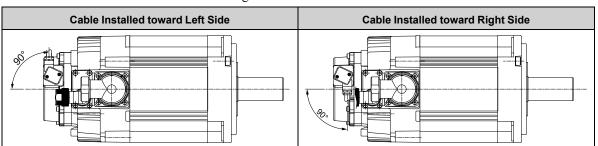

For details on selecting cables, refer to the following section and manual.

8.2 Cables for the SGMXA Servomotors on page 235

Σ-X-Series Peripheral Device Selection Manual (Manual No.: SIEP C710812 12)

• Encoder Connector (26-bit Encoder): Σ-V Compatible Specification



1	PS	6 * I	BAT(+)
2	/PS	7	_
3	_	8	_
4	PG5V	9	PG0V
5	BAT(-)	10	FG (frame ground)

*1 A battery is required only for an absolute encoder.

Receptacle: CMV1-R10P

Applicable plug (not provided by Yaskawa)

Plug: CM10-AP10S- \square -D (R1) (right-angle type), CM10-SP10S- \square -D (R1) (straight), CMV1-AP10S- \square (right-angle type), CMV1-SP10S- \square (straight), CMV1S-AP10S- \square (right-angle type), CMV1S-SP10S- \square (straight)

 $(\hfill\Box$ varies depending on the applicable cable size.)

Manufacturer: Fujikura Ltd.

• Servomotor Connector: Same for both Standard Specifications and Σ -V Compatible Specifications



A	Phase U	С	Phase W
В	Phase V	D	FG (frame ground)

Manufacturer: Japan Aviation Electronics Industry, Ltd.

• Brake Connector: Same for both Standard Specifications and Σ -V Compatible Specifications



1	Brake terminal
2	Brake terminal

Note:

There is no voltage polarity for the brake terminals.

Receptacle: CMV1-R2P-D

Applicable plug (not provided by Yaskawa)

(□ varies depending on the applicable cable size.)


Manufacturer: Fujikura Ltd.

4.5.2 SGMXA-30 to -50

(1) Servomotors without Holding Brakes

(a) Standard Specification

Models with the additional specification "3 Standard (Functional Safety-Compatible Encoder)" have the same dimensions as those indicated below.

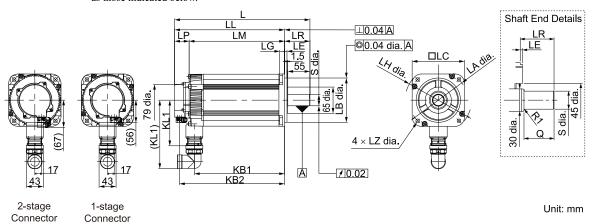

Model SGMXA-	L *1	LL */	LM	LP */	LR	KB1	KB2 */	KL1 (KL1 *2)
30DaAa1aa	255	192	158	34	63	145	180	114 (170)
40DaAa1aa	294	231	197	34	63	184	219	114 (170)
50DaAa1aa	334	271	237	34	63	224	259	114 (170)

Model				Shaft End Dimensions		Approx. Mass				
SGMXA-	LA	LB	LC	LE	LG	LH	LZ	S	Q	[kg]
30D□A□1□□	145	110-0.035	130	6	12	165	9	28-0.013	55	10.5
40D□A□1□□	145	110-0.035	130	6	12	165	9	28-0.013	55	13.5
50D0A0100	145	110-0.035	130	6	12	165	9	28-0.013	55	16.5

^{*1} For models that have a batteryless absolute encoder (SGMX□-□□□W), L, LL, LP, and KB2 are 8 mm greater than the given value. Refer to the following section for the values for individual models.

■ 4.5.3 Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXA-□□□W) on page 118


*2 These are reference dimensions when the JL10 connector (flexible type) is connected.

Note:

- 1. The dimensions are same for models with oil seals.
- 2. The values for a straight shaft end without key specification are given. Refer to the information given below for other shaft end specifications.

(c) Shaft End Specification on page 115

(b) Σ -V Compatible Specification

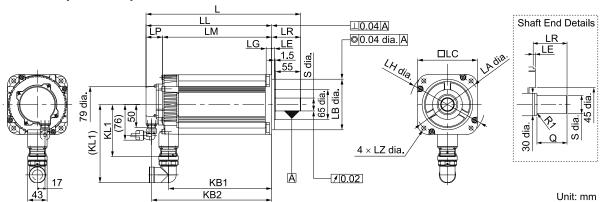


Note:

The difference from the model with standard specifications is the shape of the encoder cable connector.

The dimensions for non-connector parts are identical to those for models with standard specifications.


(c) Shaft End Specification

• Straight with Key and Tap

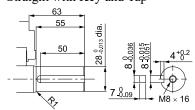

(d) Connector Specifications

• Encoder Connector (26-bit Encoder): Standard Specification The encoder cable is installed in the following direction.

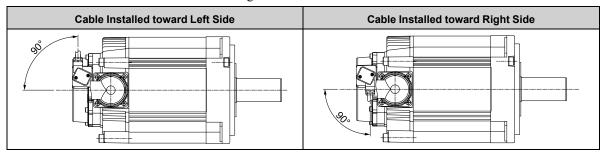

For details on selecting cables, refer to the following section and manual.

■ 8.2 Cables for the SGMXA Servomotors on page 235

Σ-X-Series Peripheral Device Selection Manual (Manual No.: SIEP C710812 12)

• Encoder Connector (26-bit Encoder): Σ-V Compatible Specification



1	PS	6 * <i>I</i>	BAT(+)
2	/PS	7	-
3	_	8	_
4	PG5V	9	PG0V
5	BAT(-)	10	FG (frame ground)

*1 A battery is required only for an absolute encoder.

Receptacle: CMV1-R10P

Applicable plug (not provided by Yaskawa)

Plug: CM10-AP10S-\(\text{\pi}\)-D (R1) (right-angle type), CM10-SP10S-\(\text{\pi}\)-D (R1) (straight), CMV1-AP10S-\(\text{\pi}\) (right-angle type), CMV1-SP10S-\(\text{\pi}\) (straight), CMV1S-AP10S-\(\text{\pi}\) (right-angle type), CMV1S-SP10S-\(\text{\pi}\) (straight)

(□ varies depending on the applicable cable size.)

Manufacturer: Fujikura Ltd.

• Servomotor Connector: Same for both Standard Specifications and Σ -V Compatible Specifications




A	Phase U	C	Phase W
В	Phase V	D	FG (frame ground)

Manufacturer: Japan Aviation Electronics Industry, Ltd.

(2) Servomotors with Holding Brakes

(a) Standard Specification

Information Models with the additional specification "3 Standard (Functional Safety-Compatible Encoder)" have the same dimensions as those indicated below.

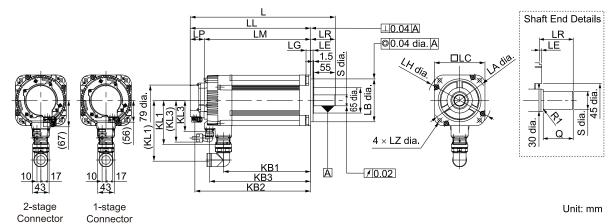

Model SGMXA-	L *1	LL *1	LM	LP *1	LR	KB1	KB2 */	KB3	KL1 (KL1 *2)	KL3 (KL3 *2)
30D□A□C□□	291	228	194	34	63	145	216	181	114 (170)	81 (106)
40DnAnCnn	330	267	233	34	63	184	255	220	114 (170)	81 (106)
50DnAnCnn	370	307	273	34	63	224	295	260	114 (170)	81 (106)

Model			Flan	ge Dimens	sions			Shaf Dimer	Approx.	
SGMXA-	LA	LB	LC	LE	LG	LH	LZ	S	Q	[kg]
30D□A□C□□	145	110-0.035	130	6	12	165	9	28-0.013	55	13
40D□A□C□□	145	110-0.035	130	6	12	165	9	28-0.013	55	16
50D□A□C□□	145	110-0.035	130	6	12	165	9	28-0.013	55	19

^{*1} For models that have a batteryless absolute encoder (SGMX□-□□□W), L, LL, LP, and KB2 are 8 mm greater than the given value. Refer to the following section for the values for individual models.

■ 4.5.3 Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXA-□□□W) on page 118


*2 These are reference dimensions when the JL10 connector (flexible type) is connected.

Note:

- 1. The dimensions are same for models with oil seals.
- 2. The values for a straight shaft end without key specification are given. Refer to the information given below for other shaft end specifications.

(c) Shaft End Specification on page 117

(b) Σ -V Compatible Specification

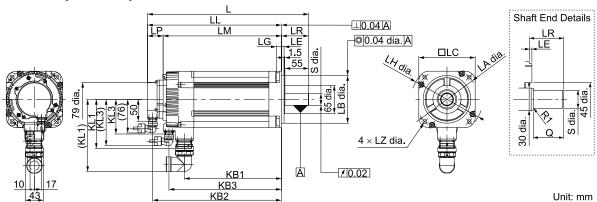


Note:

The difference from the model with standard specifications is the shape of the encoder cable connector.

The dimensions for non-connector parts are identical to those for models with standard specifications.


(c) Shaft End Specification

• Straight with Key and Tap

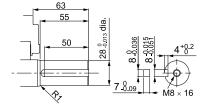

(d) Connector Specifications

• Encoder Connector (26-bit Encoder): Standard Specification The encoder cable is installed in the following direction.

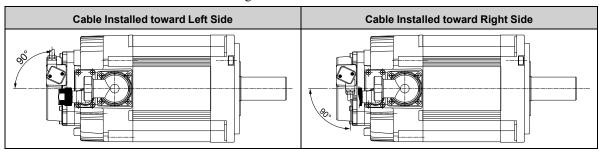

For details on selecting cables, refer to the following section and manual.

■ 8.2 Cables for the SGMXA Servomotors on page 235

Σ-X-Series Peripheral Device Selection Manual (Manual No.: SIEP C710812 12)

• Encoder Connector (26-bit Encoder): Σ-V Compatible Specification



1	PS	6 * <i>I</i>	BAT(+)
2	/PS	7	-
3	_	8	_
4	PG5V	9	PG0V
5	BAT(-)	10	FG (frame ground)

*1 A battery is required only for an absolute encoder.

Receptacle: CMV1-R10P

Applicable plug (not provided by Yaskawa)

Plug: CM10-AP10S-\(\pi\)-D (R1) (right-angle type), CM10-SP10S-\(\pi\)-D (R1) (straight), CMV1-AP10S-\(\pi\)-\(\pi\) (right-angle type), CMV1-SP10S-\(\pi\)-\(\pi\) (straight), CMV1S-AP10S-\(\pi\)-\(\pi\) (right-angle type), CMV1S-SP10S-\(\pi\)-\(\pi\) (straight)

(□ varies depending on the applicable cable size.)

Manufacturer: Fujikura Ltd.

Servomotor Connector: Same for both Standard Specifications and Σ-V Compatible Specifications



A	Phase U	C	Phase W
В	Phase V	D	FG (frame ground)

Manufacturer: Japan Aviation Electronics Industry, Ltd.

Brake Connector: Same for both Standard Specifications and Σ-V Compatible Specifications



1	Brake terminal
2	Brake terminal

Note

There is no voltage polarity for the brake terminals.

Receptacle: CMV1-R2P-D

Applicable plug (not provided by Yaskawa)

 $(\hfill\Box$ varies depending on the applicable cable size.)

Manufacturer: Fujikura Ltd.

4.5.3 Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXA-□□□W)

Model SGMXA-	L	LL	LP	KB2	Approx. Mass [kg]
15DWA====	208 (249)	163 (204)	42 (42)	151 (192)	4.6 (6.0)
20DWA	224 (265)	179 (220)	42 (42)	167 (208)	5.4 (6.8)
25DWA	247 (298)	202 (253)	42 (42)	190 (241)	6.8 (8.7)
30DWA	263 (299)	200 (236)	42 (42)	188 (224)	10.5 (13)
40DWA	302 (338)	239 (275)	42 (42)	227 (263)	13.5 (16)
50DWA	342 (378)	279 (315)	42 (42)	267 (303)	16.5 (19)

Note:

The values in parentheses are for servomotors with holding brakes.

Specifications, Ratings, and External Dimensions of SGMXP Servomotors

Describes how to interpret the model numbers of SGMXP servomotors and gives their specifications, ratings, and external dimensions.

5.1	Mode	l Designations	120			
5.2	Speci	fications and Ratings (200 V Specification)	121			
	5.2.1	Specification	121			
	5.2.2	Servomotor Ratings	122			
	5.2.3	Torque-Rotation Speed Characteristics	124			
	5.2.4	Servomotor Overload Protection Characteristics	124			
	5.2.5	Allowable Load Moment of Inertia	125			
	5.2.6	Derating Rates	126			
5.3	Specifications and Ratings (400 V Specification)					
	5.3.1	Specification	127			
	5.3.2	Servomotor Ratings	128			
	5.3.3	Torque-Rotation Speed Characteristics	130			
	5.3.4	Servomotor Overload Protection Characteristics	130			
	5.3.5	Allowable Load Moment of Inertia	131			
	5.3.6	Derating Rates	132			
5.4	External Dimensions (200 V Specification)					
	5.4.1	SGMXP-01 to -04	133			
	5.4.2	SGMXP-08, -15	135			
	5.4.3	Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXP-□□□W)	137			
5.5	External Dimensions (400 V Specification)					
	5.5.1	SGMXP-02, -04	138			
	5.5.2	SGMXP-08, -15	141			
	5.5.3	Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXP-□□□W)	143			

Model Designations 5.1

SGMXP -

 Σ -X-Series Servomotor SGMXP model



1st+2nd digits Rated Output

		Power Supply Voltage				
Code	Specification	200 VAC	400 VAC			
01	100 W	0	-			
02	200 W	0	0			
04	400 W	0	0			
08	750 W	0	0			
15	1.5 kW	0	0			

4th digit Serial Encoder

Code	Specification
H*1	26-bit compact batteryless absolute encoder
U	26-bit absolute encoder
W	26-bit batteryless absolute encoder
	_

7th digit Options

Code	Specification
1	Without options
С	With holding brake (24 VDC)
E	With oil seal With holding brake (24 VDC)
S	With oil seal

3rd digit Power Supply Voltage

Code	Specification
Α	200 VAC
D	400 VAC

6th digit Shaft End

Code	Specification
2	Straight without key
6	Straight with key and tap

5th digit Design Revision Order

8th digit Destination

9th digit Ancillary Specification

Code	Specification
1	Standard
2 *2	Compatible
3* ³	Standard (Functional Safety Compatible Encoder)

- This encoder is equipped with an internal rechargeable battery, and it holds multi-turn position data without using an external battery. Refer to the following section for details on the battery.
 - 3 1.5 26-Bit Compact Batteryless Absolute Encoder on page 44
- 200 VAC: Σ-7 compatible specification: Main circuit cables and encoder cables for the Σ-7-series SGM7P servomotors can be used. 400 VAC: Σ-V compatible specification: Main circuit cables and encoder cables for the Σ-V-series SGMEV servomotors can be used.
- *3 The following models are not supported. Serial encoder specification: 26-bit compact batteryless absolute encoder Contact your Yaskawa representative beforehand if you require a model with support for functional safety.


5.2 Specifications and Ratings (200 V Specification)

5.2.1 Specification

	Voltage			200 V					
Mo	odel SGMXP-	01A	02A	04A	08A	15A			
Time Rating		Continuous							
Thermal Class				UL: B, CE: B					
Insulation Resistan	ce		50	00 VDC, 10 MΩ m	in.				
Withstand Voltage			1,5	500 VAC for 1 min	ute				
Excitation				Permanent magne	t				
Mounting				Flange-mounted					
Drive Method				Direct drive					
Rotation Direction		Counterclock	twise (CCW) for f	forward reference v	when viewed from	the load side			
Vibration Class *1	<u>-</u>			V15					
	Surrounding Air Temperature		0°C to 40°C (60°C max.) *3						
	Surrounding Air Humidity	20% to 80% relative humidity (with no condensation)							
Environmental Conditions	Installation Site	 Must be indoors and free of corrosive and explosive gases. Must be well-ventilated and free of dust and moisture. Must facilitate inspection and cleaning. Must have an altitude of 1000 m or less. (With derating, usage is possible between 1000 m and 2000 m.) *3 Must be free of strong magnetic fields. 							
	Storage Environment	Store the servomotor in the following environment if you store it with the power cable disconnected. Storage temperature: -20°C to +60°C (with no freezing) Storage humidity: 20% to 80% relative humidity (with no condensation)							
Impact Resistance	Impact Acceleration (at Flange)			490 m/s ²					
	Number of Impacts			2 times					
Vibration Resistance *2	Vibration Acceleration (at Flange)			49 m/s ²					
	SGDXS	R90A	2R8A	2R8A	5R5A	120A			
Applicable SERVOPACKs	SGDXW	1R6A *4, 2R8A *4	2R8A, 5R5A *4, 7R6A *4	2R8A, 5R5A *4, 7R6A *4	5R5A, 7R6A	I			
	SGDXT-	1R6A *4, 2R8A *4	2R8A	2R8A	-	-			

^{*1} A vibration class of V15 indicates a vibration amplitude of 15 μm maximum on the servomotor without a load at the rated rotation speed.

The given values are for when the servomotor shaft is mounted horizontally and impact or vibration is applied in the directions shown in the following figures. The strength of the vibration that the servomotor can withstand depends on the application. Always check the vibration acceleration that is applied to the servomotor with the actual equipment.

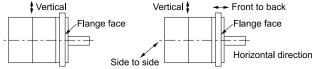

Impact Applied to the Servomotor Vibration Applied to the Servomotor

- *3 Refer to the following section for the derating rates.
 - \$\overline{\overline{\pi}} 5.2.6 Derating Rates on page 126
- *4 If you use this combination, performance may not be as good, e.g., the control gain may not increase, in comparison with using a Σ-XS SERVOPACK.

5.2.2 Servomotor Ratings


	Voltage				200 V			
	Model SGMXP-		01A	02A	04A	A80	15A	
Rated Output */		W	100	200	400	750	1500	
Rated Torque *	1, *2	N·m	0.318	0.637	1.27	2.39	4.77	
Instantaneous N	Maximum Torque */	N·m	1.11	2.23	4.46	7.16	14.3	
Rated Current	*1	Arms	0.76	1.5	2.4	5.4	9.2	
Instantaneous N	Maximum Current *1	Arms	3.2	5.9	9.3	16.5	28.0	
Rated Rotation	Speed *I	min-1			3000			
Continuous All	owable Rotation Speed	min-1	70	00		6000		
Maximum Rota	ation Speed *1	min-1			7000			
Torque Constan	nt	N·m/Arms	0.453	0.467	0.587	0.476	0.559	
	Without Holding Brakes		0.0594	0.263	0.409	2.10	4.02	
	With Holding Brakes		0.0922	0.423	0.569	2.98	4.90	
	Without Holding Brake and with Batteryless Abso- lute Encoder		0.0631	0.267	0.413	2.10	4.02	
Rotor Moment of Inertia	With Holding Brake and Batteryless Encoder	× 10-4 kg·m ²	0.0959	0.427	0.573	2.98	4.90	
	Without Holding Brake and with Compact Battery- less Absolute Encoder		0.0630	0.267	0.413	2.10	4.02	
	With Holding Brake and Compact Batteryless Absolute Encoder		0.0958	0.427	0.573	2.98	4.90	
Rated Power	Without Holding Brakes	1.777	17.0	15.4	39.4	27.1	56.5	
Rate *1	With Holding Brakes	kW/s	8.5	9.6	28.3	19.2	46.5	
Rated Angular	Without Holding Brakes	1/ 2	53500	24200	31000	11300	11800	
Acceleration */	With Holding Brakes	rad/s ²	26600	15000	22300	8000	9700	
Derating Rate f	For Servomotor with Oil Seal	%	9	0		95		
Heat Sink Size	(aluminum) *3	mm		250 × 250 × 6		300 ×	300 × 12	
Protective Struc	cture *4			Totally en	closed, self-coo	oled, IP67		
	Rated Voltage	V			24 VDC±10%			
	Capacity	W	6	7.	.4		7.5	
	Holding Torque	N·m	0.318	0.637	1.27	2.39	4.77	
Holding Brake Specifi-	Coil Resistance	Ω (at 20°C)	96	77	7.8	7	76.8	
cations *5	Rated Current	A (at 20°C)	0.25 0.31					
	Time Required to Release Brake	ms			80			
	Time Required to Brake	ms			100			

Continued on next page.


Continued from previous page.

	Voltage	200 V					
	Model SGMXP-	01A	02A	04A	08A	15A	
Allowable	At 6000 min-1	25 times	15 times	10 times	5 1	times	
Load Moment of Inertia	At 7000 min-1	25 times	10 times	6 times	5 1	times	
(Rotor Moment of Inertia Ratio) *6	With External Regenera- tive Resistor and External Dynamic Brake Resistor *7	At 6000 min ⁻¹ At 7000 min ⁻¹	25 times	15 times	10 times	5 1	times
	LF mm		20	25		35	
Allowable Shaft Loads	Allowable Radial Load N		78	245		392	490
*8	Allowable Thrust Load N		49	6	8	74	147

- *1 These values are for operation in combination with a SERVOPACK when the temperature of the armature winding is 100°C. The values for other items are at 20°C. These are typical values.
- *2 The rated torques are the continuous allowable torque values at a surrounding air temperature of 40°C with an aluminum heat sink of the dimensions given in the table.
- *3 Refer to the following section for the relation between the heat sinks and derating rate.
 - (1) Servomotor Heat Dissipation Conditions on page 126
- *4 This does not apply to the shaft opening. Protective structure specifications apply only when the special cable is used.

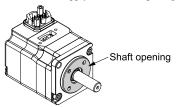


- *5 Observe the following precautions if you use a servomotor with a holding brake.
 - The holding brake cannot be used to stop the servomotor.
 - The time required to release the brake and the time required to brake depend on which discharge circuit is used. Confirm that the
 operation delay time is appropriate for the actual equipment.
 - The 24-VDC power supply is not provided by Yaskawa.
- The rotor moment of inertia scaling factor is the value for a standard servomotor without a holding brake.
- *7 To externally connect a dynamic brake resistor, select hardware option specification 0020 for the SERVOPACK. However, you cannot externally connect a dynamic brake resistor if you use the following SERVOPACKs (maximum applicable motor capacity: 400 W).
 - SGDXS-R70A□□A0020 to -2R8A□□A0020
 - SGDXW-1R6A□□A0020, -2R8A□□A0020
 - SGDXT-1R6A□□A0020, -2R8A□□A0020
- *8 Design the mechanical system so that the thrust and radial loads applied to the servomotor shaft end during operation do not exceed the values given in the table.

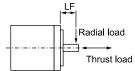

5.2.3 Torque-Rotation Speed Characteristics

- A : Continuous duty zone ——— (solid lines): Three-phase, 200 V
- B: Intermittent duty zone (dotted lines): Single-phase, 200 V

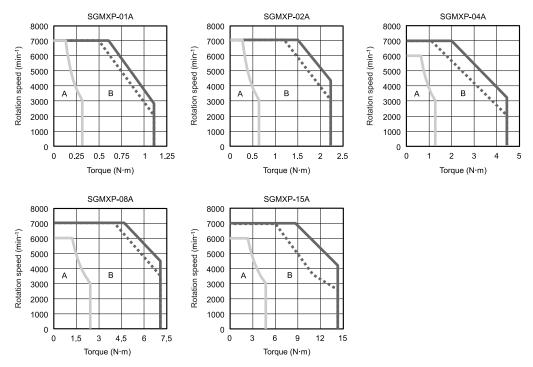


Note:

- These values (typical values) are for operation in combination with a SERVOPACK when the temperature of the armature winding is 100° C.
- The characteristics in the intermittent duty zone depend on the power supply voltage.
- If the effective torque is within the allowable range for the rated torque, the servomotor can be used within the intermittent duty zone.
- If you use a servomotor main circuit cable that exceeds 20 m, the intermittent duty zone in the torque-rotation speed characteristics will become smaller because the voltage drop increases.
- \bullet The SGMXP-15A can use a single-phase power input in combination with the SGDXS-120A \square A0008.

5.2.4 Servomotor Overload Protection Characteristics

The overload detection level is set for hot start conditions with a servomotor surrounding air temperature of 40°

For the overload detection level, priority is given to the lower of the detection levels in the overload protection characteristics of the connected SERVOPACK and servomotor.

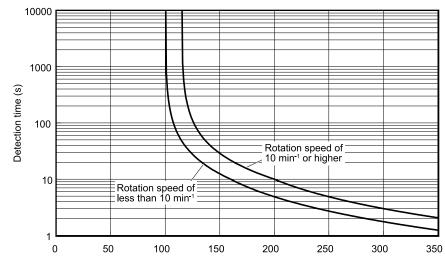

Note:

The above overload protection characteristics do not mean that you can perform continuous duty operation with an output of 100% or higher. Use the servomotor so that the effective torque remains within the continuous duty zone given in "5.2.3 Torque-Rotation Speed Characteristics on page 124".

5.2.5 Allowable Load Moment of Inertia

The allowable load moments of inertia (rotor moment of inertia ratios) for the servomotors are given in "5.2.2 Servomotor Ratings on page 122". The values are determined by the regenerative energy processing capacity of the SERVOPACK and are also affected by the drive conditions of the servomotor. Perform the required steps for each of the following cases.

(1) Exceeding the Allowable Load Moment of Inertia

Use one of the following measures to adjust the load moment of inertia to within the allowable value.

- Reduce the torque limit.
- Reduce the deceleration rate.
- Reduce the maximum rotation speed.

If the above steps are not possible, install an external regenerative resistor.

Information

An Overvoltage Alarm (A.400) is likely to occur during deceleration if the load moment of inertia exceeds the allowable load moment of inertia. SERVOPACKs with a built-in regenerative resistor may generate a Regenerative Overload Alarm (A.320).


Refer to the following catalog for the regenerative power (W) that can be processed by the SERVOPACKs.


AC Servo Drives Σ-X Series (Document No.: KAEP C710812 03)


Install an external regenerative resistor when the built-in regenerative resistor cannot process all of the regenerative power.

(2) SERVOPACKs without Built-in Regenerative Resistors

The following graph shows the allowable load moment of inertia scaling factor of the rotation speed (reference values for deceleration operation at or above the rated torque). Application is possible without an external regenerative resistor within the allowable value. However, an external regenerative resistor is required in the shaded areas of the graphs.

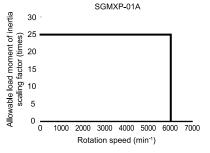

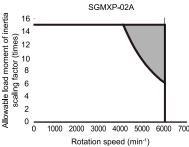

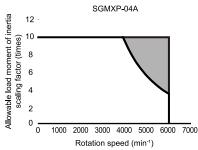

Note:

Applicable SERVOPACK models: SGDXS-R70A, SGDXS-R90A, SGDXS-1R6A, and SGDXS-2R8A

(3) When an External Regenerative Resistor Is Required

Install the external regenerative resistor.


Refer to the following catalog for details on external regenerative resistors.


AC Servo Drives Σ-X Series (Document No.: KAEP C710812 03)

5.2.6 Derating Rates

(1) Servomotor Heat Dissipation Conditions

The servomotor ratings are the continuous allowable values when a heat sink is installed on the servomotor. If the servomotor is mounted on a small device component, the servomotor temperature may rise considerably because the surface for heat dissipation becomes smaller. Refer to the following graphs for the relation between the heat sink size and derating rate.

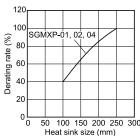

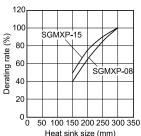




The actual temperature rise depends on the following conditions. Always check the servomotor temperature with the actual equipment.


Important

- \bullet How the heat sink (the servomotor mounting section) is attached to the installation surface
- Status between heat sink and servomotor (sealant, reduction gear, etc.)
- What material is used for the servomotor mounting section
- · Servomotor rotation speed

(2) Servomotor Derating Rates for Surrounding Air Temperature


Apply a suitable derating rate from the following graphs according to the surrounding air temperature of the servomotor (60°C max.).

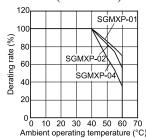


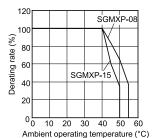

(3) Applications Where the Altitude Exceeds 1000 m

The servomotor ratings are the continuous allowable values at an altitude of 1000 m or less. If you use a servomotor at an altitude that exceeds 1000 m (2000 m max.), the heat dissipation effect of the air is reduced. Apply the appropriate derating rate from the following graphs.

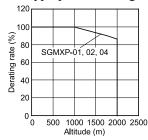

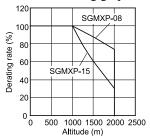

Note:


- When using servomotors with derating, change the detection timing of overload warning and overload alarm based on the overload detection level of the motor given in "5.2.4 Servomotor Overload Protection Characteristics on page 124".
- Use the combination of the SERVOPACK and servomotor so that the derating conditions are satisfied for both the SERVOPACK and servomotor.
- The derating rates are applicable only when the average rotation speed is less than or equal to the rated rotation speed. If the average rotation speed exceeds the rated rotation speed, consult with your Yaskawa representative.

5.3 Specifications and Ratings (400 V Specification)

5.3.1 Specification

	Voltage		40	0 V			
М	odel SGMXP-	02D	04D	08D	15D		
Time Rating			Conti	nuous			
Thermal Class			UL: B	, CE: B			
Insulation Resistance			500 VDC,	10 MΩ min.			
Withstand Voltage		1,800	VAC for 1 minute,	or 2,200 VAC for 1 s	econd		
Excitation			Permane	nt magnet			
Mounting			Flange-	mounted			
Drive Method			Direc	t drive			
Rotation Direction		Counterclockwise (CCW) for forward re	eference when viewe	d from the load side		
Vibration Class */			V	15			
	Surrounding Air Temperature	0°C to 40°C (60°C max.) *3					
	Surrounding Air Humidity	20% to 80% relative humidity (with no condensation)					
Environmental Conditions	Installation Site	 Must be indoors and free of corrosive and explosive gases. Must be well-ventilated and free of dust and moisture. Must facilitate inspection and cleaning. Must have an altitude of 1000 m or less. (With derating, usage is possible between 1000 m and 2000 m.) *3 Must be free of strong magnetic fields. 					
	Storage Environment	Store the servomotor in the following environment if you store it with the power cable disconnected. Storage temperature: -20°C to +60°C (with no freezing) Storage humidity: 20% to 80% relative humidity (with no condensation)					
Impact Resistance *2	Impact Acceleration (at Flange)		490 m/s²				
	Number of Impacts	2 times					
Vibration Resistance *2	Vibration Acceleration (at Flange)	49 m/s ²					
Applicable SERVOPACKs	SGDXS	1R9D	1R9D	3R5D	5R4D		

- *1 A vibration class of V15 indicates a vibration amplitude of 15 µm maximum on the servomotor without a load at the rated rotation speed
- *2 The given values are for when the servomotor shaft is mounted horizontally and impact or vibration is applied in the directions shown in the following figures. The strength of the vibration that the servomotor can withstand depends on the application. Always check the vibration acceleration that is applied to the servomotor with the actual equipment.

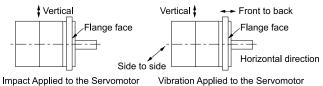

*3 Refer to the following section for the derating rates.

5.3.6 Derating Rates on page 132

5.3.2 Servomotor Ratings

Voltage			400 V				
	Model SGMXP-		02D	04D	08D	15D	
Rated Output */		W	200	400	750	1500	
Rated Torque *1,	*2	N·m	0.637	1.27	2.39	4.77	
Instantaneous Ma	aximum Torque */	N·m	2.23	4.46	7.16	14.3	
Rated Current *1		Arms	1.07	1.20	2.6	4.5	
Instantaneous Ma	aximum Current */	Arms	4.17	4.67	7.8	14.0	
Rated Rotation S	peed *I	min-1		300	00	•	
Continuous Allov	wable Rotation Speed	min-1	7000		6000		
Maximum Rotati	ion Speed *I	min-1		700	00		
Torque Constant		N·m/Arms	0.656	1.18	0.99	1.13	
	Without Holding Brakes		0.263	0.409	2.10	4.02	
İ	With Holding Brakes		0.403	0.548	2.98	4.90	
	Without Holding Brake and with Batteryless Absolute Encoder		0.267	0.413	2.10	4.02	
Rotor Moment of Inertia	With Holding Brake and Batteryless Encoder	\times 10 ⁻⁴ kg·m ²	0.407	0.552	2.98	4.90	
	Without Holding Brake and with Compact Batteryless Absolute Encoder		0.267	0.413	2.10	4.02	
	With Holding Brake and Compact Batteryless Absolute Encoder		0.407	0.552	2.98	4.90	
Rated Power	Without Holding Brakes		15.4	39.4	27.1	56.5	
Rate */	With Holding Brakes	kW/s	9.6	28.3	19.2	46.5	
Rated Angular	Without Holding Brakes	1/ 2	24200	31000	11300	11800	
Acceleration *1	With Holding Brakes	rad/s ²	15000	22300	8000	9700	
Derating Rate for	r Servomotor with Oil Seal	%	90		95		
Heat Sink Size (a	aluminum) *3	mm	250 ×	250 × 6	300 × 3	00 × 12	
Protective Struct	ure *4			Totally enclosed, s	self-cooled, IP67		
	Rated Voltage	V		24 VDC	£10%		
	Capacity	W	7	7.4	7.5		
	Holding Torque	N·m	0.637	1.27	2.39	4.77	
Holding Brake Specifications	Coil Resistance	Ω (at 20°C)	7	7.8	76	.8	
*5	Rated Current	A (at 20°C)		0.3	1		
	Time Required to Release Brake	ms	8)		
	Time Required to Brake	ms		10	0		
Allowable Load	At 6000 min-1		15 times	10 times	5 tii	nes	
Moment of Iner-	At 7000 min-1		10 times	6 times	5 tii	nes	
tia (Rotor Moment of Iner- tia Ratio) *6	With External Regenerative Resistor and External Dynamic Brake Resistor *7	At 6000 min ⁻¹ At 7000 min ⁻¹	15 times	10 times	5 tii	nes	


Continued on next page.

Continued from previous page.


	Voltage		400 V				
	Model SGMXP-	02D	04D	08D	15D		
	LF	mm	25		35		
Allowable Shaft Loads *8	Allowable Radial Load	N	245		392	490	
	Allowable Thrust Load	N	68		74	147	

- *1 These values are for operation in combination with a SERVOPACK when the temperature of the armature winding is 20°C. These are typical values.
- *2 The rated torques are the continuous allowable torque values at a surrounding air temperature of 40°C with an aluminum heat sink of the dimensions given in the table.
 *3 Refer to the following section for the relation between the heat sinks and derating rate.
 - Refer to the following section for the relation between the heat sinks and derating rate.

 (1) Servomotor Heat Dissipation Conditions on page 132
- *4 This does not apply to the shaft opening. Protective structure specifications apply only when the special cable is used.

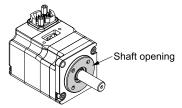


- *5 Observe the following precautions if you use a servomotor with a holding brake.
 - The holding brake cannot be used to stop the servomotor.
 - The time required to release the brake and the time required to brake depend on which discharge circuit is used. Confirm that the
 operation delay time is appropriate for the actual equipment.
 - The 24-VDC power supply is not provided by Yaskawa.
- *6 The rotor moment of inertia scaling factor is the value for a standard servomotor without a holding brake.
- To externally connect a dynamic brake resistor, select hardware option specification 0020 for the SERVOPACK. However, you cannot externally connect a dynamic brake resistor if you use SERVOPACK SGDXS-1R9D.
- *8 Design the mechanical system so that the thrust and radial loads applied to the servomotor shaft end during operation do not exceed the values given in the table.

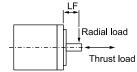

5.3.3 Torque-Rotation Speed Characteristics

A : Continuous duty zone (solid lines): Three-phase, 400 V

B: Intermittent duty zone

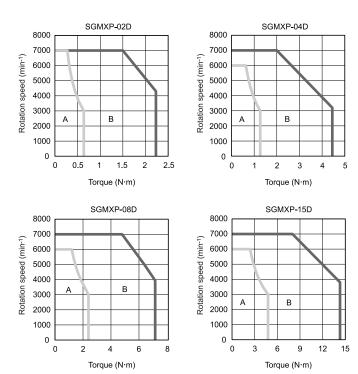


Note:

- These values (typical values) are for operation in combination with a SERVOPACK when the temperature of the armature winding is 100° C.
- The characteristics in the intermittent duty zone depend on the power supply voltage.
- If the effective torque is within the allowable range for the rated torque, the servomotor can be used within the intermittent duty zone.
- If you use a servomotor main circuit cable that exceeds 20 m, the intermittent duty zone in the torque-rotation speed characteristics will become smaller because the voltage drop increases.

5.3.4 Servomotor Overload Protection Characteristics

The overload detection level is set for hot start conditions with a servomotor surrounding air temperature of 40° C.

For the overload detection level, priority is given to the lower of the detection levels in the overload protection characteristics of the connected SERVOPACK and servomotor.

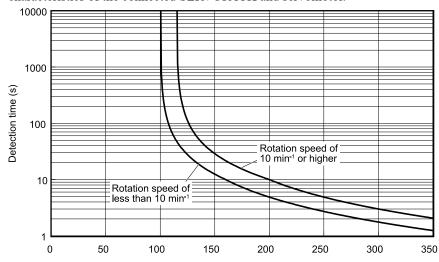

Note:

The above overload protection characteristics do not mean that you can perform continuous duty operation with an output of 100% or higher. Use the servomotor so that the effective torque remains within the continuous duty zone given in "5.3.3 Torque-Rotation Speed Characteristics on page 130".

5.3.5 Allowable Load Moment of Inertia

The allowable load moments of inertia (rotor moment of inertia ratios) for the servomotors are given in "5.3.2 Servomotor Ratings on page 128". The values are determined by the regenerative energy processing capacity of the SERVOPACK and are also affected by the drive conditions of the servomotor. Perform the required steps for each of the following cases.

(1) Exceeding the Allowable Load Moment of Inertia

Use one of the following measures to adjust the load moment of inertia to within the allowable value.

- Reduce the torque limit.
- · Reduce the deceleration rate.
- Reduce the maximum rotation speed.

If the above steps are not possible, install an external regenerative resistor.

Information

An Overvoltage Alarm (A.400) is likely to occur during deceleration if the load moment of inertia exceeds the allowable load moment of inertia. SERVOPACKs with a built-in regenerative resistor may generate a Regenerative Overload Alarm (A.320).


Refer to the following catalog for the regenerative power (W) that can be processed by the SERVOPACKs.


AC Servo Drives Σ-X Series (Document No.: KAEP C710812 03)

Install an external regenerative resistor when the built-in regenerative resistor cannot process all of the regenerative power.

(2) SERVOPACKs without Built-in Regenerative Resistors

The following graph shows the allowable load moment of inertia scaling factor of the rotation speed (reference values for deceleration operation at or above the rated torque). Application is possible without an external regenerative resistor within the allowable value. However, an external regenerative resistor is required in the shaded areas of the graphs.

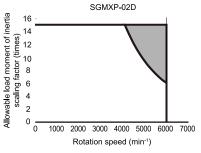

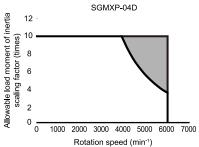

Note:

Applicable SERVOPACK model: SGDXS-1R9D

(3) When an External Regenerative Resistor Is Required

Install the external regenerative resistor.


Refer to the following catalog for details on external regenerative resistors.


AC Servo Drives Σ-X Series (Document No.: KAEP C710812 03)

5.3.6 Derating Rates

(1) Servomotor Heat Dissipation Conditions

The servomotor ratings are the continuous allowable values when a heat sink is installed on the servomotor. If the servomotor is mounted on a small device component, the servomotor temperature may rise considerably because the surface for heat dissipation becomes smaller. Refer to the following graphs for the relation between the heat sink size and derating rate.

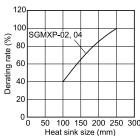

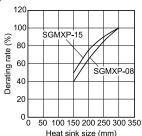




The actual temperature rise depends on the following conditions. Always check the servomotor temperature with the actual equipment.


Important

- \bullet How the heat sink (the servomotor mounting section) is attached to the installation surface
- Status between heat sink and servomotor (sealant, reduction gear, etc.)
- What material is used for the servomotor mounting section
- · Servomotor rotation speed

(2) Servomotor Derating Rates for Surrounding Air Temperature


Apply a suitable derating rate from the following graphs according to the surrounding air temperature of the servomotor (60°C max.).

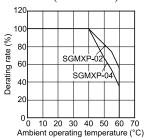


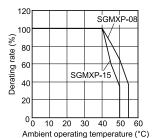

(3) Applications Where the Altitude Exceeds 1000 m

The servomotor ratings are the continuous allowable values at an altitude of 1000 m or less. If you use a servomotor at an altitude that exceeds 1000 m (2000 m max.), the heat dissipation effect of the air is reduced. Apply the appropriate derating rate from the following graphs.

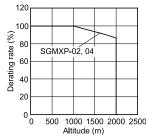

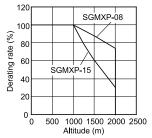

Note:


- When using servomotors with derating, change the detection timing of overload warning and overload alarm based on the overload detection level of the motor given in "5.3.4 Servomotor Overload Protection Characteristics on page 130".
- Use the combination of the SERVOPACK and servomotor so that the derating conditions are satisfied for both the SERVOPACK and servomotor.
- The derating rates are applicable only when the average rotation speed is less than or equal to the rated rotation speed. If the average rotation speed exceeds the rated rotation speed, consult with your Yaskawa representative.

5.4 External Dimensions (200 V Specification)

5.4.1 SGMXP-01 to -04

(1) Standard Specification

Models with the additional specification "3 Standard (Functional Safety-Compatible Encoder)" have the same dimensions as those indicated below.

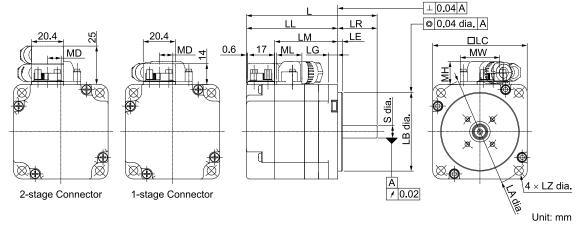

Model	* *1	11 *1	1.04			Flan	ge Dimens	ions			
SGMXP-	L *1	L *1	LL *1	LM	LR	LE	LG	LC	LA	LB	LZ
01A□A2□A□	83 (113.0)	58 (88.0)	40	25	3	6	60	70	50-0.025	5.5	
02A□A2□A□	95 (126.5)	65 (96.5)	47	30	3	8	80	90	70-0.030	7	
04A□A2□A□	105 (136.5)	75 (106.5)	57	30	3	8	80	90	70-0.030	7	

Model SGMXP-	S	MD	MW	МН	ML	Approx. Mass [kg] */
01A□A2□A□	8-0.009	8.4	25	14.5	16	0.4 (0.7)
02A□A2□A□	14-0.011	14	25	14.5	16	1.1 (1.8)
04A□A2□A□	14-0.011	14	25	14.5	16	1.4 (2.1)

^{*1} For models that have a batteryless absolute encoder (SGMXD-DDDW), L and LL for the SGMXP-01A are 7.5 mm greater, L and LL for the SGMXP-02A and -04A are 6.5 mm greater, and the approximate mass of the SGMXP-01A, -02A, and -04A is 0.1 kg greater than the given value. Refer to the following section for the values for individual models.

5.4.3 Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXP-\u00dd\u00fa\u00dd\u00fa) on page 137


Note

- 1. The values in parentheses are for servomotors with holding brakes.
- The values for a straight shaft end without key specification are given. Refer to the information given below for other shaft end specifications and option specifications.

(3) Shaft End Specification on page 134

(4) Option Specification on page 134

(2) Σ -7 Compatible Specification

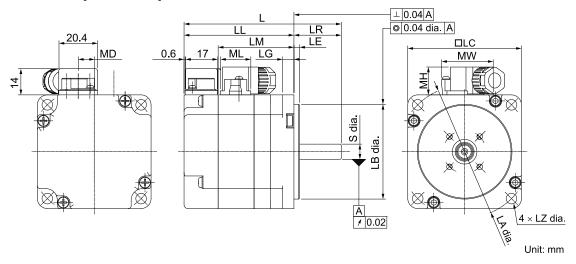


Model SGMXP-	MD	MW	МН	ML
01A□A2□A2	8.5	25.8	14.7	16.1
02A□A2□A2	14	28.7	14.7	17.1
04A□A2□A2	14	28.7	14.7	17.1

Note:

The dimensions for non-connector parts are identical to those for models with standard specifications.

(3) Shaft End Specification


• Straight with Key and Tap

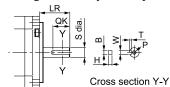

Model SGMXP-	LR	QK	s	В	Н	w	Т	Р
01A□A61□□	25	14	8-0.009	3-0.025	3-0.025	3-0.006	1.8 0 1	M3 × 6
02A□A61□□	30	14	14-0.011	5-0.030	5-0.030	5-0.012 5-0.042	3 0 0 1	M5 × 8
04A□A61□□	30	14	14-0.011	5-0.030	5-0.030	5-0.012	3 0 0 1	M5 × 8

(4) Option Specification


· With Oil Seal

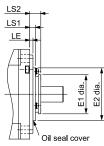


Model SGMXP-	E1	E2	LS1	LS2	LE	
01A□A□S□□	22	38	3.5	7	3	
02A□A□S□□	25	47	<i>5.</i> 0	10	2	
04A□A□S□□	35	47	5.2	10	3	

(5) Connector Mounting Dimensions

• Cable Installed on Load Side

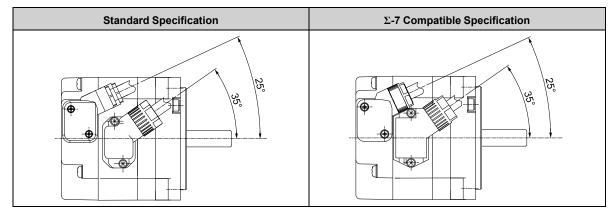


• Cable Installed on Non-load Side

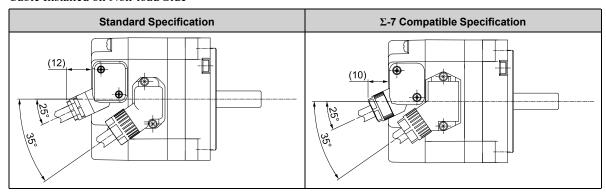

5.4.2 SGMXP-08, -15

(1) Standard Specification

Information Models with the additional specification "3 Standard (Functional Safety-Compatible Encoder)" have the same dimensions as those indicated below.

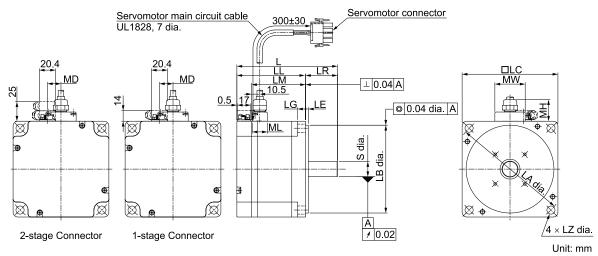

Model	Model L*/ LL*/			Flange Dimensions							
SGMXP-	L *1	LL *1	LM	LM LR	LE	LG	LC	LA	LB	LZ	
08A□A2□A□	126.5 (160.0)	86.5 (120.0)	67.6	40	3.5	10	120	145	110-0.035	10.2	
15A□A2□A□	154.5 (188.0)	114.5 (148.0)	95.6	40	3.5	10	120	145	110-0.035	10.2	

Model SGMXP-	S	MD	MW	МН	ML	Approx. Mass [kg] */
08A□A2□A□	19-0.013	17	38	28	19 (25.5)	4.2 (5.9)
15A□A2□A□	19-0.013	17	38	28	19 (25.5)	6.6 (8.2)

For models that have a batteryless absolute encoder (SGMXu-uuw), L and LL are 8 mm greater and the approximate mass is 0.1 kg greater than the given value. Refer to the following section for the values for individual models.


■ 5.4.3 Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXP-□□□W) on page 137

*2 These are the values when the flexible connectors are connected.

Note:

- 1. The values in parentheses are for servomotors with holding brakes.
- The values for a straight shaft end without key specification are given. Refer to the information given below for other shaft end specifications and option specifications.
 - (3) Shaft End Specification on page 134 (4) Option Specification on page 136

(2) Σ -7 Compatible Specification

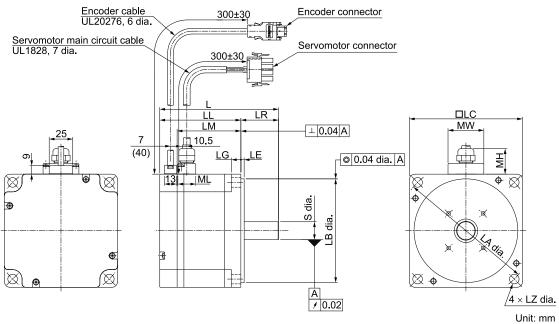


Note:

The difference from the model with standard specifications is the shape of the encoder cable connector.

The dimensions for non-connector parts are identical to those for models with standard specifications.


(3) **Shaft End Specification**

• Straight with Key and Tap

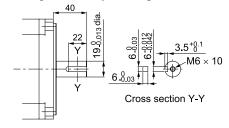


(4) Option Specification

· With Oil Seal

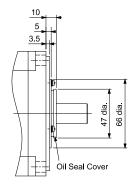

(5) Connector Mounting Dimensions

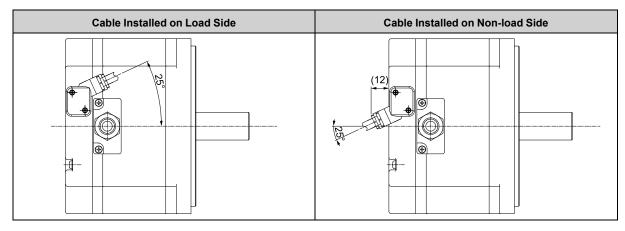

5.4.3 Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXP-□□□W)

Model SGMXP-	L	ш	Approx. Mass [kg]
01AWA2□A□	90.5 (120.5)	65.5 (95.5)	0.5 (0.8)
02AWA2□A□	101.5 (133)	71.5 (103)	1.2 (1.9)
04AWA2□A□	111.5 (143)	81.5 (113)	1.5 (2.2)
08AWA2□A□	134.5 (168)	94.5 (128)	4.3 (6)
15AWA2□A□	162.5 (196)	122.5 (156)	6.7 (8.3)

Note:


The values in parentheses are for servomotors with holding brakes.

External Dimensions (400 V Specification) 5.5

5.5.1 **SGMXP-02, -04**

Standard Specification

Models with the additional specification "3 Standard (Functional Safety-Compatible Encoder)" have the same dimensions as those indicated below.

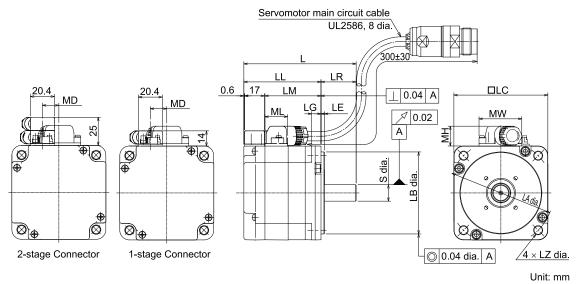

Model		***		*1		1 1 ×1	I I *1	I I *1	11 *7	LL * <i>1</i>				Flan	ge Dimens	ions		
SGMXP-	L * <i>1</i>	LL *1	LM	LR	LE	LG	LC	LA	LB	LZ								
02D□A2□A□	96 (126.5)	66 (96.5)	48	30	3	8	80	90	70-0.030	7								
04D□A2□A□	106 (136.5)	76 (106.5)	58	30	3	8	80	90	70-0.030	7								


Model SGMXP-	S	MD	MW	МН	ML	Approx. Mass [kg] */
02D□A2□A□	14-0.011	14	36.5	17	19.3	1.3 (1.9)
04D□A2□A□	14-0.011	14	36.5	17	19.3	1.6 (2.2)

For models that have a batteryless absolute encoder (SGMX - - - W), L and LL are 6.5 mm greater and the approximate mass is 0.1 kg greater than the given value. Refer to the following section for the values for individual models.

- 1. The values in parentheses are for servomotors with holding brakes.
- The values for a straight shaft end without key specification are given. Refer to the information given below for other shaft end specifications and option specifications.
 - (3) Shaft End Specification on page 139 (4) Option Specification on page 139

^{5.5.3} Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXP-pp W) on page 143

(2) Σ -V Compatible Specification

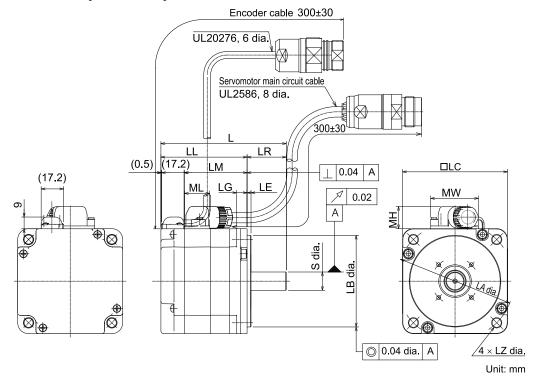


Note:

The dimensions for non-connector parts are identical to those for models with standard specifications.

The approx. mass is +0.1 kg compared to the standard model.

(3) Shaft End Specification


• Straight with Key and Tap

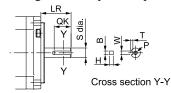

Model SGMXP-	LR	QK	s	В	Н	w	Т	P
02D□A61□□	30	14	14-0.011	5-0.030	5-0.030	5-0.012 5-0.042	3 ^{+0.1}	M5 × 8
04D□A61□□	30	14	14-0.011	5-0.030	5-0.030	5-0.012 5-0.042	3 ^{+0.1}	M5 × 8

(4) Option Specification

• With Oil Seal

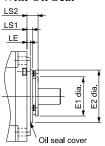

Model SGMXP-	E1	E2	LS1	LS2	LE
02D□A□S□□	25	47		10	3
04D□A□S□□	35	47	5.2	10	

(5) Connector Specifications

• Encoder Connector (26-bit Encoder): Σ-V Compatible Specification

	1 *1	0BAT	8	PG5V	
9 2 2 2 2 3 3 3 3 8 4	2 *1	BAT	9	PG0V	
	3	PS	10 to 17	-	
	4	/PS	Connector	TG (C)	
	5 to 7	-	Case	FG (frame ground)	

A battery is required only for a 26-bit absolute encoder. Applicable plug (not provided by Yaskawa)
Plug: SPNA17HFRBNDDDD

Manufacturer: Smith Interconnect

• Servomotor Connector: Same for both Standard Specifications and Σ-V Compatible Specifications


5———6	1	Phase U	6 * <i>1</i>	Brake terminal	
	2	Phase V		FG (frame ground)	
4	4	Phase W	Connector	FG (frame ground)	
	5 * <i>1</i>	Brake terminal	Case		

Only for servomotors with holding brakes. There is no voltage polarity for the brake terminals. Applicable plug (not provided by Yaskawa)
Plug: LPNA06BFRDN


Manufacturer: Smith Interconnect

(6) Connector Mounting Dimensions

· Cable Installed on Load Side

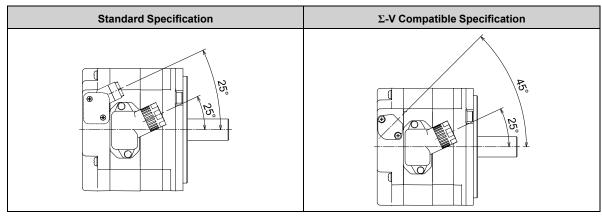


• Cable Installed on Non-load Side

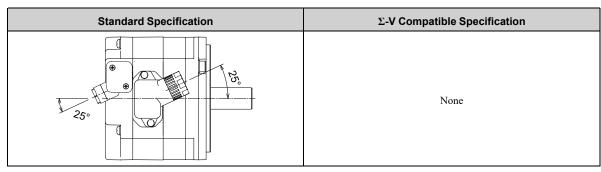

5.5.2 SGMXP-08, -15

(1) Standard Specification

Information Models with the additional specification "3 Standard (Functional Safety-Compatible Encoder)" have the same dimensions as those indicated below.

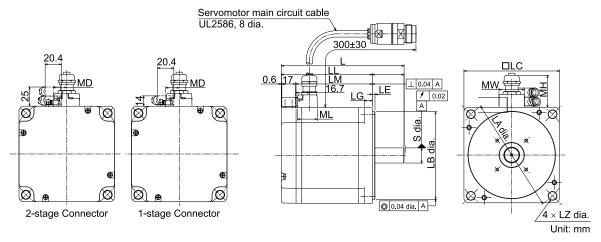

Model	7			Flange Dimensions							
SGMXP-	L * <i>I</i>	LL * <i>I</i>	LM	LR	LE	LG	LC	LA	LB	LZ	
08D□A2□A□	126.5 (160.0)	86.5 (120.0)	67.6	40	3.5	10	120	145	110-0.035	10.2	
15D□A2□A□	154.5 (188.0)	114.5 (148.0)	95.6	40	3.5	10	120	145	110-0.035	10.2	

Model SGMXP-	S	MD	MW	МН	ML	Approx. Mass [kg] */
08D□A2□A□	19-0.013	17	38	28	25 (40)	4.2 (5.9)
15D□A2□A□	19-0.013	17	38	28	25 (40)	6.6 (8.2)


For models that have a batteryless absolute encoder (SGMXD-DDW), L and LL are 8 mm greater and the approximate mass is 0.1 kg greater than the given value. Refer to the following section for the values for individual models.

- 1. The values in parentheses are for servomotors with holding brakes.
- The values for a straight shaft end without key specification are given. Refer to the information given below for other shaft end specifications and option specifications.

(3) Shaft End Specification on page 142 (4) Option Specification on page 142

^{5.5.3} Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXP-pp W) on page 143 *2 These are the values when the flexible connectors are connected.

(2) Σ -V Compatible Specification

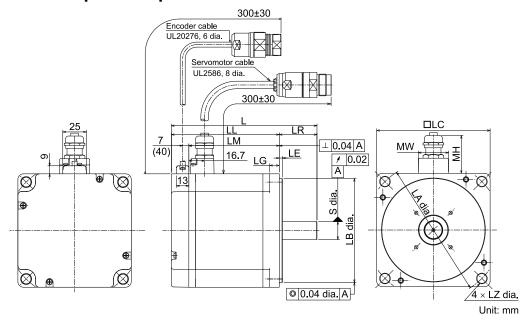

Note:


The difference from the model with standard specifications is the shape of the encoder cable connector.

The dimensions for non-connector parts are identical to those for models with standard specifications.

The approx. mass is +0.1 kg compared to the standard model.


(3) Shaft End Specification

• Straight with Key and Tap

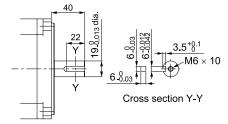

(4) Option Specification

· With Oil Seal

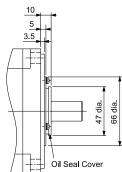

(5) Connector Specifications

• Encoder Connector (26-bit Encoder): Σ-V Compatible Specification

9 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	1 *1	0BAT	8	PG5V
	2 *1	BAT	9	PG0V
	3	PS	10 to 17	-
	4	/PS	Connector	FG (frame ground)
	5 to 7	_	Case	

A battery is required only for a 26-bit absolute encoder. Applicable plug (not provided by Yaskawa)

Plug: SPNA17HFRBN□□□
Manufacturer: Smith Interconnect


• Servomotor Connector: Same for both Standard Specifications and Σ-V Compatible Specifications

4-0-2	1	Phase U	6 * <i>I</i>	Brake terminal
	2	Phase V		FG (frame ground)
	4	Phase W	Connector	
	5 *1	Brake terminal	Case	FG (frame ground)

*1 Only for servomotors with holding brakes. There is no voltage polarity for the brake terminals. Applicable plug (not provided by Yaskawa)
Plug: LPNA06BFRDNupp

Manufacturer: Smith Interconnect

(6) Connector Mounting Dimensions

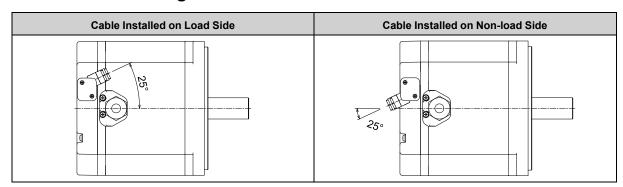

5.5.3 Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXP-□□□W)

Model SGMXP-	L	LL	Approx. Mass [kg]
02DWA2□A□	102.5 (133)	72.5 (103)	1.4 (2.0)
04DWA2□A□	112.5 (143)	82.5 (113)	1.7 (2.3)
08DWA2□A□	134.5 (168)	94.5 (128)	4.3 (6.0)
15DWA2□A□	162.5 (196)	122.5 (156)	6.7 (8.3)

Note:

The values in parentheses are for servomotors with holding brakes.

Specifications, Ratings, and External Dimensions of SGMXG Servomotors

This chapter describes how to interpret the model numbers of SGMXG servomotors and gives their specifications, ratings, and external dimensions.

6.1	Mode	l Designations	147
6.2	Speci	fications and Ratings (200 V, 1500-min ⁻¹ Specification)	148
	6.2.1	Specification	148
	6.2.2	Servomotor Ratings (SGMXG-03A□A to -20A□A)	149
	6.2.3	Servomotor Ratings (SGMXG-30A□A to -1EA□A)	151
	6.2.4	Torque-Rotation Speed Characteristics	153
	6.2.5	Servomotor Overload Protection Characteristics	154
	6.2.6	Allowable Load Moment of Inertia	155
	6.2.7	Derating Rates	156
6.3	Speci	fications and Ratings (200 V, 1000-min ⁻¹ Specification)	158
	6.3.1	Specification	158
	6.3.2	Servomotor Ratings	159
	6.3.3	Torque-Rotation Speed Characteristics	161
	6.3.4	Servomotor Overload Protection Characteristics	161
	6.3.5	Allowable Load Moment of Inertia	162
	6.3.6	Derating Rates	163
6.4	Speci	fications and Ratings (400 V, 1500-min ⁻¹ Specification)	165
	6.4.1	Specification	165
	6.4.2	Servomotor Ratings (SGMXG-05D□A to -30D□A)	166
	6.4.3	Servomotor Ratings (SGMXG-44D□A to -1ED□A)	167
	6.4.4	Torque-Rotation Speed Characteristics	170
	6.4.5	Servomotor Overload Protection Characteristics	171
	6.4.6	Allowable Load Moment of Inertia	172
	6.4.7	Derating Rates	172
6.5	Exter	nal Dimensions (200 V Specification)	174
	6.5.1	SGMXG-03A□A, -05A□A, -03A□B	174
	6.5.2	SGMXG-09A□A to -20A□A, -06A□B to -12A□B	178
	6.5.3	SGMXG-30A□A to -75A□A, -20A□B to -55A□B	182

	6.5.4	SGMXG-1A, -1E	188
	6.5.5	Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXG-□□□W)	193
6.6	Exter	nal Dimensions (400 V Specification)	194
	6.6.1	SGMXG-05D□A	194
	6.6.2	SGMXG-09D□A to -20D□A	197
	6.6.3	SGMXG-30D□A to -75D□A	201
	6.6.4	SGMXG-1A, -1E	206
	6.6.5	Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXG-□□□W)	210

6.1 Model Designations

SGMXG - 09 A U A 2 1 A 1

 Σ -X-Series Servomotor SGMXG model



1st+2र्मंबचिigits Rated Output

1500-min⁻¹ Specification

		Power Supply Voltage				
Code	Specification	Specification 200 VAC				
03	300 W	0	ı			
05	450 W	0	0			
09	850 W	0	0			
13	1.3 kW	0	0			
20	1.8 kW	0	0			
30	2.9 kW	0	0			
44	4.4 kW	0	0			
55	5.5 kW	0	0			
75	7.5 kW	0	0			
1A	11 kW	0	0			
1E	15 kW	0	0			

1000-min⁻¹ Specification

			ply Voltage
Code	Specification	400 VAC	
03	300 W	0	-
06	600 W	0	ı
09	900 W	0	ı
12	1.2 kW	0	1
20	2.0 kW	0	-
30	3.0 kW	0	-
40	4.0 kW	0	1
55	5.5 kW	0	-

3rd digit Power Supply Voltage

Code	Specification
Α	AC 200 V
D	AC 400 V

4th digit Serial Encoder

Code	Specification
H*1	26-bit compact batteryless absolute encoder
U	26-bit absolute encoder
W	26-bit batteryless absolute encoder

5th digit Design Revision Order

Code	Specification
Α	1500-min ⁻¹ Specification
В	1000-min ⁻¹ Specification

6th digit Shaft End

Code	Specification
2	Straight without key (SGMXG-03□□A to 20□□A) (SGMXG-03A□B to 12A□B)
6	Straight with key and tap
8	Straight with key and tap (SGMXG-30 A to 1E A) (SGMXG-20A B to 55A B)

7th digit Options

Code	Specification
1	Without options
С	With holding brake (24 VDC)
Е	With oil seal With holding brake (24 VDC)
S	With oil seal

8th digit Destination

Α

9th digit Ancillary Specification

Code	Specification
1	Standard
2*2	Compatible
3*3	Standard (encoder with functional safety)

- *1 This encoder is equipped with an internal rechargeable battery, and it holds multi-turn position data without using an external battery.

 Refer to the following section for details on the battery.

 1.5 26-Bit Compact Batteryless Absolute Encoder on page 44
- *2 200 VAC: Σ-7 compatible specification: Main circuit cables and encoder cables for the Σ-7-series SGM7G servomotors can be used. 400 VAC: Σ-V compatible specification: Main circuit cables and encoder cables for the Σ-V-series SGMGV servomotors can be used.
- *3 The following models are not supported.

 Serial encoder specification: 26-bit compact batteryless absolute encoder

 Contact your Yaskawa representative beforehand if you require a model with support for functional safety.

Note:

The rated output is 2.4 kW if you combine the SGMXG-30A a with the SGDXS-200A.


6.2 Specifications and Ratings (200 V, 1500-min⁻¹ Specification)

6.2.1 Specification

Voltage						20	0 V				
Model SGMXG-		03A□A 05A□A	09A□A	13A□A	20A□A	30A□A	44A□A	55A□A	75A□A	1AA□A	1EA□A
Time Rating						Conti	nuous				
Thermal Cl	ass					UL: F,	CE: F				
Insulation I	Resistance				:	500 VDC,	l0 MΩ min	ı .			
Withstand	Voltage				1	,500 VAC	for 1 minut	e			
Excitation						Permaner	nt magnet				
Mounting						Flange-	nounted				
Drive Meth	od					Direc	t drive				
Rotation D	irection		Counte	erclockwise	(CCW) for	r forward re	eference wh	nen viewed	from the lo	ad side	
Vibration C	Class *I					V	15				
	Surrounding Air Temperature				0°0	C to 40°C (60°C max.)) *3			
	Surrounding Air Humidity	20% to 80% relative humidity (with no condensation)									
Environ- mental Condi- tions	Installation Site	Must beMust faMust ha*3	 Must be well-ventilated and free of dust and moisture. Must facilitate inspection and cleaning. Must have an altitude of 1000 m or less. (With derating, usage is possible between 1000 m and 2000 m.) 								
	Storage Environment	Storage te	Store the servomotor in the following environment if you store it with the power cable disconnected. Storage temperature: -20°C to +60°C (with no freezing) Storage humidity: 20% to 80% relative humidity (with no condensation)								
Impact Resistance	Impact Acceleration (at Flange)		$490~\mathrm{m/s^2}$								
*2	Number of Impacts		2 times								
Vibration Acceleration (at Flange)			49 m	/s² (24.5 m	/s ² front to	back)			24.5	m/s ²	
Applica- ble SER-	SGDXS	3R8A	7R6A (120A) *4	120A (180A) *4	180A (200A) *4	330A (470A) *4	330A (550A) *4	470A (780A) *4	550A	590A	780A
VOPAC- Ks *4	SGDXW	5R5A *5, 7R6A *5	7R6A	6A –							

^{*1} A vibration class of V15 indicates a vibration amplitude of 15 µm maximum on the servomotor without a load at the rated rotation speed.

*2 The given values are for when the servomotor shaft is mounted horizontally and impact or vibration is applied in the directions shown in the following figures. The strength of the vibration that the servomotor can withstand depends on the application. Always check the vibration acceleration that is applied to the servomotor with the actual equipment.

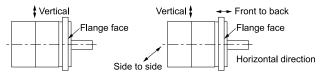

- Impact Applied to the Servomotor

 Nefer to the following section for the derating rates.
- **☞** 6.2.7 Derating Rates on page 156
- *4 To increase the instantaneous maximum torque, use the SERVOPACK model in parentheses ().

 Refer to the following section for the instantaneous maximum torque for individual SERVOPACK models.
 - **3** 6.2.2 Servomotor Ratings (SGMXG-03A□A to -20A□A) on page 149
 - **G** 6.2.3 Servomotor Ratings (SGMXG-30A \square A to -1EA \square A) on page 151
 - 6.2.4 Torque-Rotation Speed Characteristics on page 153
- *5 If you use a servomotor together with a Σ-XW SERVOPACK, the control gain may not increase as much as with a Σ-XS SERVO-PACK and other performances may be lower than those achieved with a Σ-XS SERVOPACK.

6.2.2 Servomotor Ratings (SGMXG-03A□A to -20A□A)


	200 V							
	Model SGMXG-		03A□A	05A□A	09A□A	13A□A	20A□A	
Rated Output *1		kW	0.3	0.45	0.85	1.3	1.8	
Rated Torque *1, *2		N·m	1.96	2.86	5.39	8.34	11.5	
Instantaneous Maxim	um Torque */	N·m	5.88	8.92	14.2 20.0 *3	23.3 30.0 *4	28.7 35.4 *5	
Rated Current *1		Arms	2.8	3.8	6.9	10.7	16.7	
Instantaneous Maxim	Arms	8.0	11	17 28 *3	28 40 *4	42 56 *5		
Rated Rotation Speed	1*1	min-1	1500					
Continuous Allowabl	e Rotation Speed	min-1	4000 3000					
Maximum Rotation S	peed *I	min-1	4000					
Torque Constant *1		N·m/Arms	0.776	0.854	0.859	0.891	0.748	
Rotor Moment of	Without Holding Brakes	×10-4 kg·m ²	2.48	3.33	13.9	19.9	26.0	
Inertia *6	With Holding Brakes		2.73	3.58	16.0	22.0	28.1	
Rated Power Rate */	Without Holding Brakes	kW/s	15.5	24.6	20.9	35.0	50.9	
Rated Power Rate *1	With holding brakes	KW/S	14.1	22.9	18.2	31.6	47.1	
Rated Angular	Without Holding Brakes	rad/s²	7900	8590	3880	4190	4420	
Acceleration *1	With Holding Brakes	rad/s²	7180	7990	3370	3790	4090	
Heat Sink Size *7		mm	250 ×250 × 6 (aluminum) 400 × 400 × 20 (stee		eel)			
Protective Structure *	-8		Totally enclosed, self-cooled, IP67					

Continued on next page.


Continued from previous page.

	Voltage				200 V			
	Model SGMXG-		03A□A	05A□A	09A□A	13A□A	20A□A	
	Rated Voltage	V			24 VDC ^{+10%}			
	Capacity	W			10			
	Holding Torque	N·m	4	.5	12.7		.6	
Holding Brake	Coil Resistance	Ω (at 20°C)	5	6	59			
Specification *9	Rated Current	A (at 20°C)	0.	43	0.41			
	Time Required to Release Brake	ms	100					
	Time Required to Brake			80				
	At 3000 min-1	15 times			5 times			
Allowable Load	At 4000 min-1		8.4 times 2			mes	5 times	
Moment of Inertia (Rotor Moment of Inertia Ratio) *10	With External Regenera- tive Resistor and External	At 3000 min-	15 t	imes		10 times		
merua Rano) 10	Dynamic Brake Resistor *//	At 4000 min-	8.4 t	imes	8 times	9 times	7 times	
	LF	mm	4	0		58		
Allowable Shaft Loads *12	Allowable Radial Load	N		490		686	980	
	Allowable Thrust Load N		98			343	392	

- *1 These values are for operation in combination with a SERVOPACK when the temperature of the armature winding is 20°C. These are typical values.
- *2 The rated torques are the continuous allowable torque values with an aluminum or steel heat sink of the dimensions given in the table.
- *3 This is the value if you combine with the SERVOPACK SGDXS-120A.
- *4 This is the value if you combine with the SERVOPACK SGDXS-180A.
- *5 This is the value if you combine with the SERVOPACK SGDXS-200A.
- *6 The values for the servomotors with batteryless absolute encoders (and holding brakes) are the same as those in the table.
- *7 Refer to the following section for the relation between the heat sinks and derating rate.
 - (1) Servomotor Heat Dissipation Conditions on page 156
- *8 This does not apply to the shaft opening. Protective structure specifications apply only when the special cable is used.

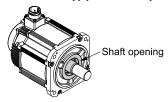

- *9 Observe the following precautions if you use a servomotor with a holding brake.
 - · The holding brake cannot be used to stop the servomotor.
 - The time required to release the brake and the time required to brake depend on which discharge circuit is used. Confirm that the operation delay time is appropriate for the actual equipment.
 - The 24-VDC power supply is not provided by Yaskawa.
- *10 The rotor moment of inertia scaling factor is the value for a standard servomotor without a holding brake.
- *11 To externally connect a dynamic brake resistor, select hardware option specification 0020 for the SERVOPACK.
- *12 Design the mechanical system so that the thrust and radial loads applied to the servomotor shaft end during operation do not exceed the values given in the table.

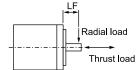

6.2.3 Servomotor Ratings (SGMXG-30A to -1EA A)

	Voltage					200 V			
M	odel SGMXG-		30A□A	30A□A *3	44A□A	55A□A	75A□A	1AA□A	1EA□A
Rated Output *1		kW	2.9	(2.4)	4.4	5.5	7.5	11	15
Rated Torque *1, *	:2	N·m	18.6	(15.1)	28.4	35.0	48.0	70.0	95.4
Instantaneous Max	kimum Torque *1	N·m	54.0 66.8 *4	(45.1)	71.6 95.6 *5	102 134 *6	119	175	224
Rated Current *1		Arms	24.5	(19.6)	32.9	37.2	54.7	58.6	74.0
Instantaneous Max	ximum Current *1	Arms	71 92 *4	(56)	84 115 *5	110 149 *6	130	140	170
Rated Rotation Sp	min-1				1500				
Continuous Allow Speed	able Rotation	min-1			3000			20	000
Maximum Rotatio	n Speed *I	min-1			4000			30	000
Torque Constant *	I	N·m/Arms	0.8	326	0.932	1.02	0.957	1.38	1.44
Rotor Moment of	Without Holding Brakes	×10-4	46	5.0	67.5	89.0	125	242	303
Inertia *7	With Holding Brakes	kg·m²	53.9		75.4	96.9	133	261	341
Rated Power	Without Holding Brakes	1-337/-	75.2	(49.6)	119	138	184	202	300
Rate *I	With Holding Brakes	kW/s	64.2	(42.3)	107	126	173	188	267
Rated Angular	Without Holding Brakes	1/ 2	4040	(3280)	4210	3930	3840	2890	3150
Acceleration */	With Holding Brakes	rad/s²	3450	(2800)	3770	3610	3610	2680	2800
Heat Sink Size *8		mm		550	× 550 × 30 (s	steel)			50 × 35 eel)
Protective Structur	re *9				Totally end	closed, self-ce	ooled, IP67		
	Rated Voltage	v				24 VDC ^{+10%}			
	Capacity	w		18.5			5	32	35
	Holding Torque	N·m		43.1		72	2.6	84.3	114.6
Holding Brake	Coil Resistance	Ω (at 20° C)		31		2	3	18	17
Specification *10	Rated Current	A (at 20° C)		0.77		1.	05	1.33	1.46
	Time Required to Release Brake	ms	170				70		
	Time Required to Brake	ms		100					

Continued on next page.


Continued from previous page.

	Voltage					200 V			
М	odel SGMXG-		30A□A	30A□A *3	44A□A	55A□A	75A□A	1AA□A	1EA□A
	At 2000 min-1				-			5 tir	mes
	At 3000 min-1		5 times	3 times	5 times	5 times	5 times	2.2 times	1.5 times
Allowable Load	At 4000 min-1		4 times	4 times 2.2 times 2.4 times 3.5 times 2.2 times				-	
(Rotor Moment	With External Regenerative Resistor and External	At 2000 min ⁻¹	_ 10 times						
of Inertia Ratio) *//		At 3000 min-1	10 times	7 times	10 times	10 times	10 times	4 times	2 times
	Dynamic Brake Resistor *12	At 4000 min-1	5 times	4 times	5 times	5 times	4 times	-	-
	LF	mm		79		1	13	116	
Allowable Shaft Loads *13	Allowable Radial Load	N		1470			1764		4998
	Allowable Thrust Load	N	490				588		2156


- *1 These values are for operation in combination with a SERVOPACK when the temperature of the armature winding is 20°C. These are typical values.
- *2 The rated torques are the continuous allowable torque values with an aluminum or steel heat sink of the dimensions given in the table.
- *3 This is the value if you combine with the SERVOPACK SGDXS-200A.

 The output of the servomotor will be limited by the rated current and maximum current of the SERVOPACK that is used. The load ratio is calculated based on the servomotor's rated current of 24.5 Arms. Use the servomotor with a load ratio of 80% or less.
- *4 This is the value if you combine with the SERVOPACK SGDXS-470A.
- *5 This is the value if you combine with the SERVOPACK SGDXS-550A.
- *6 This is the value if you combine with the SERVOPACK SGDXS-780A.
- *7 The values for the servomotors with batteryless absolute encoders (and holding brakes) are the same as those in the table.
- *8 Refer to the following section for the relation between the heat sinks and derating rate.


 (1) Servomotor Heat Dissipation Conditions on page 156
- *9 This does not apply to the shaft opening. Protective structure specifications apply only when the special cable is used.

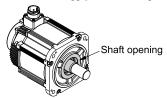


- *10 Observe the following precautions if you use a servomotor with a holding brake.
 - The holding brake cannot be used to stop the servomotor.
 - The time required to release the brake and the time required to brake depend on which discharge circuit is used. Confirm that the operation delay time is appropriate for the actual equipment.
 - The 24-VDC power supply is not provided by Yaskawa.
- *11 The rotor moment of inertia scaling factor is the value for a standard servomotor without a holding brake.
- *12 To externally connect a dynamic brake resistor, select hardware option specification 0020 for the SERVOPACK.
- *13 Design the mechanical system so that the thrust and radial loads applied to the servomotor shaft end during operation do not exceed the values given in the table.

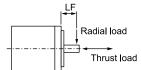

6.2.4 Torque-Rotation Speed Characteristics

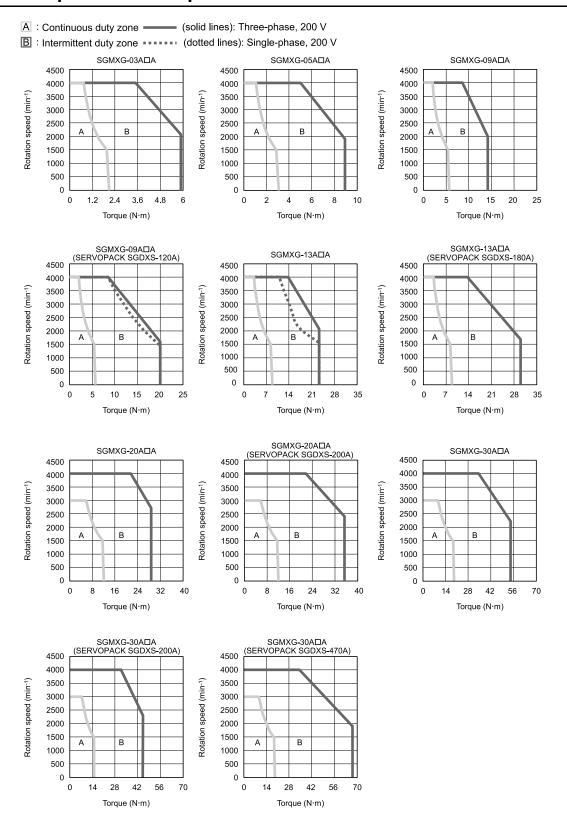

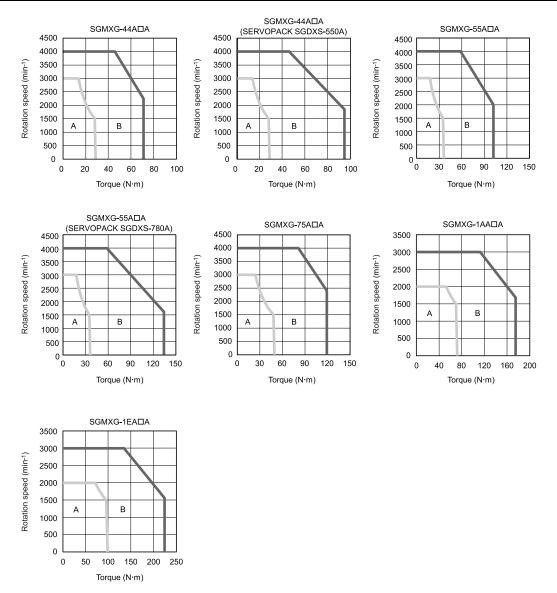


Note:

- $\bullet \ These \ values \ (typical \ values) \ are \ for \ operation \ in \ combination \ with \ a \ SERVOPACK \ when \ the \ temperature \ of \ the \ armature \ winding \ is \ 20^{\circ}C.$
- The characteristics in the intermittent duty zone depend on the power supply voltage.
- If the effective torque is within the allowable range for the rated torque, the servomotor can be used within the intermittent duty zone.
- If you use a servomotor main circuit cable that exceeds 20 m, the intermittent duty zone in the torque-rotation speed characteristics will become smaller because the voltage drop increases.
- $\bullet \ \, \text{The SGMXG-09A} \ \, \text{and} \ \, \text{-}13 \\ \text{A} \ \, \text{can use a single-phase power input in combination with the SGDXS-120A} \\ \text{-} \ \, \text{-}13 \\ \text{-}120 \\$

6.2.5 Servomotor Overload Protection Characteristics

The overload detection level is set for hot start conditions with a servomotor surrounding air temperature of 40° C.

For the overload detection level, priority is given to the lower of the detection levels in the overload protection characteristics of the connected SERVOPACK and servomotor.

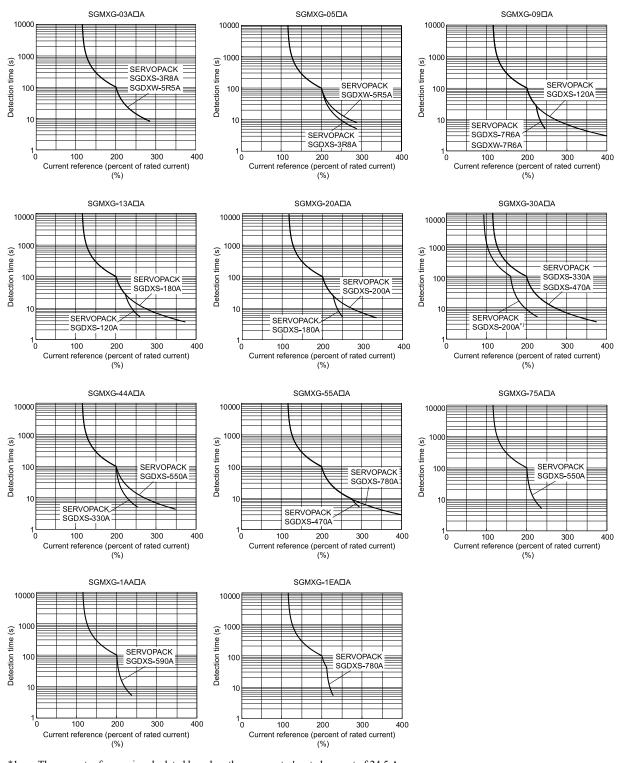

*1 The current reference is calculated based on the servomotor's rated current of 24.5 Arms.

Note:

- The above overload protection characteristics do not mean that you can perform continuous duty operation with an output of 100% or higher.
- Use the servomotor so that the effective torque remains within the continuous duty zone given in "6.2.4 Torque-Rotation Speed Character istics on page 153".
- The value for the instantaneous maximum current / rated current (%) for each servomotor is taken as the current reference maximum value.

6.2.6 Allowable Load Moment of Inertia

The allowable load moments of inertia (rotor moment of inertia ratios) for the servomotors are given in "6.2.2 Servomotor Ratings (SGMXG-03A \square A to -20A \square A) on page 149" and "6.2.3 Servomotor Ratings (SGMXG-30A \square A to -1EA \square A) on page 151". The values are determined by the regenerative energy processing

capacity of the SERVOPACK and are also affected by the drive conditions of the servomotor. Perform the required steps for each of the following cases.

(1) Exceeding the Allowable Load Moment of Inertia

Use one of the following measures to adjust the load moment of inertia to within the allowable value.

- Reduce the torque limit.
- · Reduce the deceleration rate.
- · Reduce the maximum rotation speed.

If the above steps are not possible, install an external regenerative resistor.

Information

An Overvoltage Alarm (A.400) is likely to occur during deceleration if the load moment of inertia exceeds the allowable load moment of inertia. SERVOPACKs with a built-in regenerative resistor may generate a Regenerative Overload Alarm (A.320).

Refer to the following catalog for the regenerative power (W) that can be processed by the SERVOPACKs.

AC Servo Drives Σ-X Series (Document No.: KAEP C710812 03)

Install an external regenerative resistor when the built-in regenerative resistor cannot process all of the regenerative power.

(2) When an External Regenerative Resistor Is Required

Install the external regenerative resistor.


Refer to the following catalog for details on external regenerative resistors.


AC Servo Drives Σ-X Series (Document No.: KAEP C710812 03)


6.2.7 Derating Rates


(1) Servomotor Heat Dissipation Conditions

The servomotor ratings are the continuous allowable values when a heat sink is installed on the servomotor. If the servomotor is mounted on a small device component, the servomotor temperature may rise considerably because the surface for heat dissipation becomes smaller. Refer to the following graphs for the relation between the heat sink size and derating rate.

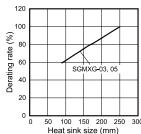

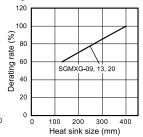

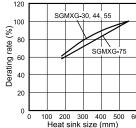

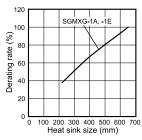




The actual temperature rise depends on the following conditions. Always check the servomotor temperature with the actual equipment.


Importan


- ullet How the heat sink (the servomotor mounting section) is attached to the installation surface
- Status between heat sink and servomotor (sealant, reduction gear, etc.)
- What material is used for the servomotor mounting section
- Servomotor rotation speed

(2) Servomotor Derating Rates for Surrounding Air Temperature

Apply a suitable derating rate from the following graphs according to the surrounding air temperature of the servomotor (60°C max.).

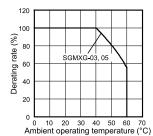


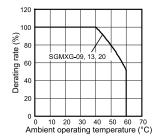


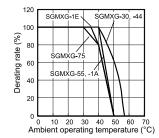


(3) Applications Where the Altitude Exceeds 1000 m

The servomotor ratings are the continuous allowable values at an altitude of 1000 m or less. If you use a servomotor at an altitude that exceeds 1000 m (2000 m max.), the heat dissipation effect of the air is reduced. Apply the appropriate derating rate from the following graphs.

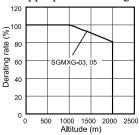

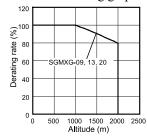

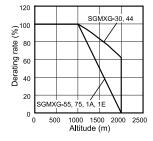

Note:

- When using servomotors with derating, change the detection timing of overload warning and overload alarm based on the overload detection level of the motor given in "6.2.5 Servomotor Overload Protection Characteristics on page 154".
- Use the combination of the SERVOPACK and servomotor so that the derating conditions are satisfied for both the SERVOPACK and servomotor.
- The derating rates are applicable only when the average rotation speed is less than or equal to the rated rotation speed. If the average rotation speed exceeds the rated rotation speed, consult with your Yaskawa representative.


6.3 Specifications and Ratings (200 V, 1000-min⁻¹ Specification)

6.3.1 Specification

	Voltage				20	0 V									
Mod	del SGMXG-	03A□B	06A□B	09A□B	12A□B	20A□B	30A□B	40A□B	55A□B						
Time Rating					Conti	nuous									
Thermal Class	ss				UL: F	, CE: F									
Insulation Re	esistance				500 VDC,	10 MΩ min.									
Withstand Vo	oltage				1,500 VAC	for 1 minute									
Excitation					Permane	nt magnet									
Mounting					Flange-	mounted									
Drive Metho	d				Direc	t drive									
Rotation Dire	ection	(Counterclock	wise (CCW)	for forward r	eference when	n viewed from	n the load sid	e						
Vibration Cla	ass *I				V	15									
	Surrounding Air Temperature		0°C to 40°C (60°C max.) *3												
	Surrounding Air Humidity	20% to 80% relative humidity (with no condensation)													
Environ- mental Conditions	Installation Site	 Must be v Must faci Must hav m.) *3 	vell-ventilate litate inspect e an altitude	d and free of ion and clean	less. (With d	C	e is possible b	oetween 1000	m and 2000						
	Storage Environment	Storage tem	perature: -20	°C to +60°C	(with no free:	if you store it zing) vith no conde		ver cable disc	onnected.						
Impact Resistance	Impact Acceleration (at Flange)				490	m/s ²									
*2	Number of Impacts				2 ti	mes									
Vibration Resistance	Vibration Accelera- tion (at Flange)	49 m/s ² (24.5 m/s ² front to back) 24.5 m/s ²							. 49 m/s ² (24.5 m/s ² front to back) 24.5 m/s ²						m/s ²
Applicable SERVO-	SGDXS	3R8A	5R5A	7R6A	120A	180A (200A) *4	200A	330A	470A						
PACKs	SGDXW	5R5A *5	5R5A	7R6A			_								

^{*1} A vibration class of V15 indicates a vibration amplitude of 15 μm maximum on the servomotor without a load at the rated rotation speed.

^{*2} The given values are for when the servomotor shaft is mounted horizontally and impact or vibration is applied in the directions shown in the following figures. The strength of the vibration that the servomotor can withstand depends on the application. Always check the vibration acceleration that is applied to the servomotor with the actual equipment.

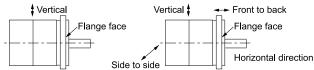

Impact Applied to the Servomotor Vibration Applied to the Servomotor

6.2.7 Derating Rates on page 156

^{*3} Refer to the following section for the derating rates.

- To increase the instantaneous maximum torque, use the SERVOPACK model in parentheses (). Refer to the following section for the instantaneous maximum torque for individual SERVOPACK models.

 6.3.2 Servomotor Ratings on page 159
 - 6.3.3 Torque-Rotation Speed Characteristics on page 161
- *5 If you use a servomotor together with a Σ-XW SERVOPACK, the control gain may not increase as much as with a Σ-XS SERVO-PACK and other performances may be lower than those achieved with a Σ-XS SERVOPACK.

6.3.2 Servomotor Ratings


	Voltage					200	0 V			
ľ	Model SGMXG-		03A□B	06A□B	09A□B	12A□B	20A□B	30A□B	40A□B	55A□B
Rated Output *	!	kW	0.3	0.6	0.9	1.2	2.0	3.0	4.0	5.5
Rated Torque *	1, *2	N·m	2.86	5.68	8.62	11.5	19.1	28.4	38.2	52.6
Instantaneous N	Maximum Torque *1	N·m	7.17	20.2	24.5	33.5	58 67 *3	86	121	169
Rated Current *	1	Arms	3.0	4.4	5.7	9.2	12.7	17.7	24.9	32.2
Instantaneous N	Maximum Current *1	Arms	7.3	16.9	17	28	42 50.6 *3	56	82	110
Rated Rotation	Speed *I	min-1				10	00			
Continuous Alle Speed */	owable Rotation	min-1	2000							
Maximum Rota	tion Speed *1	min-1	2000							
Torque Constan	N·m/ Arms	1.05	1.41	1.64	1.36	1.57	1.7	1.65	1.71	
Rotor Moment	Without Holding Brakes	×10-4	3.33	13.9	19.9	26	46	67.5	89	125
of Inertia *4	With Holding Brakes	kg·m²	3.58	16	22	28.1	53.9	75.4	96.9	133
Rated Power	Without Holding Brakes	1 337/	24.6	23.2	37.3	50.9	79.3	119	164	221
Rate *1	With Holding Brakes	kW/s	22.9	20.2	33.8	47.1	67.7	107	150.6	208
Rated Angular	Without Holding Brakes	1/ 2	8590	4090	4330	4420	4150	4210	4290	4210
Acceleration *1	With Holding Brakes	rad/s ²	7990	3550	3920	4090	3540	3770	3940	3950
Heat Sink Size *5 mm		250 ×250 × 6 (aluminum)	\times 6 (alumi- 400 × 400 × 20 (steel) 550 × 550 × 30 (steel)							
Protective Struc	eture *6		Totally enclosed, self-cooled, IP67							

Continued on next page.


Continued from previous page.

								Continu	ica nom pre	vious page.
	Voltage					200	V			
N	Model SGMXG-		03A□B	06A□B	09A□B	12A□B	20A□B	30A□B	40A□B	55A□B
	Rated Voltage	V				24 VD	C ^{+10%}			
	Capacity	W		1	0		18.5		25	
	Holding Torque	N·m	4.5	12.7	19	0.6	43.1		72	2.6
Holding Brake	Coil Resistance	Ω (at 20° C)	56		59		31		23	
Specification *7	Rated Current	A (at 20° C)	0.43 0.41				0.	77	1.05	
	Time Required to Release Brake	ms	100					1	70	
	Time Required to Brake	ms	80				100		8	0
Allowable	Without External D	evices	18 times	11 times	7.5 times	8.3 times	11 times	7.3 times	8.3 times	10 times
of Inertia (Rotor Moment of Inertia Ratio) *8	(Rotor Moment of Inertia With External Reger Resistor and External Dynamic Brake Res		18 times	11 times	18 times	18 times	13 times	12 times	16 times	14 times
	LF		40		58		7	9	1	13
Allowable Shaft Loads	Allowable Radial Load	N	49	90	686	980	1470		1764	
*10	Allowable Thrust Load	N	9	8	343	392	490		588	


- *1 These values are for operation in combination with a SERVOPACK when the temperature of the armature winding is 20°C. These are typical values.
- *2 The rated torques are the continuous allowable torque values with an aluminum or steel heat sink of the dimensions given in the table.
- *3 This is the value if you combine with the SERVOPACK SGDXS-200A.
- *4 The values for the servomotors with batteryless absolute encoders (and holding brakes) are the same as those in the table.
- *5 Refer to the following section for the relation between the heat sinks and derating rate.
 - (1) Servomotor Heat Dissipation Conditions on page 156
- *6 This does not apply to the shaft opening. Protective structure specifications apply only when the special cable is used.

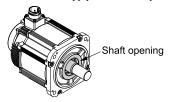

- *7 Observe the following precautions if you use a servomotor with a holding brake.
 - · The holding brake cannot be used to stop the servomotor.
 - The time required to release the brake and the time required to brake depend on which discharge circuit is used. Confirm that the operation delay time is appropriate for the actual equipment.
 - The 24-VDC power supply is not provided by Yaskawa.
- *8 The rotor moment of inertia scaling factor is the value for a standard servomotor without a holding brake.
- *9 To externally connect a dynamic brake resistor, select hardware option specification 0020 for the SERVOPACK.
- *10 Design the mechanical system so that the thrust and radial loads applied to the servomotor shaft end during operation do not exceed the values given in the table.

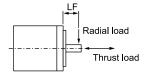

6.3.3 Torque-Rotation Speed Characteristics

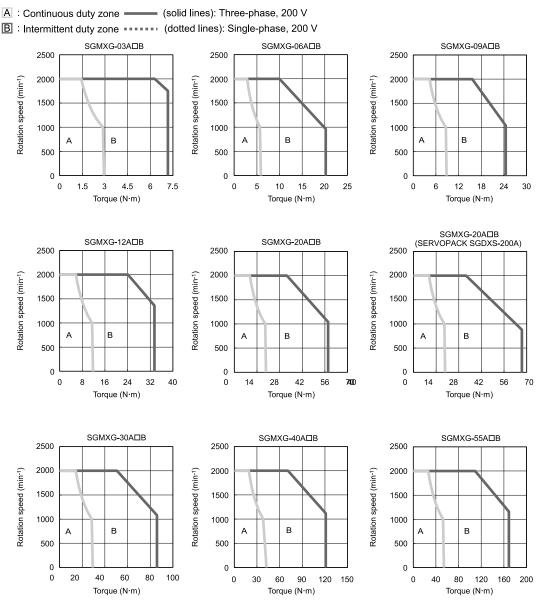


Note:

- $\bullet \ These \ values \ (typical \ values) \ are \ for \ operation \ in \ combination \ with \ a \ SERVOPACK \ when \ the \ temperature \ of \ the \ armature \ winding \ is \ 20^{\circ}C.$
- The characteristics in the intermittent duty zone depend on the power supply voltage.
- If the effective torque is within the allowable range for the rated torque, the servomotor can be used within the intermittent duty zone.
- If you use a servomotor main circuit cable that exceeds 20 m, the intermittent duty zone in the torque-rotation speed characteristics will become smaller because the voltage drop increases.

6.3.4 Servomotor Overload Protection Characteristics

The overload detection level is set for hot start conditions with a servomotor surrounding air temperature of 40° C.

For the overload detection level, priority is given to the lower of the detection levels in the overload protection characteristics of the connected SERVOPACK and servomotor.

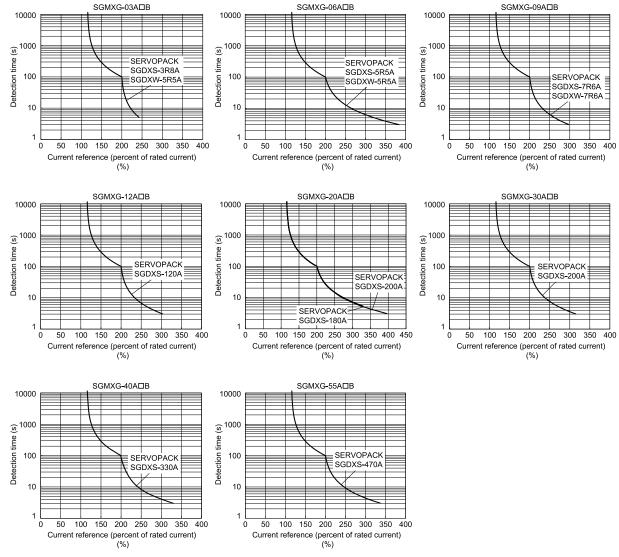

Note:

- The above overload protection characteristics do not mean that you can perform continuous duty operation with an output of 100% or higher.
- Use the servomotor so that the effective torque remains within the continuous duty zone given in "6.3.3 Torque-Rotation Speed Characteristics on page 161".
- The value for the instantaneous maximum current / rated current (%) for each servomotor is taken as the current reference maximum value.

6.3.5 Allowable Load Moment of Inertia

The allowable load moments of inertia (rotor moment of inertia ratios) for the servomotors are given in "6.3.2 Servomotor Ratings on page 159". The values are determined by the regenerative energy processing capacity of the SERVOPACK and are also affected by the drive conditions of the servomotor. Perform the required steps for each of the following cases.

(1) Exceeding the Allowable Load Moment of Inertia

Use one of the following measures to adjust the load moment of inertia to within the allowable value.

- Reduce the torque limit.
- Reduce the deceleration rate.
- Reduce the maximum rotation speed.

If the above steps are not possible, install an external regenerative resistor.

Information

An Overvoltage Alarm (A.400) is likely to occur during deceleration if the load moment of inertia exceeds the allowable load moment of inertia. SERVOPACKs with a built-in regenerative resistor may generate a Regenerative Overload Alarm (A.320).

Refer to the following catalog for the regenerative power (W) that can be processed by the SERVOPACKs.

AC Servo Drives Σ-X Series (Document No.: KAEP C710812 03)

Install an external regenerative resistor when the built-in regenerative resistor cannot process all of the regenerative power.

(2) When an External Regenerative Resistor Is Required

Install the external regenerative resistor.


Refer to the following catalog for details on external regenerative resistors.


AC Servo Drives Σ-X Series (Document No.: KAEP C710812 03)


6.3.6 Derating Rates

(1) Servomotor Heat Dissipation Conditions

The servomotor ratings are the continuous allowable values when a heat sink is installed on the servomotor. If the servomotor is mounted on a small device component, the servomotor temperature may rise considerably because the surface for heat dissipation becomes smaller. Refer to the following graphs for the relation between the heat sink size and derating rate.

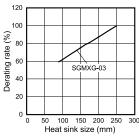

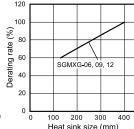

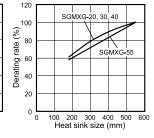




The actual temperature rise depends on the following conditions. Always check the servomotor temperature with the actual equipment.


Important


- ullet How the heat sink (the servomotor mounting section) is attached to the installation surface
- Status between heat sink and servomotor (sealant, reduction gear, etc.)
- What material is used for the servomotor mounting section
- · Servomotor rotation speed

(2) Servomotor Derating Rates for Surrounding Air Temperature

Apply a suitable derating rate from the following graphs according to the surrounding air temperature of the servomotor (60°C max.).

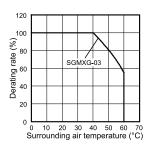


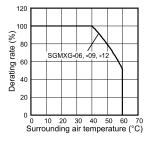


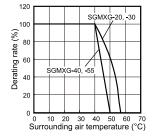


(3) Applications Where the Altitude Exceeds 1000 m

The servomotor ratings are the continuous allowable values at an altitude of 1000 m or less. If you use a servomotor at an altitude that exceeds 1000 m (2000 m max.), the heat dissipation effect of the air is reduced. Apply the appropriate derating rate from the following graphs.

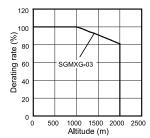

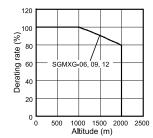

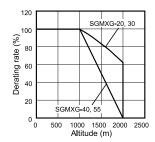

Note:

- When using servomotors with derating, change the detection timing of overload warning and overload alarm based on the overload detection level of the motor given in "6.3.4 Servomotor Overload Protection Characteristics on page 161".
- Use the combination of the SERVOPACK and servomotor so that the derating conditions are satisfied for both the SERVOPACK and servomotor.
- The derating rates are applicable only when the average rotation speed is less than or equal to the rated rotation speed. If the average rotation speed exceeds the rated rotation speed, consult with your Yaskawa representative.


6.4 Specifications and Ratings (400 V, 1500-min⁻¹ Specification)

6.4.1 Specification

,	/oltage					40	0 V				
Mod	el SGMXG-	05D□A	09D□A	13D□A	20D□A	30D□A	44D□A	55D□A	75D□A	1AD□A	1ED□A
Time Ratin	g					Conti	nuous				
Thermal C	lass					UL: F,	, CE: F				
Insulation 1	Resistance				:	500 VDC,	$10~\mathrm{M}\Omega$ min	l .			
Withstand	Voltage			1,80	00 VAC for	1 minute,	or 2,200 VA	AC for 1 sec	cond		
Excitation						Permane	nt magnet				
Mounting						Flange-	mounted				
Drive Meth	nod		Direct drive								
Rotation D	irection		Counte	erclockwise	(CCW) for	r forward re	eference wh	nen viewed	from the lo	ad side	
Vibration C	Class *I					V	15				
	Surrounding Air Temperature				0°0	C to 40°C (60°C max.) *3			
	Surrounding Air Humidity		20% to 80% relative humidity (with no condensation)								
Environ- mental Condi- tions	Installation Site	 Must be Must fa Must ha *3 	e well-vent cilitate ins ave an altit	ilated and f) m or less.	and moistu	re.	is possible	between 10	000 m and 2	2000 m.)
	Storage Environment	Storage te	mperature:	-20°C to +	owing envir 60°C (with relative hun	no freezing	g)	with the po	wer cable o	disconnecte	d.
Impact Resistance	Impact Acceleration (at Flange)					490	m/s ²				
*2	Number of Impacts					2 ti	mes				
Vibration Resistance *2	Vibration Acceleration (at Flange)					$5 \text{ m/s}^2 \text{ front to back}$ 24.5 m/s ²					
Applica- ble SER- VOPAC- Ks *4	SGDXS	1R9D	3R5D (5R4D) *4	5R4D (8R4D) *4	8R4D (120D) *4	120D (210A) *4	170D (260D) *4	210D (370D) *4	260D	280D	370D

^{*1} A vibration class of V15 indicates a vibration amplitude of 15 μm maximum on the servomotor without a load at the rated rotation speed.

The given values are for when the servomotor shaft is mounted horizontally and impact or vibration is applied in the directions shown in the following figures. The strength of the vibration that the servomotor can withstand depends on the application. Always check the vibration acceleration that is applied to the servomotor with the actual equipment.

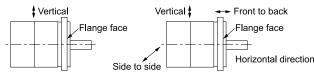

Impact Applied to the Servomotor Vibration Applied to the Servomotor

€ 6.4.7 Derating Rates on page 172

■ 6.4.2 Servomotor Ratings (SGMXG-05D□A to -30D□A) on page 166

■ 6.4.4 Torque-Rotation Speed Characteristics on page 170

6.4.2 Servomotor Ratings (SGMXG-05D□A to -30D□A)

	Voltage				400 V		
	Model SGMXG-		05D□A	09D□A	13D□A	20D□A	30D□A
Rated Output *1		kW	0.45	0.85	1.3	1.8	2.9
Rated Torque *1, *2		N·m	2.86	5.39	8.34	11.5	18.6
Instantaneous Maxim	um Torque *I	N·m	8.92	14.2 20.0 *3	23.3 30.0 *4	28.7 35.4 *5	45.1 66.8 *6
Rated Current *1		Arms	1.9	3.5	5.4	8.4	11.9
Instantaneous Maximum Current */		Arms	5.5 8.5 14 21 14 *3 20 *4 28 *			21 28 *5	28 45 *6
Rated Rotation Speed */		min-1		•			
Continuous Allowabl	e Rotation Speed	min-1		4000		30	000
Maximum Rotation Speed */		min-1			4000		
Torque Constant *1		N·m/Arms	1.71	1.72	1.78	1.50	1.69
Rotor Moment of	Without Holding Brakes	10.41 2	3.33	13.9	19.9	26.0	46.0
Inertia *7	With Holding Brakes	×10-4 kg⋅m²	3.58	16.0	22.0	28.1	53.9
Rated Power Rate *1	Without Holding Brakes	1.337/	24.6	20.9	35.0	50.9	75.2
	With Holding Brakes	kW/s	22.9	18.2	31.6	47.1	64.2
Rated Angular	Without Holding Brakes	rad/s²	8590	3880	4190	4420	4040
Acceleration *I	With Holding Brakes	rad/s²	7990	3370	3790	4090	3450
Heat Sink Size *8		mm	250 ×250 × 6 (aluminum)	$400 \times 400 \times 20 \text{ (steel)}$			550 ×550 × 30 (steel)
Protective Structure *	·9			Totally en	closed, self-cod	oled, IP67	
	Rated Voltage	V			24 VDC ^{+10%}		
	Capacity	W		1	0		18.5
	Holding Torque	N·m	4.5	12.7	19	9.6	43.1
Holding Brake	Coil Resistance	Ω (at 20°C)	56		59		31
Specification *10	Rated Current	A (at 20°C)	0.43		0.41		0.77
	Time Required to Release Brake	ms		10	00		170
	Time Required to Brake	ms		8	0		100
	At 3000 min-1		15 times		5 tin	mes	
Allowable Load Moment of Inertia (Rotor Moment of	At 4000 min-1		8.4 times	2 ti	mes	5 times	2.2 times
	With External Regenera- tive Resistor and External	At 3000 min-	15 times		10 ti	imes	
	Dynamic Brake Resistor *12	At 4000 min-	8.4 times	8 times	9 times	7 times	5 times

Continued on next page.

^{*3} Refer to the following section for the derating rates.


^{*4} To increase the instantaneous maximum torque, use the SERVOPACK model in parentheses ().

Refer to the following section for the instantaneous maximum torque for individual SERVOPACK models.


Continued from previous page.

	Voltage				400 V						
Model SGMXG-			05D□A	09D□A	09D□A 13D□A 20D□A						
	LF	mm	40		58		79				
Allowable Shaft Loads *13	Allowable Radial Load	N	490		686	980	1470				
2000	Allowable Thrust Load	N	98		343	392	490				

- *1 These values are for operation in combination with a SERVOPACK when the temperature of the armature winding is 20°C. These are typical values.
- *2 The rated torques are the continuous allowable torque values with an aluminum or steel heat sink of the dimensions given in the table.
- *3 This is the value if you combine with the SERVOPACK SGDXS-5R4D.
- *4 This is the value if you combine with the SERVOPACK SGDXS-8R4D.
- *5 This is the value if you combine with the SERVOPACK SGDXS-120D.
- *6 This is the value if you combine with the SERVOPACK SGDXS-210D.
- *7 The values for the servomotors with batteryless absolute encoders (and holding brakes) are the same as those in the table.
- *8 Refer to the following section for the relation between the heat sinks and derating rate.
 - (1) Servomotor Heat Dissipation Conditions on page 172
- *9 This does not apply to the shaft opening. Protective structure specifications apply only when the special cable is used.

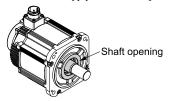

- *10 Observe the following precautions if you use a servomotor with a holding brake.
 - The holding brake cannot be used to stop the servomotor.
 - The time required to release the brake and the time required to brake depend on which discharge circuit is used. Confirm that the
 operation delay time is appropriate for the actual equipment.
 - The 24-VDC power supply is not provided by Yaskawa.
- *11 The rotor moment of inertia scaling factor is the value for a standard servomotor without a holding brake.
- *12 To externally connect a dynamic brake resistor, select hardware option specification 0020 for the SERVOPACK.
- *13 Design the mechanical system so that the thrust and radial loads applied to the servomotor shaft end during operation do not exceed the values given in the table.

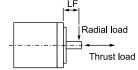

6.4.3 Servomotor Ratings (SGMXG-44D□A to -1ED□A)

Voltage				400 V		
Model SGMXG-		44D□A	55D□A	75D□A	1AD□A	1ED□A
Rated Output */	kW	4.4	5.5	7.5	11	15
Rated Torque *1, *2	N·m	28.4	35.0	48.0	70.0	95.4
Instantaneous Maximum Torque */	N·m	71.6 95.6 *3	102 134 *4	119	175	224
Rated Current *1	Arms	16.0	18.6	25.7	28.1	37.0
Instantaneous Maximum Current *1	Arms	41 56 *3	55 75 *4	63	70	85
Rated Rotation Speed *1	min-1			1500		
Continuous Allowable Rotation Speed	min-1	3000 2				000
Maximum Rotation Speed */	min ⁻¹	4000 3000				000
Torque Constant *1	N·m/Arms	1.92	2.05	1.97	2.76	2.86

Continued on next page.


Continued from previous page.

	Voltage				400 V		i previous page.
1	Model SGMXG-		44D□A	55D□A	75D□A	1AD□A	1ED□A
Rotor Moment of	Without Holding Brakes	×10-4 kg⋅m²	67.5	89.0	125	242	303
Inertia *5	With Holding Brakes		75.4	96.9	133	261	341
Rated Power Rate *1	Without Holding Brakes	kW/s	119	138	184	202	300
	With Holding Brakes		107	126	173	188	267
Rated Angular Acceleration */			4210	3930	3840	2890	3150
eration 1	With Holding Brakes		3770	3610	3610	2680	2800
Heat Sink Size *6		mm	550) × 550 × 30 (st	650 ×650 × 35 (steel)		
Protective Structure *7	7		Totally enclosed, self-cooled, IP67				
	Rated Voltage	v	24 VDC 0 10%				
	Capacity	W	18.5	25		32	35
	Holding Torque	N·m	43.1	72.6		84.3	114.6
Holding Brake	Coil Resistance	Ω (at 20°C)	31	23		18	17
Specification *8	Rated Current	A (at 20°C)	0.77 1.05			1.33	1.46
	Time Required to Release Brake	ms	170				250
	Time Required to Brake	ms	100		8	0	
	At 2000 min-1			_		5 ti	mes
	At 3000 min-1			5 times		2.2 times	1.5 times
Allowable Load Moment of Inertia	At 4000 min ⁻¹		2.4 times	3.5 times	2.2 times	-	_
(Rotor Moment of Inertia Ratio) *9	With External Regen-	At 2000 min-1		_		10 ti	imes
linerum remeio)	erative Resistor and External Dynamic	At 3000 min-1		10 times	T	4 times	2 times
	Brake Resistor *10	At 4000 min ⁻¹	5 tin	mes	4 times	-	_
	LF	mm	79	1	13	11	16
Allowable Shaft	Allowable Radial Load	N	1470		1764		4998
	Allowable Thrust Load	N	490		588		2156

^{*1} These values are for operation in combination with a SERVOPACK when the temperature of the armature winding is 20°C. These are typical values.

(1) Servomotor Heat Dissipation Conditions on page 172

*7 This does not apply to the shaft opening. Protective structure specifications apply only when the special cable is used.

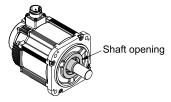

^{*2} The rated torques are the continuous allowable torque values with an aluminum or steel heat sink of the dimensions given in the table.


^{*3} This is the value if you combine with the SERVOPACK SGDXS-260D.

^{*4} This is the value if you combine with the SERVOPACK SGDXS-370D.


^{*5} The values for the servomotors with batteryless absolute encoders (and holding brakes) are the same as those in the table.

^{*6} Refer to the following section for the relation between the heat sinks and derating rate.

- *8 Observe the following precautions if you use a servomotor with a holding brake.
 - The holding brake cannot be used to stop the servomotor.
 - The time required to release the brake and the time required to brake depend on which discharge circuit is used. Confirm that the operation delay time is appropriate for the actual equipment.
 - The 24-VDC power supply is not provided by Yaskawa.
- *9 The rotor moment of inertia scaling factor is the value for a standard servomotor without a holding brake.
- $To \ externally \ connect\ a\ dynamic\ brake\ resistor,\ select\ hardware\ option\ specification\ 0020\ for\ the\ SERVOPACK.$
- *10 *11 Design the mechanical system so that the thrust and radial loads applied to the servomotor shaft end during operation do not exceed the values given in the table.

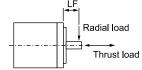

6.4.4 Torque-Rotation Speed Characteristics

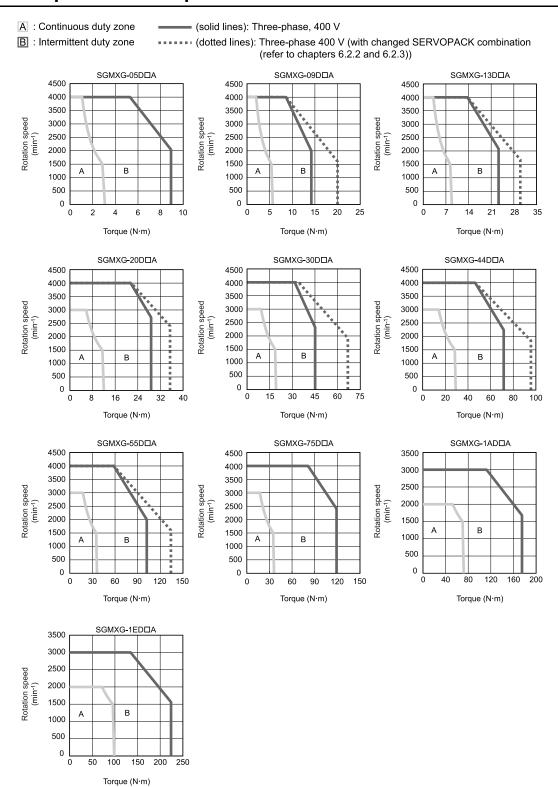


Note:

- \bullet These values (typical values) are for operation in combination with a SERVOPACK when the temperature of the armature winding is 20°C.
- The characteristics in the intermittent duty zone depend on the power supply voltage.
- If the effective torque is within the allowable range for the rated torque, the servomotor can be used within the intermittent duty zone.
- If you use a servomotor main circuit cable that exceeds 20 m, the intermittent duty zone in the torque-rotation speed characteristics will become smaller because the voltage drop increases.

6.4.5 Servomotor Overload Protection Characteristics

The overload detection level is set for hot start conditions with a servomotor surrounding air temperature of 40° C

For the overload detection level, priority is given to the lower of the detection levels in the overload protection characteristics of the connected SERVOPACK and servomotor.

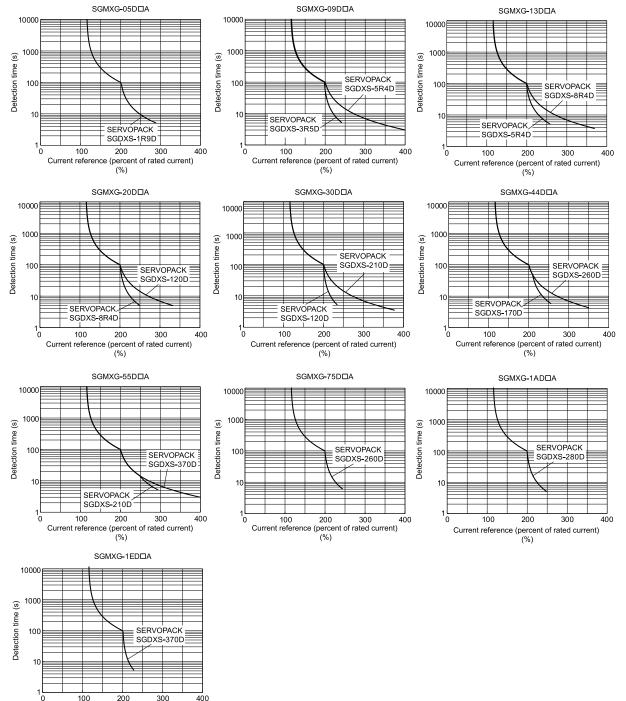

Note:

Current reference (percent of rated current)

- The above overload protection characteristics do not mean that you can perform continuous duty operation with an output of 100% or higher.
- Use the servomotor so that the effective torque remains within the continuous duty zone given in "6.4.4 Torque-Rotation Speed Characteristics on page 170".
- The value for the instantaneous maximum current / rated current (%) for each servomotor is taken as the current reference maximum value.

6.4.6 Allowable Load Moment of Inertia

The allowable load moments of inertia (rotor moment of inertia ratios) for the servomotors are given in "6.4.2 Servomotor Ratings ($SGMXG-05D\square A$ to $-30D\square A$) on page 166, 6.4.3 Servomotor Ratings ($SGMXG-44D\square A$ to $-1ED\square A$) on page 167". The values are determined by the regenerative energy processing capacity of the SERVOPACK and are also affected by the drive conditions of the servomotor. Perform the required steps for each of the following cases.

(1) Exceeding the Allowable Load Moment of Inertia

Use one of the following measures to adjust the load moment of inertia to within the allowable value.

- Reduce the torque limit.
- Reduce the deceleration rate.
- Reduce the maximum rotation speed.

If the above steps are not possible, install an external regenerative resistor.



An Overvoltage Alarm (A.400) is likely to occur during deceleration if the load moment of inertia exceeds the allowable load moment of inertia. SERVOPACKs with a built-in regenerative resistor may generate a Regenerative Overload Alarm (A.320).

Refer to the following catalog for the regenerative power (W) that can be processed by the SERVOPACKs.

AC Servo Drives Σ-X Series (Document No.: KAEP C710812 03)

Install an external regenerative resistor when the built-in regenerative resistor cannot process all of the regenerative power.

(2) When an External Regenerative Resistor Is Required

Install the external regenerative resistor.


Refer to the following catalog for details on external regenerative resistors.


AC Servo Drives Σ-X Series (Document No.: KAEP C710812 03)


6.4.7 Derating Rates


(1) Servomotor Heat Dissipation Conditions

The servomotor ratings are the continuous allowable values when a heat sink is installed on the servomotor. If the servomotor is mounted on a small device component, the servomotor temperature may rise considerably because the surface for heat dissipation becomes smaller. Refer to the following graphs for the relation between the heat sink size and derating rate.

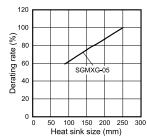

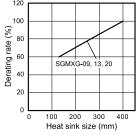

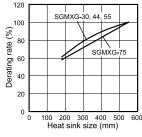

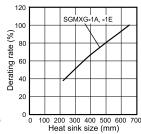




The actual temperature rise depends on the following conditions. Always check the servomotor temperature with the actual equipment.


Important • How the heat sink (the servomotor mounting section) is attached to the installation surface


- Status between heat sink and servomotor (sealant, reduction gear, etc.)
- What material is used for the servomotor mounting section
- Servomotor rotation speed

(2) Servomotor Derating Rates for Surrounding Air Temperature

Apply a suitable derating rate from the following graphs according to the surrounding air temperature of the servomotor (60°C max.).

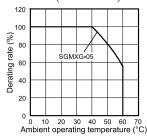


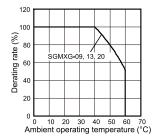


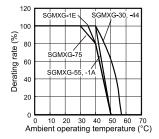


(3) Applications Where the Altitude Exceeds 1000 m

The servomotor ratings are the continuous allowable values at an altitude of 1000 m or less. If you use a servomotor at an altitude that exceeds 1000 m (2000 m max.), the heat dissipation effect of the air is reduced. Apply the appropriate derating rate from the following graphs.

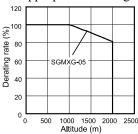

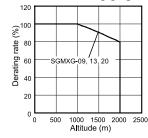

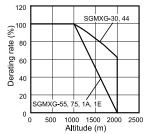

Note:

- When using servomotors with derating, change the detection timing of overload warning and overload alarm based on the overload detection level of the motor given in "6.4.5 Servomotor Overload Protection Characteristics on page 171".
- Use the combination of the SERVOPACK and servomotor so that the derating conditions are satisfied for both the SERVOPACK and servomotor.
- The derating rates are applicable only when the average rotation speed is less than or equal to the rated rotation speed. If the average rotation speed exceeds the rated rotation speed, consult with your Yaskawa representative.


6.5 External Dimensions (200 V Specification)

6.5.1 SGMXG-03A□A, -05A□A, -03A□B

(1) Servomotors without Holding Brakes

(a) Standard Specification

Information Models with the additional specification "3 Standard (Functional Safety-Compatible Encoder)" have the same dimensions as those indicated below.

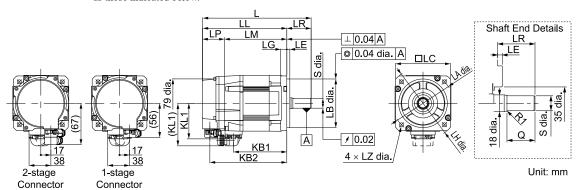

Model SGMXG-	L *1	LL * <i>1</i>	LM	LP */	LR	KB1	KB2 */	KL1 (KL1)
03A□A21A□	164	124	90	34	40	75	112	59 (70)
05A□A21A□	177	137	103	34	40	88	125	59 (70)
03A□B21A□	177	137	103	34	40	88	125	59 (70)

Model	Flange Dimensions								Shaft End Dimensions	
SGMXG-	LA	LB	LC	LE	LG	LH	LZ	S	Q	[kg]
03A□A21A□	100	80-0.030	90	5	10	120	6.6	16-0.011	30	2.6
05A□A21A□	100	80-0.030	90	5	10	120	6.6	16-0.011	30	3.2
03A□B21A□	100	80-0.030	90	5	10	120	6.6	16-0.011	30	3.2


Note

- 1. The dimensions are same for models with oil seals.
- 2. The values for a straight shaft end without key specification are given. Refer to the information given below for other shaft end specifications.

(c) Shaft End Specification on page 175

³ 6.5.5 Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXG-□□□W) on page 193

(b) Σ -7 Compatible Specification

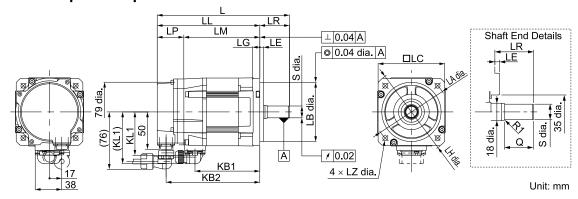


Note:

The difference from the model with standard specifications is the shape of the encoder cable connector.

The dimensions for non-connector parts are identical to those for models with standard specifications.


(c) Shaft End Specification

• Straight with Key and Tap

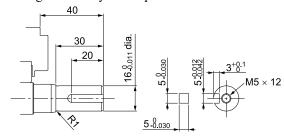

(d) Connector Specifications

• Encoder Connector (26-bit Encoder): Standard Specification The encoder cable is installed in the following direction.

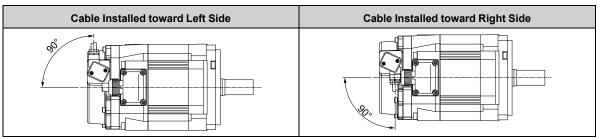

For details on selecting cables, refer to the following section and manual.

■ 8.5 Cables for the SGMXG Servomotors on page 271

Ω Σ-X-Series Peripheral Device Selection Manual (Manual No.: SIEP C710812 12)

• Encoder Connector (26-bit Encoder): Σ-7 Compatible Specification



1	PS	6 * <i>I</i>	BAT(+)
2	/PS	7	_
3	_	8	-
4	PG5V	9	PG0V
5	BAT(-)	10	FG (frame ground)

1 A battery is required only for an absolute encoder.

Receptacle: CMV1-R10P

Applicable plug (not provided by Yaskawa)

 $\begin{array}{l} Plug: CM10-AP10S- \square-D \ (R1) \ (right-angle \ type), \ CM10-SP10S- \square-D \ (R1) \ (straight), \ CMV1-AP10S- \square \square \ (right-angle \ type), \ CMV1-SP10S- \square \square \ (straight), \ CMV1S-AP10S- \square \square \ (right-angle \ type), \ CMV1S-SP10S- \square \square \ (straight) \end{array}$

(varies depending on the applicable cable size.)

Manufacturer: Fujikura Ltd.

• Servomotor Connector: Same for both Standard Specifications and Σ-7 Compatible Specifications




PE	FG (frame ground)	3	Phase U
5	_	2	Phase V
4	-	1	Phase W

Manufacturer: Japan Aviation Electronics Industry, Ltd.

Servomotors with Holding Brakes

(a) Standard Specification

Information Models with the additional specification "3 Standard (Functional Safety-Compatible Encoder)" have the same dimensions as those indicated below.

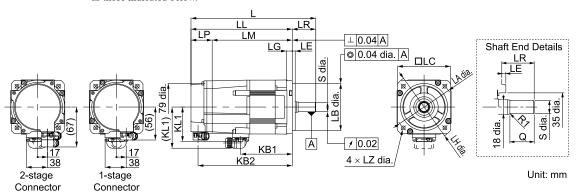

Model SGMXG-	L *1	LL *1	LM	LP */	LR	KB1	KB2 */	KL1 (KL1)
03АпА2САп	197	157	123	34	40	75	145	59 (70)
05A□A2CA□	210	170	136	34	40	88	158	59 (70)
03A□B2CA□	210	170	136	34	40	88	158	59 (70)

Model	Flange Dimensions							Shaft End Dimensions		Approx. Mass
SGMXG-	LA	LB	LC	LE	LG	LH	LZ	S	Q	[kg]
03A□A2CA□	100	80-0.030	90	5	10	120	6.6	16-0.011	30	3.6
05A□A2CA□	100	80-0.030	90	5	10	120	6.6	16-0.011	30	4.2
03A□B2CA□	100	80-0.030	90	5	10	120	6.6	16-0.011	30	4.2


For models that have a batteryless absolute encoder (SGMX \square - \square DW), L, LL, LP, and KB2 are 8 mm greater than the given value. Refer to the following section for the values for individual models.

- 1. The dimensions are same for models with oil seals.
- The values for a straight shaft end without key specification are given. Refer to the information given below for other shaft end specifications.

 Solution (c) Shaft End Specification on page 177

^{6.5.5} Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXG-□□□W) on page 193

(b) Σ -7 Compatible Specification

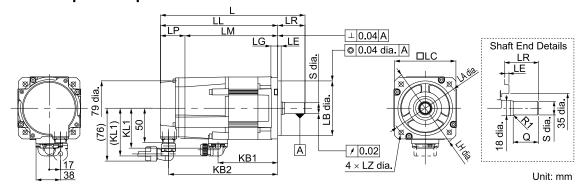


Note:

The difference from the model with standard specifications is the shape of the encoder cable connector.

The dimensions for non-connector parts are identical to those for models with standard specifications.


(c) Shaft End Specification

• Straight with Key and Tap

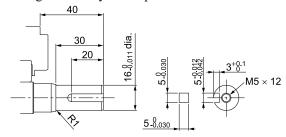

(d) Connector Specifications

• Encoder Connector (26-bit Encoder): Standard Specification The encoder cable is installed in the following direction.

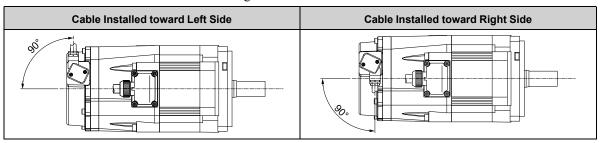

For details on selecting cables, refer to the following section and manual.

■ 8.5 Cables for the SGMXG Servomotors on page 271

Ω Σ-X-Series Peripheral Device Selection Manual (Manual No.: SIEP C710812 12)

• Encoder Connector (26-bit Encoder): Σ-7 Compatible Specification



1	PS	6 *1	BAT(+)
2	/PS	7	_
3	_	8	-
4	PG5V	9	PG0V
5	BAT(-)	10	FG (frame ground)

A battery is required only for an absolute encoder.

Receptacle: CMV1-R10P

Applicable plug (not provided by Yaskawa)

Plug: CM10-AP10S- \square -D (R1) (right-angle type), CM10-SP10S- \square -D (R1) (straight), CMV1-AP10S- \square \square (right-angle type), CMV1-SP10S- \square \square (straight), CMV1S-AP10S- \square \square (right-angle type), CMV1S-SP10S- \square \square (straight)

(varies depending on the applicable cable size.)

Manufacturer: Fujikura Ltd.

• Servomotor Connector: Same for both Standard Specifications and Σ-7 Compatible Specifications



PE	FG (frame ground)	3	Phase U
5	Brake terminal	2	Phase V
4	Brake terminal	1	Phase W


Manufacturer: Japan Aviation Electronics Industry, Ltd.

6.5.2 SGMXG-09A□A to -20A□A, -06A□B to -12A□B

(1) Servomotors without Holding Brakes

(a) Standard Specification

Information Models with the additional specification "3 Standard (Functional Safety-Compatible Encoder)" have the same dimensions as those indicated below.

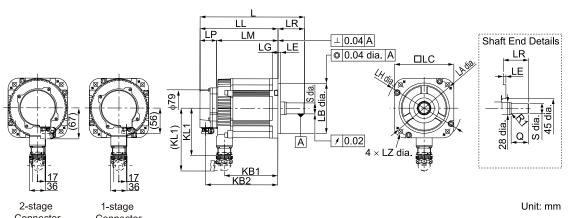

Model SGMXG-	L * <i>1</i>	LL *1	LM	LP */	LR	KB1	KB2 */	KL1 (KL1 *2)
09A□A21A□	193	135	101	34	58	83	123	104 (138)
13A□A21A□	209	151	117	34	58	99	139	104 (138)
20A□A21A□	227	169	135	34	58	117	157	104 (138)
06A□B21A□	193	135	101	34	58	83	123	104 (138)
09A□B21A□	209	151	117	34	58	99	139	104 (138)
12A□B21A□	227	169	135	34	58	117	157	104 (138)

Model	Flange Dimensions								Shaft End Dimensions	
SGMXG-	LA	LB	LC	LE	LG	LH	LZ	S	Q	[kg]
09A□A21A□	145	110-0.035	130	6	12	165	9	24-0.013	40	5.5
13A□A21A□	145	110-0.035	130	6	12	165	9	24-0.013	40	7.1
20A□A21A□	145	110-0.035	130	6	12	165	9	24-0.013	40	8.6
06A□B21A□	145	110-0.035	130	6	12	165	9	24-0.013	40	5.5
09A□B21A□	145	110-0.035	130	6	12	165	9	24-0.013	40	7.1
12A□B21A□	145	110-0.035	130	6	12	165	9	24-0.013	40	8.6

^{6.5.5} Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXG-□□□W) on page 193

^{*2} These are the values when the flexible connectors are connected.


Note:

- 1. The dimensions are same for models with oil seals.
- 2. The values for a straight shaft end without key specification are given. Refer to the information given below for other shaft end specifications.

specifications.

G (c) Shaft End Specification on page 179

(b) Σ -7 Compatible Specification

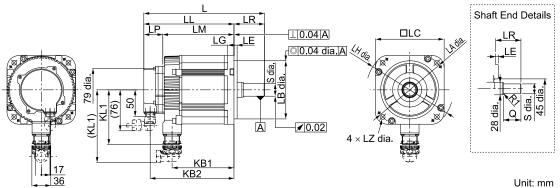


Note:

The difference from the model with standard specifications is the shape of the encoder cable connector.

The dimensions for non-connector parts are identical to those for models with standard specifications.


(c) Shaft End Specification

· Straight with Key and Tap

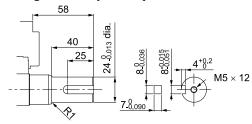

(d) Connector Specifications

• Encoder Connector (26-bit Encoder): Standard Specification The encoder cable is installed in the following direction.

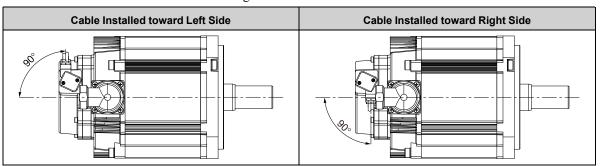

For details on selecting cables, refer to the following section and manual.

■ 8.5 Cables for the SGMXG Servomotors on page 271

Σ-X-Series Peripheral Device Selection Manual (Manual No.: SIEP C710812 12)

• Encoder Connector (26-bit Encoder): Σ-7 Compatible Specification



1	PS	6 * <i>I</i>	BAT(+)
2	/PS	7	_
3	_	8	-
4	PG5V	9	PG0V
5	BAT(-)	10	FG (frame ground)

*1 A battery is required only for an absolute encoder.

Receptacle: CMV1-R10P

Applicable plug (not provided by Yaskawa)

Plug: CM10-AP10S-□-D (R1) (right-angle type), CM10-SP10S-□-D (R1) (straight), CMV1-AP10S-□□ (right-angle type), CMV1-SP10S-□□ (straight), CMV1S-AP10S-□□ (right-angle type), CMV1S-SP10S-□□ (straight)

(varies depending on the applicable cable size.)

Manufacturer: Fujikura Ltd.

• Servomotor Connector: Same for both Standard Specifications and Σ-7 Compatible Specifications

//			
	o o	_о А	$/\!/$
\mathbb{I}	0	о В	$/\!/$
	Š		//


A	Phase U	C	Phase W
В	Phase V	D	FG (frame ground)

Manufacturer: Japan Aviation Electronics Industry, Ltd.

(2) Servomotors with Holding Brakes

(a) Standard Specification

Information Models with the additional specification "3 Standard (Functional Safety-Compatible Encoder)" have the same dimensions

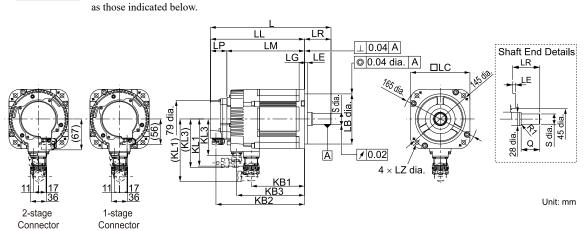

Model SGMXG-	L *1	LL */	LM	LP *1	LR	KB1	KB2 */	KB3	KL1 (KL1 *2)	KL3 (KL3 *2)
09А□А2СА□	229	171	137	34	58	83	159	115	104 (138)	81 (106)
13A□A2CA□	245	187	153	34	58	99	175	131	104 (138)	81 (106)
20A□A2CA□	263	205	171	34	58	117	193	149	104 (138)	81 (106)
06A□B2CA□	229	171	137	34	58	83	159	115	104 (138)	81 (106)
09A□B2CA□	245	187	153	34	58	99	175	131	104 (138)	81 (106)
12A□B2CA□	263	205	171	34	58	117	193	149	104 (138)	81 (106)

Model SGMXG-	Flange Dimensions								Shaft End Dimensions	
	LA	LB	LC	LE	LG	LH	LZ	S	Q	[kg]
09A□A2CA□	145	110-0.035	130	6	12	165	9	24-0.013	40	7.5
13A□A2CA□	145	110-0.035	130	6	12	165	9	24-0.013	40	9.0
20A□A2CA□	145	110-0.035	130	6	12	165	9	24-0.013	40	11.0

Continued on next page.

Continued from previous page.

Model			Shaf Dimer	Approx. Mass						
SGMXG-	LA	LB	LC	LE	LG	LH	LZ	S	Q	[kg]
06A□B2CA□	145	110-0.035	130	6	12	165	9	24-0.013	40	7.5
09A□B2CA□	145	110-0.035	130	6	12	165	9	24-0.013	40	9.0
12A□B2CA□	145	110-0.035	130	6	12	165	9	24-0.013	40	11.0


- For models that have a batteryless absolute encoder (SGMX - D W), L, LL, LP, and KB2 are 8 mm greater than the given value. Refer to the following section for the values for individual models.
- 6.5.5 Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXG-□□□W) on page 193 *2 These are the values when the flexible connectors are connected.

Note:

- 1. The dimensions are same for models with oil seals.
- 2. The values for a straight shaft end without key specification are given. Refer to the information given below for other shaft end specifications.

 (c) Shaft End Specification on page 181

(b) Σ -7 Compatible Specification

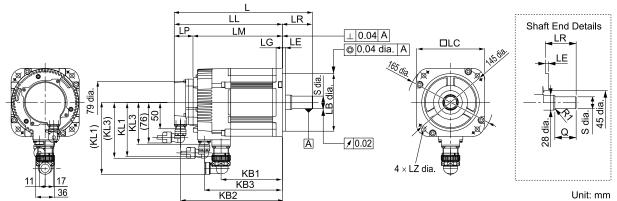


The difference from the model with standard specifications is the shape of the encoder cable connector.

The dimensions for non-connector parts are identical to those for models with standard specifications.


(c) Shaft End Specification

· Straight with Key and Tap

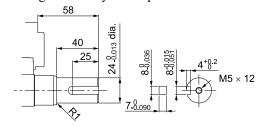

(d) Connector Specifications

• Encoder Connector (26-bit Encoder): Standard Specification The encoder cable is installed in the following direction.

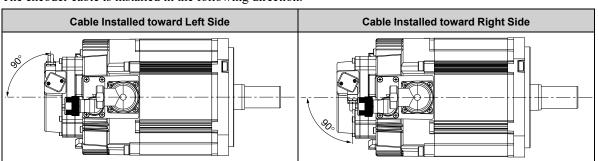

For details on selecting cables, refer to the following section and manual.

■ 8.5 Cables for the SGMXG Servomotors on page 271

Ω Σ-X-Series Peripheral Device Selection Manual (Manual No.: SIEP C710812 12)

• Encoder Connector (26-bit Encoder): Σ-7 Compatible Specification



1	PS	6 *1	BAT(+)
2	/PS	7	_
3	_	8	_
4	PG5V	9	PG0V
5	BAT(-)	10	FG (frame ground)

*1 A battery is required only for an absolute encoder.

Receptacle: CMV1-R10P

Applicable plug (not provided by Yaskawa)

Plug: CM10-AP10S-□-D (R1) (right-angle type), CM10-SP10S-□-D (R1) (straight), CMV1-AP10S-□□ (right-angle type), CMV1-

 $SP10S-\square\square \ (straight), CMV1S-AP10S-\square\square \ (right-angle \ type), CMV1S-SP10S-\square\square \ (straight)$

(□ varies depending on the applicable cable size.)

Manufacturer: Fujikura Ltd.

Servomotor Connector: Same for both Standard Specifications and Σ-7 Compatible Specifications



A	Phase U	C	Phase W
В	Phase V	D	FG (frame ground)

Manufacturer: Japan Aviation Electronics Industry, Ltd.

Brake Connector: Same for both Standard Specifications and Σ-7 Compatible Specifications

H	o 1	\mathcal{M}
Ħ.	o 2	2)
1		<i>"</i>

1	Brake terminal
2	Brake terminal

Note:

There is no voltage polarity for the brake terminals.

Receptacle: CMV1Y-R2P-0(F)

Applicable plug (not provided by Yaskawa)

Plug: CM10-AP2S- \Box -D (R1) (right-angle type), CM10-SP2S- \Box -D (R1) (straight), CMV1-AP2S- \Box \Box (right-angle type), CMV1-SP2S- \Box \Box (straight), CMV1S-AP2S- \Box \Box (right-angle type), CMV1S-SP2S- \Box \Box (straight)

(□ varies depending on the applicable cable size.)

Manufacturer: Fujikura Ltd.


6.5.3 SGMXG-30A□A to -75A□A, -20A□B to -55A□B

(1) Servomotors without Holding Brakes

(a) Standard Specification

Information

Models with the additional specification "3 Standard (Functional Safety-Compatible Encoder)" have the same dimensions as those indicated below.

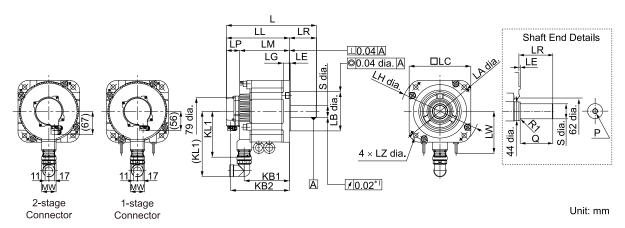

This is 0.04 for the SGMXG-55A \square A, -75A \square A, -40A \square B, and -55A \square B.

Model SGMXG-	L *1	LL */	LM	LP */	LR	KB1	KB2 */	LW	KL1 (KL1 *2)	MW
30A□A81A□	237	158	124	34	79	108	146	-	134 (190)	42
44A□A81A□	261	182	148	34	79	132	170	ı	134 (190)	43
55A□A81A□	332	219	185	34	113	163	207	123	145 (221)	50
75A□A81A□	378	265	231	34	113	209	253	123	145 (221)	59
20A□B81A□	237	158	124	34	79	108	146	ı	134 (190)	42
30A□B81A□	261	182	148	34	79	132	170	-	134 (190)	43
40A□B81A□	332	219	185	34	113	163	207	123	145 (221)	50
55A□B81A□	378	265	231	34	113	209	253	123	145 (221)	59

Model			Flange	Dimensi	ons			Shaft	End Dime	ensions	Appro-
SGMXG-	LA	LB	LC	LE	LG	LH	LZ	S	Q	P	x. Mass [kg]
30A□A81A□	200	114.3-0.025	180	3.2	18	230	13.5	35 ^{+0.01}	76	M12 ×	13.5
44A□A81A□	200	114.3-0.025	180	3.2	18	230	13.5	35 ^{+0.01}	76	25	17.5
55A□A81A□	200	114.3-0.025	180	3.2	18	230	13.5	42-0.016	110	M16 ×	21.5
75A□A81A□	200	114.3-0.025	180	3.2	18	230	13.5	42-0.016	110	32	29.5
20A□B81A□	200	114.3-0.025	180	3.2	18	230	13.5	35 ^{+0.01}	76	M12 ×	13.5
30A□B81A□	200	114.3-0.025	180	3.2	18	230	13.5	35 ^{+0.01}	76	25	17.5
40A□B81A□	200	114.3-0.025	180	3.2	18	230	13.5	42-0.016	110	M16 ×	21.5
55A□B81A□	200	114.3-0.025	180	3.2	18	230	13.5	42-0.016	110	32	29.5


For models that have a batteryless absolute encoder (SGMX \square - \square DW), L, LL, LP, and KB2 are 8 mm greater than the given value. Refer to the following section for the values for individual models.

- 1. The dimensions are same for models with oil seals.
- 2. The values for the shaft end are for a straight shaft without key and with tap. Refer to the information given below for other shaft end specifications.

 (c) Shaft End Specification on page 184

^{6.5.5} Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXG-□□□W) on page 193 *2 These are the values when the flexible connectors are connected.

(b) Σ -7 Compatible Specification

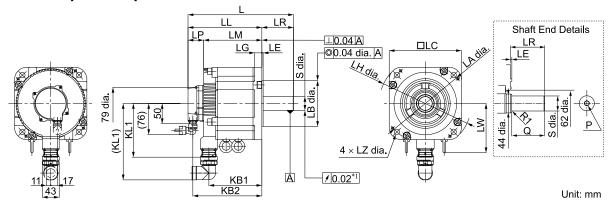

*1 This is 0.04 for the SGMXG-55A \square A, -75A \square A, -40A \square B, and -55A \square B.


Note:

The difference from the model with standard specifications is the shape of the encoder cable connector.

The dimensions for non-connector parts are identical to those for models with standard specifications.

(c) Shaft End Specification


Straight with Key and Tap

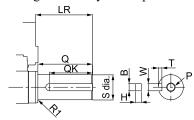

Model SGMXG-	LR	Q	QK	s	В	Н	w	T	Р	
30A□A61□□	79	76	60	35 ^{+0.01}	10-0.036	8-0.090	10-0.015	5 ^{+0.2}) // O O O O	
44A□A61□□	79	76	60	35 ^{+0.01}	10-0.036	8-0.090	10-0.015	5 0 5 0	M12 × 25	
55A□A61□□	113	110	90	42-0.016	12-0.043	8-0.090	12-0.018	5 0 5 0	M16 22	
75A□A61□□	113	110	90	42-0.016	12-0.043	8-0.090	12-0.018	5 0 0	M16 × 32	
20A□B61□□	79	76	60	35 ^{+0.01}	10-0.036	8-0.090	10-0.015	5 0 5 0	N/12 × 25	
30A□B61□□	79	76	60	35 ^{+0.01}	10-0.036	8-0.090	10-0.015	5 0 5 0	M12 × 25	
40A□B61□□	113	110	90	42-0.016	12-0.043	8-0.090	12-0.018	5 0 5 0	M16 22	
55A□B61□□	113	110	90	42-0.016	12-0.043	8-0.090	12-0.018	5 0 5 0	M16 × 32	

(d) Connector Specifications

• Encoder Connector (26-bit Encoder): Standard Specification The encoder cable is installed in the following direction.

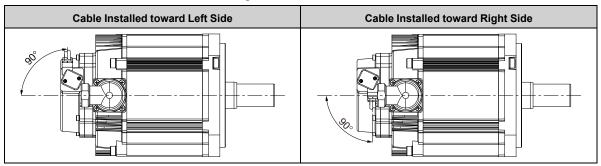

For details on selecting cables, refer to the following section and manual.

8.5 Cables for the SGMXG Servomotors on page 271

• Encoder Connector (26-bit Encoder): Σ-7 Compatible Specification



1	PS	6 * I	BAT(+)
2	/PS	7	-
3	_	8	_
4	PG5V	9	PG0V
5	BAT(-)	10	FG (frame ground)

A battery is required only for an absolute encoder.

Receptacle: CMV1-R10P

Applicable plug (not provided by Yaskawa)

Plug: CM10-AP10S--D (R1) (right-angle type), CM10-SP10S-D-D (R1) (straight), CMV1-AP10S-DD (right-angle type), CMV1-Nag. CMT0-AT 103-□-D (KT) (right-angle type), CMT0-SP10S-□-D (KT) (straight), CMV SP10S-□□ (straight), CMV1S-AP10S-□□ (right-angle type), CMV1S-SP10S-□□ (straight) (□ varies depending on the applicable cable size.)

Manufacturer: Fujikura Ltd.

Servomotor Connector: Same for both Standard Specifications and Σ -7 Compatible Specifications




A	Phase U	С	Phase W
В	Phase V	D	FG (frame ground)

Manufacturer: Japan Aviation Electronics Industry, Ltd.

Servomotors with Holding Brakes

(a) Standard Specification

Information Models with the additional specification "3 Standard (Functional Safety-Compatible Encoder)" have the same dimensions as those indicated below.

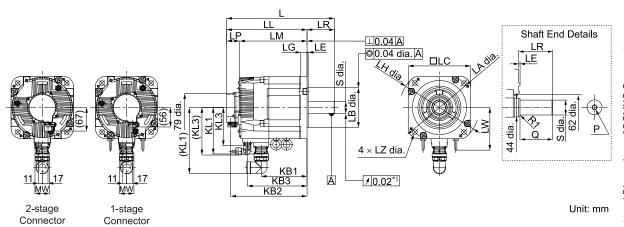

This is 0.04 for the SGMXG-55A \square A, -75A \square A, -40A \square B, and -55A \square B.

Model SGMXG-	L * <i>1</i>	LL *1	LM	LP * <i>I</i>	LR	KB1	KB2 */	КВ3	LW	KL1 (KL1 *2)	KL3 (KL3 *2)	MW
30А□А8СА□	287	208	174	34	79	108	196	150	_	134 (190)	111 (136)	42
44A□A8CA□	311	232	198	34	79	132	220	174	_	134 (190)	111 (136)	43
55A□A8CA□	376	263	229	34	113	163	251	205	123	145 (221)	111 (136)	
75A□A8CA□	422	309	275	34	113	209	297	251	123	145 (221)	111 (136)	59

Continued on next page.

Continued from previous page.

Model SGMXG-	L *1	LL *1	LM	LP */	LR	KB1	KB2 */	КВ3	LW	KL1 (KL1 *2)	KL3 (KL3 *2)	MW
20A□B8CA□	287	208	174	34	79	108	196	150	1	134 (190)	111 (136)	42
30А□В8СА□	311	232	198	34	79	132	220	174	-	134 (190)	111 (136)	43
40A□B8CA□	376	263	229	34	113	163	251	205	123	145 (221)	111 (136)	
55A□B8CA□	422	309	275	34	113	209	297	251	123	145 (221)	111 (136)	59

Model			Flange	Dimensi	ions			Shaft E	End Dime	nsions	Appro-
SGMXG-	LA	LB	LC	LE	LG	LH	LZ	S	Q	Р	x. Mass [kg]
30A□A8CA□	200	114.3-0.025	180	3.2	18	230	13.5	35 ^{+0.01}	76	M12 ×	19.5
44A□A8CA□	200	114.3-0.025	180	3.2	18	230	13.5	35 ^{+0.01}	76	25	23.5
55A□A8CA□	200	114.3-0.025	180	3.2	18	230	13.5	42-0.016	110	M16 ×	27.5
75A□A8CA□	200	114.3-0.025	180	3.2	18	230	13.5	42-0.016	110	32	35.0
20A□B8CA□	200	114.3-0.025	180	3.2	18	230	13.5	35 0 35 0	76	M12 ×	19.5
30A□B8CA□	200	114.3-0.025	180	3.2	18	230	13.5	35 ^{+0.01}	76	25 M12 ×	23.5
40A□B8CA□	200	114.3-0.025	180	3.2	18	230	13.5	42-0.016	110	M16 ×	27.5
55A□B8CA□	200	114.3-0.025	180	3.2	18	230	13.5	42-0.016	110	32	35.0


For models that have a batteryless absolute encoder (SGMXD-DDW), L, LL, LP, and KB2 are 8 mm greater than the given value. *1 Refer to the following section for the values for individual models.

Note:

- 1. The dimensions are same for models with oil seals.
- 2. The values for the shaft end are for a straight shaft without key and with tap. Refer to the information given below for other shaft end specifications.

 (c) Shaft End Specification on page 187

(b) Σ -7 Compatible Specification

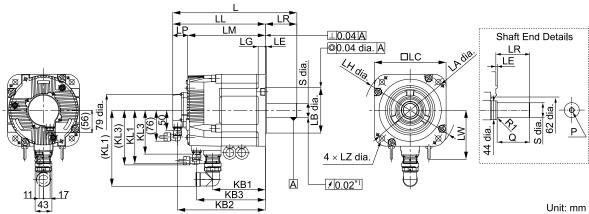

This is 0.04 for the SGMXG-55A \square A, -75A \square A, -40A \square B, and -55A \square B.

Note:

The difference from the model with standard specifications is the shape of the encoder cable connector.


The dimensions for non-connector parts are identical to those for models with standard specifications.

^{6.5.5} Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXG-□□□W) on page 193

^{*2} These are the values when the flexible connectors are connected.

(c) Shaft End Specification


· Straight with Key and Tap

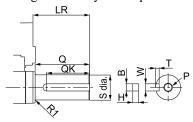

Model SGMXG-	LR	Q	QK	S	В	Н	W	Т	Р
30A□A6C□□	79	76	60	35 ^{+0.01}	10-0.036	8-0.090	10-0.015	5 0 0	\(\frac{1}{2}\)
44A□A6C□□	79	76	60	35 ^{+0.01}	10-0.036	8-0.090	10-0.015	5 ^{+0.2}	M12 × 25
55A□A6C□□	113	110	90	42-0.016	12-0.043	8-0.090	12-0.018	5 0 5 0	M(C), 22
75A□A6C□□	113	110	90	42-0.016	12-0.043	8-0.090	12-0.018	5 ^{+0.2}	M16 × 32
20A□B6C□□	79	76	60	35 ^{+0.01}	10-0.036	8-0.090	10-0.015	5 0 5 0) (12 ··· 25
30А□В6С□□	79	76	60	35 ^{+0.01}	10-0.036	8-0.090	10-0.015	5 0 0	M12 × 25
40A□B6C□□	113	110	90	42-0.016	12-0.043	8-0.090	12-0.018	5 ^{+0.2}) / I /
55A□B6C□□	113	110	90	42-0.016	12-0.043	8-0.090	12-0.018	5 ^{+0.2}	M16 × 32

(d) Connector Specifications

• Encoder Connector (26-bit Encoder): Standard Specification The encoder cable is installed in the following direction.

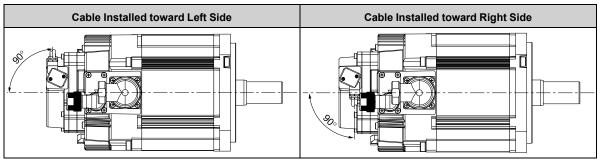

For details on selecting cables, refer to the following section and manual.

■ 8.5 Cables for the SGMXG Servomotors on page 271

Σ-X-Series Peripheral Device Selection Manual (Manual No.: SIEP C710812 12)

• Encoder Connector (26-bit Encoder): Σ-7 Compatible Specification



1	PS	6 * I	BAT(+)
2	/PS	7	_
3	_	8	_
4	PG5V	9	PG0V
5	BAT(-)	10	FG (frame ground)

*1 A battery is required only for an absolute encoder. Receptacle: CMV1-R10P

Applicable plug (not provided by Yaskawa)

Plug: CM10-AP10S- \square -D (R1) (right-angle type), CM10-SP10S- \square -D (R1) (straight), CMV1-AP10S- \square (right-angle type), CMV1-SP10S- \square (straight), CMV1S-AP10S- \square (right-angle type), CMV1S-SP10S- \square (straight)

(□ varies depending on the applicable cable size.)

Manufacturer: Fujikura Ltd.

• Servomotor Connector: Same for both Standard Specifications and Σ -7 Compatible Specifications



A	Phase U	С	Phase W
В	Phase V	D	FG (frame ground)

Manufacturer: Japan Aviation Electronics Industry, Ltd.

• Brake Connector: Same for both Standard Specifications and Σ-7 Compatible Specifications



1	Brake terminal
2	Brake terminal

Note:

There is no voltage polarity for the brake terminals.

Receptacle: CMV1Y-R2P-0(F)

Applicable plug (not provided by Yaskawa)

Plug: CM10-AP2S- \square -D (R1) (right-angle type), CM10-SP2S- \square -D (R1) (straight), CMV1-AP2S- \square (right-angle type), CMV1-SP2S- \square (straight), CMV1S-AP2S- \square (right-angle type), CMV1S-SP2S- \square (straight)

(□ varies depending on the applicable cable size.)


Manufacturer: Fujikura Ltd.

6.5.4 SGMXG-1A, -1E

(1) Servomotors without Holding Brakes

(a) Standard Specification

Models with the additional specification "3 Standard (Functional Safety-Compatible Encoder)" have the same dimensions as those indicated below.

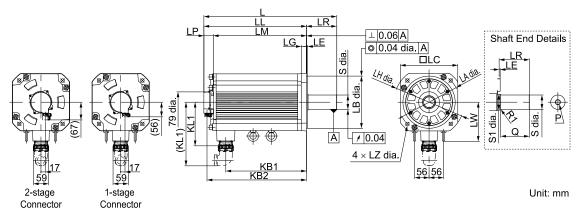

Model SGMXG-	L *1	LL * <i>l</i>	LM	LP *1	LR	KB1	KB2 */	LW	KL1 (KL1 *2)
1AA□A81A□	445	329	295	34	116	247	317	150	168 (245)
1EA□A81A□	507	391	357	34	116	309	379	150	168 (245)

Model			Flang	je Dimen	sions			Sh	Appro-			
SGMXG-	LA	LB	LC	LE	LG	LH	LZ	S	S1	Q	Р	x. Mass [kg]
1AA□A81A□	235	200-0.046	220	4	20	270	13.5	42-0.016	50	110	M16 × 32	57
1EA□A81A□	235	200-0.046	220	4	20	270	13.5	55 ^{+0.030} 55 ^{+0.011}	60	110	M20 × 40	67

^{*1} For models that have a batteryless absolute encoder (SGMX□-□□□W), L, LL, LP, and KB2 are 8 mm greater than the given value. Refer to the following section for the values for individual models.

■ 6.5.5 Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXG-□□□W) on page 193


*2 These are the values when the flexible connectors are connected.

Note:

- 1. The dimensions are same for models with oil seals.
- 2. The values for a straight shaft end without key specification are given. Refer to the information given below for other shaft end specifications.

(c) Shaft End Specification on page 189

(b) Σ -7 Compatible Specification

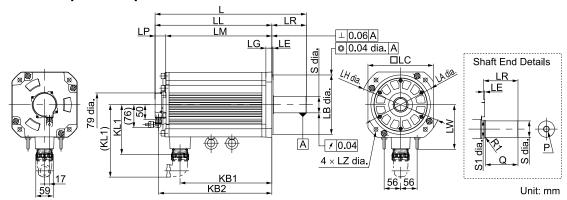


Note:

The difference from the model with standard specifications is the shape of the encoder cable connector.

The dimensions for non-connector parts are identical to those for models with standard specifications.

(c) Shaft End Specification

• Straight with Key and Tap

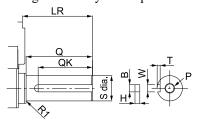

Model SGMXG-	LR	Q	QK	S	В	Н	W	Т	Р
1AA□A61□□	116	110	90	42-0.016	12-0.043	8-0.090	12-0.018	5 0 5 0	M16 × 32
1EA=A61==	116	110	90	55 ^{+0.030}	16-0.043	10-0.090	16-0.018	6+0.2	M20 × 40

(d) Connector Specifications

• Encoder Connector (26-bit Encoder): Standard Specification The encoder cable is installed in the following direction.

For details on selecting cables, refer to the following section and manual.

■ 8.5 Cables for the SGMXG Servomotors on page 271

Ω Σ-X-Series Peripheral Device Selection Manual (Manual No.: SIEP C710812 12)

• Encoder Connector (26-bit Encoder): Σ-7 Compatible Specification



1	PS	6 * <i>I</i>	BAT(+)
2	/PS	7	_
3	_	8	-
4	PG5V	9	PG0V
5	BAT(-)	10	FG (frame ground)

*1 A battery is required only for an absolute encoder.

Receptacle: CMV1-R10P

Applicable plug (not provided by Yaskawa)

 $Plug: CM10-AP10S- \square-D \ (R1) \ (right-angle \ type), CM10-SP10S- \square-D \ (R1) \ (straight), CMV1-AP10S- \square- \ (right-angle \ type), CMV1$

SP10S-□□ (straight), CMV1S-AP10S-□□ (right-angle type), CMV1S-SP10S-□□ (straight)

(
varies depending on the applicable cable size.)

Manufacturer: Fujikura Ltd.

• Servomotor Connector: Same for both Standard Specifications and Σ -7 Compatible Specifications




A	Phase U	С	Phase W
В	Phase V	D	FG (frame ground)

Manufacturer: Japan Aviation Electronics Industry, Ltd.

(2) Servomotors with Holding Brakes

(a) Standard Specification

Information Models with the additional specification "3 Standard (Functional Safety-Compatible Encoder)" have the same dimensions as those indicated below.

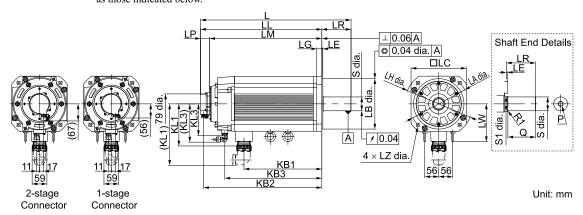

Model SGMXG-	L * <i>1</i>	LL *1	LM	LP * <i>I</i>	LR	KB1	KB2 */	КВ3	LW	KL1 (KL1 *2)	KL3 (KL3 *2)
1AA□A8CA□	496	380	346	34	116	247	368	315	150	168 (245)	126 (151)
1EA□A8CA□	596	480	446	34	116	309	468	385	150	168 (245)	126 (151)

Model			Flang	Flange Dimensions								Appro-
SGMXG-	LA	LB	LC	LE	LG	LH	LZ	S	S1	Q	Р	x. Mass [kg]
1AA□A8CA□	235	200-0.046	220	4	20	270	13.5	42-0.016	50	110	M16 × 32	65
1EA□A8CA□	235	200-0.046	220	4	20	270	13.5	55 ^{+0.030} 55+0.011	60	110	M20 × 40	85


For models that have a batteryless absolute encoder (SGMX - - DD W), L, LL, LP, and KB2 are 8 mm greater than the given value. Refer to the following section for the values for individual models.

*2 Note:

- 1. The dimensions are same for models with oil seals.
- The values for a straight shaft end without key specification are given. Refer to the information given below for other shaft end specifications.

 (c) Shaft End Specification on page 191

(b) Σ -7 Compatible Specification

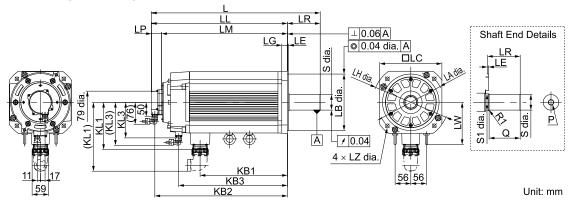


Note:

The difference from the model with standard specifications is the shape of the encoder cable connector.

The dimensions for non-connector parts are identical to those for models with standard specifications.

(c) Shaft End Specification

· Straight with Key and Tap

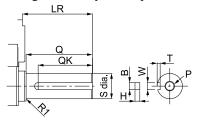


Model SGMXG-	LR	Q	QK	S	В	Н	w	Т	Р
1AA□A6C□□	116	110	90	42-0.016	12-0.043	8-0.090	12-0.018	5 0 0	M16 × 32
1EA□A6C□□	116	110	90	55 ^{+0.030}	16-0.043	10-0.090	16-0.018	6*0.2	M20 × 40

^{6.5.5} Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXG-□□□W) on page 193 These are the values when the flexible connectors are connected.

(d) Connector Specifications

• Encoder Connector (26-bit Encoder): Standard Specification The encoder cable is installed in the following direction.

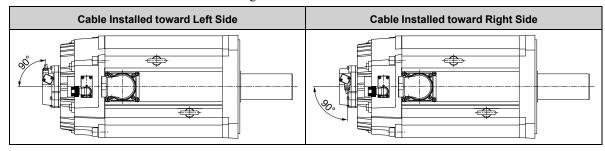

For details on selecting cables, refer to the following section and manual.

■ 8.5 Cables for the SGMXG Servomotors on page 271

Ω Σ-X-Series Peripheral Device Selection Manual (Manual No.: SIEP C710812 12)

• Encoder Connector (26-bit Encoder): Σ-7 Compatible Specification



1	PS	6 *1	BAT(+)
2	/PS	7	_
3	_	8	_
4	PG5V	9	PG0V
5	BAT(-)	10	FG (frame ground)

*1 A battery is required only for an absolute encoder.

Receptacle: CMV1-R10P

Applicable plug (not provided by Yaskawa)

Plug: CM10-AP10S- \square -D (R1) (right-angle type), CM10-SP10S- \square -D (R1) (straight), CMV1-AP10S- \square \square (right-angle type), CMV1-SP10S- \square \square (straight), CMV1S-AP10S- \square \square (right-angle type), CMV1S-SP10S- \square \square (straight)

(
varies depending on the applicable cable size.)

Manufacturer: Fujikura Ltd.

Servomotor Connector: Same for both Standard Specifications and Σ-7 Compatible Specifications



A	Phase U	C	Phase W
В	Phase V	D	FG (frame ground)

Manufacturer: Japan Aviation Electronics Industry, Ltd.

• Brake Connector: Same for both Standard Specifications and Σ -7 Compatible Specifications



1	Brake terminal
2	Brake terminal

Note:

There is no voltage polarity for the brake terminals.

Receptacle: CMV1Y-R2P-0(F)

Applicable plug (not provided by Yaskawa)

Plug: CM10-AP2S- \Box -D (R1) (right-angle type), CM10-SP2S- \Box -D (R1) (straight), CMV1-AP2S- \Box \Box (right-angle type), CMV1-SP2S- \Box \Box (straight), CMV1S-AP2S- \Box \Box (right-angle type), CMV1S-SP2S- \Box \Box (straight)

 $(\Box$ varies depending on the applicable cable size.)

Manufacturer: Fujikura Ltd.

6.5.5 Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXG-□□□W)

(1) 1500-min⁻¹ Specification

Model SGMXG-	L	LL	LP	KB2	
03AWA□□A□	172 (205)	132 (165)	42 (42)	120 (153)	
05AWA□□A□	185 (218)	145 (178)	42 (42)	133 (166)	
09AWA□□A□	201 (237)	143 (179)	42 (42)	131 (167)	
13AWA□□A□	217 (253)	159 (195)	42 (42)	147 (183)	
20AWA□□A□	235 (271)	177 (213)	42 (42)	165 (201)	
30AWA□□A□	245 (295)	166 (216)	42 (42)	154 (204)	
44AWA□□A□	269 (319)	190 (240)	42 (42)	178 (228)	
55AWA□□A□	340 (384)	227 (271)	42 (42)	215 (259)	
75AWA□□A□	386 (430)	273 (317)	42 (42)	261 (305)	
1AAWA□□A□	453 (504)	337 (388)	42 (42)	325 (376)	
1EAWA 🗆 A 🗆	515 (604)	399 (488)	42 (42)	387 (476)	

Note:

The values in parentheses are for servomotors with holding brakes.

(2) 1000-min⁻¹ Specification

Model SGMXG-	L	LL	LP	KB2
03AWB□□A□	185 (218)	145 (178)	42 (42)	133 (166)
06AWB□□A□	201 (237)	143 (179)	42 (42)	131 (167)
09AWB□□A□	217 (253)	159 (195)	42 (42)	147 (183)
12AWB□□A□	235 (271)	177 (213)	42 (42)	165 (201)
20AWB□□A□	245 (295)	166 (216)	42 (42)	154 (204)
30AWB□□A□	269 (319)	190 (240)	42 (42)	178 (228)
40AWB□□A□	340 (384)	227 (271)	42 (42)	215 (259)
55AWB□□A□	386 (430)	273 (317)	42 (42)	261 (305)

Note:

The values in parentheses are for servomotors with holding brakes.


6.6 External Dimensions (400 V Specification)

6.6.1 SGMXG-05D□A

(1) Servomotors without Holding Brakes

(a) Standard Specification

Information Models with the additional specification "3 Standard (Functional Safety-Compatible Encoder)" have the same dimensions as those indicated below.

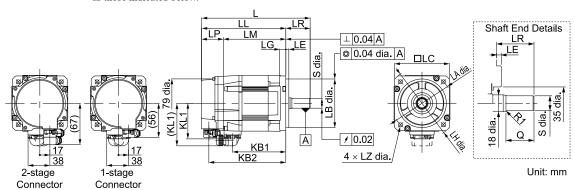

Model SGMXG-	L *1	LL *1	LM	LP */	LR	KB1	KB2 */	KL1
05D□A21A□	177	137	103	34	40	88	125	70


Model SGMXG-		Flange Dimensions								Approx. Mass
	LA	LB	LC	LE	LG	LH	LZ	S	Q	[kg]
05D□A21A□	100	80-0.030	90	5	10	120	6.6	16-0.011	30	3.2

^{*1} For models that have a batteryless absolute encoder (SGMXD-DDDW), L, LL, LP, and KB2 are 8 mm greater than the given value. Refer to the following section for the values for individual models.

Note:

- 1. The dimensions are same for models with oil seals.
- 2. The values for a straight shaft end without key specification are given. Refer to the information given below for other shaft end specifications.
 - (c) Shaft End Specification on page 195

(b) Σ -V Compatible Specification

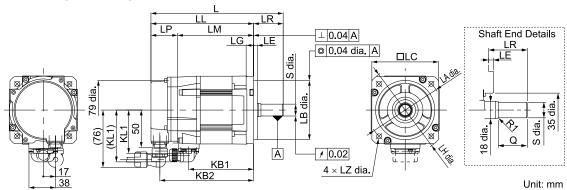

Note:


The difference from the model with standard specifications is the shape of the encoder cable connector.

The dimensions for non-connector parts are identical to those for models with standard specifications.

^{6.6.5} Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXG-□□□W) on page 210


(c) Shaft End Specification

• Straight with Key and Tap

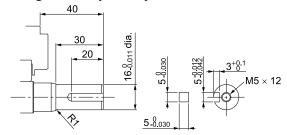

(d) Connector Specifications

• Encoder Connector (26-bit Encoder): Standard Specification The encoder cable is installed in the following direction.

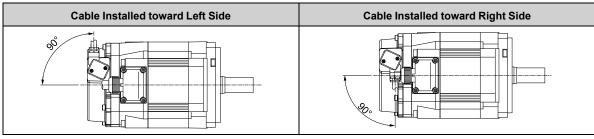

For details on selecting cables, refer to the following section and manual.

■ 8.5 Cables for the SGMXG Servomotors on page 271

Σ-X-Series Peripheral Device Selection Manual (Manual No.: SIEP C710812 12)

• Encoder Connector (26-bit Encoder): Σ-V Compatible Specification



1	PS	6 * <i>I</i>	BAT(+)
2	/PS	7	_
3	_	8	_
4	PG5V	9	PG0V
5	BAT(-)	10	FG (frame ground)

*1 A battery is required only for an absolute encoder.

Receptacle: CMV1-R10P

Applicable plug (not provided by Yaskawa)

Plug: CM10-AP10S-\(\to D\) (R1) (right-angle type), CM10-SP10S-\(\to D\) (R1) (straight), CMV1-AP10S-\(\to D\) (right-angle type), CMV1-SP10S-\(\to D\) (straight), CMV1S-AP10S-\(\to D\) (right-angle type), CMV1S-SP10S-\(\to D\) (straight)

(\square varies depending on the applicable cable size.)

Manufacturer: Fujikura Ltd.

• Servomotor Connector: Same for both Standard Specifications and Σ -V Compatible Specifications



PE	FG (frame ground)	3	Phase U
5	_	2	Phase V
4	_	1	Phase W


Manufacturer: Japan Aviation Electronics Industry, Ltd.

(2) Servomotors with Holding Brakes

(a) Standard Specification

Information

Models with the additional specification "3 Standard (Functional Safety-Compatible Encoder)" have the same dimensions as those indicated below.

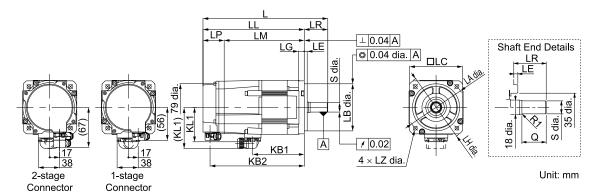

Model SGMXG-	L *1	LL *1	LM	LP *1	LR	KB1	KB2 */	KL1
05D□A2CA□	210	170	136	34	40	88	158	70

Model SGMXG-		Flange Dimensions								Approx. Mass
	LA	LB	LC	LE	LG	LH	LZ	S	Q	[kg]
05D□A2CA□	100	80-0.030	90	5	10	120	6.6	16-0.011	30	4.2

^{*1} For models that have a batteryless absolute encoder (SGMX□-□□□W), L, LL, LP, and KB2 are 8 mm greater than the given value. Refer to the following section for the values for individual models.


6.6.5 Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXG-□□□W) on page 210

Note:

- 1. The dimensions are same for models with oil seals.
- 2. The values for a straight shaft end without key specification are given. Refer to the information given below for other shaft end specifications.

☞ (c) Shaft End Specification on page 196

(b) Σ -V Compatible Specification

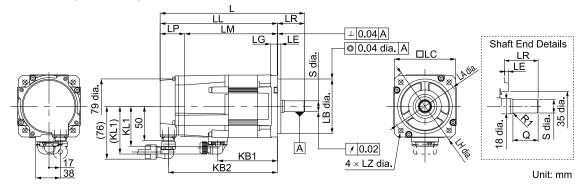


Note:

The difference from the model with standard specifications is the shape of the encoder cable connector.

The dimensions for non-connector parts are identical to those for models with standard specifications.

(c) Shaft End Specification


Straight with Key and Tap

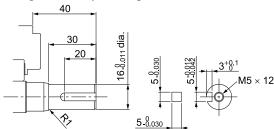

(d) Connector Specifications

• Encoder Connector (26-bit Encoder): Standard Specification

The encoder cable is installed in the following direction.

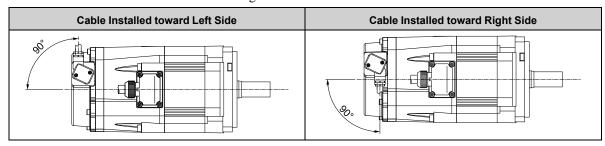

For details on selecting cables, refer to the following section and manual.

■ 8.5 Cables for the SGMXG Servomotors on page 271

Σ-X-Series Peripheral Device Selection Manual (Manual No.: SIEP C710812 12)

• Encoder Connector (26-bit Encoder): Σ-V Compatible Specification



1	PS	6 * <i>I</i>	BAT(+)
2	/PS	7	_
3	_	8	_
4	PG5V	9	PG0V
5	BAT(-)	10	FG (frame ground)

*1 A battery is required only for an absolute encoder.

Receptacle: CMV1-R10P

Applicable plug (not provided by Yaskawa)

Plug: CM10-AP10S-\(\pi\)-D (R1) (right-angle type), CM10-SP10S-\(\pi\)-D (R1) (straight), CMV1-AP10S-\(\pi\)-D (right-angle type), CMV1-SP10S-\(\pi\)-D (ctraight), CMV1S-AP10S-\(\pi\)-D (right-angle type), CMV1S-SP10S-\(\pi\)-D (ctraight)

SP10S- \square (straight), CMV1S-AP10S- \square (right-angle type), CMV1S-SP10S- \square (straight)

($\hfill\Box$ varies depending on the applicable cable size.)

Manufacturer: Fujikura Ltd.

• Servomotor Connector: Same for both Standard Specifications and Σ -V Compatible Specifications



PE	FG (frame ground)	3	Phase U
5	Brake terminal	2	Phase V
4	Brake terminal	1	Phase W

Manufacturer: Japan Aviation Electronics Industry, Ltd.


6.6.2 SGMXG-09D□A to -20D□A

(1) Servomotors without Holding Brakes

(a) Standard Specification

Information

Models with the additional specification "3 Standard (Functional Safety-Compatible Encoder)" have the same dimensions as those indicated below.

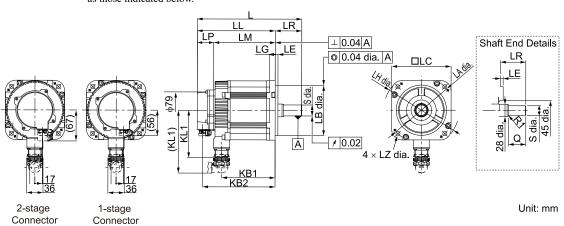

Model SGMXG-	L *1	LL *1	LM	LP */	LR	KB1	KB2 */	KL1
09D□A21A□	193	135	101	34	58	83	123	138
13D□A21A□	209	151	117	34	58	99	139	138
20D□A21A□	227	169	135	34	58	117	157	138


Model			Shaft End Dimensions		Approx. Mass					
SGMXG-	LA	LB	LC	LE	LG	LH	LZ	S	Q	[kg]
09D□A21A□	145	110-0.035	130	6	12	165	9	24-0.013	40	5.5
13D□A21A□	145	110-0.035	130	6	12	165	9	24-0.013	40	7.1
20D□A21A□	145	110-0.035	130	6	12	165	9	24-0.013	40	8.6

^{*1} For models that have a batteryless absolute encoder (SGMXD-DDW), L, LL, LP, and KB2 are 8 mm greater than the given value. Refer to the following section for the values for individual models.

Note:

- 1. The dimensions are same for models with oil seals.
- The values for a straight shaft end without key specification are given. Refer to the information given below for other shaft end specifications.
 - (c) Shaft End Specification on page 198

(b) Σ -V Compatible Specification

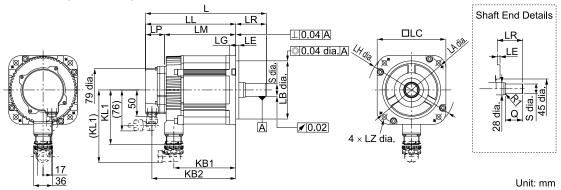


Note:

The difference from the model with standard specifications is the shape of the encoder cable connector.

The dimensions for non-connector parts are identical to those for models with standard specifications.

(c) Shaft End Specification


• Straight with Key and Tap

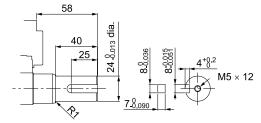

(d) Connector Specifications

• Encoder Connector (26-bit Encoder): Standard Specification The encoder cable is installed in the following direction.

^{6.6.5} Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXG-□□□W) on page 210

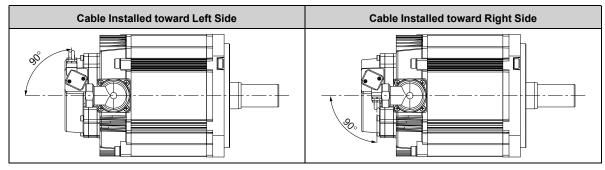

For details on selecting cables, refer to the following section and manual.

■ 8.5 Cables for the SGMXG Servomotors on page 271

Σ-X-Series Peripheral Device Selection Manual (Manual No.: SIEP C710812 12)

• Encoder Connector (26-bit Encoder): Σ-V Compatible Specification



1	PS	6 * <i>I</i>	BAT(+)
2	/PS	7	_
3	_	8	-
4	PG5V	9	PG0V
5	BAT(-)	10	FG (frame ground)

*1 A battery is required only for an absolute encoder.

Receptacle: CMV1-R10P

Applicable plug (not provided by Yaskawa)

Plug: CM10-AP10S-\(\pi\)-D (R1) (right-angle type), CM10-SP10S-\(\pi\)-D (R1) (straight), CMV1-AP10S-\(\pi\)\(\pi\) (right-angle type), CMV1-SP10S-\(\pi\)\(

 $SP10S-\square\square \ (straight), CMV1S-AP10S-\square\square \ (right-angle \ type), CMV1S-SP10S-\square\square \ (straight)$

(\square varies depending on the applicable cable size.)

Manufacturer: Fujikura Ltd.

Servomotor Connector: Same for both Standard Specifications and Σ-V Compatible Specifications



A	Phase U	С	Phase W
В	Phase V	D	FG (frame ground)

Manufacturer: Japan Aviation Electronics Industry, Ltd.

(2) Servomotors with Holding Brakes


Connector

(a) Standard Specification

Information Models

Connector

Models with the additional specification "3 Standard (Functional Safety-Compatible Encoder)" have the same dimensions as those indicated below.

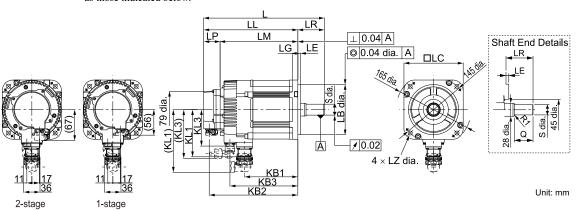

Model SGMXG-	L *1	LL *1	LM	LP */	LR	KB1	KB2 */	KB3	KL1	KL3
09D□A2CA□	229	171	137	34	58	83	159	115	138	106
13D□A2CA□	245	187	153	34	58	99	175	131	138	106
20D□A2CA□	263	205	171	34	58	117	193	149	138	106

Model			Shaft End Dimensions		Approx. Mass					
SGMXG-	LA	LB	LC	LE	LG	LH	LZ	S	Q	[kg]
09D□A2CA□	145	110-0.035	130	6	12	165	9	24-0.013	40	7.5
13D□A2CA□	145	110-0.035	130	6	12	165	9	24-0.013	40	9.0
20D□A2CA□	145	110-0.035	130	6	12	165	9	24-0.013	40	11.0

^{*1} For models that have a batteryless absolute encoder (SGMXD-DDW), L, LL, LP, and KB2 are 8 mm greater than the given value. Refer to the following section for the values for individual models.


6.6.5 Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXG-□□□W) on page 210

Note:

- 1. The dimensions are same for models with oil seals.
- 2. The values for a straight shaft end without key specification are given. Refer to the information given below for other shaft end specifications.

(c) Shaft End Specification on page 200

(b) Σ -V Compatible Specification

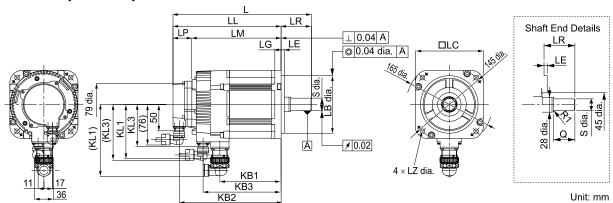


Note:

The difference from the model with standard specifications is the shape of the encoder cable connector.

The dimensions for non-connector parts are identical to those for models with standard specifications.


(c) Shaft End Specification

· Straight with Key and Tap

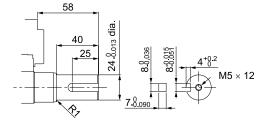

(d) Connector Specifications

• Encoder Connector (26-bit Encoder): Standard Specification The encoder cable is installed in the following direction.

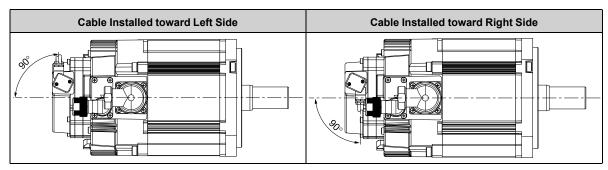

For details on selecting cables, refer to the following section and manual.

■ 8.5 Cables for the SGMXG Servomotors on page 271

Σ-X-Series Peripheral Device Selection Manual (Manual No.: SIEP C710812 12)

• Encoder Connector (26-bit Encoder): Σ-V Compatible Specification



1	PS	6 * <i>1</i>	BAT(+)
2	/PS	7	-
3	_	8	-
4	PG5V	9	PG0V
5	BAT(-)	10	FG (frame ground)

A battery is required only for an absolute encoder.

Receptacle: CMV1-R10P

Applicable plug (not provided by Yaskawa)

Plug: CM10-AP10S-□-D (R1) (right-angle type), CM10-SP10S-□-D (R1) (straight), CMV1-AP10S-□□ (right-angle type), CMV1-SP10S-□□ (straight), CMV1S-AP10S-□□ (right-angle type), CMV1S-SP10S-□□ (straight)

(□ varies depending on the applicable cable size.)

Manufacturer: Fujikura Ltd.

Servomotor Connector: Same for both Standard Specifications and Σ-V Compatible Specifications



A	Phase U	C	Phase W
В	Phase V	D	FG (frame ground)

Manufacturer: Japan Aviation Electronics Industry, Ltd.

Brake Connector: Same for both Standard Specifications and Σ-V Compatible Specifications



1	Brake terminal
2	Brake terminal

There is no voltage polarity for the brake terminals.

Receptacle: CMV1Y-R2P-0(F)

Applicable plug (not provided by Yaskawa)

Plug: CM10-AP2S-□-D (R1) (right-angle type), CM10-SP2S-□-D (R1) (straight), CMV1-AP2S-□□ (right-angle type), CMV1-SP2S-□□ (straight), CMV1S-AP2S-□□ (right-angle type), CMV1S-SP2S-□□ (straight)

 $(\hdots$ varies depending on the applicable cable size.)


Manufacturer: Fujikura Ltd.

6.6.3 SGMXG-30D□A to -75D□A

Servomotors without Holding Brakes

(a) Standard Specification

Information Models with the additional specification "3 Standard (Functional Safety-Compatible Encoder)" have the same dimensions as those indicated below.

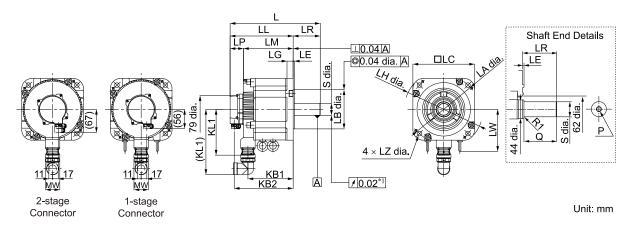

This is 0.04 for the SGMXG-55D, -75D.

Model SGMXG-	L *1	LL */	LM	LP *1	LR	KB1	KB2 */	LW	KL1	MW
30D□A81A□	237	158	124	34	79	108	146	_	190	42
44D□A81A□	261	182	148	34	79	132	170	_	190	43
55D□A81A□	332	219	185	34	113	163	207	123	221	50
75D□A81A□	378	265	231	34	113	209	253	123	221	59


Model	Model Flange Dimensions								Shaft End Dimensions			
SGMXG-	LA	LB	LC	LE	LG	LH	LZ	S	Q	Р	x. Mass [kg]	
30D□A81A□	200	114.3-0.025	180	3.2	18	230	13.5	35 ^{+0.01}	76	M12 ×	13.5	
44D□A81A□	200	114.3-0.025	180	3.2	18	230	13.5	35 ^{+0.01}	76	25L	17.5	
55D□A81A□	200	114.3-0.025	180	3.2	18	230	13.5	42-0.016	110	M16 ×	21.5	
75D□A81A□	200	114.3-0.025	180	3.2	18	230	13.5	42-0.016	110	32L	29.5	

For models that have a batteryless absolute encoder (SGMX \square - \square \square W), L, LL, LP, and KB2 are 8 mm greater than the given value. Refer to the following section for the values for individual models.

- 1. The dimensions are same for models with oil seals.
- 2. The values for the shaft end are for a straight shaft without key and with tap. Refer to the information given below for other shaft end specifications.

 G (c) Shaft End Specification on page 203

(b) Σ -V compatible specification

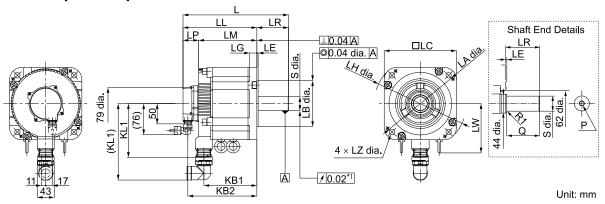

*1 This is 0.04 for the SGMXG-55D, -75D.


The difference from the model with standard specifications is the shape of the encoder cable connector.

The dimensions for non-connector parts are identical to those for models with standard specifications.

^{6.6.5} Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXG-□□□W) on page 210

(c) Shaft End Specification


· Straight with Key and Tap

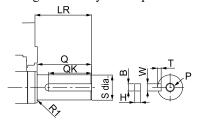

Model SGMXG-	LR	Q	QK	S	В	Н	w	Т	Р	
30D□A61□□	79	76	60	35 ^{+0.01}	10-0.036	8-0.090	10-0.015	5 0 5 0	2412 25	
44D□A61□□	79	76	60	35 ^{+0.01}	10-0.036	8-0.090	10-0.015	5 0 5 0	M12 × 25	
55D□A61□□	113	110	90	42-0.016	12-0.043	8-0.090	12-0.018	5 0 5 0	2416 22	
75DaA61aa	113	110	90	42-0.016	12-0.043	8-0.090	12-0.018	5+0.2	M16 × 32	

(d) Connector Specifications

• Encoder Connector (26-bit Encoder): Standard Specification The encoder cable is installed in the following direction.

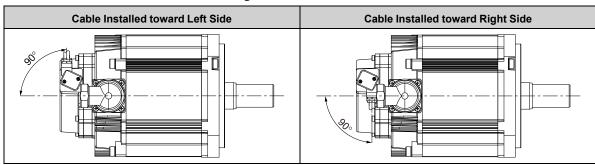

For details on selecting cables, refer to the following section and manual.

■ 8.5 Cables for the SGMXG Servomotors on page 271

Σ-X-Series Peripheral Device Selection Manual (Manual No.: SIEP C710812 12)

• Encoder Connector (26-bit Encoder): Σ-V Compatible Specification



1	PS	6 *1	BAT(+)
2	/PS	7	_
3	_	8	_
4	PG5V	9	PG0V
5	BAT(-)	10	FG (frame ground)

A battery is required only for an absolute encoder. Receptacle: CMV1-R10P

Applicable plug (not provided by Yaskawa)
Plug: CM10-AP10S-\(\pi\)-D (R1) (right-angle type), CM10-SP10S-\(\pi\)-D (R1) (straight), CMV1-AP10S-\(\pi\) (right-angle type), CMV1-SP10S-\(\pi\) (straight), CMV1S-AP10S-\(\pi\) (right-angle type), CMV1S-SP10S-\(\pi\) (straight)

(□ varies depending on the applicable cable size.)

Manufacturer: Fujikura Ltd.

• Servomotor Connector: Same for both Standard Specifications and Σ-V Compatible Specifications

/			
	D o	. A	
$\ $	°	°	
//		<i>]</i>]	


A	Phase U	C	Phase W
В	Phase V	D	FG (frame ground)

Manufacturer: Japan Aviation Electronics Industry, Ltd.

(2) Servomotors with Holding Brakes

(a) Standard Specification

Information Models with the additional specification "3 Standard (Functional Safety-Compatible Encoder)" have the same dimensions as those indicated below.

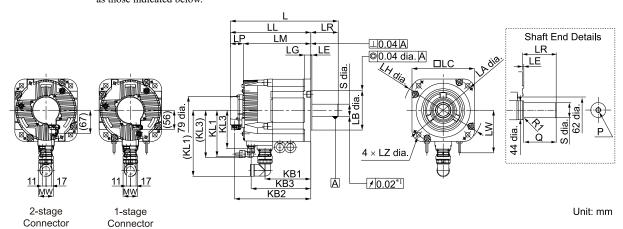

*1 This is 0.04 for the SGMXG-55D, -75D.

Model SGMXG-	L * <i>I</i>	LL *I	LM	LP * <i>I</i>	LR	KB1	KB2 */	КВ3	LW	KL1	KL3	MW
30D□A8CA□	287	208	174	34	79	108	196	150	-	190	136	42
44D□A8CA□	311	232	198	34	79	132	220	174	ı	190	136	43
55D□A8CA□	376	263	229	34	113	163	251	205	123	221	136	50
75D□A8CA□	422	309	275	34	113	209	297	251	123	221	136	59

Model	Flange Dimensions							Shaft E	Appro-		
SGMXG-	LA	LB	LC	LE	LG	LH	LZ	S	Q	P	x. Mass [kg]
30D□A8CA□	200	114.3-0.025	180	3.2	18	230	13.5	35 ^{+0.01}	76	M12 ×	19.5
44D□A8CA□	200	114.3-0.025	180	3.2	18	230	13.5	35 ^{+0.01}	76	25L	23.5
55D□A8CA□	200	114.3-0.025	180	3.2	18	230	13.5	42-0.016	110	M16 ×	27.5
75D□A8CA□	200	114.3-0.025	180	3.2	18	230	13.5	42-0.016	110	32L	35.0


^{*1} For models that have a batteryless absolute encoder (SGMXD-DDW), L, LL, LP, and KB2 are 8 mm greater than the given value. Refer to the following section for the values for individual models.

Note:

- 1. The dimensions are same for models with oil seals.
- 2. The values for the shaft end are for a straight shaft without key and with tap. Refer to the information given below for other shaft end specifications.
 - (c) Shaft End Specification on page 205

^{6.6.5} Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXG-pp W) on page 210

(b) Σ -V compatible specification

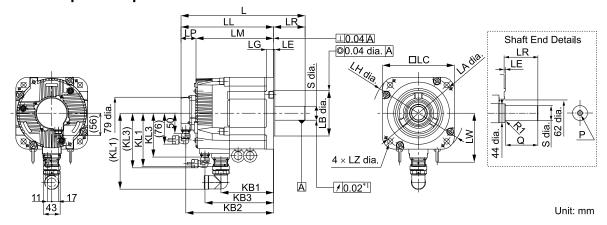

*1 This is 0.04 for the SGMXG-55D, -75D.


Note:

The difference from the model with standard specifications is the shape of the encoder cable connector.

The dimensions for non-connector parts are identical to those for models with standard specifications.

(c) Shaft End Specification


• Straight with Key and Tap

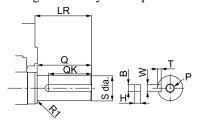

Model SGMXG-	LR	Q	QK	S	В	Н	W	T	P
30D□A6C□□	79	76	60	35 ^{+0.01}	10-0.036	8-0.090	10-0.015	5 0 5 0	2612 25
44D□A6C□□	79	76	60	35 ^{+0.01}	10-0.036	8-0.090	10-0.015	5 0 0	M12 × 25
55D□A6C□□	113	110	90	42-0.016	12-0.043	8-0.090	12-0.018	5 ^{+0.2}	M(C) 22
75DaA6Caa	113	110	90	42-0.016	12-0.043	8-0.090	12-0.018	5 0 0	M16 × 32

(d) Connector Specifications

• Encoder Connector (26-bit Encoder): Standard Specification The encoder cable is installed in the following direction.

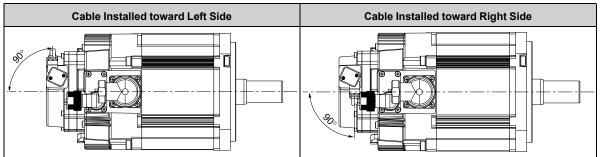

For details on selecting cables, refer to the following section and manual.

8.5 Cables for the SGMXG Servomotors on page 271

 \square Σ -X-Series Peripheral Device Selection Manual (Manual No.: SIEP C710812 12)

• Encoder Connector (26-bit Encoder): Σ-V Compatible Specification



1	PS	6 * <i>1</i>	BAT(+)
2	/PS	7	_
3	_	8	_
4	PG5V	9	PG0V
5	BAT(-)	10	FG (frame ground)

*1 A battery is required only for an absolute encoder.

Receptacle: CMV1-R10P

Applicable plug (not provided by Yaskawa)

Plug: CM10-AP10S-\(\text{-D}\) (R1) (right-angle type), CM10-SP10S-\(\text{-D}\) (R1) (straight), CMV1-AP10S-\(\text{-D}\) (right-angle type), CMV1-SP10S-\(\text{-D}\) (traight), CMV1S-AP10S-\(\text{-D}\) (right-angle type), CMV1S-SP10S-\(\text{-D}\) (traight)

SP10S-\(\text{(straight)}\), CMV1S-AP10S-\(\text{(right-angle type)}\), CMV1S-SP10S-\(\text{(straight)}\)

(
varies depending on the applicable cable size.)

Manufacturer: Fujikura Ltd.

• Servomotor Connector: Same for both Standard Specifications and Σ -V Compatible Specifications

//			
// '	ه د	o A	\parallel
$\left\langle \cdot \right\rangle$	°	о В <i>,</i>	$/\!/$
	<u> </u>		

A	Phase U	C	Phase W
В	Phase V	D	FG (frame ground)

Manufacturer: Japan Aviation Electronics Industry, Ltd.

• Brake Connector: Same for both Standard Specifications and Σ-V Compatible Specifications



1	Brake terminal
2	Brake terminal

Note:

There is no voltage polarity for the brake terminals.

Receptacle: CMV1Y-R2P-0(F)

Applicable plug (not provided by Yaskawa)

Plug: CM10-AP2S- \Box -D (R1) (right-angle type), CM10-SP2S- \Box -D (R1) (straight), CMV1-AP2S- \Box \Box (right-angle type), CMV1-SP2S- \Box \Box (straight), CMV1S-AP2S- \Box \Box (right-angle type), CMV1S-SP2S- \Box \Box (straight)

 $(\hfill\Box$ varies depending on the applicable cable size.)

Manufacturer: Fujikura Ltd.


6.6.4 SGMXG-1A, -1E

(1) Servomotors without Holding Brakes

(a) Standard Specification

Information

Models with the additional specification "3 Standard (Functional Safety-Compatible Encoder)" have the same dimensions as those indicated below.

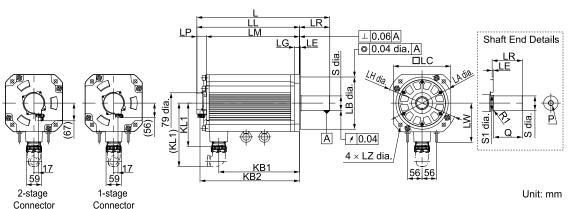

Model SGMXG-	L*1	LL *1	LM	LP *1	LR	KB1	KB2 */	LW	KL1
1AD□A81A□	445	329	295	34	116	247	317	150	245
1ED□A81A□	507	391	357	34	116	309	379	150	245


Model		Flange Dimensions							aft End [Dimensio	ns	Appro-
SGMXG-	LA	LB	LC	LE	LG	LH	LZ	S	S1	Q	Р	x. Mass [kg]
1AD□A81A□	235	200-0.046	220	4	20	270	13.5	42-0.016	50	110	M16 × 32	57
1ED□A81A□	235	200-0.046	220	4	20	270	13.5	55 ^{+0.030} 55 ^{+0.011}	60	110	M20 × 40	67

Note:

- 1. The dimensions are same for models with oil seals.
- 2. The values for a straight shaft end without key specification are given. Refer to the information given below for other shaft end specifications.

(c) Shaft End Specification on page 207

(b) Σ -V Compatible Specification

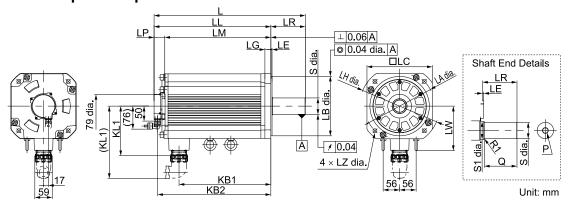


Note:

The difference from the model with standard specifications is the shape of the encoder cable connector.

The dimensions for non-connector parts are identical to those for models with standard specifications.

(c) Shaft End Specification

• Straight with Key and Tap

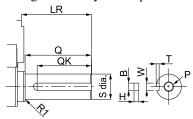

Model SGMXG-	LR	Q	QK	s	В	Н	W	T	P
1AD□A61□□	116	110	90	42-0.016	12-0.043	8-0.090	12-0.018	5 ^{+0.2}	M16 × 32
1ED=A61==	116	110	90	55+0.030 55+0.011	16-0.043	10-0.090	16-0.018	6 0 0	M20 × 40

(d) Connector Specifications

• Encoder Connector (26-bit Encoder): Standard Specification The encoder cable is installed in the following direction.

For details on selecting cables, refer to the following section and manual.

■ 8.5 Cables for the SGMXG Servomotors on page 271

Σ-X-Series Peripheral Device Selection Manual (Manual No.: SIEP C710812 12)

• Encoder Connector (26-bit Encoder): Σ-V Compatible Specification



1	PS	6 * <i>I</i>	BAT(+)
2	/PS	7	-
3	-	8	-
4	PG5V	9	PG0V
5	BAT(-)	10	FG (frame ground)

*1 A battery is required only for an absolute encoder.

Receptacle: CMV1-R10P

Applicable plug (not provided by Yaskawa)

 $Plug: CM10-AP10S- \square-D \ (R1) \ (right-angle \ type), CM10-SP10S- \square-D \ (R1) \ (straight), CMV1-AP10S- \square- \ (right-angle \ type), CMV1$

SP10S-□□ (straight), CMV1S-AP10S-□□ (right-angle type), CMV1S-SP10S-□□ (straight)

(□ varies depending on the applicable cable size.)

Manufacturer: Fujikura Ltd.

• Servomotor Connector: Same for both Standard Specifications and Σ -V Compatible Specifications




A	Phase U	C	Phase W
В	Phase V	D	FG (frame ground)

Manufacturer: Japan Aviation Electronics Industry, Ltd.

(2) Servomotors with Holding Brakes

(a) Standard Specification

Information Models with the additional specification "3 Standard (Functional Safety-Compatible Encoder)" have the same dimensions as those indicated below.

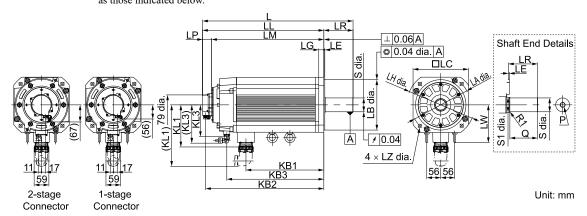

Model SGMXG-	L *1	LL *1	LM	LP */	LR	KB1	KB2 */	КВ3	LW	KL1	KL3
1AD□A8CA□	496	380	346	34	116	247	368	315	150	245	151
1ED□A8CA□	596	480	446	34	116	309	468	385	150	245	151

Model	Model Flange Dimensions								Shaft End Dimensions				
SGMXG-	LA	LB	LC	LE	LG	LH	LZ	S	S1	Q	Р	x. Mass [kg]	
1AD□A8CA□	235	200-0.046	220	4	20	270	13.5	42-0.016	50	110	M16 × 32	65	
1ED□A8CA□	235	200-0.046	220	4	20	270	13.5	55 ^{+0.030} 55 ^{+0.011}	60	110	M20 × 40	79	


For models that have a batteryless absolute encoder (SGMX \(\subseteq \pi \pi \), L, LL, LP, and KB2 are 8 mm greater than the given value. Refer to the following section for the values for individual models.

☞ 6.6.5 Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXG-□□□W) on page 210

Note:

- 1. The dimensions are same for models with oil seals.
- The values for a straight shaft end without key specification are given. Refer to the information given below for other shaft end specifications.
 - (c) Shaft End Specification on page 209

(b) Σ -V Compatible Specification

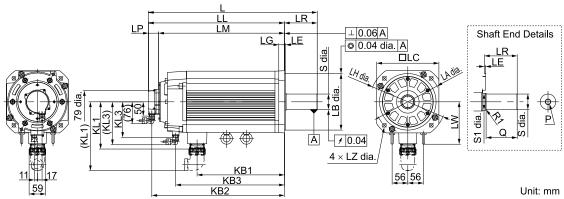


Note:

The difference from the model with standard specifications is the shape of the encoder cable connector.

The dimensions for non-connector parts are identical to those for models with standard specifications.

(c) Shaft End Specification

· Straight with Key and Tap

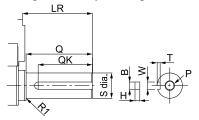

Model SGMXG-	LR	Q	QK	S	В	Н	W	Т	Р
1AD□A6C□□	116	110	90	42-0.016	12-0.043	8-0.090	12-0.018	5 ^{+0.2}	M16 × 32
1ED□A6C□□	116	110	90	55 ^{+0.030}	16-0.043	10-0.090	16-0.018	6*0.2	M20 × 40

(d) Connector Specifications

• Encoder Connector (26-bit Encoder): Standard Specification The encoder cable is installed in the following direction.

For details on selecting cables, refer to the following section and manual.

■ 8.5 Cables for the SGMXG Servomotors on page 271

Ω Σ-X-Series Peripheral Device Selection Manual (Manual No.: SIEP C710812 12)

• Encoder Connector (26-bit Encoder): Σ-V Compatible Specification



1	PS	6 * <i>I</i>	BAT(+)
2	/PS	7	-
3	-	8	-
4	PG5V	9	PG0V
5	BAT(-)	10	FG (frame ground)

*1 A battery is required only for an absolute encoder.

Receptacle: CMV1-R10P

Applicable plug (not provided by Yaskawa)

Plug: CM10-AP10S-\(\pi\)-D (R1) (right-angle type), CM10-SP10S-\(\pi\)-D (R1) (straight), CMV1-AP10S-\(\pi\)-\(\pi\) (right-angle type), CMV1-SP10S-\(\pi\)-\(

SP10S-□□ (straight), CMV1S-AP10S-□□ (right-angle type), CMV1S-SP10S-□□ (straight)

(
varies depending on the applicable cable size.)

Manufacturer: Fujikura Ltd.

Servomotor Connector: Same for both Standard Specifications and Σ-V Compatible Specifications



A	Phase U	С	Phase W
В	Phase V	D	FG (frame ground)

Manufacturer: Japan Aviation Electronics Industry, Ltd.

• Brake Connector: Same for both Standard Specifications and Σ-V Compatible Specifications



1	Brake terminal
2	Brake terminal

Note:

There is no voltage polarity for the brake terminals.

Receptacle: CMV1Y-R2P-0(F)

Applicable plug (not provided by Yaskawa)

Plug: CM10-AP2S- \Box -D (R1) (right-angle type), CM10-SP2S- \Box -D (R1) (straight), CMV1-AP2S- \Box \Box (right-angle type), CMV1-SP2S- \Box \Box (straight), CMV1S-AP2S- \Box \Box (right-angle type), CMV1S-SP2S- \Box \Box (straight)

 $(\hfill\Box$ varies depending on the applicable cable size.)

Manufacturer: Fujikura Ltd.

6.6.5 Dimensions of Servomotors with Batteryless Absolute Encoders (SGMXG-□□□W)

Model SGMXG-	L	LL	LP	KB2
05DWA□□A□	185 (218)	145 (178)	42 (42)	133 (166)
09DWA□□A□	201 (237)	143 (179)	42 (42)	131 (167)

Continued on next page.

Continued from previous page.

Model SGMXG-	L	LL	LP	KB2
13DWA□□A□	217 (253)	159 (195)	42 (42)	147 (183)
20DWA□□A□	235 (271)	177 (213)	42 (42)	165 (201)
30DWA□□A□	245 (295)	166 (216)	42 (42)	154 (204)
44DWA□□A□	269 (319)	190 (240)	42 (42)	178 (228)
55DWA□□A□	340 (384)	227 (271)	42 (42)	215 (259)
75DWA□□A□	386 (430)	273 (317)	42 (42)	261 (305)
1ADWA□□A□	453 (504)	337 (388)	42 (42)	325 (376)
1EDWA==A=	515 (604)	399 (488)	42 (42)	387 (476)

Note:

The values in parentheses are for servomotors with holding brakes.

Servomotor Installation

This chapter describes the installation conditions, procedures, and precautions for servomotors.

7.1	Installation Conditions		
	7.1.1	Installation Precautions	214
	7.1.2	Installation Environment	214
	7.1.3	Installation Orientation	214
	7.1.4	Using Servomotors with Oil Seals	214
	7.1.5	Using Servomotors with Holding Brakes	215
7.2	Coup	216	
	7.2.1	Using a Coupling	216
	7.2.2	Using a Belt	217
7.3	Oil an	nd Water Countermeasures	218
7 4	Servomotor Temperature Increase		

7.1 Installation Conditions

The service life of a servomotor will be shortened or unexpected problems will occur if the servomotor is installed incorrectly or in an inappropriate environment or location. Always observe the following installation instructions.

7.1.1 Installation Precautions

Refer to the following section for the installation precautions.


■ i.5 Safety Precautions on page 18

7.1.2 Installation Environment

Refer to the specifications for each type of servomotor for the mechanical specifications, protective structure, and installation environment related to servomotor installation.

7.1.3 Installation Orientation

You can install the servomotor either horizontally or vertically.

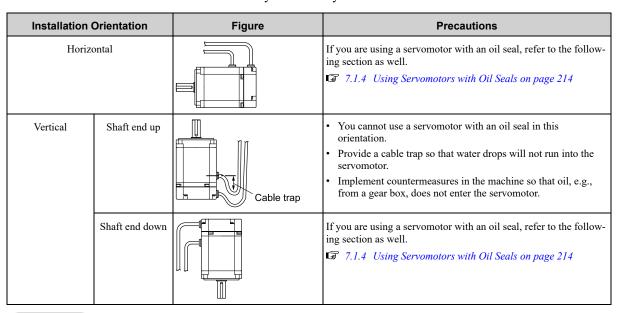


nformation If you attach a gear to the servomotor, observe the installation orientation specified by the manufacturer of the gear.

7.1.4 Using Servomotors with Oil Seals

This section gives the operating conditions for using servomotors with oil seals.

· Keep the oil surface below the oil seal lip.

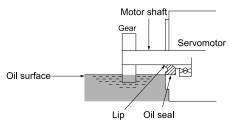

- Use the oil seal in favorably lubricated condition with only splashing of oil. If the lubrication state is poor, the oil seal may wear out prematurely.
- Do not allow oil to collect in the oil seal lip.
- Do not use the servomotor where the oil seal would be below the oil surface. If you do, oil will enter the servomotor, which may damage the servomotor.

7.1.5 Using Servomotors with Holding Brakes

This section gives precautions for using servomotors with holding brakes

- The holding brakes have a limited service life. Although the quality and reliability of a holding brake has been sufficiently confirmed, stress factors, such as emergency braking, can result in problems in the holding operation. In applications in which safety is a concern, such as for a load falling on a vertical axis, determine if safety measures are required on the machine, such as adding a redundant fall-prevention mechanism.
- For a servomotor with a holding brake, there is a small amount of rotational play in the motor shaft (1.5° max. initially) because of the backlash in the holding brake, even when the brake power is OFF.
- For a servomotor with a holding brake, the brake's rotating disc may sometimes generate murmur from friction during acceleration, stopping, and low-speed operation.
- If a servomotor with a holding brake performs oscillating operation that does not involve continuous operation, the service life of the holding brake may decrease. For this reason, periodically perform continuous operation, such as by running the motor shaft at the rated speed. Contact your Yaskawa representative if you will use a servomotor in an application that is not suited to continuous operation.

7.2 Coupling to the Machine

You can couple the servomotor to the machine with either a coupling or a belt. Use the following procedures.

7.2.1 Using a Coupling




- Use a flexible coupling that is designed for servomotors. We recommend that you use a double-spring coupling, which provides some tolerance in eccentricity and deflection.
- Select a suitable size of coupling for the operating conditions. An inappropriate coupling may cause damage.
- 1. Wipe off all of the anticorrosive coating from the motor shaft.
- 2. If you are using a servomotor with a key, attach the key enclosed with the servomotor or the specified size of key to the shaft.



- When you attach the key to the motor shaft, do not subject the key groove or shaft to direct shock.
- The key groove on the motor shaft uses the fastening type described in JIS B 1301-1996 to prevent fretting wear. When you insert the key, adjust the gap between the key and the key groove in some manner, such as by buffing the key. If the key dimensions are outside the tolerances, there is a risk of key or key groove deformation.

Confirm that the centering accuracy is within the specified range using a dial gauge or other means.


If a dial gauge is not available, slide the coupling along both shafts and make adjustments so that it does not catch.

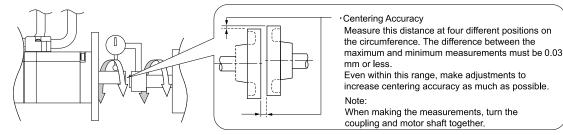

4. Align the shaft of the servomotor with the shaft of the machine, and then connect the shafts with the coupling.



- When you couple the shafts, make sure that the required centering accuracy is achieved. Vibration will damage the bearings and encoders if the shafts are not properly centered.
- When you attach the coupling, do not subject the shaft to direct shock. Also, do not subject the area around the encoder to shock. Shock may damage the encoder.

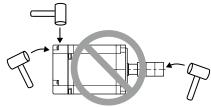

- If the coupling makes any abnormal noise, center the shafts again until the noise is eliminated.
- Make sure that the thrust load and radial load are within specifications. Refer to the specifications for each type of servomotor for the thrust load and radial load.

7.2.2 Using a Belt




Select a coupling belt that is suitable for the allowable radial load of the servomotor and the servomotor output. When the servomotor accelerates or decelerates, the counterforce from the acceleration/deceleration torque adds tension to the initial belt tension. Take this additional tension into consideration when you select the coupling belt.

- 1. Wipe off all of the anticorrosive coating from the motor shaft.
- If you are using a servomotor with a key, attach the key enclosed with the servomotor or the specified size of key to the shaft.




When you attach the key to the motor shaft, do not subject the key groove or shaft to direct shock.


If you need to attach a pulley to the servomotor with a key, use a screwdriver to tighten the screw in the end of the motor shaft to press in and attach the pulley.

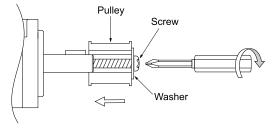

4. Couple the servomotor to the machine with a belt.

When you attach the belt, adjust the belt tension so that the allowable radial load given in the servomotor specifications is not exceeded. For details, refer to the catalog of the belt manufacturer.

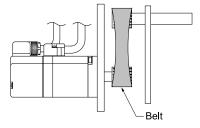


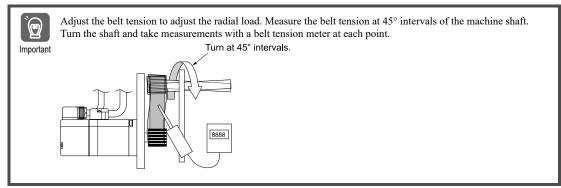

7.3 Oil and Water Countermeasures


Observe the following instructions so that water, oil, or other foreign matter will not enter the servomotor.

• Do not allow the cables to be in oil or water.

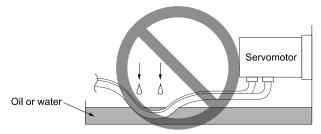

If contact with oil or water is unavoidable, use oil-resistant cables. Oil-resistant cables are not provided by Yaskawa.

• If you install the servomotor with the end of the shaft facing up, do not use the servomotor where oil or water from the machine, a gear box, or other source would come into contact with the servomotor.

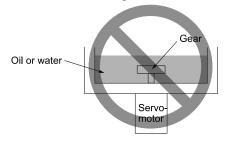

If contact with oil or water is unavoidable, implement countermeasures in the machine so that oil or water from the gear box does not enter the servomotor.

- Do not use the servomotor where it would come into contact with cutting oil.
 Depending on the type of cutting oil, sealing materials, packing, cables, nameplate, or other parts may be adversely affected.
- Do not use the servomotor where it would be continuously in contact with oil mist, water vapor, oil, water, or
 grease.

If usage under the above conditions is unavoidable, implement countermeasures in the machine to protect against dirt and water.

7.4 Servomotor Temperature Increase

This section describes measures to suppress temperature increases in the servomotor.

- When you install the servomotor, observe the cooling conditions (heat sink sizes) that are given in the specifications for each type of servomotor.
 - The servomotor generates heat when it operates. The heat generated by the servomotor radiates to the heat sink through the motor mounting surface. Therefore, if the surface area of the heat sink is too small, the temperature of the servomotor may increase abnormally.
- If the operating environment makes it difficult to use a large heat sink, or if the surrounding air temperature or altitude given in the specifications is exceeded, implement the following measures.
 - Derate the servomotor.
 Refer to the specifications for each type of servomotor for information on derating.
 Consider derating when you select the capacity of the servomotor.
 - Use external forced-air cooling for the servomotor with a cooling fan or other means.



- Do not place packing or any other insulating material between the servomotor and heat sink. Doing so will cause the motor temperature to increase, affect resistance to noise, and may cause motor failure.
- When using forced-air cooling, cool the entire servomotor.

 If only the encoder is cooled, there is a risk that alarms related to temperature will no longer occur, which may cause motor failure.

Connections between Servomotors and SERVOPACKs

This chapter describes the cables that are used to connect one servomotor to the SERVOPACK and provides related precautions.

8.1	Cables	s for the SGMXJ Servomotors	223
	8.1.1	System Configurations	223
	8.1.2	Servomotor Main Circuit Cables	225
	8.1.3	Encoder Cables (When Not Relaying the Encoder Cable)	230
	8.1.4	Encoder Cables (When Relaying the Encoder Cable)	233
8.2	Cable	s for the SGMXA Servomotors	235
	8.2.1	System Configurations	235
	8.2.2	Servomotor Main Circuit Cables	239
	8.2.3	Encoder Cables (When Not Relaying the Encoder Cable)	249
	8.2.4	Encoder Cables (When Relaying the Encoder Cable)	252
8.3	Cable	s for the 200 V SGMXP Servomotors	255
	8.3.1	System Configurations	255
	8.3.2	Servomotor Main Circuit Cables	257
	8.3.3	Encoder Cables (When Not Relaying the Encoder Cable)	262
	8.3.4	Encoder Cables (When Relaying the Encoder Cable)	263
8.4	Cable	s for the 400 V SGMXP Servomotors	266
	8.4.1	System Configurations	266
	8.4.2	Servomotor Main Circuit Cables	267
	8.4.3	Encoder Cables (When Not Relaying the Encoder Cable)	268
	8.4.4	Encoder Cables (When Relaying the Encoder Cable)	269
8.5	Cables	s for the SGMXG Servomotors	271
	8.5.1	System Configurations	271
	8.5.2	Servomotor Main Circuit Cables	273
	8.5.3	Encoder Cables (When Not Relaying the Encoder Cable)	282
	8.5.4	Encoder Cables (When Relaying the Encoder Cable)	285
8.6	Wiring	Servomotors and SERVOPACKs	287
	8.6.1	Wiring Precautions	287

8.1 **Cables for the SGMXJ Servomotors**


Information Refer to the following manual for details on connecting multiple devices to the SERVOPACK.

Σ-X-Series Peripheral Device Selection Manual (Manual No.: SIEP C710812 12)

System Configurations 8.1.1

Servomotors with Standard Specifications


The cables shown below are required to connect a servomotor to a SERVOPACK. When Not Relaying the Encoder Cable When Relaying the Encoder Cable

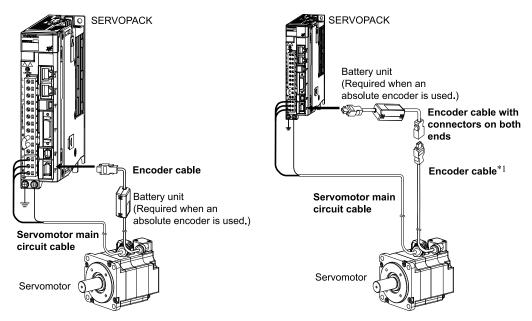

The JZSP-UCMP00-□□-E and JZSP-CSP12-E cannot be connected at the same time. *1


Note:

- 1. The encoder cable to use depends on whether the encoder cable will be relayed.
- When you will relay the encoder cable, use the following configuration. Cables: 2 cables, cable relay point: 1 location, combined cable length: 50 m
- 3. If you use a servomotor main circuit cable that exceeds 20 m, the intermittent duty zone in the torque-rotation speed characteristics will become smaller because the voltage drop increases. Refer to the following section for the intermittent duty zone.
 - 3.2.3 Torque-Rotation Speed Characteristics on page 57
- 4. Refer to the following manual for the following information.
 - · Cable dimensional drawings and wiring specifications
 - Order numbers and specifications of individual connectors for cables
 - Order numbers and specifications for wiring materials
 - Σ-X-Series AC Servo Drive Peripheral Device Selection Manual (Manual No.: SIEP C710812 12)

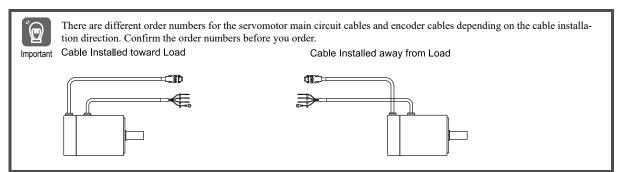


(2) Servomotors with Σ -7 Compatible Specifications

The cables shown below are required to connect a servomotor to a SERVOPACK.

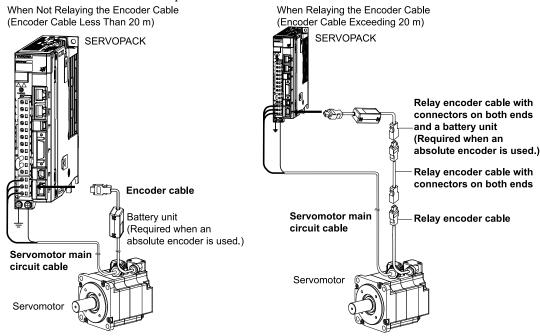

Note:

- 1. The encoder cable to use depends on whether the encoder cable will be relayed. Be sure to use the relay encoder cable with connectors at both ends in combination with the relay encoder cable as shown in the illustration at the upper right.
- If you use a servomotor main circuit cable that exceeds 20 m, the intermittent duty zone in the torque-rotation speed characteristics will become smaller because the voltage drop increases.
 Refer to the following section for the intermittent duty zone.
 - 3.2.3 Torque-Rotation Speed Characteristics on page 57
- 3. Refer to the following manual for the following information.
 - Cable dimensional drawings and wiring specifications
 - Order numbers and specifications of individual connectors for cables
 - Order numbers and specifications for wiring materials
 - Σ-X-Series AC Servo Drive Peripheral Device Selection Manual (Manual No.: SIEP C710812 12)

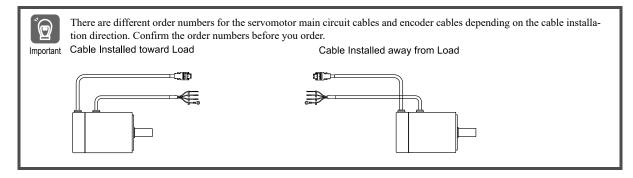

8.1.2 Servomotor Main Circuit Cables

This section provides information on selecting a servomotor main circuit cable. Refer to the following manual for detailed information on cables and for the wiring materials to make your own cables.

 $\hfill \Sigma\textsc{-X-Series}$ Peripheral Device Selection Manual (Manual No.: SIEP C710812 12)

(1) Servomotors with Standard Specifications

(a) SGMXJ-A5 to -06 (50 to 600 W)

Ma	Length	Order I	Number	A
Name	(L)	Standard Cable	Flexible Cable *1 *2	Appearance
	3 m	JWSP-XMA5NS1-03	JWSP-XMA5NF1-03	
	5 m	JWSP-XMA5NS1-05	JWSP-XMA5NF1-05	
	10 m	JWSP-XMA5NS1-10	JWSP-XMA5NF1-10	SERVOPACK end Motor end
For servomotors without	15 m	JWSP-XMA5NS1-15	JWSP-XMA5NF1-15	SERVOFACK end Invoice end
holding brakes Cable installed toward load	20 m	JWSP-XMA5NS1-20	JWSP-XMA5NF1-20	
	30 m	JWSP-XMA5NS1-30	JWSP-XMA5NF1-30	
	40 m	JWSP-XMA5NS1-40	JWSP-XMA5NF1-40	
	50 m	JWSP-XMA5NS1-50	JWSP-XMA5NF1-50	
	3 m	JWSP-XMA5NS2-03	JWSP-XMA5NF2-03	
	5 m	JWSP-XMA5NS2-05	JWSP-XMA5NF2-05	
	10 m	JWSP-XMA5NS2-10	JWSP-XMA5NF2-10	SERVOPACK end Motor end
For servomotors without holding brakes	15 m	JWSP-XMA5NS2-15	JWSP-XMA5NF2-15	SERVOPACK end Wiotor end
Cable installed away from	20 m	JWSP-XMA5NS2-20	JWSP-XMA5NF2-20	
load	30 m	JWSP-XMA5NS2-30	JWSP-XMA5NF2-30	
	40 m	JWSP-XMA5NS2-40	JWSP-XMA5NF2-40	
	50 m	JWSP-XMA5NS2-50	JWSP-XMA5NF2-50	
	3 m	JWSP-XMA5BS1-03	JWSP-XMA5BF1-03	
	5 m	JWSP-XMA5BS1-05	JWSP-XMA5BF1-05	
	10 m	JWSP-XMA5BS1-10	JWSP-XMA5BF1-10	SERVOPACK end Motor end
For servomotors with hold-	15 m	JWSP-XMA5BS1-15	JWSP-XMA5BF1-15	L
ing brakes Cable installed toward load	20 m	JWSP-XMA5BS1-20	JWSP-XMA5BF1-20	38
	30 m	JWSP-XMA5BS1-30	JWSP-XMA5BF1-30	
	40 m	JWSP-XMA5BS1-40	JWSP-XMA5BF1-40	
	50 m	JWSP-XMA5BS1-50	JWSP-XMA5BF1-50	
	3 m	JWSP-XMA5BS2-03	JWSP-XMA5BF2-03	
	5 m	JWSP-XMA5BS2-05	JWSP-XMA5BF2-05	
	10 m	JWSP-XMA5BS2-10	JWSP-XMA5BF2-10	SERVOPACK end Motor end
For servomotors with holding brakes	15 m	JWSP-XMA5BS2-15	JWSP-XMA5BF2-15	
Cable installed away from	20 m	JWSP-XMA5BS2-20	JWSP-XMA5BF2-20	
load	30 m	JWSP-XMA5BS2-30	JWSP-XMA5BF2-30	
	40 m	JWSP-XMA5BS2-40	JWSP-XMA5BF2-40	
	50 m	JWSP-XMA5BS2-50	JWSP-XMA5BF2-50	

^{*1} Use flexible cables for moving parts of machines, such as robots.

*2 The recommended bending radius (R) is 90 mm or larger.

(b) SGMXJ-08 (750 W)

	Length	Order	Number	
Name	(L)	Standard Cable	Flexible Cable *1 *2	Appearance
	3 m	JWSP-XM08NS1-03	JWSP-XM08NF1-03	
	5 m	JWSP-XM08NS1-05	JWSP-XM08NF1-05	
	10 m	JWSP-XM08NS1-10	JWSP-XM08NF1-10	SERVOPACK end Motor end
For servomotors without holding brakes	15 m	JWSP-XM08NS1-15	JWSP-XM08NF1-15	SERVOPACK end Motor end
Cable installed toward load	20 m	JWSP-XM08NS1-20	JWSP-XM08NF1-20	
	30 m	JWSP-XM08NS1-30	JWSP-XM08NF1-30	
	40 m	JWSP-XM08NS1-40	JWSP-XM08NF1-40	
	50 m	JWSP-XM08NS1-50	JWSP-XM08NF1-50	
	3 m	JWSP-XM08NS2-03	JWSP-XM08NF2-03	
	5 m	JWSP-XM08NS2-05	JWSP-XM08NF2-05	
	10 m	JWSP-XM08NS2-10	JWSP-XM08NF2-10	SERVOPACK end Motor end
For servomotors without holding brakes	15 m	JWSP-XM08NS2-15	JWSP-XM08NF2-15	SERVOPACK end Motor end
Cable installed away from	20 m	JWSP-XM08NS2-20	JWSP-XM08NF2-20	
load	30 m	JWSP-XM08NS2-30	JWSP-XM08NF2-30	
	40 m	JWSP-XM08NS2-40	JWSP-XM08NF2-40	
	50 m	JWSP-XM08NS2-50	JWSP-XM08NF2-50	
	3 m	JWSP-XM08BS1-03	JWSP-XM08BF1-03	
	5 m	JWSP-XM08BS1-05	JWSP-XM08BF1-05	
	10 m	JWSP-XM08BS1-10	JWSP-XM08BF1-10	SERVOPACK end Motor end
For servomotors with holding brakes	15 m	JWSP-XM08BS1-15	JWSP-XM08BF1-15	
Cable installed toward load	20 m	JWSP-XM08BS1-20	JWSP-XM08BF1-20	
	30 m	JWSP-XM08BS1-30	JWSP-XM08BF1-30	
	40 m	JWSP-XM08BS1-40	JWSP-XM08BF1-40	
	50 m	JWSP-XM08BS1-50	JWSP-XM08BF1-50	
	3 m	JWSP-XM08BS2-03	JWSP-XM08BF2-03	
	5 m	JWSP-XM08BS2-05	JWSP-XM08BF2-05	
	10 m	JWSP-XM08BS2-10	JWSP-XM08BF2-10	SERVOPACK end Motor end
For servomotors with holding brakes	15 m	JWSP-XM08BS2-15	JWSP-XM08BF2-15	
Cable installed away from load	20 m	JWSP-XM08BS2-20	JWSP-XM08BF2-20	
IOad	30 m	JWSP-XM08BS2-30	JWSP-XM08BF2-30	
	40 m	JWSP-XM08BS2-40	JWSP-XM08BF2-40	
	50 m	JWSP-XM08BS2-50	JWSP-XM08BF2-50	

^{*1} Use flexible cables for moving parts of machines, such as robots.

^{*2} The recommended bending radius (R) is 90 mm or larger.

Servomotors with Σ -7 Compatible Specifications (2)

(a) SGMXJ-A5 to -C2 (50 to 150 W)

	Length	Order	Number	
Name	(L)	Standard Cable	Flexible Cable *1 *2	Appearance
	3 m	JZSP-C7M10F-03-E	JZSP-C7M12F-03-E	
	5 m	JZSP-C7M10F-05-E	JZSP-C7M12F-05-E	
	10 m	JZSP-C7M10F-10-E	JZSP-C7M12F-10-E	OEDVODACK and Motor and
For servomotors without	15 m	JZSP-C7M10F-15-E	JZSP-C7M12F-15-E	SERVOPACK end Motor end
holding brakes Cable installed toward load	20 m	JZSP-C7M10F-20-E	JZSP-C7M12F-20-E	
	30 m	JZSP-C7M10F-30-E	JZSP-C7M12F-30-E	
	40 m	JZSP-C7M10F-40-E	JZSP-C7M12F-40-E	
	50 m	JZSP-C7M10F-50-E	JZSP-C7M12F-50-E	
	3 m	JZSP-C7M10G-03-E	JZSP-C7M12G-03-E	
	5 m	JZSP-C7M10G-05-E	JZSP-C7M12G-05-E	
	10 m	JZSP-C7M10G-10-E	JZSP-C7M12G-10-E	OED/ODAOK and
For servomotors without holding brakes	15 m	JZSP-C7M10G-15-E	JZSP-C7M12G-15-E	SERVOPACK end Motor end
Cable installed away from	20 m	JZSP-C7M10G-20-E	JZSP-C7M12G-20-E	
load	30 m	JZSP-C7M10G-30-E	JZSP-C7M12G-30-E	
	40 m	JZSP-C7M10G-40-E	JZSP-C7M12G-40-E	
	50 m	JZSP-C7M10G-50-E	JZSP-C7M12G-50-E	
	3 m	JZSP-C7M13F-03-E	JZSP-C7M14F-03-E	
	5 m	JZSP-C7M13F-05-E	JZSP-C7M14F-05-E	
	10 m	JZSP-C7M13F-10-E	JZSP-C7M14F-10-E	SERVOPACK end Motor end
For servomotors with hold-	15 m	JZSP-C7M13F-15-E	JZSP-C7M14F-15-E	
ing brakes Cable installed toward load	20 m	JZSP-C7M13F-20-E	JZSP-C7M14F-20-E	
	30 m	JZSP-C7M13F-30-E	JZSP-C7M14F-30-E	
	40 m	JZSP-C7M13F-40-E	JZSP-C7M14F-40-E	
	50 m	JZSP-C7M13F-50-E	JZSP-C7M14F-50-E	
	3 m	JZSP-C7M13G-03-E	JZSP-C7M14G-03-E	
	5 m	JZSP-C7M13G-05-E	JZSP-C7M14G-05-E	
	10 m	JZSP-C7M13G-10-E	JZSP-C7M14G-10-E	SERVOPACK end Motor end
For servomotors with holding brakes	15 m	JZSP-C7M13G-15-E	JZSP-C7M14G-15-E	L
Cable installed away from	20 m	JZSP-C7M13G-20-E	JZSP-C7M14G-20-E	
load	30 m	JZSP-C7M13G-30-E	JZSP-C7M14G-30-E	
	40 m	JZSP-C7M13G-40-E	JZSP-C7M14G-40-E	
	50 m	JZSP-C7M13G-50-E	JZSP-C7M14G-50-E	

Use flexible cables for moving parts of machines, such as robots. The recommended bending radius (R) is 90 mm or larger.

(b) SGMXJ-02 to -06 (200 to 600 W)

	Length	Order	Number	
Name	(L)	Standard Cable	Flexible Cable *1 *2	Appearance
	3 m	JZSP-C7M20F-03-E	JZSP-C7M22F-03-E	
	5 m	JZSP-C7M20F-05-E	JZSP-C7M22F-05-E	
	10 m	JZSP-C7M20F-10-E	JZSP-C7M22F-10-E	SERVOPACK end Motor end
For servomotors without	15 m	JZSP-C7M20F-15-E	JZSP-C7M22F-15-E	SERVOPACK end Motor end
holding brakes Cable installed toward load	20 m	JZSP-C7M20F-20-E	JZSP-C7M22F-20-E	
	30 m	JZSP-C7M20F-30-E	JZSP-C7M22F-30-E	
	40 m	JZSP-C7M20F-40-E	JZSP-C7M22F-40-E	
	50 m	JZSP-C7M20F-50-E	JZSP-C7M22F-50-E	
	3 m	JZSP-C7M20G-03-E	JZSP-C7M22G-03-E	
	5 m	JZSP-C7M20G-05-E	JZSP-C7M22G-05-E	
	10 m	JZSP-C7M20G-10-E	JZSP-C7M22G-10-E	SERVOPACK end Motor end
For servomotors without holding brakes	15 m	JZSP-C7M20G-15-E	JZSP-C7M22G-15-E	SERVOFACRENT WHOLD END
Cable installed away from load	20 m	JZSP-C7M20G-20-E	JZSP-C7M22G-20-E	
load	30 m	JZSP-C7M20G-30-E	JZSP-C7M22G-30-E	
	40 m	JZSP-C7M20G-40-E	JZSP-C7M22G-40-E	
	50 m	JZSP-C7M20G-50-E	JZSP-C7M22G-50-E	
	3 m	JZSP-C7M23F-03-E	JZSP-C7M24F-03-E	
	5 m	JZSP-C7M23F-05-E	JZSP-C7M24F-05-E	
	10 m	JZSP-C7M23F-10-E	JZSP-C7M24F-10-E	SERVOPACK end Motor end
For servomotors with holding brakes	15 m	JZSP-C7M23F-15-E	JZSP-C7M24F-15-E	
Cable installed toward load	20 m	JZSP-C7M23F-20-E	JZSP-C7M24F-20-E	
	30 m	JZSP-C7M23F-30-E	JZSP-C7M24F-30-E	
	40 m	JZSP-C7M23F-40-E	JZSP-C7M24F-40-E	
	50 m	JZSP-C7M23F-50-E	JZSP-C7M24F-50-E	
	3 m	JZSP-C7M23G-03-E	JZSP-C7M24G-03-E	
	5 m	JZSP-C7M23G-05-E	JZSP-C7M24G-05-E	
	10 m	JZSP-C7M23G-10-E	JZSP-C7M24G-10-E	SERVOPACK end Motor end
For servomotors with holding brakes	15 m	JZSP-C7M23G-15-E	JZSP-C7M24G-15-E	
Cable installed away from load	20 m	JZSP-C7M23G-20-E	JZSP-C7M24G-20-E	
load	30 m	JZSP-C7M23G-30-E	JZSP-C7M24G-30-E	
	40 m	JZSP-C7M23G-40-E	JZSP-C7M24G-40-E	
	50 m	JZSP-C7M23G-50-E	JZSP-C7M24G-50-E	

^{*1} Use flexible cables for moving parts of machines, such as robots.

^{*2} The recommended bending radius (R) is 90 mm or larger.

(c) SGMXJ-08 (750 W)

	Length	Order	Number	A
Name	(L)	Standard Cable	Flexible Cable *1 *2	Appearance
	3 m	JZSP-C7M30F-03-E	JZSP-C7M32F-03-E	
	5 m	JZSP-C7M30F-05-E	JZSP-C7M32F-05-E	
	10 m	JZSP-C7M30F-10-E	JZSP-C7M32F-10-E	OFFINORACIÓ LA Materiaria
For servomotors without	15 m	JZSP-C7M30F-15-E	JZSP-C7M32F-15-E	SERVOPACK end Motor end
holding brakes Cable installed toward load	20 m	JZSP-C7M30F-20-E	JZSP-C7M32F-20-E	
	30 m	JZSP-C7M30F-30-E	JZSP-C7M32F-30-E	
	40 m	JZSP-C7M30F-40-E	JZSP-C7M32F-40-E	
	50 m	JZSP-C7M30F-50-E	JZSP-C7M32F-50-E	
	3 m	JZSP-C7M30G-03-E	JZSP-C7M32G-03-E	
	5 m	JZSP-C7M30G-05-E	JZSP-C7M32G-05-E	
	10 m	JZSP-C7M30G-10-E	JZSP-C7M32G-10-E	CEDVODACK and Master and
For servomotors without holding brakes	15 m	JZSP-C7M30G-15-E	JZSP-C7M32G-15-E	SERVOPACK end Motor end
Cable installed away from	20 m	JZSP-C7M30G-20-E	JZSP-C7M32G-20-E	
load	30 m	JZSP-C7M30G-30-E	JZSP-C7M32G-30-E	
	40 m	JZSP-C7M30G-40-E	JZSP-C7M32G-40-E	
	50 m	JZSP-C7M30G-50-E	JZSP-C7M32G-50-E	
	3 m	JZSP-C7M33F-03-E	JZSP-C7M34F-03-E	
	5 m	JZSP-C7M33F-05-E	JZSP-C7M34F-05-E	
	10 m	JZSP-C7M33F-10-E	JZSP-C7M34F-10-E	SERVOPACK end Motor end
For servomotors with holding brakes	15 m	JZSP-C7M33F-15-E	JZSP-C7M34F-15-E	
Cable installed toward load	20 m	JZSP-C7M33F-20-E	JZSP-C7M34F-20-E	
	30 m	JZSP-C7M33F-30-E	JZSP-C7M34F-30-E	
	40 m	JZSP-C7M33F-40-E	JZSP-C7M34F-40-E	
	50 m	JZSP-C7M33F-50-E	JZSP-C7M34F-50-E	
	3 m	JZSP-C7M33G-03-E	JZSP-C7M34G-03-E	
	5 m	JZSP-C7M33G-05-E	JZSP-C7M34G-05-E	
	10 m	JZSP-C7M33G-10-E	JZSP-C7M34G-10-E	SERVOPACK end Motor end
For servomotors with holding brakes	15 m	JZSP-C7M33G-15-E	JZSP-C7M34G-15-E	
Cable installed away from	20 m	JZSP-C7M33G-20-E	JZSP-C7M34G-20-E	
load	30 m	JZSP-C7M33G-30-E	JZSP-C7M34G-30-E	
	40 m	JZSP-C7M33G-40-E	JZSP-C7M34G-40-E	
	50 m	JZSP-C7M33G-50-E	JZSP-C7M34G-50-E	

^{*1} *2 Use flexible cables for moving parts of machines, such as robots. The recommended bending radius (R) is 90 mm or larger.

8.1.3 Encoder Cables (When Not Relaying the Encoder Cable)

(1) Servomotors with Standard Specifications

	Length	Order	Number	A
Name	(L)	Standard Cable	Flexible Cable *1 *2	Appearance
	3 m	JWSP-XP2IS1-03	JWSP-XP2IF1-03	
	5 m	JWSP-XP2IS1-05	JWSP-XP2IF1-05	
	10 m	JWSP-XP2IS1-10	JWSP-XP2IF1-10	
For batteryless absolute encoder and compact bat-	15 m	JWSP-XP2IS1-15	JWSP-XP2IF1-15	SERVOPACK end Encoder end L
teryless absolute encoder Cable installed toward load	20 m	JWSP-XP2IS1-20	JWSP-XP2IF1-20	
Cable histaned toward load	30 m	JWSP-XP2IS1-30	JWSP-XP2IF1-30	
	40 m	JWSP-XP2IS1-40	JWSP-XP2IF1-40	
	50 m	JWSP-XP2IS1-50	JWSP-XP2IF1-50	
	3 m	JWSP-XP2IS2-03	JWSP-XP2IF2-03	
	5 m	JWSP-XP2IS2-05	JWSP-XP2IF2-05	
For batteryless absolute	10 m	JWSP-XP2IS2-10	JWSP-XP2IF2-10	
encoder and compact bat- teryless absolute encoder	15 m	JWSP-XP2IS2-15	JWSP-XP2IF2-15	SERVOPACK end Encoder end L
Cable installed away from	20 m	JWSP-XP2IS2-20	JWSP-XP2IF2-20	
load	30 m	JWSP-XP2IS2-30	JWSP-XP2IF2-30	
	40 m	JWSP-XP2IS2-40	JWSP-XP2IF2-40	
	50 m	JWSP-XP2IS2-50	JWSP-XP2IF2-50	
	3 m	JWSP-XP2AS1-03	JWSP-XP2AF1-03	
	5 m	JWSP-XP2AS1-05	JWSP-XP2AF1-05	
	10 m	JWSP-XP2AS1-10	JWSP-XP2AF1-10	SERVOPACK end Encoder end
For absolute encoder: With battery unit *3	15 m	JWSP-XP2AS1-15	JWSP-XP2AF1-15	
Cable installed toward load	20 m	JWSP-XP2AS1-20	JWSP-XP2AF1-20	Battery unit
	30 m	JWSP-XP2AS1-30	JWSP-XP2AF1-30	(battery included)
	40 m	JWSP-XP2AS1-40	JWSP-XP2AF1-40	
	50 m	JWSP-XP2AS1-50	JWSP-XP2AF1-50	
	3 m	JWSP-XP2AS2-03	JWSP-XP2AF2-03	
	5 m	JWSP-XP2AS2-05	JWSP-XP2AF2-05	
	10 m	JWSP-XP2AS2-10	JWSP-XP2AF2-10	SERVOPACK end Encoder end
For absolute encoder: With battery unit *3	15 m	JWSP-XP2AS2-15	JWSP-XP2AF2-15	
Cable installed away from load	20 m	JWSP-XP2AS2-20	JWSP-XP2AF2-20	Battery unit
load	30 m	JWSP-XP2AS2-30	JWSP-XP2AF2-30	(battery included)
	40 m	JWSP-XP2AS2-40	JWSP-XP2AF2-40	
	50 m	JWSP-XP2AS2-50	JWSP-XP2AF2-50	

^{*1} Use flexible cables for moving parts of machines, such as robots.

Note:

Do not use these cables as relay cables.

^{*2} The recommended bending radius (R) is 46 mm or larger.

^{*3} If a battery is connected to the host controller, the battery unit is not required.

Servomotors with Σ -7 Compatible Specifications (20 m or Less) (2)

	Length Order Number			
Name	(L)	Standard Cable	Flexible Cable *1 *2	Appearance
	3 m	JZSP-C7PI0D-03-E	JZSP-C7PI2D-03-E	
For batteryless absolute	5 m	JZSP-C7PI0D-05-E	JZSP-C7PI2D-05-E	SERVOPACK end Encoder end
encoder and compact bat- teryless absolute encoder	10 m	JZSP-C7PI0D-10-E	JZSP-C7PI2D-10-E	
Cable installed toward load	15 m	JZSP-C7PI0D-15-E	JZSP-C7PI2D-15-E	
	20 m	JZSP-C7PI0D-20-E	JZSP-C7PI2D-20-E	
	3 m	JZSP-C7PI0E-03-E	JZSP-C7PI2E-03-E	
For batteryless absolute encoder and compact bat-	5 m	JZSP-C7PI0E-05-E	JZSP-C7PI2E-05-E	SERVOPACK end Encoder end
teryless absolute encoder	10 m	JZSP-C7PI0E-10-E	JZSP-C7PI2E-10-E	
Cable installed away from load	15 m	JZSP-C7PI0E-15-E	JZSP-C7PI2E-15-E	
	20 m	JZSP-C7PI0E-20-E	JZSP-C7PI2E-20-E	
	3 m	JZSP-C7PA0D-03-E	JZSP-C7PA2D-03-E	SERVOPACK end Encoder end
For absolute encoder: With	5 m	JZSP-C7PA0D-05-E	JZSP-C7PA2D-05-E	Lincoder end
battery unit *3	10 m	JZSP-C7PA0D-10-E	JZSP-C7PA2D-10-E	
Cable installed toward load	15 m	JZSP-C7PA0D-15-E	JZSP-C7PA2D-15-E	Battery unit (battery included)
	20 m	JZSP-C7PA0D-20-E	JZSP-C7PA2D-20-E	(battery irroladed)
	3 m	JZSP-C7PA0E-03-E	JZSP-C7PA2E-03-E	OEDVODAOK and E
For absolute encoder: With	5 m	JZSP-C7PA0E-05-E	JZSP-C7PA2E-05-E	SERVOPACK end Encoder end
battery unit *3 Cable installed away from	10 m	JZSP-C7PA0E-10-E	JZSP-C7PA2E-10-E	
load	15 m	JZSP-C7PA0E-15-E	JZSP-C7PA2E-15-E	Battery unit (battery included)
	20 m	JZSP-C7PA0E-20-E	JZSP-C7PA2E-20-E	(22113.)

Use flexible cables for moving parts of machines, such as robots.

^{*2} *3 The recommended bending radius (R) is 46 mm or larger.

If a battery is connected to the host controller, the battery unit is not required.

8.1.4 Encoder Cables (When Relaying the Encoder Cable)

(1) Servomotors with Standard Specifications

When you will relay the encoder cable, use the following configuration. Cables: 2 cables, cable relay point: 1 location, combined cable length: 50 m

Name	Length Order Number			
Name	(L)	Standard Cable	Flexible Cable *1 *2	Appearance
	0.3 m	JWSP-XP1IS0-00P3	JWSP-XP1IF0-00P3	
	3 m	JWSP-XP1IS0-03	JWSP-XP1IF0-03	
Encoder cable with connectors on both ends	5 m	JWSP-XP1IS0-05	JWSP-XP1IF0-05	SERVOPACK end Encoder end
For batteryless absolute	10 m	JWSP-XP1IS0-10	JWSP-XP1IF0-10	L
encoder and compact bat- teryless absolute encoder *3	15 m	JWSP-XP1IS0-15	JWSP-XP1IF0-15	
	20 m	JWSP-XP1IS0-20	JWSP-XP1IF0-20	
	25 m	JWSP-XP1IS0-25	JWSP-XP1IF0-25	
	0.3 m	JWSP-XP1AS0-00P3	JWSP-XP1AF0-00P3	
	3 m	JWSP-XP1AS0-03	JWSP-XP1AF0-03	SERVOPACK end Encoder end
Encoder cable with connec-	5 m	JWSP-XP1AS0-05	JWSP-XP1AF0-05	L_
tors on both ends For absolute encoder: With	10 m	JWSP-XP1AS0-10	JWSP-XP1AF0-10	
battery unit *3 *4	15 m	JWSP-XP1AS0-15	JWSP-XP1AF0-15	Battery unit
	20 m	JWSP-XP1AS0-20	JWSP-XP1AF0-20	(battery included)
	25 m	JWSP-XP1AS0-25	JWSP-XP1AF0-25	
	0.3 m	JWSP-XP3IS1-00P3	JWSP-XP3IF1-00P3	
	1 m	JWSP-XP3IS1-01	JWSP-XP3IF1-01	
	3 m	JWSP-XP3IS1-03	JWSP-XP3IF1-03	
	5 m	JWSP-XP3IS1-05	JWSP-XP3IF1-05	
	10 m	JWSP-XP3IS1-10	JWSP-XP3IF1-10	SERVOPACK end Encoder end
Encoder cable Cable installed toward load	15 m	JWSP-XP3IS1-15	JWSP-XP3IF1-15	L A
cubic instance toward toad	20 m	JWSP-XP3IS1-20	JWSP-XP3IF1-20	
	25 m	JWSP-XP3IS1-25	JWSP-XP3IF1-25	
	30 m	JWSP-XP3IS1-30	JWSP-XP3IF1-30	
	40 m	JWSP-XP3IS1-40	JWSP-XP3IF1-40	
	50 m	JWSP-XP3IS1-50	JWSP-XP3IF1-50	

Continued on next page.

Continued from previous page.

Name	Length Order Number			
Name	(L)	Standard Cable	Flexible Cable *1 *2	Appearance
	0.3 m	JWSP-XP3IS2-00P3	JWSP-XP3IF2-00P3	
	1 m	JWSP-XP3IS2-01	JWSP-XP3IF2-01	
	3 m	JWSP-XP3IS2-03	JWSP-XP3IF2-03	
	5 m	JWSP-XP3IS2-05	JWSP-XP3IF2-05	
Encoder cable	10 m	JWSP-XP3IS2-10	JWSP-XP3IF2-10	SERVOPACK end Encoder end
Cable installed away from	15 m	JWSP-XP3IS2-15	JWSP-XP3IF2-15	_
load	20 m	JWSP-XP3IS2-20	JWSP-XP3IF2-20	
	25 m	JWSP-XP3IS2-25	JWSP-XP3IF2-25	
	30 m	JWSP-XP3IS2-30	JWSP-XP3IF2-30	
	40 m	JWSP-XP3IS2-40	JWSP-XP3IF2-40	
	50 m	JWSP-XP3IS2-50	JWSP-XP3IF2-50	

- Use flexible cables for moving parts of machines, such as robots.
- *2 *3 The recommended bending radius (R) is 46 mm or larger.
- The JZSP-UCMP00-□□-E and JZSP-CSP12-E cannot be connected at the same time.
- If a battery is connected to the host controller, the battery unit is not required.

(2) Servomotors with Σ -7 Compatible Specifications (When Exceeding 20

Name	Length (L)	Order Number	Appearance
Relay encoder cable (for all types of encoders) Cable installed toward load	0.3 m	JZSP-C7PRCD-E	SERVOPACK end Encoder end
Relay encoder cable (for all types of encoders) Cable installed away from load	0.3 m	JZSP-C7PRCE-E	SERVOPACK end Encoder end
Relay encoder cable with connec-	30 m	JZSP-UCMP00-30-E	SERVOPACK end Encoder end
tors on both ends	40 m	JZSP-UCMP00-40-E	<u> </u>
(for all types of encoders)	50 m	JZSP-UCMP00-50-E	
Relay encoder cable with connectors on both ends and battery unit (Required only when an absolute encoder is used. */)	0.3 m	JZSP-CSP12-E	SERVOPACK end Encoder end Battery unit (battery included)

This cable is not required if you use a servomotor with a batteryless absolute encoder, compact batteryless absolute encoder, and you connect a battery to the host controller.

Cables for the SGMXA Servomotors 8.2

Information Refer to the following manual for details on connecting multiple devices to the SERVOPACK.


Σ-X-Series Peripheral Device Selection Manual (Manual No.: SIEP C710812 12)


System Configurations 8.2.1


(1) Servomotors with Standard Specifications

The cables shown below are required to connect a servomotor to a SERVOPACK.

• SGMXA-A5 to -10 When Not Relaying the Encoder Cable

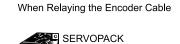


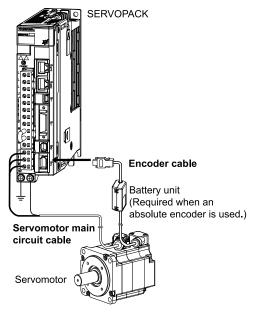

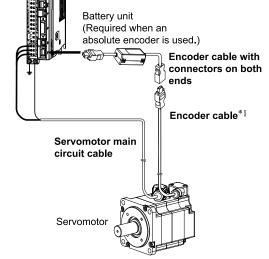

• SGMXA-15 to -70 When Not Relaying the Encoder Cable


When Relaying the Encoder Cable

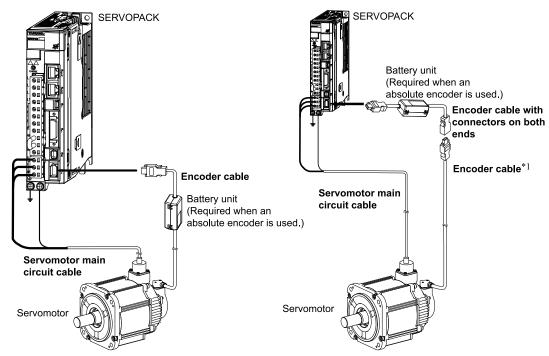

The JZSP-UCMP00-□□-E and JZSP-CSP12-E cannot be connected at the same time.

Note:


- 1. The encoder cable to use depends on whether the encoder cable will be relayed.
- When you will relay the encoder cable, use the following configuration.Cables: 2 cables, cable relay point: 1 location, combined cable length: 50 m
- If you use a servomotor main circuit cable that exceeds 20 m, the intermittent duty zone in the torque-rotation speed characteristics will become smaller because the voltage drop increases.
 Refer to the following section for the intermittent duty zone.
 - 4.2.3 Torque-Rotation Speed Characteristics on page 79
- 4. Refer to the following manual for the following information.
 - · Cable dimensional drawings and wiring specifications
 - Order numbers and specifications of individual connectors for cables
 - Order numbers and specifications for wiring materials
 - \square Σ -X-Series AC Servo Drive Peripheral Device Selection Manual (Manual No.: SIEP C710812 12)

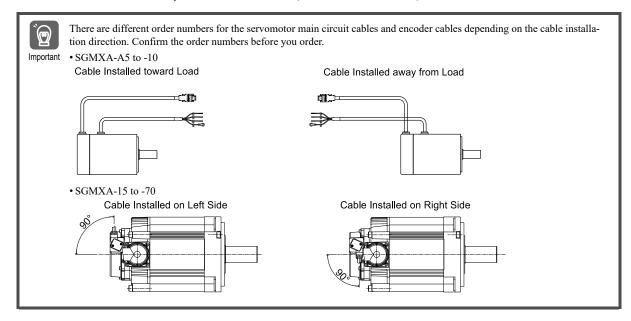

(2) Servomotors with Σ -V or Σ -7 Compatible Specifications


The cables shown below are required to connect a servomotor to a SERVOPACK.


• SGMXA-A5 to -10

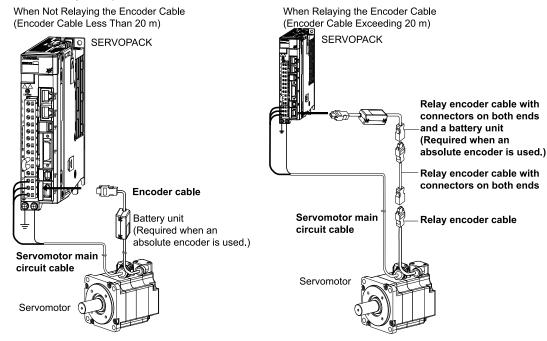

• SGMXA-15 to -70


When Not Relaying the Encoder Cable (Encoder Cable Less Than 20 m)

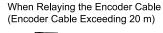

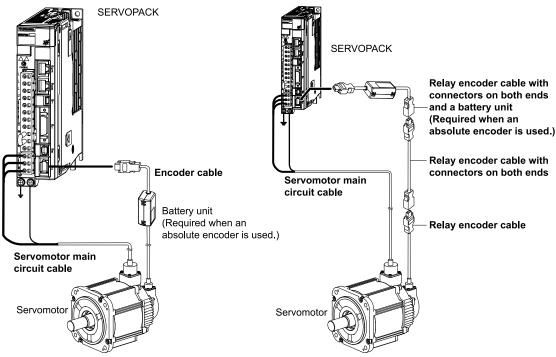

Note:

- 1. The encoder cable to use depends on whether the encoder cable will be relayed.
- If you use a servomotor main circuit cable that exceeds 20 m, the intermittent duty zone in the torque-rotation speed characteristics will become smaller because the voltage drop increases. Refer to the following section for the intermittent duty zone.
 - 4.2.3 Torque-Rotation Speed Characteristics on page 79
- ${\it 3.} \ \ Refer to the following manual for the following information.$
 - Cable dimensional drawings and wiring specifications
 - Order numbers and specifications of individual connectors for cables
 - Order numbers and specifications for wiring materials
 - Σ-X-Series AC Servo Drive Peripheral Device Selection Manual (Manual No.: SIEP C710812 12)

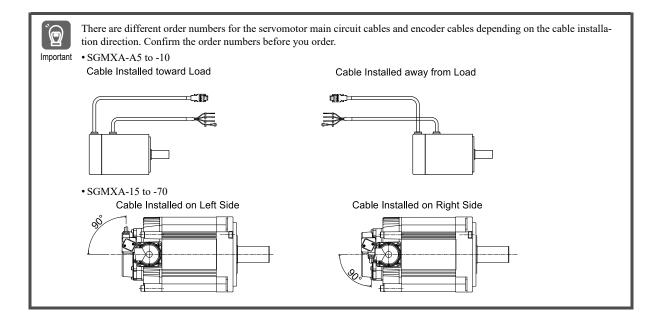

8.2.2 Servomotor Main Circuit Cables

This section provides information on selecting a servomotor main circuit cable. Refer to the following manual for detailed information on cables and for the wiring materials to make your own cables.

 $\hfill \Sigma\textsc{-X-Series}$ Peripheral Device Selection Manual (Manual No.: SIEP C710812 12)

(1) Servomotors with Standard Specifications

(a) SGMXA-A5 to -06 (50 to 600 W)

Name	Length	Order	Number	Annearance	
Name	(L)	Standard Cable	Flexible Cable *1 *2	Appearance	
	3 m	JWSP-XMA5NS1-03	JWSP-XMA5NF1-03		
	5 m	JWSP-XMA5NS1-05	JWSP-XMA5NF1-05		
	10 m	JWSP-XMA5NS1-10	JWSP-XMA5NF1-10	SERVOPACK end Motor end	
For servomotors without holding brakes	15 m	JWSP-XMA5NS1-15	JWSP-XMA5NF1-15	L L	
Cable installed toward load	20 m	JWSP-XMA5NS1-20	JWSP-XMA5NF1-20		
	30 m	JWSP-XMA5NS1-30	JWSP-XMA5NF1-30		
	40 m	JWSP-XMA5NS1-40	JWSP-XMA5NF1-40		
	50 m	JWSP-XMA5NS1-50	JWSP-XMA5NF1-50		
	3 m	JWSP-XMA5NS2-03	JWSP-XMA5NF2-03		
	5 m	JWSP-XMA5NS2-05	JWSP-XMA5NF2-05		
	10 m	JWSP-XMA5NS2-10	JWSP-XMA5NF2-10	SERVOPACK end Motor end	
For servomotors without holding brakes	15 m	JWSP-XMA5NS2-15	JWSP-XMA5NF2-15	SERVOFACRENT WOLD END	
Cable installed away from	20 m	JWSP-XMA5NS2-20	JWSP-XMA5NF2-20		
load	30 m	JWSP-XMA5NS2-30	JWSP-XMA5NF2-30		
	40 m	JWSP-XMA5NS2-40	JWSP-XMA5NF2-40		
	50 m	JWSP-XMA5NS2-50	JWSP-XMA5NF2-50		
	3 m	JWSP-XMA5BS1-03	JWSP-XMA5BF1-03		
	5 m	JWSP-XMA5BS1-05	JWSP-XMA5BF1-05		
	10 m	JWSP-XMA5BS1-10	JWSP-XMA5BF1-10	SERVOPACK end Motor end	
For servomotors with holding brakes	15 m	JWSP-XMA5BS1-15	JWSP-XMA5BF1-15	L	
Cable installed toward load	20 m	JWSP-XMA5BS1-20	JWSP-XMA5BF1-20		
	30 m	JWSP-XMA5BS1-30	JWSP-XMA5BF1-30		
	40 m	JWSP-XMA5BS1-40	JWSP-XMA5BF1-40		
	50 m	JWSP-XMA5BS1-50	JWSP-XMA5BF1-50		
	3 m	JWSP-XMA5BS2-03	JWSP-XMA5BF2-03		
	5 m	JWSP-XMA5BS2-05	JWSP-XMA5BF2-05		
_	10 m	JWSP-XMA5BS2-10	JWSP-XMA5BF2-10	SERVOPACK end Motor end	
For servomotors with holding brakes	15 m	JWSP-XMA5BS2-15	JWSP-XMA5BF2-15		
Cable installed away from	20 m	JWSP-XMA5BS2-20	JWSP-XMA5BF2-20		
load	30 m	JWSP-XMA5BS2-30	JWSP-XMA5BF2-30		
	40 m	JWSP-XMA5BS2-40	JWSP-XMA5BF2-40		
	50 m	JWSP-XMA5BS2-50	JWSP-XMA5BF2-50		

^{*1} Use flexible cables for moving parts of machines, such as robots.

*2 The recommended bending radius (R) is 90 mm or larger.

(b) SGMXA-08, -10 (750 W, 1.0 kW)

	Length	Order			
Name	(L)	Standard Cable	Flexible Cable *1 *2	Appearance	
	3 m	JWSP-XM08NS1-03	JWSP-XM08NF1-03		
	5 m	JWSP-XM08NS1-05	JWSP-XM08NF1-05		
	10 m	JWSP-XM08NS1-10	JWSP-XM08NF1-10	CED/ODACK and Motor and	
For servomotors without	15 m	JWSP-XM08NS1-15	JWSP-XM08NF1-15	SERVOPACK end Motor end	
holding brakes Cable installed toward load	20 m	JWSP-XM08NS1-20	JWSP-XM08NF1-20		
	30 m	JWSP-XM08NS1-30	JWSP-XM08NF1-30		
	40 m	JWSP-XM08NS1-40	JWSP-XM08NF1-40		
	50 m	JWSP-XM08NS1-50	JWSP-XM08NF1-50		
	3 m	JWSP-XM08NS2-03	JWSP-XM08NF2-03		
	5 m	JWSP-XM08NS2-05	JWSP-XM08NF2-05		
	10 m	JWSP-XM08NS2-10	JWSP-XM08NF2-10	CEDVODACK and Motor and	
For servomotors without holding brakes	15 m	JWSP-XM08NS2-15	JWSP-XM08NF2-15	SERVOPACK end Motor end	
Cable installed away from	20 m	JWSP-XM08NS2-20	JWSP-XM08NF2-20		
load	30 m	JWSP-XM08NS2-30	JWSP-XM08NF2-30		
	40 m	JWSP-XM08NS2-40	JWSP-XM08NF2-40		
	50 m	JWSP-XM08NS2-50	JWSP-XM08NF2-50		
	3 m	JWSP-XM08BS1-03	JWSP-XM08BF1-03		
	5 m	JWSP-XM08BS1-05	JWSP-XM08BF1-05		
	10 m	JWSP-XM08BS1-10	JWSP-XM08BF1-10	SERVOPACK end Motor end	
For servomotors with hold-	15 m	JWSP-XM08BS1-15	JWSP-XM08BF1-15		
ing brakes Cable installed toward load	20 m	JWSP-XM08BS1-20	JWSP-XM08BF1-20		
	30 m	JWSP-XM08BS1-30	JWSP-XM08BF1-30		
	40 m	JWSP-XM08BS1-40	JWSP-XM08BF1-40		
	50 m	JWSP-XM08BS1-50	JWSP-XM08BF1-50		
	3 m	JWSP-XM08BS2-03	JWSP-XM08BF2-03		
	5 m	JWSP-XM08BS2-05	JWSP-XM08BF2-05		
	10 m	JWSP-XM08BS2-10	JWSP-XM08BF2-10	SERVOPACK end Motor end	
For servomotors with holding brakes	15 m	JWSP-XM08BS2-15	JWSP-XM08BF2-15		
Cable installed away from	20 m	JWSP-XM08BS2-20	JWSP-XM08BF2-20		
load	30 m	JWSP-XM08BS2-30	JWSP-XM08BF2-30		
	40 m	JWSP-XM08BS2-40	JWSP-XM08BF2-40		
	50 m	JWSP-XM08BS2-50	JWSP-XM08BF2-50		

^{*1} Use flexible cables for moving parts of machines, such as robots.

^{*2} The recommended bending radius (R) is 90 mm or larger.

(c) SGMXA-15 (1.5 kW)

	Name Connector Specifications Length (L) Standard Cable Flexible Cable		Order N	lumber	
Name			Flexible Cable *1 *2	Appearance	
		3 m	JWSP-XM15NSS-03	JWSP-XM15NFS-03	
		5 m	JWSP-XM15NSS-05	JWSP-XM15NFS-05	SERVOPACK end Motor end
	Straight Plug	10 m	JWSP-XM15NSS-10	JWSP-XM15NFS-10	
		15 m	JWSP-XM15NSS-15	JWSP-XM15NFS-15	
For servomotors without holding		20 m	JWSP-XM15NSS-20	JWSP-XM15NFS-20	
brakes		3 m	JWSP-XM15NSL-03	JWSP-XM15NFL-03	
		5 m	JWSP-XM15NSL-05	JWSP-XM15NFL-05	SERVOPACK end Motor end
	Right-angle Plug *3	10 m	JWSP-XM15NSL-10	JWSP-XM15NFL-10	
		15 m	JWSP-XM15NSL-15	JWSP-XM15NFL-15	
		20 m	JWSP-XM15NSL-20	JWSP-XM15NFL-20	
		3 m	JWSP-XM15BSS-03	JWSP-XM15BFS-03	SERVOPACK end Motor end
		5 m	JWSP-XM15BSS-05	JWSP-XM15BFS-05	
	Straight Plug	10 m	JWSP-XM15BSS-10	JWSP-XM15BFS-10	Brake power Prake and
For servomotors		15 m	JWSP-XM15BSS-15	JWSP-XM15BFS-15	supply end
with holding		20 m	JWSP-XM15BSS-20	JWSP-XM15BFS-20	
brakes (Set of two		3 m	JWSP-XM15BSL-03	JWSP-XM15BFL-03	SERVOPACK end Motor end
cables *4)		5 m	JWSP-XM15BSL-05	JWSP-XM15BFL-05	
	Right-angle Plug *3	10 m	JWSP-XM15BSL-10	JWSP-XM15BFL-10	
	riug '3	15 m	JWSP-XM15BSL-15	JWSP-XM15BFL-15	Brake power Brake end supply end
		20 m	JWSP-XM15BSL-20	JWSP-XM15BFL-20	

- Use flexible cables for moving parts of machines, such as robots.
- *2 The recommended bending radius (R) is 90 mm or larger.
- The lead installation direction is the non-load side. Contact your Yaskawa representative if you require the leads to be installed in another direction.
- This order number is for a set of two cables (main power supply cable and holding brake cable).

When you purchase them separately, the order numbers for main power supply cables are the same as for a servomotor without a holding brake.

The following order numbers are for a holding brake cable. These standard cables are flexible cables.

- Straight Plug: JWSP-XB0FS-□□
- Right-angle Plug: JWSP-XB0FL- $\Box\Box$

If you need a cable with a length of 20 m to 50 m, consider the operating conditions and contact your Yaskawa representative with your preferred length.

(d) SGMXA-20, -25 (2.0 kW, 2.5 kW)

Connector		Length	Order N	lumber	
Name	Specifica- tions	(L)	Standard Cable	Flexible Cable *1 *2	Appearance
		3 m	JWSP-XM20NSS-03	JWSP-XM20NFS-03	
		5 m	JWSP-XM20NSS-05	JWSP-XM20NFS-05	SERVOPACK end Motor end
	Straight Plug	10 m	JWSP-XM20NSS-10	JWSP-XM20NFS-10	
		15 m	JWSP-XM20NSS-15	JWSP-XM20NFS-15	
For servomotors without holding		20 m	JWSP-XM20NSS-20	JWSP-XM20NFS-20	
brakes		3 m	JWSP-XM20NSL-03	JWSP-XM20NFL-03	
		5 m	JWSP-XM20NSL-05	JWSP-XM20NFL-05	SERVOPACK end Motor end
	Right-angle Plug *3	10 m	JWSP-XM20NSL-10	JWSP-XM20NFL-10	35
		15 m	JWSP-XM20NSL-15	JWSP-XM20NFL-15	
		20 m	JWSP-XM20NSL-20	JWSP-XM20NFL-20	
		3 m	JWSP-XM20BSS-03	JWSP-XM20BFS-03	SERVOPACK end Motor end
		5 m	JWSP-XM20BSS-05	JWSP-XM20BFS-05	
	Straight Plug	10 m	JWSP-XM20BSS-10	JWSP-XM20BFS-10	
Ean componentano		15 m	JWSP-XM20BSS-15	JWSP-XM20BFS-15	Brake power Brake end supply end
For servomotors with holding brakes		20 m	JWSP-XM20BSS-20	JWSP-XM20BFS-20	
(Set of two		3 m	JWSP-XM20BSL-03	JWSP-XM20BFL-03	SERVOPACK end Motor end
cables *4)		5 m	JWSP-XM20BSL-05	JWSP-XM20BFL-05	
	Right-angle Plug *3	10 m	JWSP-XM20BSL-10	JWSP-XM20BFL-10	Proke power
	1105	15 m	JWSP-XM20BSL-15	JWSP-XM20BFL-15	Brake power Brake end supply end
		20 m	JWSP-XM20BSL-20	JWSP-XM20BFL-20	

- *1 Use flexible cables for moving parts of machines, such as robots.
- *2 The recommended bending radius (R) is 90 mm or larger.
- *3 The lead installation direction is the non-load side. Contact your Yaskawa representative if you require the leads to be installed in another direction.
- *4 This order number is for a set of two cables (main power supply cable and holding brake cable).

When you purchase them separately, the order numbers for main power supply cables are the same as for a servomotor without a holding brake.

The following order numbers are for a holding brake cable. These standard cables are flexible cables.

- Straight Plug: JWSP-XB0FS- $\Box\Box$
- Right-angle Plug: JWSP-XB0FL- $\Box\Box$

Note

If you need a cable with a length of 20 m to 50 m, consider the operating conditions and contact your Yaskawa representative with your preferred length.

(e) SGMXA-30 (3.0 kW), -40D, -50D (4.0 kW, 5.0 kW)

Connector		Length	Order N	Number	
Name	Specifica- tions	(L)	(L) Standard Cable Flexible Cable *1 *2		Appearance
		3 m	JWSP-XM30NSS-03	JWSP-XM30NFS-03	
		5 m	JWSP-XM30NSS-05	JWSP-XM30NFS-05	SERVOPACK end Motor end
	Straight Plug	10 m	JWSP-XM30NSS-10	JWSP-XM30NFS-10	
		15 m	JWSP-XM30NSS-15	JWSP-XM30NFS-15	
For servomotors		20 m	JWSP-XM30NSS-20	JWSP-XM30NFS-20	
without holding brakes		3 m	JWSP-XM30NSL-03	JWSP-XM30NFL-03	
		5 m	JWSP-XM30NSL-05	JWSP-XM30NFL-05	SERVOPACK end Motor end
	Right-angle Plug *3	10 m	JWSP-XM30NSL-10	JWSP-XM30NFL-10	
	J	15 m	JWSP-XM30NSL-15	JWSP-XM30NFL-15	
		20 m	JWSP-XM30NSL-20	JWSP-XM30NFL-20	
		3 m	JWSP-XM30BSS-03	JWSP-XM30BFS-03	SERVOPACK end Motor end
		5 m	JWSP-XM30BSS-05	JWSP-XM30BFS-05	
	Straight Plug	10 m	JWSP-XM30BSS-10	JWSP-XM30BFS-10	
		15 m	JWSP-XM30BSS-15	JWSP-XM30BFS-15	Brake power Brake end supply end
For servomotors with holding brakes		20 m	JWSP-XM30BSS-20	JWSP-XM30BFS-20	
(Set of two		3 m	JWSP-XM30BSL-03	JWSP-XM30BFL-03	SERVOPACK end Motor end
cables *4)		5 m	JWSP-XM30BSL-05	JWSP-XM30BFL-05	
	Right-angle Plug *3	10 m	JWSP-XM30BSL-10	JWSP-XM30BFL-10	
	Fing 5	15 m	JWSP-XM30BSL-15	JWSP-XM30BFL-15	Brake power Brake end supply end
		20 m	JWSP-XM30BSL-20	JWSP-XM30BFL-20	CH CH

- Use flexible cables for moving parts of machines, such as robots.
- *2 The recommended bending radius (R) is 90 mm or larger.
- The lead installation direction is the non-load side. Contact your Yaskawa representative if you require the leads to be installed in another direction.
- This order number is for a set of two cables (main power supply cable and holding brake cable).

When you purchase them separately, the order numbers for main power supply cables are the same as for a servomotor without a holding brake.

The following order numbers are for a holding brake cable. These standard cables are flexible cables.

- Straight Plug: JWSP-XB0FS-□□
- Right-angle Plug: JWSP-XB0FL-□□

If you need a cable with a length of 20 m to 50 m, consider the operating conditions and contact your Yaskawa representative with your preferred length.

(f) SGMXA-40A, -50A (4.0 kW, 5.0 kW)

Connector		Length	Order N	lumber	
Name	Name Specifica- tions		Standard Cable	Flexible Cable *1 *2	Appearance
		3 m	JWSP-XM40NSS-03	JWSP-XM40NFS-03	
		5 m	JWSP-XM40NSS-05	JWSP-XM40NFS-05	SERVOPACK end Motor end
	Straight Plug	10 m	JWSP-XM40NSS-10	JWSP-XM40NFS-10	
		15 m	JWSP-XM40NSS-15	JWSP-XM40NFS-15	
For servomotors without holding		20 m	JWSP-XM40NSS-20	JWSP-XM40NFS-20	
brakes		3 m	JWSP-XM40NSL-03	JWSP-XM40NFL-03	
		5 m	JWSP-XM40NSL-05	JWSP-XM40NFL-05	SERVOPACK end Motor end
	Right-angle Plug *3	10 m	JWSP-XM40NSL-10	JWSP-XM40NFL-10	
		15 m	JWSP-XM40NSL-15	JWSP-XM40NFL-15	
		20 m	JWSP-XM40NSL-20	JWSP-XM40NFL-20	
		3 m	JWSP-XM40BSS-03	JWSP-XM40BFS-03	SERVOPACK end Motor end
		5 m	JWSP-XM40BSS-05	JWSP-XM40BFS-05	
	Straight Plug	10 m	JWSP-XM40BSS-10	JWSP-XM40BFS-10	
F		15 m	JWSP-XM40BSS-15	JWSP-XM40BFS-15	Brake power Brake end supply end
For servomotors with holding brakes		20 m	JWSP-XM40BSS-20	JWSP-XM40BFS-20	
(Set of two		3 m	JWSP-XM40BSL-03	JWSP-XM40BFL-03	SERVOPACK end Motor end
cables *4)		5 m	JWSP-XM40BSL-05	JWSP-XM40BFL-05	
	Right-angle Plug *3	10 m	JWSP-XM40BSL-10	JWSP-XM40BFL-10	Proko povor
	1145	15 m	JWSP-XM40BSL-15	JWSP-XM40BFL-15	Brake power Brake end supply end
		20 m	JWSP-XM40BSL-20	JWSP-XM40BFL-20	

- *1 Use flexible cables for moving parts of machines, such as robots.
- *2 The recommended bending radius (R) is 90 mm or larger.
- *3 The lead installation direction is the non-load side. Contact your Yaskawa representative if you require the leads to be installed in another direction.
- *4 This order number is for a set of two cables (main power supply cable and holding brake cable).

When you purchase them separately, the order numbers for main power supply cables are the same as for a servomotor without a holding brake.

The following order numbers are for a holding brake cable. These standard cables are flexible cables.

- Straight Plug: JWSP-XB0FS- $\Box\Box$
- Right-angle Plug: JWSP-XB0FL-

Note:

If you need a cable with a length of 20 m to 50 m, consider the operating conditions and contact your Yaskawa representative with your preferred length.

(g) SGMXA-70 (7.0 kW)

The SGMXA-70 servomotor has a built-in cooling fan. Yaskawa does not specify the cable to connect to the connector on the built-in cooling fan side. Use appropriate wiring materials for the specifications of the connector on the built-in cooling fan side.

Refer to the following manual for the specifications of the connector on the built-in cooling fan side required for selecting cables.

Σ-X-Series Peripheral Device Selection Manual (Manual No.: SIEP C710812 12)

Name	Connector Specifications	Length (L)	Order Number */	Appearance
		3 m	JWSP-XM70NFS-03	
		5 m	JWSP-XM70NFS-05	SERVOPACK end Motor end
	Straight Plug	10 m	JWSP-XM70NFS-10	
		15 m	JWSP-XM70NFS-15	
For servomotors		20 m	JWSP-XM70NFS-20	
without holding brakes	Right-angle Plug	3 m	JWSP-XM70NFL-03	
		5 m	JWSP-XM70NFL-05	SERVOPACK end Motor end
		10 m	JWSP-XM70NFL-10	
		15 m	JWSP-XM70NFL-15	
		20 m	JWSP-XM70NFL-20	

These standard cables are flexible cables. The recommended bending radius (R) is 90 mm or larger. The lead installation direction is the non-load side. Contact your Yaskawa representative if you require the leads to be installed in another direction.

Servomotors with $\Sigma\textsc{-V}$ or $\Sigma\textsc{-7}$ Compatible Specifications (2)

(a) SGMXA-A5 to -C2 (50 W to 150 W)

	Length	Order		
Name	(L)	Standard Cable	Flexible Cable *1 *2	Appearance
	3 m	JZSP-C7M10F-03-E	JZSP-C7M12F-03-E	
	5 m	JZSP-C7M10F-05-E	JZSP-C7M12F-05-E	
	10 m	JZSP-C7M10F-10-E	JZSP-C7M12F-10-E	OFF) (OPA OK
For servomotors without holding brakes	15 m	JZSP-C7M10F-15-E	JZSP-C7M12F-15-E	SERVOPACK end Motor end
Cable installed toward load	20 m	JZSP-C7M10F-20-E	JZSP-C7M12F-20-E	
	30 m	JZSP-C7M10F-30-E	JZSP-C7M12F-30-E	
	40 m	JZSP-C7M10F-40-E	JZSP-C7M12F-40-E	
	50 m	JZSP-C7M10F-50-E	JZSP-C7M12F-50-E	
	3 m	JZSP-C7M10G-03-E	JZSP-C7M12G-03-E	
	5 m	JZSP-C7M10G-05-E	JZSP-C7M12G-05-E	
	10 m	JZSP-C7M10G-10-E	JZSP-C7M12G-10-E	SERVOPACK end Motor end
For servomotors without holding brakes	15 m	JZSP-C7M10G-15-E	JZSP-C7M12G-15-E	SERVOPACK end Motor end
Cable installed away from	20 m	JZSP-C7M10G-20-E	JZSP-C7M12G-20-E	
load	30 m	JZSP-C7M10G-30-E	JZSP-C7M12G-30-E	
	40 m	JZSP-C7M10G-40-E	JZSP-C7M12G-40-E	
	50 m	JZSP-C7M10G-50-E	JZSP-C7M12G-50-E	
	3 m	JZSP-C7M13F-03-E	JZSP-C7M14F-03-E	
	5 m	JZSP-C7M13F-05-E	JZSP-C7M14F-05-E	
	10 m	JZSP-C7M13F-10-E	JZSP-C7M14F-10-E	SERVOPACK end Motor end
For servomotors with hold-	15 m	JZSP-C7M13F-15-E	JZSP-C7M14F-15-E	L
ing brakes Cable installed toward load	20 m	JZSP-C7M13F-20-E	JZSP-C7M14F-20-E	
	30 m	JZSP-C7M13F-30-E	JZSP-C7M14F-30-E	
	40 m	JZSP-C7M13F-40-E	JZSP-C7M14F-40-E	
	50 m	JZSP-C7M13F-50-E	JZSP-C7M14F-50-E	
	3 m	JZSP-C7M13G-03-E	JZSP-C7M14G-03-E	
	5 m	JZSP-C7M13G-05-E	JZSP-C7M14G-05-E	
	10 m	JZSP-C7M13G-10-E	JZSP-C7M14G-10-E	SERVOPACK end Motor end
For servomotors with holding brakes	15 m	JZSP-C7M13G-15-E	JZSP-C7M14G-15-E	L
Cable installed away from	20 m	JZSP-C7M13G-20-E	JZSP-C7M14G-20-E	
load	30 m	JZSP-C7M13G-30-E	JZSP-C7M14G-30-E	
	40 m	JZSP-C7M13G-40-E	JZSP-C7M14G-40-E	
	50 m	JZSP-C7M13G-50-E	JZSP-C7M14G-50-E	

Use flexible cables for moving parts of machines, such as robots. The recommended bending radius (R) is 90 mm or larger.

(b) SGMXA-02 to -06 (200 W to 600 W)

	Length	Order	Number	
Name	(L)	Standard Cable Flexible Cable *1 *2		Appearance
	3 m	JZSP-C7M20F-03-E	JZSP-C7M22F-03-E	
	5 m	JZSP-C7M20F-05-E	JZSP-C7M22F-05-E	
	10 m	JZSP-C7M20F-10-E JZSP-C7M22F-10-E		
For servomotors without	15 m	JZSP-C7M20F-15-E	JZSP-C7M22F-15-E	SERVOPACK end Motor end
holding brakes Cable installed toward load	20 m	JZSP-C7M20F-20-E	JZSP-C7M22F-20-E	
	30 m	JZSP-C7M20F-30-E	JZSP-C7M22F-30-E	
	40 m	JZSP-C7M20F-40-E	JZSP-C7M22F-40-E	
	50 m	JZSP-C7M20F-50-E	JZSP-C7M22F-50-E	
	3 m	JZSP-C7M20G-03-E	JZSP-C7M22G-03-E	
	5 m	JZSP-C7M20G-05-E	JZSP-C7M22G-05-E	
	10 m	JZSP-C7M20G-10-E	JZSP-C7M22G-10-E	SEDVODACK and Material
For servomotors without holding brakes	15 m	JZSP-C7M20G-15-E	JZSP-C7M22G-15-E	SERVOPACK end Motor end
Cable installed away from	20 m	JZSP-C7M20G-20-E	JZSP-C7M22G-20-E	
load	30 m	JZSP-C7M20G-30-E	JZSP-C7M22G-30-E	
	40 m	JZSP-C7M20G-40-E	JZSP-C7M22G-40-E	
	50 m	JZSP-C7M20G-50-E	JZSP-C7M22G-50-E	
	3 m	JZSP-C7M23F-03-E	JZSP-C7M24F-03-E	
	5 m	JZSP-C7M23F-05-E	JZSP-C7M24F-05-E	
	10 m	JZSP-C7M23F-10-E	JZSP-C7M24F-10-E	SERVOPACK end Motor end
For servomotors with hold-	15 m	JZSP-C7M23F-15-E	JZSP-C7M24F-15-E	L
ing brakes Cable installed toward load	20 m	JZSP-C7M23F-20-E	JZSP-C7M24F-20-E	
	30 m	JZSP-C7M23F-30-E	JZSP-C7M24F-30-E	
	40 m	JZSP-C7M23F-40-E	JZSP-C7M24F-40-E	
	50 m	JZSP-C7M23F-50-E	JZSP-C7M24F-50-E	
	3 m	JZSP-C7M23G-03-E	JZSP-C7M24G-03-E	
	5 m	JZSP-C7M23G-05-E	JZSP-C7M24G-05-E	
_	10 m	JZSP-C7M23G-10-E	JZSP-C7M24G-10-E	SERVOPACK end Motor end
For servomotors with holding brakes	15 m	JZSP-C7M23G-15-E	JZSP-C7M24G-15-E	
Cable installed away from	20 m	JZSP-C7M23G-20-E	JZSP-C7M24G-20-E	
load	30 m	JZSP-C7M23G-30-E	JZSP-C7M24G-30-E	
	40 m	JZSP-C7M23G-40-E	JZSP-C7M24G-40-E	
	50 m	JZSP-C7M23G-50-E	JZSP-C7M24G-50-E	

Use flexible cables for moving parts of machines, such as robots. The recommended bending radius (R) is 90 mm or larger.

(c) SGMXA-08, -10 (750 W, 1.0 kW)

	Length	Order	Number	
Name	(L)	Standard Cable	Flexible Cable *1 *2	Appearance
	3 m	JZSP-C7M30F-03-E	JZSP-C7M32F-03-E	
	5 m	5 m JZSP-C7M30F-05-E JZSP-C7		
	10 m	JZSP-C7M30F-10-E	JZSP-C7M32F-10-E	OFFICE AND A SIZE AND A Market and A
For servomotors without	15 m	JZSP-C7M30F-15-E	JZSP-C7M32F-15-E	SERVOPACK end Motor end
holding brakes Cable installed toward load	20 m	JZSP-C7M30F-20-E	JZSP-C7M32F-20-E	
	30 m	JZSP-C7M30F-30-E	JZSP-C7M32F-30-E	
	40 m	JZSP-C7M30F-40-E	JZSP-C7M32F-40-E	
	50 m	JZSP-C7M30F-50-E	JZSP-C7M32F-50-E	
	3 m	JZSP-C7M30G-03-E	JZSP-C7M32G-03-E	
	5 m	JZSP-C7M30G-05-E	JZSP-C7M32G-05-E	
	10 m	JZSP-C7M30G-10-E	JZSP-C7M32G-10-E	SERVORACK and Master and
For servomotors without holding brakes	15 m	JZSP-C7M30G-15-E	JZSP-C7M32G-15-E	SERVOPACK end Motor end
Cable installed away from	20 m	JZSP-C7M30G-20-E	JZSP-C7M32G-20-E	
load	30 m	JZSP-C7M30G-30-E	JZSP-C7M32G-30-E	
	40 m	JZSP-C7M30G-40-E	JZSP-C7M32G-40-E	
	50 m	JZSP-C7M30G-50-E	JZSP-C7M32G-50-E	
	3 m	JZSP-C7M33F-03-E	JZSP-C7M34F-03-E	
	5 m	JZSP-C7M33F-05-E	JZSP-C7M34F-05-E	
	10 m	JZSP-C7M33F-10-E	JZSP-C7M34F-10-E	SERVOPACK end Motor end
For servomotors with hold-	15 m	JZSP-C7M33F-15-E	JZSP-C7M34F-15-E	
ing brakes Cable installed toward load	20 m	JZSP-C7M33F-20-E	JZSP-C7M34F-20-E	
	30 m	JZSP-C7M33F-30-E	JZSP-C7M34F-30-E	
	40 m	JZSP-C7M33F-40-E	JZSP-C7M34F-40-E	
	50 m	JZSP-C7M33F-50-E	JZSP-C7M34F-50-E	
	3 m	JZSP-C7M33G-03-E	JZSP-C7M34G-03-E	
	5 m	JZSP-C7M33G-05-E	JZSP-C7M34G-05-E	
	10 m	JZSP-C7M33G-10-E	JZSP-C7M34G-10-E	SERVOPACK end Motor end
For servomotors with hold- ing brakes	15 m	JZSP-C7M33G-15-E	JZSP-C7M34G-15-E	L
Cable installed away from	20 m	JZSP-C7M33G-20-E	JZSP-C7M34G-20-E	
load	30 m	JZSP-C7M33G-30-E	JZSP-C7M34G-30-E	
	40 m	JZSP-C7M33G-40-E	JZSP-C7M34G-40-E	
	50 m	JZSP-C7M33G-50-E	JZSP-C7M34G-50-E	

Use flexible cables for moving parts of machines, such as robots.

(d) SGMXA-15 to 70 (1.5 kW to 7.0 kW)

The servomotor main circuit cable for SGMXA-15 to -70 servomotors is same as that for the standard specification servomotor and the Σ -V or Σ -7 compatible specification servomotor.

Information SGMXA-15 to -70 servomotors can also use the same cables as Σ-7 series rotary servomotors. However, if the servomotor must be compliant with protection class IP67, use the cables listed in this manual.

Refer to the following manual for information on the Σ -7-series for rotary servomotor cables.

 $\hfill \Sigma$ -7-Series Peripheral Device Selection Manual (Manual No.: SIEP S800001 32)

The recommended bending radius (R) is 90 mm or larger.

8.2.3 Encoder Cables (When Not Relaying the Encoder Cable)

(1) Servomotors with Standard Specifications

	Length	Order	Number		
Name	(L)	Standard Cable	Flexible Cable *1 *2	Appearance	
	3 m	JWSP-XP2IS1-03	JWSP-XP2IF1-03		
	5 m	JWSP-XP2IS1-05	JWSP-XP2IF1-05		
For batteryless absolute encoder and compact battery-	10 m	JWSP-XP2IS1-10	JWSP-XP2IF1-10		
less absolute encoder	15 m	JWSP-XP2IS1-15	JWSP-XP2IF1-15	SERVOPACK end Encoder end	
SGMXA-A5 to -10: Cable installed toward load	20 m	JWSP-XP2IS1-20	JWSP-XP2IF1-20		
SGMXA-15 to -50: Cable installed toward left side *3	30 m	JWSP-XP2IS1-30	JWSP-XP2IF1-30		
installed toward left side	40 m	JWSP-XP2IS1-40	JWSP-XP2IF1-40		
	50 m	JWSP-XP2IS1-50	JWSP-XP2IF1-50		
	3 m	JWSP-XP2IS2-03	JWSP-XP2IF2-03		
	5 m	JWSP-XP2IS2-05	JWSP-XP2IF2-05		
For batteryless absolute encoder and compact battery-	10 m	JWSP-XP2IS2-10	JWSP-XP2IF2-10		
less absolute encoder	15 m	JWSP-XP2IS2-15	JWSP-XP2IF2-15	SERVOPACK end Encoder end L	
SGMXA-A5 to -10: Cable installed away from load	20 m	JWSP-XP2IS2-20	JWSP-XP2IF2-20		
SGMXA-15 to -70: Cable installed toward right side	30 m	JWSP-XP2IS2-30	JWSP-XP2IF2-30		
instance toward right side	40 m	JWSP-XP2IS2-40	JWSP-XP2IF2-40		
	50 m	JWSP-XP2IS2-50	JWSP-XP2IF2-50		
	3 m	JWSP-XP2AS1-03	JWSP-XP2AF1-03		
	5 m	JWSP-XP2AS1-05	JWSP-XP2AF1-05		
For absolute encoder: With	10 m	JWSP-XP2AS1-10	JWSP-XP2AF1-10	SERVOPACK end Encoder end	
battery unit *4 SGMXA-A5 to -10: Cable	15 m	JWSP-XP2AS1-15	JWSP-XP2AF1-15		
installed toward load	20 m	JWSP-XP2AS1-20	JWSP-XP2AF1-20	Battery unit	
SGMXA-15 to -50: Cable installed toward left side *3	30 m	JWSP-XP2AS1-30	JWSP-XP2AF1-30	(battery included)	
	40 m	JWSP-XP2AS1-40	JWSP-XP2AF1-40		
	50 m	JWSP-XP2AS1-50	JWSP-XP2AF1-50		
	3 m	JWSP-XP2AS2-03	JWSP-XP2AF2-03		
	5 m	JWSP-XP2AS2-05	JWSP-XP2AF2-05		
For absolute encoder: With	10 m	JWSP-XP2AS2-10	JWSP-XP2AF2-10	SERVOPACK end Encoder end	
battery unit *4 SGMXA-A5 to -10: Cable	15 m	JWSP-XP2AS2-15	JWSP-XP2AF2-15		
installed away from load	20 m	JWSP-XP2AS2-20	JWSP-XP2AF2-20	Battery unit	
SGMXA-15 to -70: Cable installed toward right side	30 m	JWSP-XP2AS2-30	JWSP-XP2AF2-30	(battery included)	
	40 m	JWSP-XP2AS2-40	JWSP-XP2AF2-40		
	50 m	JWSP-XP2AS2-50	JWSP-XP2AF2-50		

Use flexible cables for moving parts of machines, such as robots.

The recommended bending radius (R) is 46 mm or larger.

^{*3} An encoder cable installed toward the left side cannot be used for the SGMXA-70 (7.0 kW). Use an encoder cable installed toward the right side.

^{*4} If a battery is connected to the host controller, the battery unit is not required.

Note:

Do not use these cables as relay cables.

(2) Servomotors with Σ -V or Σ -7 Compatible Specifications (20 m or Less)

(a) SGMXA-A5 to -10 (50 W to 1.0 kW)

	Length Order Number				
Name	(L)	Standard Cable	Flexible Cable *1 *2	Appearance	
	3 m	JZSP-C7PI0D-03-E	JZSP-C7PI2D-03-E		
For batteryless absolute	5 m	JZSP-C7PI0D-05-E	JZSP-C7PI2D-05-E	SERVOPACK Encoder end	
encoder and compact bat- teryless absolute encoder	10 m	JZSP-C7PI0D-10-E	JZSP-C7PI2D-10-E	end L	
Cable installed toward load	15 m	JZSP-C7PI0D-15-E	JZSP-C7PI2D-15-E		
	20 m	JZSP-C7PI0D-20-E	JZSP-C7PI2D-20-E		
	3 m	JZSP-C7PI0E-03-E	JZSP-C7PI2E-03-E		
For batteryless absolute encoder and compact bat-	5 m	JZSP-C7PI0E-05-E	JZSP-C7PI2E-05-E	SERVOPACK Encoder end	
teryless absolute encoder	10 m	JZSP-C7PI0E-10-E	JZSP-C7PI2E-10-E	end	
Cable installed away from load	15 m	JZSP-C7PI0E-15-E	JZSP-C7PI2E-15-E		
	20 m	JZSP-C7PI0E-20-E	JZSP-C7PI2E-20-E		
	3 m	JZSP-C7PA0D-03-E	JZSP-C7PA2D-03-E	SERVOPACK Encoder end	
For absolute encoder: With	5 m	JZSP-C7PA0D-05-E	JZSP-C7PA2D-05-E	end L	
battery unit *3	10 m	JZSP-C7PA0D-10-E	JZSP-C7PA2D-10-E		
Cable installed toward load	15 m	JZSP-C7PA0D-15-E	JZSP-C7PA2D-15-E	Battery unit (battery included)	
	20 m	JZSP-C7PA0D-20-E	JZSP-C7PA2D-20-E	(battery included)	
	3 m	JZSP-C7PA0E-03-E	JZSP-C7PA2E-03-E	SERVOPACK Encoder end	
For absolute encoder: With	5 m	JZSP-C7PA0E-05-E	JZSP-C7PA2E-05-E	end L	
battery unit *3 Cable installed away from	10 m	JZSP-C7PA0E-10-E	JZSP-C7PA2E-10-E		
load	15 m	JZSP-C7PA0E-15-E	JZSP-C7PA2E-15-E	Battery unit	
	20 m	JZSP-C7PA0E-20-E	JZSP-C7PA2E-20-E	(battery included)	

^{*1} Use flexible cables for moving parts of machines, such as robots.

(b) SGMXA-15 to -70 (1.5 kW to 7.0 kW)

Information

SGMXA-15 to -70 servomotors with the Σ -V or Σ -7 compatible specification can also use the same cables as Σ -7 series rotary servomotors. Refer to the following manual for information on the Σ -7-series for rotary servomotor cables.

Ω Σ-7-Series Peripheral Device Selection Manual (Manual No.: SIEP S800001 32)

^{*2} The recommended bending radius (R) is 46 mm or larger.

^{*3} If a battery is connected to the host controller, the battery unit is not required.

	Connector	Length	Order	Number	
Name	Name Specifications		Standard Cable	Flexible Cable *1 *2	Appearance
		3 m	JWSP-XPISS-03	JWSP-XPIFS-03	
		5 m	JWSP-XPISS-05	JWSP-XPIFS-05	SERVOPACK end Encoder end
	Straight Plug	10 m	JWSP-XPISS-10	JWSP-XPIFS-10	
		15 m	JWSP-XPISS-15	JWSP-XPIFS-15	
For batteryless absolute encoder and com-		20 m	JWSP-XPISS-20	JWSP-XPIFS-20	
pact batteryless absolute encoder		3 m	JWSP-XPISL-03	JWSP-XPIFL-03	
absorate encoder		5 m	JWSP-XPISL-05	JWSP-XPIFL-05	SERVOPACK end Encoder end
	Right-angle Plug *4 *5	10 m	JWSP-XPISL-10	JWSP-XPIFL-10	
		15 m	JWSP-XPISL-15	JWSP-XPIFL-15	
		20 m	JWSP-XPISL-20	JWSP-XPIFL-20	
		3 m	JWSP-XPASS-03	JWSP-XPAFS-03	
		5 m	JWSP-XPASS-05	JWSP-XPAFS-05	SERVOPACK end Encoder end
	Straight Plug	10 m	JWSP-XPASS-10	JWSP-XPAFS-10	
		15 m	JWSP-XPASS-15	JWSP-XPAFS-15	Battery unit (battery included)
For absolute encoder:		20 m	JWSP-XPASS-20	JWSP-XPAFS-20	
With battery unit *3		3 m	JWSP-XPASL-03	JWSP-XPAFL-03	
		5 m	JWSP-XPASL-05	JWSP-XPAFL-05	SERVOPACK end Encoder end
	Right-angle Plug *4 *5	10 m	JWSP-XPASL-10	JWSP-XPAFL-10	
		15 m	JWSP-XPASL-15	JWSP-XPAFL-15	Battery unit (battery included)
		20 m	JWSP-XPASL-20	JWSP-XPAFL-20	

- Use flexible cables for moving parts of machines, such as robots. The recommended bending radius (R) is 46 mm or larger.
- If a battery is connected to the host controller, the battery unit is not required.
- *1 *2 *3 *4 The lead installation direction is the non-load side. Contact your Yaskawa representative if you require the leads to be installed in
- An encoder cable with a right-angle plug cannot be used for the SGMXA-70 (7.0 kW). Use an encoder cable with a straight plug.

8.2.4 Encoder Cables (When Relaying the Encoder Cable)

(1) Servomotors with Standard Specifications

When you will relay the encoder cable, use the following configuration.

Cables: 2 cables, cable relay point: 1 location, combined cable length: 50 m

Name	Length	Order Number		
	(L)	Standard Cable	Flexible Cable *1 *2	Appearance
Encoder cable with connectors on both ends For batteryless absolute encoder and compact batteryless absolute encoder *3	0.3 m	JWSP-XP1IS0-00P3	JWSP-XP1IF0-00P3	SERVOPACK end Encoder end
	3 m	JWSP-XP1IS0-03	JWSP-XP1IF0-03	
	5 m	JWSP-XP1IS0-05	JWSP-XP1IF0-05	
	10 m	JWSP-XP1IS0-10	JWSP-XP1IF0-10	
	15 m	JWSP-XP1IS0-15	JWSP-XP1IF0-15	
	20 m	JWSP-XP1IS0-20	JWSP-XP1IF0-20	
	25 m	JWSP-XP1IS0-25	JWSP-XP1IF0-25	
Encoder cable with connectors on both ends For absolute encoder: With battery unit *3 *4	0.3 m	JWSP-XP1AS0-00P3	JWSP-XP1AF0-00P3	SERVOPACK end Encoder end L Battery unit (battery included)
	3 m	JWSP-XP1AS0-03	JWSP-XP1AF0-03	
	5 m	JWSP-XP1AS0-05	JWSP-XP1AF0-05	
	10 m	JWSP-XP1AS0-10	JWSP-XP1AF0-10	
	15 m	JWSP-XP1AS0-15	JWSP-XP1AF0-15	
	20 m	JWSP-XP1AS0-20	JWSP-XP1AF0-20	
	25 m	JWSP-XP1AS0-25	JWSP-XP1AF0-25	
Encoder cable SGMXA-A5 to -10: Cable installed toward load SGMXA-15 to -50: Cable installed toward left side *5	0.3 m	JWSP-XP3IS1-00P3	JWSP-XP3IF1-00P3	SERVOPACK end Encoder end
	1 m	JWSP-XP3IS1-01	JWSP-XP3IF1-01	
	3 m	JWSP-XP3IS1-03	JWSP-XP3IF1-03	
	5 m	JWSP-XP3IS1-05	JWSP-XP3IF1-05	
	10 m	JWSP-XP3IS1-10	JWSP-XP3IF1-10	
	15 m	JWSP-XP3IS1-15	JWSP-XP3IF1-15	
	20 m	JWSP-XP3IS1-20	JWSP-XP3IF1-20	
	25 m	JWSP-XP3IS1-25	JWSP-XP3IF1-25	
	30 m	JWSP-XP3IS1-30	JWSP-XP3IF1-30	
	40 m	JWSP-XP3IS1-40	JWSP-XP3IF1-40	
	50 m	JWSP-XP3IS1-50	JWSP-XP3IF1-50	

Continued on next page.

Continued from previous page.

Name	Length	Order I	Number	A
	(L)	Standard Cable	Flexible Cable *1 *2	Appearance
	0.3 m	JWSP-XP3IS2-00P3	JWSP-XP3IF2-00P3	
	1 m	JWSP-XP3IS2-01	JWSP-XP3IF2-01	
	3 m	JWSP-XP3IS2-03	JWSP-XP3IF2-03	
	5 m	JWSP-XP3IS2-05	JWSP-XP3IF2-05	
Encoder cable SGMXA-A5 to -10: Cable	10 m	JWSP-XP3IS2-10	JWSP-XP3IF2-10	SERVOPACK end Encoder end
installed away from load	15 m	JWSP-XP3IS2-15	JWSP-XP3IF2-15	L L
SGMXA-15 to -70: Cable installed toward right side	20 m	JWSP-XP3IS2-20	JWSP-XP3IF2-20	
	25 m	JWSP-XP3IS2-25	JWSP-XP3IF2-25	
	30 m	JWSP-XP3IS2-30	JWSP-XP3IF2-30	
	40 m	JWSP-XP3IS2-40	JWSP-XP3IF2-40	
	50 m	JWSP-XP3IS2-50	JWSP-XP3IF2-50	

- Use flexible cables for moving parts of machines, such as robots.
- The recommended bending radius (R) is 46 mm or larger.
- The JZSP-UCMP00-□□-E and JZSP-CSP12-E cannot be connected at the same time.
- If a battery is connected to the host controller, the battery unit is not required.
- An encoder cable installed toward the left side cannot be used for the SGMXA-70 (7.0 kW). Use an encoder cable installed toward

Servomotors with Σ -V or Σ -7 Compatible Specifications (When Exceeding 20 m)

(a) SGMXA-A5 to -10 (50 W to 1.0 kW)

Name	Length (L)	Order Number	Appearance
Relay encoder cable (for all types of encoders) Cable installed toward load	0.3 m	JZSP-C7PRCD-E	SERVOPACK end Encoder end
Relay encoder cable (for all types of encoders) Cable installed away from load	0.3 m	JZSP-C7PRCE-E	SERVOPACK end Encoder end
Relay encoder cable with connec-	30 m	JZSP-UCMP00-30-E	SERVOPACK end Encoder end
tors on both ends	40 m	JZSP-UCMP00-40-E	L L
(for all types of encoders)	50 m	JZSP-UCMP00-50-E	
Relay encoder cables with connectors on both ends and battery unit (Required only when an absolute encoder is used. *I)	0.3 m	JZSP-CSP12-E	SERVOPACK end Encoder end L Battery unit (battery included)

This cable is not required if you use a servomotor with a batteryless absolute encoder, compact batteryless absolute encoder, and you connect a battery to the host controller.

(b) SGMXA-15 to -70 (1.5 kW to 7.0 kW)

Name	Length (L)	Order Number	Appearance
Relay encoder cable (for all types		JZSP-CVP01-E	SERVOPACK end Encoder end
of encoders) *1 *2	0.3 m	JZSP-CVP02-E	SERVOPACK end Encoder end
D.1	30 m	JZSP-UCMP00-30-E	SERVOPACK end Encoder end
Relay encoder cable with connectors on both ends (for all types of	40 m	JZSP-UCMP00-40-E	
encoders)	50 m	JZSP-UCMP00-50-E	
Relay encoder cable with connectors on both ends and battery unit (Required only when an absolute encoder is used. *3)	0.3 m	JZSP-CSP12-E	SERVOPACK Encoder end end L Battery unit (battery included)

^{*1} The lead installation direction of the right-angle plug connector is the non-load side. Contact your Yaskawa representative if you require the leads to be installed in another direction.

An encoder cable with a right-angle plug cannot be used for the SGMXA-70 (7.0 kW). Use an encoder cable with a straight plug.

^{*3} This cable is not required if you use a servomotor with a batteryless absolute encoder, compact batteryless absolute encoder, and you connect a battery to the host controller.

Cables for the 200 V SGMXP Servomotors 8.3


Information Refer to the following manual when making connections between multiple devices and the SERVOPACK.


Σ-X-Series Peripheral Device Selection Manual (Manual No.: SIEP C710812 12)


System Configurations 8.3.1


Servomotors with Standard Specifications

The cables shown below are required to connect a servomotor to a SERVOPACK. When Not Relaying the Encoder Cable When Relaying the Encoder Cable

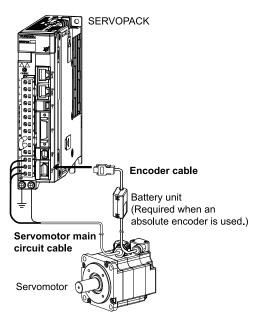

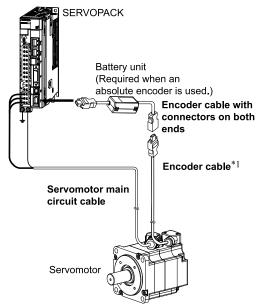

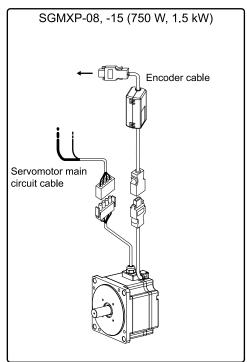

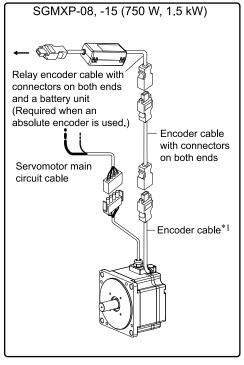


The JZSP-UCMP00-□□-E and JZSP-CSP12-E cannot be connected at the same time.

Note:

- 1. The encoder cable to use depends on whether the encoder cable will be relayed.
- 2. When you will relay the encoder cable for the SGMXP-01 to -04 servomotor, use the following configuration. Cables: 2 cables, cable relay point: 1 location, combined cable length: 50 m
- If you use a servomotor main circuit cable that exceeds 20 m, the intermittent duty zone in the torque-rotation speed characteristics will become smaller because the voltage drop increases.
 Refer to the following section for the intermittent duty zone.


5.2.3 Torque-Rotation Speed Characteristics on page 124


- 4. Refer to the following manual for the following information.
 - · Cable dimensional drawings and wiring specifications
 - Order numbers and specifications of individual connectors for cables
 - · Order numbers and specifications for wiring materials
 - Σ-X-Series AC Servo Drive Peripheral Device Selection Manual (Manual No.: SIEP C710812 12)

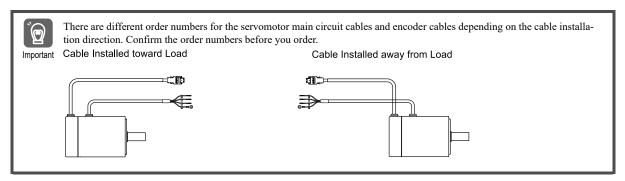


(2) Servomotors with Σ -7 Compatible Specifications

The cables shown below are required to connect a servomotor to a SERVOPACK.

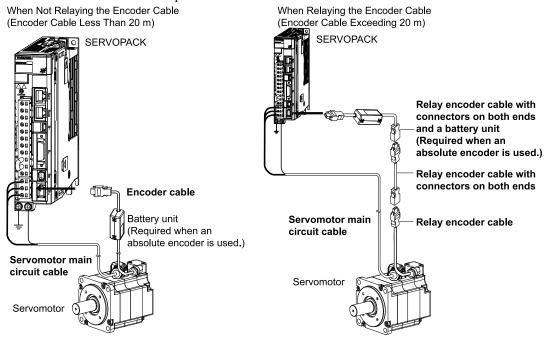


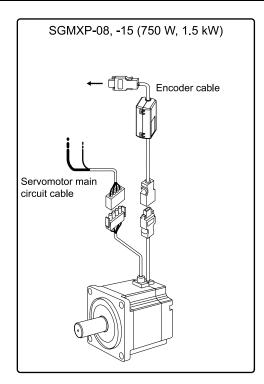

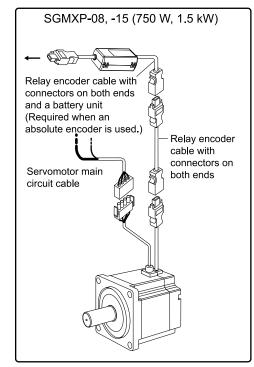

Note:

- 1. The encoder cable to use depends on whether the encoder cable will be relayed.
- 2. If you use a servomotor main circuit cable that exceeds 20 m, the intermittent duty zone in the torque-rotation speed characteristics will become smaller because the voltage drop increases. Refer to the following section for the intermittent duty zone.
 - 5.2.3 Torque-Rotation Speed Characteristics on page 124
- 3. Refer to the following manual for the following information.
 - Cable dimensional drawings and wiring specifications
 - Order numbers and specifications of individual connectors for cables
 - Order numbers and specifications for wiring materials
 - Σ-X-Series AC Servo Drive Peripheral Device Selection Manual (Manual No.: SIEP C710812 12)

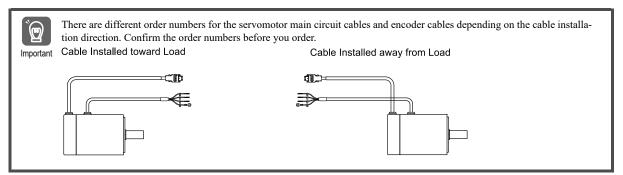

8.3.2 **Servomotor Main Circuit Cables**

This section provides information on selecting a servomotor main circuit cable. Refer to the following manual for detailed information on cables and for the wiring materials to make your own cables.

Σ-X-Series Peripheral Device Selection Manual (Manual No.: SIEP C710812 12)

(1) Servomotors with Standard Specifications

(a) SGMXP-01 to -04 (100 to 400 W)

	Length Order Number			
Name	(L)	Standard Cable	Flexible Cable *1 *2	Appearance
	3 m	JWSP-XMA5NS1-03	JWSP-XMA5NF1-03	
	5 m	JWSP-XMA5NS1-05	JWSP-XMA5NF1-05	
	10 m	JWSP-XMA5NS1-10	JWSP-XMA5NF1-10	SERVOPACK end Motor end
For servomotors without holding brakes	15 m	JWSP-XMA5NS1-15	JWSP-XMA5NF1-15	L
Cable installed toward load	20 m	JWSP-XMA5NS1-20	JWSP-XMA5NF1-20	35
	30 m	JWSP-XMA5NS1-30	JWSP-XMA5NF1-30	
	40 m	JWSP-XMA5NS1-40	JWSP-XMA5NF1-40	
	50 m	JWSP-XMA5NS1-50	JWSP-XMA5NF1-50	
	3 m	JWSP-XMA5NS2-03	JWSP-XMA5NF2-03	
	5 m	JWSP-XMA5NS2-05	JWSP-XMA5NF2-05	
	10 m	JWSP-XMA5NS2-10	JWSP-XMA5NF2-10	SERVOPACK end Motor end
For servomotors without holding brakes	15 m	JWSP-XMA5NS2-15	JWSP-XMA5NF2-15	L
Cable installed away from load	20 m	JWSP-XMA5NS2-20	JWSP-XMA5NF2-20	
load	30 m	JWSP-XMA5NS2-30	JWSP-XMA5NF2-30	
	40 m	JWSP-XMA5NS2-40	JWSP-XMA5NF2-40	
	50 m	JWSP-XMA5NS2-50	JWSP-XMA5NF2-50	
	3 m	JWSP-XMA5BS1-03	JWSP-XMA5BF1-03	
	5 m	JWSP-XMA5BS1-05	JWSP-XMA5BF1-05	
	10 m	JWSP-XMA5BS1-10	JWSP-XMA5BF1-10	SERVOPACK end Motor end
For servomotors with holding brakes	15 m	JWSP-XMA5BS1-15	JWSP-XMA5BF1-15	
Cable installed toward load	20 m	JWSP-XMA5BS1-20	JWSP-XMA5BF1-20	
	30 m	JWSP-XMA5BS1-30	JWSP-XMA5BF1-30	
	40 m	JWSP-XMA5BS1-40	JWSP-XMA5BF1-40	
	50 m	JWSP-XMA5BS1-50	JWSP-XMA5BF1-50	
	3 m	JWSP-XMA5BS2-03	JWSP-XMA5BF2-03	
	5 m	JWSP-XMA5BS2-05	JWSP-XMA5BF2-05	
	10 m	JWSP-XMA5BS2-10	JWSP-XMA5BF2-10	SERVOPACK end Motor end
For servomotors with holding brakes	15 m	JWSP-XMA5BS2-15	JWSP-XMA5BF2-15	
Cable installed away from load	20 m	JWSP-XMA5BS2-20	JWSP-XMA5BF2-20	
load	30 m	JWSP-XMA5BS2-30	JWSP-XMA5BF2-30	
	40 m	JWSP-XMA5BS2-40	JWSP-XMA5BF2-40	
	50 m	JWSP-XMA5BS2-50	JWSP-XMA5BF2-50	

^{*1} Use flexible cables for moving parts of machines, such as robots.

^{*2} The recommended bending radius (R) is 90 mm or larger.

(b) SGMXP-08 (750 W)

	Length	Order	Number	
Name	(L)	Standard Cable	Flexible Cable *1 *2	Appearance
	3 m	JZSP-CMM00-03-E	JZSP-CMM01-03-E	
	5 m	JZSP-CMM00-05-E	JZSP-CMM01-05-E	
	10 m	JZSP-CMM00-10-E	JZSP-CMM01-10-E	
For servomotors without	15 m	JZSP-CMM00-15-E	JZSP-CMM01-15-E	SERVOPACK end L Motor end
holding brakes	20 m	JZSP-CMM00-20-E	JZSP-CMM01-20-E	
	30 m	JZSP-CMM00-30-E	JZSP-CMM01-30-E	
	40 m	JZSP-CMM00-40-E	JZSP-CMM01-40-E	
	50 m	JZSP-CMM00-50-E	JZSP-CMM01-50-E	
	3 m	JZSP-CMM10-03-E	JZSP-CMM11-03-E	
	5 m	JZSP-CMM10-05-E	JZSP-CMM11-05-E	
	10 m	JZSP-CMM10-10-E	JZSP-CMM11-10-E	SEDVODACK and Mater and
For servomotors with hold-	15 m	JZSP-CMM10-15-E	JZSP-CMM11-15-E	SERVOPACK end Motor end
ing brakes	20 m	JZSP-CMM10-20-E	JZSP-CMM11-20-E	
	30 m	JZSP-CMM10-30-E	JZSP-CMM11-30-E	
	40 m	JZSP-CMM10-40-E	JZSP-CMM11-40-E	
	50 m	JZSP-CMM10-50-E	JZSP-CMM11-50-E	-

Use flexible cables for moving parts of machines, such as robots. The recommended bending radius (R) is 90 mm or larger.

(c) SGMXP-15 (1.5 kW)

Name	Length (L)	Order Number	Appearance
	3 m	JZSP-CMM20-03-E	
For servomotors without holding brakes	5 m	JZSP-CMM20-05-E	SERVOPACK end , Motor end
	10 m	JZSP-CMM20-10-E	
	15 m	JZSP-CMM20-15-E	
	20 m	JZSP-CMM20-20-E	
	3 m	JZSP-CMM30-03-E	
For servomotors with holding brakes	5 m	JZSP-CMM30-05-E	SERVOPACK end Motor end
	10 m	JZSP-CMM30-10-E	
	15 m	JZSP-CMM30-15-E	
	20 m	JZSP-CMM30-20-E	

Note:

Flexible cables are not available.

(2) Servomotors with Σ -7 Compatible Specifications

(a) SGMXP-01 (100 W)

	Length	Order I	Order Number	
Name	(L)	Standard Cable	Flexible Cable *1 *2	Appearance
	3 m	JZSP-C7M10F-03-E	JZSP-C7M12F-03-E	
	5 m	JZSP-C7M10F-05-E	JZSP-C7M12F-05-E	
	10 m	JZSP-C7M10F-10-E	JZSP-C7M12F-10-E	OFFICE A Material
For servomotors without	15 m	JZSP-C7M10F-15-E	JZSP-C7M12F-15-E	SERVOPACK end Motor end
holding brakes Cable installed toward load	20 m	JZSP-C7M10F-20-E	JZSP-C7M12F-20-E	
	30 m	JZSP-C7M10F-30-E	JZSP-C7M12F-30-E	-
	40 m	JZSP-C7M10F-40-E	JZSP-C7M12F-40-E	
	50 m	JZSP-C7M10F-50-E	JZSP-C7M12F-50-E	
	3 m	JZSP-C7M10G-03-E	JZSP-C7M12G-03-E	
	5 m	JZSP-C7M10G-05-E	JZSP-C7M12G-05-E	
	10 m	JZSP-C7M10G-10-E	JZSP-C7M12G-10-E	CEDVODACK and Material
For servomotors without holding brakes	15 m	JZSP-C7M10G-15-E	JZSP-C7M12G-15-E	SERVOPACK end Motor end
Cable installed away from	20 m	JZSP-C7M10G-20-E	JZSP-C7M12G-20-E	
load	30 m	JZSP-C7M10G-30-E	JZSP-C7M12G-30-E	
	40 m	JZSP-C7M10G-40-E	JZSP-C7M12G-40-E	
	50 m	JZSP-C7M10G-50-E	JZSP-C7M12G-50-E	
	3 m	JZSP-C7M13F-03-E	JZSP-C7M14F-03-E	
	5 m	JZSP-C7M13F-05-E	JZSP-C7M14F-05-E	
	10 m	JZSP-C7M13F-10-E	JZSP-C7M14F-10-E	SERVOPACK end Motor end
For servomotors with hold-	15 m	JZSP-C7M13F-15-E	JZSP-C7M14F-15-E	L
ing brakes Cable installed toward load	20 m	JZSP-C7M13F-20-E	JZSP-C7M14F-20-E	
	30 m	JZSP-C7M13F-30-E	JZSP-C7M14F-30-E	
	40 m	JZSP-C7M13F-40-E	JZSP-C7M14F-40-E	
	50 m	JZSP-C7M13F-50-E	JZSP-C7M14F-50-E	
	3 m	JZSP-C7M13G-03-E	JZSP-C7M14G-03-E	
	5 m	JZSP-C7M13G-05-E	JZSP-C7M14G-05-E	
	10 m	JZSP-C7M13G-10-E	JZSP-C7M14G-10-E	SERVOPACK end Motor end
For servomotors with holding brakes	15 m	JZSP-C7M13G-15-E	JZSP-C7M14G-15-E	
Cable installed away from load	20 m	JZSP-C7M13G-20-E	JZSP-C7M14G-20-E	
TOdu	30 m	JZSP-C7M13G-30-E	JZSP-C7M14G-30-E	
	40 m	JZSP-C7M13G-40-E	JZSP-C7M14G-40-E	
	50 m	JZSP-C7M13G-50-E	JZSP-C7M14G-50-E	

^{*1} Use flexible cables for moving parts of machines, such as robots.

^{*2} The recommended bending radius (R) is 90 mm or larger.

(b) SGMXP-02 to -04 (200 to 400 W)

	Length	Order	Number	
Name	(L)	Standard Cable	Flexible Cable *1 *2	Appearance
	3 m	JZSP-C7M20F-03-E	JZSP-C7M22F-03-E	
	5 m	JZSP-C7M20F-05-E	JZSP-C7M22F-05-E	
	10 m	JZSP-C7M20F-10-E	JZSP-C7M22F-10-E	
For servomotors without	15 m	JZSP-C7M20F-15-E	JZSP-C7M22F-15-E	SERVOPACK end Motor end
holding brakes Cable installed toward load	20 m	JZSP-C7M20F-20-E	JZSP-C7M22F-20-E	
	30 m	JZSP-C7M20F-30-E	JZSP-C7M22F-30-E	
	40 m	JZSP-C7M20F-40-E	JZSP-C7M22F-40-E	
	50 m	JZSP-C7M20F-50-E	JZSP-C7M22F-50-E	
	3 m	JZSP-C7M20G-03-E	JZSP-C7M22G-03-E	
	5 m	JZSP-C7M20G-05-E	JZSP-C7M22G-05-E	
	10 m	JZSP-C7M20G-10-E	JZSP-C7M22G-10-E	SERVOPACK end Motor end
For servomotors without holding brakes	15 m	JZSP-C7M20G-15-E	JZSP-C7M22G-15-E	SERVOPACK end Motor er
Cable installed away from	20 m	JZSP-C7M20G-20-E	JZSP-C7M22G-20-E	
load	30 m	JZSP-C7M20G-30-E	JZSP-C7M22G-30-E	
	40 m	JZSP-C7M20G-40-E	JZSP-C7M22G-40-E	
	50 m	JZSP-C7M20G-50-E	JZSP-C7M22G-50-E	
	3 m	JZSP-C7M23F-03-E	JZSP-C7M24F-03-E	
	5 m	JZSP-C7M23F-05-E	JZSP-C7M24F-05-E	
	10 m	JZSP-C7M23F-10-E	JZSP-C7M24F-10-E	SERVOPACK end Motor end
For servomotors with hold-	15 m	JZSP-C7M23F-15-E	JZSP-C7M24F-15-E	L
ing brakes Cable installed toward load	20 m	JZSP-C7M23F-20-E	JZSP-C7M24F-20-E	
	30 m	JZSP-C7M23F-30-E	JZSP-C7M24F-30-E	
	40 m	JZSP-C7M23F-40-E	JZSP-C7M24F-40-E	
	50 m	JZSP-C7M23F-50-E	JZSP-C7M24F-50-E	
	3 m	JZSP-C7M23G-03-E	JZSP-C7M24G-03-E	
	5 m	JZSP-C7M23G-05-E	JZSP-C7M24G-05-E	
	10 m	JZSP-C7M23G-10-E	JZSP-C7M24G-10-E	SERVOPACK end Motor end
For servomotors with holding brakes	15 m	JZSP-C7M23G-15-E	JZSP-C7M24G-15-E	
Cable installed away from	20 m	JZSP-C7M23G-20-E	JZSP-C7M24G-20-E	
load	30 m	JZSP-C7M23G-30-E	JZSP-C7M24G-30-E	
	40 m	JZSP-C7M23G-40-E	JZSP-C7M24G-40-E	
	50 m	JZSP-C7M23G-50-E	JZSP-C7M24G-50-E	

^{*1} Use flexible cables for moving parts of machines, such as robots.

(c) SGMXP-08, -15 (750 W, 1.5 kW)

The servomotor main circuit cable for the standard specification servomotor is same as that for the Σ -7 compatible specification servomotor.

^{*2} The recommended bending radius (R) is 90 mm or larger.

8.3.3 Encoder Cables (When Not Relaying the Encoder Cable)

(1) Servomotors with Standard Specifications

	Length	Order		
Name	(L)	Standard Cable	Flexible Cable *1 *2	Appearance
	3 m	JWSP-XP2IS1-03	JWSP-XP2IF1-03	
	5 m	JWSP-XP2IS1-05	JWSP-XP2IF1-05	
	10 m	JWSP-XP2IS1-10	JWSP-XP2IF1-10	
For batteryless absolute encoder and compact bat-	15 m	JWSP-XP2IS1-15	JWSP-XP2IF1-15	SERVOPACK end Encoder end
teryless absolute encoder Cable installed toward load	20 m	JWSP-XP2IS1-20	JWSP-XP2IF1-20	
Cable installed toward load	30 m	JWSP-XP2IS1-30	JWSP-XP2IF1-30	
	40 m	JWSP-XP2IS1-40	JWSP-XP2IF1-40	
	50 m	JWSP-XP2IS1-50	JWSP-XP2IF1-50	
	3 m	JWSP-XP2IS2-03	JWSP-XP2IF2-03	
	5 m	JWSP-XP2IS2-05	JWSP-XP2IF2-05	
For batteryless absolute	10 m	JWSP-XP2IS2-10	JWSP-XP2IF2-10	OFFINARACK I F
encoder and compact bat- teryless absolute encoder	15 m	JWSP-XP2IS2-15	JWSP-XP2IF2-15	SERVOPACK end Encoder end L
Cable installed away from	20 m	JWSP-XP2IS2-20	JWSP-XP2IF2-20	
load	30 m	JWSP-XP2IS2-30	JWSP-XP2IF2-30	
	40 m	JWSP-XP2IS2-40	JWSP-XP2IF2-40	
	50 m	JWSP-XP2IS2-50	JWSP-XP2IF2-50	
	3 m	JWSP-XP2AS1-03	JWSP-XP2AF1-03	
	5 m	JWSP-XP2AS1-05	JWSP-XP2AF1-05	
	10 m	JWSP-XP2AS1-10	JWSP-XP2AF1-10	SERVOPACK end Encoder end
For absolute encoder: With Battery Unit *3	15 m	JWSP-XP2AS1-15	JWSP-XP2AF1-15	
Cable installed toward load	20 m	JWSP-XP2AS1-20	JWSP-XP2AF1-20	Battery unit
	30 m	JWSP-XP2AS1-30	JWSP-XP2AF1-30	(battery included)
	40 m	JWSP-XP2AS1-40	JWSP-XP2AF1-40	
	50 m	JWSP-XP2AS1-50	JWSP-XP2AF1-50	
	3 m	JWSP-XP2AS2-03	JWSP-XP2AF2-03	
	5 m	JWSP-XP2AS2-05	JWSP-XP2AF2-05	
	10 m	JWSP-XP2AS2-10	JWSP-XP2AF2-10	SERVOPACK end Encoder end
For absolute encoder: With Battery Unit *3	15 m	JWSP-XP2AS2-15	JWSP-XP2AF2-15	
Cable installed away from load	20 m	JWSP-XP2AS2-20	JWSP-XP2AF2-20	Battery unit
load	30 m	JWSP-XP2AS2-30	JWSP-XP2AF2-30	(battery included)
	40 m	JWSP-XP2AS2-40	JWSP-XP2AF2-40	
	50 m	JWSP-XP2AS2-50	JWSP-XP2AF2-50	

^{*1} Use flexible cables for moving parts of machines, such as robots.

Note:

Do not use these cables as relay cables.

^{*2} The recommended bending radius (R) is 46 mm or larger.

^{*3} If a battery is connected to the host controller, the battery unit is not required.

(2) Servomotors with Σ -7 Compatible Specifications (20 m or Less)

(a) SGMXP-08, -15 (750 W, 1.5 kW)

	Length	oth Order Number		
Name	(L)	Standard Cable	Flexible Cable *1 *2	Appearance
	3 m	JZSP-CMP00-03-E	JZSP-CMP10-03-E	
For batteryless absolute	5 m	JZSP-CMP00-05-E	JZSP-CMP10-05-E	SERVOPACK end Encoder end
encoder and compact bat-	10 m	JZSP-CMP00-10-E	JZSP-CMP10-10-E	
teryless absolute encoder	15 m	JZSP-CMP00-15-E	JZSP-CMP10-15-E	
	20 m	JZSP-CMP00-20-E	JZSP-CMP10-20-E	
	3 m	JZSP-CSP19-03-E	JZSP-CSP29-03-E	
For absolute encoder: With battery unit *3	5 m	JZSP-CSP19-05-E	JZSP-CSP29-05-E	SERVOPACK end L Encoder end
	10 m	JZSP-CSP19-10-E	JZSP-CSP29-10-E	
	15 m	JZSP-CSP19-15-E	JZSP-CSP29-15-E	Battery unit (battery included)
	20 m	JZSP-CSP19-20-E	JZSP-CSP29-20-E	

- *1 Use flexible cables for moving parts of machines, such as robots.
- *2 The recommended bending radius (R) is 46 mm or larger.
- *3 If a battery is connected to the host controller, the battery unit is not required.

8.3.4 Encoder Cables (When Relaying the Encoder Cable)

(1) Servomotors with Standard Specifications

When you will relay the encoder cable, use the following configuration.

Cables: 2 cables, cable relay point: 1 location, combined cable length: 50 m

Manua	Length	Order I	Number	
Name	(L)	Standard Cable	Flexible Cable *1 *2	Appearance
	0.3 m	JWSP-XP1IS0-00P3	JWSP-XP1IF0-00P3	
	3 m	JWSP-XP1IS0-03	JWSP-XP1IF0-03	
Encoder cable with connectors on both ends	5 m	JWSP-XP1IS0-05	JWSP-XP1IF0-05	SERVOPACK end Encoder end
For batteryless absolute	10 m	JWSP-XP1IS0-10	JWSP-XP1IF0-10	
encoder and compact bat- teryless absolute encoder *3	15 m	JWSP-XP1IS0-15	JWSP-XP1IF0-15	
	20 m	JWSP-XP1IS0-20	JWSP-XP1IF0-20	
	25 m	JWSP-XP1IS0-25	JWSP-XP1IF0-25	
	0.3 m	JWSP-XP1AS0-00P3	JWSP-XP1AF0-00P3	
	3 m	JWSP-XP1AS0-03	JWSP-XP1AF0-03	SERVOPACK end Encoder end
Encoder cable with connec-	5 m	JWSP-XP1AS0-05	JWSP-XP1AF0-05	L L
tors on both ends For absolute encoder: With Battery Unit *3 *4	10 m	JWSP-XP1AS0-10	JWSP-XP1AF0-10	
	15 m	JWSP-XP1AS0-15	JWSP-XP1AF0-15	Battery unit
	20 m	JWSP-XP1AS0-20	JWSP-XP1AF0-20	- (battery included)
	25 m	JWSP-XP1AS0-25	JWSP-XP1AF0-25	

Continued on next page.

Continued from previous page.

	Length	Order I	Number	
Name	(L)	Standard Cable	Flexible Cable *1 *2	Appearance
	0.3 m	JWSP-XP3IS1-00P3	JWSP-XP3IF1-00P3	
	1 m	JWSP-XP3IS1-01	JWSP-XP3IF1-01	
	3 m	JWSP-XP3IS1-03	JWSP-XP3IF1-03	
	5 m	JWSP-XP3IS1-05	JWSP-XP3IF1-05	
	10 m	JWSP-XP3IS1-10	JWSP-XP3IF1-10	SERVOPACK end Encoder end
Encoder Cables Cable installed toward load	15 m	JWSP-XP3IS1-15	JWSP-XP3IF1-15	
Capic instance toward load	20 m	JWSP-XP3IS1-20	JWSP-XP3IF1-20	
	25 m	JWSP-XP3IS1-25	JWSP-XP3IF1-25	
	30 m	JWSP-XP3IS1-30	JWSP-XP3IF1-30	
	40 m	JWSP-XP3IS1-40	JWSP-XP3IF1-40	
	50 m	JWSP-XP3IS1-50	JWSP-XP3IF1-50	
	0.3 m	JWSP-XP3IS2-00P3	JWSP-XP3IF2-00P3	
	1 m	JWSP-XP3IS2-01	JWSP-XP3IF2-01	
	3 m	JWSP-XP3IS2-03	JWSP-XP3IF2-03	
	5 m	JWSP-XP3IS2-05	JWSP-XP3IF2-05	
Encoder Cables	10 m	JWSP-XP3IS2-10	JWSP-XP3IF2-10	SERVOPACK end Encoder end
Cable installed away from	15 m	JWSP-XP3IS2-15	JWSP-XP3IF2-15	L L
load	20 m	JWSP-XP3IS2-20	JWSP-XP3IF2-20	
	25 m	JWSP-XP3IS2-25	JWSP-XP3IF2-25	
	30 m	JWSP-XP3IS2-30	JWSP-XP3IF2-30	
	40 m	JWSP-XP3IS2-40	JWSP-XP3IF2-40	
	50 m	JWSP-XP3IS2-50	JWSP-XP3IF2-50	

- Use flexible cables for moving parts of machines, such as robots.
- *2 *3 The recommended bending radius (R) is 46 mm or larger.
- The JZSP-UCMP00-□□-E and JZSP-CSP12-E cannot be connected at the same time.
- If a battery is connected to the host controller, the battery unit is not required.

(2) Servomotors with Σ -7 Compatible Specifications (When Exceeding 20 m)

Name	Length (L)	Order Number	Appearance
Relay encoder cable SGMXP-01 to -04: Cable installed toward load	0.3 m	JZSP-C7PRCD-E	SERVOPACK end Encoder end
Relay encoder cable SGMXP-01 to -04: Cable installed away from load	0.3 m	JZSP-C7PRCE-E	SERVOPACK end Encoder end
Relay encoder cable with connec-	30 m	JZSP-UCMP00-30-E	SERVOPACK end Encoder end
tors on both ends (for all types of encoders)	40 m	JZSP-UCMP00-40-E	<u>L</u>
	50 m	JZSP-UCMP00-50-E	

Continued on next page.

Continued from previous page.

Name	Length (L)	Order Number	Appearance
Relay encoder cables with connectors on both ends and battery unit (Required only when an absolute encoder is used. */)	0.3 m	JZSP-CSP12-E	SERVOPACK end Encoder end L Battery unit (battery included)

^{*1} This cable is not required if you use a servomotor with a batteryless absolute encoder, compact batteryless absolute encoder, and you connect a battery to the host controller.

8.4 Cables for the 400 V SGMXP Servomotors

Information


Refer to the following manual when making connections between multiple devices and the SERVOPACK.

Σ-X-Series Peripheral Device Selection Manual (Manual No.: SIEP C710812 12)

8.4.1 System Configurations

(1) Servomotors with Standard Specifications


The cables shown below are required to connect a servomotor to a SERVOPACK.

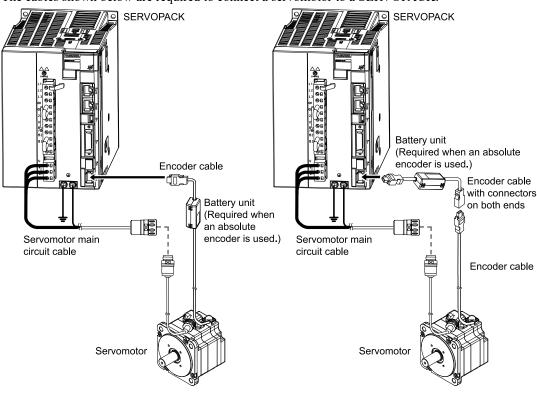

Note


- 1. The encoder cable to use depends on whether the encoder cable will be relayed.
- When you will relay the encoder cable for the SGMXP-02 to -04 servomotor, use the following configuration.
 Cables: 2 cables, cable relay point: 1 location, combined cable length: 50 m
- 3. If you use a servomotor main circuit cable that exceeds 20 m, the intermittent duty zone in the torque-rotation speed characteristics will become smaller because the voltage drop increases.

 Refer to the following section for the intermittent duty zone.
 - 5.3.3 Torque-Rotation Speed Characteristics on page 130

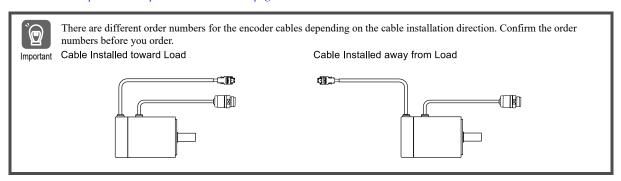

(2) Servomotors with Σ -V Compatible Specifications

The cables shown below are required to connect a servomotor to a SERVOPACK.

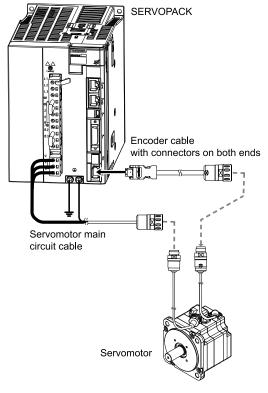

Note:

If you use a servomotor main circuit cable that exceeds 20 m, the intermittent duty zone in the torque-rotation speed characteristics will become smaller because the voltage drop increases.

Refer to the following section for the intermittent duty zone.

5.3.3 Torque-Rotation Speed Characteristics on page 130

8.4.2 Servomotor Main Circuit Cables

Main circuit cables for the Σ -V-series SGMEV (400 V) servomotors can be used. Cables are not provided by Yaskawa.

8.4.3 Encoder Cables (When Not Relaying the Encoder Cable)

(1) Servomotors with Standard Specifications

	Length	Order	Number	
Name	(L)	Standard Cable	Flexible Cable *1 *2	Appearance
	3 m	JWSP-XP2IS1-03	JWSP-XP2IF1-03	
	5 m	JWSP-XP2IS1-05	JWSP-XP2IF1-05	
	10 m	JWSP-XP2IS1-10	JWSP-XP2IF1-10	
For batteryless absolute encoder and compact bat-	15 m	JWSP-XP2IS1-15	JWSP-XP2IF1-15	SERVOPACK end Encoder end
teryless absolute encoder Cable installed toward load	20 m	JWSP-XP2IS1-20	JWSP-XP2IF1-20	
Cable installed toward load	30 m	JWSP-XP2IS1-30	JWSP-XP2IF1-30	
	40 m	JWSP-XP2IS1-40	JWSP-XP2IF1-40	
	50 m	JWSP-XP2IS1-50	JWSP-XP2IF1-50	
	3 m	JWSP-XP2IS2-03	JWSP-XP2IF2-03	
	5 m	JWSP-XP2IS2-05	JWSP-XP2IF2-05	
For batteryless absolute	10 m	JWSP-XP2IS2-10	JWSP-XP2IF2-10	OFFINARACK I F
encoder and compact bat- teryless absolute encoder	15 m	JWSP-XP2IS2-15	JWSP-XP2IF2-15	SERVOPACK end Encoder end L
Cable installed away from	20 m	JWSP-XP2IS2-20	JWSP-XP2IF2-20	
load	30 m	JWSP-XP2IS2-30	JWSP-XP2IF2-30	
	40 m	JWSP-XP2IS2-40	JWSP-XP2IF2-40	
	50 m	JWSP-XP2IS2-50	JWSP-XP2IF2-50	
	3 m	JWSP-XP2AS1-03	JWSP-XP2AF1-03	
	5 m	JWSP-XP2AS1-05	JWSP-XP2AF1-05	
	10 m	JWSP-XP2AS1-10	JWSP-XP2AF1-10	SERVOPACK end Encoder end
For absolute encoder: With Battery Unit *3	15 m	JWSP-XP2AS1-15	JWSP-XP2AF1-15	
Cable installed toward load	20 m	JWSP-XP2AS1-20	JWSP-XP2AF1-20	Battery unit
	30 m	JWSP-XP2AS1-30	JWSP-XP2AF1-30	(battery included)
	40 m	JWSP-XP2AS1-40	JWSP-XP2AF1-40	
	50 m	JWSP-XP2AS1-50	JWSP-XP2AF1-50	
	3 m	JWSP-XP2AS2-03	JWSP-XP2AF2-03	
	5 m	JWSP-XP2AS2-05	JWSP-XP2AF2-05	
	10 m	JWSP-XP2AS2-10	JWSP-XP2AF2-10	SERVOPACK end Encoder end
For absolute encoder: With Battery Unit *3	15 m	JWSP-XP2AS2-15	JWSP-XP2AF2-15	
Cable installed away from load	20 m	JWSP-XP2AS2-20	JWSP-XP2AF2-20	Battery unit
load	30 m	JWSP-XP2AS2-30	JWSP-XP2AF2-30	(battery included)
	40 m	JWSP-XP2AS2-40	JWSP-XP2AF2-40	
	50 m	JWSP-XP2AS2-50	JWSP-XP2AF2-50	

^{*1} Use flexible cables for moving parts of machines, such as robots.

Note:

Do not use these cables as relay cables.

^{*2} The recommended bending radius (R) is 46 mm or larger.

^{*3} If a battery is connected to the host controller, the battery unit is not required.

Connections between Servomotors and SERVOPACKs

(2) Servomotors with Σ -V Compatible Specifications (20 m or Less)

Cables for the $\Sigma\textsc{-V-series}$ SGMEV (400 V) servomotors can be used. Cables are not provided by Yaskawa.

8.4.4 Encoder Cables (When Relaying the Encoder Cable)

(1) Servomotors with Standard Specifications

When you will relay the encoder cable, use the following configuration. Cables: 2 cables, cable relay point: 1 location, combined cable length: 50 m

	Length Order Number		Number	
Name	(L)	Standard Cable	Flexible Cable *1 *2	Appearance
	0.3 m	JWSP-XP1IS0-00P3	JWSP-XP1IF0-00P3	
	3 m	JWSP-XP1IS0-03	JWSP-XP1IF0-03	
Encoder cable with connectors on both ends	5 m	JWSP-XP1IS0-05	JWSP-XP1IF0-05	SERVOPACK end Encoder end
For batteryless absolute	10 m	JWSP-XP1IS0-10	JWSP-XP1IF0-10	
encoder and compact bat- teryless absolute encoder *3	15 m	JWSP-XP1IS0-15	JWSP-XP1IF0-15	
	20 m	JWSP-XP1IS0-20	JWSP-XP1IF0-20	
	25 m	JWSP-XP1IS0-25	JWSP-XP1IF0-25	
	0.3 m	JWSP-XP1AS0-00P3	JWSP-XP1AF0-00P3	
	3 m	JWSP-XP1AS0-03	JWSP-XP1AF0-03	SERVOPACK end Encoder end
Encoder cable with connec-	5 m	JWSP-XP1AS0-05	JWSP-XP1AF0-05	Battery unit (battery included)
tors on both ends For absolute encoder: With	10 m	JWSP-XP1AS0-10	JWSP-XP1AF0-10	
Battery Unit *3 *4	15 m	JWSP-XP1AS0-15	JWSP-XP1AF0-15	
	20 m	JWSP-XP1AS0-20	JWSP-XP1AF0-20	
	25 m	JWSP-XP1AS0-25	JWSP-XP1AF0-25	
	0.3 m	JWSP-XP3IS1-00P3	JWSP-XP3IF1-00P3	
	1 m	JWSP-XP3IS1-01	JWSP-XP3IF1-01	
	3 m	JWSP-XP3IS1-03	JWSP-XP3IF1-03	
	5 m	JWSP-XP3IS1-05	JWSP-XP3IF1-05	
	10 m	JWSP-XP3IS1-10	JWSP-XP3IF1-10	SERVOPACK end Encoder end
Encoder Cables Cable installed toward load	15 m	JWSP-XP3IS1-15	JWSP-XP3IF1-15	
Caole instance toward toad	20 m	JWSP-XP3IS1-20	JWSP-XP3IF1-20	
	25 m	JWSP-XP3IS1-25	JWSP-XP3IF1-25	
	30 m	JWSP-XP3IS1-30	JWSP-XP3IF1-30	
	40 m	JWSP-XP3IS1-40	JWSP-XP3IF1-40	
	50 m	JWSP-XP3IS1-50	JWSP-XP3IF1-50	

Continued on next page.

Continued from previous page.

Name	Length	Order I	A	
Name	(L)	Standard Cable	Flexible Cable *1 *2	Appearance
	0.3 m	JWSP-XP3IS2-00P3	JWSP-XP3IF2-00P3	
	1 m	JWSP-XP3IS2-01	JWSP-XP3IF2-01	
	3 m	JWSP-XP3IS2-03	JWSP-XP3IF2-03	
	5 m	JWSP-XP3IS2-05	JWSP-XP3IF2-05	
Encoder Cables	10 m	JWSP-XP3IS2-10	JWSP-XP3IF2-10	SERVOPACK end Encoder end
Cable installed away from	15 m	JWSP-XP3IS2-15	JWSP-XP3IF2-15	
load	20 m	JWSP-XP3IS2-20	JWSP-XP3IF2-20	
	25 m	JWSP-XP3IS2-25	JWSP-XP3IF2-25	
	30 m	JWSP-XP3IS2-30	JWSP-XP3IF2-30	
	40 m	JWSP-XP3IS2-40	JWSP-XP3IF2-40	
	50 m	JWSP-XP3IS2-50	JWSP-XP3IF2-50	

- Use flexible cables for moving parts of machines, such as robots.
- *2 *3 *4 The recommended bending radius (R) is 46 mm or larger.
- The JZSP-UCMP00- $\Box\Box$ -E and JZSP-CSP12-E cannot be connected at the same time.
- If a battery is connected to the host controller, the battery unit is not required.

8.5 Cables for the SGMXG Servomotors


Information Refer to the following manual for details on connecting multiple devices to the SERVOPACK.

Σ-X-Series Peripheral Device Selection Manual (Manual No.: SIEP C710812 12)

8.5.1 **System Configurations**

Servomotors with Standard Specifications

The cables shown below are required to connect a servomotor to a SERVOPACK. When Not Relaying the Encoder Cable When Relaying the Encoder Cable

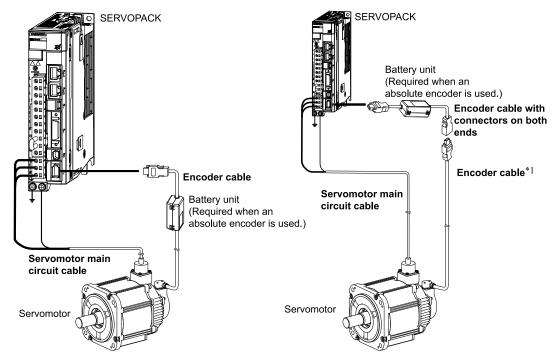


The JZSP-UCMP00-□□-E and JZSP-CSP12-E cannot be connected at the same time.

- 1. Cables with connectors on both ends that are compliant with an IP67 protective structure and European Safety Standards are not available from Yaskawa for the SGMXG servomotors. You must make such a cable yourself. Use the connectors specified by Yaskawa for these servomotors. (These connectors are compliant with the standards.) Yaskawa does not specify what wiring materials to use. Use appropriate wiring materials for the current specifications and connectors.
- 2. The encoder cable to use depends on whether the encoder cable will be relayed.
- When you will relay the encoder cable, use the following configuration. Cables: 2 cables, cable relay point: 1 location, combined cable length: 50 m
- If you use a servomotor main circuit cable that exceeds 20 m, the intermittent duty zone in the torque-rotation speed characteristics will become smaller because the voltage drop increases. Refer to the following section for the intermittent duty zone.


6.2.4 Torque-Rotation Speed Characteristics on page 153 □ 6.3.3 Torque-Rotation Speed Characteristics on page 161

- 5. Refer to the following manual for the following information.
 - · Cable dimensional drawings and wiring specifications
 - Order numbers and specifications of individual connectors for cables
 - · Order numbers and specifications for wiring materials
 - Σ-X-Series AC Servo Drive Peripheral Device Selection Manual (Manual No.: SIEP C710812 12)

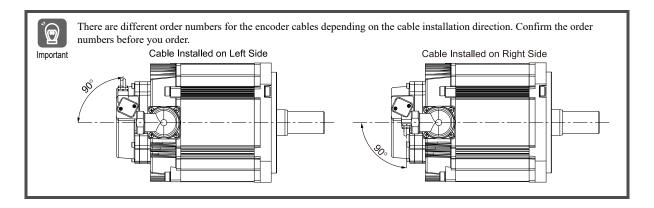

(2) Servomotors with Σ -V or Σ -7 Compatible Specifications

The cables shown below are required to connect a servomotor to a SERVOPACK.

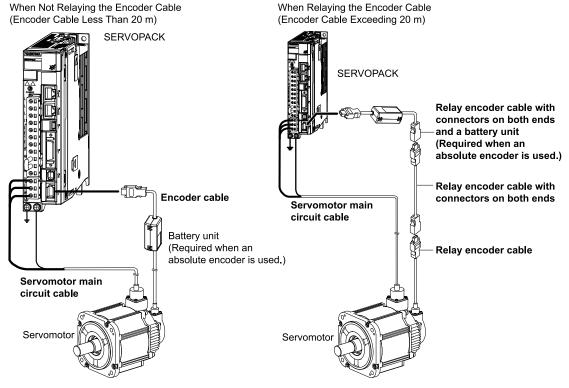

Note

- Cables with connectors on both ends that are compliant with an IP67 protective structure and European Safety Standards are not available
 from Yaskawa for the SGMXG servomotors. You must make such a cable yourself. Use the connectors specified by Yaskawa for these
 servomotors. (These connectors are compliant with the standards.) Yaskawa does not specify what wiring materials to use. Use appropriate wiring materials for the current specifications and connectors.
- 2. The encoder cable to use depends on whether the encoder cable will be relayed.
- If you use a servomotor main circuit cable that exceeds 20 m, the intermittent duty zone in the torque-rotation speed characteristics will become smaller because the voltage drop increases.
 Refer to the following section for the intermittent duty zone.

6.2.4 Torque-Rotation Speed Characteristics on page 153
 6.3.3 Torque-Rotation Speed Characteristics on page 161

- 4. Refer to the following manual for the following information.
 - · Cable dimensional drawings and wiring specifications
 - Order numbers and specifications of individual connectors for cables
 - Order numbers and specifications for wiring materials
 - Σ-X-Series AC Servo Drive Peripheral Device Selection Manual (Manual No.: SIEP C710812 12)

8.5.2 Servomotor Main Circuit Cables

The servomotor main circuit cable for the standard specification servomotor is same as that for the Σ -V or Σ -7 compatible specification servomotor.

Information

SGMXG servomotors can also use the same cables as Σ -V or Σ -7 series rotary servomotors. However, if the servomotor must be compliant with protection class IP67, use the cables listed in this manual.

Refer to the following manual for information on the Σ -7-series for rotary servomotor cables.

Σ-7-Series Peripheral Device Selection Manual (Manual No.: SIEP S800001 32)

This section provides information on selecting a servomotor main circuit cable. Refer to the following manual for detailed information on cables and for the wiring materials to make your own cables.

Σ-X-Series Peripheral Device Selection Manual (Manual No.: SIEP C710812 12)

Note:

These servomotor main circuit cables are not supported in a combination with a SERVOPACK to increase instantaneous maximum torque. Yaskawa does not provide servomotor main circuit cables for a combination with a SERVOPACK to increase instantaneous maximum torque.

(1) SGMXG-03A□A, -05□□A (300 W, 450 W), -03A□B (300 W)

Name	Length (L)	Order Number */	Appearance
	3 m	JZSP-CVM21-03-E	
	5 m	JZSP-CVM21-05-E	
	10 m	JZSP-CVM21-10-E	SERVOPACK end Motor end
For servomotors with-	15 m	JZSP-CVM21-15-E	_ - L
out holding brakes	20 m	JZSP-CVM21-20-E	
	30 m	JZSP-CVM21-30-E	<u>0 € 11 </u>
	40 m	JZSP-CVM21-40-E	
	50 m	JZSP-CVM21-50-E	
	3 m	JZSP-CVM41-03-E	
	5 m	JZSP-CVM41-05-E	
	10 m	JZSP-CVM41-10-E	SERVOPACK end Motor end
For servomotors with	15 m	JZSP-CVM41-15-E	+ L +
holding brakes	20 m	JZSP-CVM41-20-E	
	30 m	JZSP-CVM41-30-E	•
	40 m	JZSP-CVM41-40-E	
	50 m	JZSP-CVM41-50-E	

^{*1} These standard cables are flexible cables. The recommended bending radius (R) is 90 mm or larger.

(2) SGMXG-09 - A, -13 - A (850 W, 1.3 kW), -06 A B, -09 A B (600 W, 900 W)

	Connector		ength Order Number		
Name	Specifica- tions	(L)	Standard Cable	Flexible Cable *1 *2	Appearance
		3 m	JWSP-XM15NSS-03	JWSP-XM15NFS-03	
		5 m	JWSP-XM15NSS-05	JWSP-XM15NFS-05	SERVOPACK end Motor end
	Straight Plug	10 m	JWSP-XM15NSS-10	JWSP-XM15NFS-10	
		15 m	JWSP-XM15NSS-15	JWSP-XM15NFS-15	
For servomotors		20 m	JWSP-XM15NSS-20	JWSP-XM15NFS-20	
without holding brakes		3 m	JWSP-XM15NSL-03	JWSP-XM15NFL-03	
		5 m	JWSP-XM15NSL-05	JWSP-XM15NFL-05	SERVOPACK end Motor end
	Right-angle Plug *3	10 m	JWSP-XM15NSL-10	JWSP-XM15NFL-10	L
		15 m	JWSP-XM15NSL-15	JWSP-XM15NFL-15	
		20 m	JWSP-XM15NSL-20	JWSP-XM15NFL-20	
		3 m	JWSP-XM15BSS-03	JWSP-XM15BFS-03	SERVOPACK end Motor end
		5 m	JWSP-XM15BSS-05	JWSP-XM15BFS-05	
	Straight Plug	10 m	JWSP-XM15BSS-10	JWSP-XM15BFS-10	
	Straight Plug	15 m	JWSP-XM15BSS-15	JWSP-XM15BFS-15	Brake power supply Brake end
For servomotors with holding brakes		20 m	JWSP-XM15BSS-20	JWSP-XM15BFS-20	end
(Set of two		3 m	JWSP-XM15BSL-03	JWSP-XM15BFL-03	SERVOPACK end Motor end
cables *4)		5 m	JWSP-XM15BSL-05	JWSP-XM15BFL-05	
	Right-angle	10 m	JWSP-XM15BSL-10	JWSP-XM15BFL-10	
	Plug *3	15 m	JWSP-XM15BSL-15	JWSP-XM15BFL-15	Brake power supply Brake end
		20 m	JWSP-XM15BSL-20	JWSP-XM15BFL-20	end L

^{*1} Use flexible cables for moving parts of machines, such as robots.

When you purchase them separately, the order numbers for main power supply cables are the same as for a servomotor without a holding brake.

The following order numbers are for a holding brake cable. These standard cables are flexible cables.

- Straight Plug: JWSP-XB0FS- $\Box\Box$
- Right-angle Plug: JWSP-XB0FL- $\Box\Box$

Note

If you need a cable with a length of 20 m to 50 m, consider the operating conditions and contact your Yaskawa representative with your preferred length.

^{*2} The recommended bending radius (R) is 90 mm or larger.

^{*3} The lead installation direction is the non-load side. Contact your Yaskawa representative if you require the leads to be installed in another direction.

^{*4} This order number is for a set of two cables (main power supply cable and holding brake cable).

(3) SGMXG-20 - A (1.8 kW), -12A B (1.2 kW)

	Connector	Length	Order N	Number	
Name	Specifica- tions	(L)	Standard Cable	Flexible Cable *1 *2	Appearance
		3 m	JWSP-XM20NSS-03	JWSP-XM20NFS-03	
		5 m	JWSP-XM20NSS-05	JWSP-XM20NFS-05	SERVOPACK end Motor end
	Straight Plug	10 m	JWSP-XM20NSS-10	JWSP-XM20NFS-10	
		15 m	JWSP-XM20NSS-15	JWSP-XM20NFS-15	
For servomotors		20 m	JWSP-XM20NSS-20	JWSP-XM20NFS-20	
without holding brakes		3 m	JWSP-XM20NSL-03	JWSP-XM20NFL-03	
		5 m	JWSP-XM20NSL-05	JWSP-XM20NFL-05	SERVOPACK end Motor end
	Right-angle Plug *3	10 m	JWSP-XM20NSL-10	JWSP-XM20NFL-10	
		15 m	JWSP-XM20NSL-15	JWSP-XM20NFL-15	
		20 m	JWSP-XM20NSL-20	JWSP-XM20NFL-20	
		3 m	JWSP-XM20BSS-03	JWSP-XM20BFS-03	SERVOPACK end Motor end
		5 m	JWSP-XM20BSS-05	JWSP-XM20BFS-05	
	Straight Plug	10 m	JWSP-XM20BSS-10	JWSP-XM20BFS-10	
F		15 m	JWSP-XM20BSS-15	JWSP-XM20BFS-15	Brake power Brake end supply end
For servomotors with holding brakes		20 m	JWSP-XM20BSS-20	JWSP-XM20BFS-20	
(Set of two		3 m	JWSP-XM20BSL-03	JWSP-XM20BFL-03	SERVOPACK end Motor end
cables *4)		5 m	JWSP-XM20BSL-05	JWSP-XM20BFL-05	
	Right-angle Plug *3	10 m	JWSP-XM20BSL-10	JWSP-XM20BFL-10	
	i iug J	15 m	JWSP-XM20BSL-15	JWSP-XM20BFL-15	Brake power Brake end supply end L L
		20 m	JWSP-XM20BSL-20	JWSP-XM20BFL-20	CT TO THE CT

- *1 Use flexible cables for moving parts of machines, such as robots.
- *2 The recommended bending radius (R) is 90 mm or larger.
- *3 The lead installation direction is the non-load side. Contact your Yaskawa representative if you require the leads to be installed in another direction.
- *4 This order number is for a set of two cables (main power supply cable and holding brake cable).

When you purchase them separately, the order numbers for main power supply cables are the same as for a servomotor without a holding brake.

The following order numbers are for a holding brake cable. These standard cables are flexible cables.

- Straight Plug: JWSP-XB0FS-
- Right-angle Plug: JWSP-XB0FL-

Note:

If you need a cable with a length of 20 m to 50 m, consider the operating conditions and contact your Yaskawa representative with your preferred length.

(4) SGMXG-30□□A (2.9 kW, when used in combination with the SGDXS-200A), -20A□B, -30A□B (2.0 kW, 3.0 kW), -30D□A, -44D□A (2.9 kW, 4.4kW)

	Connector	Length	Order I	lumber	_
Name	Specifica- tions	(L)	Standard Cable	Flexible Cable *1 *2	Appearance
		3 m	JWSP-XM30NSS-03	JWSP-XM30NFS-03	
		5 m	JWSP-XM30NSS-05	JWSP-XM30NFS-05	SERVOPACK end Motor end
	Straight Plug	10 m	JWSP-XM30NSS-10	JWSP-XM30NFS-10	
		15 m	JWSP-XM30NSS-15	JWSP-XM30NFS-15	
For servomotors without holding		20 m	JWSP-XM30NSS-20	JWSP-XM30NFS-20	
brakes		3 m	JWSP-XM30NSL-03	JWSP-XM30NFL-03	
		5 m	JWSP-XM30NSL-05	JWSP-XM30NFL-05	SERVOPACK end Motor end
	Right-angle Plug *3	10 m	JWSP-XM30NSL-10	JWSP-XM30NFL-10	
		15 m	JWSP-XM30NSL-15	JWSP-XM30NFL-15	
		20 m	JWSP-XM30NSL-20	JWSP-XM30NFL-20	
		3 m	JWSP-XM30BSS-03	JWSP-XM30BFS-03	SERVOPACK end Motor end
		5 m	JWSP-XM30BSS-05	JWSP-XM30BFS-05	
	Straight Plug	10 m	JWSP-XM30BSS-10	JWSP-XM30BFS-10	
F		15 m	JWSP-XM30BSS-15	JWSP-XM30BFS-15	Brake power Brake end
For servomotors with holding brakes		20 m	JWSP-XM30BSS-20	JWSP-XM30BFS-20	
(Set of two		3 m	JWSP-XM30BSL-03	JWSP-XM30BFL-03	SERVOPACK end Motor end
cables *4)		5 m	JWSP-XM30BSL-05	JWSP-XM30BFL-05	
	Right-angle Plug *3	10 m	JWSP-XM30BSL-10	JWSP-XM30BFL-10	
	riug 3	15 m	JWSP-XM30BSL-15	JWSP-XM30BFL-15	Brake power Brake end supply end
		20 m	JWSP-XM30BSL-20	JWSP-XM30BFL-20	

- *1 Use flexible cables for moving parts of machines, such as robots.
- *2 The recommended bending radius (R) is 90 mm or larger.
- *3 The lead installation direction is the non-load side. Contact your Yaskawa representative if you require the leads to be installed in another direction.
- *4 This order number is for a set of two cables (main power supply cable and holding brake cable).

When you purchase them separately, the order numbers for main power supply cables are the same as for a servomotor without a holding brake.

The following order numbers are for a holding brake cable. These standard cables are flexible cables.

- Straight Plug: JWSP-XB0FS- $\Box\Box$
- Right-angle Plug: JWSP-XB0FL-□□

Note

If you need a cable with a length of 20 m to 50 m, consider the operating conditions and contact your Yaskawa representative with your preferred length.

(5) SGMXG-30A_DA, -44A_DA (2.9 kW, 4.4 kW)

	Connector	Length	Order N	Number	
Name	Specifica- tions	(L)	Standard Cable	Flexible Cable *1 *2	Appearance
		3 m	JWSP-XM40NSS-03	JWSP-XM40NFS-03	
		5 m	JWSP-XM40NSS-05	JWSP-XM40NFS-05	SERVOPACK end Motor end
	Straight Plug	10 m	JWSP-XM40NSS-10	JWSP-XM40NFS-10	
		15 m	JWSP-XM40NSS-15	JWSP-XM40NFS-15	
For servomotors		20 m	JWSP-XM40NSS-20	JWSP-XM40NFS-20	
without holding brakes		3 m	JWSP-XM40NSL-03	JWSP-XM40NFL-03	
		5 m	JWSP-XM40NSL-05	JWSP-XM40NFL-05	SERVOPACK end Motor end
	Right-angle Plug *3	10 m	JWSP-XM40NSL-10	JWSP-XM40NFL-10	
		15 m	JWSP-XM40NSL-15	JWSP-XM40NFL-15	
		20 m	JWSP-XM40NSL-20	JWSP-XM40NFL-20	
		3 m	JWSP-XM40BSS-03	JWSP-XM40BFS-03	SERVOPACK end Motor end
		5 m	JWSP-XM40BSS-05	JWSP-XM40BFS-05	
	Straight Plug	10 m	JWSP-XM40BSS-10	JWSP-XM40BFS-10	
		15 m	JWSP-XM40BSS-15	JWSP-XM40BFS-15	Brake power Brake end supply end
For servomotors with holding brakes		20 m	JWSP-XM40BSS-20	JWSP-XM40BFS-20	
(Set of two		3 m	JWSP-XM40BSL-03	JWSP-XM40BFL-03	SERVOPACK end Motor end
cables *4)		5 m	JWSP-XM40BSL-05	JWSP-XM40BFL-05	
	Right-angle Plug *3	10 m	JWSP-XM40BSL-10	JWSP-XM40BFL-10	
	i iug 🦪	15 m	JWSP-XM40BSL-15	JWSP-XM40BFL-15	Brake power Brake end L
		20 m	JWSP-XM40BSL-20	JWSP-XM40BFL-20	

- *1 Use flexible cables for moving parts of machines, such as robots.
- *2 The recommended bending radius (R) is 90 mm or larger.
- *3 The lead installation direction is the non-load side. Contact your Yaskawa representative if you require the leads to be installed in
- *4 This order number is for a set of two cables (main power supply cable and holding brake cable).

When you purchase them separately, the order numbers for main power supply cables are the same as for a servomotor without a holding brake.

The following order numbers are for a holding brake cable. These standard cables are flexible cables.

- Straight Plug: JWSP-XB0FS-
- Right-angle Plug: JWSP-XB0FL-

Note:

If you need a cable with a length of 20 m to 50 m, consider the operating conditions and contact your Yaskawa representative with your preferred length.

(6) SGMXG-40ADB (4.0 kW)

	Connector	Length	Order N	Number	
Name	Specifica- tions	(L)	Standard Cable	Flexible Cable *1 *2	Appearance
		3 m	JWSP-XM4ANSS-03	JWSP-XM4ANFS-03	
		5 m	JWSP-XM4ANSS-05	JWSP-XM4ANFS-05	SERVOPACK end Motor end
	Straight Plug	10 m	JWSP-XM4ANSS-10	JWSP-XM4ANFS-10	
		15 m	JWSP-XM4ANSS-15	JWSP-XM4ANFS-15	
For servomotors without holding		20 m	JWSP-XM4ANSS-20	JWSP-XM4ANFS-20	
brakes		3 m	JWSP-XM4ANSL-03	JWSP-XM4ANFL-03	
		5 m	JWSP-XM4ANSL-05	JWSP-XM4ANFL-05	SERVOPACK end Motor end
	Right-angle Plug *3	10 m	JWSP-XM4ANSL-10	JWSP-XM4ANFL-10	
		15 m	JWSP-XM4ANSL-15	JWSP-XM4ANFL-15	
		20 m	JWSP-XM4ANSL-20	JWSP-XM4ANFL-20	
		3 m	JWSP-XM4ABSS-03	JWSP-XM4ABFS-03	SERVOPACK end Motor end
		5 m	JWSP-XM4ABSS-05	JWSP-XM4ABFS-05	
	Straight Plug	10 m	JWSP-XM4ABSS-10	JWSP-XM4ABFS-10	SERVOPACK end Brake end
For servomotors		15 m	JWSP-XM4ABSS-15	JWSP-XM4ABFS-15	SERVOPACK end Brake end
with holding brakes		20 m	JWSP-XM4ABSS-20	JWSP-XM4ABFS-20	
(Set of two		3 m	JWSP-XM4ABSL-03	JWSP-XM4ABFL-03	SERVOPACK end Motor end
cables *4)		5 m	JWSP-XM4ABSL-05	JWSP-XM4ABFL-05	
	Right-angle Plug *3	10 m	JWSP-XM4ABSL-10	JWSP-XM4ABFL-10	
		15 m	JWSP-XM4ABSL-15	JWSP-XM4ABFL-15	SERVOPACK end Brake end
		20 m	JWSP-XM4ABSL-20	JWSP-XM4ABFL-20	

- *1 Use flexible cables for moving parts of machines, such as robots.
- *2 The recommended bending radius (R) is 90 mm or larger.
- *3 The lead installation direction is the non-load side. Contact your Yaskawa representative if you require the leads to be installed in another direction.
- *4 This order number is for a set of two cables (main power supply cable and holding brake cable).

When you purchase them separately, the order numbers for main power supply cables are the same as for a servomotor without a holding brake.

The following order numbers are for a holding brake cable. These standard cables are flexible cables.

- Straight Plug: JWSP-XB0FS-□□
- Right-angle Plug: JWSP-XB0FL-

Note

If you need a cable with a length of 20 m to 50 m, consider the operating conditions and contact your Yaskawa representative with your preferred length.

SGMXG-55A□A, -75A□A (5.5 kW, 7.5 kW), -55A□B (5.5 kW)

	Connector	Length	Order N	Number	
Name	Specifica- tions	(L)	Standard Cable	Flexible Cable *1 *2	Appearance
		3 m	JWSP-XM55NSS-03	JWSP-XM55NFS-03	
		5 m	JWSP-XM55NSS-05	JWSP-XM55NFS-05	SERVOPACK end Motor end
	Straight Plug	10 m	JWSP-XM55NSS-10	JWSP-XM55NFS-10	
		15 m	JWSP-XM55NSS-15	JWSP-XM55NFS-15	
For servomotors		20 m	JWSP-XM55NSS-20	JWSP-XM55NFS-20	
without holding brakes		3 m	JWSP-XM55NSL-03	JWSP-XM55NFL-03	
		5 m	JWSP-XM55NSL-05	JWSP-XM55NFL-05	SERVOPACK end Motor end
	Right-angle Plug *3	10 m	JWSP-XM55NSL-10	JWSP-XM55NFL-10	
		15 m	JWSP-XM55NSL-15	JWSP-XM55NFL-15	
		20 m	JWSP-XM55NSL-20	JWSP-XM55NFL-20	
		3 m	JWSP-XM55BSS-03	JWSP-XM55BFS-03	SERVOPACK end Motor end
		5 m	JWSP-XM55BSS-05	JWSP-XM55BFS-05	
	Straight Plug	10 m	JWSP-XM55BSS-10	JWSP-XM55BFS-10	SERVOPACK end Brake end
		15 m	JWSP-XM55BSS-15	JWSP-XM55BFS-15	<u>L</u> →
For servomotors with holding		20 m	JWSP-XM55BSS-20	JWSP-XM55BFS-20	
brakes		3 m	JWSP-XM55BSL-03	JWSP-XM55BFL-03	SERVOPACK end Motor end
(Set of two cables *4)		5 m	JWSP-XM55BSL-05	JWSP-XM55BFL-05	
	Right-angle	10 m	JWSP-XM55BSL-10	JWSP-XM55BFL-10	
	Plug *3	15 m	JWSP-XM55BSL-15	JWSP-XM55BFL-15	Brake end Motor end
		20 m	JWSP-XM55BSL-20	JWSP-XM55BFL-20	

- Use flexible cables for moving parts of machines, such as robots.
- *2 The recommended bending radius (R) is 90 mm or larger.
- The lead installation direction is the non-load side. Contact your Yaskawa representative if you require the leads to be installed in
- This order number is for a set of two cables (main power supply cable and holding brake cable).

When you purchase them separately, the order numbers for main power supply cables are the same as for a servomotor without a hold-

The following order numbers are for a holding brake cable. These standard cables are flexible cables.

- Straight Plug: JWSP-XB0FS-□□
- Right-angle Plug: JWSP-XB0FL-

If you need a cable with a length of 20 m to 50 m, consider the operating conditions and contact your Yaskawa representative with your preferred length.

(8) SGMXG-55D_QA, -75D_QA (5.5 kW, 7.5 kW)

	Connector Specifica- tions	Length	Order N	Number	
Name		(L)	Standard Cable	Flexible Cable *1 *2	Appearance
	Straight Plug	3 m	JWSP-XM5BNSS-03	JWSP-XM5BNFS-03	
		5 m	JWSP-XM5BNSS-05	JWSP-XM5BNFS-05	SERVOPACK end Motor end
		10 m	JWSP-XM5BNSS-10	JWSP-XM5BNFS-10	
		15 m	JWSP-XM5BNSS-15	JWSP-XM5BNFS-15	
For servomotors		20 m	JWSP-XM5BNSS-20	JWSP-XM5BNFS-20	
without holding brakes		3 m	JWSP-XM5BNSL-03	JWSP-XM5BNFL-03	
	Right-angle Plug *3	5 m	JWSP-XM5BNSL-05	JWSP-XM5BNFL-05	SERVOPACK end Motor end
		10 m	JWSP-XM5BNSL-10	JWSP-XM5BNFL-10	
		15 m	JWSP-XM5BNSL-15	JWSP-XM5BNFL-15	
		20 m	JWSP-XM5BNSL-20	JWSP-XM5BNFL-20	
	Straight Plug	3 m	JWSP-XM5BBSS-03	JWSP-XM5BBFS-03	SERVOPACK end Motor end
		5 m	JWSP-XM5BBSS-05	JWSP-XM5BBFS-05	
		10 m	JWSP-XM5BBSS-10	JWSP-XM5BBFS-10	SERVOPACK end Brake end
		15 m	JWSP-XM5BBSS-15	JWSP-XM5BBFS-15	L →
For servomotors with holding		20 m	JWSP-XM5BBSS-20	JWSP-XM5BBFS-20	
brakes (Set of two cables *4)		3 m	JWSP-XM5BBSL-03	JWSP-XM5BBFL-03	SERVOPACK end Motor end
	Right-angle Plug *3	5 m	JWSP-XM5BBSL-05	JWSP-XM5BBFL-05	
		10 m	JWSP-XM5BBSL-10	JWSP-XM5BBFL-10	
		15 m	JWSP-XM5BBSL-15	JWSP-XM5BBFL-15	Brake end Motor end
		20 m	JWSP-XM5BBSL-20	JWSP-XM5BBFL-20	

- *1 Use flexible cables for moving parts of machines, such as robots.
- *2 The recommended bending radius (R) is 90 mm or larger.
- *3 The lead installation direction is the non-load side. Contact your Yaskawa representative if you require the leads to be installed in another direction.
- *4 This order number is for a set of two cables (main power supply cable and holding brake cable).

When you purchase them separately, the order numbers for main power supply cables are the same as for a servomotor without a holding brake.

The following order numbers are for a holding brake cable. These standard cables are flexible cables.

- Straight Plug: JWSP-XB0FS- $\Box\Box$
- Right-angle Plug: JWSP-XB0FL-

Note

If you need a cable with a length of 20 m to 50 m, consider the operating conditions and contact your Yaskawa representative with your preferred length.

(9) SGMXG-1A, -1E (11 kW, 15 kW)

Name	Connector Specifications	Length (L)	Order Number */	Appearance
		3 m	JWSP-XM1ANFS-03	
	Straight Plug	5 m	JWSP-XM1ANFS-05	SERVOPACK end Motor end
		10 m	JWSP-XM1ANFS-10	
		15 m	JWSP-XM1ANFS-15	
For servomotors		20 m	JWSP-XM1ANFS-20	
without holding brakes		3 m	JWSP-XM1ANFL-03	
	Right-angle Plug	5 m	JWSP-XM1ANFL-05	SERVOPACK end Motor end
		10 m	JWSP-XM1ANFL-10	
		15 m	JWSP-XM1ANFL-15	
		20 m	JWSP-XM1ANFL-20	
	Straight Plug	3 m	JWSP-XM1ABFS-03	SERVOPACK end Motor end
		5 m	JWSP-XM1ABFS-05	
		10 m	JWSP-XM1ABFS-10	SEDVODACK and Darks and
		15 m	JWSP-XM1ABFS-15	SERVOPACK end Brake end
For servomotors		20 m	JWSP-XM1ABFS-20	
with holding brakes (Set of two cables		3 m	JWSP-XM1ABFL-03	SERVOPACK end Motor end
*3)	Right-angle Plug *2	5 m	JWSP-XM1ABFL-05	
		10 m	JWSP-XM1ABFL-10	
		15 m	JWSP-XM1ABFL-15	Brake end Motor end
		20 m	JWSP-XM1ABFL-20	

- These standard cables are flexible cables. The recommended bending radius (R) is 90 mm or larger.
- The lead installation direction is the non-load side. Contact your Yaskawa representative if you require the leads to be installed in
- This order number is for a set of two cables (main power supply cable and holding brake cable).

When you purchase them separately, the order numbers for main power supply cables are the same as for a servomotor without a holding brake.

The following order numbers are for a holding brake cable. These standard cables are flexible cables.

- Straight Plug: JWSP-XB0FS-□□
- Right-angle Plug: JWSP-XB0FL-

If you need a cable with a length of 20 m to 50 m, consider the operating conditions and contact your Yaskawa representative with your preferred length.

8.5.3 Encoder Cables (When Not Relaying the Encoder Cable)

(1) Servomotors with Standard Specifications

Marra	Length	Order	•		
Name	(L)	Standard Cable	Flexible Cable *1 *2	Appearance	
	3 m	JWSP-XP2IS1-03	JWSP-XP2IF1-03		
	5 m	JWSP-XP2IS1-05	JWSP-XP2IF1-05		
For batteryless absolute	10 m	JWSP-XP2IS1-10	JWSP-XP2IF1-10		
encoder and compact bat- teryless absolute encoder	15 m	JWSP-XP2IS1-15	JWSP-XP2IF1-15	SERVOPACK end Encoder end	
Cable installed toward left	20 m	JWSP-XP2IS1-20	JWSP-XP2IF1-20		
side	30 m	JWSP-XP2IS1-30	JWSP-XP2IF1-30		
	40 m	JWSP-XP2IS1-40	JWSP-XP2IF1-40		
	50 m	JWSP-XP2IS1-50	JWSP-XP2IF1-50		
	3 m	JWSP-XP2IS2-03	JWSP-XP2IF2-03		
	5 m	JWSP-XP2IS2-05	JWSP-XP2IF2-05		
For batteryless absolute	10 m	JWSP-XP2IS2-10	JWSP-XP2IF2-10		
encoder and compact bat- teryless absolute encoder	15 m	JWSP-XP2IS2-15	JWSP-XP2IF2-15	SERVOPACK end Encoder end L	
Cable installed toward right	20 m	JWSP-XP2IS2-20	JWSP-XP2IF2-20		
side	30 m	JWSP-XP2IS2-30	JWSP-XP2IF2-30		
	40 m	JWSP-XP2IS2-40	JWSP-XP2IF2-40		
	50 m	JWSP-XP2IS2-50	JWSP-XP2IF2-50		
	3 m	JWSP-XP2AS1-03	JWSP-XP2AF1-03		
	5 m	JWSP-XP2AS1-05	JWSP-XP2AF1-05		
	10 m	JWSP-XP2AS1-10	JWSP-XP2AF1-10	SERVOPACK end Encoder end	
For absolute encoder: With Battery Unit *3	15 m	JWSP-XP2AS1-15	JWSP-XP2AF1-15		
Cable installed toward left side	20 m	JWSP-XP2AS1-20	JWSP-XP2AF1-20	Battery unit	
side	30 m	JWSP-XP2AS1-30	JWSP-XP2AF1-30	(battery included)	
	40 m	JWSP-XP2AS1-40	JWSP-XP2AF1-40		
	50 m	JWSP-XP2AS1-50	JWSP-XP2AF1-50		
	3 m	JWSP-XP2AS2-03	JWSP-XP2AF2-03		
	5 m	JWSP-XP2AS2-05	JWSP-XP2AF2-05		
	10 m	JWSP-XP2AS2-10	JWSP-XP2AF2-10	SERVOPACK end Encoder end	
For absolute encoder: With Battery Unit *3	15 m	JWSP-XP2AS2-15	JWSP-XP2AF2-15		
Cable installed toward right side	20 m	JWSP-XP2AS2-20	JWSP-XP2AF2-20	Battery unit	
Side	30 m	JWSP-XP2AS2-30	JWSP-XP2AF2-30	(battery included)	
	40 m	JWSP-XP2AS2-40	JWSP-XP2AF2-40		
	50 m	JWSP-XP2AS2-50	JWSP-XP2AF2-50		

^{*1} Use flexible cables for moving parts of machines, such as robots.

Note:

Do not use these cables as relay cables.

^{*2} The recommended bending radius (R) is 46 mm or larger.

^{*3} If a battery is connected to the host controller, the battery unit is not required.

(2) Servomotors with Σ -V or Σ -7 Compatible Specifications (20 m or Less)

Information

 Σ -V or Σ -7 compatible specification servomotors can also use the same cables as Σ -7 series rotary servomotors. Refer to the following manual for information on the Σ -7-series for rotary servomotor cables.

Ω Σ-7-Series Peripheral Device Selection Manual (Manual No.: SIEP S800001 32)

	Connector	Length	Order Number		_
Name	Specifications	(L)	Standard Cable	Flexible Cable *1 *2	Appearance
		3 m	JWSP-XPISS-03	JWSP-XPIFS-03	
	Straight Plug	5 m	JWSP-XPISS-05	JWSP-XPIFS-05	SERVOPACK end Encoder end
		10 m	JWSP-XPISS-10	JWSP-XPIFS-10	
		15 m	JWSP-XPISS-15	JWSP-XPIFS-15	
For batteryless absolute encoder and com-		20 m	JWSP-XPISS-20	JWSP-XPIFS-20	
pact batteryless absolute encoder		3 m	JWSP-XPISL-03	JWSP-XPIFL-03	
described endeads	Right-angle Plug *4	5 m	JWSP-XPISL-05	JWSP-XPIFL-05	SERVOPACK end Encoder end
		10 m	JWSP-XPISL-10	JWSP-XPIFL-10	
		15 m	JWSP-XPISL-15	JWSP-XPIFL-15	
		20 m	JWSP-XPISL-20	JWSP-XPIFL-20	
	Straight Plug	3 m	JWSP-XPASS-03	JWSP-XPAFS-03	
		5 m	JWSP-XPASS-05	JWSP-XPAFS-05	SERVOPACK end Encoder end
		10 m	JWSP-XPASS-10	JWSP-XPAFS-10	
		15 m	JWSP-XPASS-15	JWSP-XPAFS-15	Battery unit (battery included)
For absolute encoder:		20 m	JWSP-XPASS-20	JWSP-XPAFS-20	
With battery unit *3		3 m	JWSP-XPASL-03	JWSP-XPAFL-03	
	Right-angle Plug *4	5 m	JWSP-XPASL-05	JWSP-XPAFL-05	SERVOPACK end Encoder end
		10 m	JWSP-XPASL-10	JWSP-XPAFL-10	
		15 m	JWSP-XPASL-15	JWSP-XPAFL-15	Battery unit (battery included)
		20 m	JWSP-XPASL-20	JWSP-XPAFL-20	,

^{*1} Use flexible cables for moving parts of machines, such as robots.

^{*2} The recommended bending radius (R) is 46 mm or larger.

^{*3} If a battery is connected to the host controller, the battery unit is not required.

^{*4} The lead installation direction is the non-load side. Contact your Yaskawa representative if you require the leads to be installed in another direction.

8.5.4 Encoder Cables (When Relaying the Encoder Cable)

(1) Servomotors with Standard Specifications

When you will relay the encoder cable, use the following configuration. Cables: 2 cables, cable relay point: 1 location, combined cable length: 50 m

Nama	Length	Order I	A			
Name	(L)	Standard Cable	Flexible Cable *1 *2	Appearance		
	0.3 m	JWSP-XP1IS0-00P3				
	3 m	JWSP-XP1IS0-03	JWSP-XP1IF0-03			
Encoder cable with connectors on both ends	5 m	JWSP-XP1IS0-05	JWSP-XP1IF0-05	SERVOPACK end Encoder end		
For batteryless absolute	10 m	JWSP-XP1IS0-10	JWSP-XP1IF0-10			
encoder and compact bat- teryless absolute encoder *3	15 m	JWSP-XP1IS0-15	JWSP-XP1IF0-15			
,	20 m	JWSP-XP1IS0-20	JWSP-XP1IF0-20			
	25 m	JWSP-XP1IS0-25	JWSP-XP1IF0-25			
	0.3 m	JWSP-XP1AS0-00P3	JWSP-XP1AF0-00P3			
	3 m	JWSP-XP1AS0-03	JWSP-XP1AF0-03	SERVOPACK end Encoder end		
Encoder cable with connec-	5 m	JWSP-XP1AS0-05	JWSP-XP1AF0-05	L		
tors on both ends For absolute encoder: With	10 m	JWSP-XP1AS0-10	JWSP-XP1AF0-10			
Battery Unit *3 *4	15 m	JWSP-XP1AS0-15	JWSP-XP1AF0-15	Battery unit (battery included)		
	20 m	JWSP-XP1AS0-20	JWSP-XP1AF0-20	(battery moladed)		
	25 m	JWSP-XP1AS0-25	JWSP-XP1AF0-25			
	0.3 m	JWSP-XP3IS1-00P3	JWSP-XP3IF1-00P3			
	1 m	JWSP-XP3IS1-01	JWSP-XP3IF1-01			
	3 m	JWSP-XP3IS1-03	JWSP-XP3IF1-03			
	5 m	JWSP-XP3IS1-05	JWSP-XP3IF1-05			
Encoder Cables	10 m	JWSP-XP3IS1-10	JWSP-XP3IF1-10	SERVOPACK end Encoder end		
Cable installed toward left	15 m	JWSP-XP3IS1-15	JWSP-XP3IF1-15			
side	20 m	JWSP-XP3IS1-20	JWSP-XP3IF1-20			
	25 m	JWSP-XP3IS1-25	JWSP-XP3IF1-25			
	30 m	JWSP-XP3IS1-30	JWSP-XP3IF1-30			
	40 m	JWSP-XP3IS1-40	JWSP-XP3IF1-40			
	50 m	JWSP-XP3IS1-50	JWSP-XP3IF1-50			

Continued on next page.

Continued from previous page.

Marra	Length	Order N			
Name	(L)	Standard Cable	Flexible Cable *1 *2	Appearance	
	0.3 m	JWSP-XP3IS2-00P3	JWSP-XP3IF2-00P3		
	1 m	JWSP-XP3IS2-01	JWSP-XP3IF2-01		
	3 m	JWSP-XP3IS2-03	JWSP-XP3IF2-03		
	5 m	JWSP-XP3IS2-05	JWSP-XP3IF2-05		
Encoder Cables	10 m	JWSP-XP3IS2-10	JWSP-XP3IF2-10	SERVOPACK end Encoder end	
Cable installed toward right	15 m	JWSP-XP3IS2-15	JWSP-XP3IF2-15	L	
side	20 m	JWSP-XP3IS2-20	JWSP-XP3IF2-20		
	25 m 30 m	JWSP-XP3IS2-25	JWSP-XP3IF2-25		
		JWSP-XP3IS2-30	JWSP-XP3IF2-30		
	40 m	JWSP-XP3IS2-40	JWSP-XP3IF2-40		
	50 m	JWSP-XP3IS2-50	JWSP-XP3IF2-50		

- *1 Use flexible cables for moving parts of machines, such as robots.
- *2 The recommended bending radius (R) is 46 mm or larger.
- *3 The JZSP-UCMP00-□□-E and JZSP-CSP12-E cannot be connected at the same time.
- *4 If a battery is connected to the host controller, the battery unit is not required.

(2) Servomotors with Σ -V or Σ -7 Compatible Specifications (When Exceeding 20 m)

Name	Length (L)	Order Number	Appearance
		JZSP-CVP01-E	SERVOPACK end Encoder end
Relay encoder cable (for all types of encoders) *!	0.3 m	JZSP-CVP02-E	SERVOPACK end Encoder end
Relay encoder cable with connec-	30 m	JZSP-UCMP00-30-E	SERVOPACK end Encoder end
tors on both ends (for all types of	40 m	JZSP-UCMP00-40-E	
encoders)	50 m	JZSP-UCMP00-50-E	
Relay encoder cable with connectors on both ends and battery unit (Required only when an absolute encoder is used. *2)		JZSP-CSP12-E	SERVOPACK Encoder end end L Battery unit (battery included)

^{*1} The lead installation direction of the right-angle plug connector is the non-load side. Contact your Yaskawa representative if you require the leads to be installed in another direction.

^{*2} This cable is not required if you use a servomotor with a batteryless absolute encoder, compact batteryless absolute encoder, and you connect a battery to the host controller.

8.6 Wiring Servomotors and SERVOPACKs

8.6.1 Wiring Precautions

A CAUTION

Do not connect the servomotor directly to an industrial power supply. Doing so will destroy the servomotor. You cannot operate a servomotor without a SERVOPACK that is designed for it.


(1) General Precautions

Refer to the following section for the wiring precautions.

3 i.5 Safety Precautions on page 18

(2) Grounding Precautions

The ground terminal on the SERVOPACK is used to ground the servomotor.

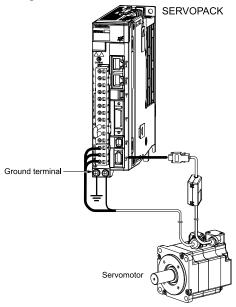

(3) Precautions for Standard Cables

Do not use standard cables in applications that require a high degree of flexibility, such as twisting and turning, or in which the cables themselves must move.

When you use standard cables, observe the recommended bending radius given in the following table and perform all wiring so that stress is not applied to the cables. Use the cables so that they are not repeatedly bent.


Cable Diameter	Recommended Bending Radius [R]	
Less than 8 mm	15 mm min.	
8 mm	20 mm min.	
Over 8 mm	(Cable diameter × 3) mm min.	

(4) Precautions for Flexible Cables

• The flexible cables have a service life of 10,000,000 operations minimum when used at the recommended bending radius of 90 mm or larger under the following test conditions. The service life of a flexible cable is

reference data under special test conditions. The service life of a flexible cable greatly depends on the amount of mechanical shock, how the cable is attached, and how the cable is secured. **Test Conditions**

- One end of the cable is repeatedly moved forward and backward for 320 mm using the test equipment shown in the following figure.
- The cores are connected in series, and the number of cable bends until a core breaks is counted. One round trip is counted as one bend.

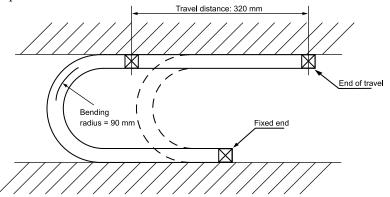

The service life of a flexible cable indicates the number of bends while the cores are electrically charged for which no cracks or damage that affects the performance of the cable sheathing occurs. This does not take into account breaking of the shield wire.

- Straighten out the flexible cable when you connect it. If the cable is connected while it is twisted, it will break faster. Check the indication on the cable surface to make sure that the cable is not twisted.
- · Do not secure the portions of the flexible cable that move. Stress will accumulate at the point that is secured, and the cable will break faster. Secure the cable in as few locations as possible.
- If a flexible cable is too long, looseness will cause it to break faster. It the flexible cable is too short, stress at the points where it is secured will cause it to break faster. Adjust the cable length to the optimum value.
- Do not allow flexible cables to interfere with each other. Interference will restrict the motion of the cables, causing them to break faster. Separate the cables sufficiently, or provide partitions between them when wiring.

8.6.2 Wiring Procedure

This manual provides the wiring procedure only for the servomotors.


Refer to the SERVOPACK manual for information on wiring the SERVOPACKs.

Wiring the Servomotor Main Circuit Cables

Remove the protective cap and protective tape from the servomotor connectors.



- Some models of servomotors do not have protective tape.
 - The number of connectors depends on the model of the servomotor.

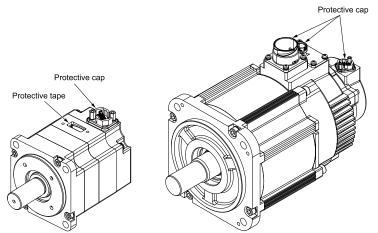

2. Attach the servomotor main circuit cable and tighten the screws.

Pay attention to the orientation of the cable (i.e., load or non-load side) when you attach it.

Information

There are two servomotor main circuit cables for the SGMXG-09A \square A to -1EA \square A and -06A \square B to -55A \square B servomotors with holding brakes (the main power supply cable and the holding brake cable). Attach both of them

Refer to the following table for the tightening torque.

Servomotor Model	Tightening Torque
SGMXJ-A5 to -06	0.15 N·m
SGMXJ-08	0.33 N·m
SGMXA-A5 to -06	0.15 N·m
SGMXA-08 to -10	0.33 N·m
SGMXP-01 to -04	0.15 N·m
SGMXG-03A□A, -05A□A, -03A□B	0.44 N·m

This concludes the procedure.

(2) When Not Relaying the Encoder Cable

Attach the encoder cable and tighten the screws. Pay attention to the orientation of the cable (i.e., load or non-load side) when you attach it.

The tightening torque for SGMXJ servomotors, SGMXA servomotors (up to $1.0~\mathrm{kW}$), SGMXP servomotors (up to $400~\mathrm{W}$) is $0.15~\mathrm{N}\cdot\mathrm{m}$.

(3) When Relaying the Encoder Cable

(a) Servomotors with Standard Specifications

1. Attach the encoder cable and tighten the screws. Pay attention to the orientation of the cable (SGMXJ servomotors, SGMXA-A5 to 10 servomotors, and SGMXP servomotors: load or non-load side; SGMXA-15 to -70 servomotors and SGMXG servomotors: right or left side) when you attach it.

The tightening torque for SGMXJ servomotors, SGMXA servomotors (up to 1.0 kW), SGMXP servomotors (up to 400 W) is 0.15 N·m.

2. Connect the encoder cable with connectors on both ends to the encoder cable.

This concludes the procedure.

(b) Servomotors with Σ -7 Compatible Specifications

 Attach the relay encoder cable and tighten the screws. Pay attention to the orientation of the cable (SGMXJ servomotors, SGMXA-A5 to -10 servomotors, and SGMXP servomotors: load or non-load side) when you attach it.

The tightening torque for SGMXJ servomotors, SGMXA servomotors (up to 1.0 kW), SGMXP servomotors (up to 400 W) is 0.15 N·m.

- Connect the relay encoder cable with connectors on both ends to the relay encoder cable.
- 3. As necessary, connect the relay encoder cable with connectors on both ends and a battery unit to the relay encoder cable with connectors on both ends.

This concludes the procedure.

Maintenance and Inspection

This chapter describes the maintenance, inspection, and disposal of a servomotor.

9.1	Periodic Inspections	.292
9.2	Service Lives of Parts	.293
9.3	Disposing of Servomotors	.294

9.1 Periodic Inspections

▲ DANGER

Wait for at least 20 minutes (or 100 minutes when using DC power supply input) after turning OFF the power and then make sure that the CHARGE indicator is not lit before starting wiring or inspection work. Do not touch the main circuit terminals while the CHARGE indicator is lit because high voltage may still remain in the SERVOPACK even after turning OFF the power.

There is a risk of electric shock that causes death or serious injury.

WARNING

Wiring and inspections must be performed only by qualified engineers.

If work is performed by a worker who is not a qualified engineer, there is a risk of fire or electric shock that causes death or serious injury.

Contact your Yaskawa representative for help with failures, repairs, or part replacement.

The following table gives the periodic inspection items for a servomotor. The inspection periods given in the table are guidelines. Determine the optimum inspection periods based on the application conditions and environment.

Item	Inspection Period	Basic Inspection and Maintenance Procedure	Remarks
Check the coupling between the servomotor and the machine.	Before starting operation	 Make sure that there are no loose mounting screws between the servomotor and machine. Make sure that there is no looseness in the coupling between the servomotor and machine. Make sure that there is no misalignment. 	_
Check for vibration and noise.	Daily	Inspect by touching and by listening.	There should be no more vibration or noise than normal.
Exterior	Check for dirt and grime.	Clean off the dirt and grime with a cloth or pressurized air.	_
Measure the insulation resistance.	At least once a year	Disconnect the servomotor from the SERVOPACK and measure the insulation resistance at 500 V with an insulation resistance meter. (Measurement method: Measure the resistance between phase U, V, or W on the servomotor's power line and FG.) The insulation is normal if the resistance is $10~\text{M}\Omega$ or higher.	If the resistance is less than 10 $M\Omega$, contact your Yaskawa representative.
Replace the oil seal.	At least once every 5,000 hours	Contact your Yaskawa representative.	This inspection applies only to servomotors with oil seals.
Overhaul	At least once every 5 years or every 20,000 hours	Contact your Yaskawa representative.	_

9.2 Service Lives of Parts

The following table gives the standard service lives of the parts of the servomotor. Contact your Yaskawa representative using the following table as a guide. After an examination of the part in question, we will determine whether the part should be replaced. Even if the service life of a part has not expired, replacement may be required if abnormalities occur. The standard service lives in the table are only for reference. The actual service lives will depend on the application conditions and environment.

Part	Standard Service Life	Remarks
Bearing	20,000 hours	The service life is affected by operating conditions. Check for abnormal sounds and vibration during inspections.
TOil Seal 15 000 hours		The service life is affected by operating conditions. Check for oil leaks during inspections.
Brake	20,000 hours	The service life is affected by operating conditions. Check for abnormal sounds and vibration during inspections. Confirm that the brake is released when power is supplied and check for any changes in the operating time of the brake.

9.3 Disposing of Servomotors

When disposing of a servomotor, treat it as ordinary industrial waste.

However, local ordinances and national laws must be observed. Implement all labeling and warnings as a final product as required.

Appendices

The appendices provide reference information on selecting servomotor capacity.

10.1	Refere	Reference Information for Servomotor Capacity Selection		
	10.1.1	Formulas Required to Select the Servomotor Capacity	296	
	10.1.2	GD ² for Simple Diagrams	297	
	10.1.3	Conversions between Engineering Units and SI Units	298	
	10.1.4	Application Examples by Type of Application	299	

10.1 Reference Information for Servomotor Capacity Selection

10.1.1 Formulas Required to Select the Servomotor Capacity

T	Madan	Data ma Matia m	Linear Motion	
Type of	Motion	Rotary Motion	Horizontal Axis	Vertical Axis
			Servomotor Lead: P_B	Counter- M_e Servomotor weight M_e Lead: P_a $M V_\ell$
Machine Configuration		 Nℓ: Load shaft speed (min-1) Vℓ: Load speed (m/min) Tℓ: Load torque calculated at load shaft (N·m) µ: Friction coefficient P_B: Ball screw lead (m) M: Linear motion section mass (kg) M_C: Counterweight mass (kg) 1/R: Gear ratio η: Mechanical efficiency T_{PM}: Servomotor instantaneous maximum torque (N·m) 		
Speed Diagram $ \begin{array}{c ccccccccccccccccccccccccccccccccccc$				
Travel Amount (m)		$R = \frac{V_{\ell}}{60} \cdot \frac{t_{a} + 2t_{c} + t_{d}}{2} \qquad \left(\text{ If } t_{a} = t_{d}, R = \frac{V_{\ell}}{60} \left(t_{m} - t_{a} \right) \right)$		
Load Shaft Speed (min ⁻¹)		$N\ell$ $N_{\ell} = \frac{V_{\ell}}{P_{\scriptscriptstyle B}}$		
Motor Shaft Speed (min-1)		$N_M = N\ell \cdot R$		
Load Torque (N·m) (Calculated at Motor Shaft))	$T_{L} = \frac{T_{\ell}}{R \cdot \eta}$	$T_L = \frac{9.8 \times \mu \cdot M \cdot P_B}{2\pi \cdot R \cdot \eta}$	$T_L = \frac{9.8 \times (M - M_c) P_B}{2\pi \cdot R \cdot \eta}$
Load Moment of Inertia (kg·m²) (Calculated at Motor Shaft)		$J_L = J_{L1} + J_{L2} + J_{L3}$		
	Linear Motion Section	_	$J_{L_1} = M \cdot \left(\frac{P_B}{2\pi R}\right)^2$	$J_{L_1} = (M + M_c) \cdot \left(\frac{P_B}{2\pi R}\right)^2$
Rotary Motion Section		*Solid Cylinder $J_{K} = \frac{1}{8} M_{k} \cdot D^{2} \text{OR} J_{K} = \frac{\pi}{32} \rho \cdot L \cdot D^{4}$ $M_{k} : \text{Solid cylinder mass (kg)}$ $\rho : \text{Density (kg/m}^{3}) \dots \text{Iron} \qquad \rho = 7.87 \times 10^{3} (\text{kg/m}^{3})$ $M_{k} : \text{Solid cylinder mass (kg)}$ $\rho : \text{Density (kg/m}^{3}) \dots \text{Iron} \qquad \rho = 2.70 \times 10^{3} (\text{kg/m}^{3})$ $M_{k} : \text{Density (kg/m}^{3}) \dots \text{Iron} \qquad \rho = 2.70 \times 10^{3} (\text{kg/m}^{3})$ $M_{k} : \text{Density (kg/m}^{3}) \dots \text{Iron} \qquad \rho = 2.70 \times 10^{3} (\text{kg/m}^{3})$ $M_{k} : \text{Density (kg/m}^{3}) \dots \text{Iron} \qquad \rho = 2.70 \times 10^{3} (\text{kg/m}^{3})$ $M_{k} : \text{Density (kg/m}^{3}) \dots \text{Iron} \qquad \rho = 2.70 \times 10^{3} (\text{kg/m}^{3})$ $M_{k} : \text{Density (kg/m}^{3}) \dots \text{Iron} \qquad \rho = 2.70 \times 10^{3} (\text{kg/m}^{3})$ $M_{k} : \text{Density (kg/m}^{3}) \dots \text{Iron} \qquad \rho = 2.70 \times 10^{3} (\text{kg/m}^{3})$ $M_{k} : \text{Density (kg/m}^{3}) \dots \text{Iron} \qquad \rho = 2.70 \times 10^{3} (\text{kg/m}^{3})$ $M_{k} : \text{Density (kg/m}^{3}) \dots \text{Iron} \qquad \rho = 2.70 \times 10^{3} (\text{kg/m}^{3})$ $M_{k} : \text{Density (kg/m}^{3}) \dots \text{Iron} \qquad \rho = 2.70 \times 10^{3} (\text{kg/m}^{3})$ $M_{k} : \text{Density (kg/m}^{3}) \dots \text{Iron} \qquad \rho = 2.70 \times 10^{3} (\text{kg/m}^{3})$ $M_{k} : \text{Density (kg/m}^{3}) \dots \text{Iron} \qquad \rho = 2.70 \times 10^{3} (\text{kg/m}^{3})$ $M_{k} : \text{Density (kg/m}^{3}) \dots \text{Iron} \qquad \rho = 2.70 \times 10^{3} (\text{kg/m}^{3})$ $M_{k} : \text{Density (kg/m}^{3}) \dots \text{Iron} \qquad \rho = 2.70 \times 10^{3} (\text{kg/m}^{3})$ $M_{k} : \text{Density (kg/m}^{3}) \dots \text{Iron} \qquad \rho = 2.70 \times 10^{3} (\text{kg/m}^{3})$ $M_{k} : \text{Density (kg/m}^{3}) \dots \text{Iron} \qquad \rho = 2.70 \times 10^{3} (\text{kg/m}^{3})$ $M_{k} : \text{Density (kg/m}^{3}) \dots \text{Iron} \qquad \rho = 2.70 \times 10^{3} (\text{kg/m}^{3})$ $M_{k} : \text{Density (kg/m}^{3}) \dots \text{Iron} \qquad \rho = 2.70 \times 10^{3} (\text{kg/m}^{3})$ $M_{k} : \text{Density (kg/m}^{3}) \dots \text{Iron} \qquad \rho = 2.70 \times 10^{3} (\text{kg/m}^{3})$ $M_{k} : \text{Density (kg/m}^{3}) \dots \text{Iron} \qquad \rho = 2.70 \times 10^{3} (\text{kg/m}^{3})$ $M_{k} : \text{Density (kg/m}^{3}) \dots \text{Iron} \qquad \rho = 2.70 \times 10^{3} (\text{kg/m}^{3})$ $M_{k} : \text{Density (kg/m}^{3}) \dots \text{Iron} \qquad \rho = 2.70 \times 10^{3} (\text{kg/m}^{3})$ $M_{k} : \text{Density (kg/m}^{3}) \dots \text{Iron} \qquad \rho = 2.70 \times 10^{3} (\text{kg/m}^{3})$ $M_{k} : \text{Density (kg/m}^{3}) \dots \text{Iron} \qquad \rho = 2.70 \times 10^{3} ($		
Minimum Starting Time (s)		$t_{am} = \frac{2\pi \cdot N_{M} (J_{M} + J_{L})}{60 (T_{PM} - T_{L})}$		

Continued on next page.

Tura of Matieus	Determ Metion	Linear Motion	
Type of Motion	Rotary Motion	Horizontal Axis	Vertical Axis
Minimum Braking Time (s)	$t_{dm} = \frac{2\pi \cdot N_M \left(J_M + J_L\right)}{60 \left(T_{PM} + T_L\right)}$		
Load Moving Power (W)	$P_o = \frac{2\pi \cdot N_{M} \cdot T_{L}}{60}$		
Load Acceleration Power (W)	$P_a = \left(\frac{2\pi}{60} \cdot N_{M}\right)^2 \frac{J_L}{t_a}$	$(t_a \geq t_{am})$	
Required Starting Torque (N·m)	$T_{P} = \frac{2\pi \cdot N_{M} \left(J_{M} + J_{L}\right)}{60 \times t_{a}} + 1$	$T_L \qquad (t_a \geq t_{am})$	
Required Braking Torque (N·m)	$T_S = \frac{2\pi \cdot N_M \left(J_M + J_L\right)}{60 \times t_d} - T_M$	$(t_d \ge t_{dm})$	
Effective Torque Value (N·m)	$T_{rms} = \sqrt{\frac{T_{P}^{2} \cdot t_{a} + T_{L}^{2} \cdot t_{a}}{t}}$	$_{s} + T_{s}^{2} \cdot t_{d}$	$T_{ms} = \sqrt{\frac{T_{\rho}^{2} \cdot t_{s} + T_{L}^{2} \left(t_{s} + t_{s}^{*}\right) + T_{S}^{2} \cdot t_{s}}{t}}$

10.1.2 GD² for Simple Diagrams

When Rotary Shaft Is Aligned with Center Line of Cylinder	Solid cylinder $(D^2 = D_0^{-2}/2)$ $\begin{cases} OR \\ GD^2 = 125\pi\rho LD^4 \\ \rho: Density (g/cm^3). \\ L: Length (m) \\ D: Diameter (m) \end{cases}$	Copper: 7.866	Hollow cylinder $D^2 = (D_o^2 + D_i^2)/2$ $\begin{cases} OR \\ GD^2 = 125\pi\rho L & (D_o^4 + D_i^4) \\ P: Density & (g/cm^3) \\ L: Length & (m) \\ D_o, D_i: Diameter & (m) \end{cases}$	
	Rectangular solid $D^2 = (b^2 + c^2)/3$	b	Cylindrical body $D^2 = L^2/3 + D_o^2/4$	D ₀
When Rotary Shaft Runs Through Gravitational Center	Sphere $D^2 = \frac{2}{5}D_0^2$	D ₀	Hollow sphere $D^{2} = \frac{2}{5} \cdot \frac{D_{o}^{5} - D_{t}^{3}}{D_{o}^{3} - D_{t}^{3}}$	Do
	Cone $D^2 = \frac{3}{10} D_o^2$	D ₀	Wheel $D^2 = D_0^2 + \frac{3}{4} D_1^2$	D ₀
When Rotary Shaft Is on One End	Rectangular solid $D^2 = (4 b^2 + C^2)/3$	b	Cylindrical body $D^2 = \frac{4}{3}L^2 + \frac{D_o^2}{4}$	
When Rotary Shaft Is Outside Rotating Body	Rectangular solid $D^{2} = \frac{4 b^{2} + C^{2}}{3}$ $+4(bd + d^{2})$	b C	Cylindrical body $D^2 = \frac{4}{3}L^2 + \frac{D_0^2}{4} + 4(dL + d^2)$	D _o
General Formula When Rotary Shaft Is outside Rotating Body	General formula for dian outside rotating body $D_2^2 = D_1^2 + 4 d^2$ D_1^2 : Diameter of rotation runs through center o		lel to rotary shaft and	Center of gravity Rotary shaft

Information $GD^2 = (Weight) \times (Diameter of rotation)^2$

10

10.1.3 Conversions between Engineering Units and SI Units

The following table provides the conversion rates between engineering units and SI units for typical physical quantities required for capacity selection.

Quantity	Engineering Unit	SI Unit	Conversion Factor	
Force or load	kgf	N	1 kgf = 9.80665 N	
Weight	kgf	_	The numerical values are the	
Mass	kgf·s²/m	kg	same for mass in the traditional unit and the SI unit. (The mass SI unit Wkgf is used for objects in the Wkg traditional unit.)	
Torque	kgf·m	N⋅m	1 kgf·m = 9.80665 N·m	
Inertia (moment of inertia)	gf·cm·s²	kg·m²	$\begin{array}{l} 1 \ gf \cdot cm \cdot s^2 = 0.980665 \times 10^{-4} \\ ^4 kg \cdot m^2 \end{array}$	
GD ²	kgf·m²	kg·m²	Relationship between GD^2 (kgf.m²) and moment of inertia J (kg.m²) $J = \frac{GD^2}{4}$	

10.1.4 Application Examples by Type of Application

Ту	/pe	Rotating Body	Horizontal Rotary Ball Screw	Vertical Ball Screw
Machine Configuration		Gear ratio 1/R	$(kg) + W(kg) Friction coefficient$ $(kg) + \mu \qquad \mu$ $Pitch:$ $1/R \qquad P_g(mm)$	$\begin{array}{c c} & \mu & \\ \downarrow & \mu \\ 1/R & \downarrow & W_1(kg) & W_2 \\ & \downarrow & + F_{\mu}(kg) & (kg) \\ & F_{\nu}(kg) & \\ & F_{\nu}(kg) & \\ & Pitch: P_{B}(mm) & \end{array}$
Load Rotation Speed N\ell (r	nin- ¹)	Nℓ	Load speed (m/min) $\frac{1000 \times V_{\ell}}{P_{\scriptscriptstyle B}}$	Load speed (m/min) $\frac{1000 \times V\ell}{P_{B}}$
Speed Calculated at Motor	Shaft N _M (min-1)	$R \times N\ell$	$R \times N\ell$	$R \times N\ell$
	GD ² ℓ Calculated at Load Shaft	_	$W \cdot \left(\frac{P_B}{1000\pi}\right)^2$	$W \cdot \left(\frac{P_B}{1000\pi}\right)^2$ [However, $W = W_1 + W_2$]
Linear Motion GD ² (kg·m ²)	$\mathrm{GD^2_L}$ Calculated at Motor Shaft	$GD_{L}^{2} \times \left(\frac{1}{R}\right)^{2}$	$GD^{2}_{L} \times \left(\frac{1}{R}\right)^{2}$ $\left(OR W \cdot \left(\frac{V_{\ell}}{\pi \cdot N_{M}}\right)^{2}\right)$	$GD_{L}^{2} \times \left(\frac{1}{R}\right)^{2}$ $\left(\begin{array}{cc} OR & W \cdot \left(\frac{V_{\ell}}{\pi \cdot N_{M}}\right)^{2} \\ However, W = W_{1} + W_{2} \end{array}\right)$
	Tℓ Calculated at Load Shaft	Tℓ	$\{\mu \cdot (W + F_{_{V}}) + F_{_{H}}\} \cdot \frac{P_{_{B}}}{2000\pi}$	
Load Torque (kg·m)	T _L Calculated at Motor Shaft	$T_{\ell} imes rac{1}{R} imes rac{1}{\eta}$ Mechanical efficiency	$\begin{split} & T_{\ell} \times \frac{1}{R} \times \frac{1}{\eta} & \xrightarrow{Mechanical} \\ & \left(OR & \frac{\{\mu \cdot (W + F_{\ell}) + F_{\mu}\} \cdot \ V_{\ell}}{2\pi \cdot N_{M} \cdot \eta} \right) \end{split}$	$ \begin{array}{c} T_{\ell} \times \frac{1}{R} \times \frac{1}{\eta} & \text{Mechanical efficiency} \\ \begin{bmatrix} OR & \\ \frac{\{\mu \ F_{\prime\prime} + W_{\prime\prime} - W_{\prime\prime} + F_{\prime}\} \cdot \ V_{\ell}}{2\pi \cdot N_{M} \cdot \eta} \end{bmatrix} \end{array} $
Load Moving Power Po (k	W)	$\frac{T_{\ell} \cdot N_{\ell}}{973 \times \eta}$	$\frac{\{\mu \cdot (W + F_{V}) + F_{H}\} \cdot V_{\ell}}{6120 \times \eta}$	$\frac{\{\mu \ F_{\mathcal{H}} + W_{\mathcal{I}} - W_{\mathcal{I}} + F_{\mathcal{V}}\} \cdot \ V_{\ell}}{6120 \times \eta}$
Load Acceleration Power		$ \frac{GD^{2}\ell \cdot N\ell^{2}}{365 \times 10^{3} \times t_{a}} \xrightarrow{\text{Acceleration time (s)}} $	$ \frac{GD^{2}\ell \cdot N\ell^{2}}{365 \times 10^{3} \times t_{a}} $ Acceleration time (s)	$ \frac{GD^2 \ell \cdot N \ell^2}{365 \times 10^3 \times t_a} $ Acceleration time (s)
Starting Torque T _P (kg·m) Deceleration Torque T _S (kg·m) Effective Torque Value Trms (kg·m)		T_{ℓ} V_{ℓ} (m/min)	$\begin{split} T_{p} &= \frac{\left(GD_{M}^{2} + GD_{L}^{2}\right) \cdot N_{M}}{375 \cdot t_{a}} + T_{L}} \\ T_{S} &= \frac{\left(GD_{M}^{2} + GD_{L}^{2}\right) \cdot N_{M}}{375 \cdot t_{c}} - T_{L}} \\ &- T_{max} &= \sqrt{\frac{T_{p}^{2} \cdot t_{a}^{1} + T_{L}^{2} \cdot t_{c}^{1} + T_{S}^{2} \cdot t_{d}^{2}}{T}} \\ &\text{When a load torque is applied wh} \\ T_{max} &= \sqrt{\frac{T_{p}^{2} \cdot t_{a}^{1} + T_{L}^{2} \cdot (T \cdot t_{c}^{1} \cdot t_{d}^{2})}{T}} \end{split}$	ile stanged for a vertical ball service
System Remarks		-	 The gear backlash is a problem. Suitable for applications for which increasing system speed is not required. A large torque can be generated by a small motor. 	• Falling when $W_1 \neq W_2$ • Brake timing

Ту	/pe	Roll Feeder	Rack and Pinion	
Machine Configuration		Applied pressure, N(kg) $\mu 2$ Bearing friction coefficient Tension, $F_1(kg)$ $W(kg)$ $\mu 1$ ψ	F _V (kg) W(kg) F _H (kg) pt dp(mm) Number of teeth, Z _P Pitch, L _P (mm)	
Load Rotation Speed I	Vℓ (min ⁻¹)	Load speed (m/min) $\frac{1000 \times V_{\ell}}{P_{B}} \leftarrow $ [However, $P_{B} = \pi \cdot d_{P}$]	Load speed (m/min) $ \frac{1000 \times V_{\ell}}{P_{B}} \leftarrow $ $ \left(\begin{array}{c} \text{However, } P_{B} = \pi \cdot d_{P} \\ \text{OR} \qquad P_{B} = Z_{P} \cdot L_{P} \end{array} \right) $	
Speed Calculated at M	lotor Shaft N _M (min-1)	$R \times N\ell$	$R \times N\ell$	
	GD ² ℓ Calculated at Load Shaft	$W \cdot \left(\frac{d_p}{1000}\right)^2$	$W \cdot \left(\frac{d_p}{1000}\right)^2$	
Linear Motion GD ² (kg·m ²)	$ CD^2 \lor l \stackrel{\longrightarrow}{=} 1$		$ \begin{array}{c} GD^{2}_{L} \times \left(\frac{1}{R}\right)^{2} \\ \left(\text{OR W} \cdot \left(\frac{V_{\ell}}{\pi \cdot N_{M}}\right)^{2}\right) \end{array} $	
	Tℓ Calculated at Load Shaft	$(F_1 + \mu_1 W + \mu_2 N) \cdot \frac{d_p}{2000}$	$\{\mu \cdot (W + F_V) + F_H\} \cdot \frac{d_P}{2000}$	
Load Torque (kg·m) T _L Calculated at Motor Shaft		$ \begin{cases} T_{\ell} \times \frac{1}{R} \times \frac{1}{\eta} & \text{Mechanical} \\ \text{efficiency} \end{cases} $ $ \left(\text{OR} \frac{(F_{_{\ell}} + \mu_{_{1}}W + \mu_{_{2}}N) \cdot V_{\ell}}{2\pi \cdot N_{_{M}} \cdot \eta} \right) $	$ \begin{array}{c} T_{\ell} \times \frac{1}{R} \times \frac{1}{\eta} & \text{Mechanical} \\ \text{OR} & \frac{\{\mu \cdot (W + \mathcal{F}_{\nu}) + \mathcal{F}_{\mu}\} \cdot V_{\ell}}{2\pi \cdot \mathcal{N}_{M} \cdot \eta} \end{array} \right) $	
Load Moving Power F	Po (kW)	$\frac{(F_1 + \mu_1 W + \mu_2 N) \cdot V_{\ell}}{6120 \times \eta}$	$\frac{\{\mu\cdot(W+F_{V})+F_{H}\}\cdot V_{\ell}}{6120\times\eta}$	
Load Acceleration Pov	wer	$ \frac{GD^{2} \ell \cdot N \ell^{2}}{365 \times 10^{3} \times t_{a}} $ Acceleration time (s)	$ \frac{GD^{2} \ell \cdot N \ell^{2}}{365 \times 10^{3} \times t_{a}} $ Acceleration time (s)	
Starting Torque T _P (kg·m) Deceleration Torque T _S (kg·m) Effective Torque Value Trms (kg·m)		$T_{p} = \frac{(GD_{M}^{2} + GD_{L}^{2}) \cdot N_{M}}{375 \cdot t_{s}} + T_{L}$ $T_{S} = \frac{(GD_{M}^{2} + GD_{L}^{2}) \cdot N_{M}}{375 \cdot t_{s}} - T_{L}$ $T_{ms} = \sqrt{\frac{T_{p}^{2} \cdot t_{s}^{4} + T_{L}^{2} \cdot t_{c}^{4} + T_{S}^{2} \cdot t_{g}^{4}}{T}}$ $When a load torque is applied while stopped for a vertical ball so T_{ms} = \sqrt{\frac{T_{p}^{2} \cdot t_{s}^{4} + T_{L}^{2} \cdot (T - t_{s}^{4} - t_{s}^{4}) + T_{S}^{2} \cdot t_{g}^{4}}{T}}$		
System Remarks		 Feeding of coiled and sheet materials Roller slipping affects accuracy. A measuring roller pulse generator may also be installed separately. 	Can be used for positioning with long travel distances. A separate pulse generator is often installed.	

Ту	/pe	Chains and Timing Belts	Dollies
Machine Configuration		$F_{V}(kg)$ $W(kg) \downarrow \qquad F_{H}(kg)$ $1/R \qquad \phi \qquad dp(mm)$ $Number of teeth, Z_{P}$ $Pitch, L_{P}(mm)$	W(kg) 1/R C: Resistance to travel (kg/t) dp(mm)
Load Rotation Speed I	Nℓ (min ⁻¹)	Load speed (m/min) $\frac{1000 \times V_{\ell}}{P_{B}} \leftarrow$ $\begin{pmatrix} \text{However, } P_{B} = \pi \cdot d_{P} \\ \text{OR} & P_{B} = Z_{P}^{*} L_{P} \end{pmatrix}$	Load speed (m/min) $\frac{1000 \times V_{\ell}}{P_{B}}$ [However, $P_{B} = \pi \cdot d_{P}$]
Speed Calculated at M	Iotor Shaft N _M (min-1)	$R \times N\ell$	$R \times N\ell$
	GD ² ℓ Calculated at Load Shaft	$W \cdot \left(\frac{d_p}{1000}\right)^2$	$W \cdot \left(\frac{d_p}{1000}\right)^2$
Linear Motion GD ² (kg·m ²) GD ² _L Calculated at Motor Shaft		$ \frac{GD^{2} \times \left(\frac{1}{R}\right)^{2}}{\left(OR W \cdot \left(\frac{V_{\ell}}{\pi \cdot N_{M}}\right)^{2}\right)} $	$GD^{2}_{L} \times \left(\frac{1}{R}\right)^{2}$ $\left(OR W \cdot \left(\frac{V_{\ell}}{\pi \cdot N_{M}}\right)^{2}\right)$
	<i>Tℓ</i> Calculated at Load Shaft	$\{\mu \cdot (W + F_{_{V}}) + F_{_{H}}\} \cdot \frac{d_{_{P}}}{2000}$	$C \cdot W \frac{d_p}{2 \times 10^6}$
Load Torque (kg·m)	\mathcal{T}_{L} Calculated at Motor Shaft	$ \begin{cases} T_{\ell} \times \frac{1}{R} \times \frac{1}{\eta} & \text{Mechanical} \\ \text{efficiency} \end{cases} $ $ \left(\text{OR} \frac{\{\mu \cdot (W + F_{\nu}) + F_{\mu}\} \cdot V_{\ell}}{2\pi \cdot N_{M} \cdot \eta} \right) $	$ \begin{array}{c} $
Load Moving Power F	P _O (kW)	$\frac{\{\mu \cdot (W + F_{\nu}) + F_{\mathcal{H}}\} \cdot V_{\ell}}{6120 \times \eta}$	$\frac{\text{C} \cdot W \cdot V_{\ell}}{6120 \times 10^3 \times \eta}$
Load Acceleration Pov	wer	$\frac{GD^{2} \ell \cdot N \ell^{2}}{365 \times 10^{3} \times t_{a}}$ Acceleration time (s)	$\frac{GD^{2} \ell \cdot N \ell^{2}}{365 \times 10^{3} \times t_{a}}$ Acceleration time (s)
Starting Torque T _P (kg·m) Deceleration Torque T _S (kg·m) Effective Torque Value Trms (kg·m)		$T_{S} = \frac{(GD_{M}^{2} + \frac{1}{37})^{2}}{T_{ms}} = \sqrt{\frac{T_{\rho}^{2}}{T_{ms}}}$ $T_{S} = \frac{(GD_{M}^{2} + \frac{1}{37})^{2}}{T_{ms}} = \sqrt{\frac{T_{\rho}^{2}}{T_{ms}}}$ $T_{ms} = \sqrt{\frac{T_{\rho}^{2}}{T_{ms}}}$ $T_{ms} = \sqrt{\frac{T_{\rho}^{2}}{T_{ms}}}$ $T_{ms} = \sqrt{\frac{T_{\rho}^{2}}{T_{ms}}}$ $T_{ms} = \sqrt{\frac{T_{\rho}^{2}}{T_{ms}}}$	$\begin{array}{l} GD_{L}^{2} \cdot \mathcal{N}_{M} \\ 5 \cdot t_{s} \\ \hline 5 \cdot t_{s} \\ \hline - t_{s} \\ - t_{s} \\ \hline - t_{s} \\$
System Remarks		 Positioning of conveyors Chain looseness, movement, and pitch error are problems (not suitable for frequent use). Radial load for overtightened belt chains 	Dolly slipping

Revision History

The date of publication, revision code, revision number, and web revision number are given at the bottom right of the back cover. Refer to the following example.

Revision number

Revision code — Web revision number

MANUAL NO. SIEP C230210 00A <0>-0 Published in Japan April 2021

Date of publication

Date of Publication	Rev. Code	Rev. No.	WEB Rev. No.	Section	Revised Contents
September 2025	Н	7	0	All chapters	 Addition: Information on compact batteryless absolute encoder (SGMXJ, SGMXA-A5A to -70A, SGMXP, and SGMXG) Partly revised.
March 2025	G	6	0	All chapters	Addition: 400 V specification (SGMXA-15 to -50, SGMXP-02 to -15, SGMXG-05 to -1E)
				Back cover	Revision: Address
September 2023	F	5	0	1.4, Chapter 6, 8.4	Addition: Information on 1000 min ⁻¹ for the SGMXG
				3.2.1, 4.2.1, 5.2.1, 8.5.2	Partly revised.
				4.3.5, 4.3.6, 6.4.3	Revision: Connector dimensions
May 2023	Е	4	0	All chapters	Revision: Dimensional drawings in shaft end specifications
				1.1.5	Partly revised.
				1.4	Addition: Information on SGDXT
				7.1.5, 7.2.1	Addition: Information on servomotor installation
March 2023	D	3	3	4.3.5 (2) (a), 4.3.6 (1) (2)	Partly revised.
January 2023			2	5.2.2, 5.2.3, 5.3.1 (1), 5.3.3	Partly revised.
October 2022			1	All chapters	Addition: Information on SGDXT
				4.2.2 (1)	Partly revised.
April 2022			0	All chapters	Addition: SGMXA-15 to 70, SGMXP, SGMXG-03, -05, -1A, and -1E
September 2021	С	2	0	7.3.2 (3)	Revision: Title
				7.3.2 (4)	Addition: Information on SGMXG-30
July 2021	В	1	0	All chapters	 Addition: Information on SGMXG-30, -44, -55, and -75 Addition: Information on SGDXS-330, -470, and -550 Partly revised.
April 2021	A	0	0	_	First edition

Σ-X-Series AC Servo Drive

Rotary Servomotor

Product Manual

IRUMA BUSINESS CENTER (SOLUTION CENTER)

480, Kamifujisawa, Iruma, Saitama, 358-8555, Japar Phone: +81-4-2962-5151 Fax: +81-4-2962-6138 www.yaskawa.co.jp

YASKAWA AMERICA, INC.

2121, Norman Drive South, Waukegan, IL 60085, U.S.A. Phone: +1-800-YASKAWA (927-5292) or +1-847-887-7000 Fax: +1-847-887-7310 www.yaskawa.com

YASKAWA ELÉTRICO DO BRASIL LTDA.

777, Avenida Piraporinha, Diadema, São Paulo, 09950-000, Brasil Phone: +55-11-3585-1100 Fax: +55-11-3585-1187 www.yaskawa.com.br

YASKAWA EUROPE GmbH

Philipp-Reis-Str. 6, 65795 Hattersheim am Main, Germany Phone: +49-6196-569-300 Fax: +49-6196-569-398 www.yaskawa.eu.com E-mail: info@yaskawa.eu.com

YASKAWA ELECTRIC KOREA CORPORATION

6F, 112, LS-ro, Dongan-gu, Anyang-si, Gyeonggi-do, Korea Phone: +82-31-8015-4224 Fax: +82-31-8015-5034 www.yaskawa.co.kr

YASKAWA ASIA PACIFIC PTE. LTD. 30A, Kallang Place, #06-01, 339213, Singapore Phone: +65-6282-3003 Fax: +65-6289-3003 www.yaskawa.com.sg

YASKAWA ELECTRIC (THAILAND) CO., LTD.
59, 1F-5F, Flourish Building, Soi Ratchadapisek 18, Ratchadapisek Road, Huaykwang, Bangkok, 10310, Thailand Phone: +66-2-017-0099 Fax: +66-2-017-0799 www.yaskawa.co.th

YASKAWA ELECTRIC (CHINA) CO., LTD.

22F, Link Square 1, No.222, Hubin Road, Shanghai, 200021, China Phone: +86-21-5385-2200 Fax: +86-21-5385-3299 www.vaskawa.com.cn

YASKAWA ELECTRIC (CHINA) CO., LTD. BEIJING OFFICE Room 1011, Tower W3 Oriental Plaza, No.1, East Chang An Avenue, Dong Cheng District, Beijing, 100738, China Phone: +86-10-8518-4086 Fax: +86-10-8518-4082

YASKAWA ELECTRIC TAIWAN CORPORATION

12F, No. 207, Section 3, Beishin Road, Shindian District, New Taipei City 23143, Taiwan Phone: +886-2-8913-1333 Fax: +886-2-8913-1513 or +886-2-8913-1519 www.vaskawa.com.tw



YASKAWA ELECTRIC CORPORATION

In the event that the end user of this product is to be the military and said product is to be employed in any weapons systems or the manufacture thereof, the export will fall under the relevant regulations as stipulated in the Foreign Exchange and Foreign Trade Act. Therefore, be sure to follow all procedures and submit all relevant documentation according to any and all rules, regulations and laws that may apply.

Specifications are subject to change without notice for ongoing product modifications and improvements.

© 2021 YASKAWA Electric Corporation