

iQpump®605 DRIVE

INSTALLATION & PRIMARY OPERATION

INTELLIGENT PUMP CONTROLLER
WITH MAIN SWITCH

CATALOG CODE:

WM65WxxxxxTx

CAPACITIES:

208 V class: 2.2 to 45 kW (3 to 60 HP) 480 V class: 2.2 to 93 kW (3 to 125 HP)





https://www.yaskawa.com/dwm

This Page Intentionally Blank

Table of Contents

1.	General Information	
_	•	
2.	Safety	
	Explanation of Signal Words	
	General Safety	
	Exclusion of Liability	8
3.	Cybersecurity	. 8
4.	Receiving	. 8
	How to Read Catalog Codes	g
	Rated Output Current	
5	Common Drive Specifications	11
٥.	Area of Use	
6.	Mechanical Installation	13
	Moving the Drive	. 13
	Using the Hanging Brackets to Move the Drive	
	Installation Position and Distance.	
	Single Drive Installation	
	Removing/Reattaching Covers	
	Removing/Reattaching the Cover Using Procedure A	
	Opening/Closing the Door Using Procedure B	
7.	Electrical Installation	23
	Standard Connection Diagram	
	Standard Drive Connection Diagram	
	Main Circuit Terminal Functions	
	Motor and Main Circuit Connections	. 25
	Wiring the Main Circuit and Motor (Models: 2xxxxT and 4xxxxT with Main Switch)	. 26
	Main Circuit Terminal Block Wiring	. 28
	Wire Selection	
	Main Circuit Terminal Block Wiring Procedure	. 33
	Notes on Wiring the Main Circuit Terminal Block of Models 2011 to 2059 and 4005 to	33
	4065	. 00

	Notes on Wiring the Main Circuit Terminal Block of Models 2075 to 2114 and 4077 to 4096	25
	4096	. 35 . 35
8.	Drive Main Switch	39
	Use and Lock the Main Switch	39
9.	Keypad: Names and Functions	41
	AUTO LED and HAND LED Indications	
10.	LED Status Ring	45
11.	Drive Start-Up Procedure	47
	Change Parameter Settings	47
	Disable the Initial Setup Screen	
	Control Circuit Terminal Block Functions	
	Input Terminals	
	External Power Supply Input Terminals	52
	Serial Communication Terminals	
	Control Circuit Terminal Configuration	
	Control Circuit Wire Gauges and Tightening Torques	
	Wiring the Control Circuit Terminal	
	Control I/O Connections	
	Set Sinking Mode/Sourcing Mode	
	Set Input Signals for MFAI Terminals A1 to A3	. 59
	Set Output Signals for MFAO Terminals FM, AMSwitch ON Termination Resistor for MEMOBUS/Modbus Communications	
12.	Drive Control and Programming	62
	Selecting the Control Method	62
	Auto-Tuning	62
	Drive Parameters	62
13.	UL Standards	70
	Area of Use	70
	Main Circuit Wire Gauges and Tightening Torques	
	Ferrules and Closed-Loop Crimp Terminals	
	Short Circuit Protection Requirements for UL Listing	
	UL Compliance	
	Low Voltage Wiring for Control Circuit Terminals	
	Drive Motor Overload and Overheat Protection	
	E2-01: Motor Rated Current (FLA)	
	E9-06: Motor Rated Current (FLA)	. 76
	L1-01: Motor Overload (oL1) Protection	. 77

	L1-02: Motor Overload Protection Time	. 80
14.	European Standards	81
	EU Declaration of Conformity	. 82
	Electrical Installation	. 84 . 84
	Install a Drive to Conform to the EMC Directive	
15.	China RoHS Compliance	92
	Information on Hazardous Substances in This Product	. 92
16.	对应中国RoHS指令	
17	Safe Disable Input	
	Safe Disable Specifications	. 93 . 94
	Using the Safe Disable Function	. 95 . 95 . 96
18.	Seismic Standards	97
19.	Disposal Instructions	
20.	Maintenance	98
21.	Troubleshooting	99
	Fault Minor Faults/Alarms Parameter Setting Errors Auto-Tuning Errors	115 123
	Backup Function Operating Mode Display and Errors	131
Re	vision History	135

1 General Information

The products and specifications given in this manual and the manual contents can change without notice to make the product and manual better.

Be sure to always use the latest version of this manual. Use this manual to correctly install, wire, set, and operate this product.

Users can download additional manuals for this product from the Yaskawa documentation website printed on the back cover.

Glossary

Phrase	Definition
Drive	YASKAWA AC Drive iQpump®605
EDM	External Device Monitor
EZOLV	EZ Open Loop Vector Control
IPM motor	Interior Permanent Magnet motors
MFAI	Multi-Function Analog Input
MFAO	Multi-Function Analog Output
MFDI	Multi-Function Digital Input
MFDO	Multi-Function Digital Output
OLV/PM	Open Loop Vector Control for Permanent Magnet Motors
PM motor	Permanent Magnet Synchronous motor (generic name for IPM motors and SPM motors)
SIL	Safety Integrity Level
SPM motor	Surface Permanent Magnet motors
V/f	V/f Control

2 Safety

Read the safety instructions carefully before you install, wire, or operate this product.

◆ Explanation of Signal Words

A WARNING Read and understand this manual before you install, operate, or do maintenance on the drive. Install the drive as specified by this manual and local codes. The symbols in this section identify safety messages in this manual. If you do not obey these safety messages, the hazards can cause serious injury, death, or damage to the products and related equipment and systems.

These identifier words categorize and emphasize important safety precautions in these instructions.

▲ DANGER This signal word identifies a hazard that will cause serious injury or death if you do not prevent it.

A WARNING This signal word identifies a hazard that can cause death or serious injuries if you do not prevent it.

A CAUTION This signal word identifies a hazard that can cause minor or moderate injuries if you do not prevent it.

NOTICE This signal word identifies a property damage message that is not related to personal injury.

General Safety

General Precautions

- Some figures in the instructions include options and drives without covers or safety shields to more clearly show the inside of the drive. Replace covers and shields before operation.
 Use options and drives only as specified by the instructions.
- · The figures in this manual are examples only. All figures do not apply to all products included in this manual.
- · Yaskawa can change the products, specifications, and content of the instructions without notice to make the product and/or the instructions better.
- If you damage or lose these instructions, contact a Yaskawa representative or the nearest Yaskawa sales office on the rear cover of the manual, and tell them the document number
 on the front cover to order new copies.

⚠ DANGER Do not ignore the safety messages in this manual. If you ignore the safety messages in this manual, it will cause serious injury or death. The manufacturer is not responsible for injuries or damage to equipment.

A DANGER Electrical Shock Hazard. Do not examine, connect, or disconnect wiring on an energized drive. Before servicing, disconnect all power to the equipment and wait for the time specified on the warning label at a minimum. The internal capacitor stays charged after the drive is de-energized. The charge indicator LED extinguishes when the DC bus voltage decreases below 50 Vdc. When all indicators are OFF, remove the covers before measuring for dangerous voltages to make sure that the drive is safe. If you do work on the drive when it is energized, it will cause serious injury or death from electrical shock.

A WARNING Crush Hazard. Test the system to make sure that the drive operates safely after you wire the drive and set parameters. If you do not test the system, it can cause damage to equipment or serious injury or death.

A WARNING Sudden Movement Hazard. Before you do a test run, make sure that the setting values for virtual input and output function parameters are correct. Virtual input and output functions can have different default settings and operation than wired input and output functions. Incorrect function settings can cause serious injury or death.

A WARNING Sudden Movement Hazard. Remove all personnel and objects from the area around the drive, motor, and machine and attach covers, couplings, shaft keys, and machine loads before you energize the drive. If personnel are too close or if there are missing parts, it can cause serious injury or death.

AVARNING Arc Flash Hazard. Obey local codes and Arc Flash safety requirements contained in the Standard for Electrical Safety in the Workplace NFPA 70E (2009 Edition or later) and the Workplace Electrical Safety, Canadian Standards Association (CSA) Z462-12. Obey safe work procedures and use applicable personal protective equipment (PPE). If you do not obey these requirements and procedures, it can cause serious injury or death.

▲ WARNING Electrical Shock Hazard. Do not modify the drive body or drive circuitry. Modifications to drive body and circuitry can cause serious injury or death, will cause damage to the drive, and will void the warranty. Yaskawa is not responsible for modifications of the product made by the user.

A WARNING Electrical Shock Hazard. Only let approved personnel install, wire, maintain, examine, replace parts, and repair the drive. If personnel are not approved, it can cause serious injury or death.

A WARNING Electrical Shock Hazard. Do not remove covers or touch circuit boards while the drive is energized. If you touch the internal components of an energized drive, it can cause serious injury or death.

▲ WARNING Electrical Shock Hazard. After the drive blows a fuse or trips a GFCI, do not immediately energize the drive or operate peripheral devices. Wait for the time specified on the warning label at a minimum and make sure that all indicators are OFF. Then check the wiring and peripheral device ratings to find the cause of the problem. If you do not know the cause of the problem, contact Yaskawa before you energize the drive or peripheral devices. If you do not fix the problem before you operate the drive or peripheral devices, it can cause serious injury or death.

▲ WARNING Electrical Shock Hazard. Disconnect all power to the drive and remove all wires to do maintenance on the drive. If you only turn OFF the built-in Main Switch before you do maintenance, there can be high voltage on input terminals R/L1, S/L2, and T/L3 of the Main Switch and touching energized terminals will cause serious injury or death.

▲ WARNING Damage to Equipment. Do not apply incorrect voltage to the main circuit of the drive. Operate the drive in the specified range of the input voltage on the drive nameplate. Voltages that are higher than the permitted nameplate tolerance can cause damage to the drive.

A WARNING Fire Hazard. Install sufficient branch circuit short circuit protection as specified by applicable codes and this manual. The drive is suitable for circuits that supply not more than 100,000 RMS symmetrical amperes, 240 Vac maximum (208 V Class), 480 Vac maximum (480 V Class). Incorrect branch circuit short circuit protection can cause serious injury or death.

▲ CAUTION Crush Hazard. Tighten terminal cover screws and hold the case safely when you move the drive. If the drive or covers fall, it can cause moderate injury.

NOTICE

Use an inverter-duty motor or vector-duty motor with reinforced insulation and windings applicable for use with an AC drive. If the motor does not have the correct insulation, it can cause a short circuit or ground fault from insulation deterioration.

NOTICE Damage to Equipment. When you touch the drive and circuit boards, make sure that you observe correct electrostatic discharge (ESD) procedures. If you do not follow procedures, it can cause ESD damage to the drive circuitry.

NOTICE Damage to Equipment. Do not do a withstand voltage test or use a megohmmeter or megger insulation tester on the drive. These tests can cause damage to the drive.

NOTICE Do not operate a drive or connected equipment that has damaged or missing parts. You can cause damage to the drive and connected equipment.

NOTICE Damage to Equipment. Do not use steam or other disinfectants to fumigate wood for packaging the drive. Use alternative methods, for example heat treatment, before you package the components. Gas from wood packaging fumigated with halogen disinfectants, for example fluorine, chlorine, bromine, iodine or DOP gas (phthalic acid ester), can cause damage to the drive.

NOTICE Damage to Equipment. Do not energize and de-energize the drive more frequently than one time each 30 minutes. If you frequently energize and de-energize the drive, it can cause drive failure.

NOTICE Damage to Equipment. Do not cycle the Main Switch more than 6000 times. If you cycle the Main Switch more times than the limit, it will cause the contact failure, or you cannot open or close the Main Switch.

NOTICE Damage to Equipment. Make sure that you stop the motor before you turn ON/OFF the Main Switch. If you turn ON/OFF the Main Switch during run, it can cause Main Switch failure.

Exclusion of Liability

- This product is not designed and manufactured for use in life-support machines or systems.
- Contact a Yaskawa representative or your Yaskawa sales representative if you are considering the application of this product for special purposes, such as machines or systems used for passenger cars, medicine, airplanes and aerospace, nuclear power, electric power, or undersea relaying.

▲ WARNING Injury to Personnel. When you use this product in applications where its failure could cause the loss of human life, a serious accident, or physical injury, you must install applicable safety devices. If you do not correctly install safety devices, it can cause serious injury or death.


3 Cybersecurity


This product is designed to connect and communicate information and data through a network interface. It is the sole responsibility of the customer to provide and continuously guarantee a secure connection between the product and the customer's network or if applicable, any other network. The customer must establish and maintain the appropriate measures (such as, but not limited to, the installation of firewalls, the application of authentication measures, the encryption of data, the installation of antivirus programs, etc.) to protect the product, the network, its system and the interface against all types of security breaches, unauthorized access, interference, intrusion, leakage and/or theft of data or information. Yaskawa and its affiliates are not responsible for damages and/or losses related to such security breaches, any unauthorized access, interference, intrusion, leakage and/or theft of data or information.

4 Receiving

- 1. Examine the product for damage and missing parts. Immediately contact the shipping company if the drive is damaged. The Yaskawa warranty does not cover damage from shipping.
- 2. Verify the catalog code in the "C/C" section of the drive nameplate to make sure that you received the correct model.
- 3. If you did not receive the correct drive or if your drive does not operate correctly, contact your supplier.
- 4. Examine each drive and each motor for systems that use more than one drive.

NOTICE Damage to Equipment. Do not install or use damaged parts or damaged motors into the drive system.

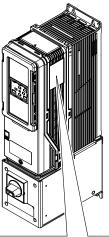

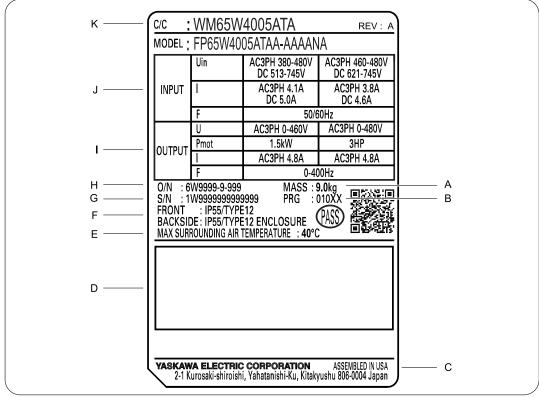

- A Weight
- **B** Drive software version
- C The address of the head office of Yaskawa Electric Corporation
- D Accreditation standards
- E Surrounding air temperature
- F Protection design

- G Serial number
- H Lot number
- I Output specifications
- J Input specifications
- K Catalog code

Figure 4.1 Nameplate Example

How to Read Catalog Codes

Use the information in Figure 4.2 and Table 4.1 to read the drive catalog codes.

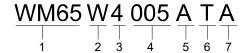


Figure 4.2 Drive Catalog Code

Table 4.1 Catalog Code Details

No.	Description
1	Product series
2	Region code W: iQpump, Americas
3	Input power supply voltage • 2: Three-Phase 200 Vac to 240 Vac • 4: Three-Phase 380 Vac to 480 Vac
4	Rated output current Note: Refer to the rated output current list for more information.
5	EMC filter A: No built-in EMC filter
6	Protection design T: IP55/UL Type 12 with Main Switch *I
7	Environmental specification A: Standard

^{*1} IP55/UL Type 12 drives with Main Switch are certified as IP55 Category 2 as specified by IEC60529.

■ Rated Output Current

Table 4.2 and Table 4.3 give the rated output current values.

Note:

- These output current values are applicable for drives that operate at standard specifications.
- Derate the current in applications that:
- -Increase the carrier frequency
- -Have high ambient temperature
- -Use side-by-side installation.

Table 4.2 Output Current for Three-Phase AC 208 V Class Models (NEMA Rating)

Model	Maximum Applicable Motor Output kW (HP)	Rated Output Current A
2011	2.2 (3)	10.6
2017	3.7 (5)	16.7
2024	5.5 (7.5)	24.2
2031	7.5 (10)	30.8
2046	11 (15)	46.2
2059	15 (20)	59.4
2075	18.5 (25)	74.8
2088	22 (30)	88
2114	30 (40)	114
2143	37 (50)	143
2169	45 (60)	169

Table 4.3 Output Current for Three-Phase AC 480 V Class Models (NEMA Rating)

Model	Maximum Applicable Motor Output kW (HP)	Rated Output Current A
4005	2.2 (3)	4.8
4008	3.7 (5)	7.6
4011	5.6 (7.5)	11
4014	7.5 (10)	14
4021	11.2 (15)	21
4027	15 (20)	27
4034	18.6 (25)	34
4040	22 (30)	40
4052	30 (40)	52
4065	37 (50)	65
4077	45 (60)	77
4096	56 (75)	96
4124	75 (100)	124
4156	93 (125)	156

5 Common Drive Specifications

Note:

To get the longest product life, install the drive in an environment that meets the necessary specifications.

Table 5.1 Control Characteristics

Item	Specification
Control Methods	V/f Control (V/f) PM Open Loop Vector Control (OLV/PM) EZ Open Loop Vector Control (EZOLV)
Frequency Control Range	EZOLV: 0.01 Hz to 120 Hz V/f and OLV/PM: 0.01 Hz to 400 Hz
Frequency Accuracy (Temperature Fluctuation)	Digital inputs: Within $\pm 0.01\%$ of the maximum output frequency (-10 °C to +40 °C (14 °F to 104 °F)) Analog inputs: Within $\pm 0.1\%$ of the maximum output frequency (25 °C ± 10 °C (77 °F ± 18 °F))
Frequency Setting Resolution	Digital inputs: 0.01 Hz Analog inputs: 1/2048 of the maximum output frequency (11-bit)
Output Frequency Resolution	0.001 Hz
Frequency Setting Signal	Main speed frequency reference: 0 Vdc to 10 Vdc (20 k Ω), 4 mA to 20 mA (250 Ω), 0 mA to 20 mA (250 Ω) Main speed reference: Pulse train input (maximum 32 kHz)
Starting Torque	 V/f: 140%/3 Hz OLV/PM: 100%/10% speed EZOLV: 100%/10% speed
Speed Control Range	For Induction Motors: V/f: 1:40 EZOLV: 1:10 For Permanent Magnet Motors and Synchronous Reluctance Motors: OLV/PM: 1:20 EZOLV: 1:10
Torque Limits	Parameter settings allow different limits in four quadrants in EZOLV control method.
Accel/Decel Time	0.0 s to 6000.0 s The drive can set two pairs of different acceleration and deceleration times.

Item	Specification
V/f Characteristics	Select from 15 pre-defined V/f patterns, or a user-set V/f pattern.
Main Control Functions	Restart After Momentary Power Loss, Speed Search, Overtorque/Undertorque Detection, Torque Limit, 17 Step Speed (max.), Accel/Decel Switch, S-curve Acceleration/Deceleration, 3-wire Sequence, Auto-Tuning (Rotational and Stationary), Dwell Function, Cooling Fan ON/OFF Switch, Slip Compensation, Torque Compensation, Jump Frequency, Upper/Lower Limits for Frequency Reference, DC Injection Braking at Start and Stop, Overexcitation Braking, High Slip Braking, PID Control (with Sleep Function), Energy Saving Control, MEMOBUS/Modbus Communication (RS-485 max. 115.2 kbps), Auto Restart, Application Presets, KEB, Overexcitation Deceleration, Overvoltage Suppression

Table 5.2 Protection Functions

Item	Specification
Motor Protection	Electronic thermal overload protection
Momentary Overcurrent Protection	Drive stops when the output current is more than 175% of the drive rated output current.
Overload Protection	Drive stops when the output current is more than these overload tolerances: • 110% of the rated output current for 60 seconds • 140% of the rated output current for 2.5 seconds when the drive output frequency is 3 Hz The permitted frequency of overload is one time each 10 minutes. Note: If output frequency < 6 Hz, the drive can trigger the overload protection function when the output current is in the overload tolerance range.
Overvoltage Protection	208 V class: Stops when the DC bus voltage is more than approximately 410 V 480 V class: Stops when the DC bus voltage is more than approximately 820 V
Undervoltage Protection	208 V class: Stops when the DC bus voltage decreases to less than approximately 190 V 480 V class: • Stops when the DC bus voltage decreases to less than approximately 350 V when you use an input voltage less than 400 V • Stops when the DC bus voltage decreases to less than approximately 380 V when you use an input voltage less than 460 V • Stops when the DC bus voltage decreases to less than approximately 440 V when you use an input voltage of 460 V or more 208 V class: Stops when the DC bus voltage decreases to less than approximately 190 V 480 V class: • Stops when the DC bus voltage decreases to less than approximately 350 V when you use an input voltage less than 400 V • Stops when the DC bus voltage decreases to less than approximately 380 V when you use an input voltage less than 460 V • Stops when the DC bus voltage decreases to less than approximately 440 V when you use an input voltage of 460 V or more
Momentary Power Loss Ride-thru	Immediately stops when power loss is 15 ms or longer. Continues operation if power loss is shorter than 2 s (depending on parameter settings). Note: Stop time may be shortened depending on the load and motor speed.
Heatsink Overheat Protection	The drive stops when the thermistor detects an IGBT temperature more than approximately 100 °C (212 °F). The trip temperature level is different drive models.
Stall Prevention	Stall prevention is available during acceleration, deceleration, and during run.
Ground Fault Protection	Electronic circuit protection Note: This protection detects ground faults during run. The drive will not provide protection when: There is a low-resistance ground fault for the motor cable or terminal block Energizing the drive when there is a ground fault.
DC Bus Charge LED	Charge LED illuminates when DC bus voltage is more than 50 V.

Table 5.3 Environment

Item	Specification
Area of Use	Indoors
Power Supply	Overvoltage Category III
Ambient Temperature Setting	IP55/UL Type 12: -10 °C to +40 °C (14 °F to 104 °F) • When you install the drive in an enclosure, use a cooling fan or air conditioner to keep the internal air temperature in the permitted range. • Do not let the drive freeze. • You can use IP55/UL Type 12 drives at a maximum of 50 °C (122 °F) when you derate the output current.
Humidity	95% RH or less Do not let condensation form on the drive.
Storage Temperature	-20 °C to +70 °C (-4 °F to +158 °F) (short-term temperature during transportation)

Item	Specification
Surrounding Area	Pollution degree 2 or less Install the drive in an area without: Oil mist, corrosive or flammable gas, or dust Metal powder, oil, water, or other unwanted materials Radioactive materials or flammable materials, including wood Harmful gas or fluids Salt Direct sunlight
Altitude	1000 m (3281 ft) maximum Note: Derate the output current by 1% for each 100 m (328 ft) to install the drive in altitudes between 1000 m to 4000 m (3281 ft to 13123 ft). It is not necessary to derate the rated voltage in these conditions: • When you install the drive at 2000 m (6562 ft) or lower • When you install the drive between 2000 m to 4000 m (6562 ft to 13123 ft) and ground the neutral point on the power supply.
Vibration	• 10 Hz to 20 Hz: 1 G (9.8 m/s², 32.15 ft/s²) • 20 Hz to 55 Hz: 0.2 G (1.96 m/s², 6.43 ft/s²)
Installation Orientation	Install the drive vertically for sufficient airflow to cool the drive.

Table 5.4 Standard

Item	Specification
Harmonized Standard	 UL 508C */ EN 61800-3 IEC/EN 61800-5-1 EN ISO 13849-1:2015 IEC/EN 61508 (SIL3) IEC/EN IEC 62061 (SIL3)

^{*1} Models 2143, 2169, 4124, and 4156 are compatible with UL61800-5-1.

Table 5.5 Enclosure Ratings

Item	Specification
Protection Design	IP55/UL Type 12 with Main Switch

Area of Use

Install this product in a location with Overvoltage Category III and pollution degree 2 or less.

Ambient Temperature Setting

Maintain an ambient temperature between -10 °C to +40 °C (14 °F to 104 °F) for IP55/UL Type 12 drives.

6 Mechanical Installation

This section gives information about the standard environment for correct installation.

Moving the Drive

Obey local laws and regulations when moving and installing this product.

▲ CAUTION Crush Hazard. Tighten terminal cover screws and hold the case safely when you move the drive. If the drive or covers fall, it can cause moderate injury.

Drive Weight	Persons Necessary to Move the Drive	
< 15 kg (33 lbs.)	1	
≥ 15 kg (33 lbs.)	2 + using appropriate lifting equipment	

Refer to the Technical Reference for information about how to use suspension systems, wires, or hanging metal brackets to move the drive.

♦ Using the Hanging Brackets to Move the Drive

Use the hanging brackets attached to the drive to temporarily lift the drive when you install the drive to a control panel or wall or when you replace the drive. Do not let the drive stay vertically or horizontally suspended or move the drive over a long distance while it is suspended.

Before you install the drive, make sure that you read these precautions:

A WARNING Crush Hazard. Before you hang the drive vertically, use screws to correctly attach the drive front cover and other drive components. If you do not secure the front cover, it can fall and cause minor injury.

A WARNING Crush Hazard. When you use a crane or hoist to lift the drive during installation or removal, prevent more than 1.96 m/s² (0.2 G) vibration or impact. Too much vibration or impact can cause serious injury or death from falling equipment.

▲ WARNING Crush Hazard. When you lift the drive during installation or removal, do not try to turn the drive over and do not ignore the hanging drive. If you move a hanging drive too much or if you ignore it, the drive can fall and cause serious injury or death

A WARNING Crush Hazard. When you install the drive, do not hold the front cover. Install the drive with holding the heatsink. If you hold the front cover, the cover will come off and the drive will fall, then it can cause injury.

Installation Position and Distance

Install the drive vertically for sufficient airflow to cool the drive.



A - Vertical installation




B - Horizontal installation

Figure 6.1 Installation Position

■ Single Drive Installation

Use the clearances specified in Figure 6.2 to install the drive. Make sure that there is sufficient space for wiring and airflow.

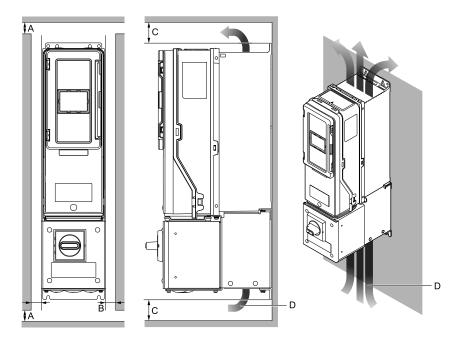


- A 50 mm (2 in) minimum
- C 120 mm (4.7 in) minimum *2
- B 30 mm (1.2 in) minimum */
- D Airflow direction

Figure 6.2 Single Drive Installation Distances

- *1 50 mm (2 in) minimum is necessary to remove the front cover.
- *2 This is the distance from a drive component or mounting bracket that has the maximum height. The highest component of the drive is different for different models.

■ Installing More than One Drive Adjacent to Each Other without Derating

Use the clearances specified in Figure 6.3. Make sure that there is sufficient space.

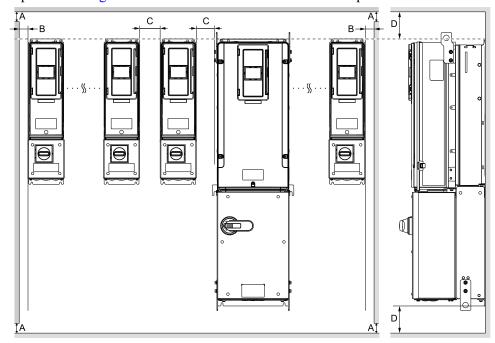

- A 50 mm (2 in) minimum
- C 60 mm (2.4 in) minimum
- B 30 mm (1.2 in) minimum
- D 120 mm (4.7 in) minimum

Figure 6.3 Installation Distances for More than One Drive without Derating

Note:

Align the tops of drives that have different dimensions to help when you replace cooling fans.

Removing/Reattaching Covers

⚠ DANGER Electrical Shock Hazard. Do not examine, connect, or disconnect wiring on an energized drive. Before servicing, disconnect all power to the equipment and wait for the time specified on the warning label at a minimum. The internal capacitor stays charged after the drive is de-energized. The charge indicator LED extinguishes when the DC bus voltage decreases below 50 Vdc. When all indicators are OFF, remove the covers before measuring for dangerous voltages to make sure that the drive is safe. If you do work on the drive when it is energized, it will cause serious injury or death from electrical shock.

This section gives information about how to remove and reattach the front cover and terminal cover for wiring and inspection.

Different drive models have different procedures to remove and reattach the covers. Refer to Table 6.1 for more information.

Madel	IP55/UL Type 12 with Main Switch				
Model	Procedure	Reference			
2011 - 2114 4005 - 4096	Procedure A	16			
2143 - 2169 4124, 4156	Procedure B	19			

Table 6.1 Procedures to Remove Covers by Drive Model

Removing/Reattaching the Cover Using Procedure A


⚠ DANGER Electrical Shock Hazard. Do not examine, connect, or disconnect wiring on an energized drive. Before servicing, disconnect all power to the equipment and wait for the time specified on the warning label at a minimum. The internal capacitor stays charged after the drive is de-energized. The charge indicator LED extinguishes when the DC bus voltage decreases below 50 Vdc. When all indicators are OFF, remove the covers before measuring for dangerous voltages to make sure that the drive is safe. If you do work on the drive when it is energized, it will cause serious injury or death from electrical shock.

Remove the Front Cover

- 1. Make sure that the drive main power supply is completely shut off.
- 2. Push in the two tabs on the right side of the IP55/UL Type 12 keypad cover door and pull the door to the left to open.

NOTICE Damage to Equipment. Do not open the IP55/UL Type 12 keypad cover door too far. If you open the door too far, it will fall off.

NOTICE Damage to Equipment. When the IP55/UL Type 12 keypad cover door is open, do not push the keypad key cover. If you push the keypad key cover, it will fall off.

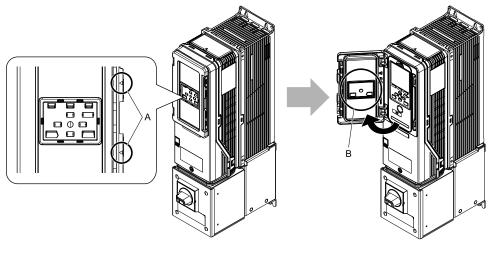


A - Tabs

B - Keypad key cover

Figure 6.4 Open the IP55/UL Type 12 Keypad Cover Door

3. Remove the keypad from the drive.

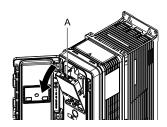

A - Keypad

Figure 6.5 Remove the Keypad

4. Loosen the front cover screw.

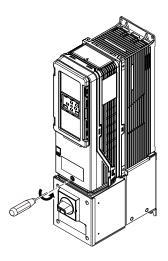


Figure 6.6 Loosen the Front Cover Screw

5. Push in the tabs on the sides of the front cover and pull the front cover forward to remove it from the drive.

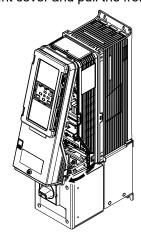


Figure 6.7 Remove the Front Cover

Reattach the Front Cover

- 1. Wire the drive and other peripheral devices.
- 2. Reverse the steps to reattach the cover. Reattach the cover carefully and make sure that the gasket on the conduit bracket does not twist.

Note:

- Make sure that you did not pinch wires or signal lines between the front cover and the drive before you reattach the cover.
- Make sure that the tabs on the sides of the front cover correctly click into the hook.
- Tighten the screws to a tightening torque of 0.98 N·m to 1.33 N·m (8.67 lbf·in to 11.77 lbf·in).

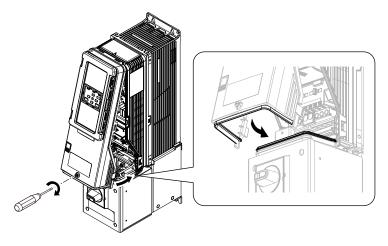


Figure 6.8 Reattach the Front Cover

3. Open the IP55/UL Type 12 keypad cover door and reattach the keypad to its initial position, then close the door until the two tabs click into position.


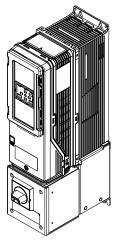


Figure 6.9 Reattach the Keypad and Close the Keypad Cover Door

Remove the Main Switch Cover

1. Make sure that the Main Switch Disconnect Handle is in the OFF position, then loosen the captive front cover screws on the Main Switch box.

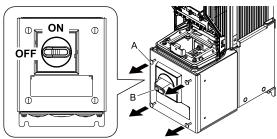


A - Screws

B - Main Switch Disconnect Handle

Figure 6.10 Loosen the Screws on the Main Switch Cover

2. Pull the cover forward to remove it from the drive.

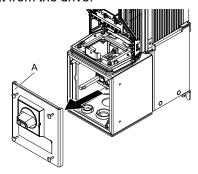


A - Main Switch cover

Figure 6.11 Remove the Main Switch Cover

Reattach the Main Switch Cover

 Make sure that the Main Switch Disconnect Handle is in the OFF position, then reverse the steps to reattach the cover.

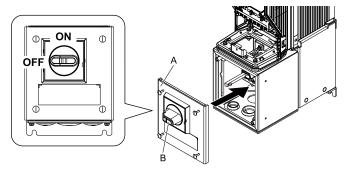

A - Main Switch cover


B - Main Switch Disconnect Handle

Figure 6.12 Reattach the Main Switch Cover

2. Tighten the screws on the Main Switch cover.

Note:

Tighten the screws to a tightening torque of 0.98 N·m to 1.33 N·m (8.67 lbf·in to 11.77 lbf·in).

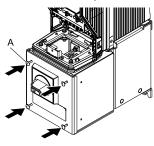

A - Screws

Figure 6.13 Tighten the Screws on the Main Switch Cover

■ Opening/Closing the Door Using Procedure B

A DANGER Electrical Shock Hazard. Do not examine, connect, or disconnect wiring on an energized drive. Before servicing, disconnect all power to the equipment and wait for the time specified on the warning label at a minimum. The internal capacitor stays charged after the drive is de-energized. The charge indicator LED extinguishes when the DC bus voltage decreases below 50 Vdc. When all indicators are OFF, remove the covers before measuring for dangerous voltages to make sure that the drive is safe. If you do work on the drive when it is energized, it will cause serious injury or death from electrical shock.

Open the Front Door

1. Make sure that the Main Switch Disconnect Handle is in the OFF position.

Note:

This step is for only the models with a Main Switch.

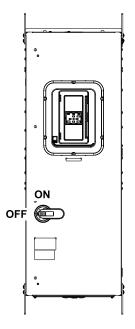


Figure 6.14 Correct Position of the Main Switch Disconnect Handle

2. Loosen the screws on the front door, then open the front door.

A - Screws

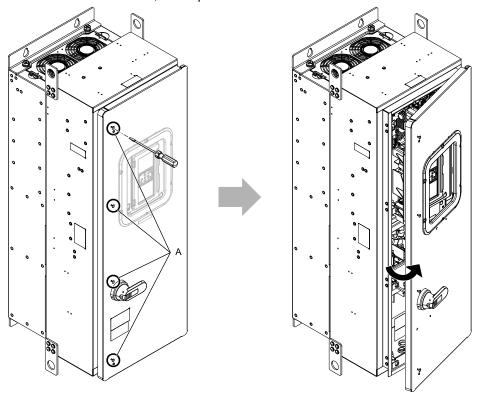


Figure 6.15 Open the Front Door

Remove the Keypad

1. Push in the two tabs on the right side of the IP55/UL Type 12 keypad cover door and pull the door to the left to open.

NOTICE Damage to Equipment. Do not open the IP55/UL Type 12 keypad cover door too far. If you open the door too far, it will fall off.

NOTICE Damage to Equipment. When the IP55/UL Type 12 keypad cover door is open, do not push the keypad key cover. If you push the keypad key cover, it will fall off.


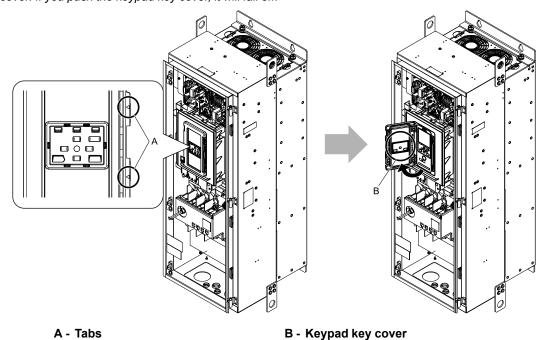


Figure 6.16 Open the IP55/UL Type 12 Keypad Cover Door

2. Remove the keypad from the drive.

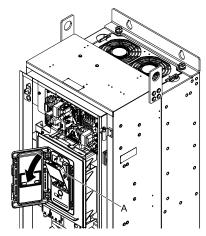

A - Keypad

Figure 6.17 Remove the Keypad

Close the Front Door

1. Wire the drive and other peripheral devices.

2. Open the IP55/UL Type 12 keypad cover door and reattach the keypad to its initial position, then close the door until the two tabs click into position.

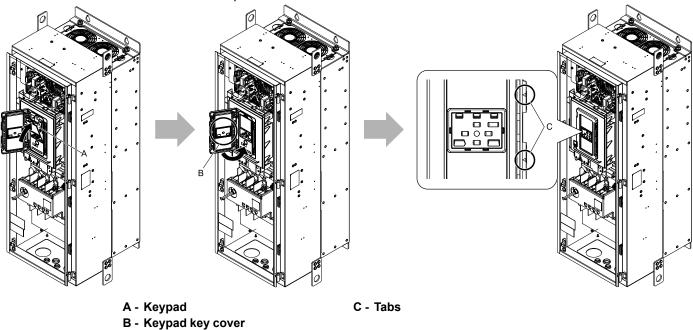


Figure 6.18 Reattach the Keypad and Close the Door

3. Reverse the steps to close the front door.

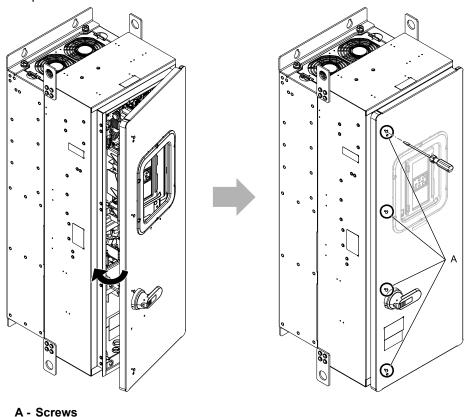


Figure 6.19 Close the Front Door

Note:

- Make sure that you did not pinch fingers, wires or signal lines between the front door and the drive before you close the door.
- Tighten the screws to a tightening torque of 0.98 N·m to 1.33 N·m (8.67 lbf·in to 11.77 lbf·in).

7 Electrical Installation

▲ DANGER Electrical Shock Hazard. Do not examine, connect, or disconnect wiring on an energized drive. Before servicing, disconnect all power to the equipment and wait for the time specified on the warning label at a minimum. The internal capacitor stays charged after the drive is de-energized. The charge indicator LED extinguishes when the DC bus voltage decreases below 50 Vdc. When all indicators are OFF, remove the covers before measuring for dangerous voltages to make sure that the drive is safe. If you do work on the drive when it is energized, it will cause serious injury or death from electrical shock.

▲ WARNING Electrical Shock Hazard. De-energize the drive and wait 5 minutes minimum until the Charge LED turns off. Remove the front cover and terminal cover to do work on wiring, circuit boards, and other parts. Use terminals for their correct function only. Incorrect wiring, incorrect ground connections, and incorrect repair of protective covers can cause death or serious injury.

A WARNING Electrical Shock Hazard. Correctly ground the drive before you turn on the EMC filter switch. If you touch electrical equipment that is not grounded, it can cause serious injury or death.

A WARNING Electrical Shock Hazard. Use the terminals for the drive only for their intended purpose. Refer to the technical manual for more information about the I/O terminals. Wiring and grounding incorrectly or modifying the cover may damage the equipment or cause injury.

♦ Standard Connection Diagram

A WARNING Sudden Movement Hazard. Set the MFDI parameters before you close control circuit switches. Incorrect Run/Stop circuit sequence settings can cause serious injury or death from moving equipment.

A WARNING Sudden Movement Hazard. Correctly wire the start/stop and safety circuits before you energize the drive. If you momentarily close a digital input terminal, it can start a drive that is programmed for 3-Wire control and cause serious injury or death from moving equipment.

A WARNING Sudden Movement Hazard. When you use a 3-Wire sequence, set A1-03 = 3330 [Initialize Parameters = 3-Wire Initialization] and make sure that b1-17 = 0 [Run Command at Power Up = Disregard Existing RUN Command]. If you do not correctly set the drive parameters for 3-Wire operation before you energize the drive, the motor can suddenly rotate in reverse when you energize the drive.

WARNING Sudden Movement Hazard. Check the I/O signals and the external sequences for the drive before you set the Application Preset function. When you set the Application Preset function (A1-06 \neq 0), it changes the I/O terminal functions for the drive and it can cause equipment to operate unusually. This can cause serious injury or death.

A WARNING Fire Hazard. Install sufficient branch circuit short circuit protection as specified by applicable codes and this manual. The drive is suitable for circuits that supply not more than 100,000 RMS symmetrical amperes, 240 Vac maximum (208 V Class), 480 Vac maximum (480 V Class). Incorrect branch circuit short circuit protection can cause serious injury or death.

NOTICE When the input voltage is 440 V or higher or the wiring distance is longer than 100 m (328 ft), make sure that the motor insulation voltage is sufficient or use an inverter-duty motor or vector-duty motor with reinforced insulation. Motor winding and insulation failure can occur.

Note:

Do not connect the AC control circuit ground to the drive enclosure. Incorrect ground wiring can cause the control circuit to operate incorrectly.

Standard Drive Connection Diagram

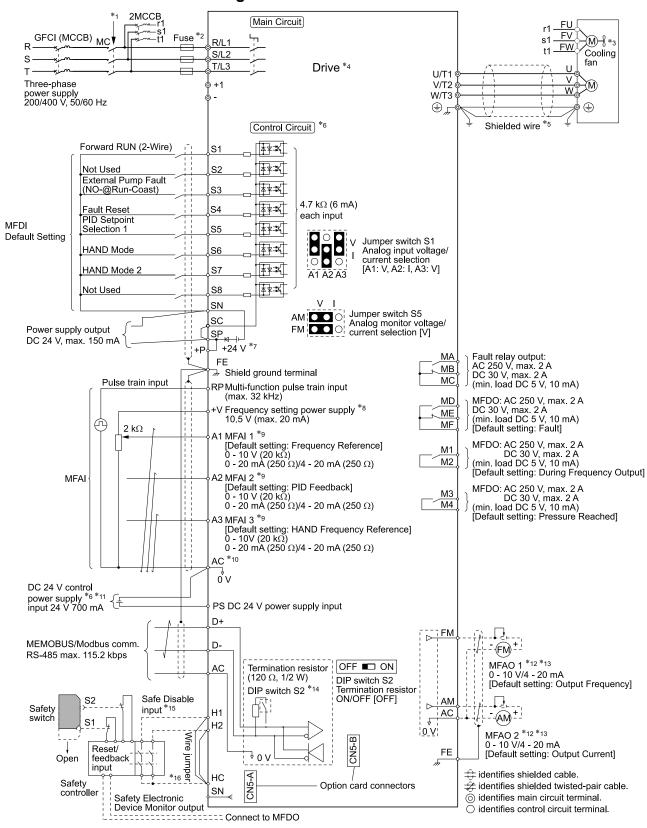


Figure 7.1 Standard Drive Connection Diagram

^{*1} Set the wiring sequence to de-energize the drive with the fault relay output. If the drive outputs a fault during fault restart when you use the fault restart function, set L5-02 = 1 [Fault Contact at Restart Select = Always Active] to de-energize the drive. Be careful when you use a cut-off sequence. The default setting for L5-02 is 0 [Active Only when Not Restarting].

- *2 Use branch circuit protection devices as recommended in this manual.
- *3 Cooling fan wiring is not necessary for self-cooling motors.
- *4 Refer to Main Circuit Terminal Block Wiring on page 28 and Wiring the Control Circuit Terminal on page 55 for wiring.
- *5 Use braided shield cable for the drive and motor wiring, or run the wiring through a metal conduit.
- *6 Connect a 24 V power supply to terminals PS-AC to operate the control circuit while the main circuit power supply is OFF.
- *7 To set the MFDI power supply (Sinking/Sourcing Mode or internal/external power supply), install or remove a jumper between terminals SC-SP or SC-SN depending on the application.

NOTICE Damage to Equipment. Do not close the circuit between terminals SP-SN. If you close the circuits between terminals SC-SP and terminals SC-SN at the same time, it will cause damage to the drive.

- Sinking Mode, Internal power supply: Install the jumper to close the circuit between terminals SC-SP.
 - NOTICE Damage to Equipment. Do not close the circuit between terminals SC-SN. If you close the circuits between terminals SC-SP and terminals SC-SN at the same time, it will cause damage to the drive.
- · Sourcing Mode, Internal power supply: Install the jumper to close the circuit between terminals SC-SN.
 - NOTICE Damage to Equipment. Do not close the circuit between terminals SC-SP. If you close the circuits between terminals SC-SP and terminals SC-SN at the same time, it will cause damage to the drive.
- External power supply: Remove the jumper from the MFDI terminals. It is not necessary to close the circuit between terminals SC-SP and terminals SC-SN.
- *8 The maximum output current capacity for terminal +V on the control circuit is 20 mA.
 - NOTICE Damage to Equipment. Do not install a jumper between terminals +V and AC. A closed circuit between these terminals will cause damage to the drive.
- *9 Jumper switch S1 sets terminals A1, A2, and A3 for voltage or current input signal. The default setting for S1 is voltage input ("V" side) for A1 and A3 and current input ("I" side) for A2.
- *10 NOTICE Do not ground the AC control circuit terminals and only connect the AC terminals as specified by the product instructions. If you connect the AC terminals incorrectly, it can cause damage to the drive.
- *11 Connect the positive lead from an external 24 Vdc power supply to terminal PS and the negative lead to terminal AC.
 - **NOTICE** Connect terminals PS and AC correctly for the 24 V power supply. If you connect the wires to the incorrect terminals, it will cause damage to the drive.
- *12 Use multi-function analog monitor outputs with analog frequency meters, ammeters, voltmeters, and wattmeters. Do not use monitor outputs with feedback-type signal devices.
- *13 Jumper switch S5 sets terminal FM and AM for voltage or current output. The default setting for S5 is voltage output ("V" side).
- *14 Set DIP switch S2 to "ON" to enable the termination resistor in the last drive in a MEMOBUS/Modbus network.
- *15 Use only Sourcing Mode for Safe Disable input.
- *16 Disconnect the jumpers between H1 and HC and H2 and HC to use the Safe Disable input.

Main Circuit Terminal Functions

Refer to Table 7.1 for the functions of drive main circuit terminals.

Table 7.1 Main Circuit Terminal Functions


Terminal	Function
R/L1	
S/L2	Line side
T/L3	
U/T1	
V/T2	Load side
W/T3	
-	N/A
+1	N/A
<u></u>	Ground terminal

Motor and Main Circuit Connections

A WARNING Electrical Shock Hazard. Do not connect terminals R/L1, S/L2, T/L3, U/T1, V/T2, W/T3, -, or +1 to the ground terminal. If you connect these terminals to earth ground, it can cause damage to the drive or serious injury or death.

NOTICE Incorrect Operation. Route motor wiring and power wiring in separate conduits or cable trays to decrease possible interference-related issues.

■ Wiring the Main Circuit and Motor (Models: 2xxxxT and 4xxxxT with Main Switch)

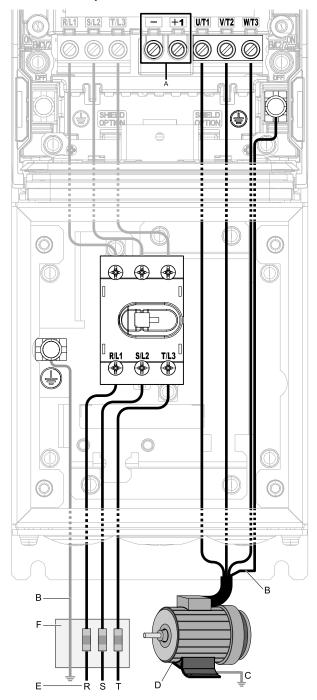

Note:

The location of terminals are different for different drive models.

- A DC bus terminal */
- B Connect to the drive ground terminal.
- C Ground the motor case.
- D Three-Phase Motor
- E Use R, S, T for input power supply.
- F Input Protection (Fuses or Circuit Breakers)

Figure 7.2 Wiring the Main Circuit and Motor

^{*1} You cannot use terminals - and +1 on IP55/UL Type 12 drives with Main Switch.

For drive models 2011xT to 2059xT and 4005xT to 4065xT with Main Switch, the tightening torques for the R/L1, S/L2, and T/L3 terminal screws are on a sticker next to the Main Switch terminal block.

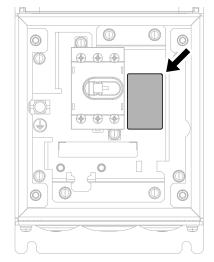


Figure 7.3 Tightening Torque Display Location (Inside of Main Switch Cover)

For models 2075xT to 2169xT and 4077xT to 4156xT, the torques for the R/L1, S/L2, and T/L3 terminal screws are on a sticker on the metallic plate of the Main Switch terminal block.

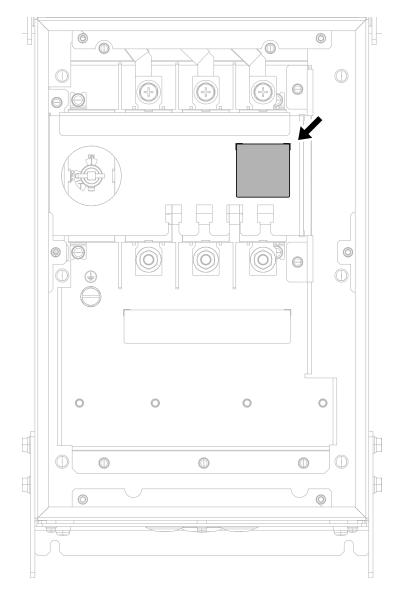


Figure 7.4 Tightening Torque Display Location (Inside of Main Switch Cover)

Main Circuit Terminal Block Wiring

■ Wire Selection

Select the correct wires for main circuit wiring.

Refer to *Main Circuit Wire Gauges and Tightening Torques on page 84* for wire gauges and tightening torques as specified by European standards.

Refer to *Wire Gauge and Torque Specifications for UL Listing on page 29* for wire gauges and tightening torques as specified by UL standards.

Wire Selection Precautions

AWARNING Electrical Shock Hazard. Make sure that the protective ground wire complies with technical standards and local safety regulations. The IEC/EN 61800-5-1:2007 standard specifies that you must wire the power supply to automatically deenergize when the protective ground wire disconnects. You can also connect a protective ground wire that has a minimum cross-sectional area of 10mm² (copper wire) or 16 mm² (aluminum wire). For drive models on which you cannot use a protective ground wire of 10 mm² or more, install two protective ground wires that have the same cross-sectional area. If you do not obey the standards and regulations, it can cause serious injury or death. The leakage current of the drive will be more than 3.5 mA.

Think about line voltage drop before you select wire gauges. Select wire gauges that drop the voltage by 2% or less of the rated voltage. Increase the wire gauge and the cable length when the risk of voltage drop increases. Calculate line voltage drop with this formula:

Line voltage drop (V) = $\sqrt{3}$ × wire resistance (Ω/km) × wiring distance (m) × motor rated current (A) × 10⁻³.

Wire Gauge and Torque Specifications for UL Listing

★ WARNING Electrical Shock Hazard. Make sure that the protective ground wire complies with technical standards and local safety regulations. The IEC/EN 61800-5-1:2007 standard specifies that you must wire the power supply to automatically deenergize when the protective ground wire disconnects. You can also connect a protective ground wire that has a minimum cross-sectional area of 10mm² (copper wire) or 16 mm² (aluminum wire). For drive models on which you cannot use a protective ground wire of 10 mm² or more, install two protective ground wires that have the same cross-sectional area. If you do not obey the standards and regulations, it can cause serious injury or death. The leakage current of the drive will be more than 3.5 mA.

Refer to Three-Phase 208 V Class Wire Gauges and Torques (Models: 2xxxxT with Main Swith) on page 29 and Three-Phase 480 V Class Wire Gauges and Torques (Models: 4xxxxT with Main Switch) on page 31 for the recommended wire gauges and tightening torques of the main circuit terminals.

Note:

The recommended wire gauges are based on drive continuous current ratings with 75 °C (167 °F) 600 V class copper wire. Assume these conditions:

Ambient temperature: 40 °C (104 °F) or lower
Wiring distance: 100 m (3281 ft) or shorter
Normal Duty Rated current value

Screw Shapes

Table 7.2 Icons to Identify Screw Shapes

Icon	Screw Shape	Icon	Screw Shape
⊕	Phillips/slot combo (+/-)	\ominus	Hex bolt (slotted)
Θ	Slotted (-)	0	Hex self-locking nut
*	Pozidriv #2	4	Hex socket cap (WAF: 4 mm)
⊕	Hex bolt (cross-slotted)	00	Hex bolt and hex self-locking nut

Three-Phase 208 V Class Wire Gauges and Torques (Models: 2xxxxT with Main Swith)

Model	Terminals */	Recommended Gauge AWG, kcmil	Applicable Gauge AWG, kcmil (mm²) *2	Wire Stripping Length *3 mm	Terminal Screw Size and Shape	Tightening Torque N⋅m (lbf⋅in)
	R/L1, S/L2, T/L3	14	14 - 8 (2.5 - 10)	9 - 10	M3.5	0.8 (7.0)
2011	U/T1, V/T2, W/T3	14	14 - 8 (2.5 - 10)	10	M4 👄	1.5 - 1.7 (13.5 - 15)
	(±)	12	14 - 8 (2.5 - 10)	-	M5 +	2.0 - 2.5 (17.7 - 22.1)
	R/L1, S/L2, T/L3	12	14 - 8 (2.5 - 10)	9 - 10	M3.5	0.8 (7.0)
2017	U/T1, V/T2, W/T3	10	14 - 8 (2.5 - 10)	10	м4 🖯	1.5 - 1.7 (13.5 - 15)
	=	10	14 - 8 (2.5 - 10)	-	M5 +	2.0 - 2.5 (17.7 - 22.1)
	R/L1, S/L2, T/L3	10	14 - 4 (2.5 - 25)	AWG 14 - AWG 10: 13 - 14.5 AWG 8 - AWG 4: 10 - 12 *4	M5 ★	2.0 (18.0)
2024	U/T1, V/T2, W/T3	8	14 - 8 (2.5 - 10)	10	м4 🖯	1.5 - 1.7 (13.5 - 15)
	<u>_</u>	10	14 - 8 (2.5 - 10)	-	M5 +	2.0 - 2.5 (17.7 - 22.1)

Model	Terminals */	Recommended Gauge AWG, kcmil	Applicable Gauge AWG, kcmil (mm²) *2	Wire Stripping Length	Terminal Screw Size and Shape	Tightening Torque N⋅m (lbf⋅in)
	R/L1, S/L2, T/L3	8	14 - 4 (2.5 - 25)	AWG 14 - AWG 10: 13 - 14.5 AWG 8 - AWG 4: 10 - 12 *4	M5 ♣	2.0 (18.0)
2031	U/T1, V/T2, W/T3	8	14 - 8 (2.5 - 10)	10	м4 🖯	1.5 - 1.7 (13.5 - 15)
	<u>_</u>	10	14 - 8 (2.5 - 10)	-	M5 +	2.0 - 2.5 (17.7 - 22.1)
	R/L1, S/L2, T/L3	8	8 - 1/0 (10 - 50)	18 - 21	M8 4	6.2 (55.0)
2046	U/T1, V/T2, W/T3	6	14 - 4 (2.5 - 25)	18	м5 🖯	4.1 - 4.5 (36 - 40)
	(±)	8	14 - 4 (2.5 - 25)	-	M6 €	4.0 - 5.0 (35.4 - 44.3)
	R/L1, S/L2, T/L3	4	8 - 1/0 (10 - 50)	18 - 21	M8 4	6.2 (55.0)
2059	U/T1, V/T2, W/T3	4	14 - 4 (2.5 - 25)	18	м5 🖯	4.1 - 4.5 (36 - 40)
	(-)	6	14 - 4 (2.5 - 25)	-	M6⊕	4.0 - 5.0 (35.4 - 44.3)
	R/L1, S/L2, T/L3	4	4 - 2/0 (25 - 70)	-	M8 ○ ◎	15 - 22 (132.8 - 194.7)
2075	U/T1, V/T2, W/T3	3 or 2	8 - 2/0 (10 - 70)	-	M8 €	5.4 - 6.0 (47.8 - 53.1)
	(-)	6	8 - 2/0 (10 - 70)	-	м8⊖	9.0 - 11 (79.7 - 97.4)
	R/L1, S/L2, T/L3	3 or 2	4 - 2/0 (25 - 70)	-	M8 ○ ◎	15 - 22 (132.8 - 194.7)
2088	U/T1, V/T2, W/T3	2	8 - 2/0 (10 - 70)	-	M8 €	5.4 - 6.0 (47.8 - 53.1)
		6	8 - 2/0 (10 - 70)	-	м8⊖	9.0 - 11 (79.7 - 97.4)
	R/L1, S/L2, T/L3	1/0	4 - 2/0 (25 - 70)	-	M8 🔾 🗇	15 - 22 (132.8 - 194.7)
2114	U/T1, V/T2, W/T3	1/0	8 - 2/0 (10 - 70)	-	M8 ⊕	5.4 - 6.0 (47.8 - 53.1)
	(6	8 - 2/0 (10 - 70)	-	м8⊖	9.0 - 11 (79.7 - 97.4)
	R/L1, S/L2, T/L3	2/0	4 - 4/0 (25 - 105)	-	M8 🔾 💿	15 - 22 (132.8 - 194.7)
2143	U/T1, V/T2, W/T3	3/0	6 - 4/0 (15 - 105)	-	M8 €	13.5 - 15 (119.5 - 132.8)
	(4	6 - 4/0 (15 - 105)	-	м8 😜	9.0 - 11 (79.7 - 97.4)
	R/L1, S/L2, T/L3	3/0	4 - 4/0 (25 - 105)	-	M8 🔾 🗇	15 - 22 (132.8 - 194.7)
2169	U/T1, V/T2, W/T3	4/0	6 - 4/0 (15 - 105)	-	M8 ⊕	13.5 - 15 (119.5 - 132.8)
	(4	6 - 4/0 (15 - 105)	-	м8 ⊖	9.0 - 11 (79.7 - 97.4)

^{*1} You cannot use terminals - and +1 on IP55/UL Type 12 drives with Main Switch.

^{*2} The metric wire gauge values are provided as reference information from equivalent AWG sizes and not exactly the same sizes as the AWG/kcmil values. Obey local safety regulations for wire sizes and make sure that the ferrule or crimp terminals are correct for your size.

^{*3} Remove insulation from the ends of wires to expose the length of wire shown.

*4 The wire stripping length is different for different wire gauges.

Three-Phase 480 V Class Wire Gauges and Torques (Models: 4xxxxT with Main Switch)

Model	Terminal */	Recommended Gauge AWG, kcmil	Applicable Gauge AWG, kcmil (mm²) *2	Wire Stripping Length mm	Terminal Screw Size and Shape	Tightening Torque N·m (lbf·in)
	R/L1, S/L2, T/L3	14	14 - 8 (2.5 - 10)	9 - 10	M3.5 ★	0.8 (7.0)
4005	U/T1, V/T2, W/T3	14	14 - 8 (2.5 - 10)	10	M4 	1.5 - 1.7 (13.5 - 15)
	<u></u>	14	14 - 8 (2.5 - 10)	-	M5 +	2.0 - 2.5 (17.7 - 22.1)
	R/L1, S/L2, T/L3	14	14 - 8 (2.5 - 10)	9 - 10	M3.5	0.8 (7.0)
4008	U/T1, V/T2, W/T3	14	14 - 8 (2.5 - 10)	10	м4 🕀	1.5 - 1.7 (13.5 - 15)
	<u></u>	14	14 - 8 (2.5 - 10)	-	M5 +	2.0 - 2.5 (17.7 - 22.1)
	R/L1, S/L2, T/L3	14	14 - 8 (2.5 - 10)	9 - 10	M3.5	0.8 (7.0)
4011	U/T1, V/T2, W/T3	14	14 - 8 (2.5 - 10)	10	м4 🖯	1.5 - 1.7 (13.5 - 15)
		12	14 - 8 (2.5 - 10)	-	M5 +	2.0 - 2.5 (17.7 - 22.1)
	R/L1, S/L2, T/L3	14	14 - 8 (2.5 - 10)	9 - 10	M3.5 ₩	0.8 (7.0)
4014	U/T1, V/T2, W/T3	12	14 - 8 (2.5 - 10)	10	м4 🖯	1.5 - 1.7 (13.5 - 15)
	<u></u>	10	14 - 8 (2.5 - 10)	-	M5 +	2.0 - 2.5 (17.7 - 22.1)
	R/L1, S/L2, T/L3	10	14 - 4 (2.5 - 25)	AWG 14 - AWG 10: 13 - 14.5 AWG 8 - AWG 4: 10 - 12 *4	M5 ★	2.0 (18.0)
4021	U/T1, V/T2, W/T3	10	14 - 8 (2.5 - 10)	10	м4 🕀	1.5 - 1.7 (13.5 - 15)
	(10	14 - 8 (2.5 - 10)	-	M5 +	2.0 - 2.5 (17.7 - 22.1)
	R/L1, S/L2, T/L3	10	14 - 4 (2.5 - 25)	AWG 14 - AWG 10: 13 - 14.5 AWG 8 - AWG 4: 10 - 12 *4	M5 ♣	2.0 (18.0)
4027	U/T1, V/T2, W/T3	8	14 - 8 (2.5 - 10)	10	м4 🖯	1.5 - 1.7 (13.5 - 15)
		10	14 - 8 (2.5 - 10)	-	M5 +	2.0 - 2.5 (17.7 - 22.1)
	R/L1, S/L2, T/L3	8	14 - 4 (2.5 - 25)	AWG 14 - AWG 10: 13 - 14.5 AWG 8 - AWG 4: 10 - 12 *4	M5 ⊕	2.0 (18.0)
4034	U/T1, V/T2, W/T3	8	14 - 8 (2.5 - 10)	10	м4 🖯	1.5 - 1.7 (13.5 - 15)
	-	10	14 - 8 (2.5 - 10)	-	M5 +	2.0 - 2.5 (17.7 - 22.1)

Model	Terminal *1	Recommended Gauge AWG, kcmil	Applicable Gauge AWG, kcmil (mm²) *2	Wire Stripping Length	Terminal Screw Size and Shape	Tightening Torque N·m (lbf·in)
	R/L1, S/L2, T/L3	8	8 - 1/0 (10 - 50)	18 - 21	M8 4	6.2 (55.0)
4040	U/T1, V/T2, W/T3	8	14 - 4 (2.5 - 25)	18	м5 ⊖	4.1 - 4.5 (36 - 40)
	(±)	8	14 - 4 (2.5 - 25)	-	M6 €	4.0 - 5.0 (35.4 - 44.3)
	R/L1, S/L2, T/L3	6	8 - 1/0 (10 - 50)	18 - 21	M8 4	6.2 (55.0)
4052	U/T1, V/T2, W/T3	6	14 - 4 (2.5 - 25)	18	м5 ⊖	4.1 - 4.5 (36 - 40)
	(+)	8	14 - 4 (2.5 - 25)	-	M6 €	4.0 - 5.0 (35.4 - 44.3)
	R/L1, S/L2, T/L3	4	8 - 1/0 (10 - 50)	18 - 21	M8 4	6.2 (55.0)
4065	U/T1, V/T2, W/T3	4	14 - 4 (2.5 - 25)	18	м5 ⊖	4.1 - 4.5 (36 - 40)
	(±)	6	14 - 4 (2.5 - 25)	-	M6 €	4.0 - 5.0 (35.4 - 44.3)
	R/L1, S/L2, T/L3	4	4 - 2/0 (25 - 70)	-	M8 ○ ◎	15 - 22 (132.8 - 194.7)
4077	U/T1, V/T2, W/T3	3 or 2	8 - 2/0 (10 - 70)	-	M8 €	5.4 - 6.0 (47.8 - 53.1)
	(±)	6	8 - 2/0 (10 - 70)	-	м8 ⊖	9.0 - 11 (79.7 - 97.4)
	R/L1, S/L2, T/L3	2	4 - 2/0 (25 - 70)	-	M8 🔾 🗇	15 - 22 (132.8 - 194.7)
4096	U/T1, V/T2, W/T3	1	8 - 2/0 (10 - 70)	-	M8 ⊕	5.4 - 6.0 (47.8 - 53.1)
	(±)	6	8 - 2/0 (10 - 70)	-	м8 ⊖	9.0 - 11 (79.7 - 97.4)
	R/L1, S/L2, T/L3	1/0	4 - 2/0 (25 - 70)	-	M8 🔾 💿	15 - 22 (132.8 - 194.7)
4124	U/T1, V/T2, W/T3	2/0	8 - 2/0 (10 - 70)	-	M8 ⊕	5.4 - 6.0 (47.8 - 53.1)
	(1)	4	8 - 2/0 (10 - 70)	-	M8 👄	9.0 - 11 (79.7 - 97.4)
	R/L1, S/L2, T/L3	2/0	4 - 4/0 (25 - 105)	-	M8 🔾 🗇	15 - 22 (132.8 - 194.7)
4156	U/T1, V/T2, W/T3	3/0	6 - 4/0 (15 - 105)	-	M8⊕	13.5 - 15 (119.5 - 132.8)
	(±)	4	6 - 4/0 (15 - 105)	-	м8⊖	9.0 - 11 (79.7 - 97.4)

^{*1} You cannot use terminals - and +1 on IP55/UL Type 12 drives with Main Switch.

^{*2} The metric wire gauge values are provided as reference information from equivalent AWG sizes and not exactly the same sizes as the AWG/kcmil values. Obey local safety regulations for wire sizes and make sure that the ferrule or crimp terminals are correct for your size.

^{*3} Remove insulation from the ends of wires to expose the length of wire shown.

^{*4} The wire stripping length is different for different wire gauges.

Main Circuit Terminal Block Wiring Procedure

⚠ DANGER Electrical Shock Hazard. Do not examine, connect, or disconnect wiring on an energized drive. Before servicing, disconnect all power to the equipment and wait for the time specified on the warning label at a minimum. The internal capacitor stays charged after the drive is de-energized. The charge indicator LED extinguishes when the DC bus voltage decreases below 50 Vdc. When all indicators are OFF, remove the covers before measuring for dangerous voltages to make sure that the drive is safe. If you do work on the drive when it is energized, it will cause serious injury or death from electrical shock.

The procedures to wire the main circuit terminal block are different for different drive models. Refer to Table 7.3 for procedures by drive model.

,,					
Model	Procedure	Reference			
2011 - 2059 4005 - 4065	Procedure A	35			
2075 - 2114 4077 - 4096	Procedure B	35			
2143, 2169 4124, 4156	Procedure C	37			

Table 7.3 Types of Wiring Procedure for the Main Circuit Terminal Block

■ Notes on Wiring the Main Circuit Terminal Block of Models 2011 to 2059 and 4005 to 4065

Read these safety messages and notes before you wire the main circuit terminal block.

A WARNING Fire Hazard. Do not use bent or crushed wires. Remove the damaged end of the wire before you use it. Incorrect connections can cause death or serious injury from fire.

A WARNING Fire Hazard. If you use stranded wire, make sure that all of the wire strands are in the connection. Also, do not twist the stranded wire too much. Incorrect connections can cause death or serious injury from fire.

NOTICE Do not solder stranded wire. Soldered wire connections can become loose over time and cause unsatisfactory drive performance.

NOTICE If you use power tools to tighten the terminal screws, use a low speed setting (300 min-1 (r/min)) to 400 min-1 (r/min)). High speeds can cause damage to the terminal screws.

NOTICE Do not tighten the terminal screws at an angle of 5 degrees or more. Incorrect positioning can cause damage to the terminal screws.

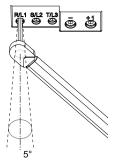


Figure 7.5 Permitted Angle

Note:

- •Use UL Listed vinyl-coated insulated copper wires for operation with a continuous maximum permitted temperature of 75 °C at 600 V.
- Remove all unwanted objects that are near the terminal block connections.
- Remove the insulation from the connection wires to the wire stripping lengths shown in the manual.
- Put the wire all the way into the terminal block. Remove the insulation from the wire to the recommended wire stripping length to fit the wire with insulation in the plastic housing.
- Use a torque driver, torque ratchet, or torque wrench for the screws. A slotted driver or a hex tool will be necessary to wire the screw clamp terminal. Use applicable tools as specified by the recommended conditions in the product manual.
- Users can purchase wiring tools from Yaskawa. Contact Yaskawa or your nearest sales representative for more information.
- Wire gauges on existing drive models to be replaced may not match wire gauge ranges on new drives. Contact Yaskawa or your nearest sales representative for more information about the connection procedures.
- Put the bit all the way into the hex socket to tighten the hex socket cap screw.
- When tightening slotted screws, hold the straight-edge screwdriver perpendicularly to the screw. Take care to ensure that the tip of the straight-edge screwdriver is aligned with the screw groove.


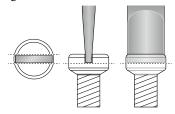


Figure 7.6 Tightening Slotted Screws

- After connecting the wires to the terminal block, lightly pull on the wires to make sure that they do not come out of the terminals.
- Remove the correct section of the wiring cover to make wiring easier.
- Do not let strain on the wiring cause damage. Use a strain relief near the wiring to release the tension. Refer to Figure 7.7 for examples.

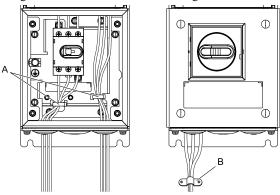

A - Cable ties

B - Cable clamp

Figure 7.7 Strain Relief Example

Table 7.4 Recommended Wiring Tools

Screw Size and Shape Adapter		Bit Model Manufacturer: PHOENIX CONTACT	Torque Driver Model (Adjustable Tightening Torque)
M3.5 ★	Pozidriv screw driver #2	-	-
м4 👄	Bit	SF-BIT-SL 1,0X4,0-70	TSD-M 3NM (0.2 - 3 N·m (1.8 - 26.6 lbf·in))
M5 */ ⊖	Bit	SF-BIT-SL 1,2X6,5-70	TSD-M 3NM (0.2 - 3 N·m (1.8 - 26.6 lbf·in))
M5 ⊕	Pozidriv screw driver #2	-	-

^{*1} For M5 screw size and the tightening torque is more than 3 N·m, use a torque wrench with the recommended bit.

■ Notes on Wiring the Main Circuit Terminal Block of Models 2075 to 2114 and 4077 to 4096

Note:

- After the wiring, do not twist or shake the electrical wires too much.
- Be sure to use only wires with the correct size, stripped wire length, and tightening torque as specified by Yaskawa.
- Use tools that fit the shape of the screw head to tighten and loosen the terminal block screws.
- Make sure that there are no loose stranded wires or frayed wires after wiring is complete.

Wiring the Main Circuit Terminal Block Using Procedure A

Main Circuit Terminal Block Wiring Procedure

- 1. Remove the keypad and then remove the front cover of the drive.
- 2. Remove the front cover of the main switch box.
- 3. Put the ends of prepared wires through the knock-out holes on the conduit bracket and into the Main Switch terminal, then tighten the Main Switch terminal screws to the specified torque.


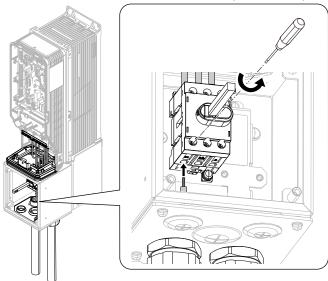


Figure 7.8 Install the Electrical Wire

4. Install the front cover of the Main Switch box and the keypad and drive front cover to their initial positions.

Note

- Install the correct control circuit conduit to keep the protection level. Install the included rubber waterproofing grommets for any knock-out holes that you do not use for control circuit wiring.
- •The knock-out holes for main circuit wiring do not have rubber grommets. Install the correct conduit to keep the IP55/UL Type 12 protection level.

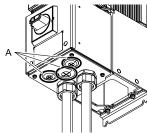

A - Rubber grommets


■ Wiring the Main Circuit Terminal Block Using Procedure B

Main Circuit Terminal Block Wiring Procedure

Prepare these recommended tools to remove and install the closed-loop crimp terminals:

- A deep socket wrench on the nut side
- A straight box wrench with these specifications on the bolt side

- Size: 13 mm (0.51 in)
- Length: Less than 180 mm (7.09 in)
 - 1. Remove the keypad and then remove the front cover of the drive.
 - 2. Remove the front cover of the Main Switch box.
 - 3. Hold the terminal block bolts with the box wrench and remove the terminal block nuts.

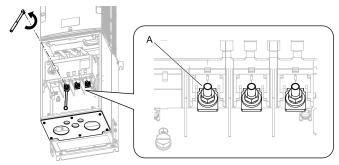


A - Nut and bolt

Figure 7.9 Remove the Terminal Block Nuts

Note:

The terminal block bolts are not easy to see. Make sure that you put the box wrench on the terminal block bolts correctly.

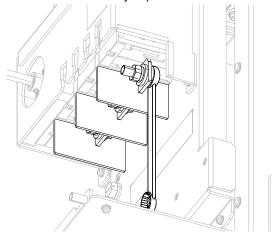

- 4. Put the ends of wires with closed-loop crimp terminals through the knock-out holes on the conduit bracket.
- 5. Put the terminal block bolts through the openings in the closed-loop crimp terminals.

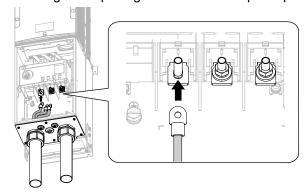


Figure 7.10 Install the Electrical Wires

6. Hold the terminal block bolts with the box wrench and tighten the terminal block nuts to a correct torque.


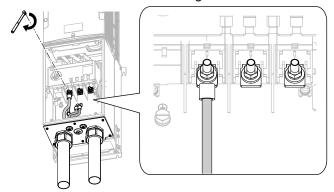


Figure 7.11 Tighten the Main Switch Terminal Block Nuts

7. Install the Main Switch front cover and the keypad and drive front cover to their initial positions.

Note:

- Install the correct control circuit conduit to keep the protection level. Install the included rubber waterproofing grommets for any knock-out holes that you do not use for control circuit wiring.
- The knock-out holes for main circuit wiring do not have rubber grommets. Install the correct conduit to keep the IP55/UL Type 12 protection level.

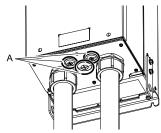

A - Rubber grommets


■ Wiring the Main Circuit Terminal Block Using Procedure C

Main Circuit Terminal Block Wiring Procedure

- 1. Open the front door and remove the keypad.
- 2. Remove the terminal block bolt.

Note:

When you use terminals - and +1 and these terminals have covers, remove them to install the wire.

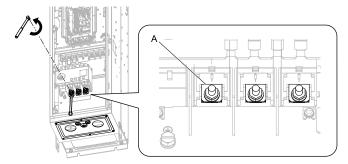

A - Bolt

Figure 7.12 Remove the Terminal Block Bolts

3. Put the ends of wires with closed-loop crimp terminals through the conduits.

4. Align the closed-loop crimp terminals with the bolt holes on main circuit terminal block.

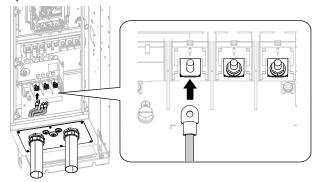


Figure 7.13 Install the Electrical Wires

5. Tighten the bolts to the specified torque.

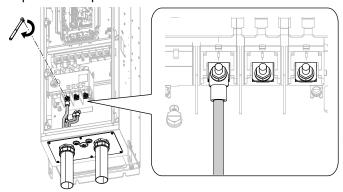


Figure 7.14 Tighten the Terminal Block Bolts

6. Install the keypad and close the front door.

Note:

- For knock-out holes that you do not use for control circuit wiring, install the included rubber waterproofing grommets. For knock-out holes that you do use for control circuit wiring, install the correct conduit to keep the protection level.
- The knock-out holes for main circuit wiring do not have rubber grommets. Install the correct conduit to keep the IP55/UL Type 12 protection level.



A - Rubber grommets

8 Drive Main Switch

Main Switch Status Drive Status 2011 - 2031 2046 - 2169 4005 - 4034 4040 - 4156 ON Φ OF OFF Drive with Main Switch Φ Main Switch 3 Phase Input Power OFF (1) Œ Φ Φ ON 0 Drive with Main Switch **OFF** Φ Main Switch 3 Phase Input Power ON Т.

Table 8.1 Main Switch and Drive Status

Use and Lock the Main Switch

When you must touch the motors or machines, for example in maintenance, use the Main Switch to de-energize the drive and lock the Main Switch Disconnect Handle in the OFF position as specified by this procedure.

Note:

Yaskawa recommends that you de-energize the drive before you turn the Main Switch from ON to OFF.

▲ WARNING Electrical Shock Hazard. Disconnect all power to the drive and remove all wires to do maintenance on the drive. If you only turn OFF the built-in Main Switch before you do maintenance, there can be high voltage on input terminals R/L1, S/L2, and T/L3 of the Main Switch and touching energized terminals will cause serious injury or death.

NOTICE Damage to Equipment. Do not energize and de-energize the drive more frequently than one time each 30 minutes. If you frequently energize and de-energize the drive, it can cause drive failure.


NOTICE Damage to Equipment. Do not cycle the Main Switch more than 6000 times. If you cycle the Main Switch more times than the limit, it will cause the contact failure, or you cannot open or close the Main Switch.

NOTICE Damage to Equipment. Make sure that you stop the motor before you turn ON/OFF the Main Switch. If you turn ON/OFF the Main Switch during run, it can cause Main Switch failure.

1. Stop the drive and make sure that the motor is completely stopped.

2. Turn the Main Switch from ON to OFF.

Table 8.2 Turn OFF the Main Switch

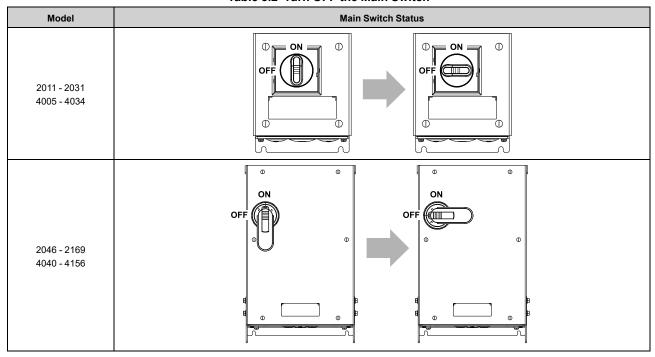


 $\label{eq:continuous} 3. \quad \text{Put a lock through the hole of the Main Switch}.$

Note:

The lock is not included with the drive.

Table 8.3 Lock the Main Switch

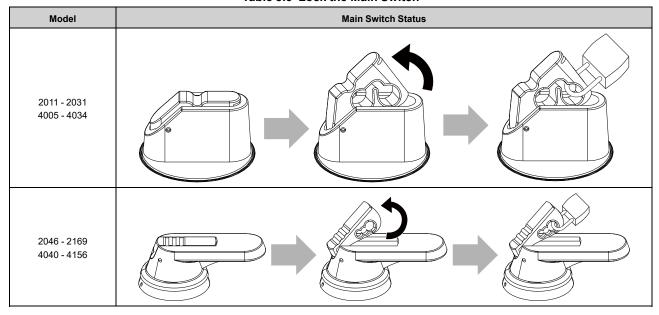

9 Keypad: Names and Functions

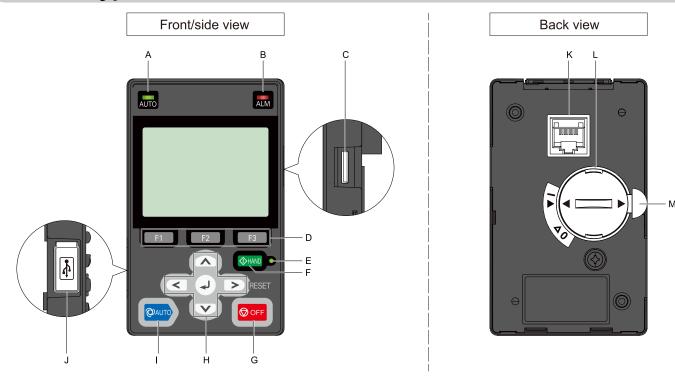


Figure 9.1 Keypad

Table 9.1 Keypad: Names and Functions

No.	Name	Function		
A	AUTO LED */	Illuminates to show that the drive is in AUTO Mode.		
В	ALM LED	Illuminates when the drive detects a fault. Flashes when the drive detects: • An alarm • An oPE parameter setting error • A fault or alarm during Auto-Tuning The LED turns off when there are no drive faults or alarms.		
С	microSD Card Insertion Slot	The insertion point for a microSD card.		
D	Function Keys (F1, F2, F3) F1 F2 F3	The menu shown on the keypad sets the functions for function keys. The name of each function is in the lower half of the display window.		
E	HAND LED */	Illuminates to show that the drive is in HAND Mode.		
F	HAND Key ♦ HAND	Sets drive operation to HAND Mode. The drive uses the Y5-01 [HAND Frequency Reference Source] setting.		
G	OFF Key ⊘ OFF	Stops drive operation. Note: The OFF key has highest priority. Push OFF to stop the motor even when a Run command is active at an external Ru command source. Set 02-02 = 0 [OFF Key Function Selection = Disabled] to disable OFF priority. You can only disable OFF when b1-02/b1-16 = 1, 2, or 3 [Run Command Selection 1/Run Command Selection 2 = Digital Input, Serial Communications, or Option PCB].		

No.	Name	Function	
	Left Arrow Key	Moves the cursor to the left. Navigates to the Standard Monitor menu from the Home screen.	
	Up Arrow Key/Down Arrow Key	 Scrolls up or down to display the next item or the previous item. Selects parameter numbers, and increments or decrements setting values. Scrolls through 18 custom monitors set in <i>o1-24</i>, <i>o1-27</i> to <i>o1-35</i>, and <i>o1-90</i> to <i>o1-97</i> from the Home screen. 	
Н	Right Arrow Key (RESET)	 Moves the cursor to the right. Continues to the next screen. Clears drive faults. Navigates to the Parameter Group Shortcuts from the Home screen. 	
	ENTER Key	 Enters parameter values and settings. Selects menu items to move the user between keypad displays. Selects each mode, parameter, and set value. 	
I	AUTO Key	Sets drive operation to AUTO Mode. The drive uses the b1-01 [Frequency Reference Selection 1] and b1-02 [Run Command Selection 1] settings. Note: Push	
J	USB Terminal	For factory adjustment.	
K	RJ-45 Connector	Uses an RJ-45 8-pin straight through UTP CAT5e extension cable or keypad connector to connect to the drive.	
L	Clock Battery Cover	Cover for the clock battery. Note: The battery included with the keypad is for operation check. It may be exhausted earlier than the expected battery life described in the manual. To replace the battery, use a Hitachi Maxell "CR2016 Lithium Manganese Dioxide Lithium Battery" or an equivalent battery with these properties: Nominal voltage: 3 V Operating temperature range: -20 °C to +85 °C (-4 °F to +185 °F)	
M	Insulation Sheet	An insulating sheet is attached to the keypad battery to prevent battery drain. Remove the insulation sheet before you use the keypad for the first time.	

^{*1} Refer to AUTO LED and HAND LED Indications on page 42 for more information about AUTO LED and HAND LED indications.

♦ AUTO LED and HAND LED Indications

Table 9.2 AUTO LED and HAND LED Indications

AUTO LED	HAND LED	Status		
OFF	OFF	OFF Mode		
OFF	ON	HAND Mode		
OFF	Long blink (50% duty)	 HAND Mode When the Frequency Reference is 0 or during deceleration HI-xx = 70 [Drive Enable No Run Cycle] removed while HAND MFDI closed 		
OFF	Double blink	HAND Mode When an MFDI sends a Fast Stop signal to stop the drive When you clear the Run command and enter the Run command again during the time set in C1-02 [Deceleration Time 1] Drive Enable Command removed while HAND MFDI closed Pressed while running in HAND from MFDI Exited Emergency Override with HAND MFDI closed		
ON	OFF	AUTO Mode		

AUTO LED	HAND LED	Status		
Long blink (50% duty)	OFF	AUTO Mode		
		When the Frequency Reference is 0 or during deceleration		
		During PI Sleep		
		• When $b1-02/b1-16 = 7/8/9$ and is pressed, waiting for RUN command (from External/Serial/Option)		
		• When b1-02/b1-16 = 7/8/9 and Run command given (from External/Serial/Option) and waiting for press		
		• When $b1-02/b1-16 = 7/8/9$ and the HAND MFDI is removed while the Run command is present		
		• When $b1-02/b1-16=0$, is pressed and $H1-xx=70$ [Drive Enable No Run Cycle] is opened		
Double blink	OFF	AUTO Mode		
		When an MFDI sends a Fast Stop signal to stop the drive		
		Drive Enable input removed while an external Run command is present		
		• b1-02/b1-16 = 1/2/3 and Y5-03 = 0 [HAND/AUTO Switchover During Run] and HAND MFDI is opened while external run input is present		
		Drive exits Emergency Override operation with an external Run command present		

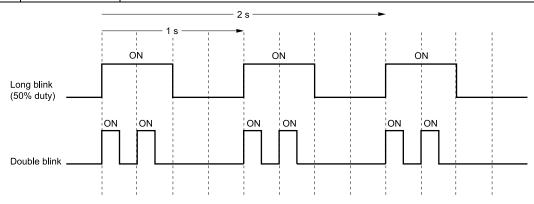


Figure 9.2 AUTO LED and HAND LED Timing Status

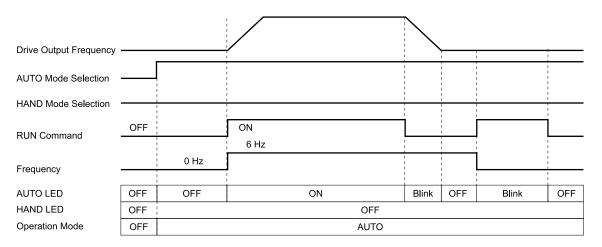


Figure 9.3 LEDs and Drive Operation in AUTO Mode

♦ Keypad Mode and Menu Displays

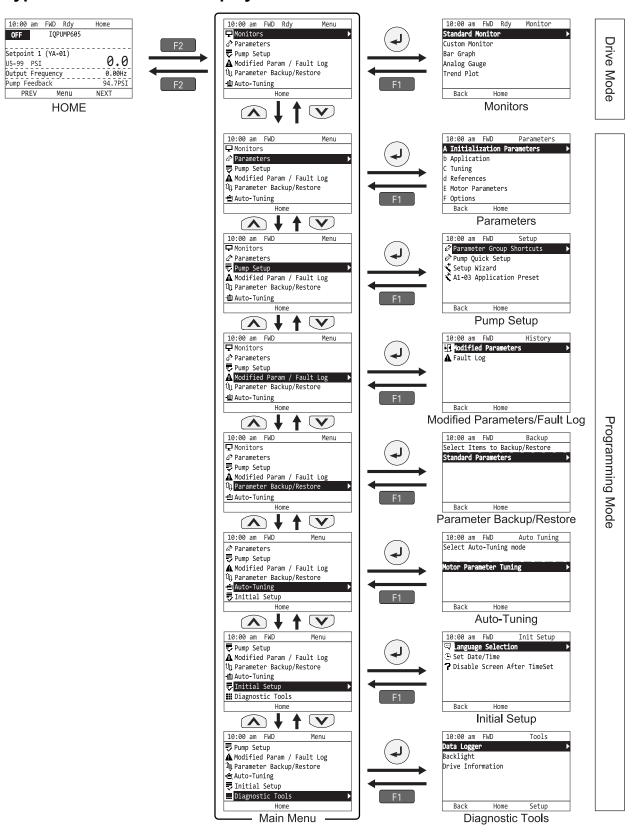


Figure 9.4 Keypad Functions and Display Levels

Note:

- Energize the drive with factory defaults to show the Initial Setup screen. Push F2 (Home) to show the HOME screen.


 -Select [TURN OFF power up setup screen] from the [Disable Screen After TimeSet] setting to not display the Initial Setup screen.
- Push from the Home screen to show drive monitors.
- Push \checkmark to set U5-99/YA-01 [Reference 1] when you set b1-01 = 0 [Frequency Reference Selection 1 = Keypad].
- The keypad will show [Rdy] when the drive is in Drive Mode. The drive is prepared to accept a Run command.
- The drive will not accept a Run command in Programming Mode in the default setting. Set b1-08 [Run Command Select in PRG Mode] to accept or reject a Run command from an external source while in Programming Mode.
- -Set b1-08 = 0 [Disregard RUN while Programming] to reject the Run command from an external source while in Programming Mode (default).
- -Set b1-08 = 1 [Accept RUN while Programming] to accept the Run command from an external source while in Programming Mode.
- -Set b1-08 = 2 [Allow Programming Only at Stop] to prevent changes from Drive Mode to Programming Mode while the drive is operating.

Mode **Keypad Screen** Function Drive Mode Sets monitor items to display. Monitors Parameters Changes parameter settings. Pump Setup Shows Parameter Group Shortcuts, Pump Quick Setup, and Wizards. Shows modified parameters and fault history. Modified Parameters/Fault Log Saves parameters to the keypad as backup. Programming Mode Parameter Backup/Restore Auto-Tunes the drive. Auto-Tuning Changes initial settings. Initial Setup Diagnostic Tools Sets data logs and backlight.

Table 9.3 Drive Mode Screens and Functions

10 LED Status Ring

The LED Status Ring on the drive cover shows the drive operating status.

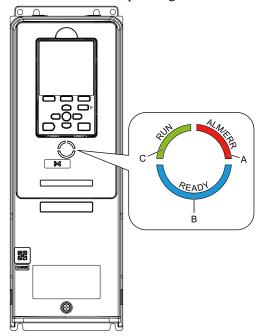

A - ALM/ERR

B - Ready

C - RUN

	LED	Status	Description	
		Illuminated	The drive detects a fault.	
A	ALM/ERR	Flashing */	The drive detects: • An alarm • An oPE parameter setting error • An Auto-Tuning error Note: If the drive detects a fault and an alarm at the same time, the LED will illuminate to identify a fault.	
		OFF	There are no drive faults or alarms.	
		Illuminated	The drive is operating or is prepared for operation.	
		Flashing */	The drive is in STo [Safe Torque OFF] condition.	
В	Ready	Flashing Quickly *1	The voltage of the main circuit power supply dropped, and only the external 24 V power supply is providing the power to the drive.	
		OFF	The drive detects a fault. There is no fault and the drive received a Run command, but the drive cannot operate. For example, in Programming Mode.	
		Illuminated	The drive is in regular operation.	
		Flashing */	 The drive is decelerating to stop. The drive received a Run command with a frequency reference of 0 Hz. The drive received a DC Injection Braking command. H1-xx = 70 [Drive Enable No Run Cycle] removed while HAND MFDI closed. When b1-02/b1-16 = 7/8/9 and QAUTO is pressed, waiting for RUN command (from External/Serial/Option). When b1-02/b1-16 = 7/8/9 and Run command given (from External/Serial/Option) and waiting for QAUTO press. When b1-02/b1-16 = 7/8/9 and the HAND MFDI is removed while the Run command is present. When b1-02/b1-16 = 0, QAUTO is pressed and H1-xx = 70 [Drive Enable No Run Cycle] is opened. 	
С	RUN	Flashing Quickly *1	 The drive received a Run command from the MFDI terminals when b1-02 = 0 [Run Command Selection 1 = Keypad] and you changed the setting to b1-02 = 1 or 7 [Digital Input or AUTO Command + Term Run]. The drive received a Run command from the MFDI terminals when the drive is not in Drive Mode. The drive received a Fast Stop command. The safety function shuts off the drive output. You pushed of Form on the keypad when the drive is operated from a REMOTE source. The drive is energized with an active Run command and b1-17 = 0 [Run Command at Power Up = Disregard Existing RUN Command]. The drive is set to coast-to-stop with timer (b1-03 = 3 [Stopping Method Selection = Coast to Stop with Timer]), and the Run command is disabled then enabled during the Run wait time. Drive Enable Command removed while HAND MFDI closed. Forested Emergency Override with HAND MFDI closed. Drive Enable input removed while an external Run command is present. b1-02/b1-16 = 1/2/3 and Y5-03 = 0 [HAND/AUTO Switchover During Run] and HAND MFDI is opened while external run input is present. Drive exits Emergency Override operation with an external Run command present. 	
1	OFF		The motor is stopped.	

^{*1} Refer to Figure 10.1 for the difference between "flashing" and "flashing quickly".

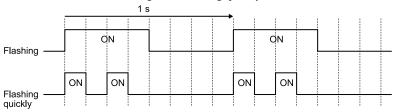


Figure 10.1 LED Flashing Statuses

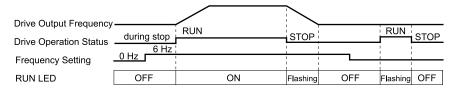


Figure 10.2 Relation between RUN LED and Drive Operation

11 Drive Start-Up Procedure

- 1. Confirm the drive and motor specifications.
- 2. Confirm the correct drive installation environment.
- 3. Mount the drive vertically.
- 4. Select the motor and power wires, wire strip length, crimp terminals, and branch circuit protection.
- 5. Remove the keypad, front cover, and Main Switch cover.
- 6. Install the motor wiring and power wiring.
- 7. Install the Main Switch cover, front cover, and keypad.
- 8. Energize the drive and confirm it is ready.
- 9. Set the motor rated current (FLA) from the motor nameplate in *E2-01*.
- 10. Set the drive for LOCAL control and check the motor rotation direction.

The drive is prepared to run the operation.


♦ Change Parameter Settings

This example shows how to change the setting value for C1-01 [Acceleration Time 1]. Do the steps in this procedure to set parameters for the application.


1. Push F2 (Home) to show the HOME screen.

Note:


- •When the drive is in HOME Mode, the screen shows [Home] in the upper right-hand corner of the screen.
- If [Home] is not shown above the F1 (Back).
- 2. Push F2 (Menu).

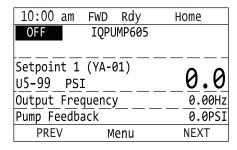


3. Push or to select [Parameters], then push .

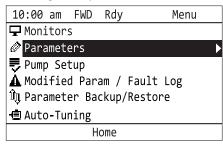

4. Push or to select [C Tuning], then push .

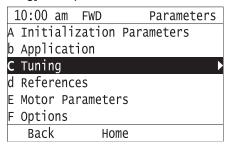


5. Push or to select [C1 Accel & Decel Time], then push .

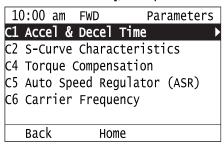


6. Push or to select C1-01, then push .

10:00 am FV		Parameters
Acceleration	Time 1	
C1-01	20.0	(20.0)sec
Deceleration	Time 1	
C1-02	10.0	(10.0)sec
Acceleration	Time 2	
C1-03	10.0	(10.0)sec
Back	Home	

7. Push or to select the specified digit, then push or to select the correct number.

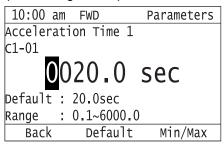

- Push Push (Default) to set the parameters to factory defaults.
- Push F3 (Min/Max) to show the minimum value or the maximum value on the display.
- 8. Push to keep the changes.

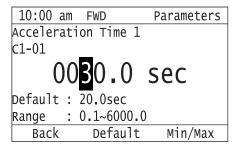

9. Continue to change parameters, then push F1 (Back), F2 (Home) to go back to the home screen after you change all the applicable parameters.


◆ Disable the Initial Setup Screen

Do the steps in this procedure to not show the initial start-up screen when the drive is energized.


1. Push F2 (Home) to show the HOME screen.

Note:


- When the drive is in HOME Mode, the screen shows [Home] in the upper right-hand corner of the screen.
- If the screen does not show [Home] for F2, push F1 (Back), and then push F2 to show [Home].
- 2. Push F2 (Menu).

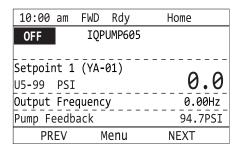


3. Push \(\times / \times \) to select [Initial Setup], then push \(\tilde{\pi} \).

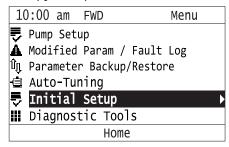

4. Push 🔨 / 🕶 to select [Disable Screen After Timeset], then push 🕘.

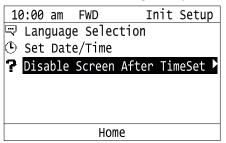

5. Push / to select [TURN OFF power up setup screen], then push .

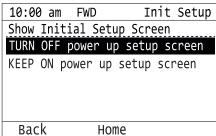

Control Circuit Terminal Block Functions

Hx-xx parameters set functions for the multi-function input and output terminals.

A WARNING Sudden Movement Hazard. Correctly wire and test all control circuits to make sure that the control circuits operate correctly. If you use a drive that has incorrect control circuit wiring or operation, it can cause death or serious injury.

AWARNING Sudden Movement Hazard. Check the I/O signals and the external sequences for the drive before you set the Application Preset function. When you set the Application Preset function (A1-06 \neq 0), it changes the I/O terminal functions for the drive and it can cause equipment to operate unusually. This can cause serious injury or death.

NOTICE Damage to Equipment. Do not energize and de-energize the drive more frequently than one time each 30 minutes. If you frequently energize and de-energize the drive, it can cause drive failure.

NOTICE Damage to Equipment. Do not cycle the Main Switch more than 6000 times. If you cycle the Main Switch more times than the limit, it will cause the contact failure, or you cannot open or close the Main Switch.

NOTICE Damage to Equipment. Make sure that you stop the motor before you turn ON/OFF the Main Switch. If you turn ON/OFF the Main Switch during run, it can cause Main Switch failure.

Input Terminals

Refer to Table 11.1 for a list of input terminals and functions.

Table 11.1 Multi-function Input Terminals

Туре	Terminal	Name (Default)	Function (Signal Level)	
	S1	MFDI selection 1 (ON: Forward RUN (2-Wire) OFF: Stop)	Multi-Function Digital Input • Photocoupler	
	S2	MFDI selection 2 (Not Used)	• 24 V, 6 mA Note:	
	S3	MFDI selection 3 (External Pump Fault (NO-@Run-Coast))	Install the wire jumpers between terminals SC-SP and SC-SN to set the MFDI power supply (sinking/sourcing mode or internal/external power supply). • Sinking Mode: Install a jumper between terminals SC and SP.	
	S4	MFDI selection 4 (Fault Reset)	NOTICE Damage to Equipment. Do not close the circuit between terminals SC-SN. If you close the circuits between terminals	
	S5	MFDI selection 5 (PID Setpoint Selection 1)	SC-SP and terminals SC-SN at the same time, it will cause damage to the drive.	
MFDI	S6	MFDI selection 6 (HAND Mode)	Sourcing Mode: Install a jumper between terminals SC and SN. NOTICE Damage to Equipment. Do not close the circuit	
	S7	MFDI selection 7 (HAND Mode 2)	between terminals SC-SP. If you close the circuits between termin SC-SP and terminals SC-SN at the same time, it will cause dama to the drive.	
	S8	MFDI selection 8 (Not Used)	• External power supply: No jumper necessary between terminals SC-SN and terminals SC-SP.	
	SN	MFDI power supply 0 V	MFDI power supply, 24 V (maximum 150 mA)	
	SC	MFDI selection common	NOTICE Damage to Equipment. Do not close the circuit	
	SP	MFDI power supply +24 Vdc	between terminals SP-SN. If you close the circuits between terminals SC-SP and terminals SC-SN at the same time, it will cause damage to the drive.	
	Н1	Safe Disable input 1	Safe Disable Input	
Safe Disable Input	Н2	Safe Disable input 2	Remove the jumper between terminals H1-HC and H2-HC to use the Safe Disable input. • 24 V, 6 mA • ON: Normal operation • OFF: Coasting motor • Internal impedance 4.7 kΩ • OFF Minimum OFF time of 2 ms.	
	НС	Safe Disable function common	Safe Disable function common NOTICE Do not close the circuit between terminals HC and SN. A closed circuit between these terminals will cause damage to the drive.	

Туре	Terminal	Name (Default)	Function (Signal Level)		
	RP	Multi-function pulse train input (Frequency Reference)	 Response frequency: 0 Hz to 32 Hz H level duty: 30% to 70% H level voltage: 3.5 V to 13.2 V L level voltage: 0.0 V to 0.8 V Input impedance: 3 kΩ 		
	+V	Power supply for frequency setting	Power Supply for Multi-Function Analog Input • 10.5 V (allowable current 20 mA maximum)		
Master	Al	MFAI 1 (Frequency Reference)	Voltage input or current input Select terminal A1 with Jumper switch S1 and H3-01 [Terminal A1 Signal Level Select]. • 0 V to 10 V/100% (input impedance: 20 kΩ) • 4 mA to 20 mA/100%, 0 mA to 20 mA/100% (input impedance: 250 Ω)		
Frequency Reference	A2	MFAI 2 (PID Feedback)	Voltage input or current input Select terminal A2 with Jumper switch S1 and H3-09 [Terminal A2 Signal Level Select] • 0 V to 10 V/100% (input impedance: 20 kΩ) • 4 mA to 20 mA/100%, 0 mA to 20 mA/100% (input impedance: 250 Ω)		
	A3	MFAI 3 (HAND Frequency Reference)	Voltage input or current input Select terminal A3 with Jumper switch S1 and H3-05 [Terminal A3 Signal Level Select] • 0 V to 10 V/100% (input impedance: 20 kΩ) • 4 mA to 20 mA/100%, 0 mA to 20 mA/100% (input impedance: 250 Ω)		
	AC	Frequency reference common	Signal Ground for Multi-Function Analog Input • 0 V		
	FE	Connecting shielded cable	Frame Earth		

■ Output Terminals

Refer to Table 11.2 and Table 11.3 for a list of output terminals and functions.

Table 11.2 Control Circuit Output Terminals

Туре	Terminal	Name (Default) Function (Signal Level)			
	MA	N.O. output (Fault)	Drive Fault Signal Output Relay output		
Fault Relay Output	МВ	N.C. output (Fault)	30 Vdc, 10 mA to 2 A 250 Vac, 10 mA to 2 A		
	MC	Digital output common	Minimum load: 5 V, 10 mA (Reference value)		
	M1	MFDO	Multi Function Digital Output		
	M2	(During Frequency Output)	Relay output 30 Vdc, 10 mA to 2 A		
	M3		• 250 Vac, 10 mA to 2 A		
MFDO	M4	MFDO (Pressure Reached)	 Minimum load: 5 V, 10 mA (Reference value) Note: Do not set functions that frequently switch ON/OFF to MFDO (M1 to M4) because this will decrease the performance life of the relay contacts. Yaskawa estimates switching life at 200,000 times (assumes 1 A, resistive load). 		
	MD	N.O. output (Fault)	Multi Function Digital Output Relay output		
	ME	N.C. output (Fault)	 30 Vdc, 10 mA to 2 A 250 Vac, 10 mA to 2 A Minimum load: 5 V, 10 mA (Reference value) 		
	MF	Digital output common	- william road. 5 v, 10 m/z (reference value)		

Table 11.3 Control Circuit Monitor Output Terminals

Туре	Terminal	Name (Default) Function (Signal Level)		
	FM	MFAO 1 (Output frequency)	Multi Function Analog Output Select voltage or current output.	
Monitor Output	AM	MFAO 2 (Output current)	 0 V to 10 V/0% to 100% 4 mA to 20 mA (receiver recommended impedance: 250 Ω) Note: Select with jumper switch S5 and H4-07 [Terminal FM Signal Level Select] or H4-08 [Terminal AM Signal Level Select]. 	
	AC	Monitor common	0 V	
External Power Supply Output +P External power supply Power supply for external devices. • 24 V (150 mA maximum)		11 7		

■ External Power Supply Input Terminals

Refer to Table 11.4 for a list of the functions of the external power supply input terminals.

Table 11.4 External Power Supply Input Terminals

Туре	Terminal	Name (Default)	Function
External Power Supply Input Terminals	PS	External 24 V power supply input	Supplies backup power to the drive control circuit, keypad, and option board. 21.6 VDC to 26.4 VDC, 700 mA
reminais	AC	External 24 V power supply ground	0 V

■ Serial Communication Terminals

Refer to Table 11.5 for a list of serial communication terminals and functions.

Table 11.5 Serial Communication Terminals

Туре	Terminal	Terminal Name	Function (Signal Level)	
	D+	Communication input/output (+)	MEMOBUS/Modbus communications Use an RS-485 cable to connect the drive.	RS-485 MEMOBUS/Modbus communications: Maximum 115.2 kbps
Serial Communication	D-	Communication output (-)	Note:	
	AC	Signal ground	0 V	
	FE	Option card ground		-

Control Circuit Terminal Configuration

The control circuit terminals are in the positions shown in Figure 11.1.

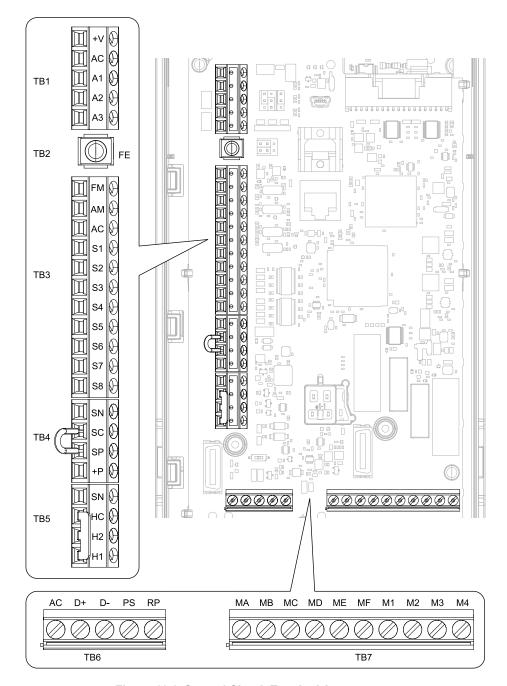


Figure 11.1 Control Circuit Terminal Arrangement

The tightening torque for the terminal screws is shown on the reverse side or the lower front side of the front cover.

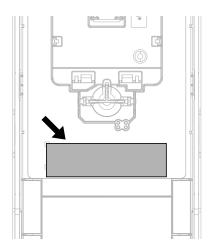


Figure 11.2 Tightening Torque Display Location (Reverse Side of Front Cover)

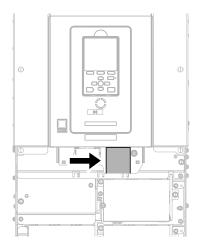


Figure 11.3 Tightening Torque Display Location (Lower Front Side of Front Cover)

■ Control Circuit Wire Gauges and Tightening Torques

Use the tables in this section to select the correct wires. Use shielded wire to wire the control circuit terminal block. Use crimp ferrules on the wire ends to make the wiring procedure easier and more reliable.

Table 11.6 Control Circuit Wire Gauges and Tightening Torques

				Bare Wire		Crimp Ferrule	
Terminal Block	Terminal	Screw Size	Tightening Torque N⋅m (lbf⋅in)	Recommended Gauge mm² (AWG)	Applicable Gauge mm² (AWG)	Recommended Gauge mm² (AWG)	Applicable Gauge mm² (AWG)
TB1	+V, AC, A1, A2, A3						
TB3	FM, AM, AC, S1 - S8				Stranded wire:		
TB4	SN, SC, SP, +P		0.5 - 0.6	0.75	0.25 - 1.5 (24 - 16)	0.75	0.25 - 1.5
TB5	SN, HC, H1, H2		(4.4 - 5.3)	(18)	Solid wire:	(18)	(24 - 16)
TB6	AC, D+, D-, PS, RP				0.25 - 1.5 (24 - 16)		
TB7	MA, MB, MC, MD, ME, MF, M1 - M4	M3					
TB2	FE		1.0 - 1.2 (8.85 - 10.62)	0.75 (18)	Stranded wire: 0.12 - 0.75 (26 - 18) Solid wire: 0.2 - 1.5 (26 - 16)	0.75 (18)	0.25 - 1.5 (24 - 16)

Crimp Ferrules

Attach an insulated sleeve when you use crimp ferrules. Refer to Table 11.7 for the recommended external dimensions and model numbers of the crimp ferrules.

Use the CRIMPFOX 6, a crimping tool made by PHOENIX CONTACT.

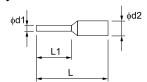


Figure 11.4 External Dimensions of Crimp Ferrules

Table 11.7 Crimp Ferrule Models and Sizes

Wire Gauge mm² (AWG)	Model	L (mm)	L1 (mm)	φd1 (mm)	φd2 (mm)
0.25 (24)	AI 0.25-8YE	12.5	8	0.8	2.0
0.34 (22)	AI 0.34-8TQ	12.5	8	0.8	2.0
0.5 (20)	AI 0.5-8WH AI 0.5-8OG	14	8	1.1	2.5
0.75 (18)	AI 0.75-8 GY	14	8	1.3	2.8

Wiring the Control Circuit Terminal

A WARNING Electrical Shock Hazard. Do not remove covers or touch circuit boards while the drive is energized. If you touch the internal components of an energized drive, it can cause serious injury or death.

NOTICE

Do not let wire shields touch other signal lines or equipment. Insulate the wire shields with electrical tape or shrink tubing. If you do not insulate the wire shields, it can cause a short circuit and damage the drive.

Note:

- Isolate control circuit wiring from main circuit wiring (terminals R/L1, S/L2, T/L3, U/T1, V/T2, W/T3, -, +1) and other high-power wiring. If the control circuit wires are adjacent to the main circuit wires, electrical interference can cause the drive or the devices around the drive to malfunction.
- Isolate contact output terminals MA, MB, MC and M1-M4, MD, ME, MF from other control circuit wiring. If the output terminal wires are adjacent to other control circuit wires, electrical interference can cause the drive or devices around the drive to malfunction.
- •Use a UL Listed Class 2 Power Supply to connect external power to the control terminals. If the power supply for peripheral devices is incorrect, it can cause a decrease in drive performance.
- Connect the shield of shielded cable to the applicable ground terminal. If the grounding is not correct, electrical interference can cause the drive or devices around the drive to malfunction.


Correctly ground the drive terminals and complete main circuit wiring before you wire the control circuit. Remove the keypad and front cover.

1. Refer to Figure 11.5 and wire the control circuit.

A WARNING Fire Hazard. Tighten all terminal screws to the correct tightening torque. Connections that are too loose or too tight can cause incorrect operation and damage to the drive. Incorrect connections can also cause death or serious injury from fire.

Note:

- Use shielded wires and shielded twisted-pair wires for the control circuit terminal wiring. If the grounding is not correct, electrical interference can cause the drive or devices around it to malfunction.
- Do not use control circuit wiring that is longer than 50 m (164 ft) to supply the frequency reference with an analog signal from a remote source. Wiring that is too long can cause unsatisfactory system performance.

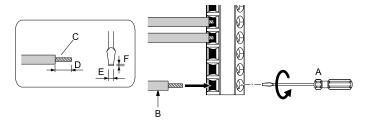

- A Loosen the screws and put the wire into the opening on the terminal block.
- B Wire with a crimp ferrule attached, or use wire that is not soldered with the core wires lightly twisted.
- C Pull back the shielding and lightly twist the end with your fingers to keep the ends from fraving.
- D If you do not use crimp ferrules, remove approximately 5.5 mm (0.21 in) of the covering at the end of the wire.
- E Blade width of 2.5 mm (0.1 in) or less
- F Blade depth of 0.4 mm (0.01 in) or less


Figure 11.5 Wiring Procedure for the Control Circuit

▲ WARNING Fire Hazard. Tighten all terminal screws to the correct tightening torque. Connections that are too loose or too tight can cause incorrect operation and damage to the drive. Incorrect connections can also cause death or serious injury from fire.

NOTICE Do not solder the core wire. Soldered wire connections can become loose over time and cause unsatisfactory drive performance.

Note:

- Refer to Figure 11.6 for information to prepare terminal ends of the shielded wire.
- · Connect the shield to terminal FE of the drive.

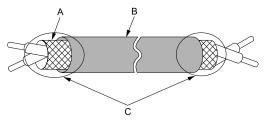

- A Connect the shield to terminal FE of the drive.
- C Insulate with electrical tape or shrink tubing.


B - Sheath

Figure 11.6 Prepare the Ends of Shielded Wire

Note:

If you use multi-conductor shielded cable that is too thick to put through the hook on the drive, you can remove the cable sheath.

NOTICE Damage to Equipment. When you remove the cable sheath, also remove the shield. If you keep the shield on the wire, it can cause a short circuit and damage to the drive.

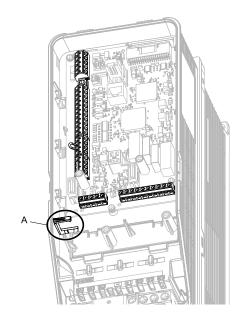

A - Hook

2. Put the cables through the clearance of the drive, opening, and knock-out holes.

Damage to Equipment. Do not run low-voltage control wiring in the same conduit as the main circuit or motor wiring. Failure to comply may result in unusual operation or drive faults due to electrical noise interference.

2011 - 2059 2075 - 2114 2143, 2169 4124, 4156 4005 - 4065 4077 - 4096 A - Opening A - Opening

Table 11.8 Control Circuit Wiring

 $\label{eq:covers} \textbf{3.} \quad \text{Install two front covers and the keypad to their initial positions}.$

Switches and Jumpers on the Terminal Board

The terminal board has switches to adapt the drive I/Os to the external control signals as shown in Figure 11.7. Set the switches to select the functions for each terminal.

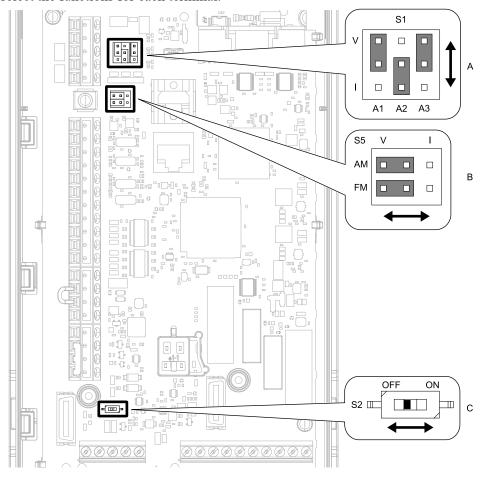


Figure 11.7 Locations of Switches

Table 11.9 I/O Terminals and Switches Functions

Position	Switch	Terminal	Function	Default Setting
A	Jumper switch S1	A1, A2, A3	Sets terminals A1 to A3 to voltage or current output.	A1: V (voltage input) A2: I (current input) A3: V (voltage input)
В	Jumper switch S5	FM, AM	Sets terminals FM and AM to voltage or current output	FM: V (voltage output) AM: V (voltage output)
С	DIP switch S2	-	Enables and disables the termination resistor of MEMOBUS/ Modbus communications.	OFF

Control I/O Connections


This section gives information about the settings for the listed control circuit I/O signals.

- MFDI (terminals S1 to S8)
- MFDO (terminals M1 to M4 and MD to MF)
- MFAI (terminals A1 to A3)
- MFAO (terminals FM, AM)
- MEMOBUS/Modbus communications (terminals D+, D-, AC)

Set Sinking Mode/Sourcing Mode

Close the circuit between terminals SC-SP and SC-SN to set the sinking mode/sourcing mode and the internal/external power supply for the MFDI terminals. The default setting for the drive is internal power supply sinking mode.

NOTICE Damage to Equipment. Do not close the circuit between terminals SP-SN. If you close the circuits between terminals SC-SP and terminals SC-SN at the same time, it will cause damage to the drive.

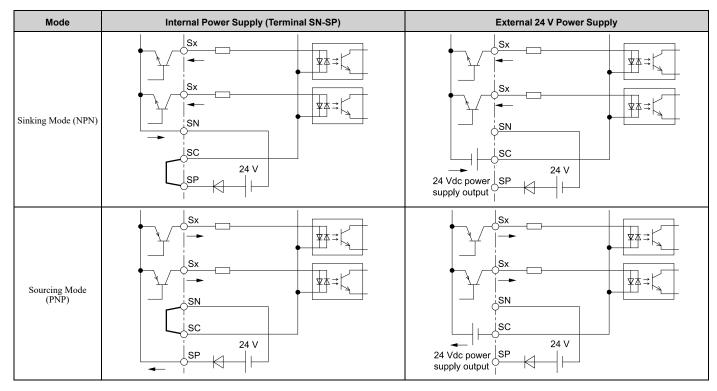

■ Set Input Signals for MFAI Terminals A1 to A3

Use terminals A1 to A3 to input a voltage or a current signal. Set the signal type as shown in Table 11.10.

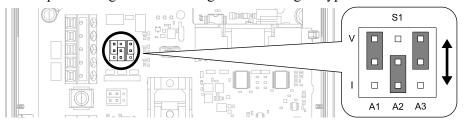


Figure 11.8 Location of Jumper Switch S1

Table 11.10 MFAI Terminals A1 to A3 Signal Settings

Townsianal		Parameter		
Terminal	Types of Input Signals	No.	Signal Level	
A1 Voltage input (Default) Current input	5 .	112.01	0: 0 V to 10 V/0% to 100% (input impedance: 20 k Ω)	
	H3-01	2: 4 mA to 20 mA/0% to 100% (input impedance: 250 Ω) 3: 0 mA to 20 mA/0% to 100% (input impedance: 250 Ω)		
A2	Voltage input		0: 0 V to 10 V/0% to 100% (input impedance: 20 $k\Omega)$	
	Current input (Default)	H3-09	2: 4 mA to 20 mA/0% to 100% (input impedance: 250 Ω) 3: 0 mA to 20 mA/0% to 100% (input impedance: 250 Ω)	

Townings	Turne of lawy t Cinnels	Parameter		
Terminal	Types of Input Signals	No.	Signal Level	
	Voltage input (Default)		0 : 0 V to 10 V/0% to 100% (input impedance: 20 $k\Omega)$	
A3	Current input	H3-05	2: 4 mA to 20 mA/0% to 100% (input impedance: 250 Ω) 3: 0 mA to 20 mA/0% to 100% (input impedance: 250 Ω)	

Note:

Set *H3-02*, *H3-10*, *H3-05* = 0 [Terminal A1 Function Selection, Terminal A2 Function Selection, Terminal A3 Function Selection = Frequency Reference] to set A1 to A3 to frequency reference. The drive will add the analog input values together to make the frequency reference.

Set Output Signals for MFAO Terminals FM, AM

Set the signal type for terminals AM and FM to voltage or current output. Use jumper switch S5 and H4-07, H4-08 [Terminal FM Signal Level Select, Terminal AM Signal Level Select] to set the signal type.

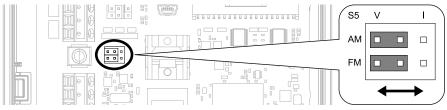


Figure 11.9 Location of Jumper Switch S5

Terminal	Times of Output Signals	Lumman Curitala CE	Parameter		
rerminai	Types of Output Signals	Jumper Switch S5	No.	Signal Level	
	Voltage output (Default)	V I AM (ÖÖÖ) FM (ÖÖ)		0: 0 V to 10 V	
FM	Current output	V I AM OOO FM OOO	H4-07	2: 4 mA to 20 mA	
	Voltage output (Default)	V I AM OOO FM OOO		0: 0 V to 10 V	
AM	Current output	V I AM O O O FM (O O)O	H4-08	2: 4 mA to 20 mA	

■ Switch ON Termination Resistor for MEMOBUS/Modbus Communications

When the drive is the last slave in a MEMOBUS/Modbus communications, set DIP switch S2 to the ON position. This drive has a built-in termination resistor for the RS-485 interface.

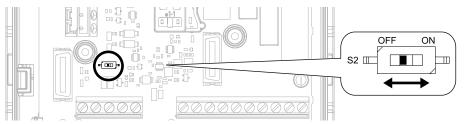


Figure 11.10 Location of DIP Switch S2

Table 11.11 RS-485 Communications Termination Resistor Setting

DIP Switch S2	Description
ON	The built-in termination resistor is ON.
OFF (Default)	The built-in termination resistor is OFF.

12 Drive Control and Programming

Selecting the Control Method

This section gives information about these basic control methods:

- V/f Control
- EZ Open Loop Vector Control (EZOLV) for induction motors only

Refer to the Technical Reference for information about speed feedback and Permanent Magnet/Synchronous Reluctance motor control methods.

Use A1-02 [Control Method Selection] to select the most applicable control method for your application.

Control Method	A1-02 Setting	Main Applications
V/f	0	 General variable-speed. Best method to operate more than one motor from one drive. When motor parameters are not available.
EZOLV	8	General variable-speed No high precision, no high speed response, and no speed feedback

Auto-Tuning

A WARNING Injury to Personnel. Rotational Auto-Tuning rotates the motor at 50% or more of the motor rated frequency. Make sure that there are no issues related to safety in the area around the drive and motor. Increased motor frequency can cause serious injury or death.

A WARNING Sudden Movement Hazard. Before you do Rotational Auto-Tuning, disconnect the load from the motor. The load can move suddenly and cause serious injury or death.

Auto-Tuning automatically sets parameters on the drive connected to the motor. You must input some parameters individually during Auto-Tuning.

- 1. Select [Auto-Tuning] from the main menu to select the Auto-Tuning Mode.
- 2. Use the information in Table 12.1 and Table 12.2 to select the correct Auto-Tuning for your application.
- 3. Push (QAUTO) to start Auto-Tuning.

 Refer to the Technical Reference for more information about Auto-Tuning.

Table 12.1 Auto-Tuning Mode Selection

Туре	Application Conditions and Benefits	A1-02 = 0 [Control Method Selection = V/f]
Rotational Auto-Tuning	Recommended tuning mode for the most accurate results. Select this tuning mode when: You can decouple the motor from the load. You cannot decouple the motor from the load, but the motor load is less than 30%.	Yes
Stationary Line-Line Resistance	Select this tuning mode when: The drive and motor capacities are different. The drive is in V/f Control. You have replaced the drive and motor.	Yes

Table 12.2 EZ Tuning Mode Selection

Туре	Application Conditions and Benefits	A1-02 = 8 [EZOLV]
Motor Parameter Setting	Set the motor parameters.	Yes
Line-to-Line Resistance	Select this tuning mode after you replace the drive, motor, and motor cables.	Yes

Drive Parameters

Icon	Description	
V/f	The parameter is available when operating the drive with V/f Control.	
OLV/PM	The parameter is available when operating the drive with Open Loop Vector Control for PM.	

Icon	Description
The parameter is available when operating the drive with EZ Open Loop Vector Control.	
RUN	The parameter can be changed settings during run.

Note:

Gray icons identify parameters that are not available in the specified control method.

Refer to the following table when setting the most important parameters.

No. (Hex.)	Name	Description
A1-02	Control Method Selection	V/f OLV/PM EZOLV
(0102)		Sets the control method for the drive application and the motor.
,		0 : V/f Control
		5 : PM Open Loop Vector
		8 : EZ Vector Control
A1-03	Initialize Parameters	V/f OLV/PM EZOLV
(0103)	initiarize i arameters	Sets parameters to default values.
(0103)		0 : No Initialization
		1110 : User Initialization
		2220 : 2-Wire Initialization
		3330 : 3-Wire Initialization
		6008 : Pressure Control
		6009 : Pump Down Level Control
		6011 : Vertical Turbine Pressure Ctl
		6012 : Pivot Panel Vert. Turbine Ctl
		6013 : Advanced Pressure Control
		6014 : Pivot Panel Submersible
		6015 : Pivot Panel Pump Command
		6016: Pivot Panel Sub. Pump Command
		7005 : Serial Comms External HOA
		7006 : Serial Comms HOA Keys
		7770 : General Purpose
		7771 : Sub. Pump General Purpose
b1-01	Frequency Reference Selection 1	V/f OLV/PM EZOLV
(0180)		Sets the input method for the frequency reference.
,		0 : Keypad
		1 : Analog Input
		2 : Memobus/Modbus Communications
		3 : Option PCB
		4 : Pulse Train Input
b1-02	Run Command Selection 1	V/f OLV/PM EZOLV
(0181)	Tun Communa Sciedusii i	Sets the input method for the Run command.
(****)		0 : Keypad
		1 : Digital Input
		2 : Serial Communications
		3 : Option PCB
		7 : AUTO Command + Term Run
		8 : AUTO Command + Serial Run
		9 : AUTO Command + Option Run
1.1.02	Chamina Made d Calastian	V/f OLV/PM EZOLV
b1-03 (0182)	Stopping Method Selection	Sets the method to stop the motor after removing a Run command or entering a Stop command.
(0182)		0 : Ramp to Stop
		1 : Coast to Stop
		2 : DC Injection Braking to Stop
		3 : Coast to Stop with Timer
		V/f OLV/PM EZOLV
b1-04	Reverse Operation Selection	
(0183)		Sets the reverse operation function. Disable reverse operation in fan or pump applications where reverse rotation is dangerous.
		0 : Reverse Enabled
		1 : Reverse Disabled
b1-11	Run Delay @ Stop (Backspin)	V/f OLV/PM EZOLV
(01DF)		Sets the amount of time that the drive will not accept the Run command again after the Run command is removed.

No. (Hex.)	Name	Description				
b1-14	Phase Order Selection	V/f OLV/PM EZOLV				
(01C3)		Sets the phase order for output terminals U/T1, V/T2, and W/T3. This parameter can align the Forward Run command from the drive and the forward direction of the motor without changing wiring. 0: Standard 1: Switch Phase Order				
b5-01	PID Mode Setting	V/f OLV/PM EZOLV				
(01A5)		Sets the type of PID control. 0 : Disabled 1 : Standard				
b5-02 (01A6) RUN	Proportional Gain (P)	V/f OLV/PM EZOLV Sets the proportional gain (P) that is applied to PID input.				
b5-03 (01A7) RUN	Integral Time (I)	V/f OLV/PM EZOLV Sets the integral time (I) that is applied to PID input.				
b5-09 (01AD)	PID Output Level Selection	V/f OLV/PM EZOLV Sets the polarity of the PID output. 0 : Normal Output (Direct Acting) 1 : Reverse Output (Reverse Acting)				
C1-01 (0200) RUN	Acceleration Time 1	V/f OLV/PM EZOLV Sets the length of time to accelerate from zero to maximum output frequency.				
C1-02 (0201) RUN	Deceleration Time 1	V/f OLV/PM EZOLV Sets the length of time to decelerate from maximum output frequency to zero.				
E1-01 (0300)	Input AC Supply Voltage	V/f OLV/PM EZOLV Sets the drive input voltage.				
E1-04 (0303)	Maximum Output Frequency	V/f OLV/PM EZOLV Sets the maximum output frequency for the V/f pattern.				
E1-05 (0304)	Maximum Output Voltage	V/f OLV/PM EZOLV Sets the maximum output voltage for the V/f pattern.				
E1-06 (0305)	Base Frequency	V/f OLV/PM EZOLV Sets the base frequency for the V/f pattern.				
E1-09 (0308)	Minimum Output Frequency	V/f OLV/PM EZOLV Sets the minimum output frequency for the V/f pattern.				
E2-01 (030E)	Motor Rated Current (FLA)	V/f OLV/PM EZOLV Sets the motor rated current in amps.				
E2-11 (0318)	Motor Rated Power	V/f OLV/PM EZOLV Sets the motor rated output in the units from o1-58 [Motor Power Unit Selection].				
L5-01 (049E)	Number of Auto-Restart Attempts	V/f OLV/PM EZOLV Sets the number of times that the drive will try to restart.				
L5-04 (046C)	Interval Method Restart Time	V/f OLV/PM EZOLV Sets the time interval between each Auto Restart attempt.				
L5-40 (3670)	Low Feedback Flt Retry Selection					
L5-41 (3671)	Hi Feedback Flt Retry Selection	1: Retry Vii OLV/PM EZOLV Sets the drive to do an Auto Restart when the drive detects an HFB [High Feedback Sensed] fault. 0: No Retry 1: Retry				
L5-42 (3672)	Feedback Loss Fault Retry Select	V/f OLV/PM EZOLV Sets the drive to try an Auto Restart when the drive detects an FDBKL [WIRE Break] fault. 0: No Retry 1: Retry				
L5-43 (3673)	LowFeedback Fault Retry Attempts	V/f OLV/PM EZOLV Sets the number of restart attempts when the drive detects an LFB Low Feedback Sensed condition.				

No. (Hex.)	Name	Description				
L5-44	Hi Feedback Fault Retry Attempts	V/f OLV/PM EZOLV				
(3674)		Sets the number of restart attempts when the drive detects an HFB High Feedback Sensed condition.				
L5-46	Low Feedback Fault Restart Time	V/f OLV/PM EZOLV				
(3676)		Sets the time interval between each LFB Low Feedback Sensed auto-restart attempt.				
L5-47	Hi Feedback Fault Restart Time	V/f OLV/PM EZOLV				
(3677)		Sets the time interval between each HFB High Feedback Sensed auto-restart attempt.				
L5-48	Feedback Loss Fault Restart Time	V/f OLV/PM EZOLV				
(3678)		Sets the time interval between each FDBKL Feedback Loss auto-restart attempt.				
L5-50	Setpoint Not Met Fault Retry Sel	V/f OLV/PM EZOLV				
(367A)		Sets the drive to try an Auto Restart when it detects an NMS [SetPoint Not Met] fault.				
		0 : No Retry 1 : Retry				
7.5.51	I CD: E ID CI	V/f OLV/PM EZOLV				
L5-51 (367B)	Loss of Prime Fault Retry Select	Sets the drive to try an Auto Restart if it detects an LOP [Loss Of Prime] fault.				
(307B)		0: No Retry				
		1 : Retry				
		2 : Infinite Retries				
L5-52	Over Cycle Fault Retry Selection	V/f OLV/PM EZOLV				
(367C)		Sets the drive to try an Auto Restart if it detects an POC [Pump Over Cycle] fault.				
		0 : No Retry				
		1 : Retry 2 : Infinite Retries				
T.C. C.4	C. C. C. M. D. C. Au	V/f OLV/PM EZOLV				
L5-54 (367E)	Setpoint Not Met Retry Attempts	Sets the number restart attempts when the drive detects an <i>NMS Setpoint Not Met</i> condition.				
L5-55	I fD-i Flt D-t Attt-	V/f OLV/PM EZOLV				
(367F)	Loss of Prime Flt Retry Attempts	Sets the number restart attempts when the drive detects an LOP Loss of Prime condition. If L5-51 = 2 [Loss of Prime				
(30/1)		Fault Retry Select = Infinite Retries], the drive will ignore this parameter.				
L5-56	Over Cycle Fault Retry Attempts	V/f OLV/PM EZOLV				
(3680)		Sets the number of restart attempts when the drive detects an POC Pump Over Cycle condition.				
L5-58	Setpoint Not Met Restart Time	V/f OLV/PM EZOLV				
(3682)		Sets the time interval between each NMS Setpoint Not Met auto-restart attempt.				
L5-59	Over Cycle Fault Restart Time	V/f OLV/PM EZOLV				
(3683)		Sets the time interval between each POC Pump Over Cycle auto-restart attempt.				
o1-24 to o1-35	Custom Monitor 1 to 12	V/f OLV/PM EZOLV				
(11AD to 11B8)		Sets Custom Monitors to be displayed on the home screen. A setting of 0 removes the custom monitor from the cycling list.				
RUN						
Y1-01	Multiplex Mode	V/f OLV/PM EZOLV				
(3C00)		Sets the base operation mode of the drive controller. 0: Drive Only				
		1 : Contactor Multiplex				
		3 : Network Multiplex				

No. (Hex.)	Name	Description				
Y1-02 (3C01)	System Units	Sets the units the drive will use for standard PID. 0: "WC: inches of water column 1: PSI: pounds per square inch 2: GPM: gallons/min 3: °F: Fahrenheit 4: ft³/min: cubic feet/min 5: m³/h: cubic meters/hour 6: L/h: liters/hour 7: L/s: liters/sec 8: bar: bar 9: Pa: Pascal 10: °C: Celsius				
Y1-04	Sleep Wake-up Level	11 : m: meters 12 : ft: feet 13 : L/min: liters/min 14 : m³/min: cubic meters/min 15 : "Hg: Inch Mercury 16 : kPa: kilopascal 25 : Flow (Use Y6-04) 48 : %: Percent 49 : Custom(Y1-32~34) 50 : None V/f OLV/PM EZOLV				
(3C03) RUN Y1-05	Sleep Wake-up Level Delay Time	Sets the level that feedback must be less than for the time set in Y1-05 [Sleep Wake-up Level Delay Time] to start the system. This level also sets the wake up level when the drive is in Sleep Mode. When Y1-04 < 0, the feedback level must decrease this amount to less than the setpoint. V/f OLV/PM EZOLV				
(3C04) RUN		Sets the drive to start the System again when the feedback decreases to less than Y1-04 [Sleep Wake-up Level] for the tile set in this parameter.				
Y1-06 (3C05) RUN	Minimum Speed	V/f OLV/PM EZOLV Sets the minimum frequency at which the drive will run. The drive applies this setting to HAND and AUTO Modes.				
Y1-08 (3C07) RUN	Low Feedback Level	V/f OLV/PM EZOLV Sets the lower detection level for the PID feedback.				
Y1-09 (3C08) RUN	Low Feedback Lvl Fault Dly Time	V/f OLV/PM EZOLV Sets the delay time for the drive to detect an LFB [Low Feedback Sensed] fault after the feedback level decreases to les than the value set in Y1-08 [Low Feedback Level].				
Y1-10 (3C09)	Low Feedback Selection	Sets the drive response when the feedback decreases to less than Y1-08 [Low Feedback Level] for longer than the time in Y1-09 [Low Feedback Lvl Fault Dly Time]. 0: Fault (and Digital Output) 1: Alarm (and Digital Output) 2: Digital Output Only				
Y1-11 (3C0A) RUN	High Feedback Level	V/f OLV/PM EZOLV Sets the upper detection level for the PID feedback.				
Y1-12 (3C0B) RUN	High Feedback Lvl Fault Dly Time	VIT OLVIPM EZOLV Sets the delay time between when the drive detects high feedback until the drive faults on an HFB [High Feedback Sensed] fault.				
Y1-13 (3C0C)	High Feedback Selection	Sets the drive response when the feedback increased to more than Y1-11 [High Feedback Level] for longer than the time set in Y1-12 [High Feedback Lvl Fault Dly Time]. 0: Fault (and Digital Output) 1: Alarm (and Digital Output) 2: Digital Output Only				
Y1-15 (3C0E) RUN	Maximum Setpoint Difference	Vif OLVIPM EZOLV Sets a percentage of difference between the setpoint and the feedback. The difference must be more than this value for time set in Y1-16 [Not Maintaining Setpoint Time] to trigger the drive response set in Y1-17 [Not Maintaining Setpoint Set].				

No. (Hex.)	Name	Description				
Y1-16 (3C0F) RUN	Not Maintaining Setpoint Time	Sets the delay time before a Setpoint Not Met condition occurs. The drive must detect the setpoint difference set in <i>Y1-15</i> [Maximum Setpoint Difference] before the timer will start.				
Y1-17 (3C10)	Not Maintaining Setpoint Sel	V/f OLV/PM EZOLV Sets the drive response when the feedback increases to more or decreases to less than the setpoint for more than the amount set in YI-15 [Maximum Setpoint Difference]. 0: Fault (and Digital Output) 1: Alarm (and Digital Output) 2: Digital Output Only				
Y1-18 (3C11)	Prime Loss Detection Method	Vif OLV/PM EZOLV Sets the units and quantity that the drive will use to determine LOP [Loss of Prime]. 0: Current (A) 1: Power (kW) 2: Torque (%)				
Y1-19 (3C12) RUN	Prime Loss Level	VIT OLV/PM EZOLV Sets the level to detect the LOP [Loss of Prime] in the pump during RUN or Sleep Boost Mode.				
Y1-20 (3C13) RUN	Prime Loss Time	Vif OLV/PM EZOLV Sets the delay time before the drive detects an LOP [Loss of Prime] condition. The timer starts when the drive detects the conditions in Y1-18 [Prime Loss Detection Method] and Y1-19 [Prime Loss Level].				
Y1-22 (3C15)	Prime Loss Selection	Vii OLV/PM EZOLV Sets the drive response when the drive is in the Loss of Prime condition. 0: Fault (and Digital Output) 1: Alarm (and Digital Output) 2: Digital Output Only				
Y1-23 (3C16)	Prime Loss Max Restart Time	V/f OLV/PM EZOLV Sets the time in minutes that the drive will wait before it tries a restart after a restart fails or after it does not do a restart because of a fault.				
Y2-01 (3C64)	Sleep Level Type	Sets the data source that the drive uses to know when to activate the Sleep Function. 0: Output Frequency 1: Output Current 2: Feedback 3: Output Speed (RPM) 4: Flow Meter 5: Output Frequency (non-PID)				
Y2-02 (3C65) RUN	Sleep Level	Sets the level that the level type set in Y2-01 [Sleep Level Type] must be at for the time set in Y2-03 [Sleep Delay Time] for the drive to enter Sleep Mode.				
Y2-03 (3C66) RUN	Sleep Delay Time	Sets the delay time before the drive enters Sleep Mode when the drive is at the sleep level set in <i>Y2-02 [Sleep Level]</i> .				
Y2-05 (3C68) RUN	Sleep Boost Level	VIF OLV/PM EZOLV Sets the quantity of boost that the drive applies to the setpoint before it goes to sleep.				
Y2-06 (3C69) RUN	Sleep Boost Hold Time	Sets the length of time that the drive will keep the boosted pressure before it goes to sleep.				
Y2-07 (3C6A) RUN	Sleep Boost Max Time	Sets the length of time that the system (feedback) has to reach the boosted setpoint. The system must reach the boosted setpoint in the time set in this parameter, or it will go to sleep.				
Y2-10 (3C6D) RUN	Max Cycling Protection Allowed	Maximum number of cycles allowed within time specified in Y2-11 [Cycling Count Decrement Time] before the system faults on POC [Pump Over Cycle]. One cycle is defined when the drive transfers from normal operation in AUTO Mode to Sleep Mode. Set this parameter to 0 to disable the function.				
Y2-11 (3C6E) RUN	Cycling Count Decrement Time	Vii OLVIPM EZOLV Sets the time for which the drive needs to be running in AUTO Mode before the cycle counter is decremented. One cycle is defined when the drive transfers from normal operation in AUTO Mode to sleep mode. When no cycling occurs within the programmed time, the drive will decrease the internal cycle register.				

No. (Hex.)	Name	Description				
Y2-12 (3C6F)	Over Cycle Mode	Sets how the drive will respond when it detects an Over Cycle condition. 0: Disabled 1: Alarm 2: Fault 3: AUTO Setpoint Compensation				
Y4-01 (3CFA) RUN	Pre-Charge Level	Vif OLV/PM EZOLV Sets the level at which the drive will activate the pre-charge function when the drive is running at the frequency set in Y 02 [Pre-Charge Frequency].				
Y4-02 (3CFB) RUN	Pre-Charge Frequency	V/f OLV/PM EZOLV Sets the frequency at which the pre-charge function will operate.				
Y4-03 (3CFC) RUN	Pre-Charge Time	V/f OLV/PM EZOLV Sets the length of time that the Pre-Charge function will run.				
Y4-05 (3CFE) RUN	Pre-Charge Loss of Prime Level	Detects loss of prime in the pump. If the measured quantity set in Y1-18 [Prime Loss Detection Method] is less than the level set in this parameter for the length of time set in Y1-20 [Prime Loss Time] and the output frequency is at the level set in Y4-02 [Pre-Charge Frequency], it will trigger a "Loss Of Prime" condition.				
Y4-06 (3CFF) RUN	Pre-Charge Frequency 2	V/f OLV/PM EZOLV Sets the frequency reference that the drive uses when the Pre-Charge 2 function is active.				
Y4-07 (3D00) RUN	Pre-Charge Time 2	V/f OLV/PM EZOLV Sets the length of time that the drive will spend at the Pre-Charge Frequency 2 speed during Pre-Charge.				
Y4-08 (3D01) RUN	Pre-Charge Loss of Prime Level 2	Detects loss of prime in the pump. If the measured quantity set in Y1-18 [Prime Loss Detection Method] is less than th level set in this parameter for the length of time set in Y1-20 [Prime Loss Time] and the output frequency is at the level in Y4-06 [Pre-Charge Frequency 2], it will trigger a "Loss Of Prime" condition.				
Y4-10 (3D03)	AUTO Key Memory at Power Down	Vii OLV/PM EZOLV Sets whether the drive will save the AUTO key of the keypad on power-down. 0: Disabled 1: Enabled				
Y4-11 (3D04) RUN	Thrust Acceleration Time	V/f OLV/PM EZOLV Sets the time at which the drive output frequency will ramp up to the reference frequency set in Y4-12 [Thrust Frequency].				
Y4-12 (3D05) RUN	Thrust Frequency	VI OLVIPM EZOLV Sets the Thrust Frequency that the drive will use to know which acceleration and deceleration time to use. The drive will accelerate to this frequency in the Y4-11 [Thrust Acceleration Time] time and decelerate from this frequency in the Y4-13 [Thrust Deceleration Time] time.				
Y4-13 (3D06) RUN	Thrust Deceleration Time	Sets the length of time necessary for the drive to go from the Thrust Frequency in <i>Y4-12 [Thrust Frequency]</i> to stop when Thrust Mode is active.				
Y4-17 (3D0A) RUN	Utility Start Delay	V/f OLV/PM EZOLV Sets the length of time that the drive will delay starting when there is a Run command at power-up.				
Y4-32 (3D19) RUN	Pre-Charge Level 2	V/f OLV/PM EZOLV For normal PI operation and during Pre-Charge 2, if the PI Feedback signal is more than the level set in this parameter, Pre-Charge 2 is cancelled and the drive resumes normal operation.				
Y5-01 (3D40)	HAND Frequency Reference Source	Sets the frequency reference source when HAND Mode is active. 0: HAND Analog Input 1: HAND Reference 1 (Y5-02)				
Y5-02 (3D41) RUN	HAND Frequency Reference	Sets the frequency reference when HAND Mode is active and Y5-01 = 1 [HAND Frequency Reference Source = HAND Reference 1 (Y5-02)].				

No. (Hex.)	Name	Description Vif OLVIPM EZOLV Sets the function to enable or disable switching between HAND and AUTO Mode during run. Switching from AUTO to HAND is not permitted when the drive is running in MEMOBUS Multiplex mode with auxiliary drives enabled. 0: Disabled 1: Enabled				
Y5-03 (3D42)	HAND/AUTO Switchover During Run					
Y5-04 (3D43)	Operation HAND Key	V/f OLV/PM EZOLV Sets the HAND key on the HOA keypad to let you switch between HAND Mode and AUTO Mode. 0: Disabled 1: Enabled				
Y5-05 (3D44) RUN	HAND Frequency Reference 2	V/f OLV/PM EZOLV Sets the frequency reference when HAND Mode 2 is active.				
Y5-06 (3D45) RUN	HAND Reference Prime Loss Level	Detects loss of prime in the pump during HAND mode. If the measured quantity (determined by Y1-18) is less than this level for the time specified in Y1-20 and the output frequency is at or more than the Y5-02 level, a "Loss Of Prime" condition occurs.				
Y5-07 (3D46) RUN	HAND Reference Prime Loss Level 2	V/f OLV/PM EZOLV Detects loss of prime in the pump during HAND mode 2. If the measured quantity in Y1-18 is less than this level for the time specified in Y1-20 and the output frequency is at or more than the Y5-05 level, the drive will detect a Loss Of Prime condition.				
Y5-09 (3D48)	HAND MOP Selection	V/f OLV/PM EZOLV Sets whether you can use MOP to change HAND references from the Home screen. 0: ENTER Key Required 1: Immediate/MOP-style				
YA-01 (3E58) RUN	Setpoint 1	V/f OLV/PM EZOLV Sets the PID Setpoint when $b1-01 = 0$ [Frequency Reference Selection $1 = Keypad$ or Multi-Speed Selection].				
YA-02 (3E59) RUN	Setpoint 2	V/f OLV/PM EZOLV Sets the PID Setpoint as specified by the Multi-Setpoint digital inputs.				
YA-03 (3E5A) RUN	Setpoint 3	V/f OLV/PM EZOLV Sets the PID Setpoint as specified by the Multi-Setpoint digital inputs.				
YA-04 (3E5B) RUN	Setpoint 4	V/f OLV/PM EZOLV Sets the PID Setpoint as specified by the Multi-Setpoint digital inputs.				
YA-05 (3E5C) RUN	Setpoint 5	V/f OLV/PM EZOLV Sets the PID Setpoint as specified by the Multi-Setpoint digital inputs.				
YA-06 (3E5D) RUN	Setpoint 6	V/f OLV/PM EZOLV Sets the PID Setpoint as specified by the Multi-Setpoint digital inputs.				
YA-07 (3E5E) RUN	Setpoint 7	V/f OLV/PM EZOLV Sets the PID Setpoint as specified by the Multi-Setpoint digital inputs.				
YA-08 (3E5F) RUN	Setpoint 8	V/f OLV/PM EZOLV Sets the PID Setpoint as specified by the Multi-Setpoint digital inputs.				
YC-01 (3EBC)	Output Current Limit Select	V/f OLV/PM EZOLV Sets the function to enable or disable the output current regulator. 0 : Disabled 1 : Enabled				
YC-02 (3EBD) RUN	Current Limit	V/f OLV/PM EZOLV Sets the current limit.				

No. (Hex.)	Name	Description				
YC-10	Single Phase Foldback Sel	V/f OLV/PM EZOLV				
(3EC5)		Sets the function to enable or disable the single phase ripple regulator.				
		0 : Disabled				
		1 : Enabled				
YC-11	Ripple Regulator Setpoint	V/f OLV/PM EZOLV				
(3EC6)		Sets the ripple regulator setpoint as a percentage of the maximum amount of ripple permitted before the drive detects a PF [Input Phase Loss] fault.				

13 UL Standards



Figure 13.1 UL/cUL Mark

The UL/cUL Mark identifies that this product conforms to rigid safety standards. This mark appears on products in the United States and Canada. It shows UL approval, which identifies that the product complies with safety standards after careful inspection and assessment. You must use UL Listed or UL Recognized parts for all primary components that are built into electrical equipment that has UL approval.

This product has been tested in accordance with UL standard UL508C *1, and has been verified to be in compliance with UL standards.

*1 Models 2143, 2169, 4124, and 4156 are compatible with UL61800-5-1.

Machines and devices integrated with this product must satisfy the following conditions for compliance with UL standards.

Area of Use

Install this product in a location with Overvoltage Category III and pollution degree 2 or less.

Ambient Temperature Setting

Maintain an ambient temperature between -10 °C to +40 °C (14 °F to 104 °F) for IP55/UL Type 12 drives.

◆ Main Circuit Wire Gauges and Tightening Torques

Refer to Three-Phase 208 V Class Wire Gauges and Torques (Models: 2xxxxT with Main Swith) on page 29 and Three-Phase 480 V Class Wire Gauges and Torques (Models: 4xxxxT with Main Switch) on page 31 for the recommended wire gauges and tightening torques of the main circuit terminals.

Comply with local standards for correct wire gauges in the region where the drive is used.


Note

- The recommended wire gauges are based on drive continuous current ratings with 75 °C (167 °F) 600 V class cooper wire. Assume these conditions:
- -Ambient temperature: 40 °C (104 °F) or lower
- -Wiring distance: 100 m (3281 ft) or shorter
- -Normal Duty Rated current value
- For drive models 2075 to 2169 and 4077 to 4156, use UL Listed closed-loop crimp terminals on the drive main circuit terminals. Use the tools recommend by the terminal manufacturer and make sure that the terminals are correctly connected.

Ferrules and Closed-Loop Crimp Terminals

To comply with UL standards on drive models 2075 to 2169 and 4077 to 4156, use UL Listed closed-loop crimp terminals. Use the tools recommend by the terminal manufacturer to crimp the closed-loop crimp terminal. Yaskawa recommends closed-loop crimp terminals from PANDUIT Corp.

Install UL Recognized heat-shrinkable tubes to the closed-loop crimp terminals. If you do not use the tubes with the closed-loop crimp terminals, the insulating distance will be too short and it can cause short circuits.

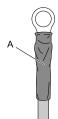

A - UL Recognized heat-shrinkable tube

Comply with local standards for correct wire gauges in the region where the drive is used.

Refer to Table 13.1 to select ferrules and crimp terminals as specified by drive model and wire gauge.

Note:

To comply with UL standards, use UL Listed vinylcoated insulated copper wires for operation with a continuous maximum permitted temperature of $75\,^{\circ}$ C at $600\,$ V.

Table 13.1 Ferrules and Closed-Loop Crimp Terminals

Model	Terminals */	Recommended Gauge AWG, kcmil	Ferrule *2	Crimp Terminal Part Number Manufacturer: PANDUIT Corp.		
				Type LCA	Type P	Type S
	R/L1, S/L2, T/L3	14	F80-10	N/A	N/A	N/A
2011	U/T1, V/T2, W/T3	14	F80-10	N/A	N/A	N/A
	\(\phi\)	12	N/A	LCA10-14-L	P10-14R-L	N/A
	R/L1, S/L2, T/L3	12	F81-10	N/A	N/A	N/A
2017	U/T1, V/T2, W/T3	10	F82-10	N/A	N/A	N/A
	=	10	N/A	LCA10-14-L	P10-14R-L	N/A
	R/L1, S/L2, T/L3	10	F82-15	N/A	N/A	N/A
2024	U/T1, V/T2, W/T3	8	F83-12	N/A	N/A	N/A
		10	N/A	LCA10-14-L	P10-14R-L	N/A
	R/L1, S/L2, T/L3	8	F83-15	N/A	N/A	N/A
2031	U/T1, V/T2, W/T3	8	F83-12	N/A	N/A	N/A
	=	10	N/A	LCA10-14-L	P10-14R-L	N/A
	R/L1, S/L2, T/L3	8	F83-18	N/A	N/A	N/A
2046	U/T1, V/T2, W/T3	6	F84-18	N/A	N/A	N/A
	=	8	N/A	LCA8-14-L	P8-14R-Q	S8-14R-Q
	R/L1, S/L2, T/L3	4	F85-18	N/A	N/A	N/A
2059	U/T1, V/T2, W/T3	4	F85-18	N/A	N/A	N/A
	=	6	N/A	LCA6-14-L	P6-14R-E	S6-14R-E
	R/L1, S/L2, T/L3	4	N/A	LCA4-56-L	P4-56R-E	S4-56R-E
2075	U/T1, V/T2, W/T3	3 or 2	N/A	LCA4-56-L or LCA2-56-Q	P2-56R-X *3	S2-56R-X *-
	\(\begin{array}{c} \\ \end{array} \end{array} \)	6	N/A	LCA6-56-L	P6-56R-E	S6-56R-E

Model	Terminals */	Recommended Gauge AWG, kcmil	Ferrule *2	Crimp Terminal Part Number Manufacturer: PANDUIT Corp.		
				Type LCA	Type P	Type S
		3 or 2	N/A	LCA4-56-L	D0 4 (D 4) *2	22 252 71 *1
	R/L1, S/L2, T/L3			or LCA2-56-Q	P2-56R-X *3	S2-56R-X *3
2088	U/T1, V/T2, W/T3	2	N/A	LCA2-56-Q	P2-56R-X	S2-56R-X
	(±)	6	N/A	LCA6-56-L	P6-56R-E	S6-56R-E
	R/L1, S/L2, T/L3	1/0	N/A	LCA1/0-56-X	N/A	S1/0-56R-X
2114	U/T1, V/T2, W/T3	1/0	N/A	LCA1/0-56-X	N/A	S1/0-56R-X
	<u>+</u>	6	N/A	LCA6-56-L	P6-56R-E	S6-56R-E
	R/L1, S/L2, T/L3	2/0	N/A	LCA2/0-56-X	N/A	S2/0-56R-X
2143	U/T1, V/T2, W/T3	3/0	N/A	LCA3/0-56-X	N/A	S3/0-56R-5
	+	4	N/A	LCA4-56-L	P4-56R-E	S4-56R-E
	R/L1, S/L2, T/L3	3/0	N/A	LCA3/0-56-X	N/A	S3/0-56R-5
2169	U/T1, V/T2, W/T3	4/0	N/A	LCA4/0-56-X	N/A	S4/0-56R-5
	(±)	4	N/A	LCA4-56-L	P4-56R-E	S4-56R-E
	R/L1, S/L2, T/L3	14	F80-10	N/A	N/A	N/A
4005	U/T1, V/T2, W/T3	14	F80-10	N/A	N/A	N/A
	(±)	14	N/A	LCA10-14-L	P10-14R-L	N/A
	R/L1, S/L2, T/L3	14	F80-10	N/A	N/A	N/A
4008	U/T1, V/T2, W/T3	14	F80-10	N/A	N/A	N/A
		14	N/A	LCA10-14-L	P10-14R-L	N/A
	R/L1, S/L2, T/L3	14	F80-10	N/A	N/A	N/A
4011	U/T1, V/T2, W/T3	14	F80-10	N/A	N/A	N/A
	=	12	N/A	LCA10-14-L	P10-14R-L	N/A
	R/L1, S/L2, T/L3	14	F80-10	N/A	N/A	N/A
4014	U/T1, V/T2, W/T3	12	F81-10	N/A	N/A	N/A
	=	10	N/A	LCA10-14-L	P10-14R-L	N/A
	R/L1, S/L2, T/L3	10	F82-15	N/A	N/A	N/A
4021	U/T1, V/T2, W/T3	10	F82-10	N/A	N/A	N/A
	=	10	N/A	LCA10-14-L	P10-14R-L	N/A
	R/L1, S/L2, T/L3	10	F82-15	N/A	N/A	N/A
4027	U/T1, V/T2, W/T3	8	F83-12	N/A	N/A	N/A
	(±)	10	N/A	LCA10-14-L	P10-14R-L	N/A
	R/L1, S/L2, T/L3	8	F83-15	N/A	N/A	N/A
4034	U/T1, V/T2, W/T3	8	F83-12	N/A	N/A	N/A
	+	10	N/A	LCA10-14-L	P10-14R-L	N/A
	R/L1, S/L2, T/L3	8	F83-18	N/A	N/A	N/A
4040	U/T1, V/T2, W/T3	8	F83-18	N/A	N/A	N/A
	+	8	N/A	LCA8-14-L	P8-14R-Q	S8-14R-Q

Model	Terminals */	Recommended Gauge	Ferrule *2	Crimp Ferrule *2 Manufa		
		AWG, kcmil		Type LCA	Type P	Type S
	R/L1, S/L2, T/L3	6	F84-18	N/A	N/A	N/A
4052	U/T1, V/T2, W/T3	6	F84-18	N/A	N/A	N/A
	(±)	8	N/A	LCA8-14-L	P8-14R-Q	S8-14R-Q
	R/L1, S/L2, T/L3	4	F85-18	N/A	N/A	N/A
4065	U/T1, V/T2, W/T3	4	F85-18	N/A	N/A	N/A
	=	6	N/A	LCA6-14-L	P6-14R-E	S6-14R-E
	R/L1, S/L2, T/L3	4	N/A	LCA4-56-L	P4-56R-E	S4-56R-E
4077	U/T1, V/T2, W/T3	3 or 2	N/A	LCA4-56-L or LCA2-56-Q	P2-56R-X *3	S2-56R-X *3
	(6	N/A	LCA6-56-L	P6-56R-E	S6-56R-E
	R/L1, S/L2, T/L3	2	N/A	LCA2-56-Q	P2-56R-X	S2-56R-X
4096	U/T1, V/T2, W/T3	1	N/A	LCA1-56-E	N/A	S2-56R-X
	(6	N/A	LCA6-56-L	P6-56R-E	S6-56R-E
	R/L1, S/L2, T/L3	1/0	N/A	LCA1/0-56-X	N/A	S1/0-56R-X
4124	U/T1, V/T2, W/T3	2/0	N/A	LCA2/0-56-X	N/A	S2/0-56R-X
	(1)	4	N/A	LCA4-56-L	P4-56R-E	S4-56R-E
	R/L1, S/L2, T/L3	2/0	N/A	LCA2/0-56-X	N/A	S2/0-56R-X
4156	U/T1, V/T2, W/T3	3/0	N/A	LCA3/0-56-X	N/A	S3/0-56R-5
	(±)	4	N/A	LCA4-56-L	P4-56R-E	S4-56R-E

^{*1} You cannot use terminals - and +1 on IP55/UL Type 12 drives with Main Switch.

Short Circuit Protection Requirements for UL Listing

▲ WARNING Electrical Shock Hazard. After the input protective device trips, do not immediately energize the drive or operate peripheral devices. Wait for the time specified on the warning label at a minimum and make sure that all indicators are OFF. Then check the wiring and peripheral device ratings to find the cause of the problem. If you do not know the cause of the problem, contact Yaskawa before you energize the drive or peripheral devices. If you do not fix the problem before you operate the drive or peripheral devices, it can cause serious injury or death.

UL Compliance

Install one of the types of short circuit protection devices in Table 13.2 or Table 13.3 to comply with UL 508C */.

*1 Models 2143, 2169, 4124 and 4156 are compatible with UL61800-5-1.

Semiconductor protective type fuses are recommended, but the tables also show alternative short circuit protection devices. Make sure that you install this product in a location with Overvoltage Category III and pollution degree 2 or less.

Molded Case Circuit Breaker (MCCB) Ratings

- Maximum MCCB rating is 250% of the drive full load output amp (FLA) rating.
- When you use MCCBs you must mount the drive in a ventilated enclosure according to the minimum enclosure volume specified in this document.

Note:

When you use MCCBs, current limiting type are recommended, but not required.

^{*2} Use recommended ferrule or bare wire.

^{*3} The recommended wire gauge for this part is AWG 2.

Semiconductor Fuses and Motor Circuit Protectors (MCPs)

When you use semiconductor fuses or Motor Circuit Protectors (MCPs) for drive protection, you must mount them in the same enclosure with the drive.

Non-Semiconductor Fuse Ratings

Maximum CC, J, or T fuse rating is 175% of the drive full load output amp (FLA) rating.

Short Circuit Current Rating (SCCR)

The maximum SCCR provided by the drive with approved protection device listed in this document is 100,000 RMS symmetrical amps.

Electric Code Compliance

The user must provide short circuit protection to protect input branch circuits as specified by the National Electric Code (NEC), the Canadian Electric Code, Part 1 (CEC), and local codes.

Required Short Circuit Protection

Table 13.2 Required Short Circuit Protection for FP605 AC Drives (240 V Class)

		Drive Mounted in Supplemental Enclosure					
Drive Catalog	Any Size Protected Enclosure (Ventilated or Non-Ventilated)		Restricted Size Protected Enclosure (Ventilated Only)				
Catalog Code FP65U	Semiconductor Fuse	Class CC, J, or T Fuse	Class CC, J, or T Fuse	MCCB *4	MCP */ Part Number	Enclosure Volume Minimum (in³)	
	Part Number Manufacturer: Eaton/ Bussmann	Maximum Amps	Maximum Amps	Maximum	Manufacturer: Schneider	External Heatsink	Internal Heatsink
2011	FWH-40B	17.5		25	HLL36030M71	3056	3056
2017	FWH-45B	25		40	HLL36030M71	3056	3056
2024	FWH-80B	40		60	HLL36050M72	3056	3056
2031	FWH-125B	50		75	HLL36050M72	3056	3056
2046	FWH-125B	80	Enclosure volume not restricted.	110	HLL36100M73	5520	5520
2059	FWH-175B	100	Refer to the values in the	125	HLL36100M73	5520	5520
2075	FWH-200B	125	column to the left for fuses.	175	HLL36150M74	5520	5520
2088	FWH-225A	150		200	HLL36150M74	5520	5520
2114	FWH-225A	200		250	HLL36150M74	5520	5520
2143	FWH-250A	250		350	JLL36250M75	21582	14657
2169	FWH-275A	250		400	JLL36250M75	21582	14657

^{*1} Protection device must be in same enclosure with drive.

^{*2} When you use semiconductor fuses as UL listed drive protection, the drives and fuses must be in the same enclosure.

^{*3} Class T fuses are fast-acting (non-time-delay) only. Class CC and J can be either time-delay or non-time-delay.

^{*4} Protection device and drive permitted in same or separate enclosure.

Table 13.3 Required Short Circuit Protection for FP605 AC Drives (480 V Class)

			Drive Mounted in Supple	emental Enclos	sure			
Drive Catalog	•	cted Enclosure Non-Ventilated)	Restricted Size Protected Enclosure (Ventilated Only)					
Catalog Code FP65U	Semiconductor Fuse */ *2 Part Number	Class CC, J, or T Fuse	Class CC, J, or T Fuse	MCCB *4 Maximum	MCP */ Part Number		Enclosure Volume Minimum (in³)	
	Manufacturer: Eaton/ Bussmann	Maximum Amps	Maximum Amps	Amps	Manufacturer: Schneider	External Heatsink	Internal Heatsink	
4005	FWH-25A14F	8		15	HLL36030M71	3056	3056	
4006	FWH-30A14F	9		15	HLL36030M71	3056	3056	
4008	FWH-30A14F	12		15	HLL36030M71	3056	3056	
4011	FWH-40B	17.5		25	HLL36030M71	3056	3056	
4014	FWH-45B	20		35	HLL36030M71	3056	3056	
4021	FWH-60B	35		50	HLL36030M71	3056	3056	
4027	FWH-80B	45	Enclosure volume not	60	HLL36050M72	3056	3056	
4034	FWH-100B	60	restricted. Refer to the values in the	80	HLL36050M72	3056	3056	
4040	FWH-125B	70	column to the left for fuses.	100	HLL36100M73	5520	5520	
4052	FWH-150B	90		125	HLL36100M73	5520	5520	
4065	FWH-200B	110		150	HLL36100M73	5520	5520	
4077	FWH-225A	125		175	HLL36100M73	5520	5520	
4096	FWH-225A	150		225	HLL36150M74	5520	5520	
4124	FWH-225A	200		300	JLL36250M75	5520	5520	
4156	FWH-325A	250		350	JLL36250M75	21582	14657	

^{*1} Protection device must be in same enclosure with drive.

Low Voltage Wiring for Control Circuit Terminals

You must provide low voltage wiring as specified by the National Electric Code (NEC), the Canadian Electric Code, Part I (CEC), and local codes. Yaskawa recommends the NEC class 1 circuit conductor. Use the UL Listed class 2 power supply for external power supply.

Table 13.4 Control Circuit Terminal Power Supplies

Input/Output	Terminals	Power Supply Specifications
Digital input	S1 to S8, SN, SC, SP	Uses the LVLC power supply in the drive. Use the UL Listed class 2 power supply for external power supply.
Analog input	A1 to A3, AC, +V	Uses the LVLC power supply in the drive. Use the UL Listed class 2 power supply for external power supply.
Analog output	FM, AM, AC	Uses the LVLC power supply in the drive.
Pulse train input	RP, AC	Uses the LVLC power supply in the drive. Use the UL Listed class 2 power supply for external power supply.
Safe disable input	H1, H2, HC	Uses the LVLC power supply in the drive. Use the UL Listed class 2 power supply for external power supply.
Serial communication input/output	D+, D-, AC	Uses the LVLC power supply in the drive. Use the UL Listed class 2 power supply for external power supply.
24 V external power supply input/output	PS, AC, +P	Use the UL Listed class 2 power supply.

^{*2} When you use semiconductor fuses as UL listed drive protection, the drives and fuses must be in the same enclosure.

^{*3} Class T fuses are fast-acting (non-time-delay) only. Class CC and J can be either time-delay or non-time-delay.

^{*4} Protection device and drive permitted in same or separate enclosure.

Drive Motor Overload and Overheat Protection

The drive motor overload and overheat protection function complies with the National Electric Code (NEC) and the Canadian Electric Code, Part I (CEC).

Set the Motor Rated Current and L1-01 through L1-04 [Motor Overload Protection Select] correctly to enable motor overload and overheat protection.

Refer to the control method and set the motor rated current with E2-01 [Motor Rated Current (FLA)], E5-03 [PM Motor Rated Current (FLA)], or E9-06 [Motor Rated Current (FLA)].

■ E2-01: Motor Rated Current (FLA)

No. (Hex.)	Name	Description	Default (Range)
E2-01	Motor Rated Current (FLA)	V/f OLV/PM EZOLV	Determined by o2-04
(030E)		Sets the motor rated current in amps.	(10% to 200% of the drive rated current)

Note:

- If E2-01 < E2-03 [Motor No-Load Current] the drive will detect oPE02 [Parameter Range Setting Error].
- The default settings and setting ranges are in these units:
- -0.01 A: 2011 to 2046, 4005 to 4014
- -0.1 A: 2059 to 2396, 4021 to 4720

The value set for E2-01 becomes the reference value for motor protection and the torque limit. Enter the motor rated current as written on the motor nameplate. The value of E2-01 is automatically set to the value input for "Motor Rated Current" by the Auto-Tuning process.

■ E5-03: PM Motor Rated Current (FLA)

No. (Hex.)	Name	Description	Default (Range)
E5-03 (032B)	PM Motor Rated Current (FLA)	V/f OLV/PM EZOLV Sets the PM motor rated current (FLA).	Determined by o2-04 (10% to 200% of the drive rated current)

Note:

When the drive model changes, the display units for this parameter also change.

- 0.01 A: 2011 to 2046, 4005 to 4014
- •0.1 A: 2059 to 2396, 4021 to 4720

The drive automatically sets *E5-03* to the value input for "PM Motor Rated Current" after you do these types of Auto-Tuning:

- PM Motor Parameter Settings
- PM Stationary Auto-Tuning
- PM StaTun for Stator Resistance
- PM Rotational Auto-Tuning

■ E9-06: Motor Rated Current (FLA)

No. (Hex.)	Name	Description	Default (Range)
E9-06	Motor Rated Current (FLA)	V/f OLV/PM EZOLV	Determined by E9-01 and
(11E9)		Sets the motor rated current in amps.	02-04
			(10% to 200% of the drive rated current)

Note:

When the drive model changes, the display units for this parameter also change.

- 0.01 A: 2011 to 2046, 4005 to 4014
- •0.1 A: 2059 to 2396, 4021 to 4720

The setting value of *E9-06* is the reference value for motor protection. Enter the motor rated current shown on the motor nameplate. Auto-Tuning the drive will automatically set *E9-06* to the value input for "Motor Rated Current".

■ L1-01: Motor Overload (oL1) Protection

No. (Hex.)	Name	Description	Default (Range)
L1-01	Motor Overload (oL1)	V/f OLV/PM EZOLV Sets the motor overload protection with electronic thermal protectors.	Determined by A1-02
(0480)	Protection		(0 - 6)

This parameter enables and disables the motor overload protection with electronic thermal protectors.

The cooling capability of the motor changes when the speed control range of the motor changes. Use an electronic thermal protector that aligns with the permitted load characteristics of the motor to select motor protection.

The electronic thermal protection of the drive uses these items to calculate motor overload tolerance and supply overload protection for the motor:

- Output current
- Output frequency
- Motor thermal characteristics
- Time characteristics

If the drive detects motor overload, the drive will trigger an oL1 [Motor Overload] and stop drive output.

Set H2-01 = 1F [Term M1-M2 Function Selection = Motor Overload Alarm (oL1)] to set a motor overload alarm. If the motor overload level is more than 90% of the oL1 detection level, the output terminal activates and triggers an overload alarm.

0: Disabled

Disable motor protection when motor overload protection is not necessary or when the drive is operating more than one motor.

Refer to Figure 13.2 for an example of the circuit configuration to connect more than one motor to one drive.

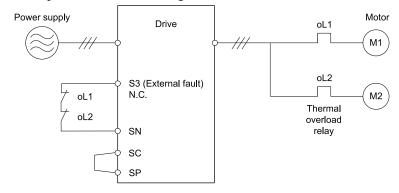


Figure 13.2 Protection Circuit Configuration to Connect More than One Motor to One Drive


NOTICE When you connect more than one motor to one drive or when the motor amp rating is higher than the drive amp rating, set L1-01 =0 [Motor Overload (oL1) Protection = Disabled] and install thermal overload relays for each motor. The electronic thermal protection of the drive will not function and it can cause damage to the motor.

1: Variable Torque

Use this setting for general-purpose motors with a 60 Hz base frequency.

The overload tolerance decreases as motor speed decreases because the cooling fan speed decreases and the ability of the motor to cool decreases in the low speed range.


The overload tolerance characteristics of the motor change the trigger point for the electronic thermal protection. This provides motor overheat protection from low speed to high speed across the full speed range.

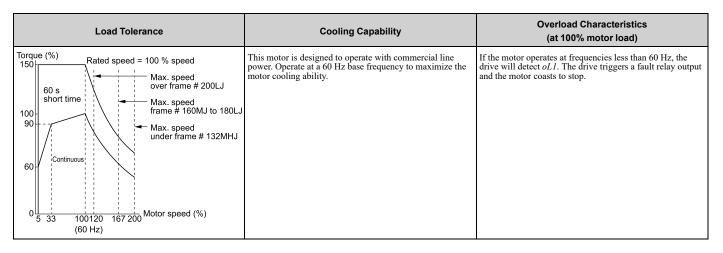

2: Constant Torque 10:1 Speed Range

Use this setting for drive-dedicated motors with a speed range for constant torque of 1:10.


The speed control for this motor is 10% to 100% when at 100% load. Operating slower than 10% speed at 100% load will cause motor overload.

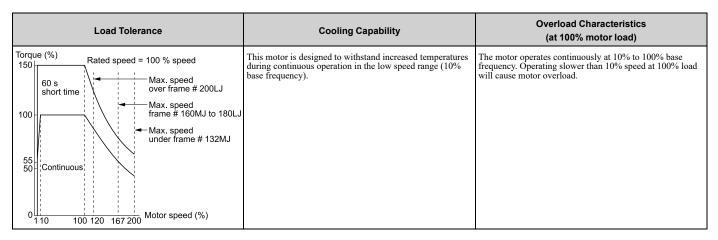

3 : Constant Torque 100:1 SpeedRange

Use this setting for vector motors with a speed range for constant torque of 1:100.

The speed control for this motor is 1% to 100% when at 100% load. Operating slower than 1% speed at 100% load will cause motor overload.

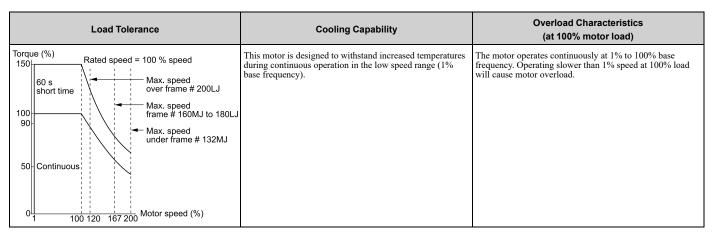

4: PM Variable Torque

Use this setting for PM motors with derated torque characteristics.

The overload tolerance decreases as motor speed decreases because the cooling fan speed decreases and the ability of the motor to cool decreases in the low speed range.

The overload tolerance characteristics of the motor change the trigger point for the electronic thermal protection. This provides motor overheat protection from low speed to high speed across the full speed range.

Load Tolerance	Cooling Capability	Overload Characteristics (at 100% motor load)
Torque (%) 150 120 60 s short time Solution S	This motor is designed to withstand increased temperatures during continuous operation at rated speed and rated torque.	If the motor operates continuously at lower speed than rated rotation speed at more than 100% torque, the drive will detect <i>oL1</i> . The drive triggers a fault relay output and the motor coasts to stop.

5: PM Constant Torque

Use this setting with a PM motor for constant torque that has a speed range for constant torque of 1:500.

The speed control for this motor is 0.2% to 100% when at 100% load. Operating slower than 0.2% speed at 100% load will cause motor overload.


Load Tolerance	Cooling Capability	Overload Characteristics (at 100% motor load)
Torque (%) 150 125 115 100 83 77 67 Motor speed relative 0 0.2 100 120 130 150 to rated speed (%)	This motor is designed to withstand increased temperatures during continuous operation in the low speed range (0.2% base frequency).	The motor operates continuously at 0.2% to 100% rated speed. Operating slower than 0.2% speed at 100% load will cause motor overload.

6: Variable Torque (50Hz)

Use this setting for general-purpose motors with a 50 Hz base frequency.

The overload tolerance decreases as motor speed decreases because the cooling fan speed decreases and the ability of the motor to cool decreases in the low speed range.

The overload tolerance characteristics of the motor change the trigger point for the electronic thermal protection. This provides motor overheat protection from low speed to high speed across the full speed range.

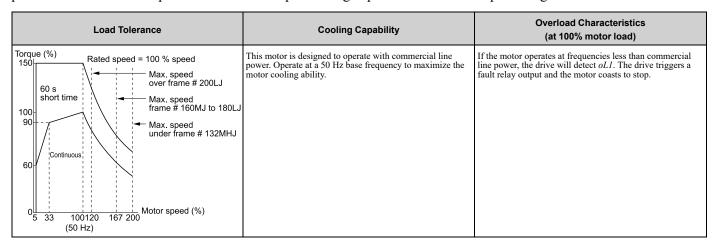

■ L1-02: Motor Overload Protection Time

No. (Hex.)	Name	Description	Default (Range)
L1-02	Motor Overload Protection	V/f OLVIPM EZOLV Sets the operation time for the electronic thermal protector of the drive to prevent damage to the motor. Usually it is not necessary to change this setting.	1.0 min
(0481)	Time		(0.1 - 5.0 min)

Set the overload tolerance time to the length of time that the motor can operate at 150% load from continuous operation at 100% load.

When the motor operates at 150% load continuously for 1 minute after continuous operation at 100% load (hot start), the default setting triggers the electronic thermal protector.

Figure 13.3 shows an example of the electronic thermal protector operation time. Motor overload protection operates in the range between a cold start and a hot start.

This example shows a general-purpose motor operating at the base frequency with L1-02 set to 1.0 min.

- Cold start
 Shows the motor protection operation time characteristics when the overload occurs immediately after starting operation from a complete stop.
- Shows the motor protection operation time characteristics when overload occurs from continuous operation below the motor rated current.

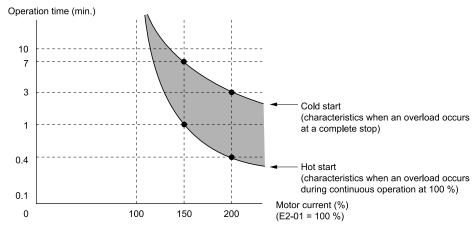


Figure 13.3 Protection Operation Time for a General-purpose Motor at Rated Output Frequency

■ L1-03: Motor Thermistor oH Alarm Select

No. (Hex.)	Name	Description	Default (Range)
L1-03	Motor Thermistor oH Alarm Select		3
(0482)		Sets drive operation when the PTC input signal entered into the drive is at the <i>oH3</i> [Motor Overheat (PTC Input)] detection level.	(0 - 3)

0: Ramp to Stop

The drive ramps the motor to stop in the deceleration time. Fault relay output terminal MA-MC turns ON and MB-MC turns OFF.

1 : Coast to Stop

The output turns OFF and the motor coasts to stop. Fault relay output terminal MA-MC turns ON, and MB-MC turns OFF.

2 : Fast Stop (Use C1-09)

The drive stops the motor in the deceleration time set in *C1-09 [Fast Stop Time]*. Fault relay output terminal MA-MC turns ON, and MB-MC turns OFF.

3: Alarm Only

The keypad shows oH3, and operation continues. The output terminal set for Alarm [H2-01 to H2-03 = 10] turns ON.

■ L1-04: Motor Thermistor oH Fault Select

No. (Hex.)	Name	Description	Default (Range)
L1-04 (0483)		V/f OLV/PM EZOLV Sets the drive operation when the PTC input signal to the drive is at the <i>oH4</i> [Motor Overheat Fault (PTC Input)] detection level.	1 (0 - 2)

0: Ramp to Stop

The drive ramps the motor to stop in the deceleration time. Fault relay output terminal MA-MC turns ON, and MB-MC turns OFF.

1: Coast to Stop

The output turns OFF and the motor coasts to stop. Fault relay output terminal MA-MC turns ON, and MB-MC turns OFF.

2 : Fast Stop (Use C1-09)

The drive stops the motor in the deceleration time set in C1-09 [Fast Stop Time]. Fault relay output terminal MA-MC turns ON, and MB-MC turns OFF.

14 European Standards



Figure 14.1 CE Mark

The CE Mark identifies that the product meets environmental and safety standards in the European Union. Products manufactured, sold, or imported in the European Union must display the CE Mark.

European Union standards include standards for electrical appliances (Low Voltage Directive), standards for electrical noise (EMC Directive), and standards for machinery (Machinery Directive).

This product displays the CE Mark in accordance with the Low Voltage Directive, the EMC Directive, and the Machinery Directive.

Table 14.1 Harmonized Standards

European Directive	Harmonized Standards
Low Voltage Directive 2014/35/EU	EN 61800-5-1 * <i>1</i>
EMC Directive 2014/30/EU	EN 61800-3 */
Machinery Directive 2006/42/EC	 EN ISO 13849-1:2015 (PL e (Cat.3)) EN IEC 62061(SIL3) *1 EN 61800-5-2 (SIL3) *1
Restriction of the use of certain hazardous substances (RoHS) 2011/65/EU	EN IEC 63000 */

^{*1} Refer to "EU Declaration of Conformity" for the year of the Harmonized Standards.

The customer must display the CE Mark on the final device containing this product. Customers must verify that the final device complies with EU standards.

Table 14.2 Other Applicable Standards

European Directive	Applicable Standards
EU ErP Directive 2009/125/EC	The drive meets the requirements for IE2 efficiency according to the European regulation 2019/1781.
	The losses and the efficiency were measured in accordance with the requirements of IEC 61800-9-2.

EU Declaration of Conformity

Go to www.yaskawa.com and search for "EU Declaration of Conformity" to get an original copy of the EU Declaration of Conformity.

Yaskawa declares that this product complies with the following directives and standards.

CE Low Voltage Directive Compliance

It has been confirmed that this product complies with the CE Low Voltage Directive by conducting a test according to IEC/EN 61800-5-1.

The following conditions must be satisfied for machines and devices incorporating this product to comply with the CE Low Voltage Directive.

■ Area of Use

Install this product in a location with Overvoltage Category III and pollution degree 2 or less.

Electrical Installation

Refer to Figure 14.2 for an example of a drive that is wired to comply with the CE Low Voltage Directive.

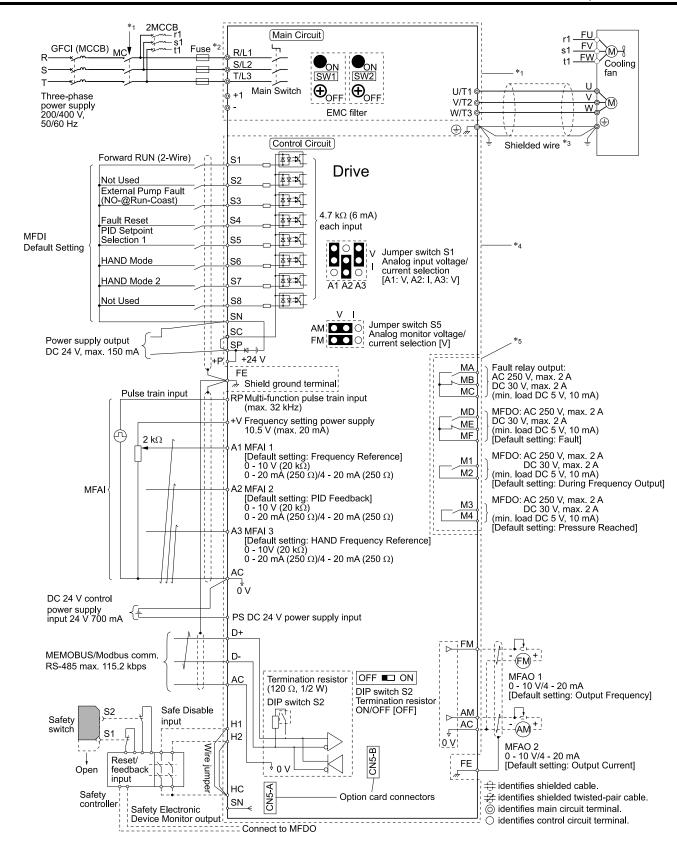


Figure 14.2 Wiring Diagram for CE Low Voltage Directive Compliance (Models: 2xxxxT and 4xxxxT with Main Switch)

- *1 For circuit protection, the main circuit is separated from the surface case that can touch the main circuit.
- *2 To comply with LVD standard requirement, set L8-05 = 1 [Input Phase Loss Protection Sel = Enabled] to protect the drive from the high current caused by Input Phase Loss condition.
- *3 Use braided shield cable for the drive and motor wiring, or run the wiring through a metal conduit.

- *4 The control circuit is a Safety Extra-Low Voltage circuit. Separate this circuit from other circuits with reinforced insulation. Make sure to connect the Safety Extra-Low Voltage circuit as specified.
- *5 Reinforced insulation separates the output terminals from other circuits. When the drive output is 250 Vac 1 A maximum or 30 Vdc 1 A maximum, you can also connect circuits that are not Safety Extra-Low Voltage circuits.

Main Circuit Wire Gauges and Tightening Torques

Refer to Three-Phase 208 V Class Wire Gauges and Torques (Models: 2xxxxT with Main Swith) on page 29 and Three-Phase 480 V Class Wire Gauges and Torques (Models: 4xxxxT with Main Switch) on page 31 for the recommended wire gauges and tightening torques of the main circuit terminals.

Note

The recommended wire gauges are based on drive continuous current ratings with 75 °C (167 °F) 600 V class copper wire. Assume these conditions:

- Ambient temperature: 40 °C (104 °F) or lower
 Wiring distance: 100 m (3281 ft) or shorter
- Normal Duty Rated current value

Connect a Fuse and a GFCI to the Input Side (Primary Side)

The drive circuit protection must comply with IEC/EN 61800-5-1 for protection against a short circuit in the internal circuitry. Yaskawa recommends connecting a semiconductor protection fuse and a Ground Fault Circuit Interrupter (GFCI) on the input side for branch circuit protection.

▲ WARNING Electrical Shock Hazard. After the drive blows a fuse or trips a GFCI, do not immediately energize the drive or operate peripheral devices. Wait for the time specified on the warning label at a minimum and make sure that all indicators are OFF. Then check the wiring and peripheral device ratings to find the cause of the problem. If you do not know the cause of the problem, contact Yaskawa before you energize the drive or peripheral devices. If you do not fix the problem before you operate the drive or peripheral devices, it can cause serious injury or death.

Table 14.3 Factory-Recommended Semiconductor Protection Fuses (208 V Class)

Drive Model	Semiconductor Protection Fuse */ Model Manufacturer: EATON/Bussmann
2011	FWH-40B
2017	FWH-45B
2024	FWH-80B
2031	FWH-125B
2046	FWH-125B
2059	FWH-175B

Drive Model	Semiconductor Protection Fuse */ Model Manufacturer: EATON/Bussmann
2075	FWH-200B
2088	FWH-225A
2114	FWH-225A
2143	FWH-250A
2169	FWH-275A
	ı

^{*1} When you use semiconductor protection fuses as UL listed drive protection, the drives and fuses must be in the same enclosure.

Table 14.4 Factory-Recommended Semiconductor Protection Fuses (480 V Class)

Drive Model	Semiconductor Protection Fuse */ Model Manufacturer: EATON/Bussmann
4005	FWH-25A14F
4008	FWH-30A14F
4011	FWH-40B
4014	FWH-45B
4021	FWH-60B
4027	FWH-80B
4034	FWH-100B

Drive Model	Semiconductor Protection Fuse */ Model Manufacturer: EATON/Bussmann
4040	FWH-125B
4052	FWH-150B
4065	FWH-200B
4077	FWH-225A
4096	FWH-225A
4124	FWH-225A
4156	FWH-325A

^{*1} When you use semiconductor protection fuses as UL listed drive protection, the drives and fuses must be in the same enclosure.

Table 14.5 Factory-Recommended GFCI (208 V Class)

Drive Model	GFCI Model Manufacturer: Mitsubishi Electric	Rated Current A	Rated Leakage Current mA
2011	NV32-SV	20	500
2017	NV32-SV	32	500
2024	NV63-SV	50	500
2031	NV63-SV	60	500
2046	NV125-SV	100	500
2059	NV125-SV	125	500
2075	NV250-SV	150	500
2088	NV250-SV	175	500
2114	NV250-SV	225	500
2143	NV400-SW	300	500
2169	NV400-SW	350	500

Table 14.6 Factory-Recommended GFCI (480 V Class)

Drive Model	GFCI Model Manufacturer: Mitsubishi Electric	Rated Current A	Rated Leakage Current mA
4005	NV32-SV	15	500
4008	NV32-SV	15	500
4011	NV32-SV	20	500
4014	NV32-SV	30	500
4021	NV63-SV	50	500
4027	NV63-SV	63	500
4034	NV63-SV	63	500
4040	NV125-SV	100	500
4052	NV125-SV	125	500
4065	NV125-SV	125	500
4077	NV250-SV	150	500
4096	NV250-SV	200	500
4124	NV250-SV	250	500
4156	NV400-SEW	300	500

♦ EMC Directive


Drives with built-in EMC filters were tested in accordance with European standard IEC/EN 61800-3, and comply with the EMC Directive.

■ Install a Drive to Conform to the EMC Directive

Use this procedure to install drives that comply with the EMC Directive when the drive is a single unit or installed in a larger device.

- 1. Install the drive on a grounded metal plate.
- 2. Wire the drive and motor.

3. Ground the wire shielding on the drive side and motor side.

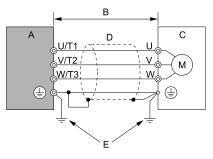

A - Drive

- D Metal conduit
- B 100 m (328 ft) maximum
- E Grounding wire

C - Motor


Figure 14.3 Wiring the Drive and Motor

Note:

- •Use a braided shield cable for the drive and motor wiring or put the wires through a metal conduit.
- The maximum wiring length between the drive and motor is 100 m (328 ft). Keep the wire as short as possible.
- Keep the grounding wire as short as possible.
 - 4. Use a cable clamp to ground the motor cable to the metal plate.

Note:


Make sure that the protective ground wire complies with technical specifications and local safety standards.

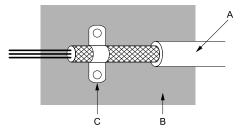

- A Braided shield cable
- C Cable clamp (conductive)

B - Metal plate

Figure 14.4 Ground the shield

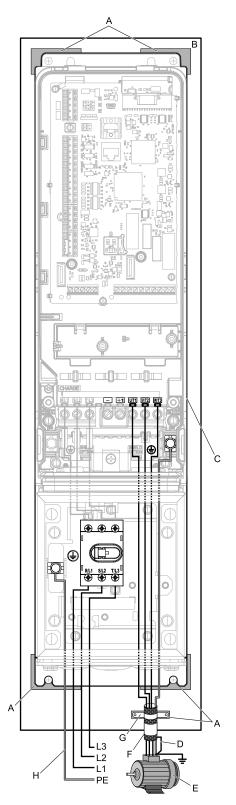

- A Grounding surface (Remove any paint or sealant.)
- B Metal plate
- C Drive
- D Shielded wire

- E Motor
- F Motor cable (Braided shield cable: 10 m (32.8 ft) maximum)
- G Cable clamp
- H Grounding wire

Figure 14.5 Install a Drive with a Built-in EMC Filter

Ground Wiring

A WARNING Electrical Shock Hazard. Do not remove covers or touch circuit boards while the drive is energized. If you touch the internal components of an energized drive, it can cause serious injury or death.

A WARNING Electrical Shock Hazard. Ground the neutral point on the power supply of the drives to comply with the EMC Directive before you turn on the EMC filter. If you turn ON the EMC filter, but you do not ground the neutral point, it can cause serious injury or death.

Enable the Internal EMC Filter

Move the screws to turn ON and OFF (enable and disable) the EMC filter.

Make sure that you apply a symmetric grounding network and install the screws in the ON position to enable the built-in EMC filter in compliance with the EMC Directive. The default position of the EMC filter switch screws is the OFF position. Refer to Table 14.8 and the Switch Location Diagrams for more information about the available EMC filter switch screws for each drive model.

A WARNING Electrical Shock Hazard. Disconnect all power to the drive, wait for the time specified on the warning label, and check the drive for dangerous voltages before you remove covers or touch EMC filter screws. If you touch the screws when there are dangerous voltages, it will cause serious injury or death.

A WARNING Electrical Shock Hazard. Do not remove covers or touch circuit boards while the drive is energized. If you touch the internal components of an energized drive, it can cause serious injury or death.

A WARNINGElectrical Shock Hazard. Ground the neutral point on the power supply of the drives to comply with the EMC Directive before you turn on the EMC filter. If you turn ON the EMC filter, but you do not ground the neutral point, it can cause serious injury or death.

A WARNING Electrical Shock Hazard. Connect the ground cable correctly. If you touch electrical equipment that is not grounded, it can cause serious injury or death.

NOTICE To disable the internal EMC filter, move the screws from ON to OFF and then tighten to the specified torque. If you fully remove the screws or tighten the screws to an incorrect torque, it can cause drive failure.

NOTICE Move the EMC switch screw or screws to the OFF position for networks that are not symmetrically grounded. If the screws are not in the correct position, it can cause damage to the drive.

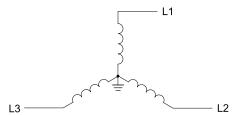


Figure 14.6 Symmetric Grounding

NOTICE Damage to Equipment. When you use the drive with a non-grounding, high-resistance grounding, or asymmetric-grounding network, put the EMC Filter screw or screws in the OFF position to disable the built-in EMC filter. If you do not disable the built-in EMC filter, it will cause damage to the drive.

Table 14.7 shows asymmetric grounding networks.


Table 14.7 Asymmetric Grounding

Type of Grounding	Diagram
Grounded at the corner of the delta connection	L3L2
Grounded at the middle of the side	L3L1

Type of Grounding	Diagram
Single-phase, grounded at the end point	L1
Three-phase variable transformer without solidly grounded neutral	L1L1L2L3L3

Table 14.8 EMC Filter Switch Location


Model	Switch Location Diagram
2011, 2017, 4005 - 4014	Figure 14.7
2024, 2031, 4021 - 4034	Figure 14.8
2046, 2059, 4040 - 4065	Figure 14.9
2075 - 2114, 4077 - 4096	Figure 14.10
4124	Figure 14.11
2143, 2169, 4156	Figure 14.12

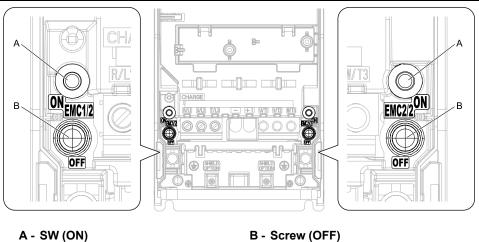

Note:

To comply with IEC61800-3 on drive models 2xxxA and 4xxxA with no built-in EMC filter, turn on the EMC filter switch on the left side.


Figure 14.7 EMC Filter Switch Location 1

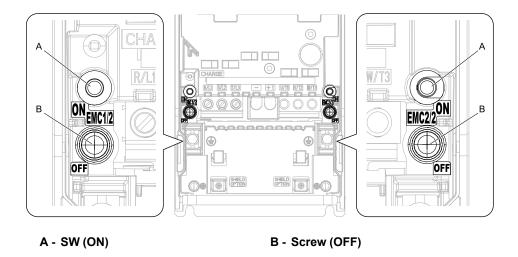

Note:

To comply with IEC61800-3 on drive models 2xxxA and 4xxxA with no built-in EMC filter, turn on the EMC filter switch on the left side.


Figure 14.8 EMC Filter Switch Location 2

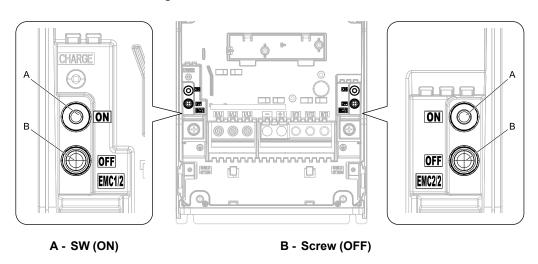

Note:

To comply with IEC61800-3 on drive models 2xxxA and 4xxxA with no built-in EMC filter, turn on the EMC filter switch on the left side.


Figure 14.9 EMC Filter Switch Location 3

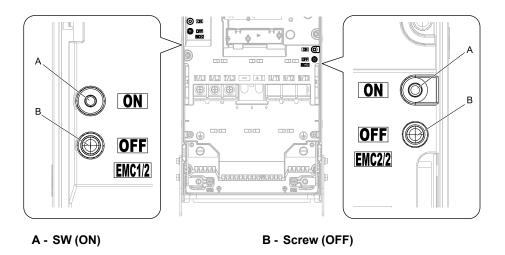

Note:

To comply with IEC61800-3 on drive models 2xxxA and 4xxxA with no built-in EMC filter, turn on the EMC filter switch on the right side.

Figure 14.10 EMC Filter Switch Location 4

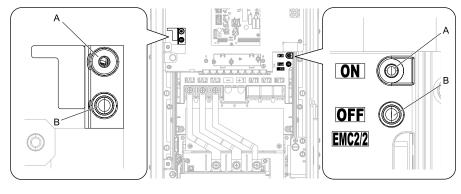

A - SW (ON)

B - Screw (OFF)

Figure 14.11 EMC Filter Switch Location 5

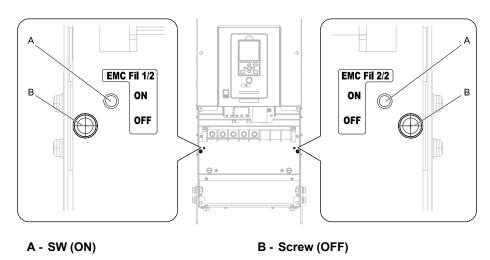


Figure 14.12 EMC Filter Switch Location 6

If you lose an EMC filter switch screw, use Table 14.9 to find the correct replacement screw and install the new screws with the correct tightening torque.

NOTICE Only use the screws specified in this manual. If you use screws that are not approved, it can cause damage to the drive.

Table 14.9 Screw Sizes and Tightening Torques

Model	Screw Size	Tightening Torque N·m
2011 - 2059, 4005 - 4065	M4 × 20	1.0 - 1.3
2075 - 2114, 4077 - 4124	M4 × 30	1.0 - 1.3
2143, 2169, 4156	M5 × 25	2.0 - 2.5

15 China RoHS Compliance



Figure 15.1 China RoHS Mark

The China RoHS mark is displayed on products containing six specified hazardous substances that are in excess of regulatory limits, based on the "Administrative Measures for the Restriction of the Use of Hazardous Substances in Electrical and Electronic Products" and "Marking for the Restricted Use of Hazardous Substances in Electronic and Electrical Products" (SJ/T 11364-2014), which were promulgated on January 26, 2016. The number displayed in the center of the mark indicates the environment-friendly use period (number of years) in which electrical and electronic products that are being produced, sold, or imported to China can be used. The date of manufacture of the electrical and electronic product is the starting date of the environment-friendly use period for the product. The six specified hazardous substances contained in the product will not leak outside of the product during normal use within this period and will have no serious impact on the environment, the human body, or property.

The environment-friendly use period for this product is 15 years. This period is not the product warranty period.

◆ Information on Hazardous Substances in This Product

Table 15.1 shows the details on hazardous substances contained in this product.

Table 15.1 Contents of Hazardous Substances in This Product

		Hazardous Substances				
Parts Name	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr(VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
Circuit Board	×	0	0	0	0	0
Electronic Parts	×	0	0	0	0	0
Brass Screw	×	0	0	0	0	0
Aluminum Die Casting	×	0	0	0	0	0

This table has been prepared in accordance with the provisions outlined in SJ/T 11364.

16 对应中国RoHS指令



图 16.1 中国RoHS标志

中国RoHS标志依据2016年1月26日公布的《电器电子产品有害物质限制使用管理办法》,以及《电子电气产品有害物质限制使用标识要求》(SJ/T 11364-2014)作成。电子电气产品中特定6种有害物质的含量超过规定值时,应标识此标志。中间的数字为在中国生产销售以及进口的电子电气产品的环保使用期限(年限)。电子电气产品的环保使用期限从生产日期算起。在期限内,正常使用产品的过程中,不会有特定的6种有害物质外泄进而对环境、人和财产造成深刻影响。

本产品的环保使用期限为15年。但需要注意的是环保使用期限并非产品的质量保证期限。

o: Indicates that said hazardous substance contained in all of the homogeneous materials for this part is below or equal to the limit requirement of GB/T 26572.

^{×:} Indicates that said hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement of GB/T 26572.

This product complies with EU RoHS directives. In this table, "×" indicates that hazardous substances that are exempt from EU RoHS directives are contained.

◆ 本产品中含有有害物质的信息

本产品中所含有害物质的详细信息如表 16.1所示。

表 16.1 本产品中有害物质的名称及含量

	ACTION TO ME INCHARIANCE						
		有害物质					
部件名称	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)	
实装基板	×	0	0	0	0	0	
电子元件	×	0	0	0	0	0	
黄铜螺钉	×	0	0	0	0	0	
铝压铸	×	0	0	0	0	0	

本表格依据SJ/T 11364的规定编制。

17 Safe Disable Input

This section gives precautions to support the Safe Disable input. Contact Yaskawa for more information. The safety function complies with the standards shown in Table 17.1.

Table 17.1 Safety Standards and Applicable Harmonized Standards

Safety Standards	Applicable Harmonized Standards	
Functional Safety	 IEC/EN 61508-1,2 (SIL3) IEC/EN IEC 62061 (SIL3) IEC/EN 61800-5-2 (SIL3) 	
Machine Safety	ISO/EN ISO 13849-1:2015 (Cat.3, PL e)	
EMC	• IEC/EN 61000-6-7 • IEC/EN 61326-3-1	
LVD	IEC/EN 61800-5-1	

♦ Safe Disable Specifications

The Safe Disable input provides the stop function that complies with "Safe Torque Off" as specified by IEC/EN 61800-5-2. The Safe Disable input meets the requirements of EN ISO 13849-1 and IEC/EN 61508. It also has a safety status monitor to detect safety circuit errors.

When you install the drive as a component in a system, you must make sure that the system complies with the applicable safety standards.

Refer to Table 17.2 for safety function specifications.

Table 17.2 Safe Disable Specifications

Item	Description		
Input/Output	Input: 2 Safe Disable input (H1, H2) Signal ON level: 18 Vdc to 28 Vdc Signal OFF level: -4 Vdc to +4 Vdc Output: 1 MFDO safety monitor output for external device monitor (EDM)		
Response time from when the input opens to when the drive output stops	3 ms or less		
Response time from when the H1 and H2 terminal inputs open to when the EDM signal operates	20 ms or less		
Mission time */	10 years	20 years	

〇:表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。

^{×:}表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。

⁽注) 本产品符合欧盟RoHS指令。上表中的"×"表示含有欧盟RoHS指令豁免的有害物质。

Item		Description		
	Less frequent operation request mode	PFD = 9.28E-6	$PFD = 1.84E^{-5}$	
Failure probability	Frequent operation request mode or continuous mode	PFH = 1.19E ⁻⁹	PFH = 1.19E-9	
Performance level		e		
HFT (hardware fault toler	ance)	N = 1		
Type of subsystem		Type B		
MTTFD		High (2410 years)		
DCavg		Medium (91.24%)		

^{*1} Parameter used for the statistical calculation required by functional safety standards and this is not linked to the warranty / guarantee period.

Note:

EDM = External Device Monitoring

PFD = Probability of Failure on Demand

PFH = Probability of Dangerous Failure per Hour

Notes

A DANGER Sudden Movement Hazard. When you use the Safe Disable function in the safety system of a machine, do a full risk assessment for the system to make sure that all parts of the system comply with applicable safety standards. Incorrect application of the Safe Disable function can cause serious injury or death.

⚠ DANGER Sudden Movement Hazard. If the output circuit of the drive is damaged and the Safe Disable function turns OFF the drive output to a permanent magnet (PM) motor, the motor can rotate 180 electrical degrees. Prevent damage to equipment and injury to personnel during this condition. Sudden motor movement can cause serious injury or death. It is possible for current to flow through the motor winding in these conditions.

⚠ DANGER Electrical Shock Hazard. You cannot depend on the Safe Disable function to prevent electrical shock. Disconnect all power to the drive and wait for the time specified on the warning label before you remove covers. Check the drive for dangerous voltages before servicing or repair work. If you do work on the drive when it is energized and there is no cover over the electronic circuits, it can cause serious injury or death.

A WARNINGSudden Movement Hazard. Although the Safe Disable function is in operation, gravity or other external forces in the vertical axis can move the motor. Incorrect application of the Safe Disable function can cause serious injury or death.

A WARNINGSudden Movement Hazard. Do not use the drive output signals to control external holding brakes or dynamic brakes for functional safety. Use a system that conforms to the functional safety requirements. Incorrect application of the Safe Disable function can cause serious injury or death. Systems that use drive output signals (including EDM) for safety are not safe because drive output signals are not safety components.

A WARNING Sudden Movement Hazard. Connect the Safe Disable inputs to the devices as specified by the safety requirements. If you connect the Safe Disable inputs incorrectly, it can cause serious injury or death.

WARNING Sudden Movement Hazard. To use the Safe Disable inputs, remove the jumpers between terminals H1-HC and H2-HC. If the Safe Disable circuit does not work correctly, it can cause serious injury or death.

A WARNINGSudden Movement Hazard. When you clear the Safe Disable input, make sure that the Safe Disable Monitor output operates correctly as the specification for Safe Disable function. If the Safe Disable circuit does not operate correctly, it can cause serious injury or death.

A WARNING Sudden Movement Hazard. Regularly examine the Safe Disable input and all other safety features. A system that does not operate correctly can cause serious injury or death.

A WARNING Sudden Movement Hazard. Only let approved personnel who know about the drive, instruction manual, and safety standards wire, examine, and maintain the Safe Disable input. If personnel are not approved, it can cause serious injury or death.

A WARNINGSudden Movement Hazard. Only use the Safe Disable Monitor (multi-function output terminal set to the EDM function) to monitor the Safe Disable status or to find a malfunction in the Safe Disable inputs. The monitor output is not a safety output. If you use the Safe Disable Monitor incorrectly, it can cause death or serious injury.

Note:

- Drives that have a built-in safety function must be replaced 10 years after first use.
- Safe Disable input wiring should not exceed 30 m.
- A maximum of 3 ms will elapse from when terminals H1 or H2 shut off until the drive switches to the "Safe Torque Off" status. Set the OFF status for terminals H1 and H2 to hold for at least 3 ms. The drive may not be able to switch to the "Safe Torque Off" status if terminals H1 and H2 are only open for less than 2 ms.

Using the Safe Disable Function

■ Safe Disable Circuit

The Safe Disable circuit has two isolated channels (terminals H1 and H2) that stop the output transistors. The input can use the internal power supply of the drive.

Set the EDM function to one of the MFDO terminals [H2-xx = 21 or 121] to monitor the status of the Safe Disable function. This is the "Safe Disable monitor output function".

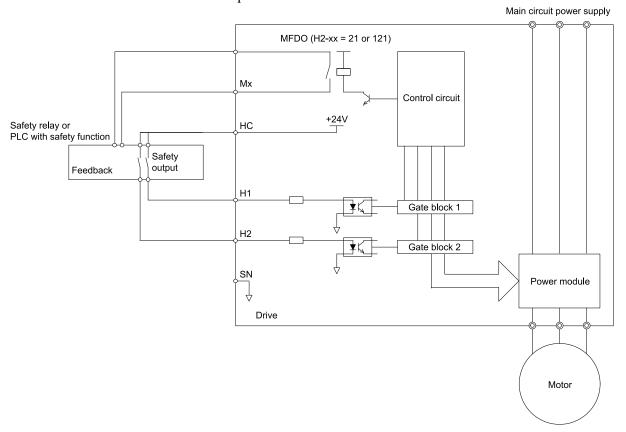


Figure 17.1 Safe Disable Function Wiring Example

■ Enabling and Disabling the Drive Output ("Safe Torque Off")

Refer to Figure 17.2 for an example of drive operation when the drive changes from "Safe Torque Off" status to usual operation.

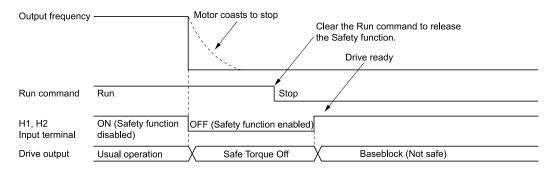


Figure 17.2 Safe Disable Operation

Switching from Usual Operation to "Safe Torque Off"

Turn OFF (open) safety input terminal H1 or H2 to enable the Safe Disable function. When the Safe Disable function is enabled while the motor is operating, the drive output and motor torque turn off and the motor always coasts to stop. The b1-03 [Stopping Method Selection] setting does not have an effect on the stopping method.

The "Safe Torque Off" status is only possible with the Safe Disable function. Clear the Run command to stop the drive. Turning off drive output (a baseblock condition) \neq "Safe Torque Off".

Note

- When it is necessary to ramp to stop the motor, do not turn off terminals H1 and H2 until the motor fully stops. This will prevent the motor from coasting to stop during usual operation.
- A maximum of 3 ms will elapse from when terminals H1 or H2 shut off until the drive switches to the "Safe Torque Off" status. Set the OFF status for terminals H1 and H2 to hold for at least 2 ms. The drive may not be able to switch to the "Safe Torque Off" status if terminals H1 and H2 are only open for less than 2 ms.

Going from "Safe Torque Off" to Usual Operation

The safety input will only release when there is no Run command.

- During Stop
 - When the Safe Disable function is triggered during stop, close the circuit between terminals H1-HC and H2-HC to disable "Safe Torque Off". Enter the Run command after the drive stops correctly.
- During Run
 - When the Safe Disable function is triggered during run, close the circuit between terminals H1-HC and H2-HC to disable "Safe Torque Off" after clearing the Run command. Enter the Stop command, then enter the Run command when terminals H1 and H2 are ON or OFF.

Safe Disable Monitor Output Function and Keypad Display

Refer to Table 17.3 for information about the relation between the input channel status, Safety monitor output status, and drive output status.

Tubic 17.5 Gaic Disable input and External Device Monitor (EDM) Terminal Gatas					
land Ohamal Otatus	Input 1 (H1-HC)	ON (Close the circuit)	OFF (Open)	ON (Close the circuit)	OFF (Open)
Input Channel Status	Input 2 (H2-HC)	ON (Close the circuit)	ON (Close the circuit)	OFF (Open)	OFF (Open)
MFDO Terminal	MFDO Terminal (H2-xx = 21)	OFF	OFF	OFF	ON
(H2-xx = 21)	MFDO Terminal (H2-xx = 121)	ON	ON	ON	OFF
Drive Ou	atput Status	Baseblock (Drive ready)	Safety status (STo)	Safety status (STo)	Safety status (STo)
Keypao	l Display	Normally displayed	SToF (Flashing)	SToF (Flashing)	STo (Flashing)
LED Status Ring		Ready: Illuminated	ALM/ERR: Flashing	ALM/ERR: Flashing	Ready: Flashing
	US Register (Hex.)	bit C: 0 bit D: 0	bit C: 1 bit D: 0	bit C: 1 bit D: 0	bit C: 0 bit D: 1

Table 17.3 Safe Disable Input and External Device Monitor (EDM) Terminal Status

Safety Function Status Monitor

The drive Safety monitor output sends a feedback signal about the status of the Safety function. The Safety monitor output is one of the possible settings available for the MFDO terminals. If there is damage to the Safe Disable circuit, a controller (PLC or safety relay) must read this signal as an input signal to hold the "Safe Torque Off" status. This

will help verify the condition of the safety circuit. Refer to the manual for the safety device for more information about the Safety function.

You can use the MFDO function settings to switch the polarity of the Safety monitor output signal. Refer to Table 17.3 for setting instructions.

Keypad Display

If the two input channels are OFF (Open), the keypad will flash STo [Safe Torque OFF].

If there is damage to the Safe disable circuit or the drive, the keypad will flash *SToF* [Safe Torque OFF Hardware] when one input channel is OFF (Open) and the other is ON (Close the circuit). When you use the Safe disable circuit correctly, the keypad will not show *SToF*.

If there is damage to the drive, the keypad will show *SCF* [Safety Circuit Fault] when the drive detects a fault in the Safe disable circuit. Refer to the chapter on Troubleshooting for more information.

■ Validating the Safe Disable Function

After you replace parts or do maintenance on the drive, first complete all necessary wiring to start the drive, then test the Safe Disable input with these steps. Keep a record of the test results.

Note:

Validate the Safe Disable function at least one time every three months to guarantee the specification values of the safety parameters.

- 1. When the two input channels are OFF (Open), make sure that the keypad flashes *STo [Safe Torque OFF]*, and make sure that the motor is not running.
- 2. Monitor the ON/OFF status of the input channels and make sure that MFDO set to the EDM function operates as shown in Table 17.3.

If one or more of these items are true, the ON/OFF status of the MFDO may not display correctly on the keypad:

- Incorrect parameter settings.
- A problem with an external device.
- The external wiring has a short circuit or is disconnected.
- There is damage to the device.

Find the cause and repair the problem to correctly display the status.

3. Make sure that the EDM signal operates during usual operation as shown in Table 17.3.

18 Seismic Standards

The Yaskawa drives in this manual are capable of structurally and operationally withstanding the seismic response criteria as defined in the International Building Code (IBC), ASCE7, and California Department of Health Care Access and Information (HCAI).

The models in this manual were tested in compliance with AC-156 to meet the IBC seismic certification as shown on the certification labels.

Note:

Models 2143xV/T,2169xV/T,4124xT,4156xV/T are excluded.



Refer to the label on your product for the applicable IBC year(s).

Figure 18.1 Seismic Certification Label Example for Drives

19 Disposal Instructions

Correctly discard the drive, packing material, battery, and microSD card as specified by regional, local, and municipal laws and regulations for this product.

Note:

- Remove the battery and microSD card from the keypad before you discard the drive.
- You cannot recycle the battery. Discard used batteries as specified by the battery manufacturer.
- Customers are responsible for microSD card data protection.

 PC functions that format and delete the data may not be sufficient to fully erase the microSD card data. Yaskawa recommends that customers physically destroy the microSD card in a shredder or use data wipe software to fully erase the card.

WEEE Directive



The wheelie bin symbol on this product, its manual, or its packaging identifies that you must recycle it at the end of its product life.

You must discard the product at an applicable collection point for electrical and electronic equipment (EEE). Do not discard the product with usual waste.

20 Maintenance

Refer to the Maintenance & Troubleshooting Manual (TOEPYAIWM6503) for more information.

Only let authorized persons do maintenance, examine, or replace components on the drive.

Read this manual carefully and know all the precautions and safety information before installing, wiring, repairing, or examining the drive or replacing components.

Examine and maintain the drive and peripheral devices regularly to extend the life of the drive and decrease performance deterioration, decrease early wear, and decrease drive failures.

Regular examinations and maintenance will also decrease system downtime.

Refer to the Technical Reference (SIEPYAIWM6501) for more information about maintenance and examinations.

Examine the drive one time each year at a minimum.

The operating conditions, environmental conditions, and use conditions will have an effect on the examination frequency for connected equipment.

Examine the drive more frequently if you use the drive in bad conditions or in these conditions:

- High ambient temperatures
- Frequent starting and stopping
- Changes in the AC power supply or load
- Too much vibration or shock loading
- Dust, metal dust, salt, sulfuric acid, or chlorine atmospheres
- Unsatisfactory storage conditions.

The drive has Maintenance Monitors that monitor component wear and give warnings when the performance life estimate is approaching. When you use the maintenance monitors, you remove the need to shut down all system components when you have problems. Refer to these monitors:

- *U4-04* [Cool Fan Maintenance]
- U4-05 [Capacitor Life Mon]
- *U4-07* [*IGBT Maintenance*]

You can set alarm notifications to inform you about the maintenance periods for specific drive components. Refer to these Maintenance setting parameters:

- o4-05 [Capacitor Maintenance Setting]
- o4-07 [Softcharge Relay Maintenance Set]
- o4-09 [IGBT Maintenance Setting]

21 Troubleshooting

Refer to the Maintenance & Troubleshooting Manual (TOEPYAIWM6503) for more information.

If the drive or motor do not operate correctly, look at the drive keypad for fault and alarm information.

- For drive faults:
 - The keypad shows the fault code.
 - When o2-24 = 0 or 1 [LED Light Function Selection = Enable Status Ring & Keypad LED or LED Status Ring Disable], and ALM/ERR on the LED Status Ring illuminate continuously.
 - The drive shuts off output and the fault relay output activates. The motor coasts to stop.
- For drive alarms:
 - The keypad shows the alarm code.
 - When o2-24 = 0 or 1, ALM and ALM/ERR on the LED Status Ring flash.
 - Usually, the drive will continue to operate the motor. Some alarms let you select a motor stopping method.

Note:

If there is no information on the display when you energize the keypad, there can be a connection error. Remove the keypad and connect it again to make sure that you correctly connected the connection cable between the drive and the keypad.

◆ Fault Reset

- 1. Remove the cause of the fault or alarm.
- 2. While the keypad is showing the fault or alarm code, push [FI] (RESET) or > on the keypad.

Fault

This section gives information about some of the causes and possible solutions of faults. You must use the Fault Reset operation to remove the fault before you can operate the drive. Use the information in this table to remove the cause of the fault.

Code	Name	Causes	Possible Solutions
Accum	Accumulated Level Reached	Accumulated volume has is more than the Y6-11 to Y6-14 settings and Y6-15 = 2 or 3 [Accumulated Volume Behavior = Fault (and Digital Output) or Fault + MFDO + Accum Reset]	Set Y6-05 = 7770 [Flow Accumulation Set Reset = Reset Accumulation] or via Reset Accumulation digital input).
AJF	Anti-Jam Fault	The drive could not clear the debris from the impeller in fewer than the number of tries set in Y7-02 [Anti-Jam Cycle Count]. Display text for Anti-Jam function is set to Anti-Jam [Y7-09 = 0].	 Check for correct pump operation. Adjust the Y7-03 [AJ Detection Current Lvl @ Start] level or the Y7-02 counts. If text is incorrect check Y7-09 [Anti-Jam Display Text Selection].
AuxFB	PI Aux Feedback Level Loss	The analog input from the terminal set for PI Auxiliary Control Feedback Level [H3-xx = 27] is more than 21 mA or less than 3 mA for longer than 1 s.	Repair transducer or wiring.
bAT	Keypad Battery Low Voltage	The keypad battery voltage is low.	Replace the keypad battery.
bCE	Bluetooth Communication Fault	The smartphone or tablet with DriveWizard Mobile or DriveWizard installed is too far from the keypad.	Use the smartphone or tablet 10 m (32.8 ft) or nearer to the keypad. Note: bCE can occur when the smartphone or tablet is 10 m (32.8 ft) or nearer to the keypad depending on the specifications of the smartphone or tablet.

Code	Name	Causes	Possible Solutions
		Radio waves from a different device are causing interference with communications between the smartphone or tablet and keypad.	Make sure that no device around the keypad uses the same radio bandwidth (2400 MHz to 2480 MHz), and prevent radio interference.
bUS	Option Communication Error	The drive did not receive a signal from the controller.	Correct wiring errors.
		The communications cable wiring is incorrect.	
		There is a short-circuit in the communications cable or the communications cable is not connected.	Repair short circuits and connect cables. Replace the defective communications cable.
		Electrical interference caused a communication data error.	Examine the control circuit lines, main circuit lines, and ground wiring, and decrease the effects of electrical interference. Make sure that a magnetic contactor is not the source of the electrical interference, then use a Surge Protective Device if necessary. Use only the recommended cables or other shielded line. Ground the shield on the controller side or the drive input power side. Separate the communication wiring from drive power lines, and install a noise filter to the input side of the power supply for communication. Decrease the effects of electrical interference from the controller.
		The option is incorrectly installed to the drive.	Correctly install the option to the drive.
		The option is damaged.	If the fault continues and the wiring is correct, replace the option.
CE	Modbus Communication Error	The communications cable wiring is incorrect.	Correct wiring errors.
		There is a short circuit in the communications cable or the communications cable is not connected.	Repair short circuits and connect cables. Replace the defective communications cable.
		Electrical interference caused a communication data error.	Examine the control circuit lines, main circuit lines, and ground wiring, and decrease the effects of electrical interference. Make sure that a magnetic contactor is not the source of the electrical interference, then use a Surge Protective Device if necessary. Use only the recommended cables or other shielded line. Ground the shield on the controller side or the drive input power side. Separate the communication wiring from drive power lines, and install a noise filter to the input side of the power supply for communication. Decrease the effects of electrical interference from the controller.
CoF	Current Offset Fault	The drive starts operation while the induced voltage stays in the motor (during coasting to a stop or after fast deceleration).	 Make a sequence that does not restart operation when induced voltage stays in the motor. Set b3-01 = 1 [Speed Search at Start Selection = Enabled]. Use Speed Search from Fmax or Fref [H1-xx = 61, 62] to do a speed search through one of the external terminals. Note: When controlling the PM motor, External Speed Search commands 1 and 2 operate the same.
		A drive hardware problem occurred.	 Do a Fault Reset to clear the fault or de-energize the drive. If the fault stays, replace the drive.
CPF00	Control Circuit Error	A drive hardware problem occurred.	Re-energize the drive. If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.
CPF01	Control Circuit Error	A drive hardware problem occurred.	Re-energize the drive. If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.
CPF02	Control Circuit Error	A drive hardware problem occurred.	Re-energize the drive. If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.
CPF03	Control Circuit Error	A drive hardware problem occurred.	Re-energize the drive. If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.
CPF06	Control Circuit Error (EEPROM memory Data Error)	The drive power supply was de-energized while a communication option entered a parameter Write command.	Set A1-03 = 2220, 3330 [Initialize Parameters = 2-Wire Initialization, 3-Wire Initialization] and initialize the drive.
		An EEPROM peripheral circuit error occurred.	Re-energize the drive. If the fault stays, replace the control board or the drive. For information about how to replace the control board, contact Yaskawa or your nearest sales representative.

Code	Name	Causes	Possible Solutions
CPF07	Control Circuit Error	A drive hardware problem occurred.	Re-energize the drive. If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.
CPF08	Control Circuit Error	A drive hardware problem occurred.	Re-energize the drive. If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.
CPF11	Control Circuit Error	A drive hardware problem occurred.	Re-energize the drive. If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.
CPF12	Control Circuit Error	A drive hardware problem occurred.	Re-energize the drive. If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.
CPF13	Control Circuit Error	A drive hardware problem occurred.	Re-energize the drive. If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.
CPF14	Control Circuit Error	A drive hardware problem occurred.	Re-energize the drive. If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.
CPF16	Control Circuit Error	A drive hardware problem occurred.	Re-energize the drive. If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.
CPF17	Control Circuit Error	A drive hardware problem occurred.	Re-energize the drive. If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.
CPF18	Control Circuit Error	A drive hardware problem occurred.	Re-energize the drive. If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.
CPF19	Control Circuit Error	A drive hardware problem occurred.	Re-energize the drive. If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.
CPF20	Control Circuit Error	A drive hardware problem occurred.	Re-energize the drive. If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.
CPF21	Control Circuit Error	A drive hardware problem occurred.	Re-energize the drive. If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.
CPF22	Control Circuit Error	A drive hardware problem occurred.	Re-energize the drive. If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.
CPF23	Control Circuit Error	A drive hardware problem occurred.	Re-energize the drive. If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.
CPF24	Control Circuit Error (Drive Unit Signal Fault)	A drive hardware problem occurred.	Re-energize the drive. If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.
CPF26	Control Circuit Error	A drive hardware problem occurred.	Re-energize the drive. If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.
CPF27	Control Circuit Error	A drive hardware problem occurred.	Re-energize the drive. If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.

DRF De-Rag Fault The drive could not clear the debris from the impeller Check for correct pump operation. [Differential Level Detection Sel] are correct. [Differential Level Detection Sel] are correct.	Code	Name	Causes	Possible Solutions
CPF31 Courted Circuit Error A drive hardware problem occurred. CPF32 Courted Circuit Error A drive hardware problem occurred. CPF33 Courted Circuit Error A drive hardware problem occurred. CPF34 Courted Circuit Error A drive hardware problem occurred. CPF35 Courted Circuit Error A drive hardware problem occurred. CPF36 Courted Circuit Error A drive hardware problem occurred. CPF37 Courted Circuit Error A drive hardware problem occurred. CPF38 Courted Circuit Error A drive hardware problem occurred. CPF39 Courted Circuit Error A drive hardware problem occurred.	CPF28	Control Circuit Error	A drive hardware problem occurred.	If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa
CPF31 Control Circuit Error A drive hardware problem occurred. CPF32 Control Circuit Error A drive hardware problem occurred. CPF33 Control Circuit Error A drive hardware problem occurred. CPF34 Control Circuit Error A drive hardware problem occurred. CPF35 Control Circuit Error A drive hardware problem occurred. CPF36 Control Circuit Error A drive hardware problem occurred. CPF37 Control Circuit Error A drive hardware problem occurred. CPF38 Control Circuit Error A drive hardware problem occurred. CPF39 Control Circuit Error A drive hardware problem occurred.	CPF29	Control Circuit Error	A drive hardware problem occurred.	If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa
PF32 Control Circuit Error	CPF30	Control Circuit Error	A drive hardware problem occurred.	If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa
CPF33 Control Circuit Error A drive hardware problem occurred. CPF34 Control Circuit Error A drive hardware problem occurred. CPF35 Control Circuit Error A drive hardware problem occurred. CPF36 Control Circuit Error A drive hardware problem occurred. CPF37 Control Circuit Error A drive hardware problem occurred. CPF38 Control Circuit Error A drive hardware problem occurred. CPF39 Control Circuit Error A drive hardware problem occurred.	CPF31	Control Circuit Error	A drive hardware problem occurred.	If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa
If the fault stays, replace the control board, contact Vaskawa or your necess sales representative. Per	CPF32	Control Circuit Error	A drive hardware problem occurred.	If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa
CPF35 Control Circuit Error A drive hardware problem occurred. CPF36 Control Circuit Error A drive hardware problem occurred. CPF37 Control Circuit Error A drive hardware problem occurred. CPF37 Control Circuit Error A drive hardware problem occurred. CPF38 Control Circuit Error A drive hardware problem occurred. CPF39 Control Circuit Error A drive hardware problem occurred. CPF39 Control Circuit Error A drive hardware problem occurred. CPF39 Control Circuit Error A drive hardware problem occurred. CPF39 Control Circuit Error A drive hardware problem occurred. CPF39 Control Circuit Error A drive hardware problem occurred. CPF39 Control Circuit Error A drive hardware problem occurred. CPF39 Control Circuit Error A drive hardware problem occurred. CPF39 Control Circuit Error A drive hardware problem occurred. CPF39 Control Circuit Error A drive hardware problem occurred. CPF39 Control Circuit Error A drive hardware problem occurred. CPF39 Control Circuit Error A drive hardware problem occurred. CPF39 Control Circuit Error A drive hardware problem occurred. CPF39 Control Circuit Error A drive hardware problem occurred. CPF39 Control Circuit Error A drive hardware problem occurred. The family stage the control board or the drive. For information the replane the control board or the drive. For information the replane the control board or the drive. For information the replane the control board or the drive. For information the replane the control board or the drive. For information the replane the control board or the drive. For information the drive. For information the plane the control board or the drive. For information the replane the control board or the drive. For information the drive. The load is too heavy. Acceleration and deceleration times are set too short. The district of the drive. The bloding brake is stopping the motor. The district of the drive the drive. For information the drive. For information the drive. For information the drive. For information the drive. For informati	CPF33	Control Circuit Error	A drive hardware problem occurred.	If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa
CPF36 Control Circuit Error	CPF34	Control Circuit Error	A drive hardware problem occurred.	If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa
CPF37 Control Circuit Error	CPF35	Control Circuit Error	A drive hardware problem occurred.	If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa
First fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative. Re-energize the drive.	CPF36	Control Circuit Error	A drive hardware problem occurred.	If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa
CPF39 Control Circuit Error A drive hardware problem occurred. A drive hardware problem occurred. Problem of the fault stays, replace the control board, contact Yaskawa or your nearest sales representative. Re-energize the drive. If the fault stays, replace the control board or the drive. For information about replacing the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative. Decrease the load. Acceleration and deceleration times are set too short. The dEv detection level settings are incorrect. Differential Feedback Exceeded Differential Feedback Exceeded Differential Feedback Exceeded Differential Level Source [H3-xx = 2D] is more than the level set in Y4-18 [Differential Level for the time set in Y4-19 [Differential Level for the time set in Y4-1	CPF37	Control Circuit Error	A drive hardware problem occurred.	If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa
Speed Deviation The load is too heavy. Decrease the load.	CPF38	Control Circuit Error	A drive hardware problem occurred.	If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa
Acceleration and deceleration times are set too short. Increase the values set in C1-01 to C1-04 [Acceleration/Deceleration Time].	CPF39	Control Circuit Error	A drive hardware problem occurred.	If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa
Deceleration Time]. The dEv detection level settings are incorrect. Adjust F1-10 [Speed Deviation Detection Level] and F1-11 [Speed Deviation Detect DelayTime]. The load is locked up. The holding brake is stopping the motor. Release the holding brake. DIFF Differential Feedback Exceeded The difference between the PID Feedback and Differential Level Source [H3-xx = 2D] is more than the level set in Y4-18 [Differential Level] for the time set in Y4-19 [Differential Level] to Y4-20 [Differential Level Detection Sel] are correct. DRF De-Rag Fault The drive could not clear the debris from the impeller in fewer than the number of tries set in Y7-02 [Anti-Jam Cycle Count]. Display text for Anti-Jam function is set to De-Rag [Y7-09 = 1]. The drive could not clear the debris from the impeller in fewer than the number of tries set in Y7-02 [Anti-Jam Operation]. Adjust the Y7-03 [AJ Detection Current Lvl @ Start] level or the Y7-02 counts. If text is incorrect check Y7-09 [Anti-Jam Display Text Selection]. dv7 Polarity Judge Timeout There is a disconnection in the motor coil winding. Measure the motor line-to-line resistance and replace the motor if a	dEv	Speed Deviation	The load is too heavy.	Decrease the load.
The dEv detection level settings are incorrect. The load is locked up. The load is locked up. The holding brake is stopping the motor. The holding brake is stopping the motor. The difference between the PID Feedback and Differential Level Source [H3-xx = 2D] is more than the level set in Y4-18 [Differential Level] for the time set in Y4-19 [Differential Level] for Anti-Jam function is set to De-Rag [Y7-09 = 1]. DRF De-Rag Fault The drive could not clear the debris from the impeller in fewer than the number of tries set in Y7-02 [Anti-Jam Cycle Count]. Display text for Anti-Jam function is set to De-Rag [Y7-09 = 1]. The drive could not clear the debris from the impeller in fewer than the number of tries set in Y7-02 [Anti-Jam Cycle Count]. Display text for Anti-Jam function is set to De-Rag [Y7-09 = 1]. The drive could not clear the debris from the impeller in fewer than the number of tries set in Y7-02 [Anti-Jam Cycle Count]. Display text for Anti-Jam function is set to De-Rag [Y7-09 = 1]. The difference between the PID Feedback and Differential Level Brake. * Replace the feedback transducer or transducers. * Make sure that the settings of Y4-18 [Differential Level] to Y4-20 [Differential Level Detection Sel] are correct. * Adjust the Y7-03 [AJ Detection Current Lvl @ Start] level or the Y7-02 counts. * If text is incorrect check Y7-09 [Anti-Jam Display Text Selection]. * Measure the motor line-to-line resistance and replace the motor if a Measure the motor line-to-line resistance and replace the motor if a Measure the motor line-to-line resistance and replace the motor if a Measure the motor line-to-line resistance and replace the motor if a Measure the motor line-to-line resistance and replace the motor if a Measure the motor line-to-line resistance and replace the motor if a Measure the motor line-to-line resistance and replace the motor if a Measure the			Acceleration and deceleration times are set too short.	
The load is locked up. The holding brake is stopping the motor. Release the holding brake. Pifferential Feedback Exceeded The difference between the PID Feedback and Differential Level Source [H3-xx = 2D] is more than the level set in Y4-18 [Differential Level] for the time set in Y4-19 [Differential Level] to Y4-20 [Diffe			The dEv detection level settings are incorrect.	
DIFF Differential Feedback Exceeded The difference between the PID Feedback and Differential Level Source [H3-xx = 2D] is more than the level set in Y4-18 [Differential Level] for the time set in Y4-19 [Differential Level] to Y4-20 [Diffe			The load is locked up.	
Differential Level Source [H3-xx = 2D] is more than the level set in Y4-18 [Differential Level] for the time set in Y4-19 [Differential Lv] for the time set in Y4-19 [Differential Lv] Detection Time]. De-Rag Fault The drive could not clear the debris from the impeller in fewer than the number of tries set in Y7-02 [Anti-Jam Cycle Count]. Display text for Anti-Jam function is set to De-Rag [Y7-09 = 1]. dv7 Polarity Judge Timeout De-Rag Fault The drive could not clear the debris from the impeller in fewer than the number of tries set in Y7-02 [Anti-Jam Display Text Selection]. The drive could not clear the debris from the impeller in fewer than the number of tries set in Y7-02 [Anti-Jam Display Text Selection]. The drive could not clear the debris from the impeller in fewer than the number of tries set in Y7-02 [Anti-Jam Display Text Selection]. The drive could not clear the debris from the impeller in fewer than the number of tries set in Y7-02 [Anti-Jam Display Text Selection]. The drive could not clear the debris from the impeller in fewer than the number of tries set in Y7-02 [Anti-Jam Display Text Selection]. Make sure that the settings of Y4-18 [Differential Level] to Y4-20 [Differential Level Detection Sel] are correct.			The holding brake is stopping the motor.	Release the holding brake.
in fewer than the number of tries set in Y7-02 [Anti- Jam Cycle Count]. Display text for Anti-Jam function is set to De-Rag [Y7-09 = 1]. 4v7 Polarity Judge Timeout There is a disconnection in the motor coil winding. Adjust the Y7-03 [AJ Detection Current Lvl @ Start] level or the Y7-02 counts. If text is incorrect check Y7-09 [Anti-Jam Display Text Selection]. Measure the motor line-to-line resistance and replace the motor if a	DIFF	Differential Feedback Exceeded	Differential Level Source [H3- $xx = 2D$] is more than	Make sure that the settings of Y4-18 [Differential Level] to Y4-20
	DRF	De-Rag Fault	in fewer than the number of tries set in Y7-02 [Anti- Jam Cycle Count]. Display text for Anti-Jam function	Adjust the Y7-03 [AJ Detection Current Lvl @ Start] level or the Y7-02 counts. If text is incorrect check Y7-09 [Anti-Jam Display Text]
<u> </u>	dv7	Polarity Judge Timeout	There is a disconnection in the motor coil winding.	

Code	Name	Causes	Possible Solutions
		The screws on the drive output terminals are loose.	Tighten the terminal screws to the correct tightening torque.
dWF1	EEPROM Memory DWEZ Data Error	There is an error in the EEPROM peripheral circuit.	Re-energize the drive. If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.
		There is a problem with the EEPROM data.	Set A1-03 = 2220, 3330 [Initialize Parameters = 2-Wire Initialization, 3-Wire Initialization] to initialize the drive, then upload the DriveWorksEZ project to the drive again.
dWF2	DriveWorksEZ Fault 2	There was a fault in the DriveWorksEZ program.	Examine the DriveWorksEZ program and remove the cause of the fault. This is not a drive fault.
dWF3	DriveWorksEZ Fault 3	There was a fault in the DriveWorksEZ program.	Examine the DriveWorksEZ program and remove the cause of the fault. This is not a drive fault.
dWFL	DriveWorksEZ Fault	There was a fault in the DriveWorksEZ program.	Examine the DriveWorksEZ program and remove the cause of the fault. This is not a drive fault.
EF0	Option Card External Fault	The communication option received an external fault from the controller.	Find the device that caused the external fault and remove the cause. Clear the external fault input from the controller.
		A programming error occurred on the controller side.	Examine the operation of the controller program.
EF1	Pump Fault (Terminal S1)	MFDI terminal S1 caused an external fault through an external device.	Find the device that caused the external fault and remove the cause.
			2. Clear the external fault input in the MFDI.
		The wiring is incorrect.	Correctly connect the signal line to MFDI terminal S1.
		Pump Fault [H1-01 = 20 to 2B] is set to MFDI terminal S1, but the terminal is not in use.	Correctly set the MFDI.
EF2	Pump Fault (Terminal S2)	MFDI terminal S2 caused an external fault through an external device.	Find the device that caused the external fault and remove the cause. Clear the external fault input in the MFDI.
		The wiring is incorrect.	Correctly connect the signal line to MFDI terminal S2.
		Pump Fault [H1-02 = 20 to 2B] is set to MFDI terminal S2, but the terminal is not in use.	Correctly set the MFDI.
EF3	Pump Fault (Terminal S3)	MFDI terminal S3 caused an external fault through an external device.	Find the device that caused the external fault and remove the cause. Clear the external fault input in the MFDI.
		The wiring is incorrect.	Correctly connect the signal line to MFDI terminal S3.
		Pump Fault [$H1-03 = 20$ to $2B$] is set to MFDI	Correctly set the MFDI.
EF4	Pump Fault (Terminal S4)	terminal S3, but the terminal is not in use. MFDI terminal S4 caused an external fault through an	Find the device that caused the external fault and remove the
EI 1	Tump Tum (Terminal 51)	external device.	cause. 2. Clear the external fault input in the MFDI.
		The wiring is incorrect.	Correctly connect the signal line to MFDI terminal S4.
		Pump Fault [$H1-04 = 20$ to $2B$] is set to MFDI	Correctly set the MFDI.
EF5	Pump Fault (Terminal S5)	terminal S4, but the terminal is not in use. MFDI terminal S5 caused an external fault through an	Find the device that caused the external fault and remove the
		external device.	cause. 2. Clear the external fault input in the MFDI.
		The wiring is incorrect.	Correctly connect the signal line to MFDI terminal S5.
		Pump Fault [H1-05 = 20 to 2B] is set to MFDI terminal S5, but the terminal is not in use.	Correctly set the MFDI.
EF6	Pump Fault (Terminal S6)	MFDI terminal S6 caused an external fault through an external device.	Find the device that caused the external fault and remove the cause.
		external device.	Clear the external fault input in the MFDI.
		The wiring is incorrect.	Correctly connect the signal line to MFDI terminal S6.
		Pump Fault [H1-06 = 20 to 2B] is set to MFDI terminal S6, but the terminal is not in use.	Correctly set the MFDI.
EF7	Pump Fault (Terminal S7)	MFDI terminal S7 caused an external fault through an external device.	Find the device that caused the external fault and remove the cause. Clear the external fault input in the MFDI.
		The wiring is incorrect.	Correctly connect the signal line to MFDI terminal S7.
		Pump Fault [H1-07 = 20 to 2B] is set to MFDI	Correctly set the MFDI.
		terminal S7, but the terminal is not in use.	

Code	Name	Causes	Possible Solutions
EF8	Pump Fault (Terminal S8)	MFDI terminal S8 caused an external fault through an external device.	Find the device that caused the external fault and remove the cause. Clear the external fault input in the MFDI.
		The wiring is incorrect.	Correctly connect the signal line to MFDI terminal S8.
		Pump Fault [H1-08 = 20 to 2B] is set to MFDI terminal S8, but the terminal is not in use.	Correctly set the MFDI.
Err	EEPROM Write Error	There was a problem with the EEPROM hardware.	Re-energize the drive. If the fault stays, replace the control board or the drive. Contact Yaskawa or your nearest sales representative to replace the board.
		Electrical interference corrupted the data while it was writing to the EEPROM of the drive.	Push ENTER Key. Set the parameters again.
FAn1	Drive Cooling Fan Fault	The cooling fan stopped operating correctly.	Examine cooling fan operation. Re-energize the drive. Examine U4-03 [Fan Elapsed Time] and U4-04 [Fan Life Mon]. If the performance life of the cooling fan is expired or if there is damage to the fan, replace the fan.
		The circulation fan is damaged.	Examine circulation fan operation. Re-energize the drive. Examine U4-03 [Fan Elapsed Time] and U4-04 [Fan Life Mon]. If there is damage to the circulation fan or if the performance life of the fan is expired, replace the fan.
FDBKL	WIRE Break	The analog input from the terminal set for <i>PID Feedback [H3-xx = B]</i> is more than 21mA or less than 3mA for longer than 1 s in these conditions: • $b5-82 = 2$ [Feedback Loss $4 \sim 20mA$ Detect Sel = Fault] • $b5-01 \neq 0$ [PID Mode Setting \neq Disabled] • $H3-01$, $H3-09$, or $H3-05 = 2$ [Terminal $A1/A2/A3$ Signal Level Selection = 4 to 20 mA]	Make sure that you install the PID feedback source and it operates correctly.
GF	Ground Fault	Overheating caused damage to the motor or the motor insulation is not satisfactory. The motor main circuit cable is contacting ground to make a short circuit.	Measure the motor insulation resistance, and replace the motor if there is electrical conduction or unserviceable insulation. Examine the motor main circuit cable for damage, and repair short circuits. Measure the resistance between the motor main circuit cable and the ground terminal. If there is electrical conduction, replace the cable.
		An increase in the stray capacitance of the cable and the ground terminal caused an increase in the leakage current.	If the wiring length of the cable is more than 100 m, decrease the carrier frequency. Decrease the stray capacitance.
		There was a problem with the drive hardware.	Replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.
HFB	High Feedback Sensed	The feedback level is more than the level set in Y1-11 [High Feedback Level] for the time set in Y1-12 [High Feedback Lvl Fault Dly Time].	Decrease the feedback level less than <i>Y1-11</i> . Set <i>Y1-11</i> and <i>Y1-12</i> correctly.
HiAux	High PI Aux Feedback Level	PI Auxiliary Feedback is more than the level set in YF-12 [PI Aux Control High Level Detect] for the time set in YF-13 [PI Aux High Level Detection Time] in these conditions: • The drive is running. • The output frequency > 0.	 Decrease the PI Auxiliary Feedback level less than <i>YF-12</i>. Set <i>YF-12</i> and <i>YF-13</i> correctly.
HiFlo	High Flow	Flow rate was more the level set in Y6-17 [High Flow Level] for longer than the time set in Y6-18 [High Flow Detection Time] and Y6-19 = 2 or 3 [High Flow Behavior = Fault (and Digital Output) or Auto-Restart (time set by Y6-10)].	Reprogram Y6-17 to Y6-19 if flow rate is acceptable.
HiSuc	High Suction Pressure	Suction pressure is more than the level set in YE-12 [High Suction Pressure Det Level] for longer than the time set in YE-13 [High Suction Pressure Det Time], and the drive is running (AUTO or HAND) and YE-14 = 2 or 3 [High Suction Pressure Behavior = Fault (and Digital Output) or Auto-Restart (time set by YE-15)].	Decrease suction pressure.
HLCE	High Level Communication Errors	Communication data error occurred between the option and the master drive when you use Gateway function. The master drive detects oFxxx and the slave drive detects HLCE.	Examine the wiring between the option and the master drive and remove the cause of the fault.

Code	Name	Causes	Possible Solutions
HWL	High Water Level Digital Input	The digital input terminal set to H1-xx = BC [MFD1 Function Selection = High Water Level] activated or is defective.	 Decrease the water level. Adjust the terminal set to H1-xx = BC or 1BC.
		• The digital input terminal set to H1-xx = 1BC [! High Water Level] deactivated or is defective.	
LF	Output Phase Loss	The motor main circuit cable is disconnected.	Connect motor main circuit cable wiring. Correct wiring errors in the main circuit drive input power.
		There is a disconnection in the motor coil winding.	If a coil is disconnected, measure the motor Line-to-Line Resistance and replace the motor.
		The screws on the drive output terminals are loose.	Tighten the terminal screws to the correct tightening torque.
		The rated output current of the motor is less than 5% of the drive rated current.	Examine the drive capacity or the motor output to be applied.
		You are trying to use a single-phase motor.	The drive cannot operate a single-phase motor.
		The output transistor in the drive is damaged.	Re-energize the drive. If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.
LF2	Output Current Imbalance	Phase loss occurred in the wiring on the output side of the drive.	Examine for wiring errors or disconnected wires on the output side of the drive, and repair problems.
		The output terminal screws of the drive are loose.	Tighten the terminal screws to the correct tightening torque.
		There is not balance between the three phases of the PM motor impedance.	Measure the Line-to-Line Resistance for each motor phase and make sure that resistance is equal in the three phases, and that all wires are connected correctly. Replace the motor.
		The drive output circuit is broken.	Re-energize the drive. If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.
LFB	Low Feedback Sensed	The feedback level is less than the level set in Y1-08 [Low Feedback Level] for the time set in Y1-09 [Low Feedback Lvl Fault Dly Time].	 Increase the feedback level to more than <i>YI-08</i>. Set <i>YI-08</i> and <i>YI-09</i> correctly.
LoAux	Low PI Aux Feedback Level	When the drive is running, PI Auxiliary Feedback is less than the level set in YF-09 [Pl Aux Control Low Lvl Detection] for the time set in YF-10 [Pl Aux Control Low Lvl Det Time].	 Increase the PI Auxiliary Feedback level to be more than <i>YF-09</i>. Set <i>YF-09</i> and <i>YF-10</i> correctly.
LOP	Loss of Prime	The drive used the Y1-18 [Prime Loss Detection Method] setting and measured a pump load that is less than the level set in Y1-19 [Prime Loss Level] for the time set in Y1-20 [Prime Loss Time], and the output frequency is Y1-21 [Prime Loss Activation Freq] or more.	 Examine for a dry well, air in the system, or no water in the system. Use preferred priming method suggested by the pump manufacturer to restart the pump. When there is resistance in the pump, let the system pump water again. Set <i>Y1-18</i> to <i>Y1-21</i> correctly.
LoSuc	Low Suction Pressure	Suction pressure is less than the level set in YE-09 [Low Suction Pressure Det Level] for longer than the time set in YE-10 [Low Suction Pressure Det Time], and the drive is running (AUTO or HAND) and YE-11 = 2 or 3 [Low Suction Pressure Behavior = Fault (and Digital Output) or Auto-Restart (time set by YE-15)].	Increase suction pressure.
LowWL	Low Water Level	Water level is below the level set in Yd-09 [Low Water Level Detection Level] for longer than the time set in Yd-10 [Low Water Level Detection Time], and the drive is running (AUTO or HAND) with Yd-11 = 2 or 3 [Low Water Level Behavior = Fault (and Digital Output) or Auto-Restart (time set by Yd-12)].	Increase the water level.
LowFl	Low Flow	Flow rate was below the level set in Y6-06 [Low Flow Level] for longer than the time set in Y6-07 [Low Flow Detection Time] and Y6-09 = 2 or 3 [Low Flow Behavior = Fault (and Digital Output) or Auto-Restart (time set by Y6-10)].	Reprogram Y6-06 to Y6-09 if flow rate is acceptable.
LWL	Low Water Level Digital Input	The digital input terminal set to H1-xx = BB [MFD1 Function Selection = Low Water Level] activated or is defective.	 Increase the water level. Adjust the terminal set to H1-xx = BB or 1BB.
		• The digital input terminal set to <i>H1-xx</i> = <i>1BB</i> [! Low Water Level] deactivated or is defective.	
NMS	Setpoint Not Met	The feedback deviates from the setpoint at a level more than Y1-15 [Maximum Setpoint Difference] for the time set in Y1-16 [Not Maintaining Setpoint Time].	 Examine for a blocked impeller, over cycling, or broken pipe. Set <i>Y1-15</i> and <i>Y1-16</i> correctly.
nSE	Node Setup Error	The drive received a Run command while the Node Setup function was active.	Stop the drive when the Node Setup function is in use.
		Setup function was active.	

Code	Name	Causes	Possible Solutions
оС	Overcurrent	The load is too large.	Measure the current flowing into the motor. Replace the drive with a larger capacity model if the current value is more than the drive rated current. Decrease the load or replace with a larger drive to prevent sudden changes in the current level.
		Overheating caused damage to the motor or the motor insulation is not satisfactory.	Measure the motor insulation resistance, and replace the motor if there is electrical conduction or unserviceable insulation.
		The motor main circuit cable is contacting ground to make a short circuit.	Examine the motor main circuit cable for damage, and repair short circuits. Measure the resistance between the motor main circuit cable and the ground terminal. If there is electrical conduction, replace the cable.
		A short circuit or ground fault on the drive output side caused damage to the output transistor of the drive.	Make sure that there is not a short circuit in terminals - and terminals U/T1, V/T2, and W/T3. If there is a short circuit, contact Yaskawa or your nearest sales representative.
		The acceleration time is too short.	Calculate the torque necessary during acceleration related to the load inertia and the specified acceleration time. Increase the values set in C1-01 or C1-03 [Acceleration Times] to get the necessary torque. Increase the values set in C2-01 to C2-04 [S-Curve Characteristics] to get the necessary torque. Replace the drive with a larger capacity model.
		The drive is trying to operate a specialized motor or a motor that is larger than the maximum applicable motor output of the drive.	Examine the motor nameplate, the motor, and the drive to make sure that the drive rated current is larger than the motor rated current. Replace the drive with a larger capacity model.
		A magnetic contactor was switched at the output.	Set the operation sequence to not turn ON or OFF the magnetic contactor while the drive is outputting voltage.
		The V/f pattern settings are incorrect.	 Examine the ratios between the V/f pattern frequency and voltage. Decrease the voltage if it is too high compared to the frequency. Adjust E1-04 to E1-10 [V/f Pattern Parameters]. For motor 2, adjust E3-04 to E3-10.
		The torque compensation gain is too large.	Decrease the value set in C4-01 [Torque Compensation Gain] to make sure that the motor does not stall.
		Electrical interference caused a problem.	Examine the control circuit lines, main circuit lines, and ground wiring, and decrease the effects of electrical interference.
		The gain during overexcitation operation is too large.	Find the time when the fault occurs. If the fault occurs at the same time as overexcitation operation, decrease the value set in n3-13 [OverexcitationBraking (OEB) Gain] and consider the motor flux saturation.
		The drive received a Run command while the motor was coasting.	 Examine the sequence and input the Run command after the motor fully stops. Set b3-01 = 1 [Speed Search at Start Selection = Enabled] or set H1-xx = 61, 62 [Speed Search from Fmax or Fref] to input speed search commands from the MFDI terminals.
		The motor code setting is incorrect for PM Control Methods.	Enter the correct motor code to E5-01 [PM Motor Code Selection] as specified by the PM motor. For specialized motors, refer to the motor test report and set E5-xx [PM Motor Settings] correctly.
		The current flowing in the motor is more than the value set in <i>L8-27 [Overcurrent Detection Gain]</i> for PM Control Methods.	Correct the value set in $L8-27$.
		The control method is set incorrectly for the motor.	Set A1-02 [Control Method Selection] correctly.
		The motor main circuit cable is too long.	Replace the drive with a larger capacity model.
		Speed search does not complete at start when A1-02 = 8 [EZ Vector Control] and you use an induction motor.	When E9-01 = 0 [Motor Type Selection = Induction (IM)], set b3-24 = 2 [Speed Search Method Selection = Current Detection Speed Search].
		The relay or contactor on the soft-charge bypass relay is damaged.	Re-energize the drive. If the fault stays, replace the control board or the drive.
		An overcurrent condition occurred during overexcitation deceleration.	 Decrease the value set in n3-13 [OverexcitationBraking (OEB) Gain]. Decrease the value set in n3-21 [HSB Current Suppression Level].

Code	Name	Causes	Possible Solutions
		You are using a premium efficiency motor.	Set these parameters: • b3-03 [Speed Search Deceleration Time] = default value × 2 • L2-03 [Minimum Baseblock Time] = default value × 2 • L2-04 [Powerloss V/f Recovery Ramp Time] = default value × 2
OD	Output Disconnect	The output circuit between the drive and the motor is open, and the drive output current is less than 5% of E2-01 [Motor Rated Current (FLA)].	Close the disconnected output circuit between the drive and the motor.
oFA00	Option Not Compatible with Port	The option connected to connector CN5-A is not compatible.	Connect the option to the correct connector.
		The DIP switches on the JOHB-SMP3 Multi-Protocol Ethernet Card are at factory default settings. The DIP switches on the JOHB-SMP3 are not set to a valid protocol. The DIP switches on the JOHB-SMP3 are set to a valid protocol that is not supported by the drive.	Remove power from the drive, wait for the charge light to go out, then set the DIP switches on the JOHB-SMP3 to the desired protocol.
		The option failed. Check the LED flash pattern on the option as specified by the option manual.	Replace the option.
oFA01	Option Fault/Connection Error	The option card connected to connector CN5-A is not compatible.	De-energize the drive. Refer to the option card manual and correctly connect the option card to the connector on the drive.
oFA02	Duplicate Options	The same option cards or the same type of option cards are connected to connectors CN5-A and B.	Connect the option card to the correct connector.
oFA03	Diagnostic Error	A fault occurred in the option card.	De-energize the drive. Make sure that the option card is correctly connected to the connector. If the problem continues, replace the option card.
oFA04	Flash Write Mode	A fault occurred in the option card.	De-energize the drive. Make sure that the option card is correctly connected to the connector. If the problem continues, replace the option card.
oFA05	Option A/D Error	A fault occurred in the option card.	De-energize the drive. Make sure that the option card is correctly connected to the connector. If the problem continues, replace the option card.
oFA06	Option Communication Error	A fault occurred in the option card.	De-energize the drive. Make sure that the option card is correctly connected to the connector. If the problem continues, replace the option card.
oFA10	Option RAM Error	A fault occurred in the option card.	De-energize the drive. Make sure that the option card is correctly connected to the connector. If the problem continues, replace the option card.
oFA11	Option Ope Mode Error	A fault occurred in the option card.	De-energize the drive. Make sure that the option card is correctly connected to the connector. If the problem continues, replace the option card.
oFA12	Drive Receive CRC Error	A fault occurred in the option card.	De-energize the drive. Make sure that the option card is correctly connected to the connector. If the problem continues, replace the option card.
oFA13	Drive Receive Frame Error	A fault occurred in the option card.	De-energize the drive. Make sure that the option card is correctly connected to the connector. If the problem continues, replace the option card.
oFA14	Drive Receive Abort Error	A fault occurred in the option card.	De-energize the drive. Make sure that the option card is correctly connected to the connector. If the problem continues, replace the option card.
oFA15	Option Receive CRC Error	A fault occurred in the option card.	De-energize the drive. Make sure that the option card is correctly connected to the connector. If the problem continues, replace the option card.

Code	Name	Causes	Possible Solutions
oFA16	Option Receive Frame Error	A fault occurred in the option card.	De-energize the drive. Make sure that the option card is correctly connected to the connector. If the problem continues, replace the option card.
oFA17	Option Receive Abort Error	A fault occurred in the option card.	 De-energize the drive. Make sure that the option card is correctly connected to the connector. If the problem continues, replace the option card.
oFA30	COM ID Error	A fault occurred in the option card.	 De-energize the drive. Make sure that the option card is correctly connected to the connector. If the problem continues, replace the option card.
oFA31	Type Code Error	A fault occurred in the option card.	 De-energize the drive. Make sure that the option card is correctly connected to the connector. If the problem continues, replace the option card.
oFA32	SUM Check Error	A fault occurred in the option card.	 De-energize the drive. Make sure that the option card is correctly connected to the connector. If the problem continues, replace the option card.
oFA33	Option Receive Time Over	A fault occurred in the option card.	 De-energize the drive. Make sure that the option card is correctly connected to the connector. If the problem continues, replace the option card.
oFA34	Memobus Time Over	A fault occurred in the option card.	De-energize the drive. Make sure that the option card is correctly connected to the connector. If the problem continues, replace the option card.
oFA35	Drive Receive Time Over 1	A fault occurred in the option card.	De-energize the drive. Make sure that the option card is correctly connected to the connector. If the problem continues, replace the option card.
oFA36	CI Check Error	A fault occurred in the option card.	De-energize the drive. Make sure that the option card is correctly connected to the connector. If the problem continues, replace the option card.
oFA37	Drive Receive Time Over 2	A fault occurred in the option card.	De-energize the drive. Make sure that the option card is correctly connected to the connector. If the problem continues, replace the option card.
oFA38	Control Reference Error	A fault occurred in the option card.	 De-energize the drive. Make sure that the option card is correctly connected to the connector. If the problem continues, replace the option card.
oFA39	Drive Receive Time Over 3	A fault occurred in the option card.	De-energize the drive. Make sure that the option card is correctly connected to the connector. If the problem continues, replace the option card.
oFA40	CtrlResSel 1Err	A fault occurred in the option card.	De-energize the drive. Make sure that the option card is correctly connected to the connector. If the problem continues, replace the option card.
oFA41	Drive Receive Time Over 4	A fault occurred in the option card.	De-energize the drive. Make sure that the option card is correctly connected to the connector. If the problem continues, replace the option card.
oFA42	CtrlResSel 2Err	A fault occurred in the option card.	De-energize the drive. Make sure that the option card is correctly connected to the connector. If the problem continues, replace the option card.
oFA43	Drive Receive Time Over 5	A fault occurred in the option card.	 De-energize the drive. Make sure that the option card is correctly connected to the connector. If the problem continues, replace the option card.

Code	Name	Causes	Possible Solutions
oFb00	Option Not Compatible with Port	The option connected to connector CN5-B is not compatible.	Connect the option to the correct connector. Note: The communication options cannot connect to connector CN5-B.
oFb01	Option Fault/Connection Error	The option card connected to connector CN5-B was changed during operation.	De-energize the drive. Refer to the option card manual and correctly connect the option card to the connector on the drive.
oFb02	Duplicate Options	The same option cards or the same type of option cards are connected to connectors CN5-A and B.	Connect the option card to the correct connector.
oFb03	Diagnostic Error	A fault occurred in the option card.	De-energize the drive. Make sure that the option card is correctly connected to the connector. If the problem continues, replace the option card.
oFb04	Flash Write Mode	A fault occurred in the option card.	De-energize the drive. Make sure that the option card is correctly connected to the connector. If the problem continues, replace the option card.
oFb05	Option A/D Error	A fault occurred in the option card.	De-energize the drive. Make sure that the option card is correctly connected to the connector. If the problem continues, replace the option card.
oFb06	Option Communication Error	A fault occurred in the option card.	De-energize the drive. Make sure that the option card is correctly connected to the connector. If the problem continues, replace the option card.
oFb10	Option RAM Error	A fault occurred in the option card.	De-energize the drive. Make sure that the option card is correctly connected to the connector. If the problem continues, replace the option card.
oFb11	Option Ope Mode Error	A fault occurred in the option card.	De-energize the drive. Make sure that the option card is correctly connected to the connector. If the problem continues, replace the option card.
oFb12	Drive Receive CRC Error	A fault occurred in the option card.	De-energize the drive. Make sure that the option card is correctly connected to the connector. If the problem continues, replace the option card.
oFb13	Drive Receive Frame Error	A fault occurred in the option card.	De-energize the drive. Make sure that the option card is correctly connected to the connector. If the problem continues, replace the option card.
oFb14	Drive Receive Abort Error	A fault occurred in the option card.	De-energize the drive. Make sure that the option card is correctly connected to the connector. If the problem continues, replace the option card.
oFb15	Option Receive CRC Error	A fault occurred in the option card.	De-energize the drive. Make sure that the option card is correctly connected to the connector. If the problem continues, replace the option card.
oFb16	Option Receive Frame Error	A fault occurred in the option card.	De-energize the drive. Make sure that the option card is correctly connected to the connector. If the problem continues, replace the option card.
oFb17	Option Receive Abort Error	A fault occurred in the option card.	De-energize the drive. Make sure that the option card is correctly connected to the connector. If the problem continues, replace the option card.
оН	Heatsink Overheat	The ambient temperature is high and the heatsink temperature of the drive is more than the value set in L8-02 [Overheat Alarm Level].	Measure the ambient temperature. Increase the airflow in the control panel. Install a cooling device (cooling fan or air conditioner) to lower the ambient temperature. Remove objects near the drive that are producing too much heat.

Code	Name	Causes	Possible Solutions
		The load is too heavy.	 Measure the output current. Decrease the load. Decrease the value set in <i>C6-02 [Carrier Frequency Selection]</i>.
		The internal cooling fan of the drive stopped.	 Use the procedures in this manual to replace the cooling fan. Set o4-03 = 0 [Fan Operation Time Setting = 0 h].
оН1	Heatsink Overheat	The ambient temperature is high and the heatsink temperature of the drive is more than the <i>oH1</i> detection level.	Measure the ambient temperature. Increase the airflow in the control panel. Install a cooling device (cooling fan or air conditioner) to lower the ambient temperature. Remove objects near the drive that are producing too much heat.
		The load is too heavy.	 Measure the output current. Decrease the load. Decrease the value set in <i>C6-02 [Carrier Frequency Selection]</i>.
оН3	Motor Overheat (PTC Input)	The thermistor wiring that detects motor temperature is defective.	Correct wiring errors.
		A fault occurred on the machine. Example: The machine is locked.	Examine the machine and remove the cause of the fault
		The motor has overheated.	 Check the load level, acceleration/deceleration time, and motor start/stop frequency (cycle time). Decrease the load. Increase the values set in C1-01 to C1-04 [Acceleration/ Deceleration Times]. Set E2-01 [Motor Rated Current (FLA)] correctly to the value specified by the motor nameplate. Make sure that the motor cooling system is operating correctly, and repair or replace it if it is damaged. Adjust E1-04 to E1-10 [V/F Pattern Parameters]. For motor 2, adjust E3-04 to E3-10. Decrease the values set in E1-08 [Mid Point A Voltage] and E1-10 [Minimum Output Voltage]. Note: If the values set in E1-08 and E1-10 are too low, the overload tolerance will decrease at low speeds.
oH4	Motor Overheat Fault (PTC Input)	The motor has overheated.	 Check the load level, acceleration/deceleration time, and motor start/stop frequency (cycle time). Decrease the load. Increase the values set in C1-01 to C1-04 [Acceleration/ Deceleration Times]. Set E2-01 [Motor Rated Current (FLA)] correctly to the value specified by the motor nameplate. Make sure that the motor cooling system is operating correctly, and repair or replace it if it is damaged. Adjust E1-04 to E1-10 [V/F Pattern Parameters]. For motor 2, adjust E3-04 to E3-10. Decrease the values set in E1-08 [Mid Point A Voltage] and E1-10 [Minimum Output Voltage]. Note: If E1-08 and E1-10 are set too low, the overload tolerance will decrease at low speeds.
oL1	Motor Overload	The load is too heavy.	Decrease the load. Note: Reset <i>oL1</i> when <i>U4-16 [Motor oL1 Level] <</i> 100.
		The acceleration/deceleration times or cycle times are too short.	Examine the acceleration/deceleration times and the motor start/ stop frequencies (cycle times). Increase the values set in C1-01 to C1-04 [Acceleration/ Deceleration Times].
		Overload occurred while running at low speed.	Decrease the load when running at low speed. Increase the motor speed. If the motor is run frequently at low speeds, replace the motor with a larger motor or use a drive-dedicated motor. Note: For general-purpose motors, overload can occur while running at low speed when operating at below the rated current.
		L1-01 [Motor Overload (oL1) Protection] is set incorrectly.	Set $L1$ - 01 in as specified by the motor qualities for a drive-dedicated motor.

Code	Name	Causes	Possible Solutions
		The V/f pattern does not fit the motor qualities.	 Examine the ratios between the V/f pattern frequency and voltage. Decrease the voltage if it is too high compared to the frequency. Adjust E1-04 to E1-10 [V/f Pattern Parameters]. For motor 2, adjust E3-04 to E3-10. Decrease the values set in E1-08 [Mid Point A Voltage] and E1-10 [Minimum Output Voltage]. Note: If the values set in E1-08 and E1-10 are too low, the overload tolerance will decrease at low speeds.
		E1-06 [Base Frequency] is set incorrectly.	Set <i>E1-06</i> to the rated frequency shown on the motor nameplate.
		One drive is operating more than one motor.	Set L1-01 = 0 [Motor Overload (oL1) Protection = Disabled], connect thermal overload relay to each motor to prevent damage to the motor.
		The electronic thermal protector qualities and the motor overload properties do not align.	Examine the motor qualities and set L1-01 [Motor Overload (oL1) Protection] correctly. Connect a thermal overload relay to the motor.
		The electronic thermal protector is operating at an incorrect level.	Set E2-01 [Motor Rated Current (FLA)] correctly to the value specified by the motor nameplate.
		There is increased motor loss from overexcitation operation.	 Lower the value set in n3-13 [OverexcitationBraking (OEB) Gain]. Set L3-04 ≠ 4 [Stall Prevention during Decel ≠ Overexcitation/ High Flux]. Set n3-23 = 0 [Overexcitation Braking Operation = Disabled].
		The speed search-related parameters are set incorrectly.	 Examine the settings for all speed search related parameters. Adjust b3-03 [Speed Search Deceleration Time]. Set b3-24 = 1 [Speed Search Method Selection = Speed Estimation] after Auto-Tuning.
		Phase loss in the input power supply is causing the output current to change.	Make sure that there is no phase loss, and repair problems.
		Overload occurred during overexcitation deceleration.	 Decrease the value set in n3-13 [OverexcitationBraking (OEB) Gain]. Decrease the value set in n3-21 [HSB Current Suppression Level].
oL2	Drive Overload	The load is too large.	Decrease the load.
		The acceleration/deceleration times or cycle times are too short.	Examine the acceleration/deceleration times and the motor start/ stop frequencies (cycle times). Increase the values set in C1-01 to C1-04 [Acceleration/ Deceleration Times].
		The V/f pattern does not fit the motor qualities.	 Examine the ratios between the V/f pattern frequency and voltage. Decrease the voltage if it is too high compared to the frequency. Adjust E1-04 to E1-10 [V/f Pattern Parameters]. Decrease the values set in E1-08 [Mid Point A Voltage] and E1-10 [Minimum Output Voltage]. For motor 2, adjust E3-04 to E3-10. Note: If the values set in E1-08 and E1-10 are too low, the overload tolerance will decrease at low speeds.
		The drive capacity is too small.	Replace the drive with a larger capacity model.
		Overload occurred while running at low speed.	 Decrease the load when running at low speed. Replace the drive with a larger capacity model. Decrease the value set in <i>C6-02 [Carrier Frequency Selection]</i>.
		The torque compensation gain is too large.	Decrease the value set in C4-01 [Torque Compensation Gain] to make sure that the motor does not stall.
		The speed search-related parameters are set incorrectly.	 Examine the settings for all speed search-related parameters. Adjust b3-03 [Speed Search Deceleration Time]. Set b3-24 = 1 [Speed Search Method Selection = Speed Estimation] after Auto-Tuning.
		Phase loss in the input power supply is causing the output current to change.	Correct errors with the wiring for main circuit drive input power. Make sure that there is no phase loss, and repair problems.
		Overload occurred during overexcitation deceleration.	Decrease the value set in n3-13 [OverexcitationBraking (OEB) Gain]. Decrease the value set in n3-21 [HSB Current Suppression Level].
oL3	Overtorque Detection 1	A fault occurred on the machine. Example: The machine is locked.	Examine the machine and remove the cause of the fault.

Code	Name	Causes	Possible Solutions
		The parameters are incorrect for the load.	Adjust L6-02 [Torque Detection Level 1] and L6-03 [Torque Detection Time 1] settings.
oL4	Overtorque Detection 2	A fault occurred on the machine. Example: The machine is locked.	Examine the machine and remove the cause of the fault.
		The parameters are incorrect for the load.	Adjust L6-05 [Torque Detection Level 2] and L6-06 [Torque Detection Time 2] settings.
oL7	High Slip Braking Overload	The load inertia is too large.	Decrease deceleration times in C1-02 and C1-04 [Deceleration Times] for applications that do not use High Slip Braking.
		An external force on the load side rotated the motor.	Times 101 applications that do not use fright stip Braking.
		Something is preventing deceleration on the load side.	
		The value set in <i>n3-04 [HSB Overload Time]</i> is too small.	 Increase the value set in n3-04. Connect a thermal overload relay to the motor, and set n3-04 = 1200 s (maximum value).
oPr	Keypad Connection Fault	The keypad is not securely connected to the connector on the drive.	Examine the connection between the keypad and the drive.
		The connection cable between the drive and the keypad is disconnected.	Remove the keypad and connect it again. If the cable is damaged, replace it.
oS	Overspeed	There is overshoot.	Decrease C5-01 [ASR Proportional Gain 1] and increase C5-02 [ASR Integral Time 1].
ov	Overvoltage	Deceleration time is too short and regenerative energy is flowing from the motor into the drive.	Set L3-04 = 1 [Stall Prevention during Decel = General Purpose]. Increase the values set in C1-02 or C1-04 [Deceleration Times]. Perform Deceleration Rate Auto-Tuning.
		The acceleration time is too short.	 Make sure that sudden drive acceleration does not cause the fault. Increase the values set in C1-01 or C1-03 [Acceleration Times]. Increase the value set in C2-02 [S-Curve Time @ End of Accel]. Set L3-11 = 1 [Overvoltage Suppression Select = Enabled].
		The drive output cable or motor is shorted to ground (the current short to ground is charging the main circuit capacitor of the drive through the power supply).	Examine the motor main circuit cable, terminals, and motor terminal box, and then remove ground faults. Re-energize the drive.
		If the drive detects ov in these conditions, the speed search-related parameters are incorrect: • During speed search • During momentary power loss recovery • When the drive starts again automatically • When you set A1-02 = 0 [Control Method Selection = Vif Control] and do rotational Auto-Tuning • You are using a premium efficiency motor	 Examine the settings for all speed search related parameters. Set b3-19 ≠ 0 [Speed Search Restart Attempts ≠ 0 times]. Adjust b3-03 [Speed Search Deceleration Time] setting. Do Stationary Auto-Tuning for Line-to-Line Resistance and then set b3-24 = 1 [Speed Search Method Selection = Speed Estimation]. Increase the value set in L2-04 [Powerloss V/f Recovery Ramp Time]. Set these parameters: b3-03 [Speed Search Deceleration Time] = default value × 2 L2-04 [Powerloss V/f Recovery Ramp Time] = default value × 2
		The power supply voltage is too high.	Decrease the power supply voltage to align with the drive rated voltage.
		Electrical interference caused a drive malfunction.	Examine the control circuit lines, main circuit lines, and ground wiring, and decrease the effects of electrical interference. Make sure that a magnetic contactor is not the source of the electrical interference, then use a Surge Protective Device if necessary.
		The load inertia is set incorrectly.	 Examine the load inertia settings with KEB, overvoltage suppression, or stall prevention during deceleration. Adjust L3-25 [Load Inertia Ratio] to align with the qualities of the machine.
		There is motor hunting.	Adjust n1-02 [Hunting Prevention Gain Setting] settings. Adjust n8-45 [Speed Feedback Detection Gain] and n8-47 [Pullin Current Comp Filter Time] settings.
		Speed search does not complete at start when you use an induction motor in EZOLV control.	When E9-01 = 0 [Motor Type Selection = Induction (IM)], set b3- 24 = 2 [Speed Search Method Selection = Current Detection 2].
ov2	DC Bus Overvoltage 2	The wiring is too long and DC bus voltage is too large.	Shorten the shielded motor cable. Decrease the carrier frequency. If the power supply has a neutral ground, switch on the internal EMC filter.

Code	Name	Causes	Possible Solutions
PE1	PLC Fault 1	The communication option detected a fault.	Refer to the manual for the communication option card.
PE2	PLC Fault 2	The communication option detected a fault.	Refer to the manual for the communication option card.
PF	Input Phase Loss	There is a phase loss in the drive input power.	Correct errors with the wiring for main circuit drive input power.
		There is loose wiring in the drive input power terminals.	Tighten the terminal screws to the correct tightening torque.
		The drive input power voltage is changing too much.	Examine the input power for problems. Make the drive input power stable. If the input power supply is good, examine the magnetic contactor on the main circuit side for problems.
		There is unsatisfactory balance between voltage phases.	 Examine the input power for problems. Make the drive input power stable. Set L8-05 = 0 [Input Phase Loss Protection Sel = Disabled].
		The main circuit capacitors have become unserviceable.	Examine the capacitor maintenance time in monitor <i>U4-05</i> [Capacitor Life Mon]. If <i>U4-05</i> is more than 90%, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative. If drive input power is correct and the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.
POC	Pump Over Cycle	Pump in the system exceeded the number cycles from normal operation to sleep mode set in Y2-10 [Max Cycling Protection Allowed] in the time set in Y2-11 [Cycling Count Decrement Time].	Adjust sleep parameters to prevent the system from over cycling between normal operation and sleep mode.
PSE	JOHB-SMP3 Protocol Set Error	The DIP switches on the JOHB-SMP3 Multi-Protocol Ethernet Card are at factory default settings. The DIP switches on the JOHB-SMP3 are not set to a valid protocol.	Remove power from the drive, wait for the charge light to go out, then set the DIP switches on the JOHB-SMP3 to the desired protocol. Note: Refer to the instructions packaged with the JOHB-SMP3 for more information about DIP switch settings.
SC	Short Circuit/IGBT Failure	Overheating caused damage to the motor or the motor insulation is not satisfactory.	Measure the motor insulation resistance, and replace the motor if there is electrical conduction or unserviceable insulation.
		The motor main circuit cable is contacting ground to make a short circuit.	Examine the motor main circuit cable for damage, and repair short circuits. Measure the resistance between the motor main circuit cable and the ground terminal. If there is electrical conduction, replace the cable.
		A short circuit or ground fault on the drive output side caused damage to the output transistor of the drive.	Make sure that there is not a short circuit in terminals +1 and terminals U/T1, V/T2, and W/T3. Make sure that there is not a short circuit in terminals - and terminals U/T1, V/T2, and W/T3. If there is a short circuit, contact Yaskawa or your nearest sales representative.
		When A1-02 = 5 [Control Method Selection = OLV/PM], the output current is more than the value set in L8-27 [Overcurrent Detection Gain].	Set L8-27 correctly.
SCF	Safety Circuit Fault	The safety circuit is broken.	Make sure that you ground the drive correctly and re-energize the drive. If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.
SEr	Speed Search Retries Exceeded	The speed search-related parameters are set incorrectly.	 Decrease b3-10 [Speed Estimation Detection Gain]. Increase b3-17 [Speed Est Retry Current Level]. Increase b3-18 [Speed Est Retry Detection Time]. Do Auto-Tuning again.
		The motor is coasting in the opposite direction of the Run command.	Set b3-14 = 1 [Bi-directional Speed Search = Enabled].
SPCNR	Single Phase Converter Not Ready	When YC-14 = 0 [Behavior when SPC is Not Ready = Coast to Stop - Fault], the digital input set to H1-xx = BE [MFDI Function Selection = Single Phase Converter Ready NC] deactivated to show the attached converter is faulted or not ready.	Examine the wiring between the drive and converter. Examine the error code on converter.
SPL	Suction Pressure Feedback Loss	Wire Break detection for suction pressure. The analog input programmed for Water Level / Suct Pres Feedback is less than 3 mA or more than 21 mA for longer than 1 second and YE-19 = 2 or 3 [Suction Pressure Fdbk Wire Break = Fault (and Digital Output) or Auto-Restart (time set by YE-38)].	Repair level sensor. Repair wiring.

Code	Name	Causes	Possible Solutions
STPo	Motor Step-Out Detected	The motor code is set incorrectly for PM Control Methods.	Set <i>E5-01 [PM Motor Code Selection]</i> correctly as specified by the motor. For specialized motors, refer to the motor test report and set <i>E5-xx</i> correctly.
		The load is too large.	Increase the value set in n8-55 [Motor to Load Inertia Ratio]. Increase the value set in n8-51 [Pull-in Current @ Acceleration]. If the drive detects STPo during deceleration when increasing the value set in n8-51, set the value of n8-79 [Pull-in Current @ Deceleration] lower than n8-51. Decrease the load. Replace the drive and motor with larger capacity models.
		The load inertia is too large.	Increase the value set in n8-55.
		The acceleration/deceleration times are too short.	Increase the values set in C1-01 to C1-04 [Acceleration/ Deceleration Times]. Increase the value set in C2-01 [S-Curve Time @ Start of Accel].
		Speed response is too slow.	Increase the value set in <i>n</i> 8-55.
TiM	Keypad Time Not Set	There is a battery in the keypad, but the date and time are not set.	Use the keypad to set the date and time.
UL3	Undertorque Detection 1	A fault occurred on the machine. Example: There is a broken pulley belt.	Examine the machine and remove the cause of the fault.
		The parameters are incorrect for the load.	Adjust L6-02 [Torque Detection Level 1] and L6-03 [Torque Detection Time 1] settings.
UL4	Undertorque Detection 2	A fault occurred on the machine. Example: There is a broken pulley belt.	Examine the machine and remove the cause of the fault.
		The parameters are incorrect for the load.	Adjust L6-05 [Torque Detection Level 2] and L6-06 [Torque Detection Time 2] settings.
UL6	Underload or Belt Break Detected	The output current decreased less than the motor underload curve set in L6-14 [Motor Underload Level @ Min Freq] for longer than the time set in L6-03 [Torque Detection Time 1].	Adjust the $L6-14$ setting to set the output current to stay the level more than the motor underload curve during usual operations.
Uv1	DC Bus Undervoltage	There is a phase loss in the drive input power.	Correct errors with the wiring for main circuit drive input power.
		There is loose wiring in the drive input power terminals.	Tighten the terminal screws to the correct tightening torque.
		The drive input power voltage is changing too much.	 Examine the input power for problems. Make the drive input power stable. If the input power supply is good, examine the magnetic contactor on the main circuit side for problems.
		There was a loss of power.	Use a better power supply.
		The main circuit capacitors have become unserviceable.	Examine the capacitor maintenance time in monitor <i>U4-05</i> [Capacitor Life Mon]. If <i>U4-05</i> is more than 90%, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.
		The relay or contactor on the soft-charge bypass relay is damaged.	U4-06 [PreChargeRelayMon] shows the performance life of the soft-charge bypass relay. If U4-06 is more than 90%, replace the board or the drive. For information about replacing the board, contact Yaskawa or your nearest sales representative.
Uv2	Control Power Undervoltage	The value set in L2-02 [Power Loss Ride Through Time] increased and the momentary power loss recovery unit is not connected to the drive.	Connect the momentary power loss recovery unit to the drive.
		There was a problem with the drive hardware.	Re-energize the drive. If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.
Uv3	Soft Charge Answerback Fault	The relay or contactor on the soft-charge bypass relay is damaged.	Re-energize the drive. If the fault stays, replace the control board or the drive. Check monitor <i>U4-06 [PreChargeRelayMon]</i> , which shows the performance life of the soft-charge bypass relay. If <i>U4-06</i> is more than 90%, replace the board or the drive. For information about replacing the board, contact Yaskawa or your nearest sales representative.
		Air inside the drive is too hot.	Check the ambient temperature of the drive.

Code	Name	Causes	Possible Solutions
VLTS	Volute Thermostat Fault	The digital input from the terminal set for <i>Volute Thermostat Fault [H1-xx = 88 or 188]</i> is active.	Examine the wiring or wait for the motor to cool.
WLL	Water Level Feedback Loss	Wire Break detection for water level. The Analog input programmed for Water Level / Suction Pressure is less than 3 mA or is more than 21 mA for longer than 1 second with $Yd-16 \neq 0$ [Water Level Feedback Wire Break \neq No Display].	Repair level sensor. Repair wiring.

♦ Minor Faults/Alarms

This section gives information about the causes and possible solutions when a minor fault or alarm occurs. Use the information in this table to remove the cause of the minor fault or alarm.

Code	Name	Causes	Possible Solutions
Accum	Accumulated Level Reached	Accumulated volume has is more than the Y6-11 to Y6-14 settings and Y6-15 = 1 or 4 [Accumulated Volume Behavior = Alarm (and Digital Output) or Stop + Alarm + MFDO]	Set Y6-05 = 7770 [Flow Accumulation Set Reset = Reset Accumulation] or via Reset Accumulation digital input).
AEr	Station Address Setting Error	The node address for the communication option is not in the permitted setting range.	For CANopen communication, set F6-35 [CANopen Node ID Selection] correctly.
AFBL	Analog Fdbk Lost Switched to Net	Defective or broken analog input source.	Make sure that the PID Feedback source is installed and working correctly. If there is no PID Feedback source, set Y9-02 = 3 [System Feedback Source = Network Only] to have it always read from the Network PID Feedback of another drive.
		$H3-0x \neq B$ [PID Feedback]	Set $H3-0x = B$ [PID Feedback] if the analog input source is to be used for PID Feedback. When the drive does not have an analog PID Feedback source, set $Y9-02 = 3$.
AJA	Anti-Jam Active	The drive is doing the Anti-Jam function.	The alarm will clear when the function is complete.
ALRC	Accum Lvl Reached Cycle Run Cmd	Accumulated volume has is more than the Y6-11 to Y6-14 settings and Y6-15 = 5 [Accumulated Volume Behavior = Stop + Alarm + MFDO + AccumReset]	Cycle the Run command.
AUdiS	Low WL/SP/PI Aux FB Drv Disabled	Drive is not allowed to run in MEMOBUS Multiplex when Y9-51 = 1 [WaterLvl/SuctPres/P1 Aux TurnOff = Enabled], WL/SP/PI Aux Feedback is below the Yd-06/YE-06/YF-06 setting, and the drive is stopped or running as a Lag drive.	Confirm the setting of <i>Yd-06/YE-06/YF-06</i> . Wait for the WL/SP/PI Aux Control Feedback to recover.
AUFbL	WL/SP/PI Aux Fdbk Lost Using Net	Defective or broken analog input source. The drive detected a wire break with the PI Auxiliary Control Feedback Level analog signal [H3-xx = 27] or the Water Level / Suction Pressure analog signal [H3-xx = 3B].	Make sure that the Water Level/Suction Pressure/PI Auxiliary Control Feedback source is installed and working correctly. Confirm that Water Level/Suction Pressure/PI Auxiliary Control Feedback Wire break Behavior parameter Yd-16/YE-19/YF-19 is set correctly If there is no analog feedback, set Y9-50 = 3 [WaterLvl/SuctPres/PI Aux Source = Network Only] so that it will always read from the Water Level/Suction Pressure/PI Auxiliary Control Feedback network of another drive.
AuxFB	PI Aux Feedback Level Loss	The analog input from the terminal set to H3-xx = 27 [MFAI Function Selection = PI Auxiliary Control Feedback Level] is more than 21 mA or less than 3 mA for longer than 1 s.	Repair transducer or wiring.
bAT	Keypad Battery Low Voltage	The keypad battery voltage is low.	Replace the keypad battery.
bb	Baseblock	An external baseblock command was entered through one of the MFDI terminals Sx, and the drive output stopped as shown by an external baseblock command.	Examine the external sequence and timing of the baseblock command input.
ЬСЕ	Bluetooth Communication Error	The smartphone or tablet with DriveWizard Mobile or DriveWizard is too far from the keypad.	Move to 10 m (32.8 ft) or less from the keypad. Note: bCE can occur when the smartphone or tablet is 10 m (32.8 ft) or nearer to the keypad for different smartphone and tablet specifications.
		Radio waves from a different device are causing interference with communications between the smartphone or tablet and keypad.	Make sure that no device around the keypad uses the same radio bandwidth (2400 MHz to 2480 MHz), and prevent radio interference.
BuDif	Main Fdbk Lost, Using Diff Fdbk	Parameter Y4-41 = 1 [Diff Lvl Src Fdbk Backup Select = Enabled] and the drive detected a wire-break on the analog input terminal set for PID Feedback [H3-xx = B].	Examine the connection of the Main PID Feedback Transducer.
		Main PID Feedback Transducer is broken.	Replace Main PID Feedback Transducer.
Bu-Fb	Main Fdbk Lost Using Backup Fdbk	The drive detected wire-break on the analog input terminal set to H3-xx = B [MFAI Function Selection = PID Feedback].	Examine the connection of the Main PID Feedback Transducer.

Code	Name	Causes	Possible Solutions
		Main PID Feedback Transducer is broken.	Replace Main PID Feedback Transducer.
BuFbl	Backup Fdbk Lost Chk/Repl Xducer	The drive detected wire-break on the analog input terminal set for <i>PID Feedback Backup [H3-xx</i> = 24].	Examine the connection of the Differential PID Feedback transducer.
		Backup PID Feedback Transducer is broken.	Replace Backup PID Feedback Transducer.
		Parameter Y4-41 = 1 [Diff Lvl Src Fdbk Backup Select = Enabled] and the drive detected a wire-break on the analog input terminal set for Differential Level Source [H3-xx = 2D].	Examine the connection of the Differential PID Feedback transducer.
		Parameter $Y4-41 = I$ and the Differential PID Feedback Transducer is broken.	 Replace the Differential PID Feedback Transducer. Set Y4-41 = 0 [Disabled].
bUS	Option Communication Error	The communications cable wiring is incorrect.	Correct wiring errors.
		There is a short-circuit in the communications cable or the communications cable is not connected.	Repair short circuits and connect cables. Replace the defective communications cable.
		Electrical interference caused a communication data error.	Examine the control circuit lines, main circuit lines, and ground wiring, and decrease the effects of electrical interference. Make sure that a magnetic contactor is not the source of the electrical interference, then use a Surge Protective Device if necessary. Use only the recommended cables or other shielded line. Ground the shield on the controller side or the drive input power side. Separate the communication wiring from drive power lines, and install a noise filter to the input side of the power supply for communication. Decrease the effects of electrical interference from the controller.
		The option card is incorrectly installed to the drive.	Correctly install the option card to the drive.
		The option card is damaged.	If the alarm continues and the wiring is correct, replace the option card.
bUSy	Busy	You set the drive to use MEMOBUS/Modbus communications to change parameters, but you used the keypad to change parameters.	Use MEMOBUS/Modbus communications to enter the enter command, then use the keypad to change the parameter.
		You tried to change a parameter while the drive was changing setting.	Wait until the process is complete.
CALL	Serial Comm Transmission Error	The communications cable wiring is incorrect.	Correct wiring errors.
		There is a short circuit in the communications cable or the communications cable is not connected.	Repair the short-circuited or disconnected portion of the cable. Replace the defective communications cable.
		A programming error occurred on the controller side.	Examine communications at start-up and correct programming errors.
		There is damage to the communications circuitry.	Do a self-diagnostics check. If the problem continues, replace the control board or the drive. Contact Yaskawa or your nearest sales representative to replace the control board.
		The termination resistor setting for MEMOBUS/ Modbus communications is incorrect.	On the last drive in a MEMOBUS/Modbus network, set DIP switch S2 to the ON position to enable the termination resistor.
CE	Modbus Communication Error	The communications cable wiring is incorrect.	Correct wiring errors.
		There is a short circuit in the communications cable or the communications cable is not connected.	Repair short circuits and connect cables. Replace the defective communications cable.
		Electrical interference caused a communication data error.	Examine the control circuit lines, main circuit lines, and ground wiring, and decrease the effects of electrical interference. Make sure that a magnetic contactor is not the source of the electrical interference, then use a Surge Protective Device if necessary. Use only the recommended cables or other shielded line. Ground the shield on the controller side or the drive input power side. Separate the communication wiring from drive power lines, and install a noise filter to the input side of the power supply for communication. Decrease the effects of electrical interference from the controller.
		The communication protocol is not compatible.	Examine the values set in <i>H5-xx</i> . Examine the settings on the controller side and correct the difference in communication conditions.
		The value set in <i>H5-09 [CE Detection Time]</i> is too small for the communications cycle.	 Change the controller software settings. Increase the value set in <i>H5-09</i>.
		The controller software or hardware is causing a communication problem.	Examine the controller and remove the cause of the problem.

	Name	Causes	Possible Solutions
CE	Run at H5-34 (CE Go-To-Freq)	The communications cable wiring is incorrect.	Correct wiring errors.
		There is a short circuit in the communications cable or the communications cable is not connected.	Repair short circuits and connect cables. Replace the defective communications cable.
		Electrical interference caused a communication data error.	Examine the control circuit lines, main circuit lines, and ground wiring, and decrease the effects of electrical interference. Make sure that a magnetic contactor is not the source of the electrical interference, then use a Surge Protective Device if necessary. Use only recommended shielded line. Ground the shield on the controller side or on the drive input power side. Separate the communication wiring from drive power lines, and install a noise filter to the input side of the power supply for communication. Decrease the effects of electrical interference from the controller.
		The communication protocol is not compatible.	 Examine the values set in <i>H5-xx</i>. Examine the settings on the controller side and correct the difference in communication conditions.
		The value set in <i>H5-09 [CE Detection Time]</i> is too small for the communications cycle.	 Make sure that the settings are compatible. Change the software settings in the PLC. Increase the value set in <i>H5-09</i>.
		The controller software or hardware is causing a communication problem.	Examine the controller and remove the cause of the problem.
CrST	Cannot Reset	The drive received a fault reset command when a Run command was active.	Turn off the Run command then de-energize and re-energize the drive.
СуРо	Cycle Power to Accept Changes	Although F6-15 = 1 [Comm. Option Parameters Reload = Reload Now], the drive does not update the communication option parameters.	Re-energize the drive to update the communication option parameters.
dEv	Speed Deviation	The load is too heavy	Decrease the load.
		Acceleration and deceleration times are set too short.	Increase the values set in C1-01 to C1-04 [Acceleration/Deceleration Time].
		The dEv detection level settings are incorrect.	Adjust F1-10 [Speed Deviation Detection Level] and F1-11 [Speed Deviation Detect DelayTime].
		The load is locked up.	Examine the machine.
		The holding brake is stopping the motor.	Release the holding brake.
DIFF	Differential Feedback Exceeded	The difference between the PID Feedback and Differential Level Source [H3-xx = 2D] is more than the level set in Y4-18 [Pre-Charge Loss of Prime Level 2] for the time set in Y4-19 [Differential Lvl Detection Time].	Replace the feedback transducer or transducers. Set <i>Y4-18</i> and <i>Y4-19</i> correctly.
dnE	Drive Disabled	A terminal set for $H1$ - $xx = 6A$ [MFDI Function Selection = Drive Enable] deactivated.	Examine the operation sequence.
DRA	De-Rag Active	The drive is doing the De-Rag function.	The alarm will clear when the function is complete.
dWAL	DriveWorksEZ Alarm	There was an error in the DriveWorksEZ program.	Examine the DriveWorksEZ program and remove the cause of the error. This is not a drive fault.
dWA2	DriveWorksEZ Alarm 2	There was an error in the DriveWorksEZ program.	Examine the DriveWorksEZ program and remove the cause of the error. This is not a drive fault.
dWA3	DriveWorksEZ Alarm 3	There was an error in the DriveWorksEZ program.	Examine the DriveWorksEZ program and remove the cause of the error. This is not a drive fault.
DS	De-Scale/De-Rag Active	The terminal is set to $H2$ - $xx = C5$ or $IC5$ [MFDO Function Selection De-Scale or !De-Scale] and the set length of run time elapsed.	 If you do not want to do De-Scale/De-Rag, set Y8-01 = 0 [De-Scale Operation Selection = Disabled]. Adjust the Y8-08 [Run Time before De-Scale] setting.
EF	FWD/REV Run Command Input Error	The drive received a forward command and a reverse command at the same time for longer than 0.5 s.	Examine the forward and reverse command sequence and correct the problem.
EF0	Option Card External Fault	The communication option card received an external fault from the controller.	Find the device that caused the external fault and remove the cause. Clear the external fault input from the controller.
		Programming error occurred on the controller side.	Examine the operation of the controller program.
	P F 1: (T : 101)	MFDI terminal S1 caused an external fault through an	Find the device that caused the external fault and remove the
EF1	Pump Fault (Terminal S1)	external device.	cause. 2. Clear the external fault input in the MFDI.

	Causes	Possible Solutions
	Pump Fault [H1-01 = $2C$ to $2F$] is set to MFDI terminal S1, but the terminal is not in use.	Correctly set the MFDI.
Pump Fault (Terminal S2)	MFDI terminal S2 caused an external fault through an external device.	Find the device that caused the external fault and remove the cause. Clear the external fault input in the MFDI.
	The wiring is incorrect.	Correctly connect the signal line to MFDI terminal S2.
	Pump Fault [$H1-02 = 2C$ to $2F$] is set to MFDI terminal S2, but the terminal is not in use.	Correctly set the MFDI.
Pump Fault (Terminal S3)	MFDI terminal S3 caused an external fault through an external device.	Find the device that caused the external fault and remove the cause. Clear the external fault input in the MFDI.
	The wiring is incorrect.	Correctly connect the signal line to MFDI terminal S3.
	Pump Fault [H1-03 = 2C to 2F] is set to MFDI terminal S3, but the terminal is not in use.	Correctly set the MFDI.
Pump Fault (Terminal S4)	MFDI terminal S4 caused an external fault through an external device.	Find the device that caused the external fault and remove the cause. Clear the external fault input in the MFDI.
	The wiring is incorrect.	Correctly connect the signal line to MFDI terminal S4.
	Pump Fault [H1-04 = 2C to 2F] is set to MFDI terminal S4, but the terminal is not in use.	Correctly set the MFDI.
Pump Fault (Terminal S5)	MFDI terminal S5 caused an external fault through an external device.	Find the device that caused the external fault and remove the cause. Clear the external fault input in the MFDI.
	The wiring is incorrect.	Correctly connect the signal line to MFDI terminal S5.
	Pump Fault [H1-05 = 2C to 2F] is set to MFDI terminal S5, but the terminal is not in use.	Correctly set the MFDI.
Pump Fault (Terminal S6)	MFDI terminal S6 caused an external fault through an external device.	Find the device that caused the external fault and remove the cause. Clear the external fault input in the MFDI.
	The wiring is incorrect.	Correctly connect the signal line to MFDI terminal S6.
	Pump Fault [H1-06 = 2C to 2F] is set to MFDI terminal S6, but the terminal is not in use.	Correctly set the MFDI.
Pump Fault (Terminal S7)	MFDI terminal S7 caused an external fault through an external device.	Find the device that caused the external fault and remove the cause.
	m	2. Clear the external fault input in the MFDI.
		Correctly connect the signal line to MFDI terminal S7.
	Pump Fault [H1-07 = 2C to 2F] is set to MFDI terminal S7, but the terminal is not in use.	Correctly set the MFDI.
Pump Fault (Terminal S8)	MFDI terminal S8 caused an external fault through an external device.	Find the device that caused the external fault and remove the cause. Clear the external fault input in the MFDI.
	The wiring is incorrect.	Correctly connect the signal line to MFDI terminal S8.
	Pump Fault [H1-08 = 2C to 2F] is set to MFDI terminal S8, but the terminal is not in use.	Correctly set the MFDI.
Emergency Override FWD	The digital input terminal set to H1-xx = AF [MFDI Function Selection = Emergency Override FWD] activated.	When the emergency condition is gone, deactivate the digital input set to <i>Emergency Override FWD</i> .
Emergency Override REV	The digital input terminal set to H1-xx = B0 [MFDI Function Selection = Emergency Override REV] activated.	When the emergency condition is gone, deactivate the digital input set to <i>Emergency Override REV</i> .
External Power 24V Supply	The voltage of the main circuit power supply decreased, and the 24 V power supply is supplying power to the drive.	Examine the main circuit power supply. Turn ON the main circuit power supply to run the drive.
Feedback Loss Wire Break	The analog input from the terminal set to H3-xx = B [MFAI Function Selection = PID Feedback] is more than 21 mA or less than 3 mA for longer than 1 s in these conditions: • b5-82 = 1 [Feedback Loss 4 ~ 20mA Detect Sel = Alarm Only] • b5-01 ≠ 0 [PID Mode Setting ≠ Disabled] • H3-01, H3-09, or H3-05 = 2 [Terminal A1/A2/A3]	Make sure that you install the PID feedback source and it operates correctly.
	Pump Fault (Terminal S3) Pump Fault (Terminal S4) Pump Fault (Terminal S5) Pump Fault (Terminal S6) Pump Fault (Terminal S7) Pump Fault (Terminal S8) Emergency Override FWD Emergency Override REV External Power 24V Supply	Pump Fault (Terminal S2) MFDI terminal S2 caused an external fault through an external device. The wiring is incorrect. Pump Fault (Terminal S3) MFDI terminal S2, but the terminal is not in use.

Code	Name	Causes	Possible Solutions
FLGT	Feedback Loss, Go To Freq b5-83	The analog input from the terminal set to H3-xx = B [MFAI Function Selection = PID Feedback] is more than 21 mA or less than 3 mA for longer than 1 s in these conditions: • b5-82 = 3 [Feedback Loss 4 ~ 20mA Detect Sel = Run At b5-83] • b5-01 \neq 0 [PID Mode Setting \neq Disabled] • H3-01, H3-09, or H3-05 = 2 [Terminal A1/A2/A3 Signal Level Selection = 4 to 20 mA]	Make sure that you install the PID feedback source and it operates correctly.
FMLST	Net Flow Meter Lost:Check Source	There is no drive on the MEMOBUS Network with a valid Flow Meter source. When $Y1$ - $01 = 3$ [Multiplex Mode = Network Multiplex], $Y6$ - 01 [Flow Meter Scaling] > 0.0 and $Y9$ - $40 = 0$ [Flow Rate Source = Network], the Flow Meter function needs a valid Flow Rate from the network that is originating from another drive that also has $Y6$ - $01 > 0.0$ with $Y9$ - $40 = 0$.	 If the drive has an operational Flow Meter connected to an analog or pulse input terminal, set Y9-40 = 0 [Analog]. If another drive on the MEMOBUS Network has a Flow meter connected to an analog or pulse input terminal, confirm that drive is online with Y6-01 > 0.0 and Y9-40 = 0.
FR <ms< td=""><td>Freq Ref < Minimum Speed (Y1-06)</td><td>The drive frequency reference setting is less than the value set in Y1-06 [Minimum Speed] in these conditions: • The drive is not in PI Mode • The drive is running • Minimum Speed is enabled (Y1-06 > 0.00) • Y1-06 > Y4-12 [Thrust Frequency]</td><td>Increase the frequency reference to a value more than Y1-06.</td></ms<>	Freq Ref < Minimum Speed (Y1-06)	The drive frequency reference setting is less than the value set in Y1-06 [Minimum Speed] in these conditions: • The drive is not in PI Mode • The drive is running • Minimum Speed is enabled (Y1-06 > 0.00) • Y1-06 > Y4-12 [Thrust Frequency]	Increase the frequency reference to a value more than Y1-06.
FR <th< td=""><td>Freq. Reference < Thrust (Y4-12)</td><td>The drive frequency reference setting is less than the value set in Y4-12 [Thrust Frequency] in these conditions: • The drive is not in PI Mode • The drive is running • Thrust is enabled (Y4-11 [Thrust Acceleration Time] > 0.00 and Y4-12 > Y1-06 [Minimum Speed])</td><td>Increase the frequency reference to a value more than <i>Y4-12</i>.</td></th<>	Freq. Reference < Thrust (Y4-12)	The drive frequency reference setting is less than the value set in Y4-12 [Thrust Frequency] in these conditions: • The drive is not in PI Mode • The drive is running • Thrust is enabled (Y4-11 [Thrust Acceleration Time] > 0.00 and Y4-12 > Y1-06 [Minimum Speed])	Increase the frequency reference to a value more than <i>Y4-12</i> .
НСА	High Current Alarm	The load is too heavy.	Decrease the load for applications with repetitive starts and stops. Replace the drive with a larger capacity model.
		The acceleration time is too short.	Calculate the torque necessary during acceleration related to the load inertia and the specified acceleration time. Increase the values set in C1-01 or C1-03 [Acceleration Times] until you get the necessary torque. Increase the values set in C2-01 to C2-04 [S-Curve Characteristics] until you get the necessary torque. Replace the drive with a larger capacity model.
		The drive is trying to operate a specialized motor or a motor that is larger than the maximum applicable motor output of the drive.	Examine the motor nameplate, the motor, and the drive to make sure that the drive rated current is larger than the motor rated current. Replace the drive with a larger capacity model.
		The current level temporarily increased because of speed search after a momentary power loss or while trying to Auto Restart.	If speed search or Auto Restart cause an increase in current, the drive can temporarily show this alarm. The time that the drive shows the alarm is short. No more steps are necessary to clear the alarm.
HiAux	High PI Aux Feedback Level	PI Auxiliary Feedback is more than the level set in YF-12 [PI Aux Control High Level Detect] for the time set in YF-13 [PI Aux High Level Detection Time] in these conditions: • The drive is running. • The output frequency > 0.	 Decrease the PI Auxiliary Feedback level to less than <i>YF-12</i>. Set <i>YF-12</i> and <i>YF-13</i> correctly.
HIFB	High Feedback Sensed	The feedback level is more than the level set in Y1-11 [High Feedback Level].	Decrease the feedback level to less than Y1-11 - Y1-14 [Hysteresis Level]. Set Y1-11 and Y1-12 correctly.
HiFlo	High Flow	Flow rate was more the level set in Y6-17 [High Flow Level] for longer than the time set in Y6-18 [High Flow Detection Time] and Y6-19 = 1 [High Flow Behavior = Alarm (and Digital Output)].	Reprogram Y6-17 to Y6-19 if flow rate is acceptable.
HiSuc	High Suction Pressure	Suction pressure is more than the level set in YE-12 [High Suction Pressure Det Level] for longer than the time set in YE-13 [High Suction Pressure Det Time], and the drive is running (AUTO or HAND) and YE-14 = 1 [High Suction Pressure Behavior = Alarm (and Digital Output)].	Decrease suction pressure.
L24v	Loss of External Power 24 Supply	The voltage of the backup 24 V power supply has decreased. The main circuit power supply is operating correctly.	Examine the external 24 V power supply for disconnected wires and wiring errors and repair the problems. Examine the external 24 V power supply for problems.

Code	Name	Causes	Possible Solutions
LCP	Low City Pressure	Insufficient pressure is present on the inlet to the pump in these conditions: • Y4-24 = 0 [Low City Alarm Text = Low City Pressure] • The terminal set for H1-xx = B8 or 1B8 [MFD1 Function Selection = Low City Pressure or !Low City Pressure] activates	 Examine the pressure switch contact for correct operation. Examine control wiring to drive terminal strip from pressure switch contact. Make sure that suction pressure is present with an isolated measuring device. Set Y4-22 [Low City On-Delay Time] and Y4-23 [Low City Off-Delay Time] correctly. Deactivate the digital input terminals set to H1-xx = B8 or 1B8.
LoAux	Low PI Aux Feedback Level	When the drive is running, PI Auxiliary Feedback is less than the level set in YF-09 [PI Aux Control Low Lvl Detection] for the time set in YF-10 [PI Aux Control Low Lvl Det Time].	 Increase the PI Auxiliary Feedback level more than YF-09. Set YF-09 and YF-10 correctly.
LOFB	Low Feedback Sensed	The feedback level is less than the level set in Y1-08 [Low Feedback Level] for the time set in Y1-09 [Low Feedback Lvl Fault Dly Time].	Increase the feedback level to more than Y1-08 + Y1-14 [High Feedback Hysteresis Level]. Set Y1-08 and Y1-09 correctly.
LoG	Com Error / Abnormal SD Card	There is not a micro SD card in the keypad.	Put a micro SD card in the keypad.
		The drive is connected to USB. The number of log communication files is more than 1000. The micro SD card does not have available memory space. The line number data in a log communication file was changed. A communication error between the keypad and drive occurred during a log communication.	Set o5-01 = 0 [Log Start/Stop Selection = OFF].
		You started short-term data logging on a keypad that does not support short-term data logs.	Connect a keypad that supports short-term data logs. Note: The LCD keypad and Bluetooth LCD keypad with REV: H or later support short-term data logging. The keypad version "REV" is located on the nameplate on the back of the keypad. Set o5-00 = 0 [Log Type = Long Term Log] Set o5-01 = 0 [Log Start/Stop Selection = OFF].
LOP	Loss of Prime	The drive used the method set in Y1-18 [Prime Loss Detection Method] to detect that the pump load is less than the level set in Y1-19 [Prime Loss Level] for the time set in Y1-20 [Prime Loss Time], and the output frequency is Y1-21 [Prime Loss Activation Freq] or more.	Examine a dry well, air in the system, or no water in the system. Use preferred priming method suggested by the pump manufacturer to restart the pump. When there is resistance in the pump, allow the system to pump water again. Set Y1-18 to Y1-21 correctly.
LoSuc	Low Suction Pressure	Suction pressure is less than the level set in YE-09 [Low Suction Pressure Det Level] for longer than the time set in YE-10 [Low Suction Pressure Det Time], and the drive is running (AUTO or HAND) and YE-11 = 1 [Low Suction Pressure Behavior = Alarm (and Digital Output)].	Increase suction pressure.
LowFl	Low Flow	Flow rate was below the level set in Y6-06 [Low Flow Level] for longer than the time set in Y6-07 [Low Flow Detection Time] and Y6-09 = 1 [Low Flow Behavior = Alarm (and Digital Output)].	Reprogram Y6-06 to Y6-09 if flow rate is acceptable.
LowWL	Low Water Level	Water level is below the level set in Yd-09 [Low Water Level Detection Level] with Yd-11 = 1 [Low Water Level Behavior = Alarm (and Digital Output)].	Increase the water level.
LSP	Low Suction Pressure	 An external input has indicated that an insufficient suction pressure condition exists in these conditions: Y4-24 = 1 [Low City Alarm Text = Low Suction Pressure] The terminal set for H1-xx = B8 or 1B8 [MFD1 Function Selection = Low City Pressure or !Low City Pressure] activates 	 Examine the pressure switch contact for correct operation. Examine control wiring to drive terminal strip from pressure switch contact. Make sure that suction pressure is present with an isolated measuring device. Increase the system pressure. Set Y4-22 [Low City On-Delay Time] and Y4-23 [Low City Off-Delay Time] correctly. Deactivate the digital input terminals set to H1-xx = B8 or 1B8.
LT-1	Cooling Fan Maintenance Time	The cooling fan is at 90% of its performance life estimate.	 Replace the cooling fan. Set 04-03 = 0 [Fan Operation Time Setting = 0 h] to reset the cooling fan operation time.
LT-2	Capacitor Maintenance Time	The capacitors for the main circuit and control circuit are at 90% of their performance life estimate.	Replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.
LT-3	SoftChargeBypassRelay MainteTime	The soft charge bypass relay is at 90% of its performance life estimate.	Replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.
LT-4	IGBT Maintenance Time (50%)	The IGBT is at 50% of its performance life estimate.	Check the load, carrier frequency, and output frequency.

Code	Name	Causes	Possible Solutions
LWT	Low Water In Tank	An external input has indicated that the water level in the tank is too low in these conditions: • Y4-24 = 2 [Low City Alarm Text = Low Water in Tank] • The terminal set for H1-xx = B8 or 1B8 [MFD1 Function Selection = Low City Pressure or !Low City Pressure] activates	 Examine the pressure switch contact for correct operation. Examine control wiring to drive terminal strip from pressure switch contact. Make sure that suction pressure is present with an isolated measuring device. Increase the water level. Set Y4-22 [Low City On-Delay Time] and Y4-23 [Low City Off-Delay Time] correctly. Deactivate the digital input terminals set to H1-xx = B8 or 1B8.
NETSC	NETSCAN Waiting for Master	No message received from the master within the time specified in Y9-28 [NETSCAN Alarm Time].	 Increase Y9-28 to account for network latency. Make sure that there is a drive on the network with Y1-01 = 3 [Multiplex Mode = Contactor Multiplex] and Y9-27 = 0 [Network Recovery = Automatic].
NMS	Setpoint Not Met	The feedback deviates from the setpoint at a level more than Y1-15 [Maximum Setpoint Difference] for the time set in Y1-16 [Not Maintaining Setpoint Time].	 Examine for a blocked impeller, over cycling, or broken pipe. Set <i>Y1-15</i> and <i>Y1-16</i> correctly.
OD	Output Disconnect	The output circuit between the drive and the motor is open, and the drive output current is less than 5% of E2-01 [Motor Rated Current (FLA)].	 Close the disconnected output circuit between the drive and the motor. If you do not use a motor disconnect, set <i>Y4-42 = 0 [Disabled]</i>.
оН	Heatsink Overheat	The ambient temperature is high and the heatsink temperature is more than the L8-02 [Overheat Alarm Level].	Measure the ambient temperature. Increase the airflow around the drive. Install a cooling device (cooling fan or air conditioner) to decrease the ambient temperature. Remove objects near the drive that are producing too much heat.
		There is not sufficient airflow around the drive.	Give the drive the correct installation space as shown in the manual. Make sure that there is sufficient circulation around the control panel. Examine the drive for dust or other unwanted materials that could clog the cooling fan. Remove unwanted materials that prevent air circulation.
		The internal cooling fan or fans stopped.	 Replace the cooling fan. Set 04-03 = 0 [Fan Operation Time Setting = 0 h] to reset the cooling fan operation time.
оН2	External Overheat (H1-XX=B)	An external device sent an <i>oH2</i> alarm.	 Find the external device that output the overheat alarm. Remove the cause of the problem. Clear the <i>Overheat Alarm (oH2) [H1-xx = B]</i> in MFDI terminals S1 to S8.
оН3	Motor Overheat (PTC Input)	The thermistor wiring that detects motor temperature is defective.	Correct wiring errors.
		A fault occurred on the machine. Example: The machine is locked.	Examine the machine and remove the cause of the fault
		The motor has overheated.	 Check the load level, acceleration/deceleration time, and motor start/stop frequency (cycle time). Decrease the load. Increase the values set in C1-01 to C1-04 [Acceleration/ Deceleration Times]. Set E2-01 [Motor Rated Current (FLA)] correctly to the value specified by the motor nameplate. Make sure that the motor cooling system is operating correctly, and repair or replace it if it is damaged. Adjust E1-04 to E1-10 [V/f Pattern Parameters]. For motor 2, adjust E3-04 to E3-10. Decrease the values set in E1-08 [Mid Point A Voltage] and E1-10 [Minimum Output Voltage]. Note: If the values set in E1-08 and E1-10 are too low, the overload tolerance will decrease at low speeds.
oL3	Overtorque 1	A fault occurred on the machine. Example: The machine is locked.	Examine the machine and remove the cause of the fault.
		The parameters are incorrect for the load.	Adjust L6-02 [Torque Detection Level 1] and L6-03 [Torque Detection Time 1] settings.
oL4	Overtorque 2	A fault occurred on the machine. Example: The machine is locked.	Examine the machine and remove the cause of the fault.
		The parameters are incorrect for the load.	Adjust L6-05 [Torque Detection Level 2] and L6-06 [Torque Detection Time 2] settings.

Code	Name	Causes	Possible Solutions
oS	Overspeed	There is overshoot.	Decrease C5-01 [ASR Proportional Gain 1] and increase C5-02 [ASR Integral Time 1].
ov	DC Bus Overvoltage	The drive output cable or motor is shorted to ground (the current short to ground is charging the main circuit capacitor of the drive through the power supply).	Examine the motor main circuit cable, terminals, and motor terminal box, and then remove ground faults. Re-energize the drive.
		The power supply voltage is too high.	Decrease the power supply voltage to align with the drive rated voltage.
		Electrical interference caused a drive malfunction.	 Examine the control circuit lines, main circuit lines, and ground wiring, and minimize the effects of noise. Find the source of the noise. If a magnetic contactor is the source, use Surge Protective Device if necessary. Set L5-01 \(\neq 0 \) [Number of Auto-Restart Attempts \(\neq 0 \) times].
ovEr	Too Many Parameters Changed	You tried to change more than 150 parameters.	Make sure that parameters that do not have an effect on drive operation are at their default settings. Note: You can change 150 parameters maximum. If you change parameters that have dependencies, the drive can detect <i>ovEr</i> when the number of changed parameters is fewer than 150.
PASS	Modbus Communication Test	The MEMOBUS/Modbus communications test is complete.	The PASS display will turn off after communications test mode is cleared.
PF	Input Phase Loss	There is a phase loss in the drive input power.	Correct errors with the wiring for main circuit drive input power.
		Loose wiring in the input power terminals.	Tighten the terminal screws to the correct tightening torque.
		The drive input power voltage is changing too much.	Examine the input power for problems. Make the drive input power stable.
		Unsatisfactory balance between voltage phases.	Examine the input power for problems. Make the drive input power stable. If the input power supply is good, examine the magnetic contactor on the main circuit side for problems.
		The main circuit capacitors are unserviceable.	Examine the capacitor maintenance time in monitor U4-05 [Capacitor Life Mon]. If U4-05 is more than 90%, replace the capacitor. Contact Yaskawa or your nearest sales representative for more information.
			Examine the input power for problems. Re-energize the drive. If the alarm stays, replace the circuit board or the drive. Contact Yaskawa or your nearest sales representative for more information.
POC	Pump Over Cycle	Pump in the system exceeded the number cycles from normal operation to sleep mode set in Y2-10 [Max Cycling Protection Allowed] in the time set in Y2-11 [Cycling Count Decrement Time].	Adjust sleep parameters to prevent the system from over cycling between normal operation and sleep mode.
R-DNE	Remote Drive Disable	The digital input set to H1-xx = BD [MFDI Function Selection = Remote Drive Disable] activated. The digital input set to H1-xx = IBD [!Remote Drive Disable] deactivated.	Examine the statuses of the digital input terminals set to HI - $xx = BD$ or IBD
rUn	Motor Switch during Run	The drive received a <i>Motor 2 Selection [H1-xx = 16]</i> during run.	Make sure that the drive receives the Motor 2 Selection while the drive is stopped.
SE	Modbus Test Mode Error	MEMOBUS/Modbus communications self-diagnostics [HI-xx = 67] was done while the drive was running.	Stop the drive and do MEMOBUS/Modbus communications self-diagnostics.
SPCNR	Single Phase Converter Not Ready	When YC-14 = 1 [Behavior when SPC is Not Ready = Coast to Stop - Alarm], the digital input set to H1-xx = BE [MFDI Function Selection = Single Phase Converter Ready NC] deactivated to show that the attached converter is faulted or not ready.	Examine the wiring between the drive and converter. Examine the error code on converter.
SPL	Suction Pressure Feedback Loss	Wire Break detection for suction pressure. The analog input programmed for Water Level / Suct Pres Feedback is less than 3 mA or more than 21 mA for longer than 1 second and YE-19 = 1 [Suction Pressure Fdbk Wire Break = Alarm (and Digital Output)].	Repair level sensor. Repair wiring.
STo	Safe Torque OFF	Safe Disable inputs H1-HC and H2-HC are open.	 Make sure that the Safe Disable signal is input from an external source to terminal H1-HC and H2-HC. When the Safe Disable function is not in use, use a jumper to connect terminals H1-HC and H2-HC.

Code	Name	Causes	Possible Solutions
		There is internal damage to the two Safe Disable channels.	Replace the board or the drive. Contact Yaskawa or your nearest sales representative to replace the board.
SToF	Safe Torque OFF Hardware	One of the two terminals H1-HC or H2-HC received the Safe Disable input signal.	Make sure that the Safe Disable signal is input from an external source to terminals H1-HC or H2-HC.
		The Safe Disable input signal is wired incorrectly.	When the Safe Disable function is not in use, use a jumper to connect terminals H1-HC and H2-HC.
		There is internal damage to one Safe Disable channel.	Replace the board or the drive. Contact Yaskawa or your nearest sales representative to replace the board.
TiM	Keypad Time Not Set	There is a battery in the keypad, but you have not set the date and time.	Use the keypad to set the date and time.
TrPC	IGBT Maintenance Time (90%)	The IGBT is at 90% of its performance life estimate.	Replace the IGBT or the drive. For more information, contact Yaskawa or your nearest sales representative.
UL3	Undertorque Detection 1	A fault occurred on the machine. Example: There is a broken pulley belt.	Examine the machine and remove the cause of the fault.
		The parameters are incorrect for the load.	Adjust L6-02 [Torque Detection Level 1] and L6-03 [Torque Detection Time 1] settings.
UL4	Undertorque Detection 2	A fault occurred on the machine. Example: There is a broken pulley belt.	Examine the machine and remove the cause of the fault.
		The parameters are incorrect for the load.	Adjust L6-05 [Torque Detection Level 2] and L6-06 [Torque Detection Time 2] settings.
UL6	Underload or Belt Break Detected	The output current decreased less than the motor underload curve set in L6-14 [Motor Underload Level @ Min Freq] for longer than the time set in L6-03 [Torque Detection Time 1].	Examine parameters L6-13 [Motor Underload Curve Select] and L6-14.
		The belt has broken disconnecting the motor from the load.	
Uv	Undervoltage	The drive input power voltage is changing too much.	Examine the input power for problems. Make the drive input power stable. If the input power supply is good, examine the magnetic contactor on the main circuit side for problems.
		There is a phase loss in the drive input power.	Correct errors with the wiring for main circuit drive input power.
		There is loose wiring in the drive input power terminals.	Tighten the terminal screws to the correct tightening torque.
		There was a loss of power.	Use a better power supply.
		The main circuit capacitors have become unserviceable.	Examine the capacitor maintenance time in monitor <i>U4-05</i> [Capacitor Life Mon]. If <i>U4-05</i> is more than 90%, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.
		The drive input power transformer is too small and voltage drops when the power is switched on.	Check for an alarm when a molded-case circuit breaker, Leakage Breaker (ELCB or GFCI) (with overcurrent protective function), or magnetic contactor is ON. Check the capacity of the drive power supply transformer.
		Air inside the drive is too hot.	Check the ambient temperature of the drive.
		The Charge LED is broken.	Replace the control board or the entire drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.
WFR	Waiting for Run	The drive has <i>Drive Enable No Run Cycle</i> active (closed) on the digital input and the drive is OFF.	Examine the operation sequence.
WLL	Water Level Feedback Loss	Wire Break detection for water level. The Analog input programmed for Water Level / Suction Pressure is less than 3 mA or is more than 21 mA for longer than 1 second with Yd-16 = 1 [Water Level Feedback Wire Break = Alarm Only].	Repair level sensor. Repair wiring.

♦ Parameter Setting Errors

Parameter setting errors occur when multiple parameter settings do not agree, or when parameter setting values are not correct. Refer to the table in this section, examine the parameter setting that caused the error, and remove the cause of the error. You must first correct the parameter setting errors before you can operate the drive. The drive will not send notification signals for the faults and alarms when these parameter setting errors occur.

Code	Name	Causes	Possible Solutions
oPE01	Drive Capacity Setting Error	The value set in 02-04 [Drive Model (KVA) Selection] does not agree with the drive model.	Set <i>o2-04</i> to the correct value.
oPE02	Parameter Range Setting Error	Parameters settings are not in the applicable setting range.	1. Push to show <i>UI-18 foPE Fault Parameter]</i> , and find parameters that are not in the applicable setting range. 2. Correct the parameter settings. Note: If more than one error occurs at the same time, other <i>oPExx</i> errors have priority over <i>oPE02</i> .
		You set $E2-01 \le E2-03$ [Motor Rated Current (FLA) \le Motor No-Load Current].	Make sure that $E2-01 > E2-03$. Note: If it is necessary to set $E2-01 < E2-03$, first lower the value set in $E2-03$, and then set $E2-01$.
		The settings for these parameters do not agree: • L8-12 [Ambient Temperature Setting] = 60 °C and L8-35 = 1 or 3 [Installation Method Selection = Side-by-Side Mounting or IP55/UL Type 12] for models 2011 to 2169 and 4005 to 4156 • L8-35 = 1 or 3 for models 2211 to 2396 and 4180 to 4720	Set L8-35 = 0 or 2 [IP20/UL Open Type or IP20/UL Type 1].
		You set S3-09 < S3-10 [P12 Control Output Upper Limit < P12 Control Output Lower Limit].	Make sure that $S3-09 > S3-10$ at all times.
		You set S3-13 > S3-15 [PI2 Control Low Feedback Lvl > PI2 Control High Feedback Lvl].	Make sure that $S3-13 < S3-15$ at all times.
		H2-xx = D3 [Harmonic Filter Output] and n1-13 = 0 [DC Bus Stabilization Control = Disabled] while A1-02 = 0 or 8 (Control Method Selection= V/f or EZ Vector Control].	Set $n1-13 = 1$ [Enabled] or de-program digital output $D3$.
		One of the following conflicting parameters has been set:	When YI - $01 = 3$, set $F6$ - $16 = 0$, or disable DriveWorksEZ while QI - $07 \neq 0$.
		 YI-01 = 3 [Multiplex Mode = Network Multiplex] and F6-16 ≠ 0 [Gateway Mode ≠ Disabled]. YI-01 = 3 [Multiplex Mode = Network Multiplex] and A1-07 ≠ 0 [DriveWorksEZ Function Selection 	
		≠ DWEZ Disabled]. • Q7-01 ≠ 0 [Remote I/O Slave Address ≠ 0] and H1-xx ≠ 9F [Multi-Function Digital Input ≠ DWEZ Disabled].	
oPE03	Multi-Function Input Setting Err	The settings for these parameters do not agree: • F3-10 to F3-25 [Terminal D1 to DF Function Selection] • H1-01 to H1-08 [Terminals S1 to S8 Function Selection] • H7-01 to H7-04 [Virtual Multi-Function Inputs 1 to 4]	Correct the parameter settings.
		The settings for MFDIs overlap. Note: This does not include H1-xx = 20 to 2F [MFDI Function Selection = Ext Pump Fault] and [Reserved].	Set the parameters correctly to prevent MFDI function overlap.
		These pairs of MFDI functions are not set to Digital Inputs (H1-xx, F3-10 to F3-25, and H7-01 to H7-04) at the same time: • Setting values 10 [Up Command] and 11 [Down	Set the MFDI pairs.
		Command] Setting values 75 [Up 2 Command] and 76 [Down 2 Command] Setting values 42 [Run Command (2-Wire Sequence 2)] and 43 [FWD/REV (2-Wire Sequence 2)]	
		A minimum of two of these MFDI combinations are set to Digital Inputs (H1-xx, F3-10 to F3-25, and H7-01 to H7-04) at the same time: • Setting values 10 [Up Command] and 11 [Down]	Remove the function settings that are not in use.
		 Setting values 10 [Up Command] and 11 [Down Command] Setting values 75 [Up 2 Command] and 76 [Down 2 Command] 	
		Setting value A [Accel/Decel Ramp Hold] Setting value IE [Reference Sample Hold]	

Code	Name	Causes	Possible Solutions
		The parameter settings are enabled at the same time. • b5-01 [PID Mode Setting] • H1-xx = 10 [Up Command] • H1-xx = 11 [Down Command]	 Set b5-01 = 0 [Disabled]. Remove the function Up/Down command settings.
		These commands are set in Digital Inputs (H1-xx, F3-10 to F3-25, and H7-01 to H7-04) at the same time: • Setting values 61 [Speed Search from Fmax] and 62 [Speed Search from Fref] • Setting values 65, 66, 7A, 7B [KEB Ride-Thru 1 or 2 Activate] and 68 [High Slip Braking (HSB) Activate] • Setting values 16 [Motor 2 Selection] and 1A [Accel/Decel Time Selection 2] • Setting values 65, 66 [KEB Ride-Thru 1 Activate] and 7A, 7B [KEB Ride-Thru 2 Activate] • Setting values 40, 41 [Forward RUN (2-Wire), Reverse RUN (2-Wire)] and 42, 43 [Run Command (2-Wire Sequence 2), FWD/REV (2-Wire Sequence 2)] • Setting values 60 [DC Injection Braking Command] and 6A [Irrive Enable] • Setting values 16 [Motor 2 Selection] and 75.j 76 [Up 2 Command, Down 2 Command] These groups of MFDI functions are not set to Digital Inputs (H1-xx, F3-10 to F3-25, and H7-01 to H7-04) at the same time:	Remove the function settings that are not in use. Set the MFDI groups correctly.
		Setting values C7 [PID Setpoint Selection 1], C8 [PID Setpoint Selection 2], and C9 [PID Setpoint Selection 3] Setting values C0 [Dedicated Multi-Setpoint YA-02], C1 [Dedicated Multi-Setpoint YA-04], C3 [Dedicated Multi-Setpoint YA-04], C3 [Dedicated Multi-Setpoint YA-05], C4 [Dedicated Multi-Setpoint YA-06], C5 [Dedicated Multi-Setpoint YA-07], and C6 [Dedicated Multi-Setpoint YA-08]	
		Two of these three MFDI functions are set to Digital Inputs (H1-xx, F3-10 to F3-25, and H7-01 to H7-04) at the same time: • Setting value 50 [Motor Pre-heat 2] • Setting value 60 [DC Injection Braking Command] • Setting value 6A [Drive Enable]	Remove the function setting that are not in use and use only one function.
		Settings for N.C. and N.O. input [H1-xx] for these functions were selected at the same time: Setting value 15 [Fast Stop (N.O.)] Setting value 17 [Fast Stop (N.C.)]	Remove one of the function settings.
		These settings were entered while H1-xx = 2 [External Reference 1/2 Selection]: • b1-15 = 4 [Frequency Reference Selection 2 = Pulse Train Input] • H6-01 \neq 0 [Terminal RP Pulse Train Function \neq Frequency Reference]	Set $H6-01 = 0$.
		These settings were entered while H1-xx = 2 [External Reference 1/2 Selection]: • b1-15 = 3 [Option PCB] or b1-16 = 3 [Run Command Selection 2 = Option PCB] • No option card is connected to the drive.	Connect an input option card to the drive.
		These settings were entered while H1-xx = 2 [External Reference 1/2 Selection]: • b1-15 = 1 [Analog Input] • H3-02 ≠ 0 [Terminal A1 Function Selection ≠ Frequency Reference] or H3-10 ≠ 0 [Terminal A2 Function Selection ≠ Frequency Reference]	Set $H3-02 = 0$ or $H3-10 = 0$.
		These MFDI/MFDO functions are set at the same time: • H1-xx ≠ 6A [Drive Enable] and H1-xx ≠ 70 [Drive Enable No Run Cycle] • H2-xx = 38 [Drive Enabled]	 Set H1-xx = 6A or 70. Change the MFDO setting.
		These MFDI functions are set at the same time: • H1-xx = 6A [Drive Enable] • H1-xx = 70 [Drive Enable No Run Cycle]	Remove one of the function settings.

Code	Name	Causes	Possible Solutions
		These MFDI functions are set at the same time: • H1-xx = 67 [Communications Test Mode] • H1-xx = AF or B0 [Emergency Override FWD or Emergency Override REV]	Remove one of the function settings.
		These parameters are set at the same time: • H1-xx = 62 [Speed Search from Fref] • H5-22 = 1 [Speed Search from MODBUS = Enabled]	Remove one of the function settings.
		These parameters are set at the same time: • H1-xx = 70 [Drive Enable No Run Cycle] • b1-02 \neq 0 [Run Command Selection 1 \neq Keypad]	Remove the $H1$ - $xx = 70$ function setting or set $b1$ - $02 = 0$.
		These parameters are set at the same time: • H1-xx = 70 [Drive Enable No Run Cycle] • b1-16 \neq 0 [Run Command Selection 2 \neq Keypad]	Remove the HI - $xx = 70$ function setting or set bI - $16 = 0$.
		These parameters are set at the same time: • H1-xx = 70 [Drive Enable No Run Cycle] • H1-xx = 0 [3-Wire Sequence]	Remove one of the function settings.
		Parameter S3-01 \neq 0 [P12 Control Enable Selection \neq Disabled] and MFDI set for H1-xx = AD [Select P12 Control P1 Parameters] is ON.	Set S3-01 = 0 to use H1-xx = AD for the adjustments of S3-06 [P12 Control Proportional Gain] and S3-07 [P12 Control Integral Time] instead of the primary PI controller Proportional and Integral adjustments. When PI2 Control is necessary, remove the MFDI function setting.
oPE05	Run Cmd/Freq Ref Source Sel Err	The setting to assign the Run command or frequency reference to an option card or the pulse train input is incorrect.	Correct the parameter settings.
		b1-01 = 3 [Frequency Reference Selection 1 = Option PCB] is set, but there is no option card connected to the drive.	Connect an option card to the drive.
		b1-02 = 3 [Run Command Selection 1 = Option PCB] is set, but there is no option card connected to the drive.	
		These parameters are set at the same time: • b1-01 = 4 [Pulse Train Input] • H6-01 ≠ 0 [Terminal RP Pulse Train Function ≠ Frequency Reference]	Set $H6-01 = 0$.
		These parameters are set at the same time: • F3-01 = 6 [Digital Input Function Selection = BCD (5-digit), 0.01 Hz] • F3-03 = 0, 1 [Digital Input Data Length Select = 8-bit, 12-bit]	Set F3-03 = 2 [16-bit].
		These parameters are set at the same time: • b1-01 = 3 [Frequency Reference Selection 1 = Option PCB] • F2-01 = 0 or 2 [Analog Input Function Selection = 3 Independent Channels or 3 Additional Channels]	Correct the parameter settings.
		These parameters are set and there is an AI-A3 option card connected to the drive: • H1-xx = 2 [External Reference 1/2 Selection] • b1-15 = 3 [Frequency Reference Selection 2 = Option PCB] • F2-01 = 0 [Analog Input Function Selection = 3 Independent Channels]	Correct the parameter settings.
oPE07	Analog Input Selection Error	The settings for H3-02, H3-06, H3-10 [MFAI Function Selection] and H7-30 [Virtual Analog Input Selection] overlap.	Set H3-02, H3-06, H3-10, and H7-30 correctly to prevent overlap. Note: It is possible to set these functions to multiple analog input terminals at the same time: • Setting value 0 [Frequency Reference] • Setting values F and 1F [Not Used]
		These parameters are set at the same time: • H3-02, H3-06, H3-10, H7-30 = B [PID Feedback] • H6-01 = 1 [Terminal RP Pulse Train Function = PID Feedback Value]	Remove the function settings that are not in use.
		These parameters are set at the same time: • H3-02, H3-06, H3-10, H7-30 = C [PID Setpoint] • H6-01 = 2 [PID Setpoint Value]	

Code	Name	Causes	Possible Solutions
		These parameters are set at the same time: • H3-02, H3-06, H3-10, H3-40, H3-41, H3-42, H7-30 = 24 [PID Feedback Backup] • Y4-41 = 1 [Diff Lvl Src Fdbk Backup Select = Enabled]	 Use only H3-xx = 2D [Differential Level Source] as a backup PID feedback and remove the function setting of H3-xx = 24. Use H3-xx = 24 as a backup PID feedback and set Y4-41 = 0 [Disabled] to not let the drive use H3-xx = 2D as a backup PID feedback.
		These parameters are set at the same time when F2-01 = 2 [Analog Input Function Selection = 3 Additional Channels]: • F2-05, F2-09, F2-13 [Terminal Vx Function Selection], H3-40, H3-41, H3-42 = B [PID Feedback] • H6-01 = 1	 Remove the function settings that are not in use. When you use <i>H6-01</i> and <i>F2-05</i>, <i>F2-09</i>, <i>F2-13</i> at the same time, set <i>F2-01</i> ≠ 2.
		These parameters are set at the same time when F2-01 = 2: • F2-05, F2-09, F2-13, H3-40, H3-41, H3-42 = C [PID Setpoint] • H6-01 = 2	
		The settings for $F2-05$, $F2-09$, and $F2-13$ overlap when $F2-01 = 2$.	 Set the parameters correctly to prevent overlap. Set F2-01 ≠ 2.
		The settings for <i>F2-05</i> , <i>F2-09</i> , <i>F2-13</i> and the settings for these parameters overlap when <i>F2-01</i> = 2: • <i>H3-02</i> , <i>H3-06</i> , <i>H3-10</i> • <i>H3-40</i> , <i>H3-41</i> , <i>H3-42</i> • <i>H7-30</i>	
		The settings for these parameters overlap: • H3-02, H3-06, H3-10 • H3-40, H3-41, H3-42 • H7-30	Set these parameters correctly to prevent overlap
oPE08	Parameter Selection Error	You set a function that is not compatible with the control method set in A1-02 [Control Method Selection].	1. Push to show <i>U1-18 [oPE Fault Parameter]</i> , and find parameters that are not in the applicable setting range. 2. Correct the parameter settings. Note: If more than one error occurs at the same time, other <i>oPExx</i> errors have priority over <i>oPE02</i> .
		When A1-02 = 0 [V/f], you set these parameters: • S1-01 = 1 [Dynamic Noise Control = Enabled] • Y4-42 ≠ 0 [Output Disconnect Detection Sel ≠ Disabled]	Set $SI-0I = 0$ or $Y4-42 = 0$.
		When A1-02 = 0 [V/f], you used H1-xx = 16 [MFDI Function Selection = Motor 2 Selection].	Correct the parameter setting.
		When $A1-02 = 5$ [OLV/PM], you set E5-02 to E5-07 [PM Motor Parameters] = 0.	 Set <i>E5-01 [PM Motor Code Selection]</i> correctly as specified by the motor. For specialized motors, refer to the motor test report and set <i>E5-xx</i> correctly.
		When A1-02 = 5, you used these parameter settings: • E5-09 = 0.0 [PM Back-EMF Vpeak (mV/(rad/s)) = 0.0 mV/(rad/s)] • E5-24 = 0.0 [PM Back-EMF L-L Vrms (mV/rpm) = 0.0 mV/min ⁻¹]	Set E5-09 or E5-24 to the correct value.
		When $A1-02 = 5$, you set $E5-09 \neq 0$ and $E5-24 \neq 0$.	Set $E5-09 = 0$ or $E5-24 = 0$.
		When A1-02 = 8 [EZOLV], you used these parameter settings: • E9-01 = 1, 2 [Motor Type Selection = Permanent Magnet (PM), Synchronous Reluctance (SynRM)] • b3-24 = 2 [Speed Search Method Selection = Current Detection 2]	When $E9-01 = 1$ or 2, set $b3-24 = 1$ [Speed Estimation].
		You set L6-02 [Torque Detection Level 1] < L6-14 [Motor Underload Level @ Min Freq].	Set parameters to be $L6-02 \ge L6-14$.

Code	Name	Causes	Possible Solutions
oPE09	PID Control Selection Fault	These parameters are set at the same time: $b5-01 = I$	Correct the parameter settings.
		b5-11 = 1 [PID Output Reverse Selection = Negative Output Accepted] And an of these reconstant is set:	
		And one of these parameters is set: • d2-02 \(\neq 0.0 \) [Frequency Reference Lower Limit \(\neq 0.0 \) [Frequency Referen	
		 Y1-06 ≠ 0.0 [Minimum Speed ≠ 0.0%] Y4-12 ≠ 0.0 [Thrust Frequency ≠ 0.0%] 	
		• Y1-01 \neq 0 [Multiplex Mode \neq Drive Only]	
		 Yd-01 ≠ 0 [Water Level Selection ≠ Disabled] YE-01 ≠ 0 [Suction Pressure Control Select ≠ Disabled] 	
		• YF-01≠ 0 [PI Aux Control Selection ≠ Disabled]	
		These parameters are set at the same time: • Y2-01 = 5 [Sleep Level Type = Output Frequency (non-PID)]	Correct the parameter settings.
		 Y2-02 [Sleep Level] > 0.0 Hz Y4-17 [Utility Start Delay Time] > 0.0 min 	
oPE10	V/f Data Setting Error	The parameters that set the V/f pattern do not satisfy these conditions:	Set the parameters correctly to satisfy the conditions.
		For motor 1: E1-09 ≤ E1-07 < E1-06 ≤ E1-11 ≤ E1-04 [Minimum Output Frequency ≤ Mid Point A Frequency < Base Frequency ≤ Mid Point B Frequency ≤ Maximum Output Frequency]	
		For motor 2: E3-09 ≤ E3-07 < E3-06 ≤ E3-11 ≤ E3-04 [Minimum Output Frequency ≤ Mid Point A Frequency < Base Frequency ≤ Mid Point B Frequency ≤ Maximum Output Frequency]	
oPE11	Carrier Frequency Setting Error	These parameters are set at the same time: • C6-05 > 6 [Carrier Freq Proportional Gain > 6]	Set C6-02 to C6-05 correctly.
		• C6-04 > C6-03 [Carrier Frequency Lower Limit > Carrier Frequency Upper Limit]	
		Note: When C6-05 < 7, C6-04 becomes disabled. C6-03 stays active.	
		C6-02 to C6-05 settings are not in the applicable setting range.	
oPE16	Energy Saving Constants Error	The Energy Saving parameters are not set in the applicable setting range.	Make sure that E5-xx is set correctly as specified by the motor nameplate data.
		These parameters are set at the same time: • b8-01 = 1 [Energy Saving Control Selection =	Disable Energy Saving Control or Dynamic Noise Control.
		Enabled] • S1-01 = 1 [Dynamic Noise Control = Enabled]	
oPE33	Digital Output Selection Error	These two parameters are set at the same time:	Clear the H2-01 to H2-03 = 1xx [Inverse output of xx] settings.
		H2-60 # F [Term M1-M2 Secondary Function # Not Used] H2-01 = Ixx [Term M1-M2 Function Selection = Inverse output of xx]	Note: It is not possible to set $H2-01$ to $H2-03 = 1xx$ [Inverse output of xx] when using output functions for logic operations ($H2-60$, $H2-63$, $H2-66 \neq F$).
		These two parameters are set at the same time:	,,
		H2-63 # F [Term M3-M4 Secondary Function # Not Used] H2-02 = Ixx [Term M3-M4 Function Selection = Inverse output of xx]	
		These two parameters are set at the same time:	
		 H2-66 ≠ F [Term MD-ME-MF Secondary Function ≠ Not Used] H2-03 = 1xx [Term MD-ME-MF Function 	
		Selection = Inverse output of xx]	
oPE35	Network WL/SP/PI Aux Mode	These two parameters are set at the same time: • Y9-51 = 1 [WaterLvl/SuctPres/PI Aux TurnOff = Emphed 1]	Confirm the settings for <i>Y9-50</i> and <i>Y9-51</i> .
		Enabled] • Y9-50 ≠ 0 [WaterLvl/SuctPres/PI Aux Source ≠ Analog Only]	
		These two parameters are set at the same time: • Y9-51 = 1 [WaterLvl/SuctPres/PI Aux TurnOff =	Confirm the settings for YE-01 and Y9-51.
		 Enabled] YE-01 ≠ 0 [Suction Pressure Control Select ≠ 	
		Disabled] L	

Code	Name	Causes	Possible Solutions
oPE43	Flow Meter Input	These two parameters are set at the same time: • H6-01 = 5 [Terminal RP Pulse Train Function = Flow Meter] • H3-xx = 3A [MFAI = Flow Meter]	De-program one of the flow meter inputs.
		Flow Meter Scaling is set to zero and flow meter is being used as PID feedback. Y6-01 = 0 [Flow Meter Scaling = 0.0], Y1-02 = 25 System Units = Flow (Use Y6-04)], and b5-01 = 1 [PID Mode Setting = Standard].	 Adjust <i>Y6-01</i>. Reprogram <i>Y1-02</i> or <i>b5-01</i>.
oPE44	Water Level / Suct Pres / PI Aux	More than one of the following parameters have been set to a non-zero value: • Yd-01 [Water Level Selection] • YE-01 [Suction Pressure Control Select] • YF-01 [PI Aux Control Selection]	Confirm the settings for Yd-01, YF-01 and YE-01.
		Water Level / Suct Pres Feedback MFAI and PI Auxiliary Control Feedback MFAI have been programmed simultaneously.	Confirm the <i>H3-xx</i> settings.

Auto-Tuning Errors

This table gives information about errors detected during Auto-Tuning. If the drive detects an Auto-Tuning error, the keypad will show the error and the motor will coast to stop. The drive will not send notification signals for faults and alarms when Auto-Tuning errors occur.

Two types of Auto-Tuning errors are: *Endx* and *Erx*. *Endx* identifies that Auto-Tuning has successfully completed with calculation errors. Find and repair the cause of the error and do Auto-Tuning again, or set the motor parameters manually. You can use the drive in the application if you cannot find the cause of the *Endx* error.

Erx identifies that Auto-Tuning was not successful. Find and repair the cause of the error and do Auto-Tuning again

Code	Name	Causes	Possible Solutions
End1	Excessive Rated Voltage Setting	The torque reference was more than 20% during Auto-Tuning or the no-load current that was measured after Auto-Tuning is more than 80%.	Make sure that the input motor nameplate data is correct. Do Auto-Tuning again and correctly set the motor nameplate data. If you can uncouple the motor and load, remove the motor from the machine and do Rotational Auto-Tuning again. If you cannot uncouple the motor and load, use the results from Auto-Tuning.
End2	Iron Core Saturation Coefficient	The motor nameplate data entered during Auto-Tuning is incorrect.	Make sure that the input motor nameplate data is correct. Do Auto-Tuning again and correctly set the motor nameplate data.
End3	Rated Current Setting Alarm	The rated current value is incorrect.	Do Auto-Tuning again and set the correct rated current shown on the motor nameplate.
End4	Adjusted Slip Calculation Error	The Auto-Tuning results were not in the applicable parameter setting range.	Make sure the input motor nameplate data is correct. Do Rotational Auto-Tuning again and correctly set the motor
		The motor rated slip that was measured after Stationary Auto-Tuning was 0.2 Hz or lower.	nameplate data. • If you cannot uncouple the motor and load, do Stationary Auto-Tuning 2.
		The secondary resistor measurement results were not in the applicable range.	
End5	Resistance Tuning Error	The Auto-Tuning results of the Line-to-Line Resistance were not in the applicable range.	Make sure that the input motor nameplate data is correct. Examine and repair damaged motor wiring.
End6	Leakage Inductance Alarm	The Auto-Tuning results were not in the applicable parameter setting range.	Make sure that the input motor nameplate data is correct, and do Auto-Tuning again.
		A1-02 [Control Method Selection] setting is not applicable.	 Examine the value set in A1-02. Make sure that the input motor nameplate data is correct, and do Auto-Tuning again.
End7	No-Load Current Alarm	The Auto-Tuning results of the motor no-load current value were not in the applicable range.	Examine and repair damaged motor wiring.
		Auto-Tuning results were less than 5% of the motor rated current.	Make sure that the input motor nameplate data is correct, and do Auto-Tuning again.

Code	Name	Causes	Possible Solutions
End8	HFI Alarm	 Inductance saliency ratio (E5-07/E5-06) is too small. The drive cannot find the n8-36 [HFI Frequency Level for L Tuning] value. 	Set the correct value on the motor nameplate to E5-xx [PM Motor Settings] or do rotational/stationary Auto-Tuning. When it is necessary to set n8-35 = 1 [Initial Pole Detection Method = High Frequency Injection], make sure that there is no unusual noise in the low speed range (10% or less) and that the motor does not rotate in reverse at start. Note: If the drive detects End8, it will automatically set n8-35 = 0 [Pull-in]. Do not change the settings unless necessary.
End9	Initial Pole Detection Alarm	The drive cannot calculate the correct value for <i>n8-84</i> [Polarity Detection Current] during High Frequency Injection Tuning.	When n8-35 = 1 [Initial Pole Detection Method = High Frequency Injection], make sure that the motor does not rotate in reverse at start. Note: If the drive detects End9, it will automatically set n8-35 = 0 [Pull-in]. Do not change the settings unless necessary.
Er-01	Motor Data Error	The motor nameplate data entered during Auto- Tuning is incorrect.	Make sure that the motor nameplate data is correct. Do Auto-Tuning again and correctly set the motor nameplate data.
		The combination of the motor rated power and motor rated current do not match.	Examine the combination of drive capacity and motor output. Do Auto-Tuning again, and correctly set the motor rated power and motor rated current.
		The combination of the motor rated current that was entered during Auto-Tuning and E2-03 [Motor No-Load Current] do not match.	 Examine the motor rated current and the no-load current. Set <i>E2-03</i> correctly. Do Auto-Tuning again, and correctly set the motor rated current.
		The combination of the setting values of Motor Base Frequency and Motor Base Speed do not match.	Do Auto-Tuning again, and correctly set the Motor Base Frequency and Motor Base Speed.
Er-02	Drive in an Alarm State	The motor nameplate data entered during Auto- Tuning is incorrect.	Make sure that the motor nameplate data entered in Auto-Tuning is correct. Do Auto-Tuning again and correctly set the motor nameplate data.
		You did Auto-Tuning while the drive had a minor fault or alarm.	Clear the minor fault or alarm and do Auto-Tuning again.
		There is a defective motor cable or cable connection.	Examine and repair motor wiring.
		The load is too large.	Decrease the load. Examine the machine area to see if, for example, the motor shaft is locked.
		The drive detected a minor fault during Auto-Tuning.	Stop Auto-Tuning. Examine the minor fault code and remove the cause of the problem. Do Auto-Tuning again.
Er-03	OFF Button was Pressed	You pushed the OFF button during Auto-Tuning.	Auto-Tuning did not complete correctly. Do Auto-Tuning again.
Er-04	Line-to-Line Resistance Error	The Auto-Tuning results were not in the applicable parameter setting range.	Examine and repair motor wiring. Disconnect the machine from the motor and do Rotational Auto-
		Auto-Tuning did not complete in a pre-set length of time.	Tuning again.
		There is a defective motor cable or cable connection.	
		The motor nameplate data entered during Auto- Tuning is incorrect.	Make sure that the input motor nameplate data is correct. Do Auto-Tuning again and correctly set the motor nameplate data.
Er-05	No-Load Current Error	The Auto-Tuning results were not in the applicable parameter setting range.	Examine and repair motor wiring. Disconnect the machine from the motor and do Rotational Auto-
		Auto-Tuning did not complete in a pre-set length of time.	Tuning again.
		The motor nameplate data entered during Auto- Tuning is incorrect.	Make sure that the input motor nameplate data is correct. Do Auto-Tuning again and correctly set the motor nameplate data.
		Rotational Auto-Tuning was done with a load that was more than 30% of the rating connected to the motor.	Disconnect the machine from the motor and do Rotational Auto-Tuning again. If you cannot uncouple the motor and load, make sure that the load is less than 30% of the motor rating. If a mechanical brake is installed in the motor, release the brake during Rotational Auto-Tuning.
Er-08	Rated Slip Error	The motor nameplate data entered during Auto- Tuning is incorrect.	Make sure that the input motor nameplate data is correct. Do Auto-Tuning again and correctly set the motor nameplate data.

Code	Name	Causes	Possible Solutions
		Auto-Tuning did not complete in a pre-set length of time.	Examine and repair the motor wiring. If the motor and machine are connected during Rotational Auto-
		The Auto-Tuning results were not in the applicable parameter setting range.	Tuning, decouple the motor from the machinery.
		Rotational Auto-Tuning was done with a load that was more than 30% of the rating connected to the motor.	Disconnect the machine from the motor and do Rotational Auto-Tuning again. If you cannot uncouple the motor and load, make sure that the load is less than 30% of the motor rating. If a mechanical brake is installed in the motor, release the brake during Rotational Auto-Tuning.
Er-09	Acceleration Error	The motor did not accelerate for the specified acceleration time.	Increase the value set in <i>C1-01 [Acceleration Time 1]</i> . Disconnect the machine from the motor and do Rotational Auto-Tuning again.
		Rotational Auto-Tuning was done with a load that was more than 30% of the rating connected to the motor.	Disconnect the machine from the motor and do Rotational Auto-Tuning again. If you cannot uncouple the motor and load, make sure that the load is less than 30% of the motor rating. If a mechanical brake is installed in the motor, release the brake during Rotational Auto-Tuning.
Er-12	Current Detection Error	There is a phase loss in the drive input power. (U/T1, V/T2, W/T3)	Examine and repair motor wiring.
		The current exceeded the current rating of the drive.	Check the motor wiring for any short circuits between the wires.
		The output current is too low.	Check and turn ON any magnetic contactors used between motors. Replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.
		You tried Auto-Tuning without a motor connected to the drive.	Connect the motor and do Auto-Tuning.
		There was a current detection signal error.	Replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.
Er-13	Leakage Inductance Error	The motor rated current value is incorrect.	Correctly set the rated current indicated on the motor nameplate and do Auto-Tuning again.
		The drive could not complete tuning for leakage inductance in fewer than 300 s.	Examine and repair motor wiring.
Er-18	Back EMF Error	The result of the induced voltage tuning was not in the applicable range.	Make sure that the input motor nameplate data is correct. Do Auto-Tuning again and correctly set the motor nameplate data.
Er-19	PM Inductance Error	The Auto-Tuning results of the PM motor inductance were not in the applicable range.	Make sure that the input motor nameplate data is correct. Do Auto-Tuning again and correctly set the motor nameplate data.
Er-20	Stator Resistance Error	The Auto-Tuning results of the PM Motor Stator Resistance were not in the applicable range.	Make sure that the input motor nameplate data is correct. Do Auto-Tuning again and correctly set the motor nameplate data.
Er-25	HighFreq Inject Param Tuning Err	The motor data is incorrect.	Do Stationary Auto-Tuning again. Note: If the drive detects <i>Er-25</i> after you do Stationary Auto-Tuning, it is possible that the motor cannot use high frequency injection. For more information, contact Yaskawa or your nearest sales representative.

Backup Function Operating Mode Display and Errors

■ Operating Mode Display

When you use the backup function from the keypad, the keypad will show messages related to the current operation. These messages will not identify errors in the drive operation.

Keypad Display	Name	Display	State
Drive and Keypad mismatch. Should the parameters be restored?	Detection of inconsistency between the drive and keypad		The drive detected the connection of a keypad from a different drive. Select [Yes] to copy parameters backed up in the keypad to the connected drive.
Restore Restore from keypad	Restoring parameters	Flashing	The parameters stored in the keypad have been restored to the drive.

Keypad Display	Name	Display	State
End	Backup/restore/verify operation ended normally	Normally displayed	The parameter backup, restore, or verify operation ended normally.
Backup Backup from Drive	Backing up parameters	Flashing	The parameters stored in the drive are being backed up to the keypad.
Verify Keypad & Drive	Verifying parameters	Flashing	The parameter settings stored in the keypad and the parameter settings in the drive align or are being compared.

■ Backup Function Runtime Errors

When an error occurs, the keypad shows a code to identify the error.

The table in this section shows the error codes. Refer to this table to remove the cause of the errors.

Note:

Push any key on the keypad to clear an error.

Code	Name	Causes	Possible Solutions
CPEr	Control Mode Mismatch	The keypad setting and drive setting for A1-02 [Control Method Selection] do not agree.	 Set A1-02 on the drive to the same value that is on the keypad. Restore the parameters.
СРуЕ	Error Writing Data	Parameter restore did not end correctly.	Restore the parameters.
CSEr	Control Mode Mismatch	The keypad is broken.	Replace the keypad.
dFPS	Drive Model Mismatch	You tried to restore parameters to a different drive model than the one that you backed up.	Examine the drive model that you used to back up the parameters. Restore the parameters.
iFEr	Keypad Communication Error	There was a communications error between the keypad and the drive.	Examine the connector or cable connection.
ndAT	Error Received Data	The parameter settings for model and specifications (power supply voltage and capacity) are different between the keypad and the drive.	Make sure that drive model and the value set in <i>o2-04 [Drive Model (KVA) Selection]</i> agree. Restore the parameters.
		The parameters are not stored in the keypad.	Connect a keypad that has the correct parameters. Restore the parameters.
PWEr	DWEZ Password Mismatch	The password set in the backup operation with Qx-xx [DriveWorksEZ Parameters] and Rx-xx [DriveWorksEZ Connections] is incorrect.	Set the DWEZ PC software password supplied by Yaskawa for the DWEZ program user ID downloaded to the drive.
rdEr	Error Reading Data	You tried to back up the data when o3-02 = 0 [Copy Allowed Selection = Disabled].	Set o3-02 = 1 [Enabled] and back up again.
vAEr	Voltage Class, Capacity Mismatch	The power supply specifications or drive capacity parameter settings are different between the keypad and the drive.	Make sure that drive model and the value set in <i>o2-04</i> [Drive Model (KVA) Selection] agree. Restore the parameters.
vFyE	Parameters do not Match	The parameters that are backed up in the keypad and the parameters in the drive are not the same.	Restore or backup the parameter again. Verify the parameters.

♦ Status Messages

The HOA keypad will show these status messages on line 1 of the keypad display during the conditions listed below. These are not faults or alarms.

Keypad Display	Description
Current Limit Foldback	Drive output speed is being limited due to the output current limit. Decrease the load or replace with higher capacity drive.
De-staging Lag in XXX min */	De-stage is in progress. X indicates the length of time before de-stage takes place. One or more of the de-stage conditions have been met: High Feedback Quick De-stage Low Feedback Quick De-stage Normal De-stage Low Water Level De-stage Suction Pressure De-stage PI Auxiliary Control De-stage
	Adjust parameter settings if de-stage is not desired given the system conditions.

Keypad Display	Description	
Digital Out Dly: Exit in XXXmin */	The drive is delaying the start of the motor and the Lube Pump digital output is energized with Y4-29 = 1 [Lube Pump Text = Digital Out Delay]. Wait or cycle the Run command. Verify setting of Y4-31 [Lube Pump Time].	
Flow Rate Limit Foldback	Drive output speed is being limited due to too much ($Y6-26 = 1$ [Flow Rate Limit Selection = Enabled]) or not enough ($Y6-26 = 2$ [Enabled - Low Limit]) Flow Rate ($UA-83$). If the Flow Rate Limiter is activating incorrectly, confirm and adjust Flow Rate parameters $Y6-01$, $Y6-26$, $Y6-27$, $Y6-28$ and/or $Y6-29$.	
Level Control Active	Yd-01 = 1 [Water Level Selection = Enabled] and is active. Set $Yd-01 = 0$ [Disabled] or adjust $Yd-25$ [Water Lvl Ctrl Activation Level].	
Lube Pump Active: Exit in XXXmin *1	The drive is delaying the start of the motor and the Lube Pump digital output is energized with Y4-29 = 0 [Lube Pump Text = Lube Pump]. Wait or cycle the Run command. Verify setting of Y4-31 [Lube Pump Time].	
Net Drv Err: Check Faulted Drive	Another drive in the network has a system fault (NMS, HFB, HWL, LFB, LWL, LowFl, HiFlo, or ACCUM). Another drive in the network has a Low City Pressure alarm. Check the other drives in the system.	
Net FB Lost: Check FB Source	Network PID Feedback has been lost. No valid analog PID feedback source can be found on the network. Repair the source of network feedback or add an analog source.	
Net WL/SP/PI Aux Feedback Lost	Network source for Water Level, Suction Control Pressure, or Aux PI Feedback has been lost. Valid analog source for Water Level, Suction Control Pressure, or Aux PI Feedback cannot be found on the network. Check the source on drives configured with $Y9-50 \neq 3$ [WaterLvl/SuctPres/PI Aux Source \neq Network Only].	
Network Pre-Charge Active	Pre-Charge is active on another networked drive. If the MFDI was previously open, drive will enter Pre-Charge if required.	
Network Start Delay: Y9-29	System was on the Pump Off Network state and a drive has been put on AUTO Mode. The iQpump MEMOBUS network is waiting for Y9-29 [Network AUTO Start Delay] to elapse.	
[o1-83 value *2] XX	Parameter o1-83 > 0 [Drive Name]. The "XX" on the screen will be replaced o1-84 [Drive Name Unit Number] value when o1-84 > 0. Change o1-83 or o1-84 settings.	
PI Aux Control Active	YF-01 = 2 [PI Aux Control Selection = Enabled] and is active. Set $YF-01 = 0$ [Disabled] or adjust $YF-25$ [PI Aux Control Activation Level].	
Pre-Charge: Exit in XXX min */	Pre-Charge active. X indicates time left before Pre-Charge exits due to timers (<i>Y4-03 + Y4-07</i>). Pressure Feedback is low. Adjust the Pre-Charge parameters.	
PrimerPump Activ: Exit in XXXmin */	The drive is delaying the start of the motor and the Lube Pump digital output is energized with Y4-29 = 2 [Lube Pump Text = Primer Pump]. Wait or cycle the Run command. Verify setting of Y4-31 [Lube Pump Time].	
Scrn Mtr Starter: Exit in XXXmin */	The drive is delaying the start of the motor and the Lube Pump digital output is energized with Y4-29 = 3 [Lube Pump Text = Screen Motor Starter]. Wait or cycle the Run command. Verify setting of Y4-31 [Lube Pump Time].	
Seq Timer Set: Wait for RUN Cmd	Sequence Timers are programmed to run the drive but there is no Run Command.	
Sequence Timer Active: IDLE	Sequence Timers are programmed to run the drive, the Run Command is applied, but the timer has not started yet.	
Sequence Timer 1: RUN	Sequence Timers are programmed to run the drive, the Run Command is applied and the timer is running the drive. The active timer number is displayed.	
Single Phase Foldback	The drive is limiting output speed because of too much DC Bus voltage ripple. The drive lost an input phase, or for a single phase application, the motor is drawing too much load. Make sure that all input phases are present and decrease the output load.	
Sleep Active Minimum Water Level	Water Level Control caused the drive to sleep. The water level was below the <i>Yd-04</i> [Minimum Water Level] level for longer than the <i>Yd-05</i> [Water Level Sleep Delay Time] time and forced the drive to go into a sleep condition. Confirm Water Level sleep settings.	
Sleep Active Min Suct Pressure	Drive is in sleep due to Suction Pressure Control. The Suction Pressure dropped below the YE-04 level for more than the YE-05 time, forcing the drive to go to a sleep condition. Confirm Suction Pressure sleep parameter settings.	
Sleep AUTO→Off AUTO Cmd to RUN	Drive switched to OFF due to entering sleep with Y2-15 = 1 or 2 [Sleep AUTO → OFF Selection = Enabled or Enabled with Timer]. Issue a Run command.	

21 Troubleshooting

Keypad Display	Description
Staging Lag in XXX min */	Stage is in progress. X indicates the length of time before staging takes place. The conditions for staging a new drive have been met. Adjust parameter settings if staging is not desired given the system conditions.
Suction Control Active	YE-01 = 1 [Suction Pressure Control Select = Suction Pressure (PSI)] and is active. Set $YE-01 = 0$ [Disabled] or adjust $YE-25$ [Suc Pres Ctrl Activation Level].
Vacuum Control Active	YE-01 = 2 [Suction Pressure Control Select = Vacuum ("Hg)] and is active. Set YE-01 = 0 [Disabled] or adjust YE-25 [Suc Pres Ctrl Activation Level].

^{*1} *2 Unit changes to "sec" for values less than or equal to 180 seconds. The text shown here will be different for different *o1-83* values.

Revision History

Date of Publication	Revision Number	Section	Revised Content
October 2025	-	-	First Edition



i Q p u m p ® 6 0 5 D R I V E INSTALLATION & PRIMARY OPERATION

YASKAWA AMERICA, INC.

2121, Norman Drive South, Waukegan, IL 60085, U.S.A. +1-800-YASKAWA (927-5292) www.yaskawa.com

DRIVE CENTER (INVERTER PLANT)

2-13-1, Nishimiyaichi, Yukuhashi, Fukuoka, 824-8511, Japan Phone: +81-930-25-2548 www.yaskawa.co.jp

YASKAWA EUROPE GmbH

Philipp-Reis-Str. 6, 65795 Hattersheim am Main, Germany Phone: +49-6196-569-300 E-mail: support@yaskawa.eu.com www.yaskawa.eu.com

YASKAWA ELÉTRICO DO BRASIL

777, Avenida Piraporinha, Diadema, São Paulo, 09950-000, Brasil Phone: +55-11-3585-1100 www.yaskawa.com.br

In the event that the end user of this product is to be the military and said product is to be employed in any weapons systems or the manufacture thereof, the export will fall under the relevant regulations as stipulated in the Foreign Exchange and Foreign Trade Regulations. Therefore, be sure to follow all procedures and submit all relevant documentation according to any and all rules, regulations and laws that may apply.

Specifications are subject to change without notice for ongoing product modifications and improvements.

Original instructions.

© 2025 YASKAWA America, Inc.

YASKAWA America, Inc.



TOEPYAIWM6507 Revision: A <0>-0 October 2025 Published in USA