MotionWorks+ version 2.56 Summary of changes

- New MW+ version, released July 2001
- Contains new tools and features
- Separate Archive tool (ver 2.09) available
- New System Ladder version 225
- New CimScope version 0.37E

New tools and features

- Scope
- Archive
- Search & Replace
- Cross Reference


Scope

- Graphical and table view of captured data
 - (4) Analog channels
 - (4) Digital channels
 - Trigger condition is settable
 - Graphical or table view of data
- Configure by property window settings
- Can be run online or offline

Scope

- Export Chart – saves to a file
- Import Chart


 get from file
- Zoom
 - vary view size

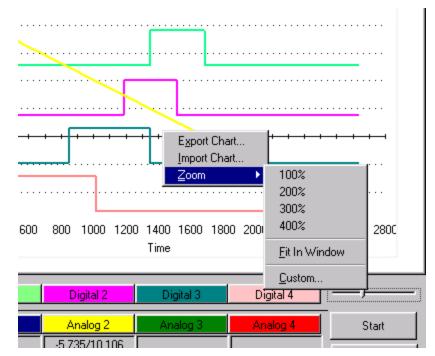


- "rubber band" an area to zoom in

Scope Trigger

- One Conditional statement starts data capture
- Use Expression Builder
 - example: Local_Input4==true

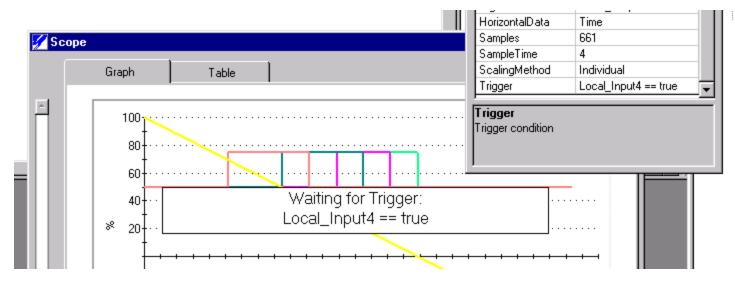


💋 Scope

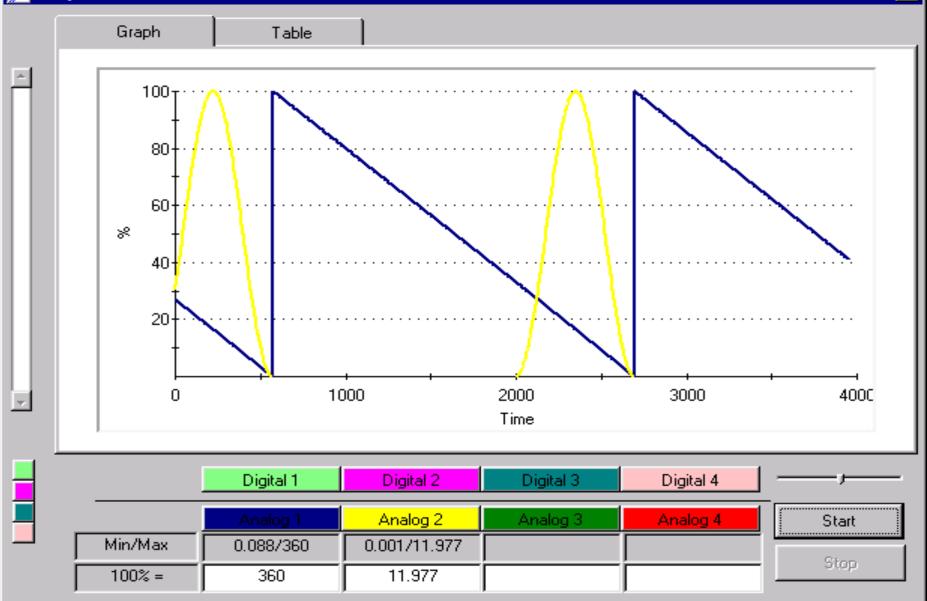


×

💋 Scope

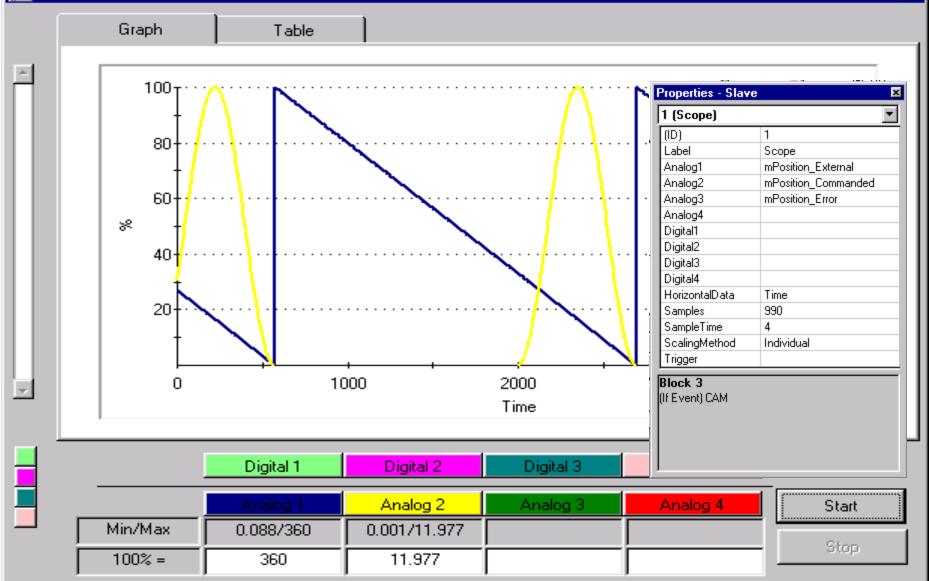

×

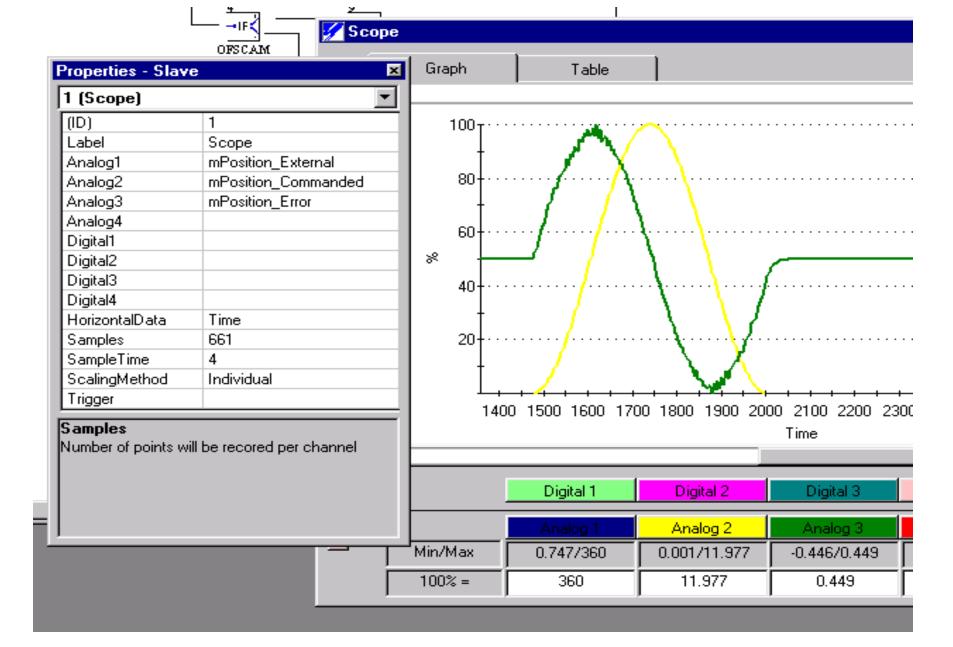


Scope

÷

500	ope							<u>×</u>	
	Graph		Table						
ſ	Analog 1	Analog 2	Analog 3	Analog 4	Digital 1	Digital 2	Digital 3	Digital 4 🔺	
	9.844	0.825							
	9.229	0.716							
	8.525	0.616							
	7.822	0.522							
	7.075	0.442							
	6.460	0.363							
	5.713	0.295							
	5.098	0.231							
	4.438	0.177							
	3.560	0.117							
	2.900	0.079							
	2.241	0.050							
	1.538	0.028							
	1.011	0.010							
	0.308	0.002							
	360	0.000							
	359	0 000							
	•								
		Digital 1		Digital 2	Digital 2 Digital 3 Digital 4				
		Analog 1		Analog 2	Analog 3 Analog 4		log 4	Start	
	Min/Max	0.0	88/360	0.001/11.977			T	Stop	
	100% =		360	11.977				0.000	

X

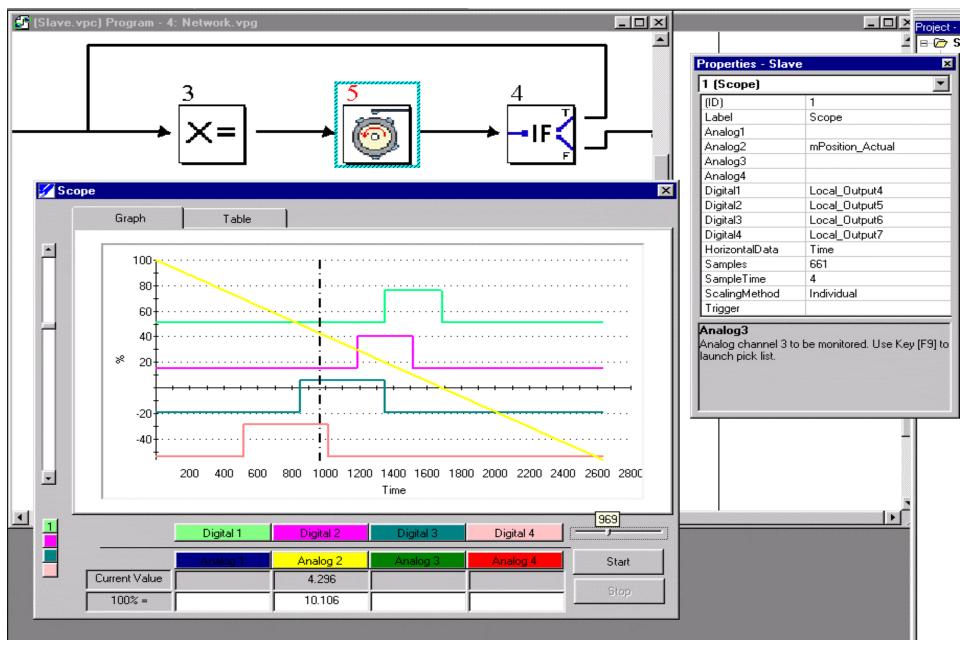

Archive

- Installed with MW+
- Can also be a "Stand Alone" application
- Independent install wizard on CDROM
- Not necessary to have MW or MW+ installed on the PC to use archive
- Located in Tools pull down menu in MW+
- Upload or Download complete projects
- SGDH parameters included in archive


July 2001

Archive

Computer			Transfer Options			
Current Directory:		Program Data				
C:\MyBackup		•	🔽 Va	riables	🔽 Show Details	
C:\			🔽 Co	nstants		
S MyBackup			Γ	Controller-		
			⇒			
			<=			
			Evit	Į.		
🗇 с:		•	E <u>w</u> it	00		
Transfer Progress						
Total Files: 40	File Name:	\$SFINDEX				
Active File: 15	Current State:					

Search & Replace

• Change variable or I/O names

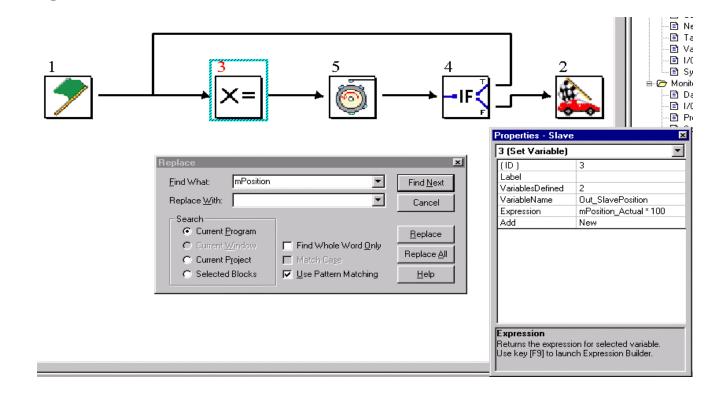

Cross Reference

- Select any type of data, except tables.
- Use "Select" to get window of all items.

Cross Reference			×			
Location	Block	Property	Usage			
Program - 2 (Adjust)	17 - Input (CHECK)	Input	CurrUsePtr != StorePtr			
Program - 3 (Capture)	5 - Set Variable (STORE)	VariableName	LatchBuffer[StorePtr]			
Program - 3 (Capture)	6 - If Event (CHECK)	Event	StorePtr > MaxBuffer			
Program - 3 (Capture)	7 - Set Variable (RESET)	VariableName	StorePtr			
Program - 3 (Capture)	8 - If Event (CHECK)	Event	StorePtr == PrevUsePtr			
Program - 4 (Pickup)	4 - If Event (WAIT)	Event	(CurrUsePtr != StorePtr) &&			
Data - Variables	n/a	n/a	StorePtr			
		Cross Reference Item: Sto	rePtr 💌			
Results: 7 Instances Found Fo	r Searching of StorePtr	Ei	nd Now Select E <u>x</u> it			

New System Ladder version 225

• Improved MP940 initialization on power up

New CimScope version 0.37E

• More reliable data transfer and initialization

Summary Slide

- New MW+ version 2.56 released July 2001
- Contains new tools and features
- Separate Archive tool (ver. 2.09) available
- New System Ladder version 225
- New CimScope version 0.37E