

Programming data " 34 " for n39 (multi-function input terminal) allows the S4 / S5 inputs to be used for Up/Down frequency setting.

NOTES:

1. Parameter n38 will not be valid when n39 is set to " 34 ".
2. Jog has priority over Up/Down.
3. Up/Down has priority over Multi-step Frequency inputs.
4. Upper limit speed is set by the formula:

$$n09 \text{ (Fmax)} \times \frac{n30 \text{ (Freq. Ref. Upper Limit)}}{100}$$

5. Lower limit speed is from n31 , Frequency Reference Lower Limit.