





- NOTES:
1. CUSTOMER TO CONNECT FIELD GROUND WIRING TO THE CABINET GROUND LUG.
 2. WHEN INPUT CIRCUIT BREAKER OPTION PM IS NOT PROVIDED, BRANCH CIRCUIT PROTECTION MUST BE SUPPLIED BY THE CUSTOMER WHEN NOTED ON THE CABINET DATA NAMEPLATE.
 3. FOR 208VAC APPLICATIONS SET PARAMETERS E1-01 AND E1-05 TO 208.
 4. FOR SPEED POT OPTION TZ, SET H3-02 TO 2E, L4-05 TO 0, AND S5-01 TO 0
 5. WITH A CONTROL POWER TRANSFORMER T1, POWER RATING 350VA OR GREATER, SECONDARY FUSE F6 IS ADDED.
 6. CUSTOMER TO ADJUST THE THERMOSTAT ON THE SPACE HEATER HR1 FOR THE MINIMUM DESIRED TEMPERATURE INSIDE THE DRIVE CABINET. THIS SET TEMPERATURE IS NORMALLY SELECTED TO BE SLIGHTLY HIGHER THAN THE MINIMUM AMBIENT TEMPERATURE OF THE AIR SURROUNDING THE CABINET, AND IS THE TEMPERATURE AT WHICH THE SPACE HEATER HR1 WILL SHUT OFF.
 7. CONDUIT FITTINGS/HUBS SHALL COMPLY WITH THE 'STANDARD FOR CONDUIT, TUBING, AND CABLE FITTINGS, UL 514B' OR CONDUIT FITTINGS HAVING THE SAME ENVIRONMENTAL RATING AS THE ENCLOSURE SHALL BE USED.

YASKAWA	DRAWN BY:	N. LAWS	DATE:	8/6/20	TITLE:	SCHEMATIC DRAWING				
	CHECKED BY:	K. PEOPLES	DATE:	8/7/20		HV600 TYPE 3r CONFIGURED				
APPROVED:		R. JENSEN	DATE:	8/10/20	SIZE:	D	REVISION:	03	PAGE:	2 of 2
ORIGINAL DESIGN:		N. LAWS	DATE:	8/6/20	DRAWING #:		DS.H6C3.01			

THIS DOCUMENT AND INFORMATION CONTAINED HEREIN ARE CONFIDENTIAL, AND CANNOT BE COPIED OR DISCLOSED IN WHOLE OR IN PART WITHOUT THE EXPRESS WRITTEN CONSENT OF YASKAWA AMERICA INC.