



CONTROL TRANSFORMER PRIMARY CONNECTIONS		
INPUT VOLTS	TERMINALS	JUMPER LOCATION
208	(H1) (H2)	NONE
460/480	(H1) (H4)	(H2) TO (H3)

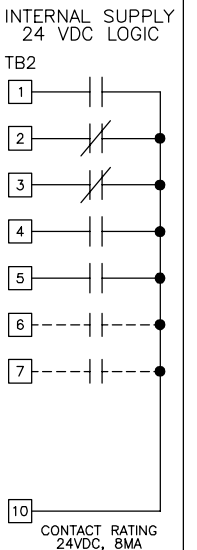

- PROGRAMMABLE CONTACT INPUTS DI-1/2/3/4/5/6/7/8
- DI-1 RUN (AUTO MODE)
 - DI-2 RUN ENABLE (SAFETY)
 - DI-3 RUN INTERLOCK (BAS)
 - DI-4 REMOTE TRANSFER
 - DI-5 SMOKE PURGE BYPASS
 - DI-6 SPARE
 - DI-7 SPARE
 - DI-8 S10
 - IG24 S9
 - IG24 24V COMMON
 - SHIELD GROUND
 - SHIELD GROUND

- PROGRAMMABLE RELAYS DO-7/8/9/10
- AS SELECTED BY ELECTRONIC BYPASS CONTROL PARAMETERS Z2-23 TO Z2-26
- CONTACTS FOR CUSTOMER USE
- RATED: 2A, 24VDC/120VAC +/- 15% MAX.
- CUSTOMER MUST PROVIDE PROPER SHORT CIRCUIT PROTECTION AND MEANS OF DISCONNECT.
- DO-7 MOTOR RUN
 - DO-8 HAND MODE
 - DO-9 AUTO MODE
 - DO-10 SYSTEM FAULT

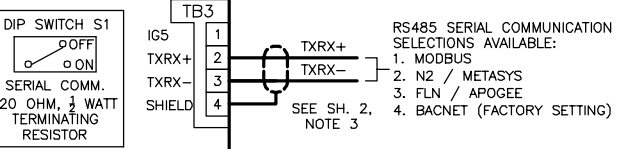

HOA OPERATOR
PART NUMBER
JVOP-183

YASKAWA		DATE	TITLE
DRAWN BY: D. PACKER	DATE: 2/22/14	SCHEMATIC DIAGRAM P1000 ELECTRONIC BYPASS	
CHECKED: D.R. CMELEK	DATE: 2/24/14	SIZE: D	REVISION: 02
APPROVED: K. FLIERL	DATE: 2/24/14	PAGE: 1 of 2	
ORIGINAL DESIGN: D. PACKER	DATE: 2/22/14	DRAWING #: DS.P1B.3R.04	


REVISIONS				
REV.	DESCRIPTION	ECO #	DRAWN BY	DATE
02	CHANGED REACTOR L4 TERMINAL DESIGNATORS	7695	R. ROH	11/16/17
01	ADDED OPTION PH	6049	NSL	3/2/15
00	INITIAL RELEASE	-	D. PACKER	2/22/14

* - INDICATES COMPONENTS NOT SUPPLIED BY YASKAWA.
 - - INDICATES CUSTOMER WIRING.
 - - CONNECTED TO THE CABINET OR PANEL.
 SEE SHEET 2 FOR NOTES.

A
B
C
D
E
F
G
H
J
K

201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217
218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241

- NOTES:
1. CUSTOMER TO CONNECT THE CABINET GROUND LUGS TO EARTH GROUND AND UTILITY GROUND.
 2. CONDUIT FITTINGS/HUBS SHALL COMPLY WITH THE 'STANDARD FOR CONDUIT, TUBING, AND CABLE FITTINGS, UL 514B'. OR CONDUIT FITTINGS HAVING THE SAME ENVIRONMENTAL RATING AS THE ENCLOSURE SHALL BE USED.
 3. INSULATED TWISTED SHIELDED WIRE IS REQUIRED. SHIELD TO CONNECT TO PROPER TERMINAL AS SHOWN. CONNECT THE SHIELD ONLY AT THIS END. STUB AND ISOLATE THE OTHER END. DO NOT RUN THESE WIRES IN THE SAME CONDUIT AS THE AC POWER AND THE AC CONTROL WIRES.
 4. WITH A CONTROL TRANSFORMER, T1, POWER RATING 350VA OR GREATER, SECONDARY FUSE F6 IS ADDED.
 5. CHANGING Z1-01 TO "1" WILL PROGRAM THE DRIVE AND BYPASS PARAMETERS TO THEIR FACTORY DEFAULT SETTINGS.
 6. FOR 208VAC APPLICATIONS, SET E1-01 TO 208, AND SET E1-05 TO 208.
 7. THE MOTOR OVERLOAD RELAY IS FACTORY SET FOR MANUAL RESET. CUSTOMER TO ADJUST THE MOTOR OVERLOAD RELAY TRIP SETTING FOR THE ACTUAL AC MOTOR'S FULL LOAD AMPS.
 8. CUSTOMER TO ADJUST THE THERMOSTAT ON THE SPACE HEATER HR1 FOR THE MINIMUM DESIRED TEMPERATURE INSIDE THE DRIVE CABINET. THIS SET TEMPERATURE IS NORMALLY SELECTED TO BE SLIGHTLY HIGHER THAN THE MINIMUM AMBIENT TEMPERATURE OF THE AIR SURROUNDING THE CABINET. AND IS THE TEMPERATURE AT WHICH THE SPACE HEATER HR1 WILL SHUT OFF.

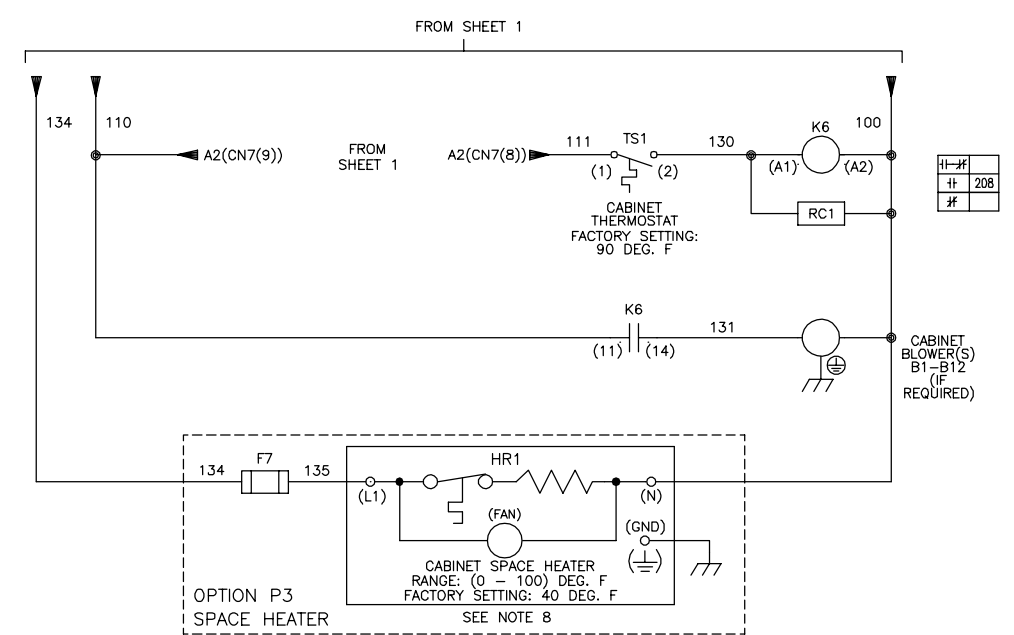

YASKAWA	DRAWN BY:	D. PACKER	DATE:	2/22/14	TITLE:			SCHEMATIC DIAGRAM		
	CHECKED:	D.R. CMELAK	DATE:	2/24/14	P1000 ELECTRONIC BYPASS			SIZE:	REVISION:	PAGE:
	APPROVED:	K. FLIERL	DATE:	2/24/14	D	02	2 of 2	DRAWING #:		
	ORIGINAL DESIGN:	D. PACKER	DATE:	2/22/14	DS.P1B.3R.04					