

1 2 3 4 5 7 8 9 10 11 12 13 14 15 16 В В CUSTOMER WIRING REQUIREMENTS • FOR 0 TO 100 AMPS, USE A MINIMUM OF 60°-75°C COPPER WIRE. • FOR ABOVE 100 AMPS, USE A MINIMUM OF 75°C COPPER WIRE. (UNLESS SPECIFIED OTHERWISE) С С TABLE 4 A.C. MOTOR WIRING EARTH GROUND WIRING A1000 CONFIG. MODEL NO. BASE NUMBER A1C **XXXX WITH OPTION PH, TO LOAD REACTOR L4 A.C. LINE GROUND LUG BLOWER MOTOR GROUND LUG OR, WITHOUT OPTION PH TIGHTENING TORQUE (LB.-IN.) 35 WIRE SIZE RANGE (AWG) TIGHTENING TORQUE (LB.-IN.) WIRE SIZE RANGE (AWG) MFG. PART NUMBER WIRE SIZE RANGE (AWG) TIGHTENING TORQUE (LB.-IN.) TO STANDARD AC DRIVE D D 240V 480V 600V C1P3 RLW-01P60 22 - 1014-10 14 - 10B001 C1P7 RLW-02P10 OR OR OR OR B002 C002 RLW-03P40. 8 40 8 40 B003 C003 RLW-04P80. OR OR OR OR A002 Ε Ε A003 RLW-07P60 45 6-4 45 B004 C006 OR OR OR OR A004 RLW-00110_ B007 C009 50 A006 B011 C011 RLW-00140_ 16 C017 RLW-00210 A009 B014 14 - 6A015 C022 RLW-00280. A022 B021 C027 RLW-00350_ CUSTOMER TO SUPPLY A028 B027 A UL LISTED B034 C032 RLW-00460_ CLOSED-LOOP G C041 RLW-00550_ G A042 B040 6 - 1/0 45 CONNECTOR, PER RLW-00650_ B052 C052 THE AC DRIVE A054 RLW-00830_ B065 C062 TECHNICAL MANUAL A068 USE 75°C COPPER A080 B077 RLW-01040_ WIRE ONLY A104 B096 RLW-01300 150 A130 B124 RLW-01600 OR OR A154 B156 RLW-02000 1/0 - 2/0 180 RLW-01300 C099 OR OR 14-2/0 120 3/0 - 4/0 C125 250 RLW-01600 RLW-02000 C144 J J B180 RLW-02500 A192 RLW-02500 B240 RLW-03220 B302 RLW-04140_ A248 RLW-03220 Κ Κ A312 RLW-04140 B361 RLW-05150_ A360 275 6-250 kcmil B414 RLW-06000_ CUSTOMER TO SUPPLY A B477 UL LISTED CLOSED-LOOP L B515 RLW-07500_ CONNECTOR B590 Μ TABLE 5 OPTION PL CONTROL WIRING A1000 CONFIG. MODEL NO. BASE NUMBER A1C *XXXX TERMINAL BLOCK TB1 TO A1000 DRIVE OR, TO CDBR A2, A3, A4 WIRE SIZE RANGE (AWG) TIGHTENING TORQUE (LB.-IN.) WIRE SIZE RANGE (AWG) TIGHTENING TORQUE (LB.-IN.) WIRE SIZE RANGE (AWG) TIGHTENING TORQUE (LB.-IN.) 240V 480V 600V Ν A002 B001 C1P3 4.4 - 5.3 A003 B002 C1P7 A004 B003 C002 CUSTOMER TO SUPPLY A006 B004 C003 A UL LISTED A009 B007 CLOSED-LOOP C006 CONNECTOR, PER A022 B014 C011 THE AC DRIVE A028 B021 C017 TECHNICAL MANUAL A042 B027 C022 USE 75°C COPPER A054 B034 C027 A068 B040 C032 WIRE ONLY 080A B052 C041 A104 B065 C052 A130 A154 B077 C062 A192 B096 C077 Q Q CUSTOMER TO SUPPLY A248 B124 C099 A UL LISTED A312 B156 C125 CLOSED-LOOP A360 B180 C144 CONNECTOR, PER B240 C192 THE AC DRIVE B302 TECHNICAL MANUAL R R B361 USE 75°C COPPER B414 WIRE ONLY B477 B515 B590 S S Τ Τ 8/8/12 CUSTOMER CONNECTION D.R. CMELAK A1000 CONFIGURED TYPE 12 HD RATING CHECKED: D. PACKER 8/8/12 U U THIS DOCUMENT AND INFORMATION CONTAINED IN IT ARE CONFIDENTIAL, AND CANNOT BE 2 of 2 С 04 COPIED OR DISCLOSED IN WHOLE OR IN PART K. FLIERL 8/8/12

WITHOUT THE EXPRESS WRITTEN CONSENT

OF YASKAWA AMERICA INC.

9

1

2

3

4

5

6

7

8

Prepared by nathan_laws 11/20/2013 2:07:39 PM

2/2/12

13

ROBERSON

12

11

UDE00340

14

15

16