


ACサーボバック
Σ-Vシリーズ／大容量Σ-Vシリーズ／
Σ-7シリーズ
取付手順書
セーフティモジュール
セーフティモジュール形式：SGDV-OSA01A

AC SERVOPACK
Σ-V Series/
Σ-V Series for Large-Capacity Models/
Σ-7 Series
Installation Guide
Safety Module
Safety Module Model: SGDV-OSA01A

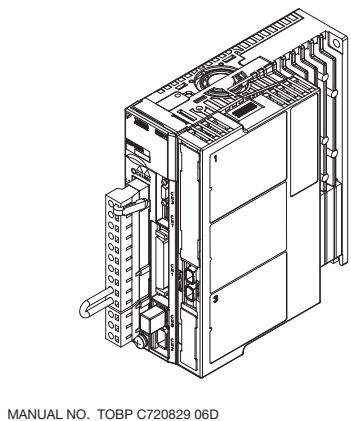

MANUAL NO. TOBP C720829 06D

本資料はセーフティモジュールをΣ-Vシリーズ／大容量Σ-Vシリーズ／Σ-7シリーズサーボバックに取り付けるための手順書です。製品に同梱しております「安全上のご注意」(資料番号：TOBP C720829 00)と併せて、お読みください。

一般注意事項

- 本資料に掲載している図解は、細部を説明するために、装置のカバーまたは安全のための遮へい物を取り外した状態で描かれている場合があります。この製品を運転するときは、必ず規定どおりの装置のカバーや遮へい物を元どりに戻し、ユーザーズマニュアルに従って運転してください。
- 本資料に掲載されている図は代表事例であり、お届けした製品と異なる場合があります。
- 本資料は製品の改良や仕様変更、及び本資料自身の使いやすさの向上のために、適宜変更することがあります。この変更は、本資料の資料番号を更新し、改訂版として発行します。
- 損傷や紛失などにより本資料を注文される場合は、当社代理店または裏表紙に記載されている最寄りの当社営業所へ、資料番号を連絡してください。
- お客様が改造を行った製品は、当社の品質保証の対象外となります。改造製品に起因する一切の障害や損傷に対して、当社は責任を負いません。


安全に関するシンボルマーク

- 本資料では安全に関する内容により、以下のシンボルマークを使用しています。
 - 安全に関するシンボルマークのある記述は、重要な内容を記載していますので必ず守ってください。
- 危険**


取扱いを誤った場合に、危険な状況が起こりえて、死亡または重傷を受ける可能性があります。想定される場合。
- 注意**

取扱いを誤った場合に、危険な状況が起こりえて、中程度の傷害や軽傷を受ける可能性があります。及び物的損害のみの発生が想定される場合。
- なお、に記載した事項でも、状況によっては重大な結果に結びつく可能性があります。

取付けに必要なもの

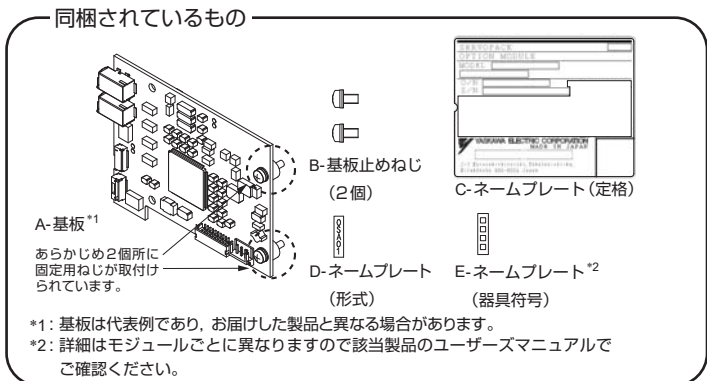

お客様に準備していただくもの

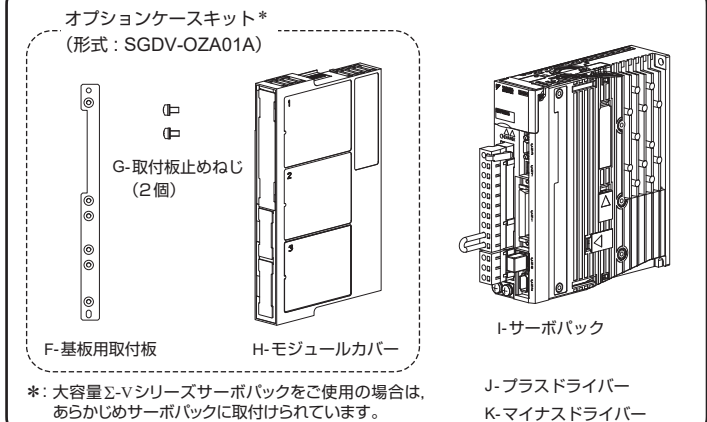

作業環境

以下の環境で取付け作業を行ってください。

- 取付け作業台に、導電マットまたは静電気防止マットを使用していること
- 導電マットまたは静電気防止マットが、1 MΩ±20%を介して接地されていること
- 周囲温度が0～55℃であること
- 相対湿度が90%RH以下(凍結、結露しないこと)であること
- 温度が急激に変化せず、結露しない場所
- 腐食性ガス、可燃性ガスのない場所
- ちり、ほこり、塩分、金属粉が少ない場所
- 水、油、薬品などがかからない場所
- 振動や衝撃が直接本体に伝わらない場所

安全上のご注意

■作業前の注意



注意

- 静電気防止リストストラップを接地し、必ず肌に密着させてください。
- 接地されているものに触れて、体の静電気を逃がしてください。

■取付け上の注意



注意


- 指定された作業環境で取付けを行ってください。故障のおそれがあります。
- サーボバックに接続してあるケーブルをすべて外した状態で取付けを行ってください。故障のおそれがあります。
- 基板に衝撃を加えないでください。故障のおそれがあります。
- 基板をゆらさないでください。故障のおそれがあります。
- 基板のコネクタ部や電子部品には触らないでください。取付けの際は基板の端を持ってください。故障のおそれがあります。
- 基板の上に何も載せないでください。故障のおそれがあります。
- 静電気対策処理が行われていない物に直接触れないでください。故障のおそれがあります。
- 衣服を基板に接触させないでください。故障のおそれがあります。
- ねじを強く締めすぎないでください。推奨締め付けトルクは0.49 N・m (±10%)です。ねじ山がつぶれたり、スベアサがつぶれ基板が変形するおそれがあります。

取付け手順


大容量Σ-Vシリーズサーボバックをご使用の場合は、サーボバックからモジュールカバーを取り外して、手順3から始めてください。

サーボバックの準備

1. 基板用取付板(F)をサーボバック(I)の溝にあわせ、取付板止めねじ(G)で固定します。
(締め付けトルク：0.49 N・m)

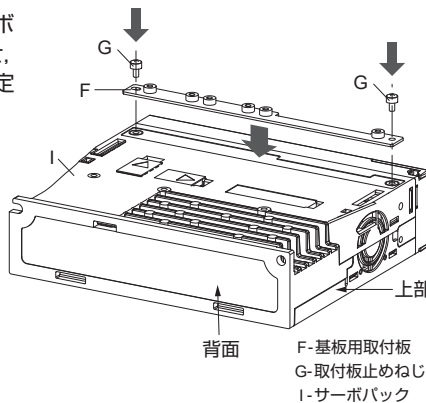


2. コネクタカバーを取り外します。

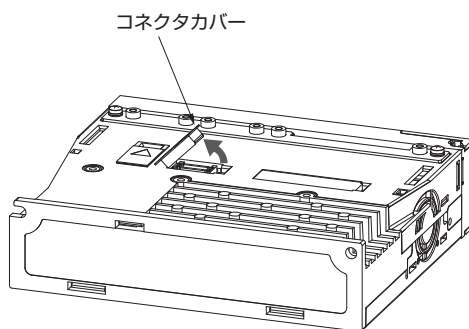


基板の取付け

3. 図のように基板(A)の両側を持ち、基板コネクタ部をサーボバックコネクタ部にしっかりと差し込みます。

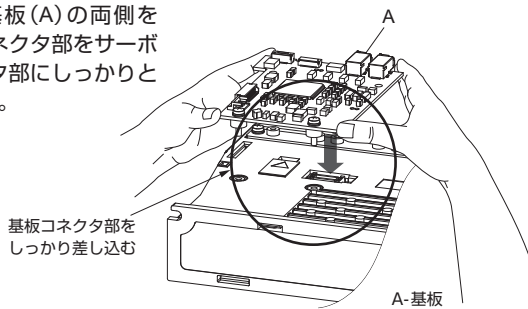


4. 基板をねじ(4箇所)で固定します。
(締め付けトルク：0.49 N・m)

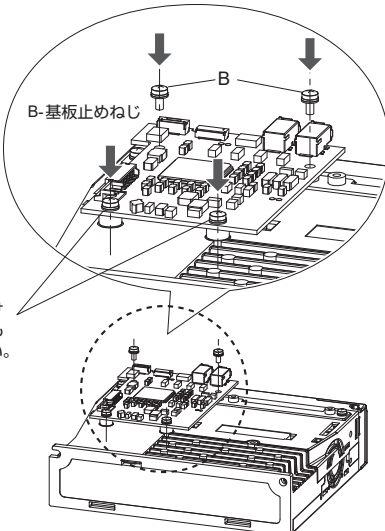


モジュールカバーの準備

5. モジュールカバー(H)のフロントカバー(図の箇所のみ)をマイナスドライバー(K)を使って外します。

・他のフロントカバーは外さないでください。

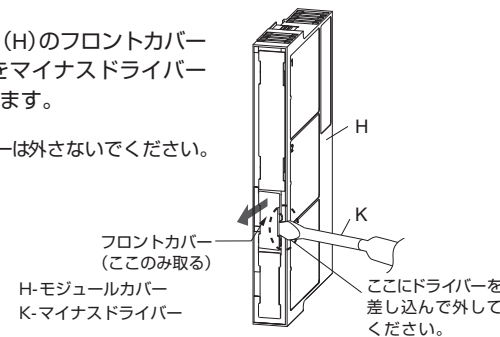


6. ネームプレート(C, D, E)をモジュールカバーの所定の位置に張ります。

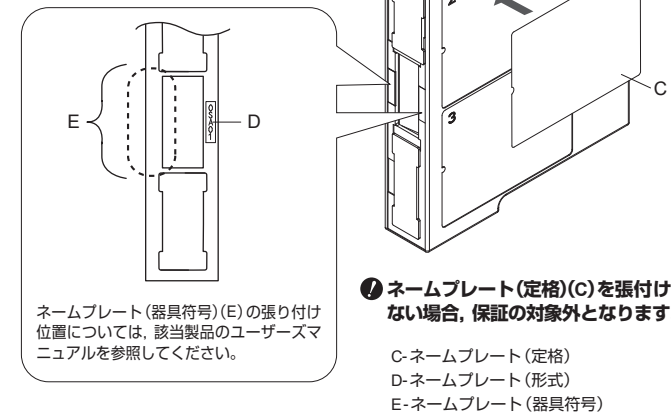


モジュールカバーの取付け


7. モジュールカバー(H)の開口部から基板が見えるように手前から取付けます。

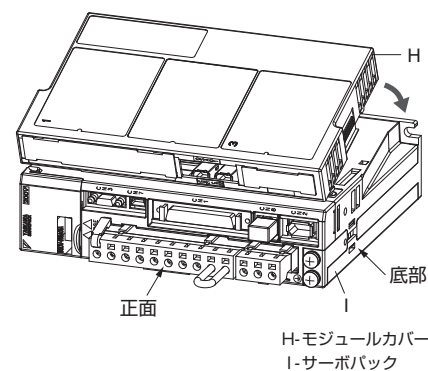

8. モジュールカバーの左右のつめを内側に押し込み、サーボバックに固定します。

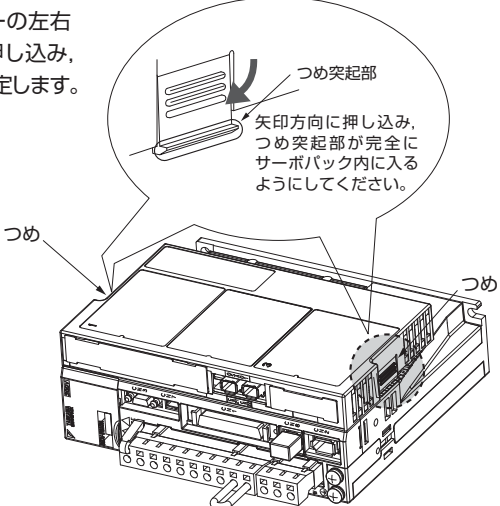

取付け完了

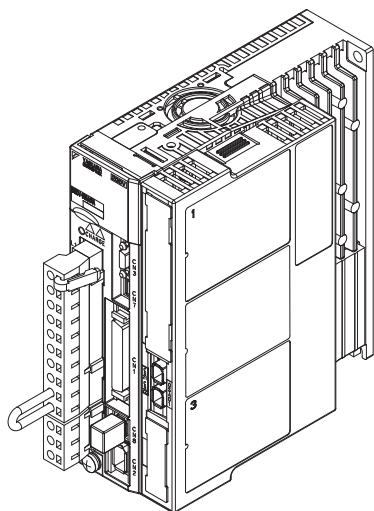

取付け完了後、試運転を行ってください。
詳細については、ご使用のサーボバックのマニュアルを参照してください。

(注) ご使用の前に、CN8に接続されているセーフティジャンパコネクタを外してください。

修理・部品交換などで当社に製品を送る場合は


オプションモジュールをサーボバックに取付けたままの状態で当社に送ってください。

ACサーボバック
Σ-Vシリーズ／大容量Σ-Vシリーズ／
Σ-7シリーズ
取付手順書
セーフティモジュール

技術相談・アフターサービスに関するお問い合わせ(YASKAWAコンタクトセンタ)	
TEL 0120-502-495 FAX 0120-394-094 E-mail 安川電機 e-メカサイト eメールによるお問い合わせを受けております。 https://www.e-mechatronics.com/contact/YCC	●技術相談 ●資料請求 月～金(祝日および当社休業日は除く) 9:00～12:00, 13:00～17:00 ●アフターサービス相談 24時間 365日
製品・技術情報サイト e-メカサイト	
検索 www.e-mechatronics.com 安川電機製品の最新情報をご覧いただけます。	

製造・販売	
株式会社 安川電機 www.yaskawa.co.jp	
東京支社 TEL (03) 5402-4525 FAX (03) 5402-4581 〒105-6891 東京都港区海岸1丁目18番1号ニューピア竹芝サウスタワー8階	
中部支店 TEL (0661) 36-9314 FAX (0661) 36-9311 〒470-0217 愛知県みよし市郡浦町2丁目3番1号	
大阪支店 TEL (06) 6346-4511 FAX (06) 6346-4556 〒530-0003 大阪市北区堂島2丁目4番27号 JFE堂島タワー4階	
九州支店 TEL (092) 288-7170 FAX (092) 288-7179 〒812-0892 福岡市博多区東部町1丁目14番20号	
※各地区の営業所は www.e-mechatronics.com の「お問い合わせ」でご確認ください。	
周辺機器・ケーブル	
[販 売] 安川メカトロック末松九機株式会社 アカウント営業部 www.ym-c.co.jp 本社 関東支社 TEL (02) 5776-3136 FAX (03) 5402-2568 〒105-6891 東京都港区海岸1丁目18番1号ニューピア竹芝サウスタワー7階 関西支社 TEL (06) 7670-2562 FAX (06) 7670-2281 〒530-0003 大阪市北区堂島2丁目4番27号 JFE堂島タワー4階	
[技術的なお問い合わせ]	
※周辺機器 YASKAWAコンタクトセンタ	※ケーブル 安川コントロール株式会社 お問い合わせフォーム www.yaskawa-control.co.jp/contact/

AC SERVOPACK
 Σ -V Series/
 Σ -V Series for Large-Capacity Models/
 Σ -7 Series
 Installation Guide
 Safety Module
 Safety Module Model: SGD-V-OSA01A

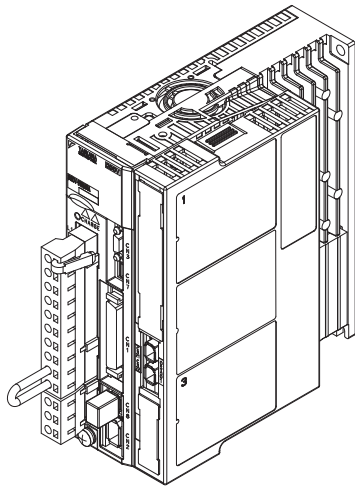

MANUAL NO. TOBP C720829 06D

This installation guide explains how to mount the safety module onto the Σ -V, large-capacity Σ -V or Σ -7 Series SERVOPACK. Read this installation guide thoroughly as well as the safety precautions (Manual No.: TOBP C720829 00) included with the product.

General Precautions

- The drawings presented in this instructions are sometimes shown without covers or protective guards. Always replace the equipment's cover or protective guard as specified first, and then operate the products in accordance with the user's manual.
- The drawings presented in this instructions are typical examples and may not match the product you received.
- These instructions are subject to change due to product improvement, specification modification, and instructions improvement. When these instructions are revised, the instructions code is updated and the new instructions is published as a next edition.
- If the instructions must be ordered due to loss or damage, inform your nearest Yaskawa representative or one of the offices listed on the back of this instructions.
- Yaskawa will not take responsibility for the results of unauthorized modifications of this product. Yaskawa shall not be liable for any damages or troubles resulting from unauthorized modification.

Safety Information

- The following conventions are used to indicate precautions in these instructions.
- Failure to heed these precautions can result in serious or possibly even fatal injury or damage to the products or to related equipment and systems.

- WARNING** Indicates precautions that, if not heeded, could possibly result in loss of life or serious injury.
- CAUTION** Indicates precautions that, if not heeded, could result in relatively serious or minor injury, damage to the product, or faulty operation.


In some situations, the precautions indicated could have serious consequences if not heeded.

APPLICABLE SERVOPACKs

Σ -V Series, Large-Capacity Σ -V Series or Σ -7 Series Σ -7S Models


ITEMS REQUIRED FOR INSTALLATION

Package Contents

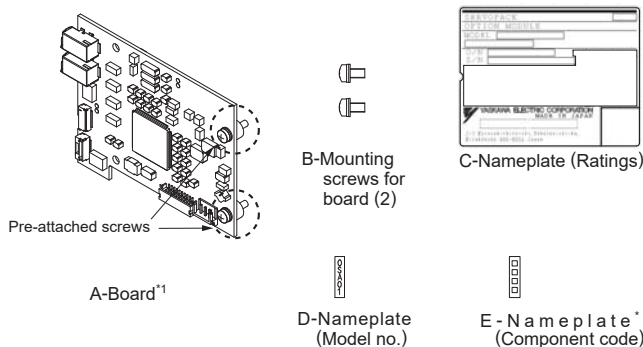

- *1: This board is an example and may differ from the received product.
- *2: Details of nameplates shown may differ from the received product. Refer to the user's manual to confirm correct details.

Additional Items (not included)

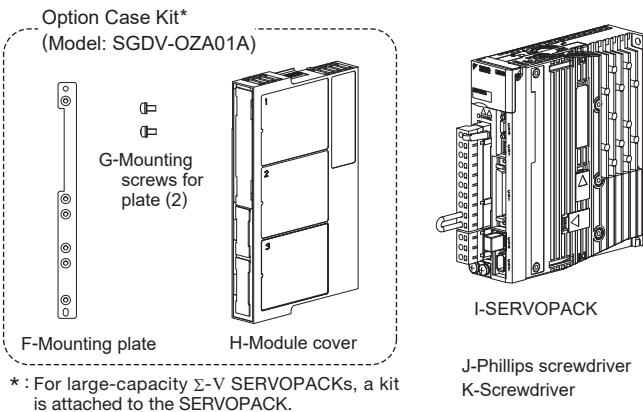

* : For large-capacity Σ -V SERVOPACKs, a kit is attached to the SERVOPACK.

INSTALLATION CONDITIONS

Install the module in the following environment.

- Cover the working area with a conductive or antistatic mat.
- This mat must be safely grounded with a resistor (1 M Ω ±20%).
- The surrounding air temperature must be between 0 and 55°C.
- Ambient humidity must be 90% RH or less (with no condensation).
- No extreme changes in temperature that can cause condensation
- Free from corrosive or flammable gases
- Free from dust, salts, or iron dust
- Not subject to water, oil, or chemicals
- No vibration and/or shock directly transmitted to the product

SAFETY PRECAUTIONS

Before starting

CAUTION

- Always wear an antistatic wrist strap that is safely grounded.
- Touch a safely grounded object to discharge any static electricity from your body.

Installation

CAUTION


- Install in the specified environment.**
Failure to observe this caution may result in malfunction.
- Disconnect all cables from the SERVOPACK before installing the board.**
Failure to observe this caution may result in malfunction.
- Do not apply any impact to the board.**
Failure to observe this caution may result in malfunction.
- Protect the board from moisture.**
Failure to observe this caution may result in malfunction.
- Do not touch the connector or electronic components on the board. Hold the board along its edges when installing.**
Failure to observe this caution may result in malfunction.
- Do not place any object on the board.**
Failure to observe this caution may result in malfunction.
- Avoid direct contact with any object that has not had antistatic treatment.**
Failure to observe this caution may result in malfunction.
- Make sure that your clothing is not in contact with the board.**
Failure to observe this caution may result in malfunction.
- Do not tighten the screws with excessive torque.**
The recommended tightening torque is 0.49 N·m ±10%.
Tightening screws with excessive torque may damage screw threads and the spacer, resulting in deformation of the board.

INSTALLATION PROCEDURE


For large-capacity Σ -V SERVOPACKs, remove the module cover from the SERVOPACK and start with step 3.

Preparing the SERVOPACK

- Fit the mounting plate (F) into the recess on the SERVOPACK (I), and fix the plate with the mounting screws (G).
(Tightening torque: 0.49 N·m)

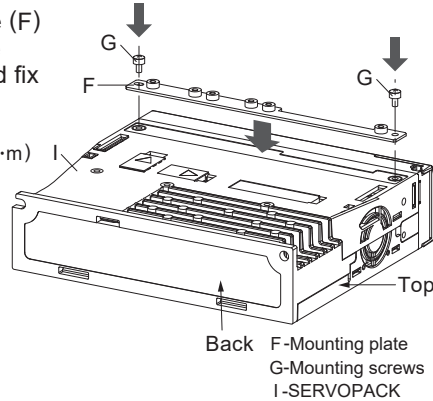


- Remove the connector cover from the SERVOPACK.

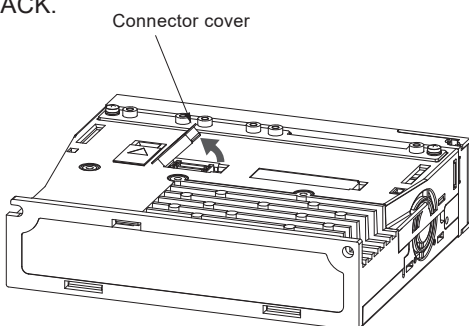


Installing the Board

- Hold both ends of the board (A) as shown in the illustration, and firmly insert the board connector into the connector port on the SERVOPACK.

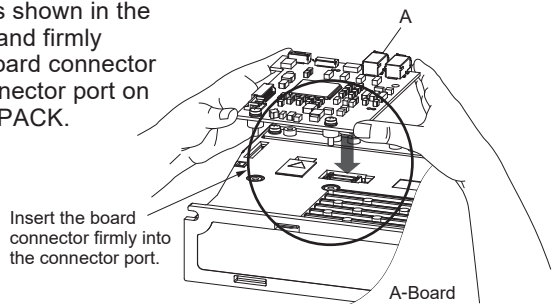


- Fix the board on the SERVOPACK with four screws.
(Tightening torque: 0.49 N·m)

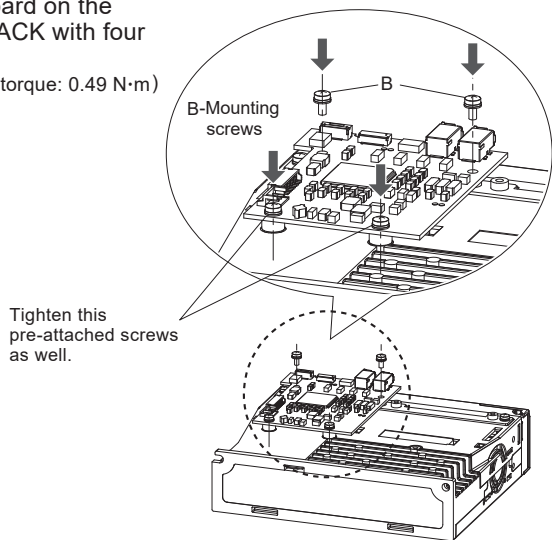


Preparing the Module Cover

- Remove one of the front covers (shown in the illustration) from the module cover (H) with a screwdriver (K).

- Do not remove the other front covers.

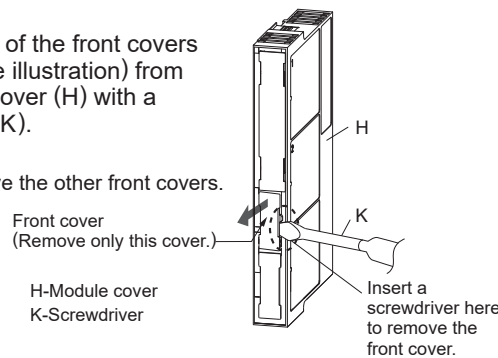

- Affix three nameplates (C, D, E) to the positions specified in illustration.

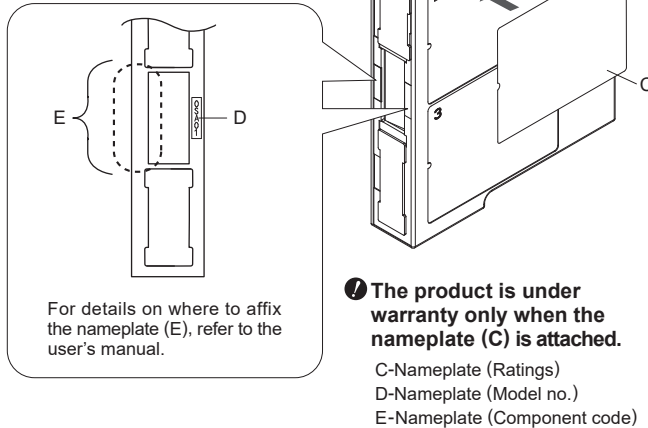


The product is under warranty only when the nameplate (C) is attached.


- C-Nameplate (Ratings)
- D-Nameplate (Model no.)
- E-Nameplate (Component code)

Mounting the Module Cover

- Align the front end of the module cover (H) with the front panel of the SERVOPACK as shown in the illustration, and place the module cover so that you can view the installed board from the opening (where the front cover is removed) on the module cover.

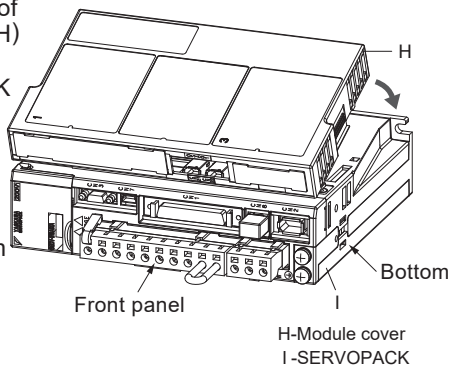

- Fix the module cover to the SERVOPACK by pushing in the retention clips on the left and right side of the module cover, while directing their angled end protrusions to enter the SERVOPACK.

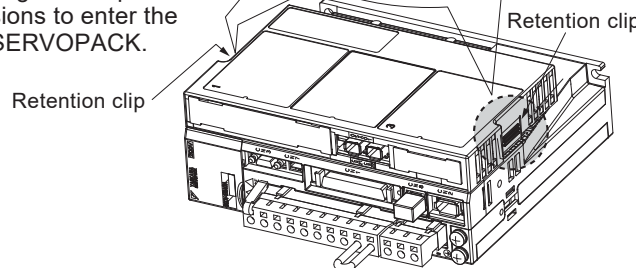

After Installing

Conduct a trial operation after the safety module has been properly installed on the SERVOPACK. For trial operation details, refer to the manual for SERVOPACK being used.

Note: Before using the SERVOPACK, remove the safety function jumper connector from CN8.

If You Need to Send Us the Option Module for Service

Always leave the option module attached to the SERVOPACK when sending the option module to YASKAWA for service.

AC SERVOPACK Σ -V Series/ Σ -V Series for Large-Capacity Models/ Σ -7 Series Installation Guide Safety Module

IRUMA BUSINESS CENTER (SOLUTION CENTER)
 455, Kurokikawa, Yomi, Odessa, 258-0000, Japan
 Phone: +81-4-2962-5151 Fax: +81-4-2962-4138
 www.yaskawa.co.jp

YASKAWA AMERICA, INC.
 2121, Norman Drive South, Westborough, IL 60085, U.S.A.
 Phone: +1-800-YASKAWA (927-5255) or +1-847-887-7000 Fax: +1-847-887-7310
 www.yaskawa.com

YASKAWA ELETRIC DO BRASIL LTDA.
 717, Avenida Piquetara, Indutema, São Paulo, 05090-000, Brazil
 Phone: +55-11-3365-1100 Fax: +55-11-3365-1157
 www.yaskawa.com.br

YASKAWA EUROPE GmbH
 Philipp-Rath-Str. 6, 63750 Hattersheim am Main, Germany
 Phone: +49-6186-569-300 Fax: +49-6186-569-266
 www.yaskawa.eu.com E-mail: info@yaskawa.eu.com

YASKAWA ELECTRIC KOREA CORPORATION
 6F, 112, Li-ro, Dong-gu, Anyang-si, Gyeonggi-do, Korea
 Phone: +82-31-8515-4524 Fax: +82-31-8515-5241
 www.yaskawa.co.kr

YASKAWA ASIA PACIFIC PTE. LTD.
 30A, Kallang Plaza, #06-01, 336113, Singapore
 Phone: +65-6336-3000 Fax: +65-6336-3003
 www.yaskawa.com.sg

YASKAWA ELECTRIC (THAILAND) CO., LTD.
 25, 1F-2F, Pichay Building, Sri Ratchadapisek Road, Huaykwang, Bangkok, 10110, Thailand
 Phone: +66-2-617-0099 Fax: +66-2-617-0769
 www.yaskawa.co.th

YASKAWA ELECTRIC (CHINA) CO., LTD.
 225, Lian Square 1, No.222, Naitan Road, Shanghai, 200201, China
 Phone: +86-21-5385-2500 Fax: +86-21-5385-2509
 www.yaskawa.com.cn

YASKAWA ELECTRIC (CHINA) CO., LTD. BEIJING OFFICE
 Room 1011, Tower V05 Oriental Plaza, No.1, East Chang An Avenue,
 Dong Cheng District, Beijing, 100726, China
 Phone: +86-10-61918-8888 Fax: +86-10-61918-4545

YASKAWA ELECTRIC TAIWAN CORPORATION
 12F, No. 207, Section 5, Beitou Road, Beitou District, New Taipei City 23143, Taiwan
 Phone: +886-2-8913-1333 Fax: +886-2-8913-1313 or +886-2-8913-1319
 www.yaskawa.com.tw

YASKAWA
 YASKAWA ELECTRIC CORPORATION

In the event that the end user of this product is to be the military and said product is to be employed in any weapons systems or the manufacture thereof, the export will fall under the relevant regulations as stipulated in the Foreign Exchange and Foreign Trade Act. Therefore, be sure to follow all procedures and submit all relevant documentation according to any and all rules, regulations and laws that may apply. Specifications are subject to change without notice for ongoing product modifications and improvements.

© 2010 YASKAWA ELECTRIC CORPORATION