

## E7 Metasys® N2 Technical Manual

*This Manual  
also available on  
[www.drives.com](http://www.drives.com)*



Models: CIMR-E7U\*

Document Number: TM.E7.22





# Warnings and Cautions

---

*This Section provides warnings and cautions pertinent to this product that if not heeded, may result in personal injury, fatality or equipment damage. Yaskawa is not responsible for consequences of ignoring these instructions.*

## **WARNING**

YASKAWA manufactures component parts that can be used in a wide variety of industrial applications. The selection and application of YASKAWA products remain the responsibility of the equipment designer or end user. YASKAWA accepts no responsibility for the way its products are incorporated into the final system design. Under no circumstances should any YASKAWA product be incorporated into any product or design as the exclusive or sole safety control. Without exception, all controls should be designed to detect faults dynamically and to fail safely under all circumstances. All products designed to incorporate a component part manufactured by YASKAWA must be supplied to the end user with appropriate warnings and instructions as to that part's safe use and operation. Any warnings provided by YASKAWA must be promptly provided to the end user. YASKAWA offers an express warranty only as to the quality of its products in conforming to standards and specifications published in the YASKAWA manual. **NO OTHER WARRANTY, EXPRESS OR IMPLIED, IS OFFERED.** YASKAWA assumes no liability for any personal injury, property damage, losses, or claims arising from misapplication of its products.

## **WARNING**

- Read and understand this manual before installing, operating, or servicing this drive. All warnings, cautions, and instructions must be followed. Qualified personnel must perform all activity. The drive must be installed according to this manual and local codes.
- Do not connect or disconnect wiring while the power is on. Do not remove covers or touch circuit boards while the power is on. Do not remove or insert the digital operator while power is on.
- Before servicing, disconnect all power to the equipment. The internal capacitor remains charged even after the power supply is turned off. Status indicator LEDs and Digital Operator display will be extinguished when the DC bus voltage is below 50 VDC. To prevent electric shock, wait at least 5 minutes after all indicators are OFF and measure DC bus voltage and verify that it is at a safe level.
- Do not perform a withstand voltage test on any part of the unit. This equipment uses sensitive devices and may be damaged by high voltage.
- The drive is not suitable for circuits capable of delivering more than the specified RMS symmetrical amperes. Install adequate branch short circuit protection per applicable codes. Refer to the specification. Failure to do so may result in equipment damage and/or personal injury.
- Do not connect unapproved LC or RC interference suppression filters, capacitors, or over voltage protection devices to the output of the drive. Capacitors may generate peak currents that exceed drive specifications.
- To avoid unnecessary fault displays, caused by contactors or output switches placed between drive and motor, auxiliary contacts must be properly integrated into the control logic circuit.
- YASKAWA is not responsible for any modification of the product made by the user, doing so will void the warranty. This product must not be modified.
- Verify that the rated voltage of the drive matches the voltage of the incoming power supply before applying power.
- To meet CE directives, proper line filters and proper installation are required.
- Some drawings in this manual may be shown with protective covers or shields removed, to describe details. These must be replaced before operation.
- Observe Electrostatic Discharge Procedures when handling the drive and drive components to prevent ESD damage.
- The attached equipment may start unexpectedly upon application of power to the drive. Clear all personnel from the drive, motor and machine area prior to applying power. Secure covers, couplings, shaft keys, machine beds and all safety equipment before energizing the drive.

# Introduction

---

This manual explains the specifications and handling of the *Metasys N2* protocol for the Yaskawa model E7 drive. The E7 drive with the *Metasys N2* protocol selected, connects the E7 drive to a *Metasys N2* network and facilitates the exchange of data.

This document pertains to the Yaskawa E7 drive. Additionally, in this document, the word “inverter”, “ac drive” and “drive” may be used interchangeably.

To ensure proper operation of this product, read and understand this manual. For details on installation and operation of the E7 drive or details on specific E7 parameters, refer to the *E7 User Manual*, document reference **TM.E7.01**. For details on E7 MODBUS communications, refer to the *E7 MODBUS® Technical Manual*, document reference **TM.E7.11**. All technical manuals and support files are on the CD that was supplied with the drive and available for download at [www.drives.com](http://www.drives.com).

For more information on the Metasys N2 protocol, please visit [www.jci.com](http://www.jci.com).

GPD is a trademark of Yaskawa, Inc.

MODBUS® is a registered trademark of Schneider Automation, Inc.

Metasys® N2 is a trademark of Johnson Controls, Inc.

# Table of Contents

---

<b>Chapter 1 Installation</b> .....	<b>1-1</b>
Installation Check Sheet.....	1-3
Metasys N2 Set-Up .....	1-5
<b>Chapter 2 Network Connection</b> .....	<b>2-1</b>
Physical Connection .....	2-3
<b>Chapter 3 E7 Drive Functions</b> .....	<b>3-1</b>
E7 Drive Functions .....	3-3
Cable Loss Configuration and Behavior .....	3-4
E7 Drive Fault Numbers .....	3-6
<b>Chapter 4 Metasys N2 Point Database</b> .....	<b>4-1</b>
Metasys N2 Analog Input (AI) Summary .....	4-3
Metasys N2 Analog Output (AO) Summary .....	4-4
Metasys N2 Binary Input (BI) Summary .....	4-5
Metasys N2 Binary Output (BO) Summary.....	4-5
<b>Chapter 5 Mailbox Function</b> .....	<b>5-1</b>
Mailbox Function Points .....	5-3
<b>Chapter 6 E7 Bypass Applications</b> .....	<b>6-1</b>
Bypass/Engineered Drive Parameter Settings .....	6-3
<b>Appendix A Troubleshooting</b> .....	<b>1</b>
Troubleshooting Check List .....	3
Installing and Configuring Metasys N2 .....	5
Wiring And Cabling .....	7
Drive Faults .....	8
<b>Appendix B Hex/Dec Conversion</b> .....	<b>1</b>
Hex/Dec Conversion Table .....	3

This page intentionally left blank.

# Chapter 1 Installation

---

*This chapter covers the initial set-up procedure for the E7 drive on a Metasys N2 network.*

<b>Installation Check Sheet .....</b>	<b>1 – 3</b>
<b>Metasys N2 Set-Up .....</b>	<b>1 – 5</b>

This page intentionally left blank.

# Installation Check Sheet

The following is a quick reference guide to the installation and configuration of the E7 drive with the *Metasys N2* protocol. Make a copy of this page and check-off each item as it is completed. For detailed information please refer to the detailed sections that follow.

- 1: Unpack the drive and verify that all components are present and undamaged.
- 2: Connect power to the drive and verify that the drive functions. This includes running the drive in “Hand” mode from the digital operator without the network selected or connected. Refer to the *E7 User Manual* for more information on connecting and operating the drive.
- 3: Remove power from the drive and wait for the charge lamp to be completely extinguished. Wait at least five additional minutes after all indicators are off. Measure the DC bus voltage and verify that it is at a safe level.
- 4: Connect the drive to the *Metasys N2* communication network. Refer to **Chapter 2 – Network Connection** for the *Metasys N2* connection procedure.
- 5: If this drive is either the first or the last device on the network, set the terminating resistor switch, S1-1, to ON. If this device is not the first or last device on the network, set the terminating resistor switch, S1-1, to OFF. Refer to **Chapter 2 – Network Connection** for details.
- 6: Configure the *Metasys N2* network for the drive as a VND device. Refer to the documentation included with the *Metasys N2* configuration software.
- 7: Set parameters b1-01, b1-02, H5-01, H5-02 and H5-08 to their appropriate values. Refer to **Table 1.1 - Drive Communication Parameter Settings** on page 1-5.

This page intentionally left blank.

# Metasys N2 Set-Up

A Yaskawa Electric America, Inc. (YEA) representative is responsible for proper configuration of the drive for its primary application, while a Johnson Controls, Inc. representative is responsible for field panel programming to make use of the drive's functionality in the building automation system as a VND device. As such, there must be coordination between the Yaskawa Electric America and Johnson Controls representatives to ensure that the programming of the drive is consistent with the particular application requirements. After verifying that the drive installation and wiring are correct, apply power to the drive. Table 1.1 below lists the parameters and their values required for proper *Metasys N2* communication and control.

## ◆ E7 Drive Parameter Settings for *Metasys N2* Communications

Parameter Number	Digital Operator Display	Settings for <i>Metasys N2</i> Communication
b1-01	Reference Source	2: Serial Com
b1-02	Run Source	2: Serial Com
H5-01	Serial Comm Adr	Select the drive address (default = 1F hex (31 dec))
H5-02	Serial Baud Rate	3: 9600 Baud
H5-08	Protocol Select	1: N2 ( <i>Metasys</i> )

### CAUTION

A YEA representative should set the drive parameters to their appropriate values. Changes made to the parameters other than what is listed in the table above can result in damaging the drive or building equipment.

## ◆ Programming the E7 Drive for *Metasys N2*

The procedure for programming the E7 drive for communication on an *Metasys N2* network is shown in the table below: Refer to the *E7 User Manual, TM.E7.01*, for detailed information on using the E7 Operator.

Description	Key Operation	Digital Operator Display
Apply Power to the drive		-DRIVE- Rdy Frequency Ref U1-01 = 0.00Hz ----- U1-02 = 0.00Hz U1-03 = 0.00A
<b>Select Programming Menu</b> Press the <b>MENU</b> key until the display matches the display to the right.	 x3	-ADV- ** Main Menu ** ----- Programming
<b>Enter Programming Menu</b> Press the <b>DATA ENTER</b> key to select the Programming Menu (A1 blinking)		-ADV- Initialization ----- A1-00 = 0 Select Language
<b>Select Sequence Parameters</b> Press the <b>UP ARROW</b> key until <i>Reference Source</i> is displayed (b1 blinking).  Note: The item selected will blink.	 x2	-ADV- Sequence ----- b1-01 = 2 Reference Source

Table 1.2 - Drive Programming Procedure for Metasys N2

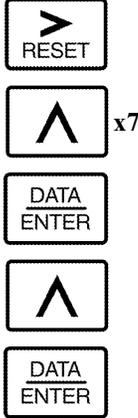
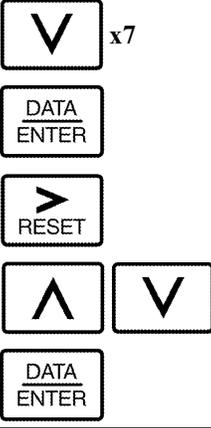
Description	Key Operation	Digital Operator Display
<p><b>Select Reference Command Source</b>                      Press <b>DATA ENTER</b> key to edit b1-01 (value blinking). Press the <b>UP ARROW</b> key to change the parameter value until the display matches the display shown on the right. Press the <b>DATA ENTER</b> key to accept the entry. "Entry Accepted" will be displayed if successful.</p> <p>Note: Since communications has not been established, a "CALL" alarm may be generated. Press the <b>STOP</b> key to clear the alarm. If communications has not been established within the timeout interval, the alarm will reoccur. Press the <b>STOP</b> key to clear the "CALL" alarm whenever it occurs.</p>		<p>-ADV-                      Reference Source                      -----                      b1-01 = 2 *2*                      Serial Com                      "1"</p>
<p><b>Select Run Command Source</b>                      Press the <b>UP ARROW</b> key until <b>Run Source</b> is displayed (02 blinking). Press <b>DATA ENTER</b> key to edit b1-02 (value blinking). Press the <b>UP ARROW</b> key to change the parameter value until the display matches the display shown on the right. Press the <b>DATA ENTER</b> key to accept the entry. "Entry Accepted" will be displayed if successful. If 02 is blinking, press the <b>RESET</b> key to go back to the b1 menu (b1 blinking).</p>		<p>-ADV-                      Run Source                      -----                      b1-02 = 2 *1*                      Serial Com                      "1"</p>
<p><b>Select Serial Communications Parameters</b>                      Press the <b>UP ARROW</b> key until Serial Com Setup is displayed (H5 blinking).</p>		<p>-ADV-                      Serial Com Setup                      -----                      H5-01 = 1F                      Serial Comm Adr</p>
<p><b>Select N2 (Metasys)</b>                      Press the <b>RESET</b> key to select an H5 parameter (01 blinking). Press the <b>UP ARROW</b> key until H5-08 is displayed (08 blinking). Press the <b>DATA ENTER</b> key to edit the H5-08 parameter (value blinking). Press the <b>UP ARROW</b> key to change the parameter value until the display matches the display shown on the right. Press the <b>DATA ENTER</b> key to accept the entry. "Entry Accepted" will be displayed if successful.</p> <p>Note: N2 (Metasys) must be selected prior to setting the node address.</p>		<p>-ADV-                      Protocol Select                      -----                      H5-08 = 1 *1*                      N2 (Metasys)                      "0"</p>

Table 1.2 - Drive Programming Procedure for Metasys N2

Description	Key Operation	Digital Operator Display
<p><b>Select Node Address</b>                      Press the <b>DOWN ARROW</b> key until parameter H5-01 is displayed (01 blinking). Press the <b>DATA ENTER</b> key to edit parameter H5-01 (value blinking). Press the <b>RESET</b> or <b>RIGHT ARROW</b> key to select the digit to edit. The selected digit will blink. Press the <b>UP ARROW</b> or <b>DOWN ARROW</b> keys to change the value of the selected digit until the correct value is displayed. Press the <b>DATA ENTER</b> key to accept the entry. Edit all digits prior to pressing the <b>DATA ENTER</b> key. "Entry Accepted" will be displayed if successful.</p>		<p style="text-align: center;">-ADV- Serial Comm Adr</p> <hr style="border-top: 1px dashed black;"/> <p style="text-align: center;">H5-01 = 1F* (0~255) "1F"</p> <p style="font-size: small;">*This is always entered as a hexadecimal value. Refer to the conversion chart in Appendix B for information on converting decimal values to their hexadecimal equivalents</p>
<p><b>Select Baud Rate of 4800 Baud</b>                      Press the <b>UP ARROW</b> key until parameter H5-02 is displayed (02 blinking). Press the <b>DATA ENTER</b> key to edit parameter H5-02 (value blinking). Press the <b>UP ARROW</b> key to change the parameter value until the display matches the display shown on the right. Press the <b>DATA ENTER</b> key to accept the entry. "Entry Accepted" will be displayed if successful.</p>		<p style="text-align: center;">-ADV- Serial Baud Rate</p> <hr style="border-top: 1px dashed black;"/> <p style="text-align: center;">H5-02 = 3 *3* 9600 Baud "3"</p>
<p style="text-align: center;"><b>Select The Drive Mode</b></p>		<p style="text-align: center;">-DRIVE- ** Main Menu **</p> <hr style="border-top: 1px dashed black;"/> <p style="text-align: center;">Operation</p>
<p style="text-align: center;"><b>Enter The Drive Mode</b></p>		<p style="text-align: center;">-DRIVE- Rdy Frequency Ref</p> <p style="text-align: center;">U1-01 = 0.00Hz</p> <hr style="border-top: 1px dashed black;"/> <p style="text-align: center;">U1-02 = 0.00Hz U1-03 = 0.00A</p>

This page intentionally left blank.

# Chapter 2 Network Connection

---

*This chapter discusses how to connect the E7 drive to a Metasys N2 network.*

**Physical Connection .....2 – 3**

This page intentionally left blank.

# Physical Connection

Communication on the network is half-duplex, two wire RS-485, with communication parameters fixed at 9600 baud, eight data bits, no parity and one stop bit. The network cable is a shielded two-conductor cable.

## ◆ Network Connection

- Connect a jumper between R+ and S+ and R- and S-.




Figure 2.1 – E7 Terminal Block Jumper Connections

- Connect the positive (+) cable lead to S+. Connect the negative (-) cable lead to S-.

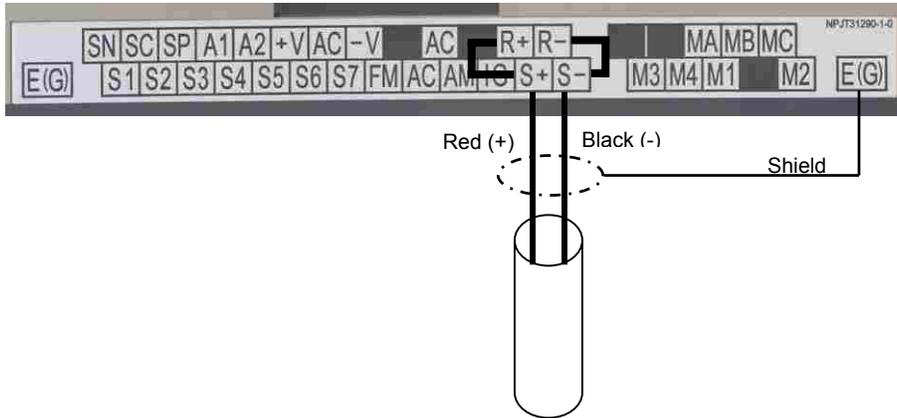


Figure 2.2 – Metasys N2 Network Cable Connections

## ◆ Network Termination

A bus-terminating resistor of  $110\Omega$  is available on each drive terminal board and can be applied to the *Metasys N2* communication bus by setting switch S1-1 to the ON position. In a multi-node system, only those nodes at the end of a bus segment should have terminating resistors. Before applying a terminating resistor as described above, care should be taken to understand the physical layout of the network and where other resistors might already be applied. An overloaded or improperly terminated bus may not function properly.

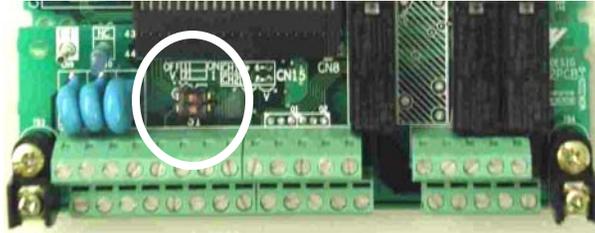


Figure 2.3 – Network Termination Resistor Setting

Table 2.1 - Terminating Resistor Switch Setting		
Switch Location	Function	Setting Choices
S1-1	RS-422 and RS-485 Terminating Resistance	OFF: No terminating resistance ON: Terminating resistance of $110\Omega$

# Chapter 3 E7 Drive Functions

---

*This chapter discusses the E7 drive functions and cable loss behavior.*

<b>E7 Drive Functions .....</b>	<b>3 – 3</b>
<b>Cable Loss Behavior .....</b>	<b>3 – 4</b>
<b>E7 Drive Fault Numbers .....</b>	<b>3 – 6</b>

This page intentionally left blank.

# E7 Drive Functions

Each of the following functions must be enabled during start-up of the Drive:

- Start and stop the drive

Set the RUN FORWARD COMMAND (BO 1) to run the drive in the forward direction. Set the RUN REVERSE COMMAND (BO 2) to run the drive in the reverse direction. RUN/STOP MONITOR (BI 1) shows the current run status of the drive. FORWARD/REVERSE MONITOR (BI 2) shows the current direction.



Improper drive direction may damage HVAC equipment if parameter b1-04, Reverse Enable, is improperly set (b1-04 = 0).

- Lock the E7 panel

Locking the panel prevents the user from using the HAND and OFF keys locally at the drive panel. PANEL LOCK (BO 10) can be commanded to lock and unlock the panel.

- Digital Inputs

MULTI-FUNCTION INPUT 1 (BO 5) through MULTI-FUNCTION INPUT 5 (BO 9) are physical digital inputs on the drive. They can be set either by external devices, such as limit or pressure switches, or by the network. Their function depends on how the drive has been programmed. Refer to the *E7 User's Manual* section on Multi-Function Inputs (H1-01 through H1-05) for detailed information on the use and programming of the multi-function inputs. The multi-function input status can be monitored through MULTI-FUNCTION INPUT 1 MONITOR (BI 14) through MULTI-FUNCTION INPUT 5 MONITOR (BI 19). The MULTI-FUNCTION INPUT # MONITOR state is the logical OR of the serial command value (BO 5 through BO 9) and the state of the external connection.



Because the multi-function inputs can be set by both external devices or over the network, care must be taken when connecting the multi-function inputs to external devices to ensure correct system operation.

- Digital Outputs

MULTI-FUNCTION OUTPUT 1 (BI 10) through MULTI-FUNCTION OUTPUT 3 (BI 12) are physical digital outputs on the drive. Their function depends on how the drive has been programmed. Refer to the *E7 User's Manual* section on Multi-Function Outputs (H2-01 through H2-03) for detailed information on the use and programming of the multi-function outputs.

- Loop gain

PI PROPORTIONAL GAIN (AO 4) and PI INTEGRAL TIME (AO 5) are the gain and integral time parameters used by the E7. The E7 PI loop is structured differently than the Metasys loop. Refer to the *E7 User's Manual* section on PID for information on how the E7 PI loop functions.

- Reading and resetting faults

FAULT MONITOR (BI 4) and DRIVE READY MONITOR (BI 3) show the current status of the drive. FAULT CODE (AI 10) contains the code for the most current fault. LST FLT CODE (AI 19) contains the code for the previous fault. See table below for descriptions of the fault codes. The drive fault can be reset through FAULT RESET COMMAND (BO 4). The FAULT RESET COMMAND is only available when the RUN FORWARD COMMAND and the RUN REVERSE COMMAND are both OFF.

# Cable Loss Configuration and Behavior

This section describes the configurable cable loss feature of the drive. This feature offers a user maximum flexibility in determining the drive's response to a loss of communication.

## ◆ Drive Behavior At Loss of Communication

- After some interval without receipt of a message, the drive can be configured to respond in one of the following manners:
  - Continue at last speed
  - Continue at last speed with Alarm
  - Continue at preset speed
  - Ramp to Stop with EF0 fault
  - Coast to Stop with EF0 fault
  - Emergency Stop with EF0 fault

## ◆ Metasys N2 I/O

Three Metasys N2 outputs are used to select the desired behavior:

- **AO 21** – Cable Loss Timeout
- **AO 22** – Cable Loss Speed
- **BO 11** – Communication Fault Enable

Table 5.1 - Cable Loss Behavior Summary

Behavior	H5-04	Cable Loss Timeout (AO 21)	Cable Loss Speed (AO 22)	Communication Fault Enable (BO 11)
Decelerate to stop (stop time in C1-02) <b>EF0 Fault</b>	0	Timeout Interval	X	On
Coast to stop <b>EF0 Fault</b>	1	Timeout Interval	X	On
Emergency stop (stop time in C1-09) <b>EF0 Fault</b>	2	Timeout Interval	X	On
Continue at last speed	3	0	X	X
Continue at last speed with Alarm	3	Timeout Interval	X	On
Continue at preset speed with Alarm	4	Timeout Interval	Preset Speed	On

Notes:

1. Communication must first be established and then lost for these features to function as described. If a drive is powered-up without a cable connected or with the master controller offline, a communications timeout does not occur.
2. For modes which describe the drive running after a communications timeout, a run command must have been issued (BO 1 = 'On' or BO 2 = 'On') prior to loss of communications. For safety purposes, the drive will not automatically restart from a stopped condition. If a user requires the drive to restart automatically, additional external wiring is required to accomplish this (consult factory).

Upon expiration of the communications timeout interval, the FAULT LED lights and remains lit until communication is restored.

### ■ Continue at Last Speed

In this mode, Cable Loss Timeout (AO 21) is set to **0**, disabling the cable loss feature. The other two settings Cable Loss Speed (AO 22) and Communication Fault Enable (BO 11) are ignored. If communication is lost, the drive simply maintains its last commanded state. The drive will not display an alarm or fault to indicate it has lost communication. This behavior can also be achieved by setting parameter H5-04 to "3". The drive will display an alarm and continue running. For this specific condition, the Communication Fault Enable (BO 11) must be enabled and Cable Loss Timeout (AO 21) should be set to something other than 0.

### ■ Continue at Preset Speed

In this mode, Cable Loss Timeout (AO 21) is set to the desired interval, Cable Loss Speed (AO 22) is set to the desired preset speed and H5-04 is set to "4". If the time between messages exceeds the timeout interval, the drive's speed command (AO 1) is set to the Cable Loss Speed (AO 22) and the drive continues running at this new speed. Communication Fault Enable (BO 11) must be set to 'On'.

■ Stop

Communication Fault Enable (BO 11) must be set to 'On'. In this mode, Cable Loss Timeout (AO 21) is set to the desired interval and parameter H5-04 is set to a value of 0, 1 or 2. If the time between messages exceeds the timeout interval, the drive's speed command (AO 1) is set to 0. The stopping method is determined by the setting of H5-04. An **EF0** drive fault will be set.

- H5-04 = 0 selects Ramp to Stop. The deceleration time or the slope of the ramp is determined by the setting of drive parameter C1-02.
- H5-04 = 1 selects Coast to Stop. The drive does not attempt to control the rate of deceleration.
- H5-04 = 2 selects Emergency or Fast Stop. The deceleration time is determined by the setting of drive parameter C1-09.

 **CAUTION**

The behavior of the drive at cable loss is controlled by parameter H5-04. This drive parameter works with the points as described in the table above to determine how the drive will respond to a cable loss. If the cable loss fault is disabled, the drive will continue in its last state, if running the drive will continue to run at the last commanded frequency.

■ Fault (EF0)

In this mode, Cable Loss Timeout (AO 21) is set to the desired interval and Communication Fault Enable (BO 11) is set to '**On**'. If the time between messages exceeds the timeout interval, an '**EF0**' fault is declared and the drive stops. The stopping method is controlled by the setting of H5-04 and is described above. Cable Loss Speed (AO 22) is ignored.

# E7 Drive Fault Numbers

Table 3.1 - Description of Fault Numbers	
Fault Number	Description
1	DC Bus Fuse Open (PUF)
2	DC Bus Under Voltage (UV1)
3	Control Power Supply Under Voltage (UV2)
4	MC Answerback (UV3)
5	Short Circuit Fault
6	Ground Fault (GF)
7	Over Current (OC)
8	DC Bus Over Voltage (OV)
9	Overheat Fault (OH)
10	Overheat 1 Fault (OH1)
11	Motor Overload (OL1)
12	Inverter Overload (OL2)
13	Over Torque Detection 1 (OL3)
14	Over Torque Detection 2 (OL4)
15	N/A
16	N/A
17	External Fault 3 (EF3)
18	External Fault 4 (EF4)
19	External Fault 5 (EF5)
20	External Fault 6 (EF6)
21	External Fault 7 (EF7)
22	External Fault 8 (EF8)
23	Drive Fan Fault
24	Over Speed Fault
25	N/A
26	N/A
27	N/A
28	Output Phase Loss (LF)
29	Overheat 3 (OH3)
30	Operator Connection Fault (OPR)
31	Err Fault
32	Overheat 4 Fault (OH4)
33	Memobus Com Error (CE)
34	N/A
35	N/A
36	N/A
37	N/A
38	N/A
39	External Fault 0 (EF0)
40	PID Feedback Loss
41	N/A
42	N/A
43	N/A

# Chapter 4 Metasys N2 Point Database

---

*This chapter shows the Metasys N2 point database. This database features 100 logical points: 38 Analog Inputs (AI), 32 Analog Outputs (AO), 19 Binary Inputs (BI) and 11 Binary Outputs (BO). These points configure, control or monitor the operation of the drive.*

<b>Metasys N2 Analog Input (AI) Summary .....</b>	<b>4 – 3</b>
<b>Metasys N2 Analog Output (AO) Summary .....</b>	<b>4 – 4</b>
<b>Metasys N2 Binary Input (BI) Summary.....</b>	<b>4 – 5</b>
<b>Metasys N2 Binary Output (BO) Summary .....</b>	<b>4 – 5</b>

This page intentionally left blank.

# Metasys N2 Analog Input (AI) Summary

Table 4.1 – Metasys N2 Analog Input Summary (E7 to Metasys N2)			
Object ID	Object Name	Units	E7 Parameter
AI 1	SPEED REFERENCE	0.01 Hz	U1-01
AI 2	OUTPUT SPEED	0.01 Hz	U1-02
AI 3	OUTPUT CURRENT	0.1 A	U1-03
AI 4	kWATT HOUR METER	kWh	-
AI 5	OUTPUT POWER	0.1kW	U1-08
AI 6	DRIVE TEMPERATURE	1°C	-
AI 7	PI FEEDBACK	0.01%	U1-24
AI 8	AC OUTPUT VOLTAGE	0.1Vac	U1-06
AI 9	DC BUS VOLTAGE	1Vdc	U1-07
AI 10	FAULT CODE	-	U2-01
AI 11	ELAPSED TIME - HOURS	1 HOUR	U1-13
AI 12	ELAPSED TIME – 10K HOURS	10K HOURS	U1-13
AI 13	MEGAWATT HOUR METER	MWh	U1-30
AI 14	DRIVE RATED CURRENT	A	n9-01
AI 15	COMMUNICATION ERROR CODE	-	U1-39
AI 16	PI DEVIATION	0.01%	U1-36
AI 17	PI OUTPUT CAPACITY	0.01%	U1-37
AI 18	PI REFERENCE	0.01%	U1-38
AI 19	LAST FAULT CODE	-	U2-02
AI 20	FREQ REF @ FAULT	0.01Hz	U2-03
AI 21	OUTPUT FREQ @ FAULT	0.01Hz	U2-04
AI 22	OUTPUT CURRENT @ FAULT	0.1A	U2-05
AI 23	OUT VOLT REF @ FAULT	0.1Vac	U2-07
AI 24	DC BUS VOLTS @ FAULT	1Vdc	U2-08
AI 25	OUTPUT POWER @ FAULT	0.1Kw	U2-09
AI 26	INPUT TERM STATUS @ FAULT	-	U2-11
AI 27	OUTPUT TERM STATUS @ FAULT	-	U2-12
AI 28	OPERATION STATUS @ FAULT	-	U2-13
AI 29	ELAPSED OPERATION TIME @ FAULT	1 HOUR	U2-14
AI 30	MOST RECENT FAULT	-	U3-01
AI 31	2 <sup>nd</sup> MOST RECENT FAULT	-	U3-02
AI 32	3 <sup>rd</sup> MOST RECENT FAULT	-	U3-03
AI 33	4 <sup>th</sup> MOST RECENT FAULT	-	U3-04
AI 34	ELAPSED TIME @ CURRENT FAULT	1 HOUR	U3-05
AI 35	ELAPSED TIME @ 2 <sup>nd</sup> FAULT	1 HOUR	U3-06
AI 36	ELAPSED TIME @ 3 <sup>rd</sup> FAULT	1 HOUR	U3-07
AI 37	ELAPSED TIME @ 4 <sup>th</sup> FAULT	1 HOUR	U3-08
AI 38	READ PARAMETER DATA	-	-

# Metasys N2 Analog Output (AO) Summary

Table 4.2 – Metasys N2 Analog Output Summary (Metasys N2 to E7)				
Object ID	Object Name	Units	Default Value	E7 Parameter
AO 1	SPEED COMMAND	0.01 Hz		-
AO 2	ACCELERATION TIME	SEC	30.0	C1-01
AO 3	DECELERATION TIME	SEC	30.0	C1-02
AO 4	PI PROPORTIONAL GAIN	-	2.00	b5-02
AO 5	PI INTEGRAL TIME	SEC	5.0	b5-03
AO 6	STALL PREVENTION LEVEL – RUN	%	120	L3-06
AO 7	STALL PREVENTION LEVEL – ACCEL	%	120	L3-02
AO 8	REFERENCE OPERATION MODE SELECT	-	1	b1-01
AO 9	RUN OPERATION MODE SELECT	-	1	b1-02
AO 10	PI MODE SELECT	-	0	b5-01
AO 11	FREQUENCY COMMAND UPPER LIMIT	% of MAX	100.0	d2-01
AO 12	FREQUENCY COMMAND LOWER LIMIT	% of MAX	0.0	d2-02
AO 13	MOTOR RATED CURRENT	A	Motor model dependent	E2-01
AO 14	JUMP FREQUENCY 1	0.1Hz	0.0	d3-01
AO 15	JUMP FREQUENCY 2	0.1Hz	0.0	d3-02
AO 16	JUMP FREQUENCY 3	0.1Hz	0.0	d3-03
AO 17	JUMP FREQUENCY BANDWIDTH	0.1Hz	1.0	d3-04
AO 18	NUMBER OF AUTO RESTARTS	-	0	L5-01
AO 19	OPERATOR DISPLAY MODE	-	0	o1-03
AO 20	POWER LOSS RIDE THROUGH	SEC	Drive model dependent	L2-02
AO 21	CABLE LOSS TIME-OUT	SEC	2.0	H5-09
AO 22	CABLE LOSS SPEED	0.01Hz	0.00	d1-04
AO 23	PI INTEGRAL LIMIT	0.1%	100.0	b5-04
AO 24	PI UPPER LIMIT VALUE	0.1	100.0	b5-06
AO 25	PI OFFSET ADJUSTMENT	0.1	0.0	b5-07
AO 26	PI PRIMARY DELAY TIME	0.01	0.00	b5-08
AO 27	PI FEEDBACK REFERENCE MISSING DETECTION SELECT	1	0	b5-12
AO 28	PI FEEDBACK REFERENCE MISSING DETECTION LEVEL	1%	0	b5-13
AO 29	PI FEEDBACK REFERENCE MISSING DETECTION TIME	0.1 SEC	1.0	b5-14
AO 30	READ PARAMETER NUMBER	-		-
AO 31	WRITE PARAMETER NUMBER	-		-
AO 32	WRITE PARAMETER DATA	-		-

# Metasys N2 Binary Input (BI) Summary

Table 4.3 – Metasys N2 Binary Input Summary (E7 to Metasys N2)				
Object ID	Object Name	Default	Off (0) State	On (1) State
BI 1	RUN / STOP MONITOR	0	STOPPED	RUNNING
BI 2	FORWARD / REVERSE MONITOR	0	FORWARD	REVERSE
BI 3	DRIVE READY MONITOR	0	NOT READY	READY
BI 4	FAULT MONITOR	0	NOT FAULTED	FAULTED
BI 5	ZERO SPEED	0	NOT ZERO SPEED	ZERO SPEED
BI 6	SPEED AGREE	0	NOT SPEED AGREE	SPEED AGREE
BI 7	MINOR FAULT	0	NO MINOR FAULT	MINOR FAULT
BI 8	MAJOR FAULT	0	NO MAJOR FAULT	MAJOR FAULT
BI 9	DRIVE COMMUNICATION ERROR MONITOR	0	NO ERROR	ERROR
BI 10	MULTI-FUNCTION OUTPUT 1 (H2-01)	0	-	-
BI 11	MULTI-FUNCTION OUTPUT 2 (H2-02)	0	-	-
BI 12	MULTI-FUNCTION OUTPUT 3 (H2-03)	0	-	-
BI 13	SAFETY INTERLOCK MONITOR	0	SAFETY CLEAR TERMINAL 3 CLOSED	SAFETY SET TERMINAL 3 OPEN
BI 14	HAND / AUTO REFERENCE MONITOR	0	REMOTE	LOCAL
BI 15	MULTI-FUNCTION INPUT 1 MONITOR	0	OFF	ON
BI 16	MULTI-FUNCTION INPUT 2 MONITOR	0	OFF	ON
BI 17	MULTI-FUNCTION INPUT 3 MONITOR	0	OFF	ON
BI 18	MULTI-FUNCTION INPUT 4 MONITOR	0	OFF	ON
BI 19	MULTI-FUNCTION INPUT 5 MONITOR	0	OFF	ON

# Metasys N2 Binary Output (BO) Summary

Table 4.4 – Metasys N2 Binary Output Summary (Metasys N2 to E7)				
Object ID	Object Name	Default	Off (0) State	On (1) State
BO 1	RUN FORWARD COMMAND	0	STOP	FORWARD
BO 2	RUN REVERSE COMMAND	0	STOP	REVERSE
BO 3	SERIAL FAULT (EF0) COMMAND	0	NO FAULT	FAULT
BO 4	FAULT RESET COMMAND	0	NO RESET	RESET
BO 5	MULTI-FUNCTION INPUT 1 (H1-01)	0	-	-
BO 6	MULTI-FUNCTION INPUT 2 (H1-02)	0	-	-
BO 7	MULTI-FUNCTION INPUT 3 (H1-03)	0	-	-
BO 8	MULTI-FUNCTION INPUT 4 (H1-04)	0	-	-
BO 9	MULTI-FUNCTION INPUT 5 (H1-05)	0	-	-
BO 10	PANEL LOCK	0	LOCAL/REMOTE AND STOP/RESET KEYS ENABLED	LOCAL/REMOTE AND STOP/RESET KEYS DISABLED
BO 11	COMMUNICATION FAULT ENABLE	0	EF0 NOT ACTIVATED IF CABLE LOSS OCCURS	EF0 ACTIVATED IF CABLE LOSS OCCURS

This page intentionally left blank.

# Chapter 5 Mailbox Function

---

*This chapter defines the Metasys N2 points that read and write E7 drive parameters.*

**Mailbox Function Points ..... 5 – 3**

This page intentionally left blank.

# Mailbox Function Points

## ◆ Reading a Drive Parameter

Two points are defined for reading any drive parameter:

- AO 30 Specifies the parameter to be read from the E7 drive
- AI 38 Reports the value of the parameter specified in AO 30

When this point is read, it retrieves data from the parameter and sends it to the controller

- Example:

Writing a value of 387 (183 hex) to AO 30 specifies drive parameter b1-04. Reading AI 38 returns the current setting of parameter b1-04 to the controller

---

## ◆ Writing to a Drive Parameter

Two points are defined for writing to any drive parameter:

- AO 31 Specifies the parameter to be written to
- AO 32 Entry location of the value to be written to the parameter specified in AO 31. When this point is written to, it will write the value to the drive. An ENTER or ACCEPT command does not need to be sent for the data to be taken by the drive. The behavior of the write is the same as with the digital operator. If the drive is running, there are a limited number of drive parameters that can be written to.
- Example:

Writing a value of 387 (183 hex) to AO 31 specifies drive parameter b1-04. Writing a value of 1 to AO 32 enables the drive for reverse run.

This page intentionally left blank.

# Chapter 6 E7 Bypass Applications

---

*This chapter lists the typical parameters for a bypass/engineered drive.*

**Bypass/Engineered Drive Parameter Settings..... 6 – 3**

This page intentionally left blank.

# Bypass/Engineered Drive Parameter Settings

For many applications, the drive is integrated into a *bypass* or *engineered* package. This type of package typically features an enclosure with contactors that allow the user to run the motor from line power (bypass mode) or from the drive (drive mode). This package also provides the flexibility for interfacing normally closed safety interlocks (fire status, freeze status, vibration sensors, etc.) which stop the drive if the contacts open.

## ◆ Typical Parameter Settings

A bypass/engineered drive is supplied with a list of parameters and their default values. Use the table below to record any parameter modifications for this particular application.

Table 7.1 - Typical Bypass/Engineered Drive Parameters

Parameter Number	Bypass Settings		Description
	Default	User	
E1-01			Input Voltage (VAC) – (default dependent on drive model)
E1-05			Maximum Output voltage (VAC) – (default dependent on drive mode)
E2-01			Motor Rated Current (FLA) (A) – (default dependent on drive model)
T1-02			Motor Rated Power (kW) – (default dependent on motor)
T1-04			Motor Rated Current (FLA) (A) – (default dependent on motor)
A1-01	2		Parameter Access Level (2 – Advanced)
b1-01			Frequency Reference Source (dependent on bypass options specified)
b1-02			Command Source (dependent on bypass options specified)
b1-03	0		Stopping Method (0 – Ramp to Stop) (ramp slope set by C1-02)
b1-04	1		Reverse Operation (1 – Disabled)
b1-07	1		Local/Remote RUN Selection (1 – Accept External RUN)
b1-08	1		RUN Command During Programming (1 – Enabled)
b1-12			HAND Mode Frequency Reference Selection (Operator Keypad)
b2-02	50%		DC Injection Braking Current (50%)
b2-03	5.0 sec		DC Injection Braking Current @ Start (5.0sec)
b2-09	0.0A		Motor Preheat Current
b3-01	1		Speed Search Select (1 – Enabled (Speed Estimated))
b8-01	1		Energy Conservation Control Select (1 – Enabled)
C1-01	60.0 sec		Acceleration Time
C1-02	60.0 sec		Deceleration Time
d1-01	10.0 Hz		Frequency Reference 1 (HAND Mode) (see H1-03)
d1-02	20.0 Hz		Frequency Reference 2 (HAND Mode) (see H1-03)
E1-01			Input Voltage– (default dependent on drive model)
E1-03	7		V/F Pattern Select
E1-05			Output Voltage– Parameter defaults dependent on drive model
F6-01	3		Operation After Communication Loss (3 – Alarm Only)
H1-01	70 hex		Terminal S3 Function (Bypass Drv Enbl)
H1-02	6 hex		Terminal S4 Function (Local /Remote Select)
H1-03	6C hex		Terminal S5 Function (Frequency Reference 2 (N.O.))
H1-04	20 hex		Terminal S6 Function (External Fault (N.O.))



# Appendix A Troubleshooting

---

*This appendix describes the steps necessary to troubleshoot the E7 drive communicating on a Metasys N2 network.*

<b>Troubleshooting Check List .....</b>	<b>A - 3</b>
<b>Installing and Configuring Metasys N2.....</b>	<b>A - 5</b>
<b>Wiring And Cabling .....</b>	<b>A - 7</b>
<b>Drive Faults .....</b>	<b>A - 8</b>

This page intentionally left blank.

# Troubleshooting Check List

- 1: Connect power to the drive and verify that the drive operates correctly in HAND mode from the digital operator without being connected to the network. Record the drive model number and "spec" number at this time:

Model Number: CIMR-E7U \_\_\_ \_\_\_ \_\_\_ \_\_\_ (e.g. CIMR-E7U20P4)

"SPEC" Number: \_\_\_ \_\_\_ \_\_\_ \_\_\_ \_\_\_ \_\_\_ (e.g. 20P41A)

- 2: Record the control board part number:

ETC - \_\_\_ \_\_\_ \_\_\_ \_\_\_ \_\_\_ \_\_\_ - \_\_\_ \_\_\_ \_\_\_ \_\_\_ \_\_\_ \_\_\_ (e.g. ETC-618021-S2012)

- 3: All network devices have unique addresses and drives are addressed between 0-255 (0-FF hex).

Drive address: \_\_\_\_\_

- 4: The Run/Stop command source parameter, b1-02 is set correctly.

b1-02: \_\_\_\_\_

- 5: The Speed Command source parameter, b1-01, is set correctly.

b1-01: \_\_\_\_\_

- 6: The correct cable type is used: Mfg: \_\_\_\_\_ P/N: \_\_\_\_\_

- 7: All cable connections are correct per device schematic and are secure.

- 8: All cables have been checked for continuity. There are no breaks or shorts.

- 9: The network is correctly terminated.

- 10: The shield is continuous throughout the network and is properly grounded on each end.

- 11: The network cable is routed away from any high voltage cable(s) or source(s).

- 12: All network devices have been tested for conformance with the *Metasys N2* specification.

This page intentionally left blank.

# Installing and Configuring Metasys N2

The following is a short guide to troubleshooting the *Metasys N2* installation and configuration. It highlights some of the most common issues faced when diagnosing and correcting issues associated with the startup and operation of an E7 drive with *Metasys N2* building automation network. While most of the information is centered on the application of the drive, the guidelines presented are applicable in most *Metasys N2* networks.

Diagnosis of network fault issues will typically fall into three categories: 1: Installation/set-up of *Metasys N2*, 2: wiring and cabling issues, and 3: network configuration/diagnostics. Each of these areas will be discussed after to help resolve common problems associated in *Metasys N2* network troubleshooting.

## ◆ Drive Operates Correctly Without Network Enabled

Before programming the drive for *Metasys N2* communication, **verify that the drive functions properly**. Refer to the *E7 User Manual* (TM.E7.01) for information on the drive’s installation and operation.

## ◆ Network Cable Is Connected Correctly And Securely

- Connect a jumper between R+ and S+ as well as R- and S-. Connect network cable to terminals S+ and S-.

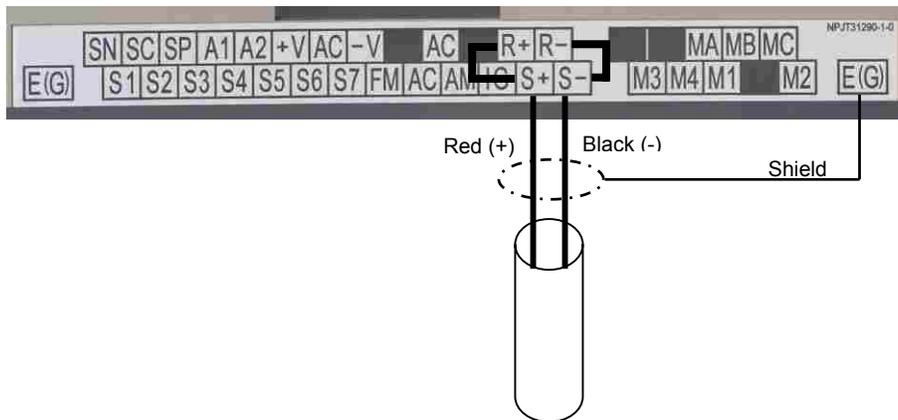


Figure A.1 – E7 Metasys N2 Network Connections

## ◆ Run/Stop Operation Parameter Is Set Correctly

The run/stop operation parameter needs to be set for “Serial Com”.

Parameter Number	Setting Choices	Setting Descriptions
b1-02	0	Operator
	1	Terminals
	2	<b>Serial Com (Metasys N2)</b>
	3	Option PCB

## ◆ Speed Command Operation Parameter Is Set Correctly

The speed command operation parameter needs to be set for “Serial Com”.

Table A.2 - Speed Command Operation Parameter		
Parameter Number	Setting Choices	Setting Descriptions
b1-01	0	Operator
	1	Terminals
	2	<b>Serial Com (Metasys N2)</b>
	3	Option PCB

---

## ◆ Correct and Unique Network Address

Each device on a *Metasys N2* network requires its own unique address. The drive also needs to be programmed to accept the *Metasys N2* protocol.

Table A.3 - Serial Communication Device Address Parameter		
Parameter Number	Setting Range	Setting Description
H5-01	0 to FFh (0 to 255 dec)x	Serial communication device address
H5-08	0 to 2	<b>1: N2 (Metasys)</b>

# Wiring And Cabling

## ◆ The network cable is the correct type

Table A.4 - Metasys N2 Cable Specifications	
Specification	Description
Cable Configuration	Twisted Shielded Pair
Gauge	18-20 AWG (Solid or Stranded)
Wire Lay	Minimum 6 twists per foot
Shields	100% foil with drain wire
NEC Type	UL Type CMP
Temperature	60°C or higher

## ◆ Cable Lengths Are Within Specified Limits

Cable lengths cannot exceed 500 feet at 9600 baud.

## ◆ The Network is Terminated Correctly

A bus terminating resistor of 110Ω is available on each drive terminal board and can be applied to the *Metasys N2* communication bus by setting switch S1-1 to the ON position.

In a multi-node system, only those nodes at the end of a bus segment should have terminating resistors. Before applying a terminating resistor as described above, care should be taken to understand the physical layout of the network and where other resistors might already be applied. An overloaded or improperly terminated bus may not function properly.

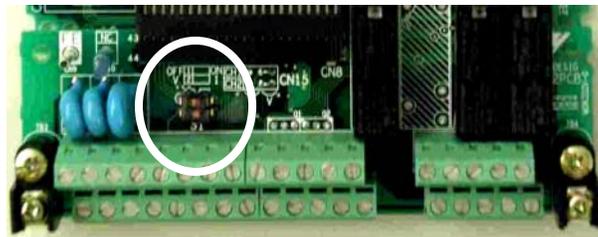


Figure A.2 – Termination Resistor Setting

Table A.5 - Terminating Resistor Switch Setting		
Switch Location	Function	Setting Choices
S1-1	RS-422 and RS-485 Terminating Resistance	OFF: No terminating resistance ON: Terminating resistance of 110Ω

## ◆ Shield Is Continuous And Both Ends Of The Shield Are Grounded

As each drive is daisy-chained to the next, twist together the shields of the adjoining cables. Do not connect the shield at each drive. The continuous shield should then be single-point grounded at the field panel.

## ◆ Cable Is Routed Correctly

Route the cable away from all power and high frequency lines. Routing within a separate conduit is preferred.

# Drive Faults

## ◆ Communications Fault

Table A.6 - Drive Faults			
Fault	Description	Cause	Corrective Action
CE	Modbus Communication Error	Connection is broken or master has stopped communicating	Check all connections Verify all Metasys N2 software configurations

## ◆ E7 Drive Faults

Table A.7 - Description of Fault Numbers	
Fault Number	Description
1	DC Bus Fuse Open (PUF)
2	DC Bus Under Voltage (UV1)
3	Control Power Supply Under Voltage (UV2)
4	MC Answerback (UV3)
5	Short Circuit Fault
6	Ground Fault (GF)
7	Over Current (OC)
8	DC Bus Over Voltage (OV)
9	Overheat Fault (OH)
10	Overheat 1 Fault (OH1)
11	Motor Overload (OL1)
12	Inverter Overload (OL2)
13	Over Torque Detection 1 (OL3)
14	Over Torque Detection 2 (OL4)
15	N/A
16	N/A
17	External Fault 3 (EF3)
18	External Fault 4 (EF4)
19	External Fault 5 (EF5)
20	External Fault 6 (EF6)
21	External Fault 7 (EF7)
22	External Fault 8 (EF8)
23	Drive Fan Fault
24	Over Speed Fault
25	N/A
26	N/A
27	N/A
28	Output Phase Loss (LF)
29	Overheat 3 (OH3)
30	Operator Connection Fault (OPR)
31	Err Fault
32	Overheat 4 Fault (OH4)
33	Modbus Com Error (CE)
34	N/A
35	N/A
36	N/A
37	N/A
38	N/A
39	External Fault 0 (EF0)
40	PID Feedback Loss
41	N/A
42	N/A
43	N/A

# Appendix B Hex/Dec Conversion

---

*This appendix describes the decimal to hexadecimal conversion.*

**Hex/Dec Conversion Table ..... B - 3**

This page intentionally left blank.

# Hex/Dec Conversion Table

Table B.1 – Hex/Dec Conversions													
Hex	Dec		Hex	Dec		Hex	Dec		Hex	Dec		Hex	Dec
0	0		34	52		68	104		9C	156		D0	208
1	1		35	53		69	105		9D	157		D1	209
2	2		36	54		6A	106		9E	158		D2	210
3	3		37	55		6B	107		9F	159		D3	211
4	4		38	56		6C	108		A0	160		D4	212
5	5		39	57		6D	109		A1	161		D5	213
6	6		3A	58		6E	110		A2	162		D6	214
7	7		3B	59		6F	111		A3	163		D7	215
8	8		3C	60		70	112		A4	164		D8	216
9	9		3D	61		71	113		A5	165		D9	217
A	10		3E	62		72	114		A6	166		DA	218
B	11		3F	63		73	115		A7	167		DB	219
C	12		40	64		74	116		A8	168		DC	220
D	13		41	65		75	117		A9	169		DD	221
E	14		42	66		76	118		AA	170		DE	222
F	15		43	67		77	119		AB	171		DF	223
10	16		44	68		78	120		AC	172		E0	224
11	17		45	69		79	121		AD	173		E1	225
12	18		46	70		7A	122		AE	174		E2	226
13	19		47	71		7B	123		AF	175		E3	227
14	20		48	72		7C	124		B0	176		E4	228
15	21		49	73		7D	125		B1	177		E5	229
16	22		4A	74		7E	126		B2	178		E6	230
17	23		4B	75		7F	127		B3	179		E7	231
18	24		4C	76		80	128		B4	180		E8	232
19	25		4D	77		81	129		B5	181		E9	233
1A	26		4E	78		82	130		B6	182		EA	234
1B	27		4F	79		83	131		B7	183		EB	235
1C	28		50	80		84	132		B8	184		EC	236
1D	29		51	81		85	133		B9	185		ED	237
1E	30		52	82		86	134		BA	186		EE	238
1F	31		53	83		87	135		BB	187		EF	239
20	32		54	84		88	136		BC	188		F0	240
21	33		55	85		89	137		BD	189		F1	241
22	34		56	86		8A	138		BE	190		F2	242
23	35		57	87		8B	139		BF	191		F3	243
24	36		58	88		8C	140		C0	192		F4	244
25	37		59	89		8D	141		C1	193		F5	245
26	38		5A	90		8E	142		C2	194		F6	246
27	39		5B	91		8F	143		C3	195		F7	247
28	40		5C	92		90	144		C4	196		F8	248
29	41		5D	93		91	145		C5	197		F9	249
2A	42		5E	94		92	146		C6	198		FA	250
2B	43		5F	95		93	147		C7	199		FB	251
2C	44		60	96		94	148		C8	200		FC	252
2D	45		61	97		95	149		C9	201		FD	253
2E	46		62	98		96	150		CA	202		FE	254
2F	47		63	99		97	151		CB	203		FF	255
30	48		64	100		98	152		CC	204		100	256
31	49		65	101		99	153		CD	205			
32	50		66	102		9A	154		CE	206			
33	51		67	103		9B	155		CF	207			



**YASKAWA ELECTRIC AMERICA, INC.**

Drives Division  
16555 W. Ryerson Rd., New Berlin, WI 53151, U.S.A.  
Phone: (800) YASKAWA (800-927-5292) Fax: (262) 782-3418  
Internet: <http://www.drives.com>

**YASKAWA ELECTRIC AMERICA, INC.**

Chicago-Corporate Headquarters  
2121 Norman Drive South, Waukegan, IL 60085, U.S.A.  
Phone: (800) YASKAWA (800-927-5292) Fax: (847) 887-7310  
Internet: <http://www.yaskawa.com>

**MOTOMAN INC.**

805 Liberty Lane, West Carrollton, OH 45449, U.S.A.  
Phone: (937) 847-6200 Fax: (937) 847-6277  
Internet: <http://www.motoman.com>

**YASKAWA ELECTRIC CORPORATION**

New Pier Takeshiba South Tower, 1-16-1, Kaigan, Minatoku, Tokyo, 105-0022, Japan  
Phone: 81-3-5402-4511 Fax: 81-3-5402-4580  
Internet: <http://www.yaskawa.co.jp>

**YASKAWA ELETRICO DO BRASIL COMERCIO LTDA.**

Avenida Fagundes Filho, 620 Bairro Saude Sao Paulo-SP, Brasil CEP: 04304-000  
Phone: 55-11-5071-2552 Fax: 55-11-5581-8795  
Internet: <http://www.yaskawa.com.br>

**YASKAWA ELECTRIC EUROPE GmbH**

Am Kronberger Hang 2, 65824 Schwalbach, Germany  
Phone: 49-6196-569-300 Fax: 49-6196-888-301

**MOTOMAN ROBOTICS AB**

Box 504 S38525, Torsas, Sweden  
Phone: 46-486-48800 Fax: 46-486-41410

**MOTOMAN ROBOTEC GmbH**

Kammerfeldstrabe 1, 85391 Allershausen, Germany  
Phone: 49-8166-900 Fax: 49-8166-9039

**YASKAWA ELECTRIC UK LTD.**

1 Hunt Hill Orchardton Woods Cumbernauld, G68 9LF, Scotland, United Kingdom  
Phone: 44-12-3673-5000 Fax: 44-12-3645-8182

**YASKAWA ELECTRIC KOREA CORPORATION**

Paik Nam Bldg. 901 188-3, 1-Ga Euljiro, Joong-Gu, Seoul, Korea  
Phone: 82-2-776-7844 Fax: 82-2-753-2639

**YASKAWA ELECTRIC (SINGAPORE) PTE. LTD.**

Head Office: 151 Lorong Chuan, #04-01, New Tech Park Singapore 556741, Singapore  
Phone: 65-282-3003 Fax: 65-289-3003

**TAIPEI OFFICE (AND YATEC ENGINEERING CORPORATION)**

10F 146 Sung Chiang Road, Taipei, Taiwan  
Phone: 886-2-2563-0010 Fax: 886-2-2567-4677

**YASKAWA JASON (HK) COMPANY LIMITED**

Rm. 2909-10, Hong Kong Plaza, 186-191 Connaught Road West, Hong Kong  
Phone: 852-2803-2385 Fax: 852-2547-5773

**BEIJING OFFICE**

Room No. 301 Office Building of Beijing International Club,  
21 Jianguomanwai Avenue, Beijing 100020, China  
Phone: 86-10-6532-1850 Fax: 86-10-6532-1851

**SHANGHAI OFFICE**

27 Hui He Road Shanghai 200437 China  
Phone: 86-21-6553-6600 Fax: 86-21-6531-4242

**SHANGHAI YASKAWA-TONJI M & E CO., LTD.**

27 Hui He Road Shanghai 200437 China  
Phone: 86-21-6533-2828 Fax: 86-21-6553-6677

**BEIJING YASKAWA BEIKE AUTOMATION ENGINEERING CO., LTD.**

30 Xue Yuan Road, Haidian, Beijing 100083 China  
Phone: 86-10-6232-9943 Fax: 86-10-6234-5002

**SHOUGANG MOTOMAN ROBOT CO., LTD.**

7, Yongchang-North Street, Beijing Economic & Technological Development Area,  
Beijing 100076 China  
Phone: 86-10-6788-0551 Fax: 86-10-6788-2878

**YEA, TAICHUNG OFFICE IN TAIWAN**

b1, 6F, No.51, Section 2, Kung-Yi Road, Taichung City, Taiwan, R.O.C.  
Phone: 886-4-2320-2227 Fax: 886-4-2320-2239