

# YASKAWA

# FP605 DRIVE

## MAINTENANCE & TROUBLESHOOTING

### AC DRIVE FOR INDUSTRIAL FAN AND PUMP APPLICATIONS

#### CATALOG CODE:

FP65Uxxxxxxx

#### CAPACITIES:

208 V class: 2.2 to 110 kW (3 to 150 HP)

480 V class: 2.2 to 450 kW (3 to 600 HP)

PDF

[yaskawa.com/TOEPIAIFP6501](http://yaskawa.com/TOEPIAIFP6501)



Simplify Drive Installation  
Get DriveWizard® Mobile



<https://www.yaskawa.com/dwm>

DOCUMENT NUMBER: TOEPIAIFP6501

---

**This Page Intentionally Blank**

# Table of Contents

i.	Preface and General Precautions .....	9
i.1	Receiving .....	10
	Glossary .....	10
	About Registered Trademarks .....	10
i.2	Using the Product Safely .....	11
	Explanation of Signal Words .....	11
	General Safety .....	11
	Warning Label Content and Location .....	13
	Cybersecurity .....	15
i.3	Warranty Information .....	16
	Exclusion of Liability .....	16
1.	Periodic Inspection and Maintenance .....	17
1.1	Section Safety .....	18
1.2	Inspection .....	20
	Recommended Daily Inspection .....	20
	Recommended Periodic Inspection .....	20
1.3	Maintenance .....	23
1.4	Replace Cooling Fans and Circulation Fans .....	25
	Cooling Fans and Circulation Fans by Drive Model .....	25
	Fan Replacement (Procedure A) .....	26
	Fan Replacement (Procedure B) .....	31
	Fan Replacement (Procedure C) .....	37
	Fan Replacement (Procedure D) .....	42
	Fan Replacement (Procedure E) .....	45
	Fan Replacement (Procedure F) .....	47
	Fan Replacement (Procedure G) .....	54
	Fan Replacement (Procedure H) .....	62
1.5	Replace the Keypad Battery .....	71
1.6	Storage Guidelines .....	73
2.	Troubleshooting .....	75
2.1	Section Safety .....	76
2.2	Types of Faults, Minor Faults, Alarms, and Errors .....	78
2.3	List of Fault, Minor Fault, Alarm, and Error Codes .....	79
2.4	Fault .....	86
2.5	Minor Faults/Alarms .....	111
2.6	Parameter Setting Errors .....	124

2.7	Auto-Tuning Errors .....	129
2.8	Backup Function Operating Mode Display and Errors .....	132
2.9	Diagnosing and Resetting Faults .....	134
	Fault and Power Loss Occur at the Same Time .....	134
	Fault Occurs Without Power Loss .....	134
	Fault Reset .....	134
2.10	Troubleshooting Without Fault Display .....	136
	Typical Problems .....	136
	The Parameter Settings Will Not Change .....	136
	The Motor Does Not Rotate After Entering Run Command .....	137
	The Motor Rotates in the Opposite Direction from the Run Command .....	138
	The Motor Rotates in Only One Direction .....	138
	The Motor Is Too Hot .....	138
	oPE02 Error Occurs When Decreasing the Motor Rated Current Setting .....	139
	The Correct Auto-Tuning Mode Is Not Available .....	139
	The Motor Stalls during Acceleration or Accel/Decel Time Is Too Long .....	139
	The Drive Frequency Reference Is Different than the Controller Frequency Reference Command .....	140
	The Motor Speed Is Not Stable When Using a PM Motor .....	140
	There Is Too Much Motor Oscillation and the Rotation Is Irregular .....	140
	There Is Audible Noise from the Drive or Motor Cables when You Energize the Drive .....	140
	The Ground Fault Circuit Interrupter (GFCI) Trips During Run .....	141
	Motor Rotation Causes Unexpected Audible Noise from Connected Machinery .....	141
	Motor Rotation Causes Oscillation or Hunting .....	141
	PID Output Fault .....	141
	The Starting Torque Is Not Sufficient .....	141
	The Motor Rotates after the Drive Output Is Shut Off .....	142
	The Output Frequency Is Lower Than the Frequency Reference .....	142
	The Motor Is Making an Audible Noise .....	142
	The Motor Will Not Restart after a Loss of Power .....	142
3.	Parameter List .....	143
3.1	Section Safety .....	144
3.2	How to Read the Parameter List .....	145
	Icons and Terms that Identify Parameters and Control Methods .....	145
3.3	Parameter Groups .....	146
3.4	A: Initialization Parameters .....	148
	A1: Initialization .....	148
	A2: User Parameters .....	149
3.5	b: Application .....	152
	b1: Operation Mode Selection .....	152
	b2: DC Injection Braking and Short Circuit Braking .....	153
	b3: Speed Search .....	154
	b4: Timer Function .....	156
	b5: PID Control .....	156
	b6: Dwell Function .....	160
	b8: Energy Saving .....	160
3.6	C: Tuning .....	162
	C1: Accel & Decel Time .....	162
	C2: S-Curve Characteristics .....	163
	C3: Slip Compensation .....	163
	C4: Torque Compensation .....	164
	C5: Auto Speed Regulator (ASR) .....	164

	C6: Carrier Frequency .....	165
3.7	d: Reference Settings .....	166
	d1: Frequency Reference .....	166
	d2: Reference Limits .....	167
	d3: Jump Frequency .....	167
	d4: Frequency Ref Up/Down & Hold .....	167
	d6: Field Weakening .....	168
	d7: Offset Frequency .....	168
3.8	E: Motor Parameters .....	169
	E1: V/f Pattern for Motor 1 .....	169
	E2: Motor Parameters .....	170
	E3: V/f Pattern for Motor 2 .....	170
	E4: Motor 2 Parameters .....	171
	E5: PM Motor Settings .....	171
	E9: Motor Setting .....	172
3.9	F: Options .....	173
	F2: Analog Input Option .....	173
	F3: Digital Input Option .....	174
	F4: Analog Monitor Option .....	176
	F5: Digital Output Option .....	176
	F6: Communication Options .....	177
	F7: Ethernet Options .....	180
3.10	H: Terminal Functions .....	185
	H1: Digital Inputs .....	185
	H2: Digital Outputs .....	193
	H3: Analog Inputs .....	204
	H4: Analog Outputs .....	207
	H5: Modbus Communication .....	208
	H6: Pulse Train Input .....	210
	H7: Virtual Inputs / Outputs .....	210
3.11	L: Protection Functions .....	213
	L1: Motor Protection .....	213
	L2: Power Loss Ride Through .....	214
	L3: Stall Prevention .....	215
	L4: Speed Detection .....	216
	L5: Fault Restart .....	216
	L6: Torque Detection .....	218
	L7: Torque Limit .....	219
	L8: Drive Protection .....	219
	L9: Drive Protection 2 .....	221
3.12	n: Special Adjustment .....	222
	n1: Hunting Prevention .....	222
	n3: High Slip/Overexcite Braking .....	222
	n7: EZ Drive .....	223
	n8: PM Motor Control Tuning .....	223
3.13	o: Keypad-Related Settings .....	227
	o1: Keypad Display .....	227
	o2: Keypad Operation .....	230
	o3: Copy Keypad Function .....	231
	o4: Maintenance Monitors .....	232
	o5: Log Function .....	233
3.14	S: Special Applications .....	234
	S1: Dynamic Noise Control .....	234

	S3: PI2 Control .....	234
	S6: Protection .....	236
3.15	T: Motor Tuning .....	240
	T0: Tuning Mode Selection .....	240
	T1: Induction Motor Auto-Tuning .....	240
	T2: PM Motor Auto-Tuning .....	240
	T4: EZ Tuning .....	241
3.16	U: Monitors .....	243
	U1: Operation Status Monitors .....	243
	U2: Fault Trace .....	245
	U3: Fault History .....	247
	U4: Maintenance Monitors .....	250
	U5: PID Monitors .....	254
	U6: Operation Status Monitors .....	256
	UA: Multiplex .....	257
3.17	Y: Application Features .....	258
	Y1: Application Basics .....	258
	Y2: PID Sleep and Protection .....	260
	Y3: Contactor Multiplex .....	261
	Y4: Application Advanced .....	264
	Y8: De-Scale/De-Rag .....	266
	YA: Preset Setpoint .....	267
	YC: Foldback Features .....	267
	YF: PI Auxiliary Control .....	268
3.18	Parameters that Change from the Default Settings with A1-02 [Control Method Selection] .....	272
3.19	Parameters Changed by E1-03 [V/f Pattern Selection] .....	275
3.20	Defaults by o2-04 [Drive Model (kVA) Selection] .....	278
	208 V Class .....	278
	480 V Class .....	281
4.	Mechanical & Electrical Installation .....	287
4.1	Section Safety .....	288
4.2	Removing/Reattaching Covers .....	290
	Removing/Reattaching the Cover Using Procedure A .....	290
	Removing/Reattaching the Cover Using Procedure B .....	291
	Removing/Reattaching the Cover Using Procedure C .....	294
4.3	Electrical Installation .....	298
	Standard Connection Diagram .....	298
4.4	Main Circuit Wiring .....	303
	Motor and Main Circuit Connections .....	303
	Configuration of Main Circuit Terminal Block .....	306
	Main Circuit Terminal Functions .....	314
	Wire Selection .....	314
	Main Circuit Terminal and Motor Wiring .....	325
	Protection of Main Circuit Terminals .....	327
4.5	Control Circuit Wiring .....	328
	Control Circuit Connection Diagram .....	328
	Control Circuit Terminal Block Functions .....	329
	Control Circuit Terminal Configuration .....	333
	Wiring the Control Circuit Terminal .....	336
	Switches and Jumpers on the Terminal Board .....	338

4.6	Control I/O Connections . . . . .	340
	Set Sinking Mode/Sourcing Mode . . . . .	340
	Set Input Signals for MFAI Terminals A1 to A3 . . . . .	340
	Set Output Signals for MFAO Terminals FM, AM . . . . .	341
	Switch ON Termination Resistor for MEMOBUS/Modbus Communications . . . . .	341
4.7	Connect the Drive to a PC . . . . .	343
4.8	External Interlock . . . . .	344
	Drive Ready . . . . .	344
5.	Startup Procedure and Test Run . . . . .	345
5.1	Section Safety . . . . .	346
5.2	Drive Main Switch . . . . .	347
	Use and Lock the Main Switch . . . . .	347
5.3	Keypad: Names and Functions . . . . .	349
	LCD Display . . . . .	351
	Indicator LEDs and Drive Status . . . . .	352
	Keypad Mode and Menu Displays . . . . .	353
5.4	LED Status Ring . . . . .	355
5.5	Start-up Procedures . . . . .	357
	Flowchart A: Connect and Run the Motor with Minimum Setting Changes . . . . .	357
	Sub-Chart A-1: Induction Motor Auto-Tuning and Test Run Procedure . . . . .	358
	Sub-Chart A-2: PM Motor Auto-Tuning and Test Run Procedure . . . . .	358
	Subchart A-3: EZ Open Loop Vector Control Test Run Procedure . . . . .	359
5.6	Items to Check before Starting Up the Drive . . . . .	361
	Check before Energizing the Drive . . . . .	361
	Check after Energizing the Drive . . . . .	361
	Make the Initial Settings . . . . .	362
5.7	Keypad Operation . . . . .	363
	Home Screen Display Selection . . . . .	363
	Show the Monitor . . . . .	364
	Set Custom Monitors . . . . .	365
	Show Custom Monitors . . . . .	366
	Set the Monitors to Show as a Bar Graph . . . . .	367
	Show Monitors as Bar Graphs . . . . .	368
	Set the Monitors to Show as Analog Gauges . . . . .	369
	Show Monitors as an Analog Gauge . . . . .	370
	Set Monitor Items to Show as a Trend Plot . . . . .	370
	Show Monitor Items as a Trend Plot . . . . .	374
	Change Parameter Setting Values . . . . .	375
	Examine User Custom Parameters . . . . .	376
	Save a Backup of Parameters . . . . .	378
	Write Backed-up Parameters to the Drive . . . . .	379
	Verify Keypad Parameters and Drive Parameters . . . . .	380
	Delete Parameters Backed Up to the Keypad . . . . .	381
	Check Modified Parameters . . . . .	382
	Restore Modified Parameters to Defaults . . . . .	384
	Show Fault History . . . . .	385
	Auto-Tuning the Drive . . . . .	386
	Set the Keypad Language Display . . . . .	388
	Set the Date and Time . . . . .	389
	Disable the Initial Setup Screen . . . . .	391
	Start Data Logging . . . . .	392
	Configuring the Data Log Content . . . . .	393

	Set Backlight to Automatically Turn OFF .....	395
	Show Information about the Drive .....	397
	Write Automatically Backed-up Parameters to the Drive .....	398
5.8	Automatic Parameter Settings Optimized for Specific Applications (Application Presets) .....	399
5.9	Auto-Tuning .....	401
	Auto-Tuning for Induction Motors .....	401
	Auto-Tuning for Motor Parameters for PM Motor .....	401
	Auto-Tuning in EZ Open Loop Vector Control Method .....	403
	Precautions before Auto-Tuning .....	404
5.10	Test Run .....	406
	No-Load Test Run .....	406
	Do a No-Load Test Run .....	406
	Actual-Load Test Run .....	406
	Do an Actual-Load Test Run .....	407
5.11	Fine Tuning during Test Runs (Adjust the Control Function) .....	408
	V/f Control .....	408
	Open Loop Vector Control for PM Motors .....	409
	EZ Open Loop Vector Control Method .....	410
5.12	Test Run Checklist .....	411
6.	Specifications .....	413
6.1	Section Safety .....	414
6.2	Model Specifications (208 V Class) .....	415
6.3	Model Specifications (480 V Class) .....	416
6.4	Common Drive Specifications .....	418
6.5	Drive Watt Loss .....	421
6.6	Drive Derating .....	423
	Carrier Frequency Settings and Rated Current Values .....	423
	Derating Depending on Ambient Temperature .....	424
	Altitude Derating .....	426
6.7	Drive Exterior and Mounting Dimensions .....	428
	Drive Models and Exterior/Mounting Dimensions .....	428
	IP20/UL Open Type .....	429
	IP20/UL Type1 .....	432
	IP55/UL Type 12 .....	438
	IP55/UL Type 12 with Main Switch .....	443
6.8	Knock-Out Hole Dimensions .....	449
	Drive Models and Knock-Out Hole Dimensions .....	449
	IP20/UL Type1 .....	450
	IP55/UL Type 12 .....	453
	IP55/UL Type 12 with Main Switch .....	455
6.9	Peripheral Devices and Options .....	458
	Index .....	459
	Revision History .....	464

# Preface and General Precautions

---

This chapter gives information about important safety precautions for the use of this product. Failure to obey these precautions can cause serious injury or death, or damage to the product or related devices and systems. Yaskawa must not be held responsible for any injury or equipment damage as a result of the failure to observe these precautions and instructions.

<b>i.1</b>	<b>Receiving</b> .....	<b>10</b>
<b>i.2</b>	<b>Using the Product Safely</b> .....	<b>11</b>
<b>i.3</b>	<b>Warranty Information</b> .....	<b>16</b>

## i.1 Receiving

These instructions contain the information necessary to use the product correctly. Read and understand the safety information and precautions before you start to use the product.

### ◆ Glossary

Phrase	Definition
Drive	YASKAWA AC Drive FP605
EDM	External Device Monitor
EZOLV	EZ Open Loop Vector Control
IPM motor	Interior Permanent Magnet motors
MFAI	Multi-Function Analog Input
MFAO	Multi-Function Analog Output
MFDI	Multi-Function Digital Input
MFDO	Multi-Function Digital Output
OLV/PM	Open Loop Vector Control for Permanent Magnet Motors
PM motor	Permanent Magnet Synchronous motor (generic name for IPM motors and SPM motors)
SIL	Safety Integrity Level
SPM motor	Surface Permanent Magnet motors
V/f	V/f Control

### ◆ About Registered Trademarks

- APOGEE FLN is a registered trademark of Siemens Building Technologies, Inc.
- APOGEE Anywhere is a trademark of Siemens Building Technologies, Inc.
- BACnet is a trademark of the American Society of Heating, Refrigerating, and Air-Conditioning Engineers (ASHRAE).
- CANopen is a registered trademark of CAN in Automation (CIA).
- DeviceNet is a registered trademark of Open DeviceNet Vendor Association, Inc. (ODVA).
- EtherNet/IP is a registered trademark of Open DeviceNet Vendor Association, Inc. (ODVA).
- LonWorks and LonTalk are registered trademarks of Echelon Corporation.
- Metasys N2 is a trademark of Johnson Controls, Inc.
- Modbus is a registered trademark of Schneider Electric SA.
- PROFIBUS-DP and PROFINET are registered trademarks of PROFIBUS International.
- Other company names and product names in this document are trademarks or registered trademarks of the respective companies.

## i.2 Using the Product Safely

### ◆ Explanation of Signal Words

#### **⚠ WARNING**

**Read and understand this manual before you install, operate, or do maintenance on the drive. Install the drive as specified by this manual and local codes.**

The symbols in this section identify safety messages in this manual. If you do not obey these safety messages, the hazards can cause serious injury, death, or damage to the products and related equipment and systems.

These identifier words categorize and emphasize important safety precautions in these instructions.

#### **⚠ DANGER**

**This signal word identifies a hazard that will cause serious injury or death if you do not prevent it.**

#### **⚠ WARNING**

**This signal word identifies a hazard that can cause death or serious injuries if you do not prevent it.**

#### **⚠ CAUTION**

**This signal word identifies a hazardous situation, which, if not avoided, can cause minor or moderate injury.**

#### **NOTICE**

**This signal word identifies a property damage message that is not related to personal injury.**

### ◆ General Safety

#### **General Precautions**

- Some figures in the instructions include options and drives without covers or safety shields to more clearly show the inside of the drive. Replace covers and shields before operation. Use options and drives only as specified by the instructions.
- The figures in this manual are examples only. All figures do not apply to all products included in this manual.
- Yaskawa can change the products, specifications, and content of the instructions without notice to make the product and/or the instructions better.
- If you damage or lose these instructions, contact a Yaskawa representative or the nearest Yaskawa sales office on the rear cover of the manual, and tell them the document number on the front cover to order new copies.

#### **⚠ DANGER**

**Do not ignore the safety messages in this manual.**

If you ignore the safety messages in this manual, it will cause serious injury or death. The manufacturer is not responsible for injuries or damage to equipment.

#### **Electrical Shock Hazard**

**Do not examine, connect, or disconnect wiring on an energized drive. Before servicing, disconnect all power to the equipment and wait for the time specified on the warning label at a minimum. The internal capacitor stays charged after the drive is de-energized. The charge indicator LED extinguishes when the DC bus voltage decreases below 50 Vdc. When all indicators are OFF, remove the covers before measuring for dangerous voltages to make sure that the drive is safe.**

If you do work on the drive when it is energized, it will cause serious injury or death from electrical shock.

**⚠ WARNING**

**Crush Hazard**

**Test the system to make sure that the drive operates safely after you wire the drive and set parameters.**

If you do not test the system, it can cause damage to equipment or serious injury or death.

**Sudden Movement Hazard**

**Before you do a test run, make sure that the setting values for virtual input and output function parameters are correct. Virtual input and output functions can have different default settings and operation than wired input and output functions.**

Incorrect function settings can cause serious injury or death.

**Remove all personnel and objects from the area around the drive, motor, and machine and attach covers, couplings, shaft keys, and machine loads before you energize the drive.**

If personnel are too close or if there are missing parts, it can cause serious injury or death.

**Electrical Shock Hazard**

**Do not modify the drive body or drive circuitry.**

Modifications to drive body and circuitry can cause serious injury or death, will cause damage to the drive, and will void the warranty. Yaskawa is not responsible for modifications of the product made by the user.

**Only let approved personnel install, wire, maintain, examine, replace parts, and repair the drive.**

If personnel are not approved, it can cause serious injury or death.

**Do not remove covers or touch circuit boards while the drive is energized.**

If you touch the internal components of an energized drive, it can cause serious injury or death.

**After the drive blows a fuse or trips a GFCI, do not immediately energize the drive or operate peripheral devices. Wait for the time specified on the warning label at a minimum and make sure that all indicators are OFF. Then check the wiring and peripheral device ratings to find the cause of the problem. If you do not know the cause of the problem, contact Yaskawa before you energize the drive or peripheral devices.**

If you do not fix the problem before you operate the drive or peripheral devices, it can cause serious injury or death.

**Disconnect all power to the drive and remove all wires to do maintenance on the drive.**

If you only turn OFF the built-in Main Switch before you do maintenance, there can be high voltage on input terminals R/L1, S/L2, and T/L3 of the Main Switch and touching energized terminals will cause serious injury or death.

**Damage to Equipment**

**Do not apply incorrect voltage to the main circuit of the drive. Operate the drive in the specified range of the input voltage on the drive nameplate.**

Voltages that are higher than the permitted nameplate tolerance can cause damage to the drive.

**Fire Hazard**

**Install sufficient branch circuit short circuit protection as specified by applicable codes and this manual. The drive is suitable for circuits that supply not more than 100,000 RMS symmetrical amperes, 240 Vac maximum (208 V Class), 480 Vac maximum (480 V Class).**

Incorrect branch circuit short circuit protection can cause serious injury or death.

**⚠ CAUTION**

**Crush Hazard**

**Tighten terminal cover screws and hold the case safely when you move the drive.**

If the drive or covers fall, it can cause moderate injury.

## NOTICE

**Use an inverter-duty motor or vector-duty motor with reinforced insulation and windings applicable for use with an AC drive.**

If the motor does not have the correct insulation, it can cause a short circuit or ground fault from insulation deterioration.

### Damage to Equipment

**When you touch the drive and circuit boards, make sure that you observe correct electrostatic discharge (ESD) procedures.**

If you do not follow procedures, it can cause ESD damage to the drive circuitry.

**Do not do a withstand voltage test or use a megohmmeter or megger insulation tester on the drive.**

These tests can cause damage to the drive.

**Do not operate a drive or connected equipment that has damaged or missing parts.**

You can cause damage to the drive and connected equipment.

**Do not use steam or other disinfectants to fumigate wood for packaging the drive. Use alternative methods, for example heat treatment, before you package the components.**

Gas from wood packaging fumigated with halogen disinfectants, for example fluorine, chlorine, bromine, iodine or DOP gas (phthalic acid ester), can cause damage to the drive.

**Do not energize and de-energize the drive more frequently than one time each 30 minutes.**

If you frequently energize and de-energize the drive, it can cause drive failure.

**Do not cycle the Main Switch more than 6000 times.**


If you cycle the Main Switch more times than the limit, it will cause the contact failure, or you cannot open or close the Main Switch.

**Make sure that you stop the motor before you turn ON/OFF the Main Switch.**

If you turn ON/OFF the Main Switch during run, it can cause Main Switch failure.

### ◆ Warning Label Content and Location


The drive warning labels are in the locations shown in [Figure i.1](#) and [Figure i.2](#). Use the drive as specified by this information.

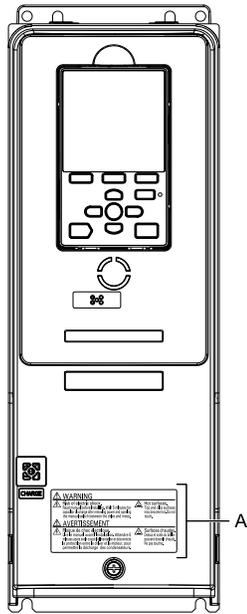

<p><b>⚠ WARNING</b></p> <p><b>⚡ Risk of electric shock.</b> Read manual before installing. Wait 5 minutes for capacitor discharge after removing power and opening the manual switch between the drive and motor.</p>		<p><b>🔥 Hot surfaces.</b> Top and side surfaces may become hot. Do not touch.</p>	
<p><b>⚠ AVERTISSEMENT</b></p> <p><b>⚡ Risque de choc électrique.</b> Lire le manuel avant l'installation. Attendez 5 minutes après avoir coupé l'alimentation et déconnecté la protection entre le driver et le moteur, pour permettre la décharge des condensateurs.</p>		<p><b>🔥 Surfaces chaudes.</b> Dessus et cotés du boîtier peuvent devenir chauds. Ne pas toucher.</p>	

A - Warning label

Figure i.1 Warning Label Content and Location (Models: 2xxxxB/F/V/W and 4xxxxB/F/V/W without Main Switch)

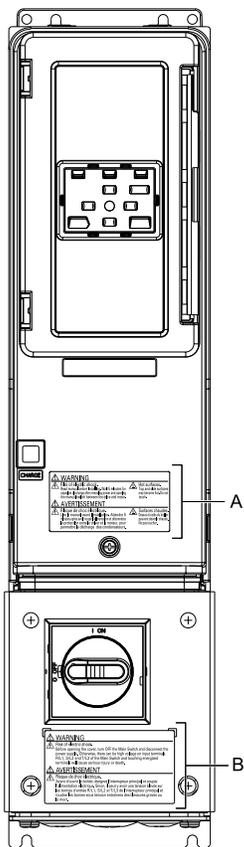

<p><b>⚠ WARNING</b></p> <p><b>⚡ Risk of electric shock.</b> Read manual before installing. Wait 5 minutes for capacitor discharge after removing power and opening the manual switch between the drive and motor.</p>		<p><b>🔥 Hot surfaces.</b> Top and side surfaces may become hot. Do not touch.</p>	
<p><b>⚠ AVERTISSEMENT</b></p> <p><b>⚡ Risque de choc électrique.</b> Lire le manuel avant l'installation. Attendez 5 minutes après avoir coupé l'alimentation et déconnecté la protection entre le driver et le moteur, pour permettre la décharge des condensateurs.</p>		<p><b>🔥 Surfaces chaudes.</b> Dessus et cotés du boîtier peuvent devenir chauds. Ne pas toucher.</p>	

<p><b>⚠ WARNING</b></p> <p><b>⚡ Risk of electric shock.</b> Before opening the cover, turn OFF the Main Switch and disconnect the power supply. Otherwise, there can be high voltage on input terminals R/L1, S/L2 and T/L3 of the Main Switch and touching energized terminals will cause serious injury or death.</p>	
<p><b>⚠ AVERTISSEMENT</b></p> <p><b>⚡ Risque de choc électrique.</b> Avant d'ouvrir le boîtier, éteignez l'interrupteur principal et coupez l'alimentation électrique. Sinon, il peut y avoir une tension élevée sur les bornes d'entrée R/L1, S/L2 et T/L3 de l'interrupteur principal et toucher les bornes sous tension entraînera des blessures graves ou la mort.</p>	

A - Warning label

B - Warning label for Main Switch

Figure i.2 Warning Label Content and Location (Models: 2xxxxT and 4xxxxT with Main Switch)

**◆ Cybersecurity**

This product is designed to connect and communicate information and data through a network interface. It is the sole responsibility of the customer to provide and continuously guarantee a secure connection between the product and the customer's network or if applicable, any other network. The customer must establish and maintain the appropriate measures (such as, but not limited to, the installation of firewalls, the application of authentication measures, the encryption of data, the installation of antivirus programs, etc.) to protect the product, the network, its system and the interface against all types of security breaches, unauthorized access, interference, intrusion, leakage and/or theft of data or information. Yaskawa and its affiliates are not responsible for damages and/or losses related to such security breaches, any unauthorized access, interference, intrusion, leakage and/or theft of data or information.

## **i.3 Warranty Information**

---

### **◆ Exclusion of Liability**

- This product is not designed and manufactured for use in life-support machines or systems.
- Contact a Yaskawa representative or your Yaskawa sales representative if you are considering the application of this product for special purposes, such as machines or systems used for passenger cars, medicine, airplanes and aerospace, nuclear power, electric power, or undersea relaying.

### **⚠ WARNING**

#### **Injury to Personnel**

**When you use this product in applications where its failure could cause the loss of human life, a serious accident, or physical injury, you must install applicable safety devices.**

If you do not correctly install safety devices, it can cause serious injury or death.

# Periodic Inspection and Maintenance

---

This chapter gives information about how to examine and maintain drives in use, how to replace cooling fans and other parts, and how to store drives.

<b>1.1</b>	<b>Section Safety .....</b>	<b>18</b>
<b>1.2</b>	<b>Inspection.....</b>	<b>20</b>
<b>1.3</b>	<b>Maintenance .....</b>	<b>23</b>
<b>1.4</b>	<b>Replace Cooling Fans and Circulation Fans .....</b>	<b>25</b>
<b>1.5</b>	<b>Replace the Keypad Battery .....</b>	<b>71</b>
<b>1.6</b>	<b>Storage Guidelines .....</b>	<b>73</b>

## 1.1 Section Safety

### DANGER

#### Electrical Shock Hazard

**Do not examine, connect, or disconnect wiring on an energized drive. Before servicing, disconnect all power to the equipment and wait for the time specified on the warning label at a minimum. The internal capacitor stays charged after the drive is de-energized. The charge indicator LED extinguishes when the DC bus voltage decreases below 50 Vdc. When all indicators are OFF, remove the covers before measuring for dangerous voltages to make sure that the drive is safe.**

If you do work on the drive when it is energized, it will cause serious injury or death from electrical shock.

**Disconnect all power to the drive and wait for the time specified on the warning label before you remove covers. Check the drive for dangerous voltages before servicing or repair work.**

If you do work on the drive when it is energized and there is no cover over the electronic circuits, it will cause serious injury or death from electrical shock. The drive has internal capacitors that stay charged after you de-energize the drive.

### WARNING

#### Electrical Shock Hazard

**The motor will run after you de-energize the drive. PM motors can generate induced voltage to the terminal of the motor after you de-energize the drive.**

If you touch a motor that is moving or energized, it can cause serious injury or death.

**Do not operate the drive when covers are missing. Replace covers and shields before you operate the drive. Use the drive only as specified by the instructions.**

Some figures in this section include drives without covers or safety shields to more clearly show the inside of the drive. If covers or safety shields are missing from the drive, it can cause serious injury or death.

**Always ground the motor-side grounding terminal.**

If you do not ground the equipment correctly, it can cause serious injury or death if you touch the motor case.

**Only let approved personnel install, wire, maintain, examine, replace parts, and repair the drive.**

If personnel are not approved, it can cause serious injury or death.

**Do not wear loose clothing or jewelry when you do work on the drive. Tighten loose clothing and remove all metal objects, for example watches or rings.**

Loose clothing can catch on the drive and jewelry can conduct electricity and cause serious injury or death.

#### Fire Hazard

**Tighten all terminal screws to the correct tightening torque.**

Connections that are too loose or too tight can cause incorrect operation and damage to the drive. Incorrect connections can also cause death or serious injury from fire.

#### Damage to Equipment

**Do not apply incorrect voltage to the main circuit of the drive. Operate the drive in the specified range of the input voltage on the drive nameplate.**

Voltages that are higher than the permitted nameplate tolerance can cause damage to the drive.

#### Fire Hazard

**Do not put flammable or combustible materials on top of the drive and do not install the drive near flammable or combustible materials. Attach the drive to metal or other noncombustible material.**

Flammable and combustible materials can start a fire and cause serious injury or death.

**⚠ WARNING****Electrical Shock Hazard**

**Do not modify the drive body or drive circuitry.**

Modifications to drive body and circuitry can cause serious injury or death, will cause damage to the drive, and will void the warranty. Yaskawa is not responsible for modifications of the product made by the user.

**Sudden Movement Hazard**

**Make sure that you align the phase order for the drive and motor when you connect the motor to drive output terminals U/T1, V/T2, and W/T3.**

If the phase order is incorrect, it can cause the motor to run in reverse. If the motor accidentally runs in reverse, it can cause serious injury or death.

**⚠ CAUTION****Burn Hazard**

**Do not touch a hot drive heatsink. De-energize the drive, wait for a minimum of 15 minutes, then make sure that the heatsink is cool before you replace the cooling fans.**

If you touch a hot drive heatsink, it can burn you.

**NOTICE****Damage to Equipment**

**When you touch the drive and circuit boards, make sure that you observe correct electrostatic discharge (ESD) procedures.**

If you do not follow procedures, it can cause ESD damage to the drive circuitry.

**Use the instructions in this manual to replace the cooling fans. When you do maintenance on the fans, replace all the fans to increase product life.**

If you install the fans incorrectly, it can cause damage to the drive.

**Make sure that all connections are correct after you install the drive and connect peripheral devices.**

Incorrect connections can cause damage to the drive.

**Do not energize and de-energize the drive more frequently than one time each 30 minutes.**

If you frequently energize and de-energize the drive, it can cause drive failure.

**Do not operate a drive or connected equipment that has damaged or missing parts.**

You can cause damage to the drive and connected equipment.

**Note:**

Do not use unshielded cable for control wiring. Use shielded, twisted-pair wires and ground the shield to the ground terminal of the drive. Incorrect wiring can cause electrical interference and unsatisfactory system performance.

## 1.2 Inspection

Power electronics have limited life and can show changes in performance and deterioration of performance after years of use in usual conditions. To help prevent these problems, it is important to do preventive maintenance and regular inspection, and replace parts on the drive.

Drives contain different types of power electronics, for example power transistors, semiconductors, capacitors, resistors, fans, and relays. The electronics in the drive are necessary for correct motor control.

Follow the inspection lists in this chapter as a part of a regular maintenance program.

**Note:**

Examine the drive one time each year at a minimum.

The operating conditions, environmental conditions, and use conditions will have an effect on the examination frequency for connected equipment.

Examine the drive more frequently if you use the drive in bad conditions or in these conditions:

- High ambient temperatures
- Frequent starting and stopping
- Changes in the AC power supply or load
- Too much vibration or shock loading
- Dust, metal dust, salt, sulfuric acid, or chlorine atmospheres
- Unsatisfactory storage conditions.

### ◆ Recommended Daily Inspection

Table 1.1 gives information about the recommended daily inspection for Yaskawa drives. Examine the items in Table 1.1 each day to make sure that the components do not become unserviceable or fail. Make a copy of this checklist and put a check mark in the “Checked” column after each inspection.

**Table 1.1 Daily Inspection Checklist**

Inspection Area	Inspection Points	Corrective Action	Checked
Motor	Examine for unusual oscillation or noise coming from the motor.	<ul style="list-style-type: none"> <li>• Check the load coupling.</li> <li>• Measure motor vibration.</li> <li>• Tighten all loose components.</li> </ul>	
Cooling System	Examine for unusual heat from the drive or motor and visible discoloration.	<ul style="list-style-type: none"> <li>• Check for a load that is too heavy.</li> <li>• Tighten loose screws.</li> <li>• Check for a dirty heatsink or motor.</li> <li>• Measure the ambient temperature.</li> </ul>	
	Examine the cooling fans, circulation fans, and circuit board cooling fans.	<ul style="list-style-type: none"> <li>• Check for a clogged or dirty fan.</li> <li>• Use the performance life monitor to check for correct fan operation.</li> </ul>	
Surrounding Environment	Make sure that the installation environment is applicable.	Remove the source of contamination or correct unsatisfactory environment.	
Load	Make sure that the drive output current is not more than the motor or drive rating for an extended period of time.	<ul style="list-style-type: none"> <li>• Check for a load that is too heavy.</li> <li>• Check the correct motor parameter settings.</li> </ul>	
Power Supply Voltage	Examine main power supply and control voltages.	<ul style="list-style-type: none"> <li>• Correct the voltage or power supply to agree with nameplate specifications.</li> <li>• Verify all main circuit phases.</li> </ul>	

### ◆ Recommended Periodic Inspection

Table 1.2 to Table 1.6 give information about the recommended periodic inspections for Yaskawa drives. Examine the drive one time each year at a minimum. The operating conditions, environmental conditions, and use conditions will have an effect on the examination frequency for connected equipment. You must use your experience with the application to select the correct inspection frequency for each drive installation. Periodic inspections will help to prevent performance deterioration and product failure. Make a copy of this checklist and put a check mark in the “Checked” column after each inspection.

**DANGER! Electrical Shock Hazard.** Do not examine, connect, or disconnect wiring on an energized drive. Before servicing, disconnect all power to the equipment and wait for the time specified on the warning label at a minimum. The internal capacitor stays charged after the drive is de-energized. The charge indicator LED extinguishes when the DC bus voltage decreases below 50 Vdc. When all indicators are OFF, remove the covers before measuring for dangerous voltages to make sure that the drive is safe. If you do work on the drive when it is energized, it will cause serious injury or death from electrical shock.

Table 1.2 Main Circuit Periodic Inspection Checklist

Inspection Area	Inspection Points	Corrective Action	Checked
General	<ul style="list-style-type: none"> <li>Examine equipment for discoloration from too much heat or deterioration.</li> <li>Examine for damaged parts.</li> </ul>	<ul style="list-style-type: none"> <li>Replace damaged components as necessary.</li> <li>The drive does not have many serviceable parts and it could be necessary to replace the drive.</li> </ul>	
	Examine for dirt, unwanted particles, or dust on components.	<ul style="list-style-type: none"> <li>Examine enclosure door seal.</li> <li>Use a vacuum cleaner to remove unwanted particles and dust without touching the components.</li> <li>If you cannot remove unwanted particles and dust with a vacuum cleaner, replace the components.</li> </ul>	
Conductors and Wiring	<ul style="list-style-type: none"> <li>Examine wiring and connections for discoloration or damage. Examine wiring and connections for discoloration from too much heat.</li> <li>Examine wire insulation and shielding for discoloration and wear.</li> </ul>	Repair or replace damaged wiring.	
Terminal Block	Examine terminals for stripped, damaged, or loose connections.	<ul style="list-style-type: none"> <li>Tighten loose screws.</li> <li>Replace damaged screws or terminals.</li> </ul>	
Electromagnetic Contactors and Relays	<ul style="list-style-type: none"> <li>Examine contactors and relays for too much noise during operation.</li> <li>Examine coils for signs of too much heat, such as melted or broken insulation.</li> </ul>	<ul style="list-style-type: none"> <li>Check coil voltage for overvoltage or undervoltage conditions.</li> <li>Replace broken relays, contactors, or circuit boards that you can remove.</li> </ul>	
Electrolytic capacitor	<ul style="list-style-type: none"> <li>Examine for leaks, discoloration, or cracks.</li> <li>Examine if the cap has come off, if there is swelling, or if there are leaks from broken sides.</li> </ul>	The drive does not have many serviceable parts and it could be necessary to replace the drive.	
Diodes, IGBT (Power Transistor)	Examine for dust or other unwanted material collected on the surface.	Use a vacuum cleaner to remove unwanted particles and dust without touching the components.	

Table 1.3 Motor Periodic Inspection Checklist

Inspection Area	Inspection Points	Corrective Action	Checked
Operation Check	Check for increased vibration or unusual noise.	Stop the motor and contact approved maintenance personnel as necessary.	

Table 1.4 Control Circuit Periodic Inspection Checklist

Inspection Area	Inspection Points	Corrective Action	Checked
General	<ul style="list-style-type: none"> <li>Examine terminals for stripped, damaged, or loose connections.</li> <li>Make sure that all terminals have been correctly tightened.</li> </ul>	<ul style="list-style-type: none"> <li>Tighten loose screws.</li> <li>Replace damaged screws or terminals.</li> <li>If terminals are integral to a circuit board, it could be necessary to replace the control board or the drive.</li> </ul>	
Circuit Boards	<ul style="list-style-type: none"> <li>Check for odor, discoloration, or rust.</li> <li>Make sure that all connections are correctly fastened.</li> <li>Make sure that the surface of the circuit board does not have dust or oil mist.</li> </ul>	<ul style="list-style-type: none"> <li>Tighten loose connections.</li> <li>Use a vacuum cleaner to remove unwanted particles and dust without touching the components.</li> <li>If you cannot remove unwanted particles and dust with a vacuum cleaner, replace the components.</li> <li>Do not use solvents to clean the board.</li> <li>The drive does not have many serviceable parts and it could be necessary to replace the drive.</li> </ul>	

Table 1.5 Cooling System Periodic Inspection Checklist

Inspection Area	Inspection Points	Corrective Action	Checked
Cooling fan	<ul style="list-style-type: none"> <li>Check for unusual oscillation or unusual noise.</li> <li>Check for damaged or missing fan blades.</li> </ul>	Clean or replace the fans as necessary.	
Heatsink	<ul style="list-style-type: none"> <li>Examine for dust or other unwanted material collected on the surface.</li> <li>Examine for dirt.</li> </ul>	Use a vacuum cleaner to remove unwanted particles and dust without touching the components.	
Air Duct	Examine air intake, exhaust openings and make sure that there are no unwanted materials on the surface.	Clear blockages and clean air duct as necessary.	

**Table 1.6 Keypad Periodic Inspection Checklist**

Inspection Area	Inspection Points	Corrective Action	Checked
General	<ul style="list-style-type: none"> <li>• Make sure that the keypad shows the data correctly.</li> <li>• Examine for dust or other unwanted material that collected on components in the area.</li> <li>• Examine if the clock battery is expired.</li> </ul>	<ul style="list-style-type: none"> <li>• If you have problems with the display or the keys, contact Yaskawa or your nearest sales representative.</li> <li>• Clean the keypad.</li> <li>• Replace the battery.</li> </ul>	

## 1.3 Maintenance

The drive Maintenance Monitors keep track of component wear and tell the user when the end of the estimated performance life is approaching. The Maintenance Monitors prevent the need to shut down the full system for unexpected problems. Users can set alarm notifications for the maintenance periods for these drive components:

- Cooling fan
- Electrolytic capacitor
- Soft charge bypass relay
- IGBT

Contact Yaskawa or your nearest sales representative for more information about part replacement.

### ◆ Replaceable Parts

You can replace these parts of the drive:

- Control circuit terminal board
- Cooling fan, circulation fan
- Keypad

**Note:**

Make sure that you use a keypad with FLASH number 1004 or later. Keypads with FLASH numbers 1003 and earlier will not show characters correctly.

If there is a failure in the main circuit, replace the drive.

If the drive is in the warranty period, contact Yaskawa or your nearest sales representative before you replace parts. Yaskawa reserves the right to replace or repair the drive as specified by the Yaskawa warranty policy.

**DANGER! Electrical Shock Hazard.** Do not examine, connect, or disconnect wiring on an energized drive. Before servicing, disconnect all power to the equipment and wait for the time specified on the warning label at a minimum. The internal capacitor stays charged after the drive is de-energized. The charge indicator LED extinguishes when the DC bus voltage decreases below 50 Vdc. When all indicators are OFF, remove the covers before measuring for dangerous voltages to make sure that the drive is safe. If you do work on the drive when it is energized, it will cause serious injury or death from electrical shock.

### ◆ Part Replacement Guidelines

Table 1.7 shows the standard replacement period for replacement parts. When you replace these parts, make sure that you use Yaskawa replacement parts for the applicable model and design revision number of your drive.

**Table 1.7 Standard Replacement Period**

Parts	Standard Replacement Period
Cooling fan	10 years
Electrolytic capacitor */	10 years

\*1 If there is damage to parts that you cannot repair or replace, replace the drive.

**Note:**

The performance life estimate uses these operating conditions. Yaskawa provides these conditions so you can replace parts to maintain performance. Unsatisfactory conditions or heavy use will make it necessary for you to replace some parts more frequently than other parts.

Operating conditions for performance life estimate:

- Yearly average
  - IP20/Open Type enclosure: 40 °C (104 °F)
  - IP20/UL Type 1 and External Heatsink Installation of IP55/UL Type 12: 30 °C (86 °F)
- Load factor
  - 80% maximum
- Operation time
  - 24 hours a day

### ◆ Monitors that Show the Lifespan of Drive Components

The drive keypad shows percentage values for the replacement parts to help you know when you must replace those components. Use the monitors in Table 1.8 to see how close you are to the end of the useful life of a component.

## 1.3 Maintenance

When the monitor value is 100%, the component is at the end of its useful life and there is an increased risk of drive malfunction. Yaskawa recommends that you check the maintenance period regularly to make sure that you get the maximum performance life.

**Table 1.8 Performance Life Monitors**

Monitor No.	Parts	Description
U4-03	Cooling fan	Shows the total operation time of fans as 0 to 99999 hours. After this value is 99999, the drive automatically resets it to 0.
U4-04		Shows the total fan operation time as a percentage of the specified maintenance period.
U4-05	Electrolytic capacitor	Shows the total capacitor usage time as a percentage of the specified maintenance period.
U4-06	Soft charge bypass relay	Shows the number of times the drive is energized as a percentage of the performance life of the inrush circuit.
U4-07	IGBT	Shows the percentage of the maintenance period reached by the IGBTs.

### ◆ Alarm Outputs for Maintenance Monitors

You can use *H2-xx* [*Multi-Function Digital Out*] to send a message that tells you when a specified component is near the end of its performance life estimate. Set *H2-xx* to the applicable value for your component as shown in [Table 1.9](#).

When the specified component is near the end of its performance life estimate, the MFDO terminals set for *H2-xx* = *2F* [*Maintenance Notification*] will turn ON, and the keypad will show an alarm that identifies the component to replace.

**Table 1.9 Maintenance Period Alarms**

Display	Alarm Name	Cause	Possible Solutions	Digital Outputs (Setting Value in H2-xx)
LT-1	Cooling Fan Maintenance Time	The cooling fan is at 90% of its expected performance life.	Replace the cooling fan, then set <i>o4-03</i> = 0 [ <i>Fan Operation Time Setting</i> = 0 h] to reset the cooling fan operation time.	2F
LT-2	Capacitor Maintenance Time	The capacitors for the main circuit and control circuit are at 90% of expected performance life.	Replace the board or the drive. Contact Yaskawa or your nearest sales representative to replace the board.	
LT-3	SoftChargeBypassRelay Maintenance Time	The soft charge bypass relay is at 90% of its performance life estimate.	Replace the board or the drive. Contact Yaskawa or your nearest sales representative to replace the board.	
LT-4	IGBT Maintenance Time (50%)	The IGBT is at 50% of its expected performance life.	Check the load, carrier frequency, and output frequency.	
TrPC	IGBT Maintenance Time (90%)	The IGBT is at 90% of its expected performance life.	Replace the IGBT or the drive.	10

### ◆ Related Parameters

Replace the component, then set *o4-03*, *o4-05*, *o4-07*, and *o4-09* [*Maintenance Setting*] = 0 to reset the Maintenance Monitor. If you do not reset these parameters after you replace the parts, the Maintenance Monitor function will continue to count down the performance life from the value from the previous part. If you do not reset the Maintenance Monitor, the drive will not have the correct value of the performance life for the new part.

**Note:**

The maintenance period is different for different operating environments.

**Table 1.10 Maintenance Setting Parameters**

No.	Name	Function
o4-03	Fan Operation Time Setting	Sets the value from which to start the cumulative drive cooling fan operation time in 10-hour units. <b>Note:</b> When <i>o4-03</i> = 30 has been set, the drive will count the operation time for the cooling fan from 300 hours and <i>U4-03</i> [ <i>Cooling Fan Open Time</i> ] will show 300 h.
o4-05	Capacitor Maintenance Setting	Sets the value from which to start the count for the main circuit capacitor maintenance period as a percentage.
o4-07	Softcharge Relay Maintenance Set	Sets as a percentage the value from which to start the count for the soft charge bypass relay maintenance time.
o4-09	IGBT Maintenance Setting	Sets the value from which to start the count for the IGBT maintenance period as a percentage.

## 1.4 Replace Cooling Fans and Circulation Fans

**CAUTION!** Injury to Personnel. Some fan units are not easily accessible from a standing position. Make sure that you can safely and comfortably remove and replace the fan. If you try to remove a fan that you cannot easily access, the fan unit can fall and cause minor to moderate injury.

**NOTICE:** Use the instructions in this manual to replace the cooling fans. When you do maintenance on the fans, replace all the fans to increase product life. If you install the fans incorrectly, it can cause damage to the drive.

### ◆ Cooling Fans and Circulation Fans by Drive Model

**Table 1.11 Cooling Fans and Circulation Fans for IP20/UL Open Type and IP20/UL Type 1 Drives**

Model	Cooling Fan	Circulation Fan	Circuit Board Cooling Fan	Replacement Procedure	Reference
4005, 4008	-	-	-	-	-
2011 - 2031 4011 - 4034	1	-	-	Procedure A	26
2046, 2059 4040 - 4052	1	-	-	Procedure B	31
4065	1	1	-		
2075 - 2114 4077 - 4124	2	-	-	Procedure C	37
2143, 2169 4156	2	-	-	Procedure D	42
2211, 2273 4180 - 4302	2	-	-	Procedure E	45
4361	2	1	-	Procedure F	47
2343, 2396 4414	3	1	-		
4477 - 4590	2	1	2	Procedure G	54
4720	3	1	2	Procedure H	62

**Table 1.12 Cooling Fans and Circulation Fans for IP55/UL Type 12 Drives**

Model	Cooling Fan	Circulation Fan	Replacement Procedure	Reference
4005	-	-	-	-
2011, 2017 4008 - 4014	1	-	Procedure A	26
2024, 2031 4021 - 4034	1	1		
2046, 2059 4040 - 4065	1	1	Procedure B	31
2075 - 2114 4077 - 4124	2	1	Procedure C	37

**Table 1.13 Cooling Fans and Circulation Fans for IP55/UL Type 12 Drives with Main Switch**

Model	Cooling Fan	Circulation Fan	Replacement Procedure	Reference
4005	-	-	-	-
2011, 2017 4008 - 4014	1	-	Procedure A	26
2024, 2031 4021 - 4034	1	1		
2046, 2059 4040 - 4065	1	1	Procedure B	31
2075 - 2114 4077 - 4096	2	1	Procedure C	37

### ◆ Fan Replacement (Procedure A)


**DANGER! Electrical Shock Hazard.** Do not examine, connect, or disconnect wiring on an energized drive. Before servicing, disconnect all power to the equipment and wait for the time specified on the warning label at a minimum. The internal capacitor stays charged after the drive is de-energized. The charge indicator LED extinguishes when the DC bus voltage decreases below 50 Vdc. When all indicators are OFF, remove the covers before measuring for dangerous voltages to make sure that the drive is safe. If you do work on the drive when it is energized, it will cause serious injury or death from electrical shock.

**CAUTION! Burn Hazard.** Do not touch a hot drive heatsink. De-energize the drive, wait for a minimum of 15 minutes, then make sure that the heatsink is cool before you replace the cooling fans. If you touch a hot drive heatsink, it can burn you.

**NOTICE:** Use the instructions in this manual to replace the cooling fans. When you do maintenance on the fans, replace all the fans to increase product life. If you install the fans incorrectly, it can cause damage to the drive.

#### ■ Fan Removal


1. Push the tab on the back side of the fan finger guard and pull up to remove the fan finger guard from the drive.

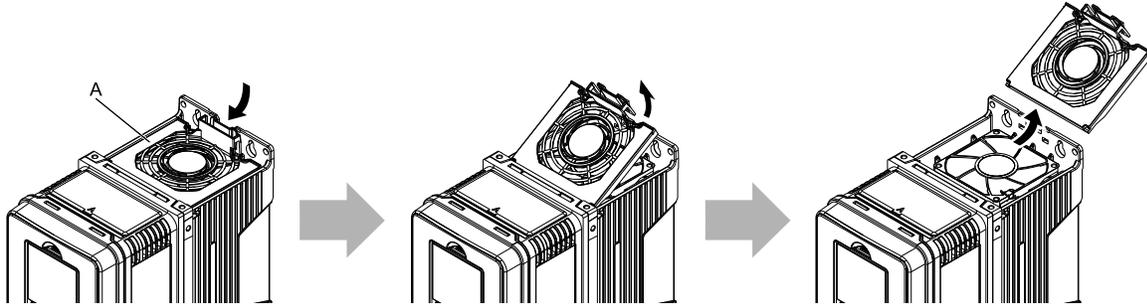

A - Fan finger guard

Figure 1.1 Remove the Fan Finger Guard

2. Pull the cooling fan straight up from the drive. Remove the protective tube on the relay connector and disconnect the connector to remove the fan from the drive.

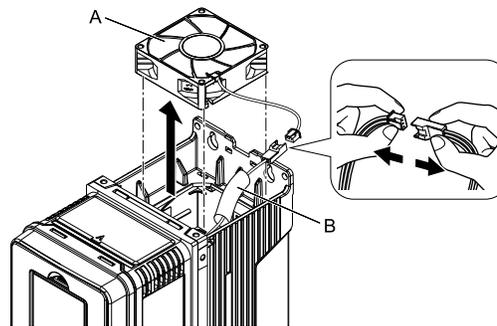

A - Cooling fan


B - Protective tube

Figure 1.2 Remove the Cooling Fan

#### ■ Fan Installation

Reverse the removal procedure for fan installation.

1. Connect the relay connector between the drive and cooling fan, and attach the protective tube.

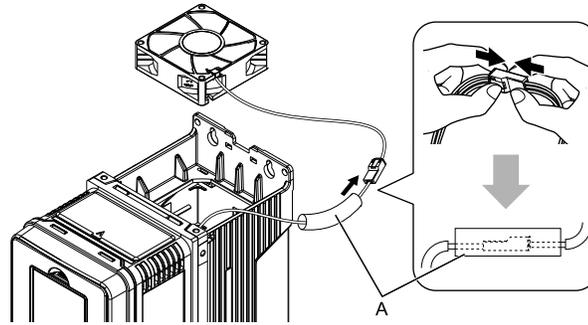


A - Protective tube

Figure 1.3 Connect the Relay Connector

2. Align the notches on the fan with the pin on the drive and install the cooling fan in the drive.

**Note:**

The positions of notch on the fan and alignment pin on the drive are different for different drive models. Use these figures to make sure that you use correct positions for your drive.

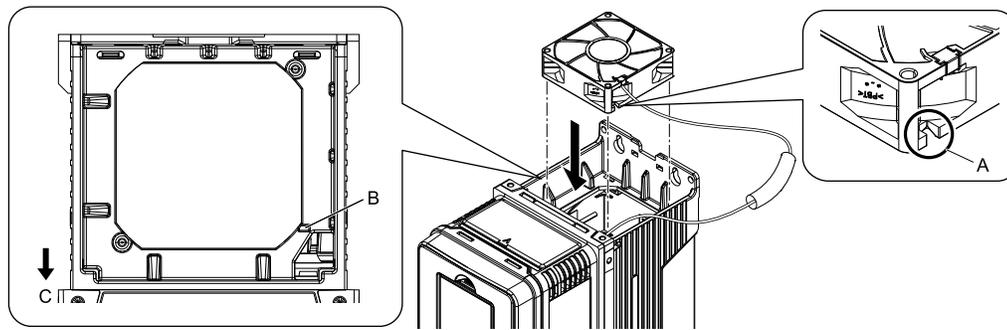


A - Notch on fan

B - Alignment pin on drive

C - Front of drive

Figure 1.4 Install the Cooling Fan (Drive Models: 2011, 2017, 4008xV/T, 4011, 4014)

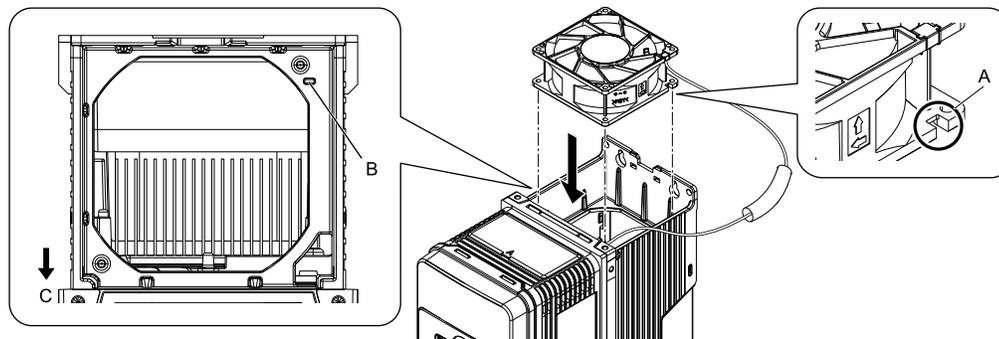


A - Notch on fan

B - Alignment pin on drive

C - Front of drive

Figure 1.5 Install the Cooling Fan (Drive Models: 2024, 2031, 4021 to 4034)

- Put the cable and connector in the recess of the drive.

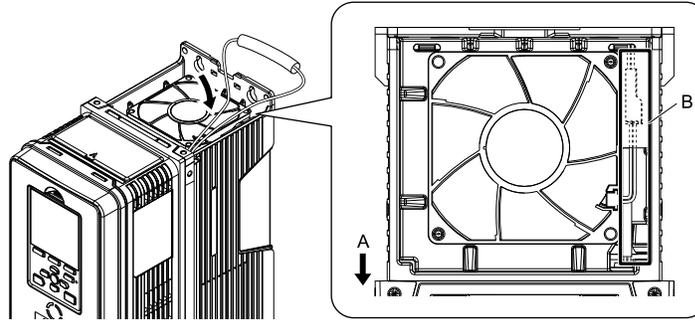


A - Front of drive

B - Recess for cable and connector \*/

**Figure 1.6 Put the Cable and Connector in the Drive Recess**

\*1 Make sure that the cable and connector are in the correct space.

- Hold the fan finger guard at an angle and put the connector tabs on the fan finger guard into the holes on the drive.

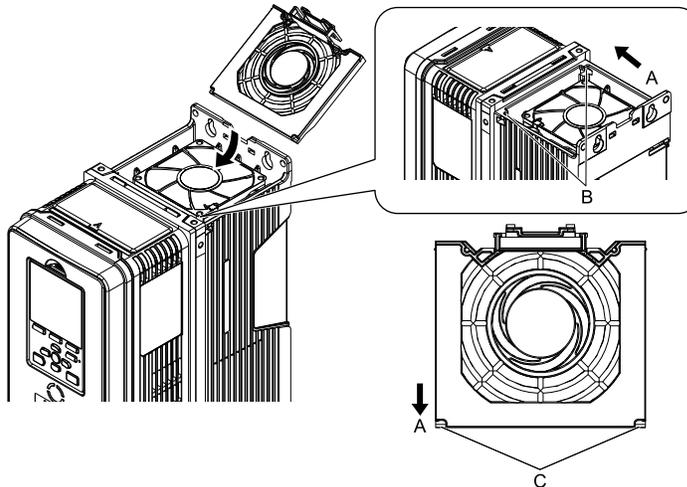


A - Front of drive

B - Drive holes

C - Connector tabs

**Figure 1.7 Install the Fan Finger Guard**

- Push the tab on the back side of the fan finger guard and click it into place on the drive.

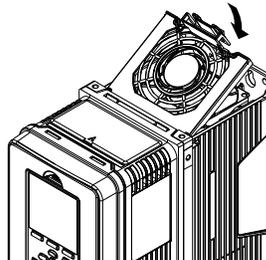

**Figure 1.8 Install the Fan Finger Guard**

- Energize the drive and set  $o4-03 = 0$  [Fan Operation Time Setting = 0 h] to reset the fan operation time.

## ■ Circulation Fan Removal

### Note:


Use this procedure only when you use one of these drive models:

- 2024xV, 2031xV
- 4021xV to 4034xV
- 2024xT, 2031xT
- 4021xT to 4034xT

Remove the drive cover before you start this procedure.

**CAUTION!** *Crush Hazard. Loosen the cover screws. Do not fully remove them. If you fully remove the cover screws, the terminal cover can fall and cause moderate injury.*

1. Disconnect the connector and remove the fan cable from the hook.

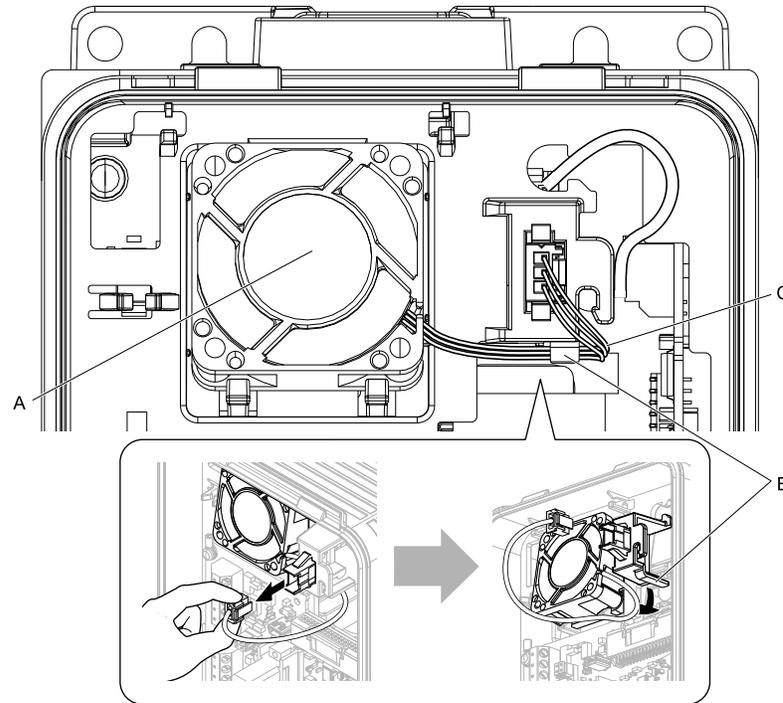


A - Circulation fan  
B - Hook

C - Fan cable

Figure 1.9 Disconnect the Connector and Remove the Fan Cable

2. Pull the bottom of the fan forward to remove it from the drive.

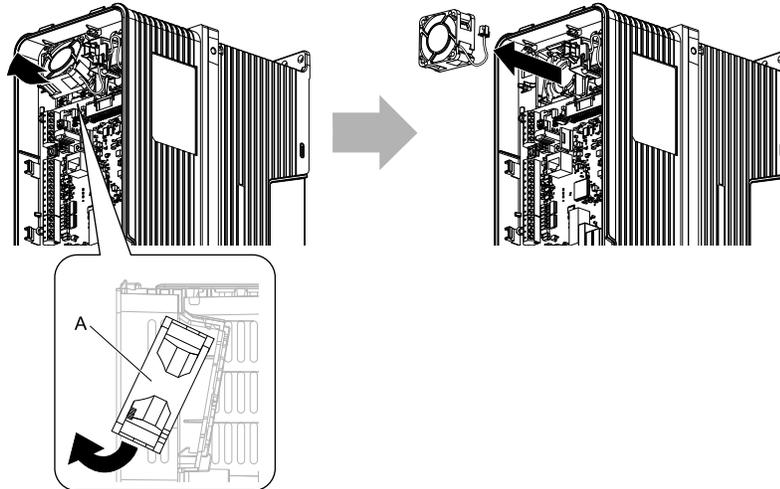

A - Circulation fan

Figure 1.10 Remove the Circulation Fan

### ■ Circulation Fan Installation


**Note:**

Use this procedure only when you use one of these drive models:

- 2024xV, 2031xV
- 4021xV to 4034xV
- 2024xT, 2031xT
- 4021xT to 4034xT

Reverse the removal procedure for circulation fan installation.

1. Put the side of the fan nearest to the top of the drive in first, and push it until the tabs click into position.

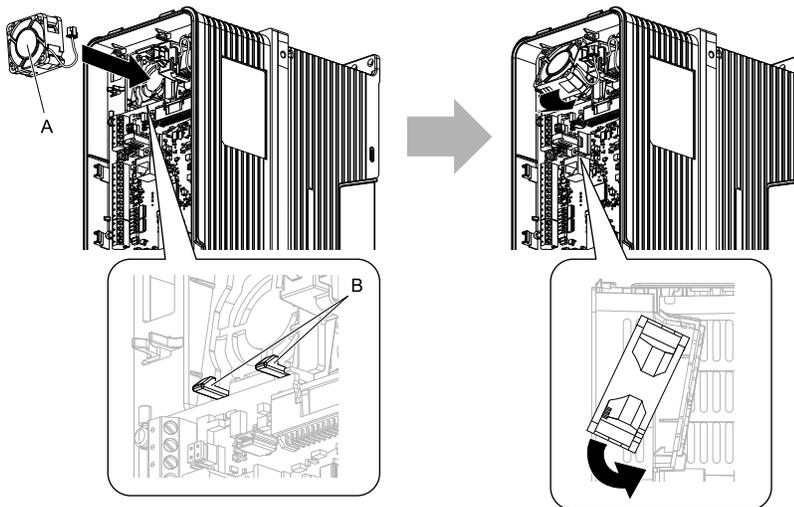


A - Circulation fan

B - Tabs

Figure 1.11 Install the Circulation Fan

- Put the cable back into its initial position and connect the connector.

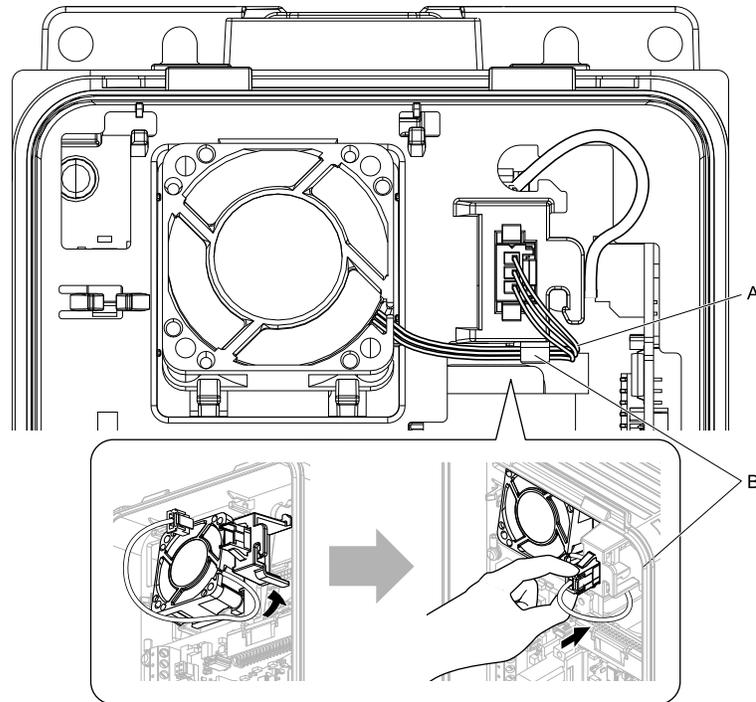

A - Fan cable

B - Hook

Figure 1.12 Put the Cable Back into the Drive and Connect the Connector

### ◆ Fan Replacement (Procedure B)


**DANGER! Electrical Shock Hazard.** Do not examine, connect, or disconnect wiring on an energized drive. Before servicing, disconnect all power to the equipment and wait for the time specified on the warning label at a minimum. The internal capacitor stays charged after the drive is de-energized. The charge indicator LED extinguishes when the DC bus voltage decreases below 50 Vdc. When all indicators are OFF, remove the covers before measuring for dangerous voltages to make sure that the drive is safe. If you do work on the drive when it is energized, it will cause serious injury or death from electrical shock.

**CAUTION! Burn Hazard.** Do not touch a hot drive heatsink. De-energize the drive, wait for a minimum of 15 minutes, then make sure that the heatsink is cool before you replace the cooling fans. If you touch a hot drive heatsink, it can burn you.

**NOTICE:** Use the instructions in this manual to replace the cooling fans. When you do maintenance on the fans, replace all the fans to increase product life. If you install the fans incorrectly, it can cause damage to the drive.

### ■ Fan Removal

- Push the tab on the back side of the fan finger guard and pull up to remove the fan finger guard from the drive.

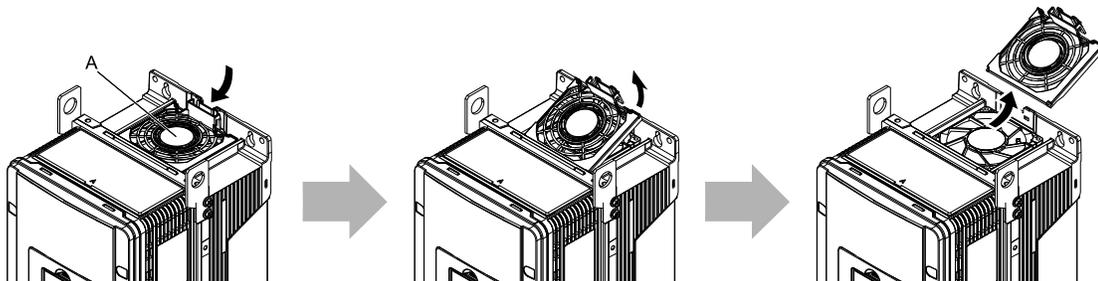


A - Fan finger guard

Figure 1.13 Remove the Fan Finger Guard

## 1.4 Replace Cooling Fans and Circulation Fans

2. Pull the cooling fan straight up from the drive. Remove the protective tube on the relay connector and disconnect the connector to remove the fan from the drive.

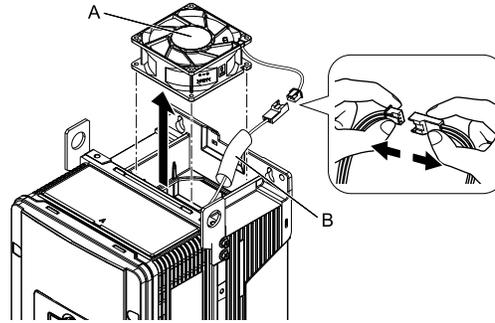

A - Cooling fan


B - Protective tube

Figure 1.14 Remove the Cooling Fan

### ■ Fan Installation

Reverse the removal procedure for fan installation.


1. Connect the relay connector between the drive and cooling fan, and attach the protective tube.

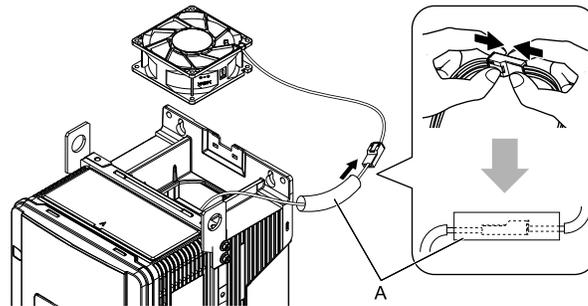

A - Protective tube

Figure 1.15 Connect the Relay Connector

2. Align the notch on the fan with the pin on the drive and install the cooling fan in the drive.

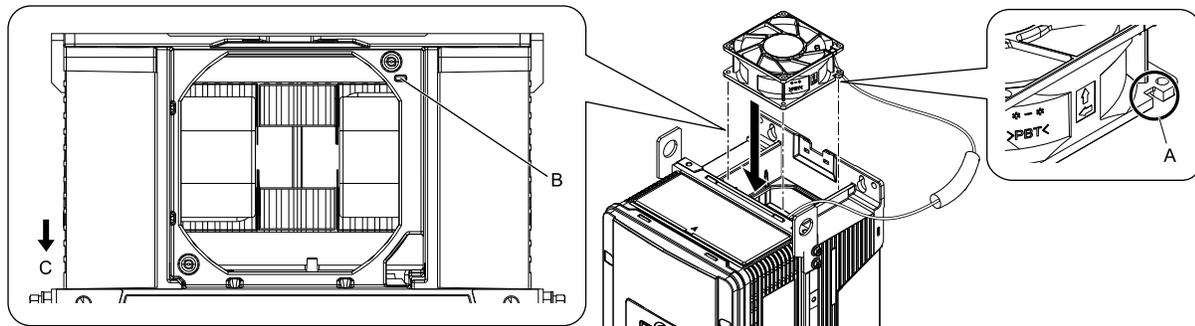


A - Notch on fan

B - Alignment pin on drive

C - Front of drive

Figure 1.16 Install the Cooling Fan

- Put the cable and connector in the recess of the drive.

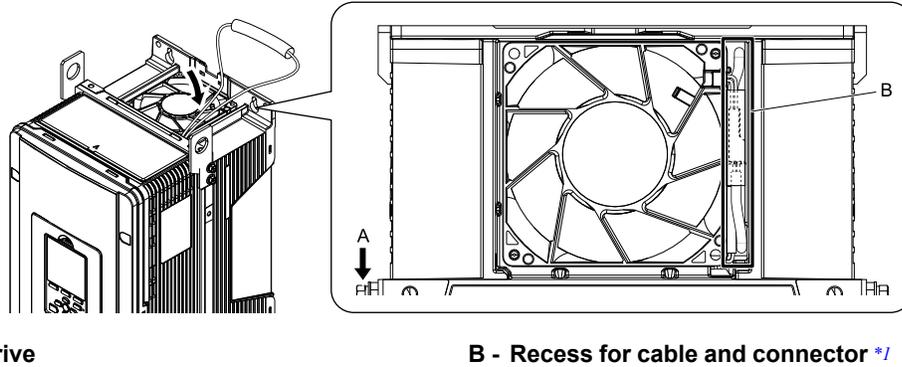


A - Front of drive

B - Recess for cable and connector \*1

**Figure 1.17 Put the Cable in the Drive Recess**

\*1 Make sure that the cable and connector are in the correct space.

- Hold the fan finger guard at an angle and put the connector tabs on the fan finger guard into the holes on the drive.

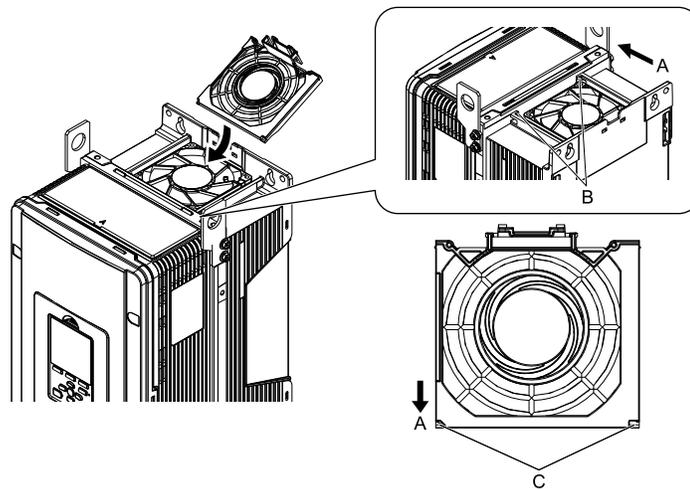


A - Front of drive

B - Drive holes

C - Connector tabs

**Figure 1.18 Install the Fan Finger Guard**

- Push the tab on the back side of the fan finger guard and click it into place on the drive.

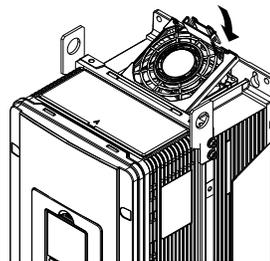

**Figure 1.19 Install the Fan Finger Guard**

- Energize the drive and set  $o4-03 = 0$  [Fan Operation Time Setting = 0 h] to reset the fan operation time.

### ■ Circulation Fan Removal

**Note:**


Use this procedure only when you use one of these drive models:

- 4065xF
- 2046xV, 2059xV
- 4040xV to 4065xV
- 2046xT, 2059xT
- 4040xT to 4065xT

Remove the drive cover before you start this procedure.

**CAUTION!** *Crush Hazard. Loosen the cover screws. Do not fully remove them. If you fully remove the cover screws, the terminal cover can fall and cause moderate injury.*

1. Remove the fan cable from the hooks.

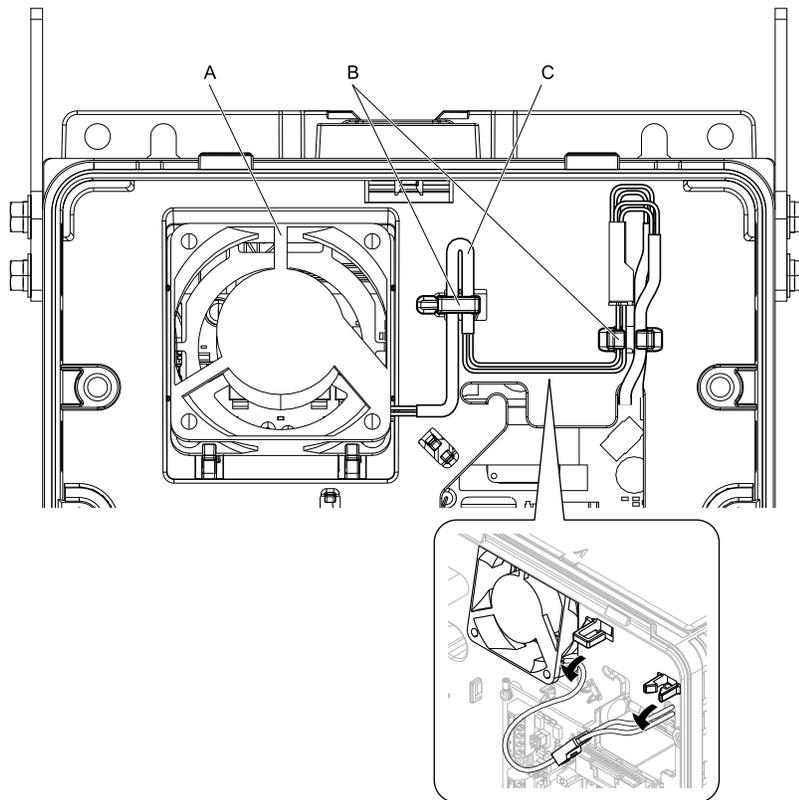


A - Circulation fan  
B - Hooks

C - Fan cable


**Figure 1.20 Remove the Fan Cable**

2. Disconnect the relay connector.

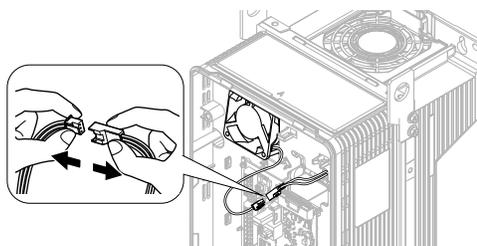

**Figure 1.21 Disconnect the Relay Connector**

3. Pull the bottom of the fan forward to remove it from the drive.

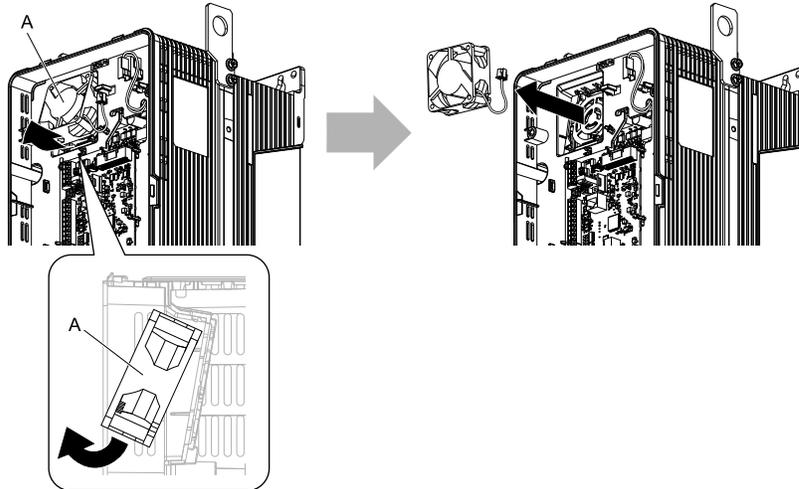

A - Circulation fan

Figure 1.22 Remove the Circulation Fan

## ■ Circulation Fan Installation


### Note:

Use this procedure only when you use one of these drive models:

- 4065xF
- 2046xV, 2059xV
- 4040xV to 4065xV
- 2046xT, 2059xT
- 4040xT to 4065xT

Reverse the removal procedure for circulation fan installation.

1. Align the notch on the fan with the pin on the drive and install the fan in the drive.

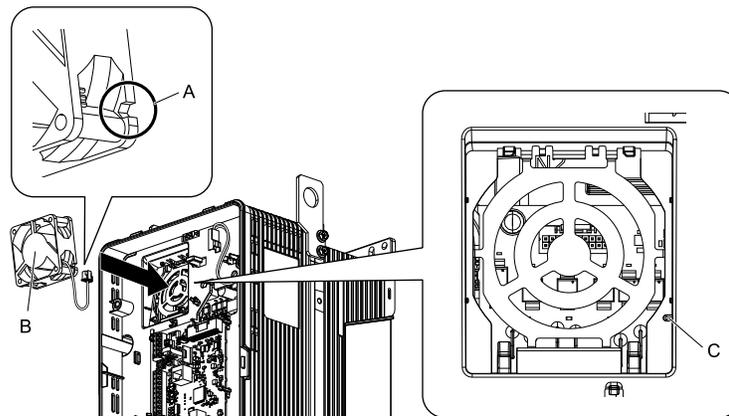
A - Notch on fan  
B - Circulation fan

C - Alignment pin on drive

Figure 1.23 Install the Circulation Fan

## 1.4 Replace Cooling Fans and Circulation Fans

- Put the side of the fan nearest to the top of the drive in first, and push it until the tabs click into position.

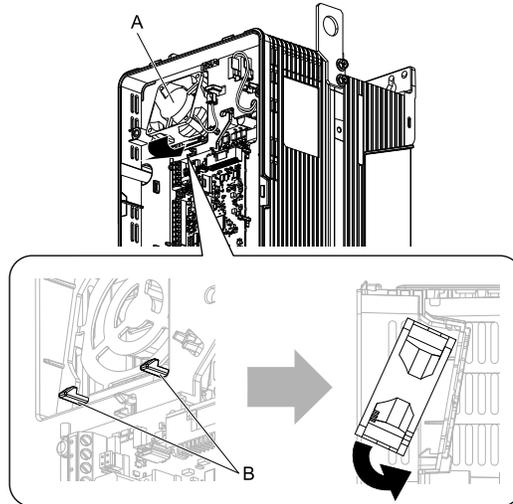


**A - Circulation fan**

**B - Tabs**


**Figure 1.24 Install the Circulation Fan**

- Connect the relay connector.

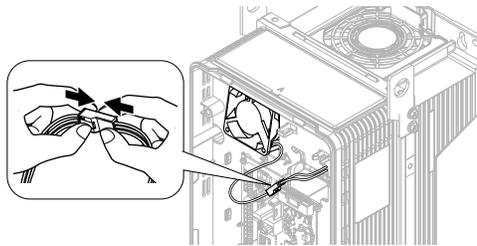

**Figure 1.25 Connect the Relay Connector**

4. Put the cable and connector back into their initial positions.

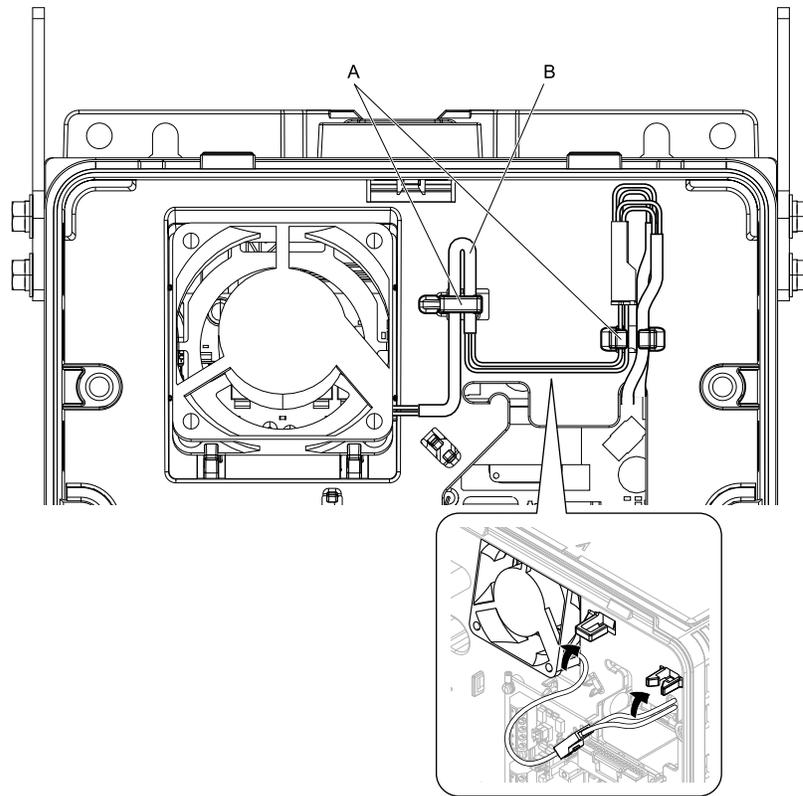

A - Hooks

B - Fan cable

Figure 1.26 Put the Cable Back into the Drive

### ◆ Fan Replacement (Procedure C)


**DANGER!** *Electrical Shock Hazard. Do not examine, connect, or disconnect wiring on an energized drive. Before servicing, disconnect all power to the equipment and wait for the time specified on the warning label at a minimum. The internal capacitor stays charged after the drive is de-energized. The charge indicator LED extinguishes when the DC bus voltage decreases below 50 Vdc. When all indicators are OFF, remove the covers before measuring for dangerous voltages to make sure that the drive is safe. If you do work on the drive when it is energized, it will cause serious injury or death from electrical shock.*

**CAUTION!** *Burn Hazard. Do not touch a hot drive heatsink. De-energize the drive, wait for a minimum of 15 minutes, then make sure that the heatsink is cool before you replace the cooling fans. If you touch a hot drive heatsink, it can burn you.*

**NOTICE:** *Use the instructions in this manual to replace the cooling fans. When you do maintenance on the fans, replace all the fans to increase product life. If you install the fans incorrectly, it can cause damage to the drive.*

### ■ Fan Removal


1. Push the tabs on the left and right sides of the fan finger guard and pull up to remove the fan finger guard from the drive.

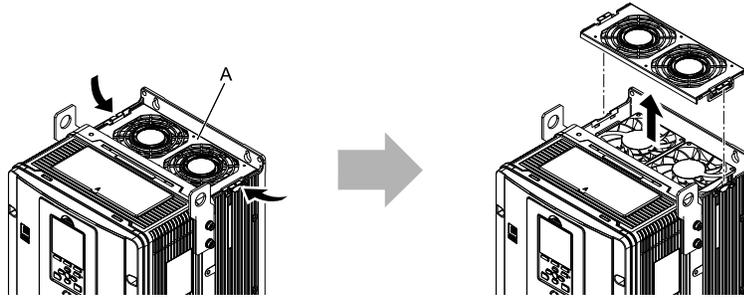

A - Fan finger guard

Figure 1.27 Remove the Fan Finger Guard

2. Pull the cooling fans straight up from the drive. Remove the protective tubes on the relay connectors and disconnect the connectors to remove the fans from the drive.

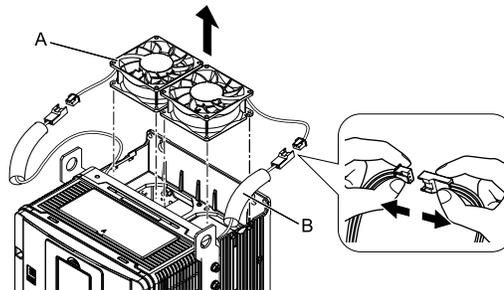

A - Cooling fans


B - Protective tubes

Figure 1.28 Remove the Cooling Fans

### ■ Fan Installation

Reverse the removal procedure for fan installation.

1. Connect the relay connectors between the drive and cooling fans, and attach the protective tubes.

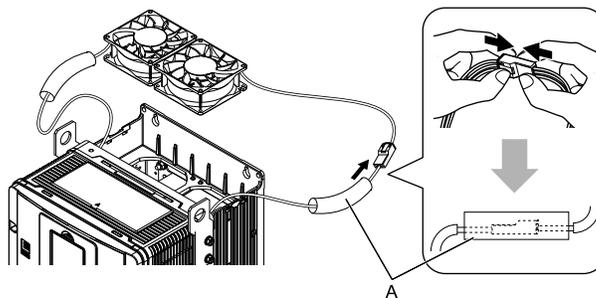

A - Protective tubes

Figure 1.29 Connect the Relay Connectors

- Align the notches on the fans with the pins on the drive and install the cooling fans in the drive.

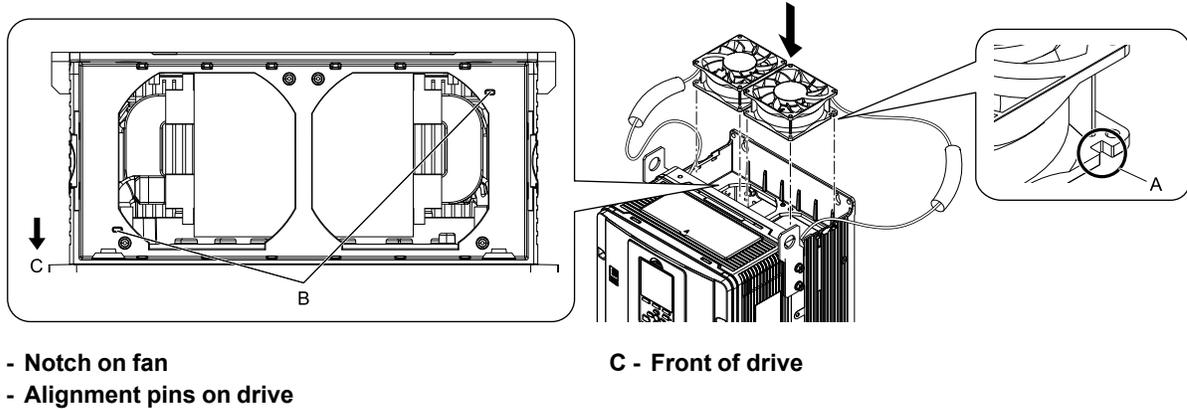


Figure 1.30 Install the Cooling Fans

- Put the cables and connectors in the recess of the drive.

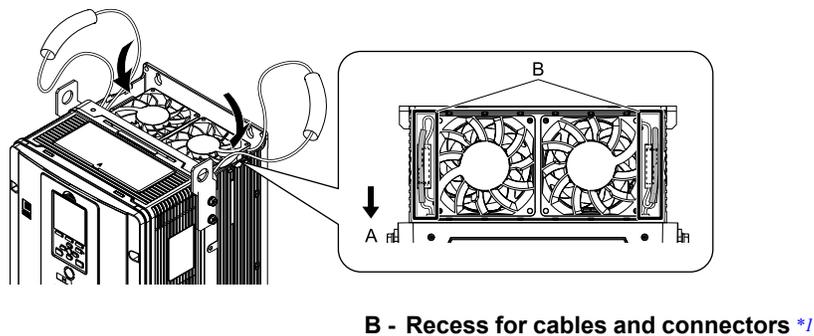


Figure 1.31 Put the Cables and Connectors in the Drive Recess

\*1 Make sure that the cables and connectors are in the correct space.

- Install the fan finger guard straight until the tabs click into place.

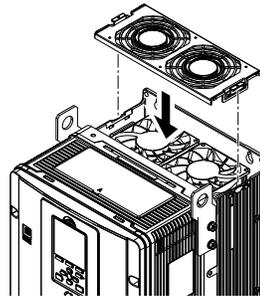


Figure 1.32 Install the Fan Finger Guard

- Energize the drive and set o4-03 = 0 [Fan Operation Time Setting = 0 h] to reset the fan operation time.

## ■ Circulation Fan Removal

### Note:

Use this procedure only when you use one of these drive models:


- 2075xV to 2114xV
- 4077xV to 4124xV
- 2075xT to 2114xT
- 4077xT, 4096xT

Remove the drive cover before you start this procedure.

**CAUTION!** Crush Hazard. Loosen the cover screws. Do not fully remove them. If you fully remove the cover screws, the terminal cover can fall and cause moderate injury.

## 1.4 Replace Cooling Fans and Circulation Fans

1. Pull the relay connector toward the top of the drive to remove from the hook then remove the cable from the hooks.

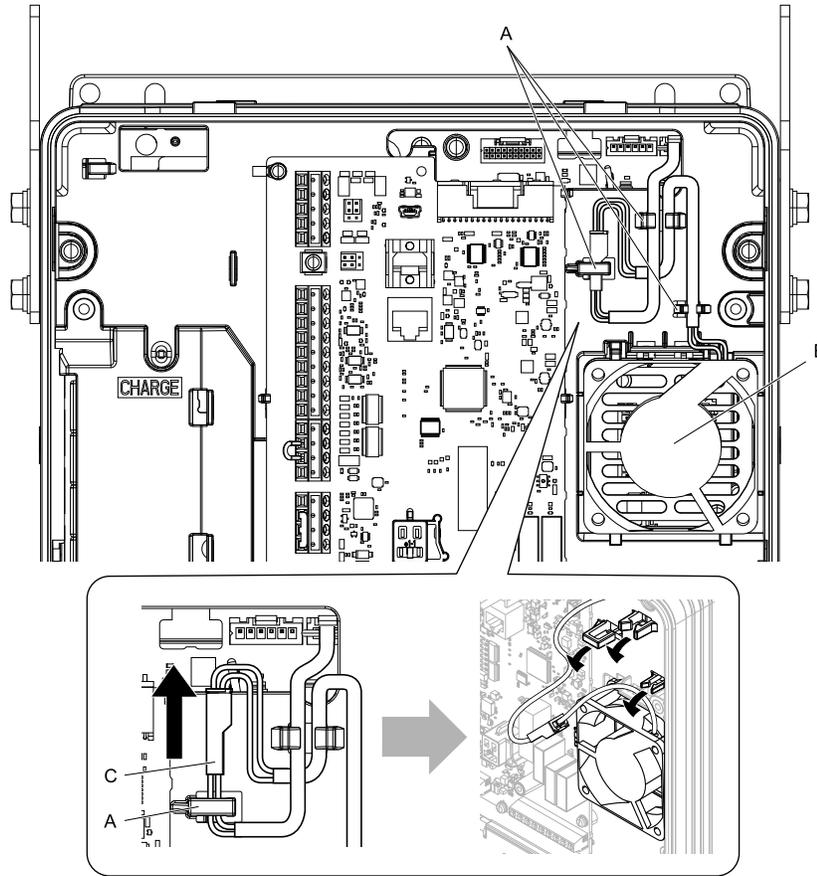

A - Hooks  
B - Circulation fan

C - Relay connector

Figure 1.33 Remove the Cable

2. Disconnect the relay connector.


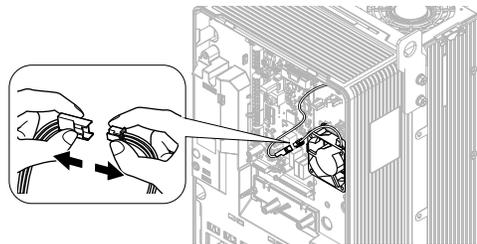


Figure 1.34 Disconnect the Relay Connector

- Pull the top of the fan forward to remove it from the drive.

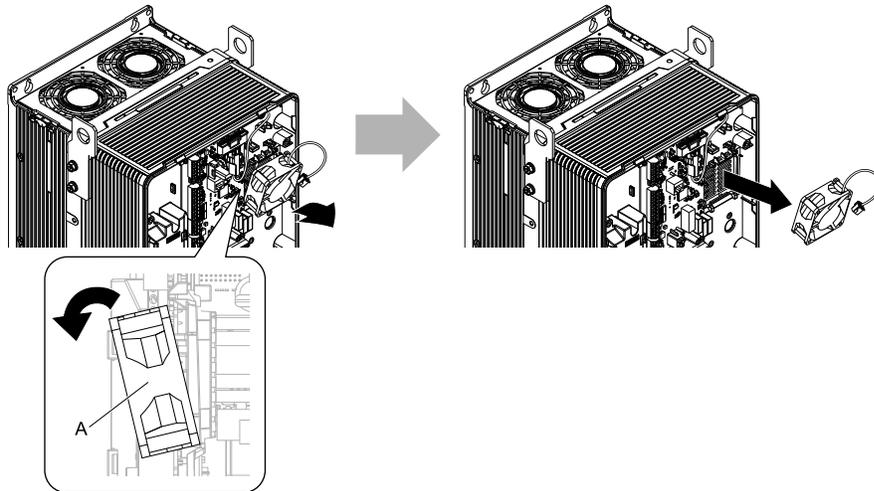

A - Circulation fan

Figure 1.35 Remove the Circulation Fan

## ■ Circulation Fan Installation


### Note:

Use this procedure only when you use one of these drive models:

- 2075xV to 2114xV
- 4077xV to 4124xV
- 2075xT to 2114xT
- 4077xT, 4096xT

Reverse the removal procedure for circulation fan installation.

- Put the bottom of the fan on the tabs in position A then push the fan until the tabs in position B click into position to put the fan back into the drive.

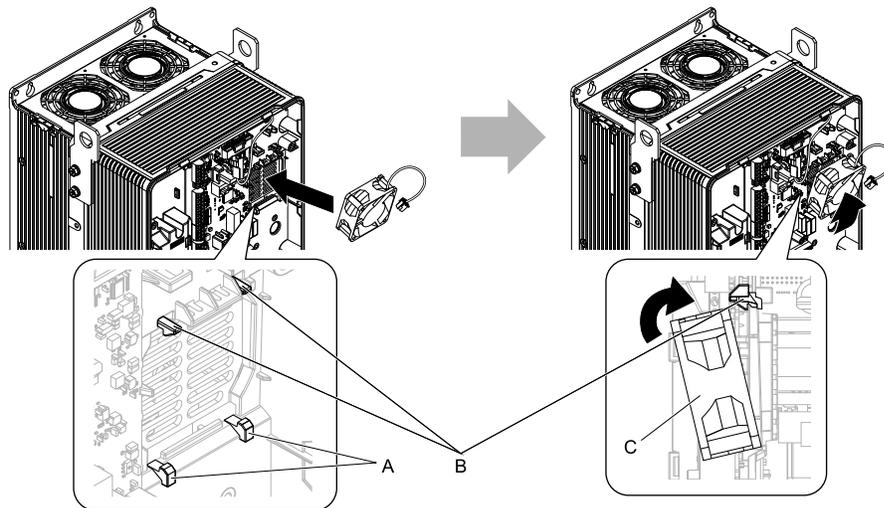

A - Tabs at the bottom of the fan  
B - Tabs at the top of the fan

C - Circulation fan

Figure 1.36 Install the Circulation Fan

2. Connect the relay connector.


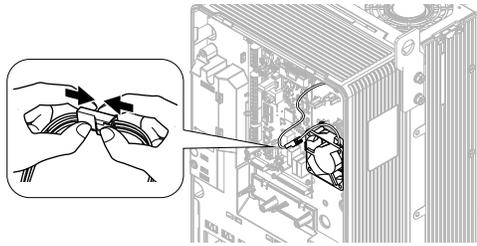


Figure 1.37 Connect the Relay Connector

3. Put the cable and relay connector back into their initial position.

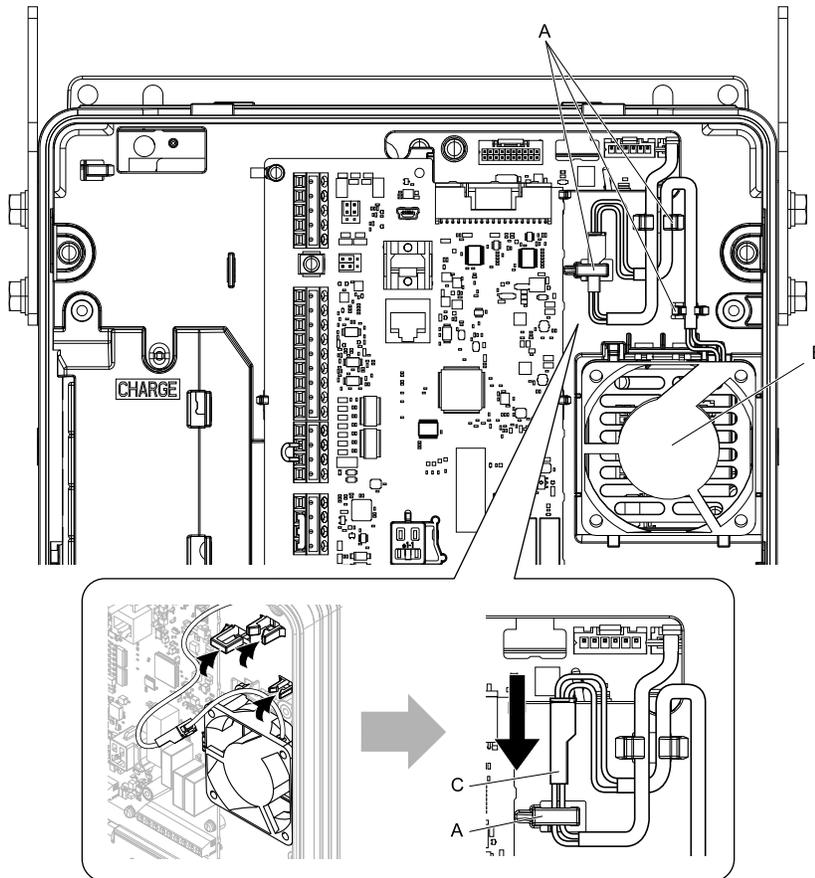

A - Hooks  
B - Circulation fan

C - Relay connector

Figure 1.38 Put the Cable and Relay Connector Back into the Drive

### ◆ Fan Replacement (Procedure D)


**DANGER!** *Electrical Shock Hazard. Do not examine, connect, or disconnect wiring on an energized drive. Before servicing, disconnect all power to the equipment and wait for the time specified on the warning label at a minimum. The internal capacitor stays charged after the drive is de-energized. The charge indicator LED extinguishes when the DC bus voltage decreases below 50 Vdc. When all indicators are OFF, remove the covers before measuring for dangerous voltages to make sure that the drive is safe. If you do work on the drive when it is energized, it will cause serious injury or death from electrical shock.*

**CAUTION!** *Burn Hazard. Do not touch a hot drive heatsink. De-energize the drive, wait for a minimum of 15 minutes, then make sure that the heatsink is cool before you replace the cooling fans. If you touch a hot drive heatsink, it can burn you.*

**NOTICE:** *Use the instructions in this manual to replace the cooling fans. When you do maintenance on the fans, replace all the fans to increase product life. If you install the fans incorrectly, it can cause damage to the drive.*

## ■ Fan Removal


1. Push the tabs on the left and right sides of the fan finger guard and pull up to remove the fan finger guard from the drive.

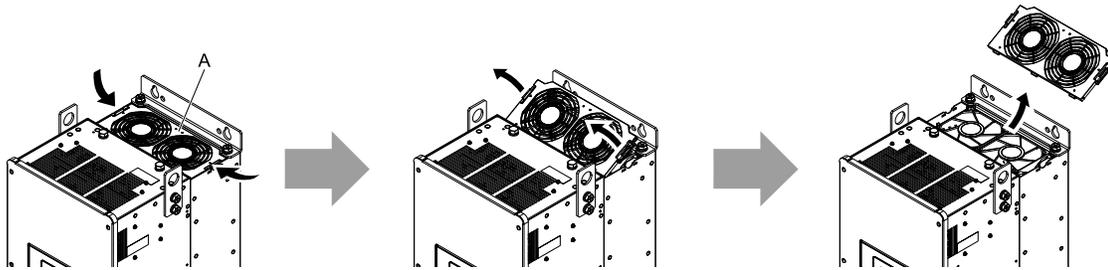

A - Fan finger guard

Figure 1.39 Remove the Fan Finger Guard

2. Pull the cooling fans straight up from the drive. Remove the protective tubes on the relay connectors and disconnect the connectors to remove the fans from the drive.

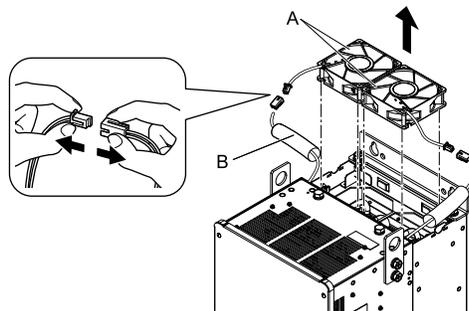

A - Cooling fans


B - Protective tubes

Figure 1.40 Remove the Cooling Fans

## ■ Fan Installation

Reverse the removal procedure for fan installation.


1. Connect the relay connectors, and attach the protective tubes.

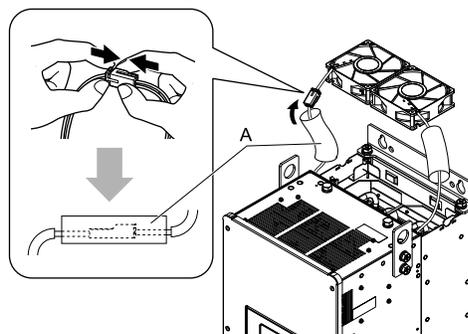

A - Protective tubes

Figure 1.41 Connect the Relay Connectors

- Align the notches on the fan with the pins on the drive and install the cooling fans in the drive.

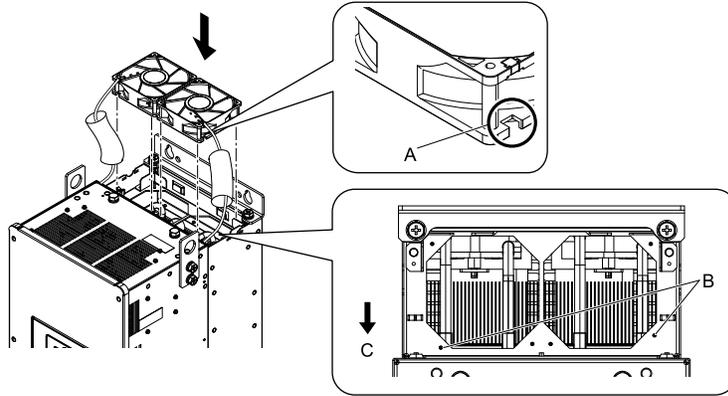


A - Notch on fan  
B - Alignment pins on drive

C - Front of drive

Figure 1.42 Install the Cooling Fans

- Put the cables and connectors in the recess of the drive.

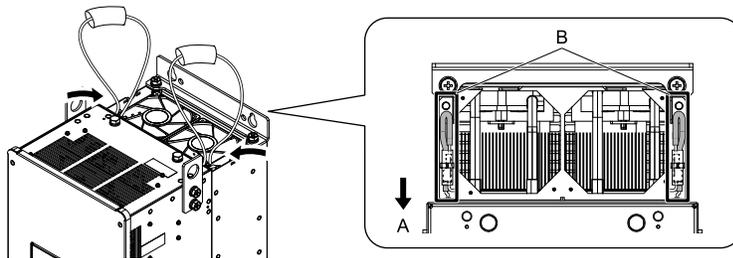


A - Front of drive

B - Recess for cables and connectors \*1

Figure 1.43 Put the Cables and Connectors in the Drive Recess

\*1 Make sure that the cables and connectors are in the correct space.

- Hold the fan finger guard at an angle and put the connector tabs on the fan finger guard into the holes on the drive.

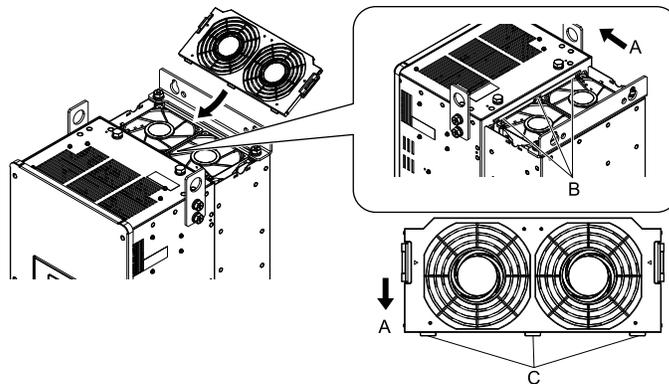

A - Front of drive  
B - Drive holes

C - Connector tabs

Figure 1.44 Install the Fan Finger Guard

5. Push the tabs on the left and right sides of the fan finger guard and click it into place on the drive.

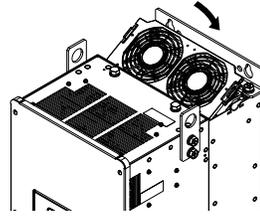


Figure 1.45 Install the Fan Finger Guard

6. Energize the drive and set  $\alpha 4-03 = 0$  [Fan Operation Time Setting = 0 h] to reset the fan operation time.

## ◆ Fan Replacement (Procedure E)


**DANGER! Electrical Shock Hazard.** Do not examine, connect, or disconnect wiring on an energized drive. Before servicing, disconnect all power to the equipment and wait for the time specified on the warning label at a minimum. The internal capacitor stays charged after the drive is de-energized. The charge indicator LED extinguishes when the DC bus voltage decreases below 50 Vdc. When all indicators are OFF, remove the covers before measuring for dangerous voltages to make sure that the drive is safe. If you do work on the drive when it is energized, it will cause serious injury or death from electrical shock.

**CAUTION! Burn Hazard.** Do not touch a hot drive heatsink. De-energize the drive, wait for a minimum of 15 minutes, then make sure that the heatsink is cool before you replace the cooling fans. If you touch a hot drive heatsink, it can burn you.

**NOTICE:** Use the instructions in this manual to replace the cooling fans. When you do maintenance on the fans, replace all the fans to increase product life. If you install the fans incorrectly, it can cause damage to the drive.

### ■ Fan Removal


1. Push the tabs on the left and right sides of the fan finger guard and pull up to remove the fan finger guard from the drive.

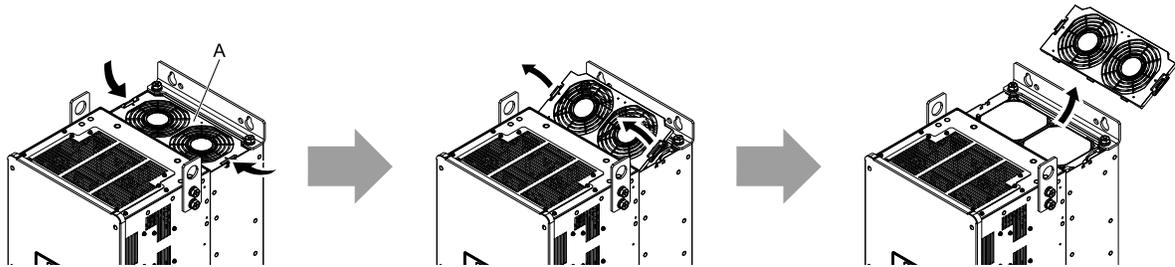

A - Fan finger guard

Figure 1.46 Remove the Fan Finger Guard

2. Pull the cooling fans straight up from the drive. Disconnect the relay connectors and remove the fans from the drive.

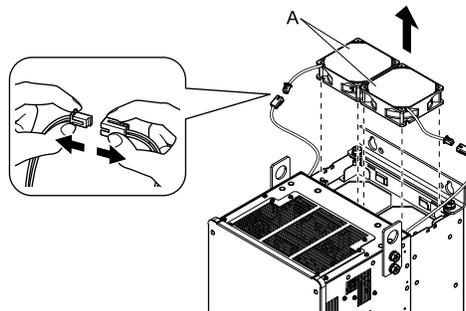

A - Cooling fans


Figure 1.47 Remove the Cooling Fans

### ■ Fan Installation

Reverse the removal procedure for fan installation.


## 1.4 Replace Cooling Fans and Circulation Fans

1. Connect the relay connectors between the drive and cooling fans.

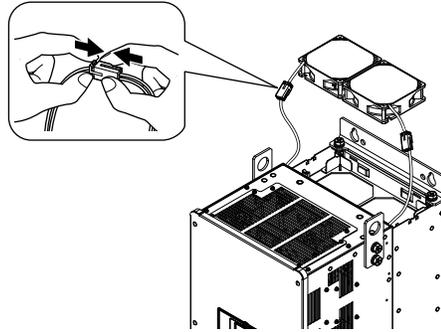

**Figure 1.48 Connect the Relay Connectors**

2. Align the notches on the fans with the pins on the drive and install the cooling fans in the drive.

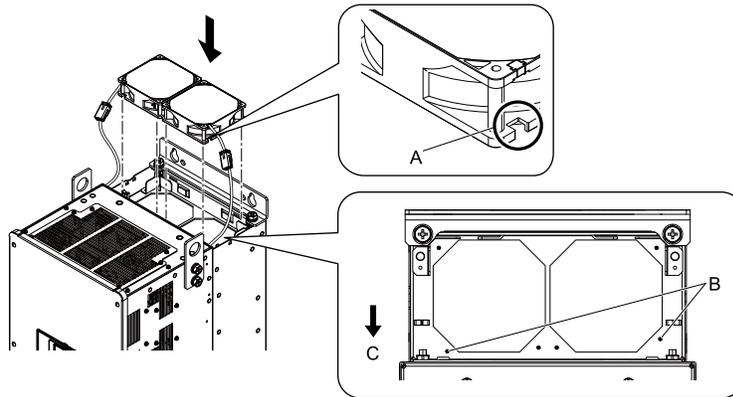


**A - Notch on fan**  
**B - Alignment pins on drive**

**C - Front of drive**

**Figure 1.49 Install the Cooling Fans**

3. Put the cables and connectors in the recess of the drive.

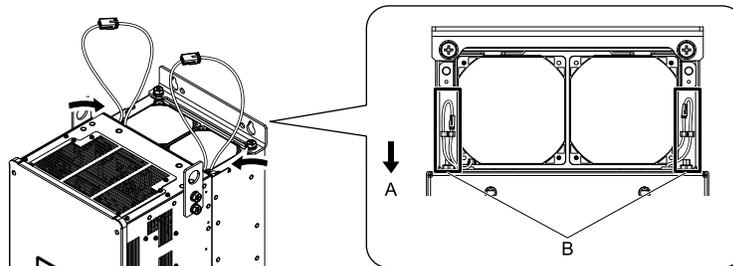


**A - Front of drive**

**B - Recess for cables and connectors <sup>\*1</sup>**

**Figure 1.50 Put the Cables and Connectors in the Drive Recess**

<sup>\*1</sup> Make sure that the cables and connectors are in the correct space.

4. Hold the fan finger guard at an angle and put the connector tabs on the fan finger guard into the holes on the drive.

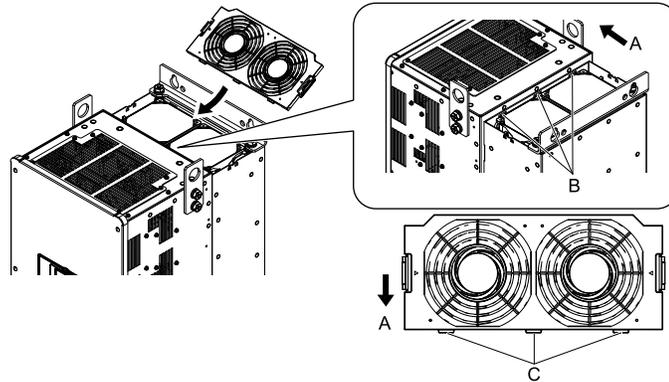

A - Front of drive  
B - Drive holes

C - Connector tabs

Figure 1.51 Install the Fan Finger Guard

5. Push the tabs on the left and right sides of the fan finger guard and click it into place on the drive.

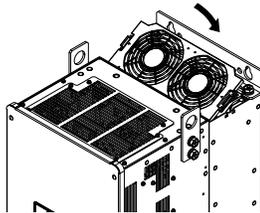


Figure 1.52 Install the Fan Finger Guard

6. Energize the drive and set  $\alpha 4-03 = 0$  [Fan Operation Time Setting = 0 h] to reset the fan operation time.

## ◆ Fan Replacement (Procedure F)


**DANGER! Electrical Shock Hazard.** Do not examine, connect, or disconnect wiring on an energized drive. Before servicing, disconnect all power to the equipment and wait for the time specified on the warning label at a minimum. The internal capacitor stays charged after the drive is de-energized. The charge indicator LED extinguishes when the DC bus voltage decreases below 50 Vdc. When all indicators are OFF, remove the covers before measuring for dangerous voltages to make sure that the drive is safe. If you do work on the drive when it is energized, it will cause serious injury or death from electrical shock.

**CAUTION! Burn Hazard.** Do not touch a hot drive heatsink. De-energize the drive, wait for a minimum of 15 minutes, then make sure that the heatsink is cool before you replace the cooling fans. If you touch a hot drive heatsink, it can burn you.

**NOTICE:** Use the instructions in this manual to replace the cooling fans. When you do maintenance on the fans, replace all the fans to increase product life. If you install the fans incorrectly, it can cause damage to the drive.

### ■ Fan Removal

1. Push the tab on the back side of each fan finger guard and pull up to remove the fan finger guards from the drive.

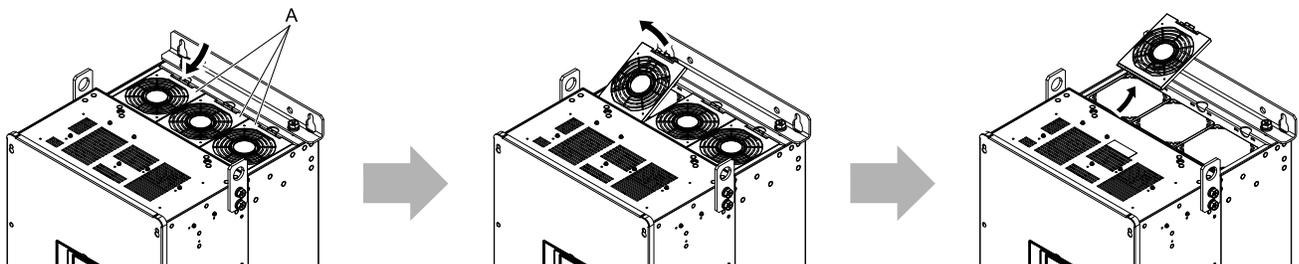

A - Fan finger guards


Figure 1.53 Remove the Fan Finger Guards

## 1.4 Replace Cooling Fans and Circulation Fans

2. Pull the cooling fans straight up from the drive. Disconnect the relay connectors to remove the fans from the drive.

**Note:**

The number of fans is different for different drive models.

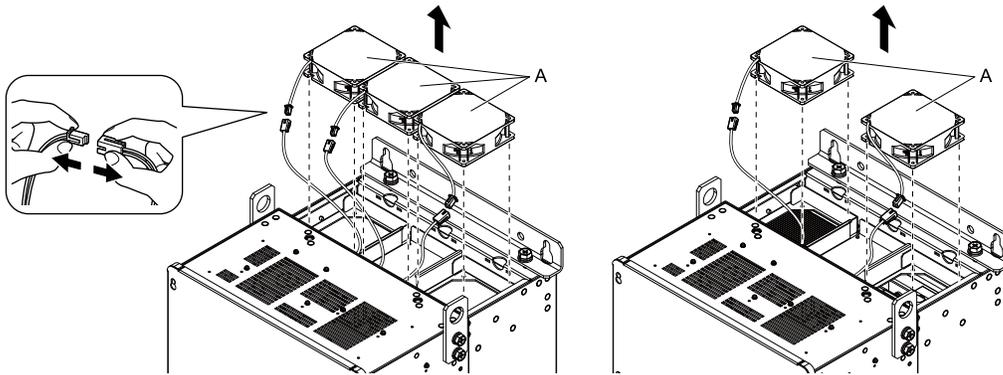


A - Cooling fans

**Figure 1.54 Remove the Cooling Fans**

### ■ Fan Installation


Reverse the removal procedure for fan installation.

1. Connect the relay connectors between the drive and cooling fans.

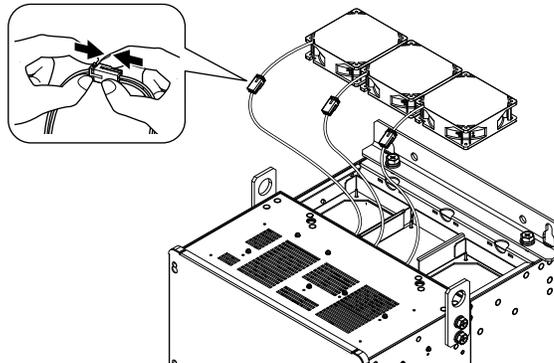

**Figure 1.55 Connect the Relay Connectors**

- Align the notches on the fans with the pins on the drive and install the cooling fans in the drive.

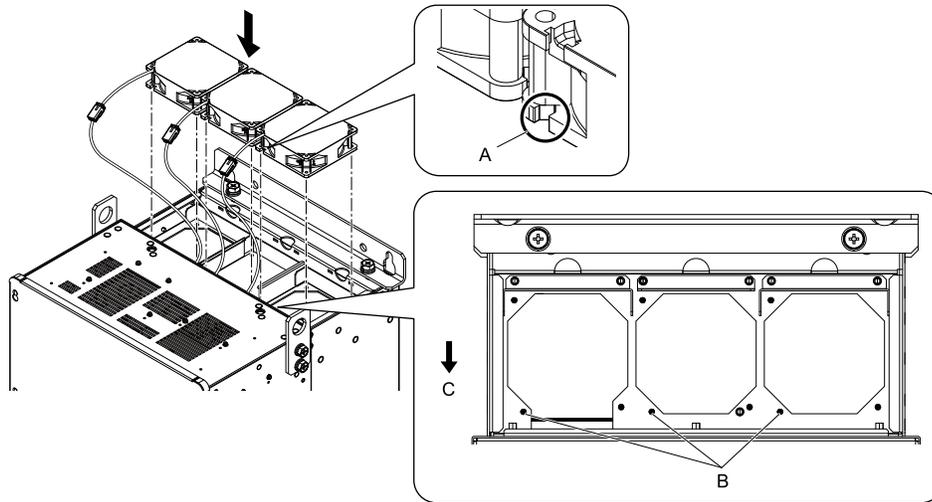


A - Notch on fan

B - Alignment pins on drive

C - Front of drive

Figure 1.56 Install the Cooling Fans

- Put the cables and connectors in the recess of the drive.

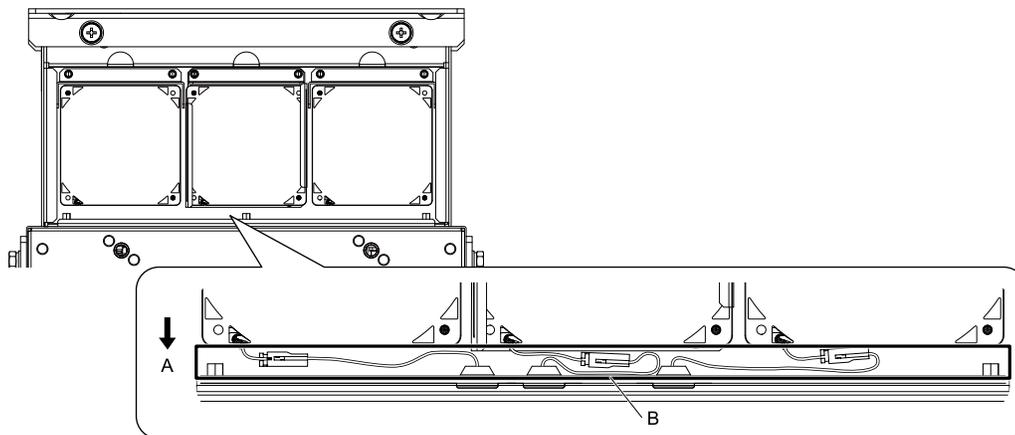

A - Front of drive

B - Recess for the cables and connectors \*1


Figure 1.57 Put the Cables and Connectors in the Drive Recess

\*1 Make sure that the cables and connectors are in the correct space.

- Hold the fan finger guards at an angle and put the connector tabs on the fan finger guards into the receiving areas on the drive.

**Note:**

When you install the cooling fans, make sure that you do not pinch cables between the fan finger guards and the drive.

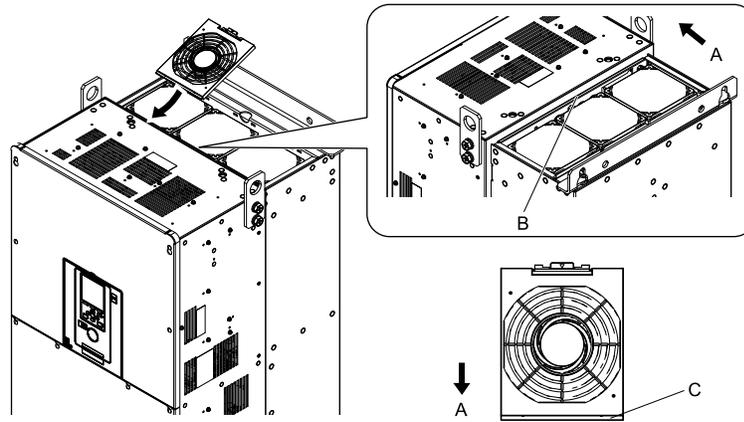


A - Front of drive  
B - Receiving area

C - Tab

**Figure 1.58 Install the Fan Finger Guards**

5. Push the tabs on the back side of the fan finger guards and click them into place on the drive.

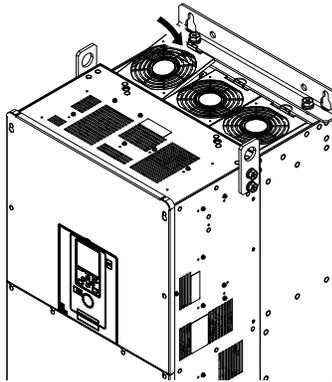

**Figure 1.59 Install the Fan Finger Guards**


6. Energize the drive and set  $\alpha 4-03 = 0$  [Fan Operation Time Setting = 0 h] to reset the fan operation time.

### ■ Circulation Fan Removal

Remove the drive cover before you start this procedure.

**CAUTION!** *Crush Hazard. Loosen the cover screws. Do not fully remove them. If you fully remove the cover screws, the terminal cover can fall and cause moderate injury.*

1. Remove the cable from the clamps.

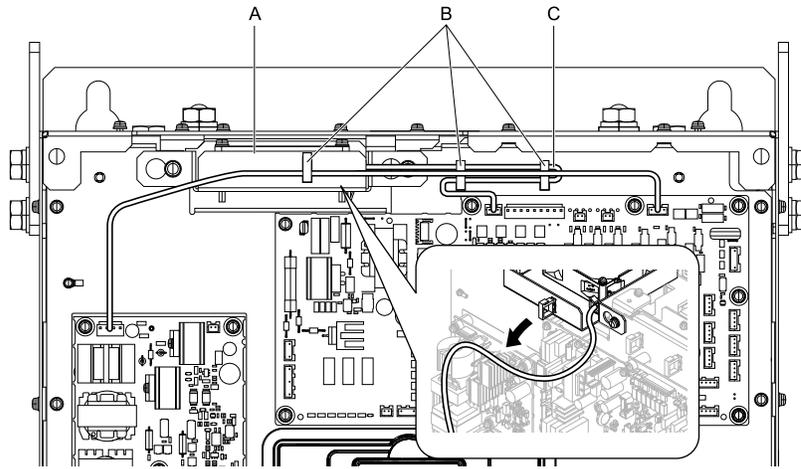

A - Fan unit  
B - Clamps


C - Fan cable

**Figure 1.60 Remove the Fan Cable**

2. Loosen the screws that safety the fan unit and slide the fan unit to the right.

**Note:**

To remove the fan unit, it is only necessary to loosen the screws.

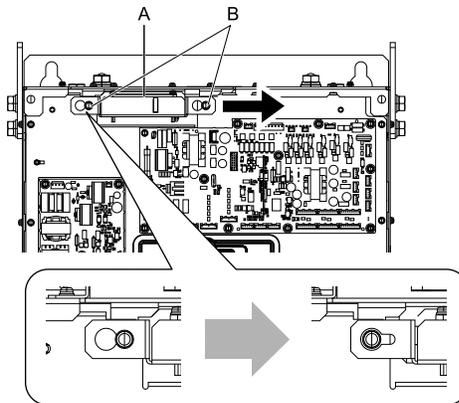


A - Fan unit

B - Screws


**Figure 1.61 Slide the Fan Unit**

3. Disconnect the relay connector and remove the fan unit.

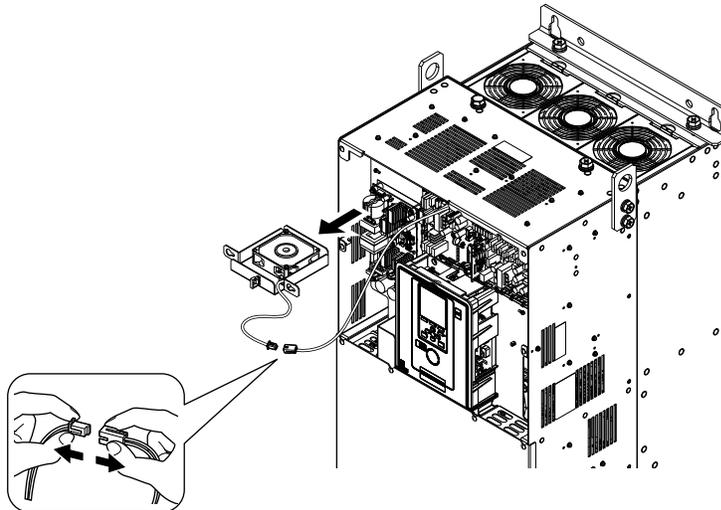

**Figure 1.62 Remove the Fan Unit**

4. Remove the screws that safety the circulation fan and remove the fan.

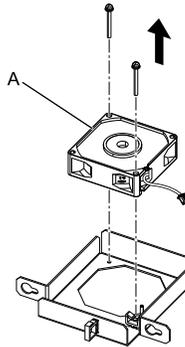


A - Circulation fan

**Figure 1.63 Remove the Circulation Fan**

### ■ Circulation Fan Installation

Reverse the removal procedure for fan installation.

1. Connect the relay connector between the drive and circulation fan.

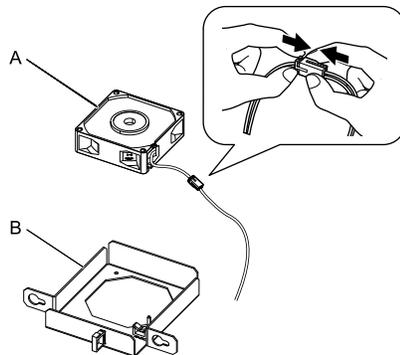


A - Circulation fan

B - Fan unit base

**Figure 1.64 Connect the Relay Connector**

- Align the pin on the fan unit base with the notch on the fan and put the fan in the fan unit base, then use the screws to safety it.  
Tighten the screws to a tightening torque of 0.98 N·m to 1.33 N·m (8.67 lbf·in to 11.77 lbf·in).

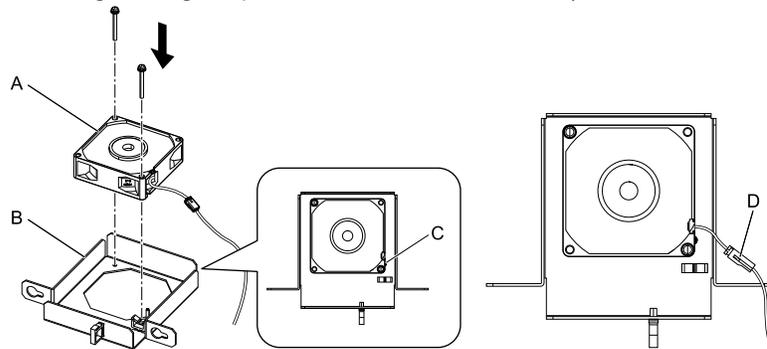


A - Circulation fan  
B - Fan unit base

C - Alignment pin on fan unit base  
D - Circulation fan connector

Figure 1.65 Install the Circulation Fan

- Safety the fan cable through the clamp.

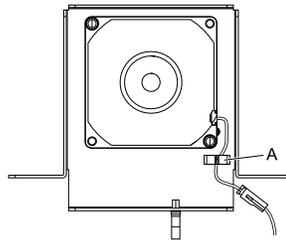

A - Clamp

Figure 1.66 Safety the Fan Cable

- Put the fan unit into the specified location and slide it to the left, then use screws to safety it to the drive.  
Tighten the screws to a tightening torque of 1.96 N·m to 2.53 N·m (17.35 lbf·in to 22.39 lbf·in).


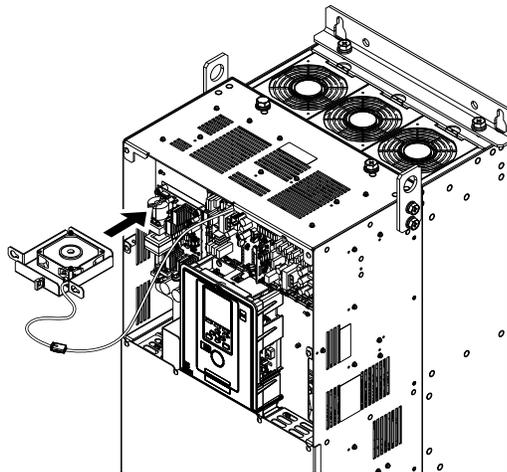


Figure 1.67 Install the Fan Unit

5. Safety the cable through the clamps.

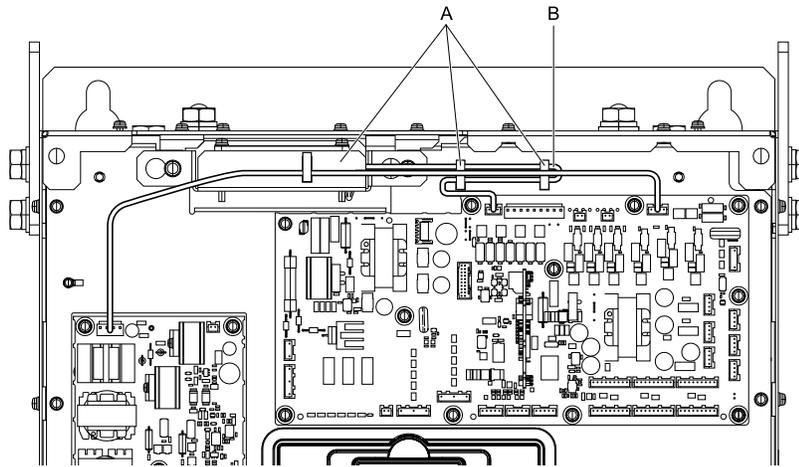

A - Clamps

B - Fan cable

Figure 1.68 Safety the Fan Cable through the Clamps

6. Install the drive cover.
7. Energize the drive and set  $\alpha 4-03 = 0$  [Fan Operation Time Setting = 0 h] to reset the fan operation time.

### ◆ Fan Replacement (Procedure G)

**DANGER!** *Electrical Shock Hazard. Do not examine, connect, or disconnect wiring on an energized drive. Before servicing, disconnect all power to the equipment and wait for the time specified on the warning label at a minimum. The internal capacitor stays charged after the drive is de-energized. The charge indicator LED extinguishes when the DC bus voltage decreases below 50 Vdc. When all indicators are OFF, remove the covers before measuring for dangerous voltages to make sure that the drive is safe. If you do work on the drive when it is energized, it will cause serious injury or death from electrical shock.*

**CAUTION!** *Burn Hazard. Do not touch a hot drive heatsink. De-energize the drive, wait for a minimum of 15 minutes, then make sure that the heatsink is cool before you replace the cooling fans. If you touch a hot drive heatsink, it can burn you.*


**NOTICE:** *Use the instructions in this manual to replace the cooling fans. When you do maintenance on the fans, replace all the fans to increase product life. If you install the fans incorrectly, it can cause damage to the drive.*

### ■ Fan Removal

1. Remove the drive cover.

**CAUTION!** *Crush Hazard. Loosen the cover screws. Do not fully remove them. If you fully remove the cover screws, the terminal cover can fall and cause moderate injury.*

2. Unplug the fan cable from the fan connectors.

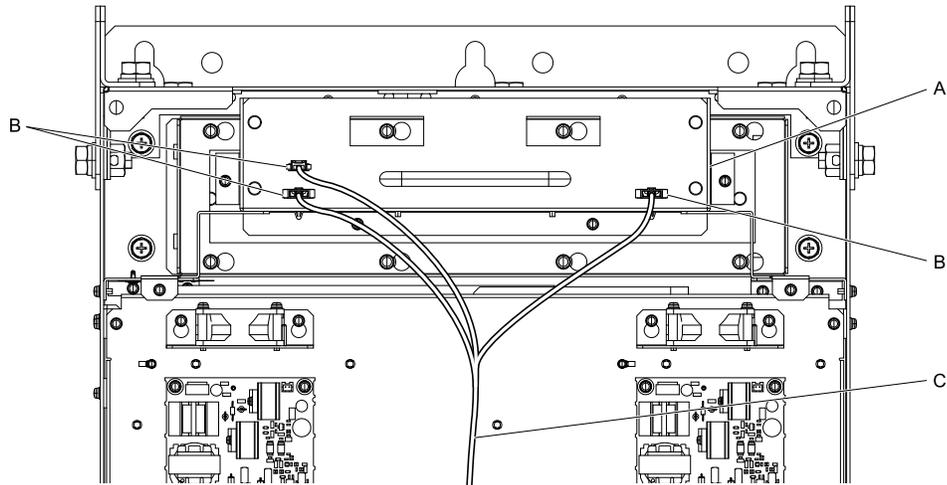

A - Fan unit  
B - Fan connectors


C - Fan cable

Figure 1.69 Remove the Fan Cable

3. Loosen the screws that safety the fan unit and slide the slide panel to the left.

**Note:**

- To remove the fan unit, it is only necessary to loosen the screws in position B.
- Remove the screws in position A.

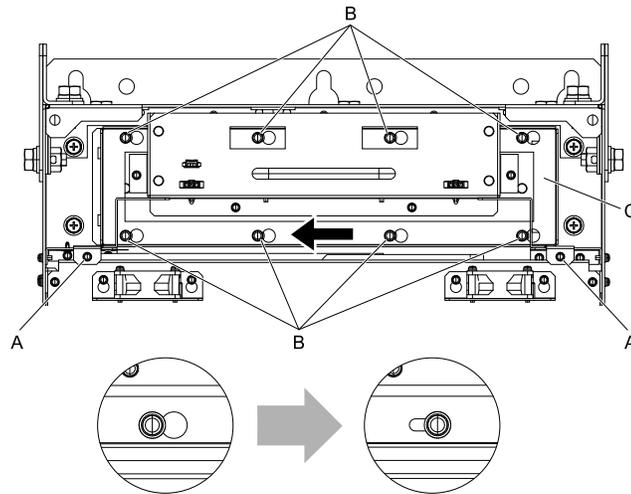

A - Screw position A  
B - Screw position B


C - Slide panel

Figure 1.70 Slide the Slide Panel

4. Remove the fan unit and the slide panel at the same time.


**Note:**

When you remove the fan unit, make sure that it does not fall.

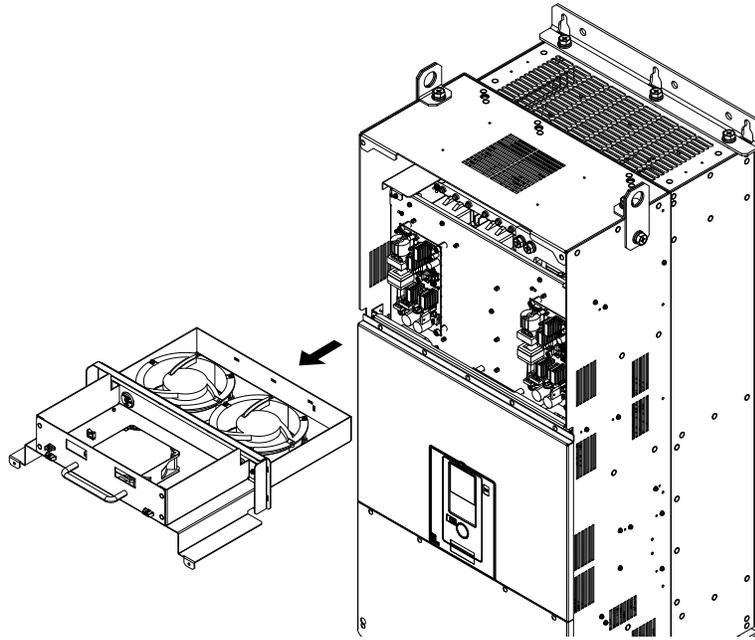

**Figure 1.71 Remove the Fan Unit**

5. Unplug the relay connectors, remove the screws that safety the cooling fans and circulation fan, and then remove the fans.

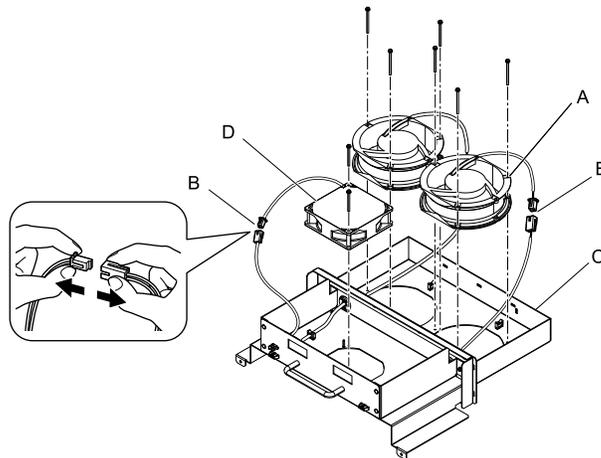

A - Cooling fans  
B - Relay connectors


C - Fan unit base  
D - Circulation fan

**Figure 1.72 Remove the Cooling Fans and Circulation Fan**

### ■ Fan Installation

Reverse the removal procedure for fan installation.

1. Connect the relay connectors on the fan unit base to the cooling fans and the circulation fan.

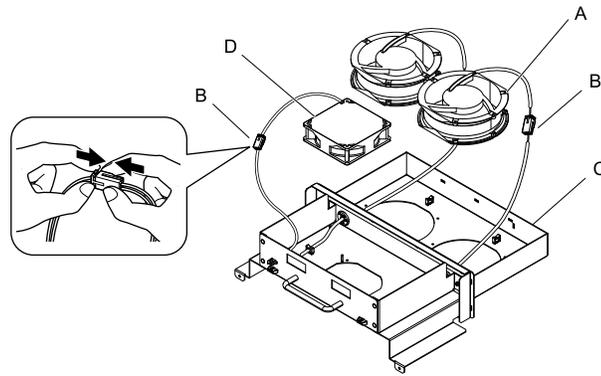

A - Cooling fans  
B - Relay connectors

C - Fan unit base  
D - Circulation fan


**Figure 1.73 Connect the Relay Connectors**

2. Align the pins on the fan unit base with the notches on the fans and put the fans in the fan unit base, then use the screws to safety them.

Tighten the M4 screws to a tightening torque of 0.98 N·m to 1.33 N·m (8.67 lbf·in to 11.77 lbf·in).

**Note:**

Make sure that you do not pinch cables between the fans and the fan unit base.

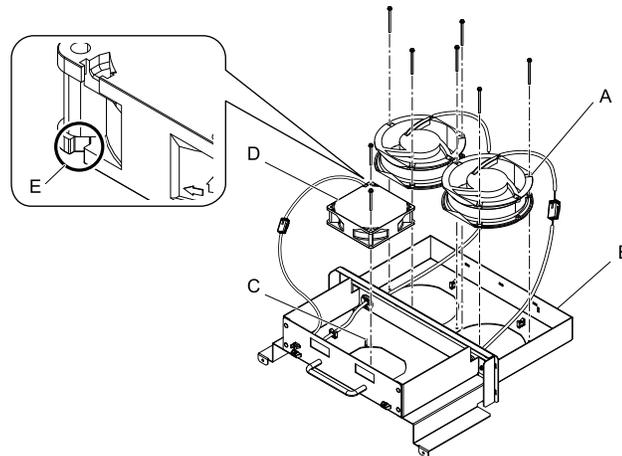

A - Cooling fans  
B - Fan unit base  
C - Alignment pin on fan unit base

D - Circulation fan  
E - Notch on fan


**Figure 1.74 Install the Cooling Fans and Circulation Fan**

3. Put the cables and connectors in the recess of the drive.

**Note:**

Safety the relay cables to the hooks.

## 1.4 Replace Cooling Fans and Circulation Fans

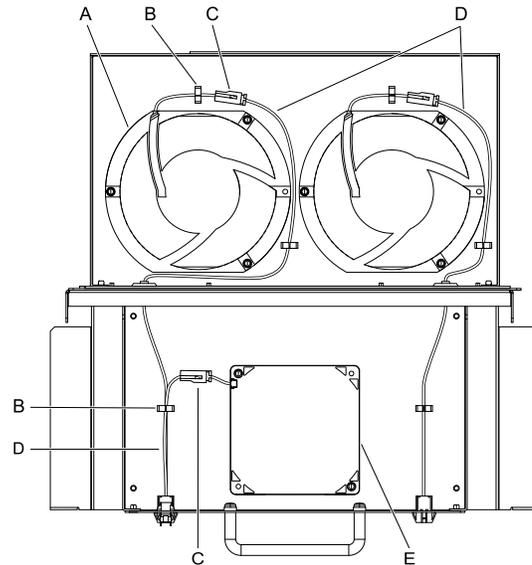


A - Cooling fans  
B - Cable hooks  
C - Relay connectors

D - Relay cables  
E - Circulation fan


**Figure 1.75 Put the Cables and Connectors in the Drive Recess**

- Put the fan unit into the specified location.

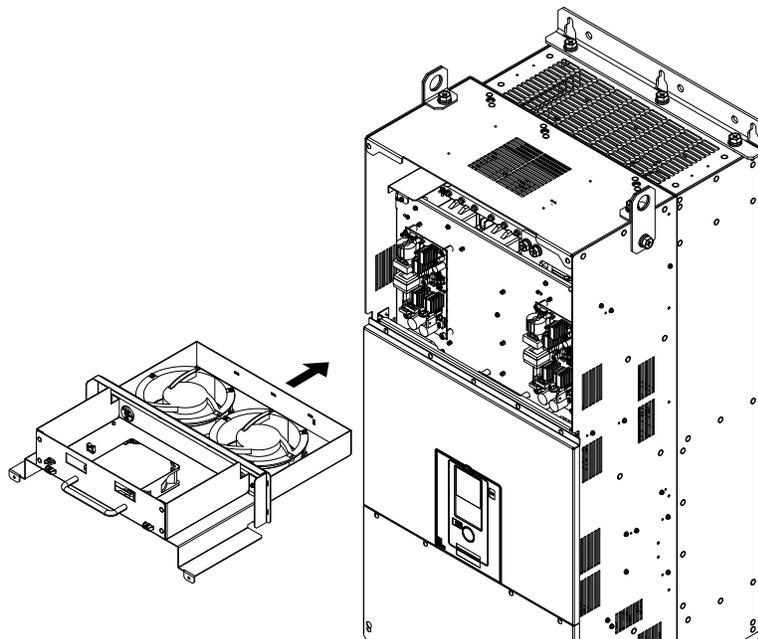

**Figure 1.76 Install the Fan Unit**

- Slide the fan unit to the right and use the screws to safety it to the drive.  
Tighten the screws to a correct tightening torque:
  - Screws in Position A: 0.98 N·m to 1.33 N·m (8.67 lbf-in to 11.77 lbf-in)
  - Screws in Position B: 1.96 N·m to 2.53 N·m (17.35 lbf-in to 22.39 lbf-in)

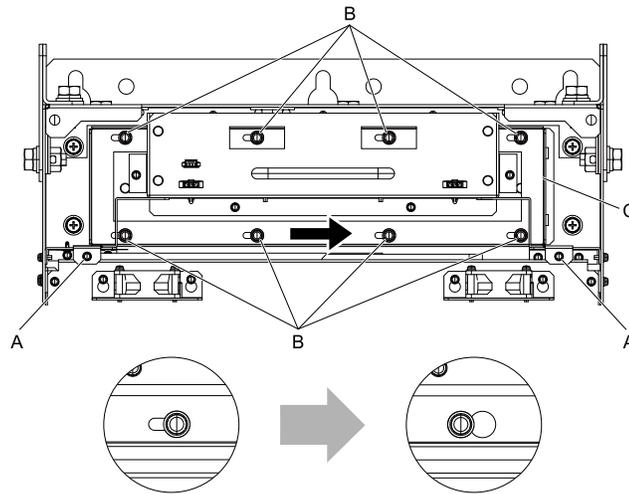


A - Screw position A  
B - Screw position B

C - Fan unit

Figure 1.77 Slide the Fan Unit

6. Connect the fan cable to the fan connectors.

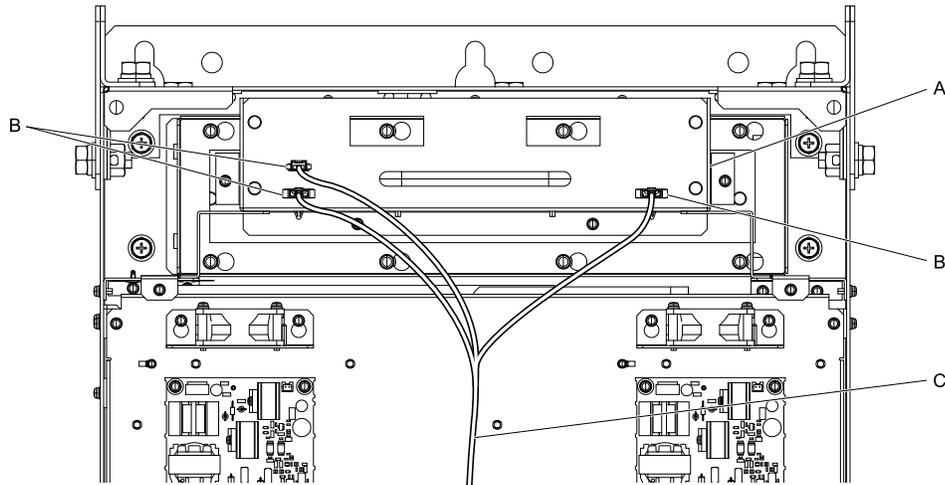

A - Fan unit  
B - Fan connectors

C - Fan cable

Figure 1.78 Connect Cooling Fan Connectors

7. Install the drive cover.
8. Energize the drive and set  $\alpha 4-03 = 0$  [*Fan Operation Time Setting = 0 h*] to reset the fan operation time.


### ■ Circuit Board Cooling Fan Removal

Remove the drive cover before you start this procedure.

**CAUTION!** *Crush Hazard. Loosen the cover screws. Do not fully remove them. If you fully remove the cover screws, the terminal cover can fall and cause moderate injury.*

## 1.4 Replace Cooling Fans and Circulation Fans

1. Disconnect the relay cables from the fan connectors.

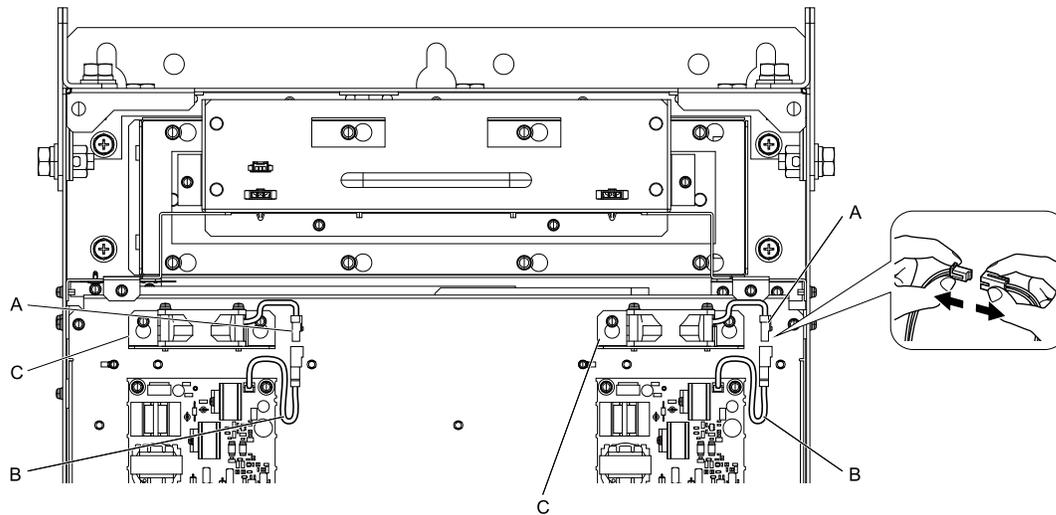

**A - Fan connectors**  
**B - Relay cables**


**C - Circuit board cooling fan units**

**Figure 1.79 Disconnect the Relay Cables**

2. Loosen the screws that safety the circuit board cooling fan unit and slide the circuit board cooling fan unit up.

**Note:**


To remove the fan unit, it is only necessary to loosen the screws.

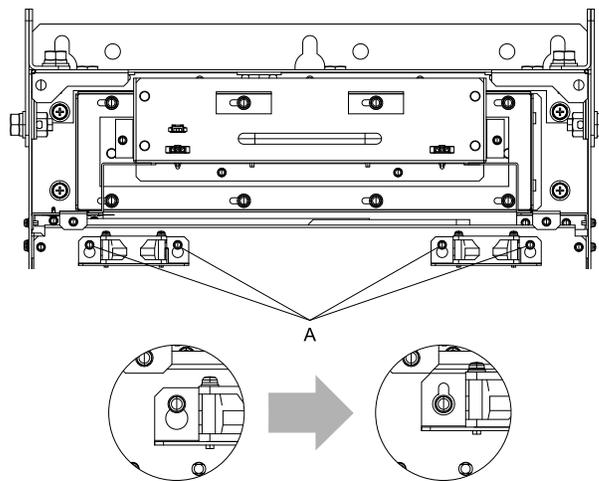

**A - Screws**


**Figure 1.80 Slide the Circuit Board Cooling Fan Units**

- Remove the circuit board cooling fan units.

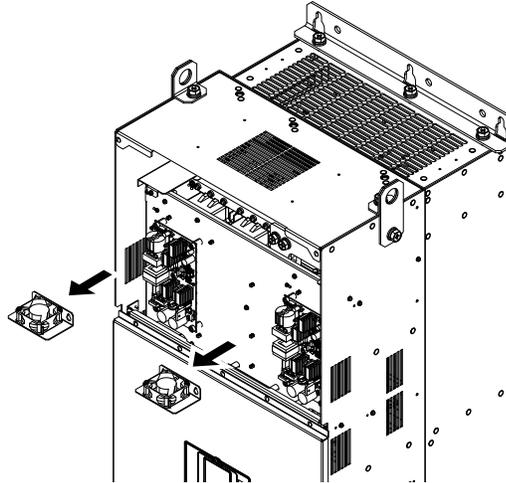

**Figure 1.81 Remove the Circuit Board Cooling Fan Units**

- Remove the screws that safety the circuit board cooling fans and remove the fans.

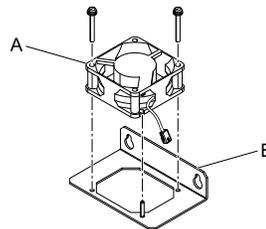

**A - Circuit board cooling fan**

**B - Fan unit base**

**Figure 1.82 Remove the Circuit Board Cooling Fans**


## ■ Circuit Board Cooling Fan Installation

Reverse the removal procedure for fan installation.

- Align the pin on the fan unit base with the notch on the fan and put the circuit board cooling fan in the fan unit, then use the screws to safety the circuit board cooling fan to the fan unit base.  
Tighten the screws to a tightening torque of 0.98 N·m to 1.33 N·m (8.67 lbf·in to 11.77 lbf·in).

### Note:

Make sure that you do not pinch cables between the circuit board cooling fan and the fan unit base.

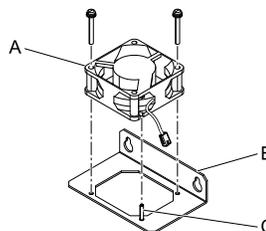

**A - Circuit board cooling fan**

**B - Fan unit base**

**C - Alignment pin on fan unit base**

**Figure 1.83 Install the Circuit Board Cooling Fan**

- Put the circuit board cooling fan unit into the specified location and slide it down, then use the screws to safety it to the drive.  
Tighten the screws to a tightening torque of 0.98 N·m to 1.33 N·m (8.67 lbf·in to 11.77 lbf·in).


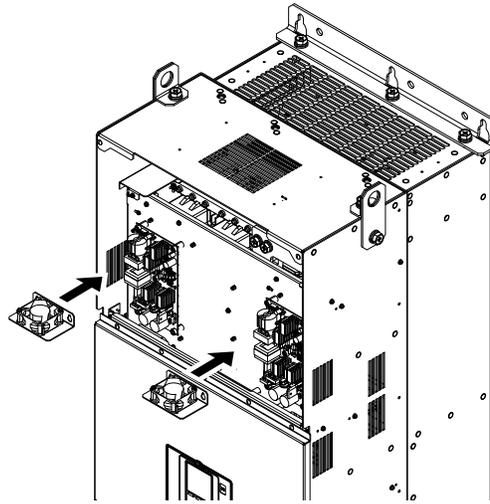


Figure 1.84 Install the Circuit Board Cooling Fan Unit

3. Connect the relay cables to the fan connectors.

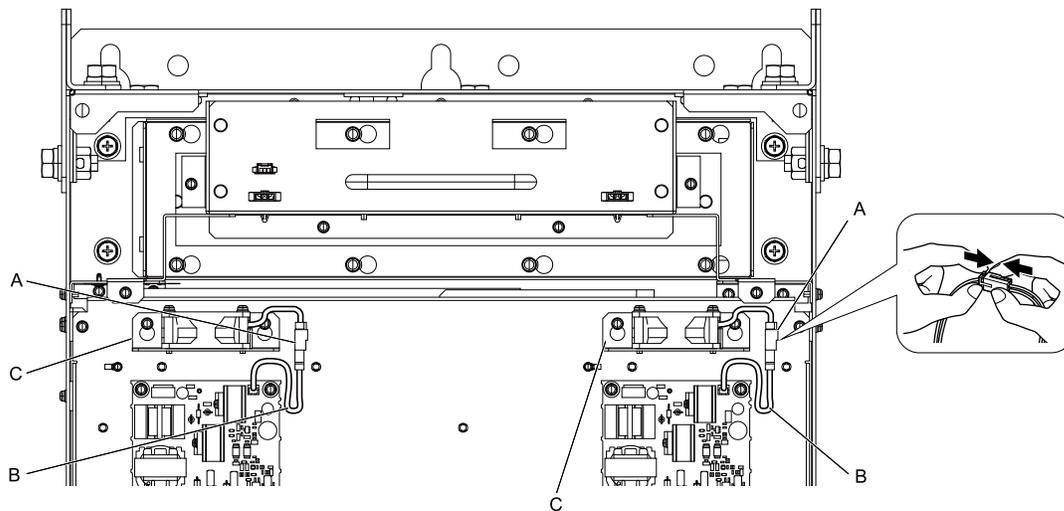

A - Fan connectors  
B - Relay cables

C - Circuit board cooling fan units

Figure 1.85 Connect the Relay Cables

4. Install the drive cover.
5. Energize the drive and set  $o4-03 = 0$  [Fan Operation Time Setting = 0 h] to reset the fan operation time.

## ◆ Fan Replacement (Procedure H)

**DANGER! Electrical Shock Hazard.** Do not examine, connect, or disconnect wiring on an energized drive. Before servicing, disconnect all power to the equipment and wait for the time specified on the warning label at a minimum. The internal capacitor stays charged after the drive is de-energized. The charge indicator LED extinguishes when the DC bus voltage decreases below 50 Vdc. When all indicators are OFF, remove the covers before measuring for dangerous voltages to make sure that the drive is safe. If you do work on the drive when it is energized, it will cause serious injury or death from electrical shock.

**CAUTION! Burn Hazard.** Do not touch a hot drive heatsink. De-energize the drive, wait for a minimum of 15 minutes, then make sure that the heatsink is cool before you replace the cooling fans. If you touch a hot drive heatsink, it can burn you.


**NOTICE:** Use the instructions in this manual to replace the cooling fans. When you do maintenance on the fans, replace all the fans to increase product life. If you install the fans incorrectly, it can cause damage to the drive.

## ■ Fan Removal

1. Remove the drive cover.

**CAUTION!** *Crush Hazard. Loosen the cover screws. Do not fully remove them. If you fully remove the cover screws, the terminal cover can fall and cause moderate injury.*

2. Unplug the fan cables from the fan connectors.

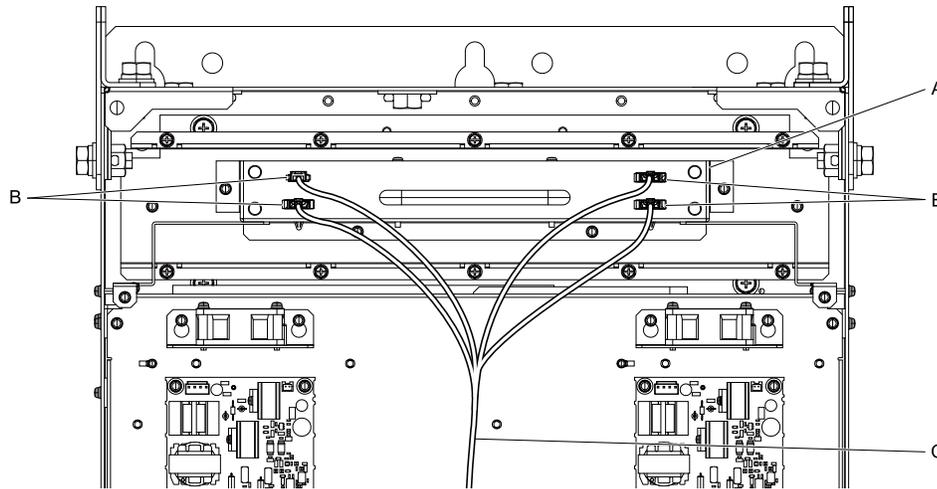

A - Fan unit  
B - Fan connectors


C - Fan cable

Figure 1.86 Unplug the Fan Cables

3. Loosen the screws that safety the fan unit.

**Note:**

- To remove the fan unit, it is only necessary to loosen the screws in position B.
- Remove the screws in position A.

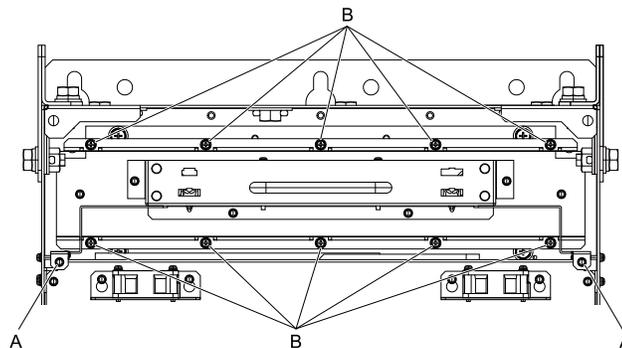

A - Screw position A


B - Screw position B

Figure 1.87 Loosen the Screws

4. Remove the fan unit.


**Note:**

When you remove the fan unit, make sure that it does not fall.

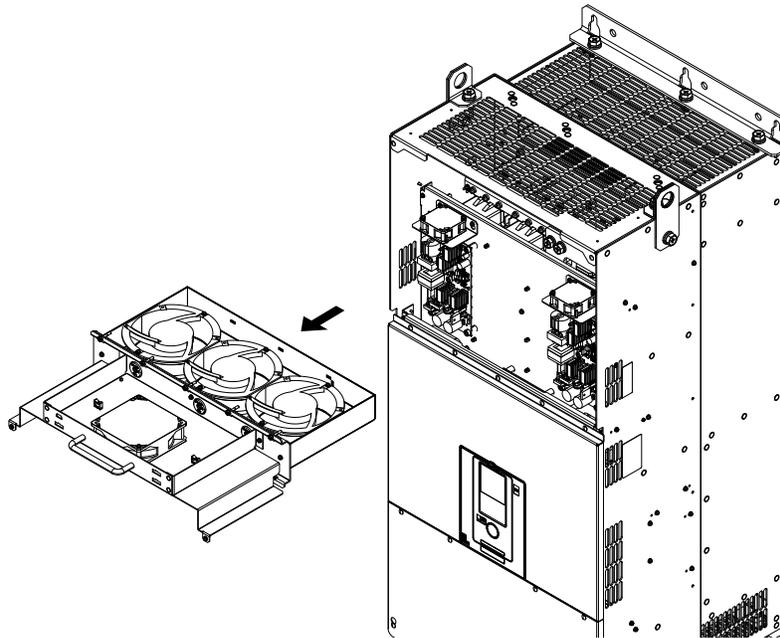

**Figure 1.88 Remove the Fan Unit**

5. Unplug the relay connectors, remove the screws that safety the cooling fans and circulation fan, and then remove the fans.

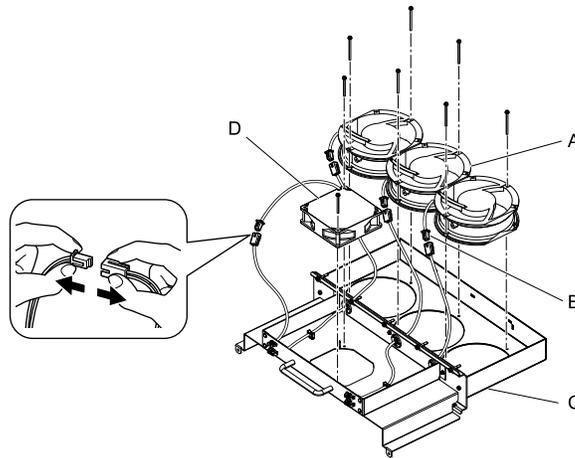

**A - Cooling fans**  
**B - Relay connectors**


**C - Fan unit base**  
**D - Circulation fan**

**Figure 1.89 Remove the Cooling Fans and Circulation Fan**

### ■ Fan Installation

Reverse the removal procedure for fan installation.

1. Connect the relay connectors on the fan unit base to the cooling fans and the circulation fan.

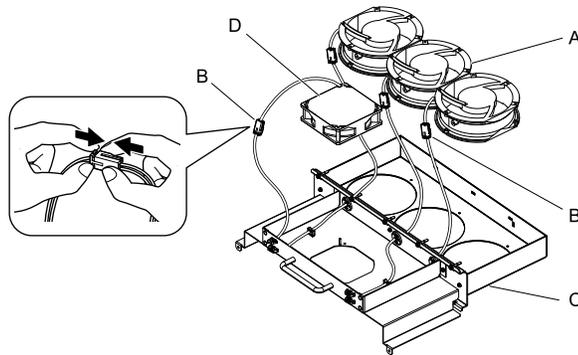

A - Cooling fans  
B - Relay connectors

C - Fan unit base  
D - Circulation fan


**Figure 1.90 Connect the Relay Connectors**

2. Align the pins on the fan unit base with the notches on the fans and put the fans in the fan unit base, then use the screws to safety them.

Tighten the M4 screws to a tightening torque of 0.98 N·m to 1.33 N·m (8.67 lbf·in to 11.77 lbf·in).

**Note:**

Make sure that you do not pinch cables between the fans and the fan unit base.

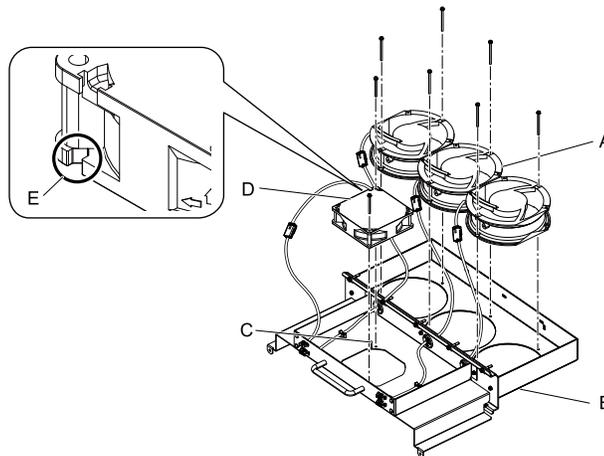

A - Cooling fans  
B - Fan unit base  
C - Alignment pin on fan unit base

D - Circulation fan  
E - Notch on fan


**Figure 1.91 Install the Cooling Fans and Circulation Fan**

3. Put the cables and connectors in the recess of the drive.

**Note:**

Safety the relay cables to the hooks.

## 1.4 Replace Cooling Fans and Circulation Fans

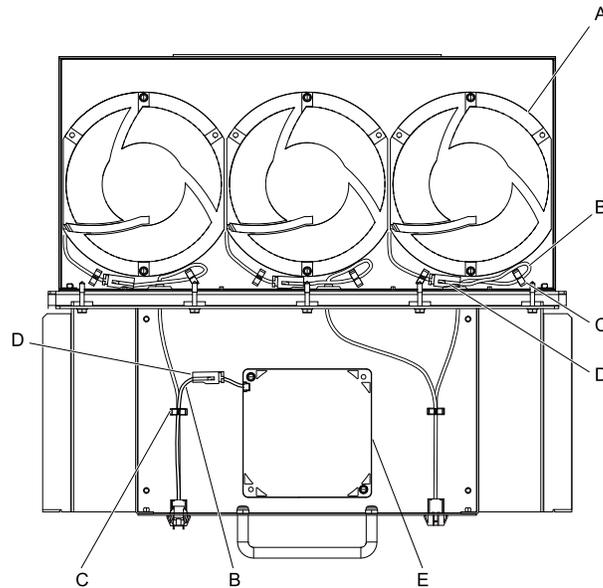


**A - Cooling fans**  
**B - Relay cables**  
**C - Cable hooks**

**D - Relay connectors**  
**E - Circulation fan**

4. Put the fan unit into the specified location and use screws to safety it to the drive.

Tighten the screws to a correct tightening torque:

- Screws in Position A: 0.98 N·m to 1.33 N·m (8.67 lbf·in to 11.77 lbf·in)
- Screws in Position B: 1.96 N·m to 2.53 N·m (17.35 lbf·in to 22.39 lbf·in)

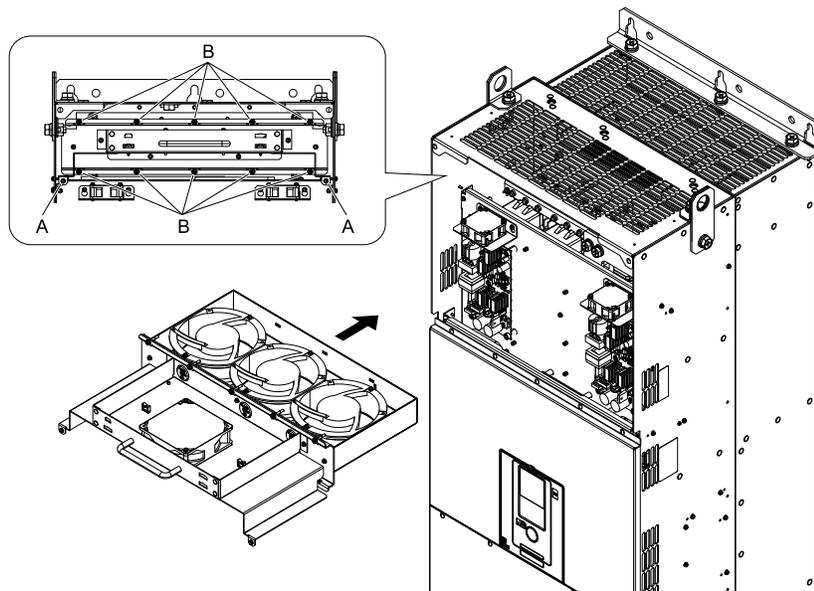


**A - Screw position A**

**B - Screw position B**

**Figure 1.92 Install the Fan Unit**

5. Connect the fan cable to the fan connectors.

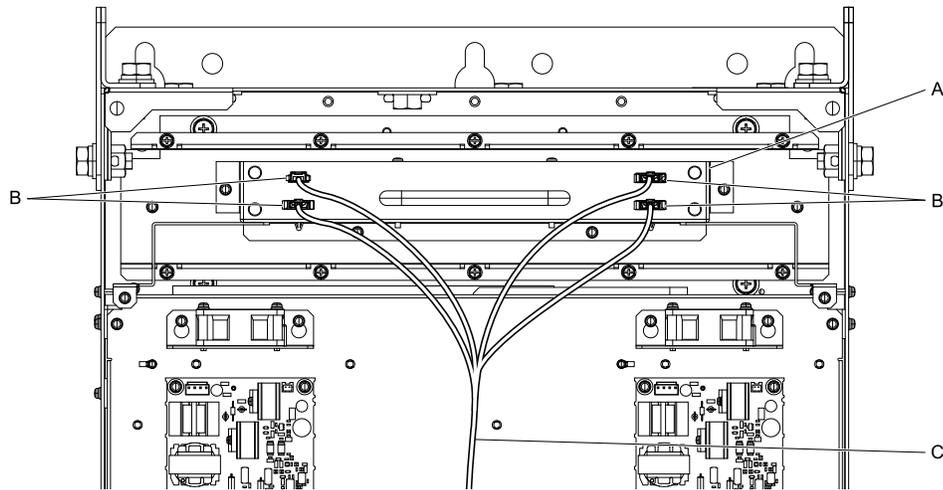

A - Fan unit  
B - Fan connectors

C - Fan cable

Figure 1.93 Connect Cooling Fan Connectors


6. Install the drive cover.
7. Energize the drive and set  $\alpha 4-03 = 0$  [Fan Operation Time Setting = 0 h] to reset the fan operation time.

### ■ Circuit Board Cooling Fan Removal

Remove the drive cover before you start this procedure.

**CAUTION!** Crush Hazard. Loosen the cover screws. Do not fully remove them. If you fully remove the cover screws, the terminal cover can fall and cause moderate injury.

1. Disconnect the relay cables from the fan connectors.

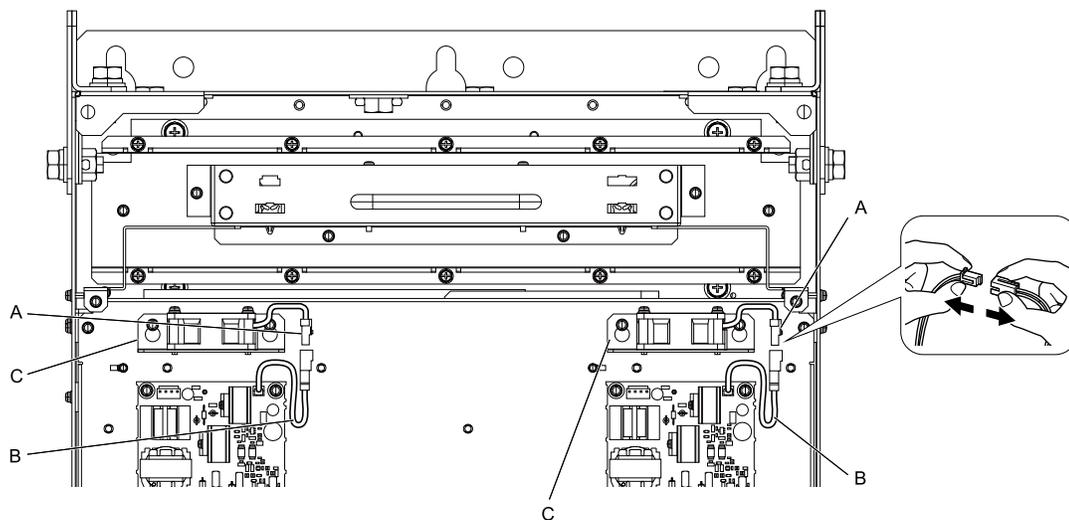

A - Fan connectors  
B - Relay cables


C - Circuit board cooling fan units

Figure 1.94 Disconnect the Relay Cables

2. Loosen the screws that safety the circuit board cooling fan unit and slide the circuit board cooling fan unit up.

**Note:**

To remove the fan unit, it is only necessary to loosen the screws.

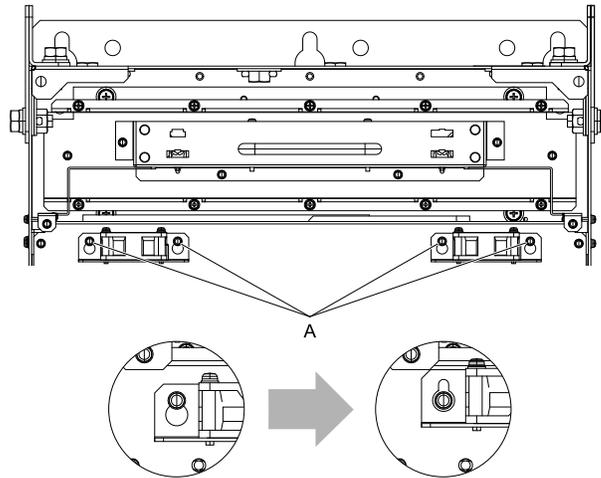

A - Screws

Figure 1.95 Slide the Circuit Board Cooling Fan Unit

3. Remove the circuit board cooling fan units.


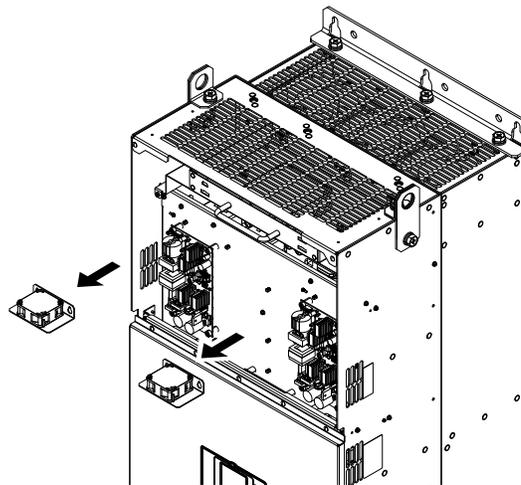


Figure 1.96 Remove the Circuit Board Cooling Fan Units

4. Remove the screws that safety the circuit board cooling fans and remove the fans.

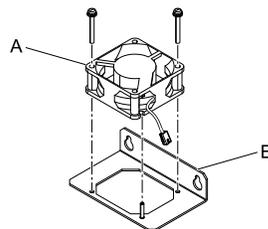

A - Circuit board cooling fan

B - Fan unit base

Figure 1.97 Remove the Circuit Board Cooling Fans


### ■ Circuit Board Cooling Fan Installation

Reverse the removal procedure for fan installation.

1. Align the pin on the fan unit base with the notch on the fan and put the circuit board cooling fan in the fan unit, then use the screws to safety the circuit board cooling fan to the fan unit base.  
Tighten the screws to a tightening torque of 0.98 N·m to 1.33 N·m (8.67 lbf·in to 11.77 lbf·in).

**Note:**

Make sure that you do not pinch cables between the circuit board cooling fan and the fan unit base.

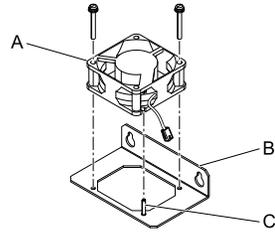


**A - Circuit board cooling fan**  
**B - Fan unit base**

**C - Alignment pin on fan unit base**


**Figure 1.98 Install the Circuit Board Cooling Fan**

- Put the circuit board cooling fan unit into the specified location and use screws to safety it to the drive. Tighten the screws to a tightening torque of 0.98 N·m to 1.33 N·m (8.67 lbf·in to 11.77 lbf·in).

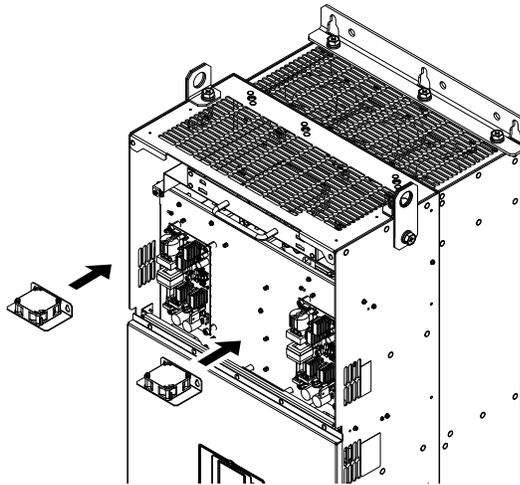

**Figure 1.99 Install the Circuit Board Cooling Fan Unit**

- Connect the relay cables to the fan connectors.

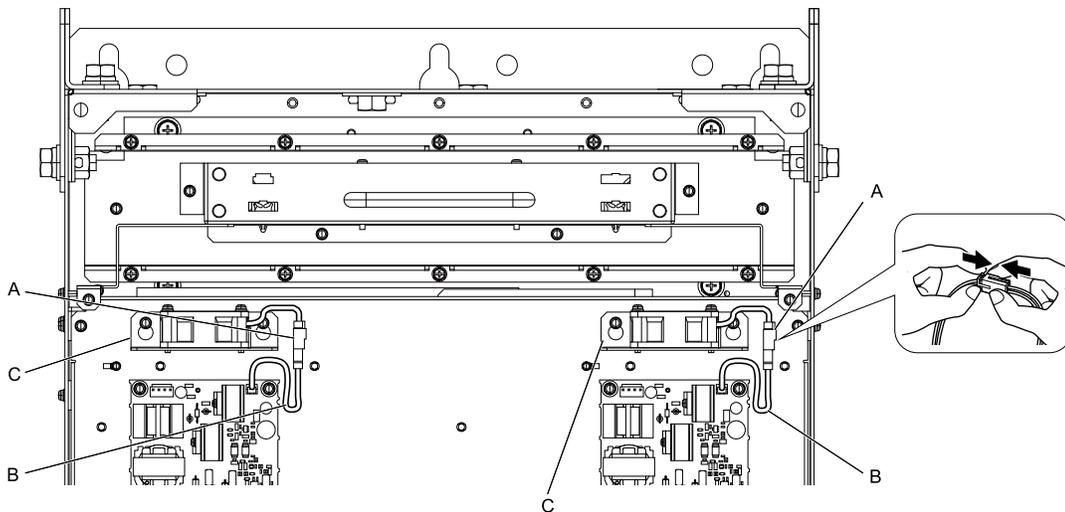

**A - Fan connectors**  
**B - Relay cables**

**C - Circuit board cooling fan units**

**Figure 1.100 Connect the Relay Cables**

- Install the drive cover.

## 1.4 Replace Cooling Fans and Circulation Fans

---

5. Energize the drive and set  $o4-03 = 0$  [*Fan Operation Time Setting = 0 h*] to reset the fan operation time.

## 1.5 Replace the Keypad Battery

When the keypad battery is expired, the date and time go back to the default settings. Use this procedure to replace the battery.

**WARNING! Fire Hazard.** Handle keypad batteries properly. Do not charge the battery or disassemble the keypad. If the battery explodes, it can cause a fire.

To replace the battery, use a Hitachi Maxell “CR2016 Lithium Manganese Dioxide Lithium Battery” or an equivalent battery with these properties:

- Nominal voltage: 3 V
- Operating temperature range: -20 °C to + 85°C (-4 °F to +185 °F)


**WARNING! Fire Hazard.** Do not disassemble batteries. Do not expose batteries to heat or fire. If the battery explodes, it can cause a fire.

**NOTICE: Damage to Equipment.** The keypad battery stays in use after you de-energize the drive. When you will keep the drive de-energized for long periods of time, remove the battery from the keypad. When the expected life of the battery is complete, replace the battery immediately. A dead battery in the keypad can leak and cause damage to the keypad and drive.

The performance life estimate of a new battery is:

- Ambient temperature 20 °C (68 °F): 5 years
- Ambient temperature -10 °C to +50 °C (14 °F to 122 °F): 3.5 years

1. De-energize the drive and remove the keypad.
2. Use a slotted screwdriver or other tool to turn the battery cover counterclockwise and remove the cover.

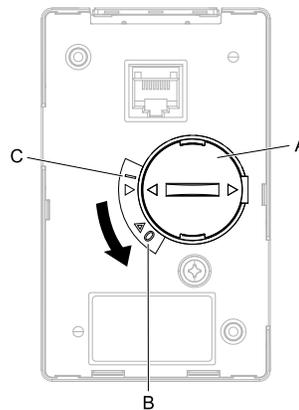

**A - Battery cover**  
**B - Opened**


**C - Closed**

**Figure 1.101 Remove the Battery Cover**

3. Remove the used battery from the keypad.
4. Insert the new battery.

**Note:**

- The battery cover side is the positive pole. Make sure that the polarity is correct when you put the battery in the keypad.
- Discard the used battery as specified by local regulations.

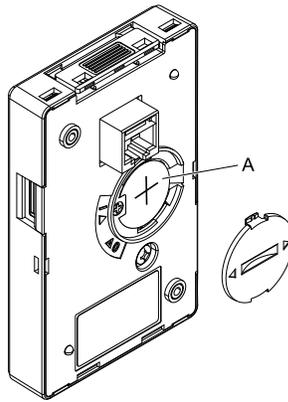

### A - Battery

**Figure 1.102 Insert the New Battery**

5. Put the battery cover on the keypad and use a slotted screwdriver to turn the battery cover clockwise to close it.
6. Install the keypad on the drive.

## 1.6 Storage Guidelines

The chemicals in the electrolytic capacitors and other electronic parts of the drive change over time. When you store the drive for long periods of time, use the information in this section to help keep the performance life estimates.

### ◆ Storage Location

- Temperature and Humidity

When you store the drive for approximately one month, for example during shipping, you can put the drive in a location where the temperature is  $-20\text{ }^{\circ}\text{C}$  to  $+70\text{ }^{\circ}\text{C}$  ( $-4\text{ }^{\circ}\text{F}$  to  $+158\text{ }^{\circ}\text{F}$ ). Correctly package and store the drive during shipping to prevent vibration and impact damage.

Do not put the drive in direct sunlight or where there will be condensation or ice. Put the drive in a location where the relative humidity is 95% or less.

- Dust and Oil Mist

Do not keep the drive locations with dust or oil mist. For example, cement factories and cotton mills.

- Corrosive Gas

Do not keep the drive in locations with corrosive gas. For example, chemical plants, refineries, and sewage plants.

- Salt Damage


Do not keep the drive in salty locations. For example, locations near the ocean, and salt damage-designated locations.

Do not keep the drive in unsatisfactory locations. Keep all drives in storage rooms that are safe from unsatisfactory elements.

### ◆ Regular Application of Power

To prevent deterioration of the capacitors, Yaskawa recommends that you apply power to the drive a minimum of one time each year for a minimum of 30 minutes.

If you store the drive for longer than two years and do not apply power, Yaskawa recommends that you use a variable power source and gradually increase the power from 0 V to the rated drive voltage over a period of 2 to 3 minutes. Apply power for a minimum of 1 hour with no load to reform the main circuit electrolytic capacitor. When you operate the drive after you apply power, wire the drive correctly and check for drive faults, overcurrents, motor vibration, motor speed differences, and other defects during operation.

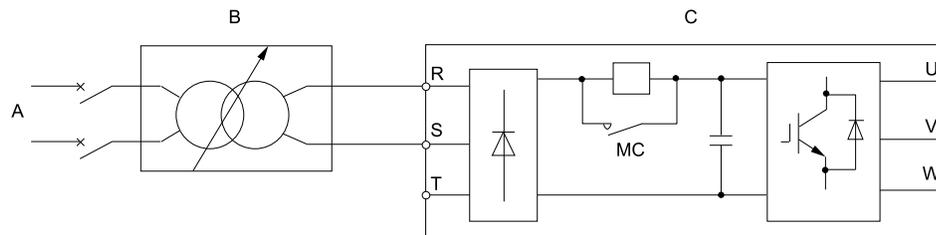

A - AC power supply

B - Variable power source

C - Drive

Figure 1.103 Power Distribution Method



# Troubleshooting

---

<b>2.1</b>	<b>Section Safety .....</b>	<b>76</b>
<b>2.2</b>	<b>Types of Faults, Minor Faults, Alarms, and Errors .....</b>	<b>78</b>
<b>2.3</b>	<b>List of Fault, Minor Fault, Alarm, and Error Codes .....</b>	<b>79</b>
<b>2.4</b>	<b>Fault .....</b>	<b>86</b>
<b>2.5</b>	<b>Minor Faults/Alarms .....</b>	<b>111</b>
<b>2.6</b>	<b>Parameter Setting Errors.....</b>	<b>124</b>
<b>2.7</b>	<b>Auto-Tuning Errors .....</b>	<b>129</b>
<b>2.8</b>	<b>Backup Function Operating Mode Display and Errors.....</b>	<b>132</b>
<b>2.9</b>	<b>Diagnosing and Resetting Faults .....</b>	<b>134</b>
<b>2.10</b>	<b>Troubleshooting Without Fault Display.....</b>	<b>136</b>

## 2.1 Section Safety

### DANGER

#### Electrical Shock Hazard

**Do not examine, connect, or disconnect wiring on an energized drive. Before servicing, disconnect all power to the equipment and wait for the time specified on the warning label at a minimum. The internal capacitor stays charged after the drive is de-energized. The charge indicator LED extinguishes when the DC bus voltage decreases below 50 Vdc. When all indicators are OFF, remove the covers before measuring for dangerous voltages to make sure that the drive is safe.**

If you do work on the drive when it is energized, it will cause serious injury or death from electrical shock.

### WARNING

#### Electrical Shock Hazard

**Do not operate the drive when covers are missing. Replace covers and shields before you operate the drive. Use the drive only as specified by the instructions.**

Some figures in this section include drives without covers or safety shields to more clearly show the inside of the drive. If covers or safety shields are missing from the drive, it can cause serious injury or death.

**Always ground the motor-side grounding terminal.**

If you do not ground the equipment correctly, it can cause serious injury or death if you touch the motor case.

**After the drive blows a fuse or trips a GFCI, do not immediately energize the drive or operate peripheral devices. Wait for the time specified on the warning label at a minimum and make sure that all indicators are OFF. Then check the wiring and peripheral device ratings to find the cause of the problem. If you do not know the cause of the problem, contact Yaskawa before you energize the drive or peripheral devices.**

If you do not fix the problem before you operate the drive or peripheral devices, it can cause serious injury or death.

**Only let approved personnel install, wire, maintain, examine, replace parts, and repair the drive.**

If personnel are not approved, it can cause serious injury or death.

**Do not wear loose clothing or jewelry when you do work on the drive. Tighten loose clothing and remove all metal objects, for example watches or rings.**

Loose clothing can catch on the drive and jewelry can conduct electricity and cause serious injury or death.

**Do not remove covers or touch circuit boards while the drive is energized.**

If you touch the internal components of an energized drive, it can cause serious injury or death.

**Do not modify the drive body or drive circuitry.**

Modifications to drive body and circuitry can cause serious injury or death, will cause damage to the drive, and will void the warranty. Yaskawa is not responsible for modifications of the product made by the user.

#### Fire Hazard

**Tighten all terminal screws to the correct tightening torque.**

Connections that are too loose or too tight can cause incorrect operation and damage to the drive. Incorrect connections can also cause death or serious injury from fire.

**Tighten screws at an angle in the specified range shown in this manual.**

If you tighten the screws at an angle not in the specified range, you can have loose connections that can cause damage to the terminal block or start a fire and cause serious injury or death.

#### Damage to Equipment

**Do not apply incorrect voltage to the main circuit of the drive. Operate the drive in the specified range of the input voltage on the drive nameplate.**

Voltages that are higher than the permitted nameplate tolerance can cause damage to the drive.

**⚠ WARNING****Fire Hazard**

**Do not put flammable or combustible materials on top of the drive and do not install the drive near flammable or combustible materials. Attach the drive to metal or other noncombustible material.**

Flammable and combustible materials can start a fire and cause serious injury or death.

**Crush Hazard**

**Wear eye protection when you do work on the drive.**

If you do not use correct safety equipment, it can cause serious injury or death.

**Use a crane or hoist to move large drives when necessary.**

If you try to move a large drive without a crane or hoist, it can cause serious injury or death.

**NOTICE****Damage to Equipment**

**When you touch the drive and circuit boards, make sure that you observe correct electrostatic discharge (ESD) procedures.**

If you do not follow procedures, it can cause ESD damage to the drive circuitry.

**Do not break the electrical connection between the drive and the motor when the drive is outputting voltage.**

Incorrect equipment sequencing can cause damage to the drive.

**Make sure that all connections are correct after you install the drive and connect peripheral devices.**

Incorrect connections can cause damage to the drive.

**Note:**

Do not use unshielded wire for control wiring. Use shielded, twisted-pair wires and ground the shield to the ground terminal of the drive. Unshielded wire can cause electrical interference and unsatisfactory system performance.

## 2.2 Types of Faults, Minor Faults, Alarms, and Errors

If the drive or motor do not operate correctly, check the drive keypad for a code or message.

If problems occur that are not identified in this manual, contact the nearest Yaskawa representative with this information:

- Drive model
- Drive software version
- Date of purchase
- Description of the problem (such as failure conditions)

Table 2.1 contains descriptions of the different types of faults, minor faults, alarms, and errors that can occur during drive operation.

Contact Yaskawa if there is damage to the drive. Contact information is on the back cover of the manual.

**Table 2.1 Types of Faults, Minor Faults, Alarms, and Errors**

Type	Drive Response
Faults	<p>When the drive detects a fault, it will cause these conditions:</p> <ul style="list-style-type: none"> <li>• The keypad shows the fault code and  and ALM/ERR of the LED Status Ring illuminate continuously.</li> <li>• The keypad shows the fault code and  and ALM/ERR on the LED Status Ring illuminate continuously when <math>o2-24 = 0</math> or <math>1</math> [<i>LED Light Function Selection = Enable Status Ring &amp; Keypad LED or LED Status Ring Disable</i>].</li> <li>• The drive shuts off output, and the motor coasts to a stop. Some faults let the user select a motor stopping method.</li> <li>• Fault relay output MA-MC will turn ON, and MB-MC will turn OFF.</li> </ul> <p>The drive will not operate until you clear the fault with a Fault Reset and the drive goes back to usual status.</p>
Minor Faults/Alarms	<p>When the drive detects a minor fault or an alarm, it will cause these conditions:</p> <ul style="list-style-type: none"> <li>• The keypad shows the alarm code and  and ALM/ERR on the LED Status Ring flash when <math>o2-24 = 0</math> or <math>1</math>.</li> <li>• The drive will continue to operate the motor. Some alarms let the user select a motor stopping method.</li> <li>• If the drive detects a minor fault, the terminal set to <math>H2-01</math> to <math>H2-03 = 10</math> [<i>MFDO Function Select = Alarm</i>] will switch ON. If you do not set parameters <math>H2-01</math> to <math>H2-03</math>, the drive will not trigger MFDO terminals when it detects a minor fault.</li> <li>• The drive will not output a minor fault signal when it detects an alarm.</li> </ul> <p>It is not necessary to do Fault Reset.</p>
Operation Errors	<p>An error occurs when parameter settings do not agree or a parameter combination is incorrect. The drive will not operate until you set the parameters correctly.</p> <p>When the drive detects an operation error, these conditions will result:</p> <ul style="list-style-type: none"> <li>• The keypad shows the error code.</li> <li>• Multi-function outputs do not output an alarm signal.</li> </ul> <p>Find the parameters that caused the error and correct the settings.</p>
Auto-Tuning Errors	<p>An error occurs during Auto-Tuning.</p> <p>When the drive detects a tuning error, it will cause these conditions:</p> <ul style="list-style-type: none"> <li>• The keypad shows the error code.</li> <li>• Multi-function outputs do not output an alarm signal.</li> <li>• The motor coasts to stop.</li> </ul> <p>Remove the cause of the error and do Auto-Tuning again.</p>
Copy Function Errors	<p>An error occurs when you use the keypad for a backup, restore, or verify operation.</p> <p>When the drive detects a copy function error, it will cause these conditions:</p> <ul style="list-style-type: none"> <li>• The keypad shows the error code.</li> <li>• Multi-function outputs do not output an alarm signal.</li> </ul> <p>Push a key on the keypad to clear the error. Remove the cause of the error and try the backup, restore, or verify operation again.</p>

**Note:**

If there is no information on the display when you energize the keypad, there can be a connection error. Remove the keypad and connect it again to make sure that you correctly connected the cable between the drive and the keypad.

## 2.3 List of Fault, Minor Fault, Alarm, and Error Codes

Table 2.2 shows the possible fault, minor fault, alarm, and error codes.

The display codes are in alphabetical order. Search the table for the code shown on the keypad, and identify its causes and possible solutions.

**Note:**

The number in parentheses adjacent to the code in the table identifies the fault code or minor fault code (hex. number) that was read during MEMOBUS/Modbus communications.

Example: AEr (0032)

**Table 2.2 List of Fault, Minor Fault, Alarm, and Error Codes**

Display (Hex.)	Name	ALM LED	Type	Ref.
AEr (0032)	Station Address Setting Error	Flashing	Alarm	111
AUXFB (00A4)	PI Aux Feedback Level Loss	Flashing	Alarm	111
AUXFB (0420)	PI Aux Feedback Level Loss	Illuminated	Fault	86
bAT (0085)	Keypad Battery Low Voltage	Flashing	Alarm	111
bAT (0402)	Keypad Battery Low Voltage	Illuminated	Fault	86
bb (0008)	Baseblock	Flashing	Alarm	111
bCE (008A)	Bluetooth Communication Error	Flashing	Alarm	111
bCE (0416)	Bluetooth Communication Fault	Illuminated	Fault	86
BuDif (00A6)	Main Fdbk Lost, Using Diff Fdbk	Flashing	Alarm	111
Bu-Fb (0090)	Main Fdbk Lost Using Backup Fdbk	Flashing	Alarm	111
BuFbl (0091)	Backup Fdbk Lost Chk/Repl Xducer	Flashing	Alarm	111
bUS (0015)	Option Communication Error	Flashing	Alarm	112
bUS (0022)	Option Communication Error	Illuminated	Fault	86
bUSy	Busy	-	Not an alarm.	112
CALL (001D)	Serial Comm Transmission Error	Flashing	Alarm	112
CE (0092)	Run at H5-34 (CE Go-To-Freq)	Flashing	Alarm	113
CE (0014)	Modbus Communication Error	Flashing	Alarm	112
CE (0021)	Modbus Communication Error	Illuminated	Fault	86
CoF (0046)	Current Offset Fault	Illuminated	Fault	87
CPEr	Control Mode Mismatch	-	Backup Function Runtime Error	132
CPF00 (0081)	Control Circuit Error	Illuminated	Fault	87
CPF01 (0082)	Control Circuit Error	Illuminated	Fault	87
CPF02 (0083)	A/D Conversion Error	Illuminated	Fault	87
CPF03 (0084)	Control Board Connection Error	Illuminated	Fault	87
CPF06 (0087)	EEPROM Memory Data Error	Illuminated	Fault	88
CPF07 (0088)	Terminal Board Connection Error	Illuminated	Fault	88
CPF08 (0089)	Terminal Board Connection Error	Illuminated	Fault	88
CPF11 (008C)	RAM Fault	Illuminated	Fault	88
CPF12 (008D)	FLASH Memory Fault	Illuminated	Fault	88
CPF13 (008E)	Watchdog Circuit Exception	Illuminated	Fault	88
CPF14 (008F)	Control Circuit Fault	Illuminated	Fault	88
CPF16 (0091)	Clock Fault	Illuminated	Fault	89
CPF17 (0092)	Timing Fault	Illuminated	Fault	89
CPF18 (0093)	Control Circuit Fault	Illuminated	Fault	89

## 2.3 List of Fault, Minor Fault, Alarm, and Error Codes

Display (Hex.)	Name	ALM LED	Type	Ref.
CPF19 (0094)	Control Circuit Fault	Illuminated	Fault	89
CPF20 (0095)	Control Circuit Error	Illuminated	Fault	89
CPF21 (0096)	Control Circuit Error	Illuminated	Fault	89
CPF22 (0097)	Hybrid IC Error	Illuminated	Fault	89
CPF23 (0098)	Control Board Connection Error	Illuminated	Fault	89
CPF24 (0099)	Drive Unit Signal Fault	Illuminated	Fault	90
CPF26 (009B)	BB Circuit Error	Illuminated	Fault	90
CPF27 (009C)	PWM Set Reg Error	Illuminated	Fault	90
CPF28 (009D)	PWM Pattern Error	Illuminated	Fault	90
CPF29 (009E)	On-Delay Error	Illuminated	Fault	90
CPF30 (009F)	BB On Error	Illuminated	Fault	90
CPF31 (00A0)	ASIC Code Error	Illuminated	Fault	90
CPF32 (00A1)	ASIC Startup Error	Illuminated	Fault	90
CPF33 (00A2)	Watch-dog Error	Illuminated	Fault	91
CPF34 (00A3)	Power/Clock Error	Illuminated	Fault	91
CPF35 (00A4)	Ext A/D Conv Error	Illuminated	Fault	91
CPF36 (00A5)	ASIC COM Error	Illuminated	Fault	91
CPF37 (00A6)	ASIC COM Error	Illuminated	Fault	91
CPF38 (00A7)	EEPROM Data Error	Illuminated	Fault	91
CPF39 (00A8)	CPU-ASIC Communication Error	Illuminated	Fault	91
CPyE	Error Writing Data	-	Backup Function Runtime Error	132
CrST	Cannot Reset	Flashing	Not an alarm.	113
CSEr	Control Mode Mismatch	-	Backup Function Runtime Error	132
CyPo (0029)	Cycle Power to Accept Changes	Flashing	Alarm	113
dEv (0011)	Speed Deviation	Flashing	Alarm	113
dEv (0019)	Speed Deviation	Illuminated	Fault	91
dFPS	Drive Model Mismatch	-	Backup Function Runtime Error	132
DIFF (0093)	Differential Feedback Exceeded	Flashing	Alarm	114
DIFF (0421)	Differential Feedback Exceeded	Illuminated	Fault	92
dnE (002A)	Drive Disabled	Flashing	Alarm	114
DS (00DC)	De-Scale/De-Rag	Flashing	Alarm	114
dv7 (005B)	Polarity Judge Timeout	Illuminated	Fault	92
EF (0007)	FWD/REV Run Command Input Error	Flashing	Alarm	114
EF0 (001A)	Option Card External Fault	Flashing	Alarm	114
EF0 (0027)	Option Card External Fault	Illuminated	Fault	92
EF1 (0039)	External Fault (Terminal S1)	Flashing	Alarm	114
EF1 (0042)	External Fault (Terminal S1)	Illuminated	Faults	92
EF2 (003A)	External Fault (Terminal S2)	Flashing	Alarm	114
EF2 (0043)	External Fault (Terminal S2)	Illuminated	Faults	92
EF3 (0009)	External Fault (Terminal S3)	Flashing	Alarm	115
EF3 (0011)	External Fault (Terminal S3)	Illuminated	Faults	92
EF4 (000A)	External Fault (Terminal S4)	Flashing	Alarm	115
EF4 (0012)	External Fault (Terminal S4)	Illuminated	Faults	93

## 2.3 List of Fault, Minor Fault, Alarm, and Error Codes

Display (Hex.)	Name	ALM LED	Type	Ref.
EF5 (000B)	External Fault (Terminal S5)	Flashing	Alarm	115
EF5 (0013)	External Fault (Terminal S5)	Illuminated	Faults	93
EF6 (000C)	External Fault (Terminal S6)	Flashing	Alarm	115
EF6 (0014)	External Fault (Terminal S6)	Illuminated	Faults	93
EF7 (000D)	External Fault (Terminal S7)	Flashing	Alarm	115
EF7 (0015)	External Fault (Terminal S7)	Illuminated	Faults	93
EF8 (000E)	External Fault (Terminal S8)	Flashing	Alarm	115
EF8 (0016)	External Fault (Terminal S8)	Illuminated	Fault	93
End1	Excessive Rated Voltage Setting	Flashing	An Auto-Tuning Error	129
End2	Iron Core Saturation Coefficient	Flashing	An Auto-Tuning Error	129
End3	Rated Current Setting Alarm	Flashing	An Auto-Tuning Error	129
End4	Adjusted Slip Calculation Error	Flashing	An Auto-Tuning Error	129
End5	Resistance Tuning Error	Flashing	An Auto-Tuning Error	129
End6	Leakage Inductance Alarm	Flashing	An Auto-Tuning Error	129
End7	No-Load Current Alarm	Flashing	An Auto-Tuning Error	129
End8	HFI Alarm	Flashing	An Auto-Tuning Error	129
End9	Initial Pole Detection Alarm	Flashing	An Auto-Tuning Error	130
EOF (0067)	Emergency Override FWD	Flashing	Alarm	116
EOR (0068)	Emergency Override REV	Flashing	Alarm	116
EP24v (0081)	External Power 24V Supply	Flashing	Alarm	116
Er-01	Motor Data Error	Flashing	An Auto-Tuning Error	130
Er-02	Drive in an Alarm State	Flashing	An Auto-Tuning Error	130
Er-03	STOP Button was Pressed	Flashing	An Auto-Tuning Error	130
Er-04	Line-to-Line Resistance Error	Flashing	An Auto-Tuning Error	130
Er-05	No-Load Current Error	Flashing	An Auto-Tuning Error	130
Er-08	Rated Slip Error	Flashing	An Auto-Tuning Error	131
Er-09	Acceleration Error	Flashing	An Auto-Tuning Error	131
Er-12	Current Detection Error	Flashing	An Auto-Tuning Error	131
Er-13	Leakage Inductance Error	Flashing	An Auto-Tuning Error	131
Er-18	Back EMF Error	Flashing	An Auto-Tuning Error	131
Er-19	PM Inductance Error	Flashing	An Auto-Tuning Error	131
Er-20	Stator Resistance Error	Flashing	An Auto-Tuning Error	131
Er-25	HighFreq Inject Param Tuning Err	Flashing	An Auto-Tuning Error	131
Err (001F)	EEPROM Write Error	Illuminated	Fault	93
FAn1 (0413)	Drive Cooling Fan Fault	Illuminated	Fault	94
FDBKL (0094)	Feedback Loss Wire Break	Flashing	Alarm	116
FDBKL (0422)	WIRE Break	Illuminated	Fault	94
FLGT (0095)	Feedback Loss, Go To Freq b5-83	Flashing	Alarm	116
FR<MS (009E)	Freq Ref < Minimum Speed (Y1-06)	Flashing	Alarm	116
FR<TH (009F)	Freq. Reference < Thrust (Y4-12)	Flashing	Alarm	116
GF (0006)	Ground Fault	Illuminated	Fault	94
HCA (0034)	High Current Alarm	Flashing	Alarm	117
HFB (0423)	High Feedback Sensed	Illuminated	Fault	94

## 2.3 List of Fault, Minor Fault, Alarm, and Error Codes

Display (Hex.)	Name	ALM LED	Type	Ref.
HIAUX (0096)	High PI Aux Feedback Level	Flashing	Alarm	117
HIAUX (0424)	High PI Aux Feedback Level	Illuminated	Fault	94
HIFB (0097)	High Feedback Sensed	Flashing	Alarm	117
HLCE (0411)	High Level Communication Errors	Illuminated	Fault	95
HWL (0433)	High Water Level	Illuminated	Fault	95
iFEr	Communication Err	-	Backup Function Runtime Error	132
L24v (0021)	Loss of External Power 24 Supply	Flashing	Alarm	117
LCP (00A7)	Low City Pressure	Flashing	Alarm	117
LF (001C)	Output Phase Loss	Illuminated	Fault	95
LF2 (0036)	Output Current Imbalance	Illuminated	Fault	95
LFB (0425)	Low Feedback Sensed	Illuminated	Fault	95
LOAUX (0099)	Low PI Aux Feedback Level	Flashing	Alarm	117
LOAUX (0426)	Low PI Aux Feedback Level	Illuminated	Fault	95
LoG	Com Error / Abnormal SD Card	Flashing	Alarm	118
LOFB (009A)	Low Feedback Sensed	Flashing	Alarm	118
LOP (009B)	Loss of Prime	Flashing	Alarm	118
LOP (0427)	Loss of Prime	Illuminated	Fault	96
LSP (00A8)	Low Suction Pressure	Flashing	Alarm	118
LT-1 (0035)	Cooling Fan Maintenance Time	Flashing	Alarm	118
LT-2 (0036)	Capacitor Maintenance Time	Flashing	Alarm	118
LT-3 (0043)	SoftChargeBypassRelay MainteTime	Flashing	Alarm	118
LT-4 (0044)	IGBT Maintenance Time (50%)	Flashing	Alarm	118
LWL (0432)	Low Water Level	Illuminated	Fault	96
LWT (00A9)	Low Water In Tank	Flashing	Alarm	119
ndAT	Error Received Data	-	Backup Function Runtime Error	132
NMS (009C)	Setpoint Not Met	Flashing	Alarm	119
NMS (0429)	Setpoint Not Met	Illuminated	Fault	96
nSE (0052)	Node Setup Error	Illuminated	Fault	96
oC (0007)	Overcurrent	Illuminated	Fault	96
OD (009D)	Output Disconnect	Flashing	Alarm	119
OD (042A)	Output Disconnect	Illuminated	Fault	97
oFA00 (0101)	Option Not Compatible with Port	Illuminated	Fault	97
oFA01 (0102)	Option Fault/Connection Error	Illuminated	Fault	97
oFA02 (0103)	Duplicate Options	Illuminated	Fault	98
oFA03 (0104)	Diagnostic Error	Illuminated	Fault	98
oFA04 (0105)	Flash Write Mode	Illuminated	Fault	98
oFA05 (0106)	Option A/D Error	Illuminated	Fault	98
oFA06 (0107)	Option Communication Error	Illuminated	Fault	98
oFA10 (0111)	Option RAM Error	Illuminated	Fault	98
oFA11 (0112)	Option Ope Mode Error	Illuminated	Fault	98
oFA12 (0113)	Drive Receive CRC Error	Illuminated	Fault	98
oFA13 (0114)	Drive Receive Frame Error	Illuminated	Fault	98
oFA14 (0115)	Drive Receive Abort Error	Illuminated	Fault	99

## 2.3 List of Fault, Minor Fault, Alarm, and Error Codes

Display (Hex.)	Name	ALM LED	Type	Ref.
oFA15 (0116)	Option Receive CRC Error	Illuminated	Fault	99
oFA16 (0117)	Option Receive Frame Error	Illuminated	Fault	99
oFA17 (0118)	Option Receive Abort Error	Illuminated	Fault	99
oFA30 (0131)	COM ID Error	Illuminated	Fault	99
oFA31 (0132)	Type Code Error	Illuminated	Fault	99
oFA32 (0133)	SUM Check Error	Illuminated	Fault	99
oFA33 (0134)	Option Receive Time Over	Illuminated	Fault	99
oFA34 (0135)	Memobus Time Over	Illuminated	Fault	100
oFA35 (0136)	Drive Receive Time Over 1	Illuminated	Fault	100
oFA36 (0137)	CI Check Error	Illuminated	Fault	100
oFA37 (0138)	Drive Receive Time Over 2	Illuminated	Fault	100
oFA38 (0139)	Control Reference Error	Illuminated	Fault	100
oFA39 (013A)	Drive Receive Time Over 3	Illuminated	Fault	100
oFA40 (013B)	CtrlResSel 1Err	Illuminated	Fault	100
oFA41 (013C)	Drive Receive Time Over 4	Illuminated	Fault	100
oFA42 (013D)	CtrlResSel 2Err	Illuminated	Fault	101
oFA43 (013E)	Drive Receive Time Over 5	Illuminated	Fault	101
oFb00 (0201)	Option Not Compatible with Port	Illuminated	Fault	101
oFb01 (0202)	Option Fault/Connection Error	Illuminated	Fault	101
oFb02 (0203)	Duplicate Options	Illuminated	Fault	101
oFb03 (0204)	Diagnostic Error	Illuminated	Fault	101
oFb04 (0205)	Flash Write Mode	Illuminated	Fault	101
oFb05 (0206)	Option A/D Error	Illuminated	Fault	101
oFb06 (0207)	Option Communication Error	Illuminated	Fault	101
oFb10 (0211)	Option RAM Error	Illuminated	Fault	102
oFb11 (0212)	Option Ope Mode Error	Illuminated	Fault	102
oFb12 (0213)	Drive Receive CRC Error	Illuminated	Fault	102
oFb13 (0214)	Drive Receive Frame Error	Illuminated	Fault	102
oFb14 (0215)	Drive Receive Abort Error	Illuminated	Fault	102
oFb15 (0216)	Option Receive CRC Error	Illuminated	Fault	102
oFb16 (0217)	Option Receive Frame Error	Illuminated	Fault	102
oFb17 (0218)	Option Receive Abort Error	Illuminated	Fault	102
oH (0003)	Heatsink Overheat	Flashing	Alarm	119
oH (0009)	Heatsink Overheat	Illuminated	Fault	103
oH1 (000A)	Heatsink Overheat	Illuminated	Fault	103
oH2 (0004)	External Overheat (H1-XX=B)	Flashing	Alarm	119
oH3 (001D)	Motor Overheat (PTC Input)	Illuminated	Fault	103
oH3 (0022)	Motor Overheat (PTC Input)	Flashing	Alarm	119
oH4 (0020)	Motor Overheat Fault (PTC Input)	Illuminated	Fault	104
oL1 (000B)	Motor Overload	Illuminated	Fault	104
oL2 (000C)	Drive Overload	Illuminated	Fault	105
oL3 (0005)	Overtorque 1	Flashing	Alarm	120
oL3 (000D)	Overtorque Detection 1	Illuminated	Fault	105

## 2.3 List of Fault, Minor Fault, Alarm, and Error Codes

Display (Hex.)	Name	ALM LED	Type	Ref.
oL4 (0006)	Overtorque 2	Flashing	Alarm	120
oL4 (000E)	Overtorque Detection 2	Illuminated	Fault	105
oL7 (002B)	High Slip Braking Overload	Illuminated	Fault	106
oPE01	Drive Capacity Setting Fault	Flashing	Parameter Setting Error	124
oPE02	Parameter Range Setting Error	Flashing	Parameter Setting Error	124
oPE03	Multi-Function Input Setting Err	Flashing	Parameter Setting Error	124
oPE05	Run Cmd/Freq Ref Source Sel Err	Flashing	Parameter Setting Error	126
oPE07	Analog Input Selection Error	Flashing	Parameter Setting Error	126
oPE08	Parameter Selection Error	Flashing	Parameter Setting Error	127
oPE09	PID Control Selection Fault	Flashing	Parameter Setting Error	128
oPE10	V/f Data Setting Error	Flashing	Parameter Setting Error	128
oPE11	Carrier Frequency Setting Error	Flashing	Parameter Setting Error	128
oPE16	Energy Saving Constants Error	Flashing	Parameter Setting Error	128
oPE33	Digital Output Selection Error	Flashing	Parameter Setting Error	128
oPr (001E)	Keypad Connection Fault	Illuminated	Fault	106
oS (0010)	Overspeed	Flashing	Alarm	120
oS (0018)	Overspeed	Illuminated	Fault	106
ov (0002)	DC Bus Overvoltage	Flashing	Alarm	120
ov (0008)	Overvoltage	Illuminated	Fault	106
ov2 (0405)	DC Bus Overvoltage 2	Illuminated	Fault	107
ovEr	Too Many Parameters Changed	-	Not an alarm.	120
PASS	Modbus Communication Test	Flashing	Not an alarm.	121
PE1 (0047)	PLC Fault 1	Illuminated	Fault	107
PE2 (0048)	PLC Fault 2	Illuminated	Fault	107
PF (0047)	Input Phase Loss	Flashing	Alarm	121
PF (001B)	Input Phase Loss	Illuminated	Fault	107
rdEr	Error Reading Data	-	Backup Function Runtime Error	132
R-DNE (00D8)	Remote Drive Disable	Flashing	Alarm	121
rUn (001B)	Motor Switch during Run	Flashing	Alarm	121
SC (0005)	Short Circuit/IGBT Failure	Illuminated	Fault	107
SCF (040F)	Safety Circuit Fault	Illuminated	Fault	108
SE (0020)	Modbus Test Mode Error	Flashing	Alarm	121
SEr (003B)	Speed Search Retries Exceeded	Illuminated	Fault	108
SPCNR (00DD)	Single Phase Converter Not Ready	Flashing	Alarm	121
SPCNR (0435)	Single Phase Converter Not Ready	Illuminated	Fault	108
STo (003C)	Safe Torque OFF	-	Alarm	121
SToF (003B)	Safe Torque OFF	Flashing	Alarm	122
STPo (0037)	Motor Step-Out Detected	Illuminated	Fault	108
TiM (0089)	Keypad Time Not Set	Flashing	Alarm	122
TiM (0401)	Keypad Time Not Set	Illuminated	Fault	108
TrPC (0042)	IGBT Maintenance Time (90%)	Flashing	Alarm	122
UL3 (001E)	Undertorque Detection 1	Flashing	Alarm	122
UL3 (0029)	Undertorque Detection 1	Illuminated	Fault	109

## 2.3 List of Fault, Minor Fault, Alarm, and Error Codes

Display (Hex.)	Name	ALM LED	Type	Ref.
UL4 (001F)	Undertorque Detection 2	Flashing	Alarm	<a href="#">122</a>
UL4 (002A)	Undertorque Detection 2	Illuminated	Fault	<a href="#">109</a>
UL6 (004E)	Underload or Belt Break Detected	Flashing	Alarm	<a href="#">122</a>
UL6 (005A)	Underload or Belt Break Detected	Illuminated	Fault	<a href="#">109</a>
Uv (0001)	DC Bus Undervoltage	Flashing	Alarm	<a href="#">122</a>
Uv1 (0002)	DC Bus Undervoltage	Illuminated	Fault	<a href="#">109</a>
Uv2 (0003)	Control Power Undervoltage	Illuminated	Fault	<a href="#">109</a>
Uv3 (0004)	Soft Charge Answerback Fault	Illuminated	Fault	<a href="#">110</a>
vAEr	Voltage Class, Capacity Mismatch	-	Backup Function Runtime Error	<a href="#">132</a>
vFyE	Parameters do not Match	-	Backup Function Runtime Error	<a href="#">133</a>
VLTS (042B)	Thermostat Fault	Illuminated	Fault	<a href="#">110</a>

## 2.4 Fault

This section gives information about some of the causes and possible solutions of faults. You must use the Fault Reset operation to remove the fault before you can operate the drive. Use the information in this table to remove the cause of the fault.

Code	Name	Causes	Possible Solutions
AUXFB	PI Aux Feedback Level Loss	The analog input from the terminal set for <i>PI Auxiliary Control Feedback Level</i> [H3-xx = 27] is more than 21 mA or less than 3 mA for longer than 1 s.	Repair transducer or wiring.
<b>Note:</b> Do a Fault Reset to clear the fault.			
Code	Name	Causes	Possible Solutions
bAT	Keypad Battery Low Voltage	The keypad battery voltage is low.	Replace the keypad battery.
<b>Note:</b> Use o4-24 [bAT Detection Selection] to enable/disable bAT detection.			
Code	Name	Causes	Possible Solutions
bCE	Bluetooth Communication Fault	The smartphone or tablet with DriveWizard Mobile installed is too far from the keypad.	Use the smartphone or tablet 10 m (32.8 ft) or nearer to the keypad. <b>Note:</b> bCE can occur when the smartphone or tablet is 10 m (32.8 ft) or nearer to the keypad depending on the specifications of the smartphone or tablet.
		Radio waves from a different device are causing interference with communications between the smartphone or tablet and keypad.	Make sure that no device around the keypad uses the same radio bandwidth (2400 MHz to 2480 MHz), and prevent radio interference.
<b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error when you use the Bluetooth LCD keypad and operate the drive with a smartphone or tablet.</li> <li>Do a Fault Reset to clear the fault.</li> <li>Set the stopping method for this fault in o2-27 [bCE Detection Selection].</li> </ul>			
Code	Name	Causes	Possible Solutions
bUS	Option Communication Error	The drive did not receive a signal from the controller.	Correct wiring errors.
		The communications cable wiring is incorrect.	
		There is a short-circuit in the communications cable or the communications cable is not connected.	<ul style="list-style-type: none"> <li>Repair short circuits and connect cables.</li> <li>Replace the defective communications cable.</li> </ul>
		Electrical interference caused a communication data error.	<ul style="list-style-type: none"> <li>Examine the control circuit lines, main circuit lines, and ground wiring, and decrease the effects of electrical interference.</li> <li>Make sure that a magnetic contactor is not the source of the electrical interference, then use a Surge Protective Device if necessary.</li> <li>Use only the recommended cables or other shielded line. Ground the shield on the controller side or the drive input power side.</li> <li>Separate the communication wiring from drive power lines, and install a noise filter to the input side of the power supply for communication.</li> <li>Decrease the effects of electrical interference from the controller.</li> </ul>
		The option is incorrectly installed to the drive.	Correctly install the option to the drive.
		The option is damaged.	If the fault continues and the wiring is correct, replace the option.
<b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if the Run command or frequency reference is assigned to the option card.</li> <li>Do a Fault Reset to clear the fault.</li> <li>If the drive detects this error, the drive will operate the motor as specified by the stopping method set in F6-01 [Communication Error Selection].</li> </ul>			
Code	Name	Causes	Possible Solutions
CE	Modbus Communication Error	The communications cable wiring is incorrect.	Correct wiring errors.
		There is a short circuit in the communications cable or the communications cable is not connected.	<ul style="list-style-type: none"> <li>Repair short circuits and connect cables.</li> <li>Replace the defective communications cable.</li> </ul>

Code	Name	Causes	Possible Solutions
		Electrical interference caused a communication data error.	<ul style="list-style-type: none"> <li>Examine the control circuit lines, main circuit lines, and ground wiring, and decrease the effects of electrical interference.</li> <li>Make sure that a magnetic contactor is not the source of the electrical interference, then use a Surge Protective Device if necessary.</li> <li>Use only the recommended cables or other shielded line. Ground the shield on the controller side or the drive input power side.</li> <li>Separate the communication wiring from drive power lines, and install a noise filter to the input side of the power supply for communication.</li> <li>Decrease the effects of electrical interference from the controller.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if it does not correctly receive control data for the <i>CE</i> detection time set to <i>H5-09 [CE Detection Time]</i>.</li> <li>Do a Fault Reset to clear the fault.</li> <li>If the drive detects this error, the drive will operate the motor as specified by the stopping method set in <i>H5-04 [Communication Error Stop Method]</i>.</li> </ul>			
Code	Name	Causes	Possible Solutions
CoF	Current Offset Fault	The drive starts operation while the induced voltage stays in the motor (during coasting to a stop or after fast deceleration).	<ul style="list-style-type: none"> <li>Make a sequence that does not restart operation when induced voltage stays in the motor.</li> <li>Set <i>b3-01 = 1 [Speed Search at Start Selection = Enabled]</i>.</li> <li>Use <i>Speed Search from Fmax or Fref [H1-xx = 61, 62]</i> to do a speed search through one of the external terminals.</li> </ul> <b>Note:</b> When controlling the PM motor, External Speed Search commands 1 and 2 operate the same.
		A drive hardware problem occurred.	<ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault or de-energize the drive.</li> <li>If the fault stays, replace the drive</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if the current offset value is more than the permitted setting range while the drive automatically adjusts the current offset.</li> <li>Do a Fault Reset to clear the fault.</li> </ul>			
Code	Name	Causes	Possible Solutions
CPF00	Control Circuit Error	A drive hardware problem occurred.	<ul style="list-style-type: none"> <li>Re-energize the drive.</li> <li>If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>Fault trace is not available for these faults.</li> </ul>			
Code	Name	Causes	Possible Solutions
CPF01	Control Circuit Error	A drive hardware problem occurred.	<ul style="list-style-type: none"> <li>Re-energize the drive.</li> <li>If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>Fault trace is not available for these faults.</li> </ul>			
Code	Name	Causes	Possible Solutions
CPF02	Control Circuit Error	A drive hardware problem occurred.	<ul style="list-style-type: none"> <li>Re-energize the drive.</li> <li>If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>Fault trace is not available for these faults.</li> </ul>			
Code	Name	Causes	Possible Solutions
CPF03	Control Circuit Error	A drive hardware problem occurred.	<ul style="list-style-type: none"> <li>Re-energize the drive.</li> <li>If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>Fault trace is not available for these faults.</li> </ul>			

## 2.4 Fault

Code	Name	Causes	Possible Solutions
CPF06	Control Circuit Error (EEPROM memory Data Error)	The drive power supply was de-energized while a communication option entered a parameter Write command.	Set A1-03 = 2220, 3330 [Initialize Parameters = 2-Wire Initialization, 3-Wire Initialization] and initialize the drive.
		An EEPROM peripheral circuit error occurred.	<ul style="list-style-type: none"> <li>Re-energize the drive.</li> <li>If the fault stays, replace the control board or the drive. For information about how to replace the control board, contact Yaskawa or your nearest sales representative.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if there is an error in the data written to the drive EEPROM.</li> <li>Do a Fault Reset to clear the fault.</li> <li>Fault trace is not available for these faults.</li> </ul>			
Code	Name	Causes	Possible Solutions
CPF07	Control Circuit Error	A drive hardware problem occurred.	<ul style="list-style-type: none"> <li>Re-energize the drive.</li> <li>If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>Fault trace is not available for these faults.</li> </ul>			
Code	Name	Causes	Possible Solutions
CPF08	Control Circuit Error	A drive hardware problem occurred.	<ul style="list-style-type: none"> <li>Re-energize the drive.</li> <li>If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>Fault trace is not available for these faults.</li> </ul>			
Code	Name	Causes	Possible Solutions
CPF11	Control Circuit Error	A drive hardware problem occurred.	<ul style="list-style-type: none"> <li>Re-energize the drive.</li> <li>If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>Fault trace is not available for these faults.</li> </ul>			
Code	Name	Causes	Possible Solutions
CPF12	Control Circuit Error	A drive hardware problem occurred.	<ul style="list-style-type: none"> <li>Re-energize the drive.</li> <li>If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>Fault trace is not available for these faults.</li> </ul>			
Code	Name	Causes	Possible Solutions
CPF13	Control Circuit Error	A drive hardware problem occurred.	<ul style="list-style-type: none"> <li>Re-energize the drive.</li> <li>If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>Fault trace is not available for these faults.</li> </ul>			
Code	Name	Causes	Possible Solutions
CPF14	Control Circuit Error	A drive hardware problem occurred.	<ul style="list-style-type: none"> <li>Re-energize the drive.</li> <li>If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>Fault trace is not available for these faults.</li> </ul>			

Code	Name	Causes	Possible Solutions
CPF16	Control Circuit Error	A drive hardware problem occurred.	<ul style="list-style-type: none"> <li>Re-energize the drive.</li> <li>If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>Fault trace is not available for these faults.</li> </ul>			
Code	Name	Causes	Possible Solutions
CPF17	Control Circuit Error	A drive hardware problem occurred.	<ul style="list-style-type: none"> <li>Re-energize the drive.</li> <li>If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>Fault trace is not available for these faults.</li> </ul>			
Code	Name	Causes	Possible Solutions
CPF18	Control Circuit Error	A drive hardware problem occurred.	<ul style="list-style-type: none"> <li>Re-energize the drive.</li> <li>If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>Fault trace is not available for these faults.</li> </ul>			
Code	Name	Causes	Possible Solutions
CPF19	Control Circuit Error	A drive hardware problem occurred.	<ul style="list-style-type: none"> <li>Re-energize the drive.</li> <li>If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>Fault trace is not available for these faults.</li> </ul>			
Code	Name	Causes	Possible Solutions
CPF20	Control Circuit Error	A drive hardware problem occurred.	<ul style="list-style-type: none"> <li>Re-energize the drive.</li> <li>If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>Fault trace is not available for these faults.</li> </ul>			
Code	Name	Causes	Possible Solutions
CPF21	Control Circuit Error	A drive hardware problem occurred.	<ul style="list-style-type: none"> <li>Re-energize the drive.</li> <li>If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>Fault trace is not available for these faults.</li> </ul>			
Code	Name	Causes	Possible Solutions
CPF22	Control Circuit Error	A drive hardware problem occurred.	<ul style="list-style-type: none"> <li>Re-energize the drive.</li> <li>If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>Fault trace is not available for these faults.</li> </ul>			
Code	Name	Causes	Possible Solutions
CPF23	Control Circuit Error	A drive hardware problem occurred.	<ul style="list-style-type: none"> <li>Re-energize the drive.</li> <li>If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>Fault trace is not available for these faults.</li> </ul>			

## 2.4 Fault

Code	Name	Causes	Possible Solutions
CPF24	Control Circuit Error (Drive Unit Signal Fault)	A drive hardware problem occurred.	<ul style="list-style-type: none"> <li>Re-energize the drive.</li> <li>If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>Fault trace is not available for these faults.</li> </ul>			
Code	Name	Causes	Possible Solutions
CPF26	Control Circuit Error	A drive hardware problem occurred.	<ul style="list-style-type: none"> <li>Re-energize the drive.</li> <li>If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>Fault trace is not available for these faults.</li> </ul>			
Code	Name	Causes	Possible Solutions
CPF27	Control Circuit Error	A drive hardware problem occurred.	<ul style="list-style-type: none"> <li>Re-energize the drive.</li> <li>If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>Fault trace is not available for these faults.</li> </ul>			
Code	Name	Causes	Possible Solutions
CPF28	Control Circuit Error	A drive hardware problem occurred.	<ul style="list-style-type: none"> <li>Re-energize the drive.</li> <li>If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>Fault trace is not available for these faults.</li> </ul>			
Code	Name	Causes	Possible Solutions
CPF29	Control Circuit Error	A drive hardware problem occurred.	<ul style="list-style-type: none"> <li>Re-energize the drive.</li> <li>If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>Fault trace is not available for these faults.</li> </ul>			
Code	Name	Causes	Possible Solutions
CPF30	Control Circuit Error	A drive hardware problem occurred.	<ul style="list-style-type: none"> <li>Re-energize the drive.</li> <li>If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>Fault trace is not available for these faults.</li> </ul>			
Code	Name	Causes	Possible Solutions
CPF31	Control Circuit Error	A drive hardware problem occurred.	<ul style="list-style-type: none"> <li>Re-energize the drive.</li> <li>If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>Fault trace is not available for these faults.</li> </ul>			
Code	Name	Causes	Possible Solutions
CPF32	Control Circuit Error	A drive hardware problem occurred.	<ul style="list-style-type: none"> <li>Re-energize the drive.</li> <li>If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>Fault trace is not available for these faults.</li> </ul>			

Code	Name	Causes	Possible Solutions
CPF33	Control Circuit Error	A drive hardware problem occurred.	<ul style="list-style-type: none"> <li>Re-energize the drive.</li> <li>If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>Fault trace is not available for these faults.</li> </ul>			
Code	Name	Causes	Possible Solutions
CPF34	Control Circuit Error	A drive hardware problem occurred.	<ul style="list-style-type: none"> <li>Re-energize the drive.</li> <li>If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>Fault trace is not available for these faults.</li> </ul>			
Code	Name	Causes	Possible Solutions
CPF35	Control Circuit Error	A drive hardware problem occurred.	<ul style="list-style-type: none"> <li>Re-energize the drive.</li> <li>If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>Fault trace is not available for these faults.</li> </ul>			
Code	Name	Causes	Possible Solutions
CPF36	Control Circuit Error	A drive hardware problem occurred.	<ul style="list-style-type: none"> <li>Re-energize the drive.</li> <li>If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>Fault trace is not available for these faults.</li> </ul>			
Code	Name	Causes	Possible Solutions
CPF37	Control Circuit Error	A drive hardware problem occurred.	<ul style="list-style-type: none"> <li>Re-energize the drive.</li> <li>If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>Fault trace is not available for these faults.</li> </ul>			
Code	Name	Causes	Possible Solutions
CPF38	Control Circuit Error	A drive hardware problem occurred.	<ul style="list-style-type: none"> <li>Re-energize the drive.</li> <li>If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>Fault trace is not available for these faults.</li> </ul>			
Code	Name	Causes	Possible Solutions
CPF39	Control Circuit Error	A drive hardware problem occurred.	<ul style="list-style-type: none"> <li>Re-energize the drive.</li> <li>If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>Fault trace is not available for these faults.</li> </ul>			
Code	Name	Causes	Possible Solutions
dEv	Speed Deviation	The load is too heavy.	Decrease the load.
		Acceleration and deceleration times are set too short.	Increase the values set in <i>C1-01</i> to <i>C1-04</i> [ <i>Acceleration/Deceleration Time</i> ].
		The <i>dEv</i> detection level settings are incorrect.	Adjust <i>F1-10</i> [ <i>Speed Deviation Detection Level</i> ] and <i>F1-11</i> [ <i>Speed Deviation Detect DelayTime</i> ].
		The load is locked up.	Examine the machine.

## 2.4 Fault

Code	Name	Causes	Possible Solutions
		The holding brake is stopping the motor.	Release the holding brake.
<b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if the difference between the detected speed and the speed reference is more than the setting of <i>F1-10</i> for longer than <i>F1-11</i>.</li> <li>Do a Fault Reset to clear the fault.</li> <li>If the drive detects this error, the drive will operate the motor as specified by the stopping method set in <i>F1-04</i> [<i>Speed Deviation Detection Select</i>].</li> </ul>			
Code	Name	Causes	Possible Solutions
DIFF	Differential Feedback Exceeded	The difference between the PID Feedback and <i>Differential Level Source</i> [ <i>H3-xx = 2D</i> ] is more than the level set in <i>Y4-18</i> [ <i>Differential Level</i> ] for the time set in <i>Y4-19</i> [ <i>Differential Lvl Detection Time</i> ].	<ul style="list-style-type: none"> <li>Replace the feedback transducer or transducers.</li> <li>Make sure that the settings of <i>Y4-18</i> [<i>Differential Level</i>] to <i>Y4-20</i> [<i>Differential Level Detection Sel</i>] are correct.</li> </ul>
<b>Note:</b> Do a Fault Reset to clear the fault.			
Code	Name	Causes	Possible Solutions
dv7	Polarity Judge Timeout	There is a disconnection in the motor coil winding.	Measure the motor line-to-line resistance and replace the motor if a coil is disconnected.
		The screws on the drive output terminals are loose.	Tighten the terminal screws to the correct tightening torque.
<b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if it cannot detect polarity in a pre-set length of time.</li> <li>Do a Fault Reset to clear the fault.</li> </ul>			
Code	Name	Causes	Possible Solutions
EF0	Option Card External Fault	The communication option received an external fault from the controller.	<ol style="list-style-type: none"> <li>Find the device that caused the external fault and remove the cause.</li> <li>Clear the external fault input from the controller.</li> </ol>
		A programming error occurred on the controller side.	Examine the operation of the controller program.
<b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this fault if the alarm function on the external device side is operating.</li> <li>Do a Fault Reset to clear the fault.</li> <li>If the drive detects this fault, it will operate the motor as specified by the stop method set in <i>F6-03</i> [<i>Comm External Fault (EF0) Select</i>].</li> </ul>			
Code	Name	Causes	Possible Solutions
EF1	External Fault (Terminal S1)	MFDI terminal S1 caused an external fault through an external device.	<ol style="list-style-type: none"> <li>Find the device that caused the external fault and remove the cause.</li> <li>Clear the external fault input in the MFDI.</li> </ol>
		The wiring is incorrect.	Correctly connect the signal line to MFDI terminal S1.
		<i>External Fault</i> [ <i>H1-01 = 20 to 2B</i> ] is set to MFDI terminal S1, but the terminal is not in use.	Correctly set the MFDI.
<b>Note:</b> Do a Fault Reset to clear the fault.			
Code	Name	Causes	Possible Solutions
EF2	External Fault (Terminal S2)	MFDI terminal S2 caused an external fault through an external device.	<ol style="list-style-type: none"> <li>Find the device that caused the external fault and remove the cause.</li> <li>Clear the external fault input in the MFDI.</li> </ol>
		The wiring is incorrect.	Correctly connect the signal line to MFDI terminal S2.
		<i>External Fault</i> [ <i>H1-02 = 20 to 2B</i> ] is set to MFDI terminal S2, but the terminal is not in use.	Correctly set the MFDI.
<b>Note:</b> Do a Fault Reset to clear the fault.			
Code	Name	Causes	Possible Solutions
EF3	External Fault (Terminal S3)	MFDI terminal S3 caused an external fault through an external device.	<ol style="list-style-type: none"> <li>Find the device that caused the external fault and remove the cause.</li> <li>Clear the external fault input in the MFDI.</li> </ol>
		The wiring is incorrect.	Correctly connect the signal line to MFDI terminal S3.
		<i>External Fault</i> [ <i>H1-03 = 20 to 2B</i> ] is set to MFDI terminal S3, but the terminal is not in use.	Correctly set the MFDI.
<b>Note:</b> Do a Fault Reset to clear the fault.			

Code	Name	Causes	Possible Solutions
EF4	External Fault (Terminal S4)	MFDI terminal S4 caused an external fault through an external device.	<ol style="list-style-type: none"> <li>Find the device that caused the external fault and remove the cause.</li> <li>Clear the external fault input in the MFDI.</li> </ol>
		The wiring is incorrect.	Correctly connect the signal line to MFDI terminal S4.
		<i>External Fault [H1-04 = 20 to 2B]</i> is set to MFDI terminal S4, but the terminal is not in use.	Correctly set the MFDI.
<b>Note:</b> Do a Fault Reset to clear the fault.			
Code	Name	Causes	Possible Solutions
EF5	External Fault (Terminal S5)	MFDI terminal S5 caused an external fault through an external device.	<ol style="list-style-type: none"> <li>Find the device that caused the external fault and remove the cause.</li> <li>Clear the external fault input in the MFDI.</li> </ol>
		The wiring is incorrect.	Correctly connect the signal line to MFDI terminal S5.
		<i>External Fault [H1-05 = 20 to 2B]</i> is set to MFDI terminal S5, but the terminal is not in use.	Correctly set the MFDI.
<b>Note:</b> Do a Fault Reset to clear the fault.			
Code	Name	Causes	Possible Solutions
EF6	External Fault (Terminal S6)	MFDI terminal S6 caused an external fault through an external device.	<ol style="list-style-type: none"> <li>Find the device that caused the external fault and remove the cause.</li> <li>Clear the external fault input in the MFDI.</li> </ol>
		The wiring is incorrect.	Correctly connect the signal line to MFDI terminal S6.
		<i>External Fault [H1-06 = 20 to 2B]</i> is set to MFDI terminal S6, but the terminal is not in use.	Correctly set the MFDI.
<b>Note:</b> Do a Fault Reset to clear the fault.			
Code	Name	Causes	Possible Solutions
EF7	External Fault (Terminal S7)	MFDI terminal S7 caused an external fault through an external device.	<ol style="list-style-type: none"> <li>Find the device that caused the external fault and remove the cause.</li> <li>Clear the external fault input in the MFDI.</li> </ol>
		The wiring is incorrect.	Correctly connect the signal line to MFDI terminal S7.
		<i>External Fault [H1-07 = 20 to 2B]</i> is set to MFDI terminal S7, but the terminal is not in use.	Correctly set the MFDI.
<b>Note:</b> Do a Fault Reset to clear the fault.			
Code	Name	Causes	Possible Solutions
EF8	External Fault (Terminal S8)	MFDI terminal S8 caused an external fault through an external device.	<ol style="list-style-type: none"> <li>Find the device that caused the external fault and remove the cause.</li> <li>Clear the external fault input in the MFDI.</li> </ol>
		The wiring is incorrect.	Correctly connect the signal line to MFDI terminal S8.
		<i>External Fault [H1-08 = 20 to 2B]</i> is set to MFDI terminal S8, but the terminal is not in use.	Correctly set the MFDI.
<b>Note:</b> Do a Fault Reset to clear the fault.			
Code	Name	Causes	Possible Solutions
Err	EEPROM Write Error	There was a problem with the EEPROM hardware.	<ul style="list-style-type: none"> <li>Re-energize the drive.</li> <li>If the fault stays, replace the control board or the drive. Contact Yaskawa or your nearest sales representative to replace the board.</li> </ul>
		Electrical interference corrupted the data while it was writing to the EEPROM of the drive.	<ul style="list-style-type: none"> <li>Push ENTER Key.</li> <li>Set the parameters again.</li> </ul>
<b>Note:</b> Do a Fault Reset to clear the fault.			

## 2.4 Fault

Code	Name	Causes	Possible Solutions
FAn1	Drive Cooling Fan Fault	The cooling fan stopped operating correctly.	<ul style="list-style-type: none"> <li>Examine cooling fan operation.</li> <li>Re-energize the drive.</li> <li>Examine U4-03 [Cooling Fan Ope Time] and U4-04 [Cool Fan Maintenance]. If the performance life of the cooling fan is expired or if there is damage to the fan, replace the fan.</li> </ul>
		The circulation fan is damaged.	<ul style="list-style-type: none"> <li>Examine circulation fan operation.</li> <li>Re-energize the drive.</li> <li>Examine U4-03 [Cooling Fan Ope Time] and U4-04 [Cool Fan Maintenance]. If there is damage to the circulation fan or if the performance life of the fan is expired, replace the fan.</li> </ul>
<b>Note:</b> Do a Fault Reset to clear the fault.			
Code	Name	Causes	Possible Solutions
FDBKL	WIRE Break	The analog input from the terminal set for PID Feedback [H3-xx = B] is more than 21mA or less than 3mA for longer than 1 s in these conditions: <ul style="list-style-type: none"> <li>b5-82 = 2 [Feedback Loss 4 ~ 20mA Detect Sel = Fault]</li> <li>b5-01 ≠ 0 [PID Mode Setting ≠ Disabled]</li> <li>H3-01, H3-09, or H3-05 = 2 [Terminal A1/A2/A3 Signal Level Selection = 4 to 20 mA]</li> </ul>	Make sure that you install the PID feedback source and it operates correctly.
<b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>If the drive detects this fault, it will operate the motor as specified by the settings of b5-82.</li> <li>Parameter L5-42 [Feedback Loss Fault Retry Select] sets the Auto Restart function of this fault.</li> </ul>			
Code	Name	Causes	Possible Solutions
GF	Ground Fault	Overheating caused damage to the motor or the motor insulation is not satisfactory.	Measure the motor insulation resistance, and replace the motor if there is electrical conduction or unserviceable insulation.
		The motor main circuit cable is contacting ground to make a short circuit.	<ul style="list-style-type: none"> <li>Examine the motor main circuit cable for damage, and repair short circuits.</li> <li>Measure the resistance between the motor main circuit cable and the ground terminal. If there is electrical conduction, replace the cable.</li> </ul>
		An increase in the stray capacitance of the cable and the ground terminal caused an increase in the leakage current.	<ul style="list-style-type: none"> <li>If the wiring length of the cable is more than 100 m, decrease the carrier frequency.</li> <li>Decrease the stray capacitance.</li> </ul>
		There was a problem with the drive hardware.	Replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.
<b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this fault if a current short to ground was more than 50% of rated current on the output side of the drive.</li> <li>Do a Fault Reset to clear the fault.</li> <li>L5-08 [Fault Reset Enable Select Grp2] disables the Auto Restart function.</li> </ul>			
Code	Name	Causes	Possible Solutions
HFB	High Feedback Sensed	The feedback level is more than the level set in Y1-11 [High Feedback Level] for the time set in Y1-12 [High Feedback Lvl Fault Dly Time].	<ul style="list-style-type: none"> <li>Decrease the feedback level less than Y1-11.</li> <li>Set Y1-11 and Y1-12 correctly.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>If the drive detects this fault, it will respond as specified by the setting of Y1-13 [High Feedback Selection].</li> <li>Parameter L5-41 [Hi Feedback Flt Retry Selection] sets the Auto Restart function of this fault.</li> </ul>			
Code	Name	Causes	Possible Solutions
HIAUX	High PI Aux Feedback Level	PI Auxiliary Feedback is more than the level set in YF-12 [PI Aux Control High Level Detect] for the time set in YF-13 [PI Aux High Level Detection Time] in these conditions: <ul style="list-style-type: none"> <li>The drive is running.</li> <li>The output frequency &gt; 0.</li> </ul>	<ul style="list-style-type: none"> <li>Decrease the PI Auxiliary Feedback level less than YF-12.</li> <li>Set YF-12 and YF-13 correctly.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>Parameter YF-14 [PI Aux Hi Level Detection Select] sets the Auto Restart function of this fault.</li> </ul>			

Code	Name	Causes	Possible Solutions
HLCE	High Level Communication Errors	Communication data error occurred between the option and the master drive when you use Gateway function. The master drive detects <i>oFxxx</i> and the slave drive detects <i>HLCE</i> .	Examine the wiring between the option and the master drive and remove the cause of the fault.
<b>Note:</b> This fault occurs when the drive is a slave drive in Gateway Mode [ <i>F6-16</i> ≠ 0] and communication is lost from the master.			
Code	Name	Causes	Possible Solutions
HWL	High Water Level	<ul style="list-style-type: none"> <li>The digital input terminal set to <i>HI-xx = BC</i> [<i>MFDI Function Selection = High Water Level</i>] activated or is defective.</li> <li>The digital input terminal set to <i>HI-xx = IBC</i> [<i>High Water Level</i>] deactivated or is defective.</li> </ul>	<ul style="list-style-type: none"> <li>Decrease the water level.</li> <li>Adjust the terminal set to <i>HI-xx = BC</i> or <i>IBC</i>.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>Parameter <i>Y1-36</i> [<i>High/Low Water DI Fault Det Sel</i>] sets when the drive detects this fault.</li> <li>The drive must not be in a high water level condition to do Auto-Restart.</li> </ul>			
Code	Name	Causes	Possible Solutions
LF	Output Phase Loss	The motor main circuit cable is disconnected.	Connect motor main circuit cable wiring. Correct wiring errors in the main circuit drive input power.
		There is a disconnection in the motor coil winding.	If a coil is disconnected, measure the motor Line-to-Line Resistance and replace the motor.
		The screws on the drive output terminals are loose.	Tighten the terminal screws to the correct tightening torque.
		The rated output current of the motor is less than 5% of the drive rated current.	Examine the drive capacity or the motor output to be applied.
		You are trying to use a single-phase motor.	The drive cannot operate a single-phase motor.
		The output transistor in the drive is damaged.	<ul style="list-style-type: none"> <li>Re-energize the drive.</li> <li>If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this fault if phase loss occurs on the output side of the drive.</li> <li>Do a Fault Reset to clear the fault.</li> <li>Set <i>L8-07</i> [<i>Output Phase Loss Protection Sel</i>] to enable and disable <i>LF</i> detection.</li> </ul>			
Code	Name	Causes	Possible Solutions
LF2	Output Current Imbalance	Phase loss occurred in the wiring on the output side of the drive.	Examine for wiring errors or disconnected wires on the output side of the drive, and repair problems.
		The output terminal screws of the drive are loose.	Tighten the terminal screws to the correct tightening torque.
		There is not balance between the three phases of the PM motor impedance.	<ul style="list-style-type: none"> <li>Measure the Line-to-Line Resistance for each motor phase and make sure that resistance is equal in the three phases, and that all wires are connected correctly.</li> <li>Replace the motor.</li> </ul>
		The drive output circuit is broken.	<ul style="list-style-type: none"> <li>Re-energize the drive.</li> <li>If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this fault if there is not balance between the three phases of the output current from the PM motor.</li> <li>Do a Fault Reset to clear the fault.</li> </ul>			
Code	Name	Causes	Possible Solutions
LFB	Low Feedback Sensed	The feedback level is less than the level set in <i>Y1-08</i> [ <i>Low Feedback Level</i> ] for the time set in <i>Y1-09</i> [ <i>Low Feedback Lvl Fault Dly Time</i> ].	<ul style="list-style-type: none"> <li>Increase the feedback level to more than <i>Y1-08</i>.</li> <li>Set <i>Y1-08</i> and <i>Y1-09</i> correctly.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>If the drive detects this fault, it will respond as specified by the setting of <i>Y1-10</i> [<i>Low Feedback Selection</i>].</li> <li>Parameter <i>L5-40</i> [<i>Low Feedback Flt Retry Selection</i>] sets the Auto Restart function of this fault.</li> </ul>			
Code	Name	Causes	Possible Solutions
LOAUX	Low PI Aux Feedback Level	When the drive is running, PI Auxiliary Feedback is less than the level set in <i>YF-09</i> [ <i>PI Aux Control Low Lvl Detection</i> ] for the time set in <i>YF-10</i> [ <i>PI Aux Control Low Lvl Det Time</i> ].	<ul style="list-style-type: none"> <li>Increase the PI Auxiliary Feedback level to be more than <i>YF-09</i>.</li> <li>Set <i>YF-09</i> and <i>YF-10</i> correctly.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>Parameter <i>YF-11</i> [<i>PI Aux Control Low Level Det Sel</i>] sets the Auto Restart function of this fault.</li> </ul>			

## 2.4 Fault

Code	Name	Causes	Possible Solutions
LOP	Loss of Prime	The drive used the <i>Y1-18 [Prime Loss Detection Method]</i> setting and measured a pump load that is less than the level set in <i>Y1-19 [Prime Loss Level]</i> for the time set in <i>Y1-20 [Prime Loss Time]</i> , and the output frequency is <i>Y1-21 [Prime Loss Activation Freq]</i> or more.	<ul style="list-style-type: none"> <li>Examine for a dry well, air in the system, or no water in the system. Use preferred priming method suggested by the pump manufacturer to restart the pump.</li> <li>When there is resistance in the pump, let the system pump water again.</li> <li>Set <i>Y1-18</i> to <i>Y1-21</i> correctly.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>If the drive detects this fault, it will respond as specified by the setting of <i>Y1-22 [Prime Loss Selection]</i>.</li> <li>Parameters <i>L5-51 [Loss of Prime Fault Retry Select]</i> and <i>Y1-23 [Prime Loss Max Restart Time]</i> set the Auto Restart function of this fault.</li> </ul>			
Code	Name	Causes	Possible Solutions
LWL	Low Water Level	<ul style="list-style-type: none"> <li>The digital input terminal set to <i>H1-xx = BB [MFDI Function Selection = Low Water Level]</i> activated or is defective.</li> <li>The digital input terminal set to <i>H1-xx = 1BB [! Low Water Level]</i> deactivated or is defective.</li> </ul>	<ul style="list-style-type: none"> <li>Increase the water level.</li> <li>Adjust the terminal set to <i>H1-xx = BB</i> or <i>1BB</i>.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>Parameter <i>Y1-36 [High/Low Water DI Fault Det Sel]</i> sets when the drive detects this fault.</li> <li>The drive must not be in a low water level condition to do Auto-Restart.</li> </ul>			
Code	Name	Causes	Possible Solutions
NMS	Setpoint Not Met	The feedback deviates from the setpoint at a level more than <i>Y1-15 [Maximum Setpoint Difference]</i> for the time set in <i>Y1-16 [Not Maintaining Setpoint Time]</i> .	<ul style="list-style-type: none"> <li>Examine for a blocked impeller, over cycling, or broken pipe.</li> <li>Set <i>Y1-15</i> and <i>Y1-16</i> correctly.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>If the drive detects this fault, it will respond as specified by the setting of <i>Y1-17 [Not Maintaining Setpoint Sel]</i>.</li> <li>Parameter <i>L5-50 [Setpoint Not Met Fault Retry Sel]</i> sets the Auto Restart function of this fault.</li> </ul>			
Code	Name	Causes	Possible Solutions
nSE	Node Setup Error	The drive received a Run command while the Node Setup function was active.	Stop the drive when the Node Setup function is in use.
<b>Note:</b> Do a Fault Reset to clear the fault.			
Code	Name	Causes	Possible Solutions
oC	Overcurrent	The load is too large.	<ul style="list-style-type: none"> <li>Measure the current flowing into the motor.</li> <li>Replace the drive with a larger capacity model if the current value is more than the drive rated current.</li> <li>Decrease the load or replace with a larger drive to prevent sudden changes in the current level.</li> </ul>
		Overheating caused damage to the motor or the motor insulation is not satisfactory.	Measure the motor insulation resistance, and replace the motor if there is electrical conduction or unserviceable insulation.
		The motor main circuit cable is contacting ground to make a short circuit.	<ul style="list-style-type: none"> <li>Examine the motor main circuit cable for damage, and repair short circuits.</li> <li>Measure the resistance between the motor main circuit cable and the ground terminal. If there is electrical conduction, replace the cable.</li> </ul>
		A short circuit or ground fault on the drive output side caused damage to the output transistor of the drive.	<ul style="list-style-type: none"> <li>Make sure that there is not a short circuit in terminals - and terminals U/T1, V/T2, and W/T3.</li> <li>If there is a short circuit, contact Yaskawa or your nearest sales representative.</li> </ul>
		The acceleration time is too short.	<ul style="list-style-type: none"> <li>Calculate the torque necessary during acceleration related to the load inertia and the specified acceleration time.</li> <li>Increase the values set in <i>C1-01</i> or <i>C1-03 [Acceleration Times]</i> to get the necessary torque.</li> <li>Increase the values set in <i>C2-01</i> to <i>C2-04 [S-Curve Characteristics]</i> to get the necessary torque.</li> <li>Replace the drive with a larger capacity model.</li> </ul>
		The drive is trying to operate a specialized motor or a motor that is larger than the maximum applicable motor output of the drive.	<ul style="list-style-type: none"> <li>Examine the motor nameplate, the motor, and the drive to make sure that the drive rated current is larger than the motor rated current.</li> <li>Replace the drive with a larger capacity model.</li> </ul>
		A magnetic contactor was switched at the output.	Set the operation sequence to not turn ON or OFF the magnetic contactor while the drive is outputting voltage.

Code	Name	Causes	Possible Solutions
		The V/f pattern settings are incorrect.	<ul style="list-style-type: none"> <li>Examine the ratios between the V/f pattern frequency and voltage. Decrease the voltage if it is too high compared to the frequency.</li> <li>Adjust E1-04 to E1-10 [V/f Pattern Parameters]. For motor 2, adjust E3-04 to E3-10.</li> </ul>
		The torque compensation gain is too large.	Decrease the value set in C4-01 [Torque Compensation Gain] to make sure that the motor does not stall.
		Electrical interference caused a problem.	Examine the control circuit lines, main circuit lines, and ground wiring, and decrease the effects of electrical interference.
		The gain during overexcitation operation is too large.	<ul style="list-style-type: none"> <li>Find the time when the fault occurs.</li> <li>If the fault occurs at the same time as overexcitation operation, decrease the value set in n3-13 [OverexcitationBraking (OEB) Gain] and consider the motor flux saturation.</li> </ul>
		The drive received a Run command while the motor was coasting.	<ul style="list-style-type: none"> <li>Examine the sequence and input the Run command after the motor fully stops.</li> <li>Set b3-01 = 1 [Speed Search at Start Selection = Enabled] or set H1-xx = 61, 62 [Speed Search from Fmax or Fref] to input speed search commands from the MFDI terminals.</li> </ul>
		The motor code setting is incorrect for PM Control Methods.	<ul style="list-style-type: none"> <li>Enter the correct motor code to E5-01 [PM Motor Code Selection] as specified by the PM motor.</li> <li>For specialized motors, refer to the motor test report and set E5-xx [PM Motor Settings] correctly.</li> </ul>
		The current flowing in the motor is more than the value set in L8-27 [Overcurrent Detection Gain] for PM Control Methods.	Correct the value set in L8-27.
		The control method is set incorrectly for the motor.	Set A1-02 [Control Method Selection] correctly.
		The motor main circuit cable is too long.	Replace the drive with a larger capacity model.
		Speed search does not complete at start when A1-02 = 8 [EZ Vector Control] and you use an induction motor.	When E9-01 = 0 [Motor Type Selection = Induction (IM)], set b3-24 = 2 [Speed Search Method Selection = Current Detection Speed Search].
		The relay or contactor on the soft-charge bypass relay is damaged.	<ul style="list-style-type: none"> <li>Re-energize the drive.</li> <li>If the fault stays, replace the control board or the drive.</li> </ul>
		An overcurrent condition occurred during overexcitation deceleration.	<ul style="list-style-type: none"> <li>Decrease the value set in n3-13 [OverexcitationBraking (OEB) Gain].</li> <li>Decrease the value set in n3-21 [HSB Current Suppression Level].</li> </ul>
		You use a premium efficiency motor.	Use these values to adjust the parameters: <ul style="list-style-type: none"> <li>b3-03 [Speed Search Deceleration Time] = default value × 2</li> <li>L2-03 [Minimum Baseblock Time] = default value × 2</li> <li>L2-04 [Powerloss V/f Recovery Ramp Time] = default value × 2</li> </ul>

**Note:**  
 • This fault occurs if the drive sensors detect a drive output current more than the specified overcurrent detection level.  
 • Do a Fault Reset to clear the fault.

Code	Name	Causes	Possible Solutions
OD	Output Disconnect	The output circuit between the drive and the motor is open, and the drive output current is less than 5% of E2-01 [Motor Rated Current (FLA)].	Close the disconnected output circuit between the drive and the motor.

**Note:**  
 • Do a Fault Reset to clear the fault.  
 • If the drive detects this fault, it will respond as specified by the setting of Y4-42 [Output Disconnect Detection Sel].

Code	Name	Causes	Possible Solutions
oFA00	Option Not Compatible with Port	The option connected to connector CN5-A is not compatible.	Connect the option to the correct connector.

**Note:**  
 • Do a Fault Reset to clear the fault.  
 • Fault trace is not available for these faults.

Code	Name	Causes	Possible Solutions
oFA01	Option Fault/Connection Error	The option card connected to connector CN5-A is not compatible.	<ol style="list-style-type: none"> <li>De-energize the drive.</li> <li>Refer to the option card manual and correctly connect the option card to the connector on the drive.</li> </ol>

**Note:**  
 Do a Fault Reset to clear the fault.

## 2.4 Fault

Code	Name	Causes	Possible Solutions
oFA02	Duplicate Options	The same option cards or the same type of option cards are connected to connectors CN5-A and B.	Connect the option card to the correct connector.
<b>Note:</b> Do a Fault Reset to clear the fault.			
Code	Name	Causes	Possible Solutions
oFA03	Diagnostic Error	A fault occurred in the option card.	<ol style="list-style-type: none"> <li>1. De-energize the drive.</li> <li>2. Make sure that the option card is correctly connected to the connector.</li> <li>3. If the problem continues, replace the option card.</li> </ol>
<b>Note:</b> Do a Fault Reset to clear the fault.			
Code	Name	Causes	Possible Solutions
oFA04	Flash Write Mode	A fault occurred in the option card.	<ol style="list-style-type: none"> <li>1. De-energize the drive.</li> <li>2. Make sure that the option card is correctly connected to the connector.</li> <li>3. If the problem continues, replace the option card.</li> </ol>
<b>Note:</b> Do a Fault Reset to clear the fault.			
Code	Name	Causes	Possible Solutions
oFA05	Option A/D Error	A fault occurred in the option card.	<ol style="list-style-type: none"> <li>1. De-energize the drive.</li> <li>2. Make sure that the option card is correctly connected to the connector.</li> <li>3. If the problem continues, replace the option card.</li> </ol>
<b>Note:</b> Do a Fault Reset to clear the fault.			
Code	Name	Causes	Possible Solutions
oFA06	Option Communication Error	A fault occurred in the option card.	<ol style="list-style-type: none"> <li>1. De-energize the drive.</li> <li>2. Make sure that the option card is correctly connected to the connector.</li> <li>3. If the problem continues, replace the option card.</li> </ol>
<b>Note:</b> Do a Fault Reset to clear the fault.			
Code	Name	Causes	Possible Solutions
oFA10	Option RAM Error	A fault occurred in the option card.	<ol style="list-style-type: none"> <li>1. De-energize the drive.</li> <li>2. Make sure that the option card is correctly connected to the connector.</li> <li>3. If the problem continues, replace the option card.</li> </ol>
<b>Note:</b> Do a Fault Reset to clear the fault.			
Code	Name	Causes	Possible Solutions
oFA11	Option Ope Mode Error	A fault occurred in the option card.	<ol style="list-style-type: none"> <li>1. De-energize the drive.</li> <li>2. Make sure that the option card is correctly connected to the connector.</li> <li>3. If the problem continues, replace the option card.</li> </ol>
<b>Note:</b> Do a Fault Reset to clear the fault.			
Code	Name	Causes	Possible Solutions
oFA12	Drive Receive CRC Error	A fault occurred in the option card.	<ol style="list-style-type: none"> <li>1. De-energize the drive.</li> <li>2. Make sure that the option card is correctly connected to the connector.</li> <li>3. If the problem continues, replace the option card.</li> </ol>
<b>Note:</b> Do a Fault Reset to clear the fault.			
Code	Name	Causes	Possible Solutions
oFA13	Drive Receive Frame Error	A fault occurred in the option card.	<ol style="list-style-type: none"> <li>1. De-energize the drive.</li> <li>2. Make sure that the option card is correctly connected to the connector.</li> <li>3. If the problem continues, replace the option card.</li> </ol>
<b>Note:</b> Do a Fault Reset to clear the fault.			

Code	Name	Causes	Possible Solutions
oFA14	Drive Receive Abort Error	A fault occurred in the option card.	<ol style="list-style-type: none"> <li>1. De-energize the drive.</li> <li>2. Make sure that the option card is correctly connected to the connector.</li> <li>3. If the problem continues, replace the option card.</li> </ol>
<b>Note:</b> Do a Fault Reset to clear the fault.			
Code	Name	Causes	Possible Solutions
oFA15	Option Receive CRC Error	A fault occurred in the option card.	<ol style="list-style-type: none"> <li>1. De-energize the drive.</li> <li>2. Make sure that the option card is correctly connected to the connector.</li> <li>3. If the problem continues, replace the option card.</li> </ol>
<b>Note:</b> Do a Fault Reset to clear the fault.			
Code	Name	Causes	Possible Solutions
oFA16	Option Receive Frame Error	A fault occurred in the option card.	<ol style="list-style-type: none"> <li>1. De-energize the drive.</li> <li>2. Make sure that the option card is correctly connected to the connector.</li> <li>3. If the problem continues, replace the option card.</li> </ol>
<b>Note:</b> Do a Fault Reset to clear the fault.			
Code	Name	Causes	Possible Solutions
oFA17	Option Receive Abort Error	A fault occurred in the option card.	<ol style="list-style-type: none"> <li>1. De-energize the drive.</li> <li>2. Make sure that the option card is correctly connected to the connector.</li> <li>3. If the problem continues, replace the option card.</li> </ol>
<b>Note:</b> Do a Fault Reset to clear the fault.			
Code	Name	Causes	Possible Solutions
oFA30	COM ID Error	A fault occurred in the option card.	<ol style="list-style-type: none"> <li>1. De-energize the drive.</li> <li>2. Make sure that the option card is correctly connected to the connector.</li> <li>3. If the problem continues, replace the option card.</li> </ol>
<b>Note:</b> Do a Fault Reset to clear the fault.			
Code	Name	Causes	Possible Solutions
oFA31	Type Code Error	A fault occurred in the option card.	<ol style="list-style-type: none"> <li>1. De-energize the drive.</li> <li>2. Make sure that the option card is correctly connected to the connector.</li> <li>3. If the problem continues, replace the option card.</li> </ol>
<b>Note:</b> Do a Fault Reset to clear the fault.			
Code	Name	Causes	Possible Solutions
oFA32	SUM Check Error	A fault occurred in the option card.	<ol style="list-style-type: none"> <li>1. De-energize the drive.</li> <li>2. Make sure that the option card is correctly connected to the connector.</li> <li>3. If the problem continues, replace the option card.</li> </ol>
<b>Note:</b> Do a Fault Reset to clear the fault.			
Code	Name	Causes	Possible Solutions
oFA33	Option Receive Time Over	A fault occurred in the option card.	<ol style="list-style-type: none"> <li>1. De-energize the drive.</li> <li>2. Make sure that the option card is correctly connected to the connector.</li> <li>3. If the problem continues, replace the option card.</li> </ol>
<b>Note:</b> Do a Fault Reset to clear the fault.			

## 2.4 Fault

Code	Name	Causes	Possible Solutions
oFA34	Memobus Time Over	A fault occurred in the option card.	<ol style="list-style-type: none"> <li>1. De-energize the drive.</li> <li>2. Make sure that the option card is correctly connected to the connector.</li> <li>3. If the problem continues, replace the option card.</li> </ol>
<b>Note:</b> Do a Fault Reset to clear the fault.			
Code	Name	Causes	Possible Solutions
oFA35	Drive Receive Time Over 1	A fault occurred in the option card.	<ol style="list-style-type: none"> <li>1. De-energize the drive.</li> <li>2. Make sure that the option card is correctly connected to the connector.</li> <li>3. If the problem continues, replace the option card.</li> </ol>
<b>Note:</b> Do a Fault Reset to clear the fault.			
Code	Name	Causes	Possible Solutions
oFA36	CI Check Error	A fault occurred in the option card.	<ol style="list-style-type: none"> <li>1. De-energize the drive.</li> <li>2. Make sure that the option card is correctly connected to the connector.</li> <li>3. If the problem continues, replace the option card.</li> </ol>
<b>Note:</b> Do a Fault Reset to clear the fault.			
Code	Name	Causes	Possible Solutions
oFA37	Drive Receive Time Over 2	A fault occurred in the option card.	<ol style="list-style-type: none"> <li>1. De-energize the drive.</li> <li>2. Make sure that the option card is correctly connected to the connector.</li> <li>3. If the problem continues, replace the option card.</li> </ol>
<b>Note:</b> Do a Fault Reset to clear the fault.			
Code	Name	Causes	Possible Solutions
oFA38	Control Reference Error	A fault occurred in the option card.	<ol style="list-style-type: none"> <li>1. De-energize the drive.</li> <li>2. Make sure that the option card is correctly connected to the connector.</li> <li>3. If the problem continues, replace the option card.</li> </ol>
<b>Note:</b> Do a Fault Reset to clear the fault.			
Code	Name	Causes	Possible Solutions
oFA39	Drive Receive Time Over 3	A fault occurred in the option card.	<ol style="list-style-type: none"> <li>1. De-energize the drive.</li> <li>2. Make sure that the option card is correctly connected to the connector.</li> <li>3. If the problem continues, replace the option card.</li> </ol>
<b>Note:</b> Do a Fault Reset to clear the fault.			
Code	Name	Causes	Possible Solutions
oFA40	CtrlResSel 1Err	A fault occurred in the option card.	<ol style="list-style-type: none"> <li>1. De-energize the drive.</li> <li>2. Make sure that the option card is correctly connected to the connector.</li> <li>3. If the problem continues, replace the option card.</li> </ol>
<b>Note:</b> Do a Fault Reset to clear the fault.			
Code	Name	Causes	Possible Solutions
oFA41	Drive Receive Time Over 4	A fault occurred in the option card.	<ol style="list-style-type: none"> <li>1. De-energize the drive.</li> <li>2. Make sure that the option card is correctly connected to the connector.</li> <li>3. If the problem continues, replace the option card.</li> </ol>
<b>Note:</b> Do a Fault Reset to clear the fault.			

Code	Name	Causes	Possible Solutions
oFA42	CtrlResSel 2Err	A fault occurred in the option card.	<ol style="list-style-type: none"> <li>1. De-energize the drive.</li> <li>2. Make sure that the option card is correctly connected to the connector.</li> <li>3. If the problem continues, replace the option card.</li> </ol>
<b>Note:</b> Do a Fault Reset to clear the fault.			
Code	Name	Causes	Possible Solutions
oFA43	Drive Receive Time Over 5	A fault occurred in the option card.	<ol style="list-style-type: none"> <li>1. De-energize the drive.</li> <li>2. Make sure that the option card is correctly connected to the connector.</li> <li>3. If the problem continues, replace the option card.</li> </ol>
<b>Note:</b> Do a Fault Reset to clear the fault.			
Code	Name	Causes	Possible Solutions
oFb00	Option Not Compatible with Port	The option connected to connector CN5-B is not compatible.	Connect the option to the correct connector. <b>Note:</b> The communication options cannot connect to connector CN5-B.
<b>Note:</b> <ul style="list-style-type: none"> <li>• Do a Fault Reset to clear the fault.</li> <li>• Fault trace is not available for these faults.</li> </ul>			
Code	Name	Causes	Possible Solutions
oFb01	Option Fault/Connection Error	The option card connected to connector CN5-B was changed during operation.	<ol style="list-style-type: none"> <li>1. De-energize the drive.</li> <li>2. Refer to the option card manual and correctly connect the option card to the connector on the drive.</li> </ol>
<b>Note:</b> Do a Fault Reset to clear the fault.			
Code	Name	Causes	Possible Solutions
oFb02	Duplicate Options	The same option cards or the same type of option cards are connected to connectors CN5-A and B.	Connect the option card to the correct connector.
<b>Note:</b> Do a Fault Reset to clear the fault.			
Code	Name	Causes	Possible Solutions
oFb03	Diagnostic Error	A fault occurred in the option card.	<ol style="list-style-type: none"> <li>1. De-energize the drive.</li> <li>2. Make sure that the option card is correctly connected to the connector.</li> <li>3. If the problem continues, replace the option card.</li> </ol>
<b>Note:</b> Do a Fault Reset to clear the fault.			
Code	Name	Causes	Possible Solutions
oFb04	Flash Write Mode	A fault occurred in the option card.	<ol style="list-style-type: none"> <li>1. De-energize the drive.</li> <li>2. Make sure that the option card is correctly connected to the connector.</li> <li>3. If the problem continues, replace the option card.</li> </ol>
<b>Note:</b> Do a Fault Reset to clear the fault.			
Code	Name	Causes	Possible Solutions
oFb05	Option A/D Error	A fault occurred in the option card.	<ol style="list-style-type: none"> <li>1. De-energize the drive.</li> <li>2. Make sure that the option card is correctly connected to the connector.</li> <li>3. If the problem continues, replace the option card.</li> </ol>
<b>Note:</b> Do a Fault Reset to clear the fault.			
Code	Name	Causes	Possible Solutions
oFb06	Option Communication Error	A fault occurred in the option card.	<ol style="list-style-type: none"> <li>1. De-energize the drive.</li> <li>2. Make sure that the option card is correctly connected to the connector.</li> <li>3. If the problem continues, replace the option card.</li> </ol>
<b>Note:</b> Do a Fault Reset to clear the fault.			

## 2.4 Fault

Code	Name	Causes	Possible Solutions
oFb10	Option RAM Error	A fault occurred in the option card.	<ol style="list-style-type: none"> <li>1. De-energize the drive.</li> <li>2. Make sure that the option card is correctly connected to the connector.</li> <li>3. If the problem continues, replace the option card.</li> </ol>
<b>Note:</b> Do a Fault Reset to clear the fault.			
Code	Name	Causes	Possible Solutions
oFb11	Option Ope Mode Error	A fault occurred in the option card.	<ol style="list-style-type: none"> <li>1. De-energize the drive.</li> <li>2. Make sure that the option card is correctly connected to the connector.</li> <li>3. If the problem continues, replace the option card.</li> </ol>
<b>Note:</b> Do a Fault Reset to clear the fault.			
Code	Name	Causes	Possible Solutions
oFb12	Drive Receive CRC Error	A fault occurred in the option card.	<ol style="list-style-type: none"> <li>1. De-energize the drive.</li> <li>2. Make sure that the option card is correctly connected to the connector.</li> <li>3. If the problem continues, replace the option card.</li> </ol>
<b>Note:</b> Do a Fault Reset to clear the fault.			
Code	Name	Causes	Possible Solutions
oFb13	Drive Receive Frame Error	A fault occurred in the option card.	<ol style="list-style-type: none"> <li>1. De-energize the drive.</li> <li>2. Make sure that the option card is correctly connected to the connector.</li> <li>3. If the problem continues, replace the option card.</li> </ol>
<b>Note:</b> Do a Fault Reset to clear the fault.			
Code	Name	Causes	Possible Solutions
oFb14	Drive Receive Abort Error	A fault occurred in the option card.	<ol style="list-style-type: none"> <li>1. De-energize the drive.</li> <li>2. Make sure that the option card is correctly connected to the connector.</li> <li>3. If the problem continues, replace the option card.</li> </ol>
<b>Note:</b> Do a Fault Reset to clear the fault.			
Code	Name	Causes	Possible Solutions
oFb15	Option Receive CRC Error	A fault occurred in the option card.	<ol style="list-style-type: none"> <li>1. De-energize the drive.</li> <li>2. Make sure that the option card is correctly connected to the connector.</li> <li>3. If the problem continues, replace the option card.</li> </ol>
<b>Note:</b> Do a Fault Reset to clear the fault.			
Code	Name	Causes	Possible Solutions
oFb16	Option Receive Frame Error	A fault occurred in the option card.	<ol style="list-style-type: none"> <li>1. De-energize the drive.</li> <li>2. Make sure that the option card is correctly connected to the connector.</li> <li>3. If the problem continues, replace the option card.</li> </ol>
<b>Note:</b> Do a Fault Reset to clear the fault.			
Code	Name	Causes	Possible Solutions
oFb17	Option Receive Abort Error	A fault occurred in the option card.	<ol style="list-style-type: none"> <li>1. De-energize the drive.</li> <li>2. Make sure that the option card is correctly connected to the connector.</li> <li>3. If the problem continues, replace the option card.</li> </ol>
<b>Note:</b> Do a Fault Reset to clear the fault.			

Code	Name	Causes	Possible Solutions
oH	Heatsink Overheat	The ambient temperature is high and the heatsink temperature of the drive is more than the value set in <i>L8-02 [Overheat Alarm Level]</i> .	<ul style="list-style-type: none"> <li>Measure the ambient temperature.</li> <li>Increase the airflow in the control panel.</li> <li>Install a cooling device (cooling fan or air conditioner) to lower the ambient temperature.</li> <li>Remove objects near the drive that are producing too much heat.</li> </ul>
		The load is too heavy.	<ul style="list-style-type: none"> <li>Measure the output current.</li> <li>Decrease the load.</li> <li>Decrease the value set in <i>C6-02 [Carrier Frequency Selection]</i>.</li> </ul>
		The internal cooling fan of the drive stopped.	<ol style="list-style-type: none"> <li>Use the procedures in this manual to replace the cooling fan.</li> <li>Set <i>o4-03 = 0 [Fan Operation Time Setting = 0 h]</i>.</li> </ol>
<p><b>Note:</b></p> <ul style="list-style-type: none"> <li>The drive detects this fault if the heatsink temperature of the drive is more than the value set in <i>L8-02</i>.</li> <li>Do a Fault Reset to clear the fault.</li> <li>If the drive detects this fault, it will operate the motor as specified by the Stopping Method set in <i>L8-03 [Overheat Pre-Alarm Selection]</i>.</li> </ul>			
Code	Name	Causes	Possible Solutions
oH1	Heatsink Overheat	The ambient temperature is high and the heatsink temperature of the drive is more than the <i>oH1</i> detection level.	<ul style="list-style-type: none"> <li>Measure the ambient temperature.</li> <li>Increase the airflow in the control panel.</li> <li>Install a cooling device (cooling fan or air conditioner) to lower the ambient temperature.</li> <li>Remove objects near the drive that are producing too much heat.</li> </ul>
		The load is too heavy.	<ul style="list-style-type: none"> <li>Measure the output current.</li> <li>Decrease the load.</li> <li>Decrease the value set in <i>C6-02 [Carrier Frequency Selection]</i>.</li> </ul>
<p><b>Note:</b></p> <ul style="list-style-type: none"> <li>The drive detects this fault if the heatsink temperature of the drive is more than the <i>oH1</i> detection level. <i>o2-04 [Drive Model (KVA) Selection]</i> determines the <i>oH1</i> detection level.</li> <li>Do a Fault Reset to clear the fault.</li> <li><i>L5-08 [Fault Reset Enable Select Grp2]</i> disables the Auto Restart function.</li> </ul>			
Code	Name	Causes	Possible Solutions
oH3	Motor Overheat (PTC Input)	The thermistor wiring that detects motor temperature is defective.	Correct wiring errors.
		A fault occurred on the machine. Example: The machine is locked.	Examine the machine and remove the cause of the fault
		The motor has overheated.	<ul style="list-style-type: none"> <li>Check the load level, acceleration/deceleration time, and motor start/stop frequency (cycle time).</li> <li>Decrease the load.</li> <li>Increase the values set in <i>C1-01 to C1-04 [Acceleration/Deceleration Times]</i>.</li> <li>Set <i>E2-01 [Motor Rated Current (FLA)]</i> correctly to the value specified by the motor nameplate.</li> <li>Make sure that the motor cooling system is operating correctly, and repair or replace it if it is damaged.</li> <li>Adjust <i>E1-04 to E1-10 [V/f Pattern Parameters]</i>. For motor 2, adjust <i>E3-04 to E3-10</i>. Decrease the values set in <i>E1-08 [Mid Point A Voltage]</i> and <i>E1-10 [Minimum Output Voltage]</i>.</li> </ul> <p><b>Note:</b></p> <p>If the values set in <i>E1-08</i> and <i>E1-10</i> are too low, the overload tolerance will decrease at low speeds.</p>
<p><b>Note:</b></p> <ul style="list-style-type: none"> <li>When <i>H3-02 or H3-10 = E [MFAI Function Selection = Motor Temperature (PTC Input)]</i>, the drive detects this fault if the motor overheat signal entered to analog input terminals A1 or A2 is more than the alarm detection level.</li> <li>Do a Fault Reset to clear the fault.</li> <li>If the drive detects this fault, it will operate the motor as specified by the Stopping Method set in <i>L1-03 [Motor Thermistor oH Alarm Select]</i>.</li> </ul>			

## 2.4 Fault

Code	Name	Causes	Possible Solutions
oH4	Motor Overheat Fault (PTC Input)	The motor has overheated.	<ul style="list-style-type: none"> <li>Check the load level, acceleration/deceleration time, and motor start/stop frequency (cycle time).</li> <li>Decrease the load.</li> <li>Increase the values set in C1-01 to C1-04 [Acceleration/Deceleration Times].</li> <li>Set E2-01 [Motor Rated Current (FLA)] correctly to the value specified by the motor nameplate.</li> <li>Make sure that the motor cooling system is operating correctly, and repair or replace it if it is damaged.</li> <li>Adjust E1-04 to E1-10 [V/f Pattern Parameters]. For motor 2, adjust E3-04 to E3-10. Decrease the values set in E1-08 [Mid Point A Voltage] and E1-10 [Minimum Output Voltage].</li> </ul> <p><b>Note:</b> If E1-08 and E1-10 are set too low, the overload tolerance will decrease at low speeds.</p>
<p><b>Note:</b></p> <ul style="list-style-type: none"> <li>The drive detects this fault if the motor overheat signal that was entered to an analog input terminals A1 or A2 is more than the alarm detection level. (If H3-02 or H3-10 = E [MFAI Function Select = Motor Temperature (PTC Input)] was set.)</li> <li>Do a Fault Reset to clear the fault.</li> </ul>			
Code	Name	Causes	Possible Solutions
oL1	Motor Overload	The load is too heavy.	Decrease the load. <p><b>Note:</b> Reset oL1 when U4-16 [Motor oL1 Level] &lt; 100.</p>
		The acceleration/deceleration times or cycle times are too short.	<ul style="list-style-type: none"> <li>Examine the acceleration/deceleration times and the motor start/stop frequencies (cycle times).</li> <li>Increase the values set in C1-01 to C1-04 [Acceleration/Deceleration Times].</li> </ul>
		Overload occurred while running at low speed.	<ul style="list-style-type: none"> <li>Decrease the load when running at low speed.</li> <li>Increase the motor speed.</li> <li>If the motor is run frequently at low speeds, replace the motor with a larger motor or use a drive-dedicated motor.</li> </ul> <p><b>Note:</b> For general-purpose motors, overload can occur while running at low speed when operating at below the rated current.</p>
		L1-01 [Motor Overload (oL1) Protection] is set incorrectly.	Set L1-01 in as specified by the motor qualities for a drive-dedicated motor.
		The V/f pattern does not fit the motor qualities.	<ul style="list-style-type: none"> <li>Examine the ratios between the V/f pattern frequency and voltage. Decrease the voltage if it is too high compared to the frequency.</li> <li>Adjust E1-04 to E1-10 [V/f Pattern Parameters]. For motor 2, adjust E3-04 to E3-10. Decrease the values set in E1-08 [Mid Point A Voltage] and E1-10 [Minimum Output Voltage].</li> </ul> <p><b>Note:</b> If the values set in E1-08 and E1-10 are too low, the overload tolerance will decrease at low speeds.</p>
		E1-06 [Base Frequency] is set incorrectly.	Set E1-06 to the rated frequency shown on the motor nameplate.
		One drive is operating more than one motor.	Set L1-01 = 0 [Motor Overload (oL1) Protection = Disabled], connect thermal overload relay to each motor to prevent damage to the motor.
		The electronic thermal protector qualities and the motor overload properties do not align.	<ul style="list-style-type: none"> <li>Examine the motor qualities and set L1-01 [Motor Overload (oL1) Protection] correctly.</li> <li>Connect a thermal overload relay to the motor.</li> </ul>
		The electronic thermal protector is operating at an incorrect level.	Set E2-01 [Motor Rated Current (FLA)] correctly to the value specified by the motor nameplate.
		There is increased motor loss from overexcitation operation.	<ul style="list-style-type: none"> <li>Lower the value set in n3-13 [OverexcitationBraking (OEB) Gain].</li> <li>Set L3-04 ≠ 4 [Stall Prevention during Decel ≠ Overexcitation/High Flux].</li> <li>Set n3-23 = 0 [Overexcitation Braking Operation = Disabled].</li> </ul>
The speed search-related parameters are set incorrectly.	<ul style="list-style-type: none"> <li>Examine the settings for all speed search related parameters.</li> <li>Adjust b3-03 [Speed Search Deceleration Time].</li> <li>Set b3-24 = 1 [Speed Search Method Selection = Speed Estimation] after Auto-Tuning.</li> </ul>		
Phase loss in the input power supply is causing the output current to change.	Make sure that there is no phase loss, and repair problems.		

Code	Name	Causes	Possible Solutions
		Overload occurred during overexcitation deceleration.	<ul style="list-style-type: none"> <li>Decrease the value set in n3-13 [OverexcitationBraking (OEB) Gain].</li> <li>Decrease the value set in n3-21 [HSB Current Suppression Level].</li> </ul>

**Note:**

- The drive detects this fault if the electronic thermal protector of the drive started the motor overload protection.
- Do a Fault Reset to clear the fault.
- L5-07 [Fault Reset Enable Select Grp1] disables the Auto Restart function.

Code	Name	Causes	Possible Solutions
oL2	Drive Overload	The load is too large.	Decrease the load.
		The acceleration/deceleration times or cycle times are too short.	<ul style="list-style-type: none"> <li>Examine the acceleration/deceleration times and the motor start/stop frequencies (cycle times).</li> <li>Increase the values set in C1-01 to C1-04 [Acceleration/Deceleration Times].</li> </ul>
		The V/f pattern does not fit the motor qualities.	<ul style="list-style-type: none"> <li>Examine the ratios between the V/f pattern frequency and voltage. Decrease the voltage if it is too high compared to the frequency.</li> <li>Adjust E1-04 to E1-10 [V/f Pattern Parameters]. Decrease the values set in E1-08 [Mid Point A Voltage] and E1-10 [Minimum Output Voltage]. For motor 2, adjust E3-04 to E3-10.</li> </ul> <p><b>Note:</b> If the values set in E1-08 and E1-10 are too low, the overload tolerance will decrease at low speeds.</p>
		The drive capacity is too small.	Replace the drive with a larger capacity model.
		Overload occurred while running at low speed.	<ul style="list-style-type: none"> <li>Decrease the load when running at low speed.</li> <li>Replace the drive with a larger capacity model.</li> <li>Decrease the value set in C6-02 [Carrier Frequency Selection].</li> </ul>
		The torque compensation gain is too large.	Decrease the value set in C4-01 [Torque Compensation Gain] to make sure that the motor does not stall.
		The speed search-related parameters are set incorrectly.	<ul style="list-style-type: none"> <li>Examine the settings for all speed search-related parameters.</li> <li>Adjust b3-03 [Speed Search Deceleration Time].</li> <li>Set b3-24 = 1 [Speed Search Method Selection = Speed Estimation] after Auto-Tuning.</li> </ul>
		Phase loss in the input power supply is causing the output current to change.	<ul style="list-style-type: none"> <li>Correct errors with the wiring for main circuit drive input power.</li> <li>Make sure that there is no phase loss, and repair problems.</li> </ul>
		Overload occurred during overexcitation deceleration.	<ul style="list-style-type: none"> <li>Decrease the value set in n3-13 [OverexcitationBraking (OEB) Gain].</li> <li>Decrease the value set in n3-21 [HSB Current Suppression Level].</li> </ul>

**Note:**

- The drive detects this fault if the electronic thermal protector of the drive started the drive overload protection.
- Do a Fault Reset to clear the fault.
- L5-07 [Fault Reset Enable Select Grp1] disables the Auto Restart function.

Code	Name	Causes	Possible Solutions
oL3	Overtorque Detection 1	A fault occurred on the machine. Example: The machine is locked.	Examine the machine and remove the cause of the fault.
		The parameters are incorrect for the load.	Adjust L6-02 [Torque Detection Level 1] and L6-03 [Torque Detection Time 1] settings.

**Note:**

- The drive detects this fault if the drive output current is more than the level set in L6-02 for longer than L6-03.
- Do a Fault Reset to clear the fault.
- If the drive detects this fault, it will operate the motor as specified by the Stopping Method set in L6-01 [Torque Detection Selection 1].
- L5-07 [Fault Reset Enable Select Grp1] disables the Auto Restart function.

Code	Name	Causes	Possible Solutions
oL4	Overtorque Detection 2	A fault occurred on the machine. Example: The machine is locked.	Examine the machine and remove the cause of the fault.
		The parameters are incorrect for the load.	Adjust L6-05 [Torque Detection Level 2] and L6-06 [Torque Detection Time 2] settings.

**Note:**

- The drive detects this fault if the drive output current is more than the level set in L6-05 for longer than L6-06.
- Do a Fault Reset to clear the fault.
- If the drive detects this fault, it will operate the motor as specified by the Stopping Method set in L6-04 [Torque Detection Selection 2].
- L5-07 [Fault Reset Enable Select Grp1] disables the Auto Restart function.

## 2.4 Fault

Code	Name	Causes	Possible Solutions
oL7	High Slip Braking Overload	The load inertia is too large.	Decrease deceleration times in C1-02 and C1-04 [Deceleration Times] for applications that do not use High Slip Braking.
		An external force on the load side rotated the motor.	
		Something is preventing deceleration on the load side.	
		The value set in n3-04 [HSB Overload Time] is too small.	<ul style="list-style-type: none"> <li>Increase the value set in n3-04.</li> <li>Connect a thermal overload relay to the motor, and set n3-04 = 1200 s (maximum value).</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this fault if the output frequency is constant for longer than n3-04.</li> <li>Do a Fault Reset to clear the fault.</li> </ul>			
Code	Name	Causes	Possible Solutions
oPr	Keypad Connection Fault	The keypad is not securely connected to the connector on the drive.	Examine the connection between the keypad and the drive.
		The connection cable between the drive and the keypad is disconnected.	<ul style="list-style-type: none"> <li>Remove the keypad and connect it again.</li> <li>If the cable is damaged, replace it.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this fault if these conditions are correct: <ul style="list-style-type: none"> <li>-o2-06 = 1 [Keypad Disconnect Detection = Enabled].</li> <li>-b1-02 = 0 [Run Command Selection 1 = Keypad], or the drive is operating in HAND Mode with the keypad.</li> </ul> </li> <li>Do a Fault Reset to clear the fault.</li> </ul>			
Code	Name	Causes	Possible Solutions
oS	Overspeed	There is overshoot.	Decrease C5-01 [ASR Proportional Gain 1] and increase C5-02 [ASR Integral Time 1].
<b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> </ul>			
Code	Name	Causes	Possible Solutions
ov	Overvoltage	Deceleration time is too short and regenerative energy is flowing from the motor into the drive.	<ul style="list-style-type: none"> <li>Set L3-04 = 1 [Stall Prevention during Decel = General Purpose].</li> <li>Increase the values set in C1-02 or C1-04 [Deceleration Times].</li> <li>Perform Deceleration Rate Auto-Tuning.</li> </ul>
		The acceleration time is too short.	<ul style="list-style-type: none"> <li>Make sure that sudden drive acceleration does not cause the fault.</li> <li>Increase the values set in C1-01 or C1-03 [Acceleration Times].</li> <li>Increase the value set in C2-02 [S-Curve Time @ End of Accel].</li> <li>Set L3-11 = 1 [Overvoltage Suppression Select = Enabled].</li> </ul>
		The drive output cable or motor is shorted to ground (the current short to ground is charging the main circuit capacitor of the drive through the power supply).	<ol style="list-style-type: none"> <li>Examine the motor main circuit cable, terminals, and motor terminal box, and then remove ground faults.</li> <li>Re-energize the drive.</li> </ol>
		If the drive detects ov in these conditions, the speed search-related parameters are incorrect: <ul style="list-style-type: none"> <li>During speed search</li> <li>During momentary power loss recovery</li> <li>When the drive starts again automatically</li> <li>When you set A1-02 = 0 [Control Method Selection = V/f Control] and do rotational Auto-Tuning</li> <li>When you use a premium efficiency motor</li> </ul>	<ul style="list-style-type: none"> <li>Examine the settings for all speed search related parameters.</li> <li>Set b3-19 ≠ 0 [Speed Search Restart Attempts ≠ 0 times].</li> <li>Adjust b3-03 [Speed Search Deceleration Time] setting.</li> <li>Do Stationary Auto-Tuning for Line-to-Line Resistance and then set b3-24 = 1 [Speed Search Method Selection = Speed Estimation].</li> <li>Increase the value set in L2-04 [Powerloss V/f Recovery Ramp Time].</li> <li>Use these values to adjust the parameters. <ul style="list-style-type: none"> <li>b3-03 [Speed Search Deceleration Time] = default value × 2</li> <li>L2-03 [Minimum Baseblock Time] = default value × 2</li> <li>L2-04 [Powerloss V/f Recovery Ramp Time] = default value × 2</li> </ul> </li> </ul>
		The power supply voltage is too high.	Decrease the power supply voltage to align with the drive rated voltage.
		Electrical interference caused a drive malfunction.	<ul style="list-style-type: none"> <li>Examine the control circuit lines, main circuit lines, and ground wiring, and decrease the effects of electrical interference.</li> <li>Make sure that a magnetic contactor is not the source of the electrical interference, then use a Surge Protective Device if necessary.</li> </ul>
		The load inertia is set incorrectly.	<ul style="list-style-type: none"> <li>Examine the load inertia settings with KEB, overvoltage suppression, or stall prevention during deceleration.</li> <li>Adjust L3-25 [Load Inertia Ratio] to align with the qualities of the machine.</li> </ul>

Code	Name	Causes	Possible Solutions
		There is motor hunting.	<ul style="list-style-type: none"> <li>Adjust <i>n1-02</i> [<i>Hunting Prevention Gain Setting</i>] settings.</li> <li>Adjust <i>n8-45</i> [<i>Speed Feedback Detection Gain</i>] and <i>n8-47</i> [<i>Pull-in Current Comp Filter Time</i>] settings.</li> </ul>
		Speed search does not complete at start when you use an induction motor in EZOLV control.	When <i>E9-01</i> = 0 [ <i>Motor Type Selection = Induction (IM)</i> ], set <i>b3-24</i> = 2 [ <i>Speed Search Method Selection = Current Detection 2</i> ].
<b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if the DC bus voltage is more than the <i>ov</i> detection level while the drive is running.</li> <li>The <i>ov</i> detection level is approximately 410 V with 208 V class drives. The detection level is approximately 820 V with 480 V class drives.</li> <li>Do a Fault Reset to clear the fault.</li> <li>Parameter <i>L5-08</i> [<i>Fault Reset Enable Select Grp2</i>] disables the Auto Restart function.</li> </ul>			
Code	Name	Causes	Possible Solutions
ov2	DC Bus Overvoltage 2	The wiring is too long and DC bus voltage is too large.	<ul style="list-style-type: none"> <li>Shorten the shielded motor cable.</li> <li>Decrease the carrier frequency.</li> <li>If the power supply has a neutral ground, switch on the internal EMC filter.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this fault when the DC bus voltage increases to more than the Stall Prevention Level during Deceleration for the time set in <i>S6-23</i> [<i>OV2 Detect Time</i>].</li> <li>Do a Fault Reset to clear the fault.</li> <li>This fault is resettable, but will not auto-restart.</li> </ul>			
Code	Name	Causes	Possible Solutions
PE1	PLC Fault 1	The communication option detected a fault.	Refer to the manual for the communication option card.
<b>Note:</b> Do a Fault Reset to clear the fault.			
Code	Name	Causes	Possible Solutions
PE2	PLC Fault 2	The communication option detected a fault.	Refer to the manual for the communication option card.
<b>Note:</b> Do a Fault Reset to clear the fault.			
Code	Name	Causes	Possible Solutions
PF	Input Phase Loss	There is a phase loss in the drive input power.	Correct errors with the wiring for main circuit drive input power.
		There is loose wiring in the drive input power terminals.	Tighten the terminal screws to the correct tightening torque.
		The drive input power voltage is changing too much.	<ul style="list-style-type: none"> <li>Examine the input power for problems.</li> <li>Make the drive input power stable.</li> <li>If the input power supply is good, examine the magnetic contactor on the main circuit side for problems.</li> </ul>
		There is unsatisfactory balance between voltage phases.	<ul style="list-style-type: none"> <li>Examine the input power for problems.</li> <li>Make the drive input power stable.</li> <li>Set <i>L8-05</i> = 0 [<i>Input Phase Loss Protection Sel = Disabled</i>].</li> </ul>
		The main circuit capacitors have become unserviceable.	<ul style="list-style-type: none"> <li>Examine the capacitor maintenance time in monitor <i>U4-05</i> [<i>Capacitor Maintenance</i>]. If <i>U4-05</i> is more than 90%, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> <li>If drive input power is correct and the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if the DC bus voltage changes irregularly without regeneration.</li> <li>Do a Fault Reset to clear the fault.</li> <li>Use <i>L8-05</i> to enable and disable <i>PF</i> detection.</li> </ul>			
Code	Name	Causes	Possible Solutions
SC	Short Circuit/IGBT Failure	Overheating caused damage to the motor or the motor insulation is not satisfactory.	Measure the motor insulation resistance, and replace the motor if there is electrical conduction or unserviceable insulation.
		The motor main circuit cable is contacting ground to make a short circuit.	<ul style="list-style-type: none"> <li>Examine the motor main circuit cable for damage, and repair short circuits.</li> <li>Measure the resistance between the motor main circuit cable and the ground terminal. If there is electrical conduction, replace the cable.</li> </ul>
		A short circuit or ground fault on the drive output side caused damage to the output transistor of the drive.	<ul style="list-style-type: none"> <li>Make sure that there is not a short circuit in terminals +1 and terminals U/T1, V/T2, and W/T3. Make sure that there is not a short circuit in terminals - and terminals U/T1, V/T2, and W/T3.</li> <li>If there is a short circuit, contact Yaskawa or your nearest sales representative.</li> </ul>

## 2.4 Fault

Code	Name	Causes	Possible Solutions
		When $A1-02 = 5$ [Control Method Selection = OLV/PM], the output current is more than the value set in $L8-27$ [Overcurrent Detection Gain].	Set $L8-27$ correctly.
<b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if there is a short circuit or ground fault on the drive output side, or an IGBT failure.</li> <li>Do a Fault Reset to clear the fault.</li> </ul>			
Code	Name	Causes	Possible Solutions
SCF	Safety Circuit Fault	The safety circuit is broken.	<ul style="list-style-type: none"> <li>Make sure that you ground the drive correctly and re-energize the drive.</li> <li>If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> </ul>
Code	Name	Causes	Possible Solutions
SEr	Speed Search Retries Exceeded	The speed search-related parameters are set incorrectly.	<ul style="list-style-type: none"> <li>Decrease <math>b3-10</math> [Speed Estimation Detection Gain].</li> <li>Increase <math>b3-17</math> [Speed Est Retry Current Level].</li> <li>Increase <math>b3-18</math> [Speed Est Retry Detection Time].</li> <li>Do Auto-Tuning again.</li> </ul>
		The motor is coasting in the opposite direction of the Run command.	Set $b3-14 = 1$ [Bi-directional Speed Search = Enabled].
<b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if the number of speed search restarts is more than <math>b3-19</math> [Speed Search Restart Attempts].</li> <li>Do a Fault Reset to clear the fault.</li> </ul>			
Code	Name	Causes	Possible Solutions
SPCNR	Single Phase Converter Not Ready	When $YC-14 = 0$ [Behavior when SPC is Not Ready = Coast to Stop - Fault], the digital input set to $H1-xx = BE$ [MFDI Function Selection = Single Phase Converter Ready NC] deactivated to show the attached converter is faulted or not ready.	<ul style="list-style-type: none"> <li>Examine the wiring between the drive and converter.</li> <li>Examine the error code on converter.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>The drive must not be in an <math>SPCNR</math> condition to do Auto-Restart.</li> </ul>			
Code	Name	Causes	Possible Solutions
STPo	Motor Step-Out Detected	The motor code is set incorrectly for PM Control Methods.	<ul style="list-style-type: none"> <li>Set <math>E5-01</math> [PM Motor Code Selection] correctly as specified by the motor.</li> <li>For specialized motors, refer to the motor test report and set <math>E5-xx</math> correctly.</li> </ul>
		The load is too large.	<ul style="list-style-type: none"> <li>Increase the value set in <math>n8-55</math> [Motor to Load Inertia Ratio].</li> <li>Increase the value set in <math>n8-51</math> [Pull-in Current @ Acceleration]. If the drive detects <math>STPo</math> during deceleration when increasing the value set in <math>n8-51</math>, set the value of <math>n8-79</math> [Pull-in Current @ Deceleration] lower than <math>n8-51</math>.</li> <li>Decrease the load.</li> <li>Replace the drive and motor with larger capacity models.</li> </ul>
		The load inertia is too large.	Increase the value set in $n8-55$ .
		The acceleration/deceleration times are too short.	<ul style="list-style-type: none"> <li>Increase the values set in <math>C1-01</math> to <math>C1-04</math> [Acceleration/Deceleration Times].</li> <li>Increase the value set in <math>C2-01</math> [S-Curve Time @ Start of Accel].</li> </ul>
		Speed response is too slow.	Increase the value set in $n8-55$ .
<b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> </ul>			
Code	Name	Causes	Possible Solutions
TiM	Keypad Time Not Set	There is a battery in the keypad, but the date and time are not set.	Use the keypad to set the date and time.
<b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>Parameter <math>o4-24</math> [bAT Detection Selection] enables and disables <math>TiM</math> detection.</li> </ul>			

Code	Name	Causes	Possible Solutions
UL3	Undertorque Detection 1	A fault occurred on the machine. Example: There is a broken pulley belt.	Examine the machine and remove the cause of the fault.
		The parameters are incorrect for the load.	Adjust L6-02 [Torque Detection Level 1] and L6-03 [Torque Detection Time 1] settings.
<b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if the drive output current is less than the level set in L6-02 for longer than L6-03.</li> <li>Do a Fault Reset to clear the fault.</li> <li>If the drive detects this error, it will operate the motor as specified by the Stopping Method set in L6-01 [Torque Detection Selection 1].</li> </ul>			
Code	Name	Causes	Possible Solutions
UL4	Undertorque Detection 2	A fault occurred on the machine. Example: There is a broken pulley belt.	Examine the machine and remove the cause of the fault.
		The parameters are incorrect for the load.	Adjust L6-05 [Torque Detection Level 2] and L6-06 [Torque Detection Time 2] settings.
<b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if the drive output current is less than the level set in L6-05 for longer than L6-06.</li> <li>Do a Fault Reset to clear the fault.</li> <li>If the drive detects this error, it will operate the motor as specified by the Stopping Method set in L6-04 [Torque Detection Selection 2].</li> </ul>			
Code	Name	Causes	Possible Solutions
UL6	Underload or Belt Break Detected	The output current decreased less than the motor underload curve set in L6-14 [Motor Underload Level @ Min Freq] for longer than the time set in L6-03 [Torque Detection Time 1].	Adjust the L6-14 setting to set the output current to stay the level more than the motor underload curve during usual operations.
<b>Note:</b> Do a Fault Reset to clear the fault.			
Code	Name	Causes	Possible Solutions
Uv1	DC Bus Undervoltage	There is a phase loss in the drive input power.	Correct errors with the wiring for main circuit drive input power.
		There is loose wiring in the drive input power terminals.	Tighten the terminal screws to the correct tightening torque.
		The drive input power voltage is changing too much.	<ul style="list-style-type: none"> <li>Examine the input power for problems.</li> <li>Make the drive input power stable.</li> <li>If the input power supply is good, examine the magnetic contactor on the main circuit side for problems.</li> </ul>
		There was a loss of power.	Use a better power supply.
		The main circuit capacitors have become unserviceable.	Examine the capacitor maintenance time in monitor U4-05 [Capacitor Maintenance]. If U4-05 is more than 90%, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.
		The relay or contactor on the soft-charge bypass relay is damaged.	U4-06 [PreChargeRelayMainte] shows the performance life of the soft-charge bypass relay. If U4-06 is more than 90%, replace the board or the drive. For information about replacing the board, contact Yaskawa or your nearest sales representative.
<b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if the DC bus voltage decreases below the level set in L2-05 [Undervoltage Detection Lvl (Uv1)] while the drive is running.</li> <li>The Uv1 detection level is approximately 190 V for a 208 V class drives. The detection level is approximately 380 V for 480 V class drives. The detection level is approximately 350 V when E1-01 [Input AC Supply Voltage] &lt; 400.</li> <li>Do a Fault Reset to clear the fault.</li> <li>Fault trace is not available for this fault.</li> <li>L5-08 [Fault Reset Enable Select Grp2] disables the Auto Restart function.</li> </ul>			
Code	Name	Causes	Possible Solutions
Uv2	Control Power Undervoltage	The value set in L2-02 [Power Loss Ride Through Time] increased and the momentary power loss recovery unit is not connected to the drive.	Connect the momentary power loss recovery unit to the drive.
		There was a problem with the drive hardware.	<ul style="list-style-type: none"> <li>Re-energize the drive.</li> <li>If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if the control power supply voltage decreases.</li> <li>Do a Fault Reset to clear the fault.</li> <li>Fault trace is not available for this fault.</li> </ul>			

## 2.4 Fault

Code	Name	Causes	Possible Solutions
Uv3	Soft Charge Answerback Fault	The relay or contactor on the soft-charge bypass relay is damaged.	<ul style="list-style-type: none"> <li>Re-energize the drive.</li> <li>If the fault stays, replace the control board or the drive.</li> <li>Check monitor <i>U4-06 [PreChargeRelayMainte]</i>, which shows the performance life of the soft-charge bypass relay. If <i>U4-06</i> is more than 90%, replace the board or the drive. For information about replacing the board, contact Yaskawa or your nearest sales representative.</li> </ul>
		Air inside the drive is too hot.	Check the ambient temperature of the drive.
<b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>Fault trace is not available for this fault.</li> </ul>			
Code	Name	Causes	Possible Solutions
VLTS	Thermostat Fault	The digital input from the terminal set for <i>Thermostat Fault [H1-xx = 88]</i> is active.	Examine the wiring or wait for the motor to cool.
<b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>Parameter <i>L5-53 [Thermostat Fault Retry Selection]</i> sets the Auto Restart function of this fault.</li> </ul>			

## 2.5 Minor Faults/Alarms

This section gives information about the causes and possible solutions when a minor fault or alarm occurs. Use the information in this table to remove the cause of the minor fault or alarm.

Code	Name	Causes	Possible Solutions
AER	Station Address Setting Error	The node address for the communication option is not in the permitted setting range.	For CANopen communication, set F6-35 [CANopen Node ID Selection] correctly.
<b>Note:</b> If the drive detects this error, the terminal set to H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm] will activate.			
Code	Name	Causes	Possible Solutions
AUXFB	PI Aux Feedback Level Loss	The analog input from the terminal set to H3-xx = 27 [MFAI Function Selection = PI Auxiliary Control Feedback Level] is more than 21 mA or less than 3 mA for longer than 1 s.	Repair transducer or wiring.
<b>Note:</b> If the drive detects this error, the terminal set to H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm] will activate.			
Code	Name	Causes	Possible Solutions
bAT	Keypad Battery Low Voltage	The keypad battery voltage is low.	Replace the keypad battery.
<b>Note:</b> • If the drive detects this error, the terminal set to H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm] will activate. • Set o4-24 [bAT Detection Selection] to enable/disable bAT detection.			
Code	Name	Causes	Possible Solutions
bb	Baseblock	An external baseblock command was entered through one of the MFDI terminals Sx, and the drive output stopped as shown by an external baseblock command.	Examine the external sequence and timing of the baseblock command input.
<b>Note:</b> The drive will not output a minor fault signal for this alarm.			
Code	Name	Causes	Possible Solutions
bCE	Bluetooth Communication Error	The smartphone or tablet with DriveWizard Mobile is too far from the keypad.	Move to 10 m (32.8 ft) or less from the keypad. <b>Note:</b> bCE can occur when the smartphone or tablet is 10 m (32.8 ft) or nearer to the keypad for different smartphone and tablet specifications.
		Radio waves from a different device are causing interference with communications between the smartphone or tablet and keypad.	Make sure that no device around the keypad uses the same radio bandwidth (2400 MHz to 2480 MHz), and prevent radio interference.
<b>Note:</b> • The drive detects this error when you use a smartphone or tablet and a Bluetooth LCD keypad to operate the drive. • If the drive detects this error, the terminal set to H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm] will activate. • Use o2-27 [bCE Detection selection] to enable and disable bCE detection.			
Code	Name	Causes	Possible Solutions
BuDif	Main Fdbk Lost, Using Diff Fdbk	Parameter Y4-41 = 1 [Diff Lvl Src Fdbk Backup Select = Enabled] and the drive detected a wire-break on the analog input terminal set for PID Feedback [H3-xx = B].	Examine the connection of the Main PID Feedback Transducer.
		Main PID Feedback Transducer is broken.	Replace Main PID Feedback Transducer.
<b>Note:</b> • The drive detects this error if it does not receive the PID Feedback signal and it uses Differential Feedback [H3-xx = 2D] as backup. • If the drive detects this error, the terminal set to H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm] will activate.			
Code	Name	Causes	Possible Solutions
BuFb	Main Fdbk Lost Using Backup Fdbk	The drive detected wire-break on the analog input terminal set to H3-xx = B [MFAI Function Selection = PID Feedback].	Examine the connection of the Main PID Feedback Transducer.
		Main PID Feedback Transducer is broken.	Replace Main PID Feedback Transducer.
<b>Note:</b> If the drive detects this error, the terminal set to H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm] will activate.			
Code	Name	Causes	Possible Solutions
BuFbl	Backup Fdbk Lost Chk/Repl Xducer	The drive detected wire-break on the analog input terminal set for PID Feedback Backup [H3-xx = 24].	Examine the connection of the Differential PID Feedback transducer.
		Backup PID Feedback Transducer is broken.	Replace Backup PID Feedback Transducer.

## 2.5 Minor Faults/Alarms

Code	Name	Causes	Possible Solutions
		Parameter $Y4-41 = 1$ [ <i>Diff Lvl Src Fdbk Backup Select = Enabled</i> ] and the drive detected a wire-break on the analog input terminal set for <i>Differential Level Source</i> [ $H3-xx = 2D$ ].	Examine the connection of the Differential PID Feedback transducer.
		Parameter $Y4-41 = 1$ and the Differential PID Feedback Transducer is broken.	<ul style="list-style-type: none"> <li>Replace the Differential PID Feedback Transducer.</li> <li>Set <math>Y4-41 = 0</math> [<i>Disabled</i>].</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if it does not receive the <i>PID Feedback Backup</i> signal.</li> <li>If the drive detects this error, the terminal set to <math>H2-01</math> to <math>H2-03 = 10</math> [<i>MFDO Function Selection = Alarm</i>] will activate.</li> </ul>			
Code	Name	Causes	Possible Solutions
bUS	Option Communication Error	The communications cable wiring is incorrect.	Correct wiring errors.
		There is a short-circuit in the communications cable or the communications cable is not connected.	<ul style="list-style-type: none"> <li>Repair short circuits and connect cables.</li> <li>Replace the defective communications cable.</li> </ul>
		Electrical interference caused a communication data error.	<ul style="list-style-type: none"> <li>Examine the control circuit lines, main circuit lines, and ground wiring, and decrease the effects of electrical interference.</li> <li>Make sure that a magnetic contactor is not the source of the electrical interference, then use a Surge Protective Device if necessary.</li> <li>Use only the recommended cables or other shielded line. Ground the shield on the controller side or the drive input power side.</li> <li>Separate the communication wiring from drive power lines, and install a noise filter to the input side of the power supply for communication.</li> <li>Decrease the effects of electrical interference from the controller.</li> </ul>
		The option card is incorrectly installed to the drive.	Correctly install the option card to the drive.
		The option card is damaged.	If the alarm continues and the wiring is correct, replace the option card.
<b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if the Run command or frequency reference is assigned to the option card.</li> <li>If the drive detects this error, the terminal set to <math>H2-01</math> to <math>H2-03 = 10</math> [<i>MFDO Function Selection = Alarm</i>] will activate.</li> <li>If the drive detects this error, it will operate the motor as specified by the stopping method set in <math>F6-01</math> [<i>Communication Error Selection</i>].</li> </ul>			
Code	Name	Causes	Possible Solutions
bUSy	Busy	You set the drive to use MEMOBUS/Modbus communications to change parameters, but you used the keypad to change parameters.	Use MEMOBUS/Modbus communications to enter the enter command, then use the keypad to change the parameter.
		You tried to change a parameter while the drive was changing setting.	Wait until the process is complete.
Code	Name	Causes	Possible Solutions
CALL	Serial Comm Transmission Error	The communications cable wiring is incorrect.	Correct wiring errors.
		There is a short circuit in the communications cable or the communications cable is not connected.	<ul style="list-style-type: none"> <li>Repair the short-circuited or disconnected portion of the cable.</li> <li>Replace the defective communications cable.</li> </ul>
		A programming error occurred on the controller side.	Examine communications at start-up and correct programming errors.
		There is damage to the communications circuitry.	<ul style="list-style-type: none"> <li>Do a self-diagnostics check.</li> <li>If the problem continues, replace the control board or the drive. Contact Yaskawa or your nearest sales representative to replace the control board.</li> </ul>
		The termination resistor setting for MEMOBUS/Modbus communications is incorrect.	On the last drive in a MEMOBUS/Modbus network, set DIP switch S2 to the ON position to enable the termination resistor.
<b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if it does not correctly receive control data from the controller when energizing the drive.</li> <li>If the drive detects this error, the terminal assigned to <math>H2-01</math> to <math>H2-03 = 10</math> [<i>MFDO Function Selection = Alarm</i>] will activate.</li> <li>Parameter <math>H5-33</math> [<i>Power-up CALL Alarm</i>] enables or disables the detection of this alarm at power-up.</li> </ul>			
Code	Name	Causes	Possible Solutions
CE	Modbus Communication Error	The communications cable wiring is incorrect.	Correct wiring errors.
		There is a short circuit in the communications cable or the communications cable is not connected.	<ul style="list-style-type: none"> <li>Repair short circuits and connect cables.</li> <li>Replace the defective communications cable.</li> </ul>

Code	Name	Causes	Possible Solutions
		Electrical interference caused a communication data error.	<ul style="list-style-type: none"> <li>Examine the control circuit lines, main circuit lines, and ground wiring, and decrease the effects of electrical interference.</li> <li>Make sure that a magnetic contactor is not the source of the electrical interference, then use a Surge Protective Device if necessary.</li> <li>Use only the recommended cables or other shielded line. Ground the shield on the controller side or the drive input power side.</li> <li>Separate the communication wiring from drive power lines, and install a noise filter to the input side of the power supply for communication.</li> <li>Decrease the effects of electrical interference from the controller.</li> </ul>
		The communication protocol is not compatible.	<ul style="list-style-type: none"> <li>Examine the values set in <i>H5-xx</i>.</li> <li>Examine the settings on the controller side and correct the difference in communication conditions.</li> </ul>
		The value set in <i>H5-09 [CE Detection Time]</i> is too small for the communications cycle.	<ul style="list-style-type: none"> <li>Change the controller software settings.</li> <li>Increase the value set in <i>H5-09</i>.</li> </ul>
		The controller software or hardware is causing a communication problem.	Examine the controller and remove the cause of the problem.

**Note:**

- This alarm is a different alarm from *CE [Run at H5-34 (CE Go-To-Freq)]*. The keypad will show this alarm when:
  - H5-04 ≠ 4 [Communication Error Stop Method ≠ Run at H5-34 (CE Go-To-Freq)]*
  - H5-04 = 4* but the drive cannot operate at the selected frequency
- The drive detects this error if it does not correctly receive control data for the *CE* detection time set to *H5-09*.
- If the drive detects this error, the terminal set to *H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm]* will activate.
- If the drive detects this error, it will operate the motor as specified by the stopping method set in *H5-04*.

Code	Name	Causes	Possible Solutions
CE	Run at H5-34 (CE Go-To-Freq)	The communications cable wiring is incorrect.	Correct wiring errors.
		There is a short circuit in the communications cable or the communications cable is not connected.	<ul style="list-style-type: none"> <li>Repair short circuits and connect cables.</li> <li>Replace the defective communications cable.</li> </ul>
		Electrical interference caused a communication data error.	<ul style="list-style-type: none"> <li>Examine the control circuit lines, main circuit lines, and ground wiring, and decrease the effects of electrical interference.</li> <li>Make sure that a magnetic contactor is not the source of the electrical interference, then use a Surge Protective Device if necessary.</li> <li>Use only recommended shielded line. Ground the shield on the controller side or on the drive input power side.</li> <li>Separate the communication wiring from drive power lines, and install a noise filter to the input side of the power supply for communication.</li> <li>Decrease the effects of electrical interference from the controller.</li> </ul>
		The communication protocol is not compatible.	<ul style="list-style-type: none"> <li>Examine the values set in <i>H5-xx</i>.</li> <li>Examine the settings on the controller side and correct the difference in communication conditions.</li> </ul>
		The value set in <i>H5-09 [CE Detection Time]</i> is too small for the communications cycle.	<ul style="list-style-type: none"> <li>Make sure that the settings are compatible.</li> <li>Change the software settings in the PLC.</li> <li>Increase the value set in <i>H5-09</i>.</li> </ul>
		The controller software or hardware is causing a communication problem.	Examine the controller and remove the cause of the problem.

**Note:**

- This alarm is a different alarm from the standard *CE [Modbus Communication Error]*. The keypad will show this alarm only when *H5-04 = 4 [Communication Error Stop Method = Run at H5-34 (CE Go-To-Freq)]*. If the drive cannot operate at the selected frequency, the keypad will show the standard *CE* alarm.
- The drive detects this error if it does not correctly receive control data for the *CE* detection time set to *H5-09*.
- If the drive detects this error, the terminal set to *H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm]* will activate.

Code	Name	Causes	Possible Solutions
CrST	Cannot Reset	The drive received a fault reset command when a Run command was active.	Turn off the Run command then de-energize and re-energize the drive.
CyPo	Cycle Power to Accept Changes	Although <i>F6-15 = 1 [Comm. Option Parameters Reload = Reload Now]</i> , the drive does not update the communication option parameters.	Re-energize the drive to update the communication option parameters.
dEv	Speed Deviation	The load is too heavy	Decrease the load.
		Acceleration and deceleration times are set too short.	Increase the values set in <i>C1-01 to C1-04 [Acceleration/Deceleration Time]</i> .

## 2.5 Minor Faults/Alarms

Code	Name	Causes	Possible Solutions
		The <i>dEv</i> detection level settings are incorrect.	Adjust <i>F1-10</i> [ <i>Speed Deviation Detection Level</i> ] and <i>F1-11</i> [ <i>Speed Deviation Detect DelayTime</i> ].
		The load is locked up.	Examine the machine.
		The holding brake is stopping the motor.	Release the holding brake.
<b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if the difference between the detected speed and the speed reference is more than the setting of <i>F1-10</i> for longer than <i>F1-11</i>.</li> <li>If the drive detects this error, the terminal assigned to <i>H2-01</i> to <i>H2-03</i> = 10 [<i>MFDO Function Selection</i> = <i>Alarm</i>] will be ON.</li> <li>If the drive detects this error, the drive will operate the motor as specified by the stopping method set in <i>F1-04</i> [<i>Speed Deviation Detection Select</i>].</li> </ul>			
Code	Name	Causes	Possible Solutions
DIFF	Differential Feedback Exceeded	The difference between the PID Feedback and <i>Differential Level Source</i> [ <i>H3-xx</i> = 2 <i>D</i> ] is more than the level set in <i>Y4-18</i> [ <i>Pre-Charge Loss of Prime Level 2</i> ] for the time set in <i>Y4-19</i> [ <i>Differential Lvl Detection Time</i> ].	<ul style="list-style-type: none"> <li>Replace the feedback transducer or transducers.</li> <li>Set <i>Y4-18</i> and <i>Y4-19</i> correctly.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>If the drive detects this error, it will respond as specified by the setting of <i>Y4-20</i> [<i>Differential Level Detection Sel</i>].</li> <li>If the drive detects this error, the terminal set to <i>H2-01</i> to <i>H2-03</i> = 10 [<i>MFDO Function Selection</i> = <i>Alarm</i>] will activate.</li> </ul>			
Code	Name	Causes	Possible Solutions
dnE	Drive Disabled	A terminal set for <i>H1-xx</i> = 6 <i>A</i> [ <i>MFDI Function Selection</i> = <i>Drive Enable</i> ] deactivated.	Examine the operation sequence.
<b>Note:</b> If the drive detects this error, the terminal set to <i>H2-01</i> to <i>H2-03</i> = 10 [ <i>MFDO Function Selection</i> = <i>Alarm</i> ] will activate.			
Code	Name	Causes	Possible Solutions
DS	De-Scale/De-Rag Active	The terminal is set to <i>H2-xx</i> = <i>C5</i> or <i>1C5</i> [ <i>MFDI Function Selection De-Scale</i> or <i>!De-Scale</i> ] and the set length of run time elapsed.	<ul style="list-style-type: none"> <li>If you do not want to do De-Scale/De-Rag, set <i>Y8-01</i> = 0 [<i>De-Scale Operation Selection</i> = <i>Disabled</i>].</li> <li>Adjust the <i>Y8-08</i> [<i>Run Time before De-Scale</i>] setting.</li> </ul>
<b>Note:</b> If the drive detects this error, the terminal set to <i>H2-01</i> to <i>H2-03</i> = 10 [ <i>MFDO Function Selection</i> = <i>Alarm</i> ] will activate.			
Code	Name	Causes	Possible Solutions
EF	FWD/REV Run Command Input Error	The drive received a forward command and a reverse command at the same time for longer than 0.5 s.	Examine the forward and reverse command sequence and correct the problem.
<b>Note:</b> <ul style="list-style-type: none"> <li>If the drive detects <i>EF</i>, the motor will ramp to stop.</li> <li>If the drive detects this error, the terminal set to <i>H2-01</i> to <i>H2-03</i> = 10 [<i>MFDO Function Selection</i> = <i>Alarm</i>] will activate.</li> </ul>			
Code	Name	Causes	Possible Solutions
EF0	Option Card External Fault	The communication option card received an external fault from the controller.	<ol style="list-style-type: none"> <li>Find the device that caused the external fault and remove the cause.</li> <li>Clear the external fault input from the controller.</li> </ol>
		Programming error occurred on the controller side.	Examine the operation of the controller program.
<b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if the alarm function on the external device side is operating.</li> <li>If the drive detects this error, the terminal set to <i>H2-01</i> to <i>H2-03</i> = 10 [<i>MFDO Function Selection</i> = <i>Alarm</i>] will activate.</li> <li>Use <i>F6-03</i> [<i>Comm External Fault (EF0) Select</i>] to set the stopping method for this fault.</li> </ul>			
Code	Name	Causes	Possible Solutions
EF1	External Fault (Terminal S1)	MFDI terminal S1 caused an external fault through an external device.	<ol style="list-style-type: none"> <li>Find the device that caused the external fault and remove the cause.</li> <li>Clear the external fault input in the MFDI.</li> </ol>
		The wiring is incorrect.	Correctly connect the signal line to MFDI terminal S1.
		<i>External Fault</i> [ <i>H1-01</i> = 2 <i>C</i> to 2 <i>F</i> ] is set to MFDI terminal S1, but the terminal is not in use.	Correctly set the MFDI.
<b>Note:</b> If the drive detects this error, the terminal set to <i>H2-01</i> to <i>H2-03</i> = 10 [ <i>MFDO Function Selection</i> = <i>Alarm</i> ] will activate.			
Code	Name	Causes	Possible Solutions
EF2	External Fault (Terminal S2)	MFDI terminal S2 caused an external fault through an external device.	<ol style="list-style-type: none"> <li>Find the device that caused the external fault and remove the cause.</li> <li>Clear the external fault input in the MFDI.</li> </ol>
		The wiring is incorrect.	Correctly connect the signal line to MFDI terminal S2.

Code	Name	Causes	Possible Solutions
		<i>External Fault [H1-02 = 2C to 2F]</i> is set to MFDI terminal S2, but the terminal is not in use.	Correctly set the MFDI.
<b>Note:</b> If the drive detects this error, the terminal set to <i>H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm]</i> will activate.			
Code	Name	Causes	Possible Solutions
EF3	External Fault (Terminal S3)	MFDI terminal S3 caused an external fault through an external device.	1. Find the device that caused the external fault and remove the cause. 2. Clear the external fault input in the MFDI.
		The wiring is incorrect.	Correctly connect the signal line to MFDI terminal S3.
		<i>External Fault [H1-03 = 2C to 2F]</i> is set to MFDI terminal S3, but the terminal is not in use.	Correctly set the MFDI.
<b>Note:</b> If the drive detects this error, the terminal set to <i>H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm]</i> will activate.			
Code	Name	Causes	Possible Solutions
EF4	External Fault (Terminal S4)	MFDI terminal S4 caused an external fault through an external device.	1. Find the device that caused the external fault and remove the cause. 2. Clear the external fault input in the MFDI.
		The wiring is incorrect.	Correctly connect the signal line to MFDI terminal S4.
		<i>External Fault [H1-04 = 2C to 2F]</i> is set to MFDI terminal S4, but the terminal is not in use.	Correctly set the MFDI.
<b>Note:</b> If the drive detects this error, the terminal set to <i>H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm]</i> will activate.			
Code	Name	Causes	Possible Solutions
EF5	External Fault (Terminal S5)	MFDI terminal S5 caused an external fault through an external device.	1. Find the device that caused the external fault and remove the cause. 2. Clear the external fault input in the MFDI.
		The wiring is incorrect.	Correctly connect the signal line to MFDI terminal S5.
		<i>External Fault [H1-05 = 2C to 2F]</i> is set to MFDI terminal S5, but the terminal is not in use.	Correctly set the MFDI.
<b>Note:</b> If the drive detects this error, the terminal set to <i>H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm]</i> will activate.			
Code	Name	Causes	Possible Solutions
EF6	External Fault (Terminal S6)	MFDI terminal S6 caused an external fault through an external device.	1. Find the device that caused the external fault and remove the cause. 2. Clear the external fault input in the MFDI.
		The wiring is incorrect.	Correctly connect the signal line to MFDI terminal S6.
		<i>External Fault [H1-06 = 2C to 2F]</i> is set to MFDI terminal S6, but the terminal is not in use.	Correctly set the MFDI.
<b>Note:</b> If the drive detects this error, the terminal set to <i>H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm]</i> will activate.			
Code	Name	Causes	Possible Solutions
EF7	External Fault (Terminal S7)	MFDI terminal S7 caused an external fault through an external device.	1. Find the device that caused the external fault and remove the cause. 2. Clear the external fault input in the MFDI.
		The wiring is incorrect.	Correctly connect the signal line to MFDI terminal S7.
		<i>External Fault [H1-07 = 2C to 2F]</i> is set to MFDI terminal S7, but the terminal is not in use.	Correctly set the MFDI.
<b>Note:</b> If the drive detects this error, the terminal set to <i>H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm]</i> will activate.			
Code	Name	Causes	Possible Solutions
EF8	External Fault (Terminal S8)	MFDI terminal S8 caused an external fault through an external device.	1. Find the device that caused the external fault and remove the cause. 2. Clear the external fault input in the MFDI.
		The wiring is incorrect.	Correctly connect the signal line to MFDI terminal S8.
		<i>External Fault [H1-08 = 2C to 2F]</i> is set to MFDI terminal S8, but the terminal is not in use.	Correctly set the MFDI.
<b>Note:</b> If the drive detects this error, the terminal set to <i>H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm]</i> will activate.			

## 2.5 Minor Faults/Alarms

Code	Name	Causes	Possible Solutions
EOF	Emergency Override FWD	The digital input terminal set to $H1-xx = AF$ [MFDI Function Selection = Emergency Override FWD] activated.	When the emergency condition is gone, deactivate the digital input set to <i>Emergency Override FWD</i> .
<b>Note:</b> If the drive detects this error, the terminal set to $H2-01$ to $H2-03 = 10$ [MFDO Function Selection = Alarm] will activate.			
Code	Name	Causes	Possible Solutions
EOR	Emergency Override REV	The digital input terminal set to $H1-xx = B0$ [MFDI Function Selection = Emergency Override REV] activated.	When the emergency condition is gone, deactivate the digital input set to <i>Emergency Override REV</i> .
<b>Note:</b> If the drive detects this error, the terminal set to $H2-01$ to $H2-03 = 10$ [MFDO Function Selection = Alarm] will activate.			
Code	Name	Causes	Possible Solutions
EP24v	External Power 24V Supply	The voltage of the main circuit power supply decreased, and the 24 V power supply is supplying power to the drive.	<ul style="list-style-type: none"> <li>Examine the main circuit power supply.</li> <li>Turn ON the main circuit power supply to run the drive.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>Set <math>o2-26</math> [Ext. Power 24V Supply Display] to enable or disable EP24v detection.</li> <li>The drive will not output an alarm signal for this alarm.</li> </ul>			
Code	Name	Causes	Possible Solutions
FDBKL	Feedback Loss Wire Break	The analog input from the terminal set to $H3-xx = B$ [MFAI Function Selection = PID Feedback] is more than 21 mA or less than 3 mA for longer than 1 s in these conditions: <ul style="list-style-type: none"> <li><math>b5-82 = 1</math> [Feedback Loss 4 ~ 20mA Detect Sel = Alarm Only]</li> <li><math>b5-01 \neq 0</math> [PID Mode Setting ≠ Disabled]</li> <li><math>H3-01, H3-09, \text{ or } H3-05 = 2</math> [Terminal A1/A2/A3 Signal Level Selection = 4 to 20 mA]</li> </ul>	Make sure that you install the PID feedback source and it operates correctly.
<b>Note:</b> <ul style="list-style-type: none"> <li>If the drive detects this error, the terminal set to <math>H2-01</math> to <math>H2-03 = 10</math> [MFDO Function Selection = Alarm] will activate.</li> <li>If the drive detects this error, it will operate the motor as specified by the settings of <math>b5-82</math>.</li> <li>Parameter <math>L5-42</math> [Feedback Loss Fault Retry Select] sets the Auto Restart function of this error.</li> </ul>			
Code	Name	Causes	Possible Solutions
FLGT	Feedback Loss, Go To Freq $b5-83$	The analog input from the terminal set to $H3-xx = B$ [MFAI Function Selection = PID Feedback] is more than 21 mA or less than 3 mA for longer than 1 s in these conditions: <ul style="list-style-type: none"> <li><math>b5-82 = 3</math> [Feedback Loss 4 ~ 20mA Detect Sel = Run At <math>b5-83</math>]</li> <li><math>b5-01 \neq 0</math> [PID Mode Setting ≠ Disabled]</li> <li><math>H3-01 \text{ or } H3-09 = 2</math> [Terminal A1/A2 Signal Level Selection = 4 to 20 mA]</li> </ul>	Make sure that you install the PID feedback source and it operates correctly.
<b>Note:</b> <ul style="list-style-type: none"> <li>If the drive detects this error, the terminal set to <math>H2-01</math> to <math>H2-03 = 10</math> [MFDO Function Selection = Alarm] will activate.</li> <li>If the drive detects this error, it will operate the motor at the speed set in <math>b5-83</math> [Feedback Loss Goto Frequency] as specified by the setting of <math>b5-82</math>.</li> </ul>			
Code	Name	Causes	Possible Solutions
FR<MS	Freq Ref < Minimum Speed (Y1-06)	The drive frequency reference setting is less than the value set in $Y1-06$ [Minimum Speed] in these conditions: <ul style="list-style-type: none"> <li>The drive is not in PI Mode</li> <li>The drive is running</li> <li>Minimum Speed is enabled (<math>Y1-06 &gt; 0.00</math>)</li> <li><math>Y1-06 &gt; Y4-12</math> [Thrust Frequency]</li> </ul>	Increase the frequency reference to a value more than $Y1-06$ .
<b>Note:</b> <ul style="list-style-type: none"> <li>If the drive detects this error, the terminal set to <math>H2-01</math> to <math>H2-03 = 10</math> [MFDO Function Selection = Alarm] will activate.</li> <li>If the drive detects this error, it internally sets the frequency reference to the value set in <math>Y1-06</math>.</li> </ul>			
Code	Name	Causes	Possible Solutions
FR<TH	Freq. Reference < Thrust (Y4-12)	The drive frequency reference setting is less than the value set in $Y4-12$ [Thrust Frequency] in these conditions: <ul style="list-style-type: none"> <li>The drive is not in PI Mode</li> <li>The drive is running</li> <li>Thrust is enabled (<math>Y4-11</math> [Thrust Acceleration Time] &gt; 0.00 and <math>Y4-12 &gt; Y1-06</math> [Minimum Speed])</li> </ul>	Increase the frequency reference to a value more than $Y4-12$ .
<b>Note:</b> <ul style="list-style-type: none"> <li>If the drive detects this error, the terminal set to <math>H2-01</math> to <math>H2-03 = 10</math> [MFDO Function Selection = Alarm] will activate.</li> <li>If the drive detects this error, it internally sets the frequency reference to the value set in <math>Y4-12</math>.</li> </ul>			

Code	Name	Causes	Possible Solutions
HCA	High Current Alarm	The load is too heavy.	<ul style="list-style-type: none"> <li>Decrease the load for applications with repetitive starts and stops.</li> <li>Replace the drive with a larger capacity model.</li> </ul>
		The acceleration time is too short.	<ul style="list-style-type: none"> <li>Calculate the torque necessary during acceleration related to the load inertia and the specified acceleration time.</li> <li>Increase the values set in <i>C1-01</i> or <i>C1-03</i> [<i>Acceleration Times</i>] until you get the necessary torque.</li> <li>Increase the values set in <i>C2-01</i> to <i>C2-04</i> [<i>S-Curve Characteristics</i>] until you get the necessary torque.</li> <li>Replace the drive with a larger capacity model.</li> </ul>
		The drive is trying to operate a specialized motor or a motor that is larger than the maximum applicable motor output of the drive.	<ul style="list-style-type: none"> <li>Examine the motor nameplate, the motor, and the drive to make sure that the drive rated current is larger than the motor rated current.</li> <li>Replace the drive with a larger capacity model.</li> </ul>
		The current level temporarily increased because of speed search after a momentary power loss or while trying to Auto Restart.	If speed search or Auto Restart cause an increase in current, the drive can temporarily show this alarm. The time that the drive shows the alarm is short. No more steps are necessary to clear the alarm.
<b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if the drive output current is more than the overcurrent alarm level (150% of the rated current).</li> <li>If the drive detects this error, the terminal set to <i>H2-01</i> to <i>H2-03</i> = 10 [<i>MFDO Function Selection = Alarm</i>] will activate.</li> </ul>			
Code	Name	Causes	Possible Solutions
HIAUX	High PI Aux Feedback Level	PI Auxiliary Feedback is more than the level set in <i>YF-12</i> [ <i>PI Aux Control High Level Detect</i> ] for the time set in <i>YF-13</i> [ <i>PI Aux High Level Detection Time</i> ] in these conditions: <ul style="list-style-type: none"> <li>The drive is running.</li> <li>The output frequency &gt; 0.</li> </ul>	<ul style="list-style-type: none"> <li>Decrease the PI Auxiliary Feedback level to less than <i>YF-12</i>.</li> <li>Set <i>YF-12</i> and <i>YF-13</i> correctly.</li> </ul>
<b>Note:</b> If the drive detects this error, the terminal set to <i>H2-01</i> to <i>H2-03</i> = 10 [ <i>MFDO Function Selection = Alarm</i> ] will activate.			
Code	Name	Causes	Possible Solutions
HIFB	High Feedback Sensed	The feedback level is more than the level set in <i>Y1-11</i> [ <i>High Feedback Level</i> ].	<ul style="list-style-type: none"> <li>Decrease the feedback level to less than <i>Y1-11</i> - <i>Y1-14</i> [<i>Hysteresis Level</i>].</li> <li>Set <i>Y1-11</i> and <i>Y1-12</i> correctly.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>If the drive detects this error, the terminal set to <i>H2-01</i> to <i>H2-03</i> = 10 [<i>MFDO Function Selection = Alarm</i>] will activate.</li> <li>If the drive detects this error, it will respond as specified by the setting of <i>Y1-13</i> [<i>High Feedback Selection</i>].</li> </ul>			
Code	Name	Causes	Possible Solutions
L24v	Loss of External Power 24 Supply	The voltage of the backup 24 V power supply has decreased. The main circuit power supply is operating correctly.	<ul style="list-style-type: none"> <li>Examine the external 24 V power supply for disconnected wires and wiring errors and repair the problems.</li> <li>Examine the external 24 V power supply for problems.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>Set <i>o2-23</i> [<i>External 24V Powerloss Detection</i>] to enable or disable <i>L24v</i> detection.</li> <li>The drive will not output an alarm signal for this alarm.</li> </ul>			
Code	Name	Causes	Possible Solutions
LCP	Low City Pressure	Insufficient pressure is present on the inlet to the pump in these conditions: <ul style="list-style-type: none"> <li><i>Y4-24</i> = 0 [<i>Low City Alarm Text = Low City Pressure</i>]</li> <li>The terminal set for <i>H1-xx</i> = <i>B8</i> or <i>1B8</i> [<i>MFDI Function Selection = Low City Pressure</i> or <i>!Low City Pressure</i>] activates</li> </ul>	<ul style="list-style-type: none"> <li>Examine the pressure switch contact for correct operation.</li> <li>Examine control wiring to drive terminal strip from pressure switch contact.</li> <li>Make sure that suction pressure is present with an isolated measuring device.</li> <li>Set <i>Y4-22</i> [<i>Low City On-Delay Time</i>] and <i>Y4-23</i> [<i>Low City Off-Delay Time</i>] correctly.</li> <li>Deactivate the digital input terminals set to <i>H1-xx</i> = <i>B8</i> or <i>1B8</i>.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>If the drive detects this error, the terminal set to <i>H2-01</i> to <i>H2-03</i> = 10 [<i>MFDO Function Selection = Alarm</i>] will activate.</li> <li>If the drive detects this error during run, it coasts to stop and does not operate until the digital input has deactivated for the time set in <i>Y4-22</i>.</li> </ul>			
Code	Name	Causes	Possible Solutions
LOAUX	Low PI Aux Feedback Level	When the drive is running, PI Auxiliary Feedback is less than the level set in <i>YF-09</i> [ <i>PI Aux Control Low Lvl Detection</i> ] for the time set in <i>YF-10</i> [ <i>PI Aux Control Low Lvl Det Time</i> ].	<ul style="list-style-type: none"> <li>Increase the PI Auxiliary Feedback level more than <i>YF-09</i>.</li> <li>Set <i>YF-09</i> and <i>YF-10</i> correctly.</li> </ul>
<b>Note:</b> If the drive detects this error, the terminal set to <i>H2-01</i> to <i>H2-03</i> = 10 [ <i>MFDO Function Selection = Alarm</i> ] will activate.			

## 2.5 Minor Faults/Alarms

Code	Name	Causes	Possible Solutions
LOFB	Low Feedback Sensed	The feedback level is less than the level set in Y1-08 [Low Feedback Level] for the time set in Y1-09 [Low Feedback Lvl Fault Dly Time].	<ul style="list-style-type: none"> <li>Increase the feedback level to more than Y1-08 + Y1-14 [High Feedback Hysteresis Level].</li> <li>Set Y1-08 and Y1-09 correctly.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>If the drive detects this error, the terminal set to H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm] will activate.</li> <li>If the drive detects this fault, it will respond as specified by the setting of Y1-10 [Low Feedback Selection].</li> </ul>			
Code	Name	Causes	Possible Solutions
LoG	Com Error / Abnormal SD Card	<p>There is not a micro SD card in the keypad.</p> <ul style="list-style-type: none"> <li>The drive is connected to USB.</li> <li>The number of log communication files is more than 1000.</li> <li>The micro SD card does not have available memory space.</li> <li>The line number data in a log communication file was changed.</li> <li>A communication error between the keypad and drive occurred during a log communication.</li> </ul>	<p>Put a micro SD card in the keypad.</p> <p>Set o5-01 = 0 [Log Start/Stop Selection = OFF].</p>
<b>Note:</b> <p>If the drive detects this error, the terminal set to H2-01 to H2-03 = 6A [MFDO Function Selection = Data Logger Error] will activate.</p>			
Code	Name	Causes	Possible Solutions
LOP	Loss of Prime	The drive used the method set in Y1-18 [Prime Loss Detection Method] to detect that the pump load is less than the level set in Y1-19 [Prime Loss Level] for the time set in Y1-20 [Prime Loss Time], and the output frequency is Y1-21 [Prime Loss Activation Freq] or more.	<ul style="list-style-type: none"> <li>Examine a dry well, air in the system, or no water in the system. Use preferred priming method suggested by the pump manufacturer to restart the pump.</li> <li>When there is resistance in the pump, allow the system to pump water again.</li> <li>Set Y1-18 to Y1-21 correctly.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>If the drive detects this error, the terminal set to H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm] will activate.</li> <li>If the drive detects this fault, it will respond as specified by the setting of Y1-22 [Prime Loss Selection].</li> </ul>			
Code	Name	Causes	Possible Solutions
LSP	Low Suction Pressure	<p>An external input has indicated that an insufficient suction pressure condition exists in these conditions:</p> <ul style="list-style-type: none"> <li>Y4-24 = 1 [Low City Alarm Text = Low Suction Pressure]</li> <li>The terminal set for H1-xx = B8 or 1B8 [MFDI Function Selection = Low City Pressure or !Low City Pressure] activates</li> </ul>	<ul style="list-style-type: none"> <li>Examine the pressure switch contact for correct operation.</li> <li>Examine control wiring to drive terminal strip from pressure switch contact.</li> <li>Make sure that suction pressure is present with an isolated measuring device.</li> <li>Increase the system pressure.</li> <li>Set Y4-22 [Low City On-Delay Time] and Y4-23 [Low City Off-Delay Time] correctly.</li> <li>Deactivate the digital input terminals set to H1-xx = B8 or 1B8.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>If the drive detects this error, the terminal set to H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm] will activate.</li> <li>If the drive detects this error during run, it coasts to stop and does not operate until the digital input has deactivated for the time set in Y4-22.</li> </ul>			
Code	Name	Causes	Possible Solutions
LT-1	Cooling Fan Maintenance Time	The cooling fan is at 90% of its performance life estimate.	<ol style="list-style-type: none"> <li>Replace the cooling fan.</li> <li>Set o4-03 = 0 [Fan Operation Time Setting = 0 h] to reset the cooling fan operation time.</li> </ol>
<b>Note:</b> <p>When the performance life estimate is expired, the terminal set to H2-01 to H2-03 = 2F [MFDO Function Selection = Maintenance Notification] will activate.</p>			
Code	Name	Causes	Possible Solutions
LT-2	Capacitor Maintenance Time	The capacitors for the main circuit and control circuit are at 90% of their performance life estimate.	Replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.
<b>Note:</b> <p>When the performance life estimate is expired, the terminal set to H2-01 to H2-03 = 2F [MFDO Function Selection = Maintenance Notification] will activate.</p>			
Code	Name	Causes	Possible Solutions
LT-3	SoftChargeBypassRelay MainteTime	The soft charge bypass relay is at 90% of its performance life estimate.	Replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.
<b>Note:</b> <p>When the performance life estimate is expired, the terminal set to H2-01 to H2-03 = 2F [MFDO Function Selection = Maintenance Notification] will activate.</p>			
Code	Name	Causes	Possible Solutions
LT-4	IGBT Maintenance Time (50%)	The IGBT is at 50% of its performance life estimate.	Check the load, carrier frequency, and output frequency.
<b>Note:</b> <p>When the performance life estimate is expired, the terminal set to H2-01 to H2-03 = 2F [MFDO Function Selection = Maintenance Notification] will activate.</p>			

Code	Name	Causes	Possible Solutions
LWT	Low Water In Tank	An external input has indicated that the water level in the tank is too low in these conditions: <ul style="list-style-type: none"> <li>Y4-24 = 2 [Low City Alarm Text = Low Water in Tank]</li> <li>The terminal set for H1-xx = B8 or 1B8 [MFDI Function Selection = Low City Pressure or !Low City Pressure] activates</li> </ul>	<ul style="list-style-type: none"> <li>Examine the pressure switch contact for correct operation.</li> <li>Examine control wiring to drive terminal strip from pressure switch contact.</li> <li>Make sure that suction pressure is present with an isolated measuring device.</li> <li>Increase the water level.</li> <li>Set Y4-22 [Low City On-Delay Time] and Y4-23 [Low City Off-Delay Time] correctly.</li> <li>Deactivate the digital input terminals set to H1-xx = B8 or 1B8.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>If the drive detects this error, the terminal set to H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm] will activate.</li> <li>If the drive detects this error during run, it coasts to stop and does not operate until the digital input has deactivated for the time set in Y4-22.</li> </ul>			
Code	Name	Causes	Possible Solutions
NMS	Setpoint Not Met	The feedback deviates from the setpoint at a level more than Y1-15 [Maximum Setpoint Difference] for the time set in Y1-16 [Not Maintaining Setpoint Time].	<ul style="list-style-type: none"> <li>Examine for a blocked impeller, over cycling, or broken pipe.</li> <li>Set Y1-15 and Y1-16 correctly.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>If the drive detects this error, the terminal set to H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm] will activate.</li> <li>If the drive detects this error, it will respond as specified by the setting of Y1-17 [Not Maintaining Setpoint Sel].</li> </ul>			
Code	Name	Causes	Possible Solutions
OD	Output Disconnect	The output circuit between the drive and the motor is open, and the drive output current is less than 5% of E2-01 [Motor Rated Current (FLA)].	<ul style="list-style-type: none"> <li>Close the disconnected output circuit between the drive and the motor.</li> <li>If you do not use a motor disconnect, set Y4-42 = 0 [Disabled].</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>If the drive detects this error, the terminal set to H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm] will activate.</li> <li>If the drive detects this error, it will respond as specified by the setting of Y4-42 [Output Disconnect Detection Sel].</li> </ul>			
Code	Name	Causes	Possible Solutions
oH	Heatsink Overheat	The ambient temperature is high and the heatsink temperature is more than the L8-02 [Overheat Alarm Level].	<ul style="list-style-type: none"> <li>Measure the ambient temperature.</li> <li>Increase the airflow around the drive.</li> <li>Install a cooling device (cooling fan or air conditioner) to decrease the ambient temperature.</li> <li>Remove objects near the drive that are producing too much heat.</li> </ul>
		There is not sufficient airflow around the drive.	<ul style="list-style-type: none"> <li>Give the drive the correct installation space as shown in the manual.</li> <li>Make sure that there is sufficient circulation around the control panel.</li> <li>Examine the drive for dust or other unwanted materials that could clog the cooling fan.</li> <li>Remove unwanted materials that prevent air circulation.</li> </ul>
		The internal cooling fan or fans stopped.	<ol style="list-style-type: none"> <li>Replace the cooling fan.</li> <li>Set o4-03 = 0 [Fan Operation Time Setting = 0 h] to reset the cooling fan operation time.</li> </ol>
<b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if the heatsink temperature of the drive is more than L8-02.</li> <li>If the drive detects this error, the terminal set to H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm] will activate.</li> <li>Use L8-03 [Overheat Pre-Alarm Selection] to the stopping method for this fault.</li> </ul>			
Code	Name	Causes	Possible Solutions
oH2	External Overheat (H1-XX=B)	An external device sent an oH2 alarm.	<ol style="list-style-type: none"> <li>Find the external device that output the overheat alarm.</li> <li>Remove the cause of the problem.</li> <li>Clear the Overheat Alarm (oH2) [H1-xx = B] in MFDI terminals S1 to S7.</li> </ol>
<b>Note:</b> <p>If the drive detects this error, the terminal set to H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm] will activate.</p>			
Code	Name	Causes	Possible Solutions
oH3	Motor Overheat (PTC Input)	The thermistor wiring that detects motor temperature is defective.	Correct wiring errors.
		A fault occurred on the machine. Example: The machine is locked.	Examine the machine and remove the cause of the fault

## 2.5 Minor Faults/Alarms

Code	Name	Causes	Possible Solutions
		The motor has overheated.	<ul style="list-style-type: none"> <li>Check the load level, acceleration/deceleration time, and motor start/stop frequency (cycle time).</li> <li>Decrease the load.</li> <li>Increase the values set in <i>C1-01 to C1-04 [Acceleration/Deceleration Times]</i>.</li> <li>Set <i>E2-01 [Motor Rated Current (FLA)]</i> correctly to the value specified by the motor nameplate.</li> <li>Make sure that the motor cooling system is operating correctly, and repair or replace it if it is damaged.</li> <li>Adjust <i>E1-04 to E1-10 [V/f Pattern Parameters]</i>. For motor 2, adjust <i>E3-04 to E3-10</i>. Decrease the values set in <i>E1-08 [Mid Point A Voltage]</i> and <i>E1-10 [Minimum Output Voltage]</i>.</li> </ul> <p><b>Note:</b> If the values set in <i>E1-08</i> and <i>E1-10</i> are too low, the overload tolerance will decrease at low speeds.</p>
<p><b>Note:</b></p> <ul style="list-style-type: none"> <li>When <i>H3-02 or H3-10 = E [MFAI Function Selection = Motor Temperature (PTC Input)]</i>, the drive detects this fault if the motor overheat signal entered to analog input terminals A1 and A2 is more than the alarm detection level.</li> <li>If the drive detects this error, the terminal set to <i>H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm]</i> will activate.</li> <li>If the drive detects this error, it will operate the motor as specified by the stopping method set in <i>L1-03 [Motor Thermistor oH Alarm Select]</i>.</li> </ul>			
Code	Name	Causes	Possible Solutions
oL3	Overtorque 1	A fault occurred on the machine. Example: The machine is locked.	Examine the machine and remove the cause of the fault.
		The parameters are incorrect for the load.	Adjust <i>L6-02 [Torque Detection Level 1]</i> and <i>L6-03 [Torque Detection Time 1]</i> settings.
<p><b>Note:</b></p> <ul style="list-style-type: none"> <li>The drive detects this fault if the drive output current is more than the level set in <i>L6-02</i> for longer than <i>L6-03</i>.</li> <li>If the drive detects this error, the terminal set to <i>H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm]</i> will activate.</li> <li>Use <i>L6-01 [Torque Detection Selection 1]</i> to set the conditions that trigger the minor fault.</li> </ul>			
Code	Name	Causes	Possible Solutions
oL4	Overtorque 2	A fault occurred on the machine. Example: The machine is locked.	Examine the machine and remove the cause of the fault.
		The parameters are incorrect for the load.	Adjust <i>L6-05 [Torque Detection Level 2]</i> and <i>L6-06 [Torque Detection Time 2]</i> settings.
<p><b>Note:</b></p> <ul style="list-style-type: none"> <li>The drive detects this error if the drive output current is more than the level set in <i>L6-05</i> for longer than <i>L6-06</i>.</li> <li>If the drive detects this error, the terminal set to <i>H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm]</i> will activate.</li> <li>Use <i>L6-04 [Torque Detection Selection 2]</i> to set the conditions that trigger the minor fault.</li> </ul>			
Code	Name	Causes	Possible Solutions
oS	Overspeed	There is overshoot.	Decrease <i>C5-01 [ASR Proportional Gain 1]</i> and increase <i>C5-02 [ASR Integral Time 1]</i> .
<p><b>Note:</b> If the drive detects this error, the terminal set to <i>H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm]</i> will activate.</p>			
Code	Name	Causes	Possible Solutions
ov	DC Bus Overvoltage	The drive output cable or motor is shorted to ground (the current short to ground is charging the main circuit capacitor of the drive through the power supply).	<ol style="list-style-type: none"> <li>Examine the motor main circuit cable, terminals, and motor terminal box, and then remove ground faults.</li> <li>Re-energize the drive.</li> </ol>
		The power supply voltage is too high.	Decrease the power supply voltage to align with the drive rated voltage.
		Electrical interference caused a drive malfunction.	<ul style="list-style-type: none"> <li>Examine the control circuit lines, main circuit lines, and ground wiring, and minimize the effects of noise.</li> <li>Find the source of the noise. If a magnetic contactor is the source, use Surge Protective Device if necessary.</li> <li>Set <i>L5-01 ≠ 0 [Number of Auto-Restart Attempts ≠ 0 times]</i>.</li> </ul>
<p><b>Note:</b></p> <ul style="list-style-type: none"> <li>The drive detects this error if the DC bus voltage is more than the <i>ov</i> detection level when the Run command has not been input (while the drive is stopped).</li> <li>The <i>ov</i> detection level is approximately 410 V with 208 V class drives. The detection level is approximately 820 V with 480 V class drives.</li> <li>If the drive detects this error, the terminal set to <i>H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm]</i> will activate.</li> </ul>			
Code	Name	Causes	Possible Solutions
ovEr	Too Many Parameters Changed	You tried to change more than 150 parameters.	<p>Make sure that parameters that do not have an effect on drive operation are at their default settings.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>You can change 150 parameters maximum.</li> <li>If you change parameters that have dependencies, the drive can detect <i>ovEr</i> when the number of changed parameters is fewer than 150.</li> </ul>

Code	Name	Causes	Possible Solutions
PASS	Modbus Communication Test	The MEMOBUS/Modbus communications test is complete.	The <i>PASS</i> display will turn off after communications test mode is cleared.
Code	Name	Causes	Possible Solutions
PF	Input Phase Loss	There is a phase loss in the drive input power.	Correct errors with the wiring for main circuit drive input power.
		Loose wiring in the input power terminals.	Tighten the terminal screws to the correct tightening torque.
		The drive input power voltage is changing too much.	<ul style="list-style-type: none"> <li>Examine the input power for problems.</li> <li>Make the drive input power stable.</li> </ul>
		Unsatisfactory balance between voltage phases.	<ul style="list-style-type: none"> <li>Examine the input power for problems.</li> <li>Make the drive input power stable.</li> <li>If the input power supply is good, examine the magnetic contactor on the main circuit side for problems.</li> </ul>
		The main circuit capacitors are unserviceable.	<ul style="list-style-type: none"> <li>Examine the capacitor maintenance time in monitor <i>U4-05 [CapacitorMaintenance]</i>.</li> <li>If <i>U4-05</i> is more than 90%, replace the capacitor. Contact Yaskawa or your nearest sales representative for more information.</li> </ul>
<b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if the DC bus voltage changes irregularly without regeneration.</li> <li>If the drive detects this error, the terminal set to <i>H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm]</i> will activate.</li> <li>Use <i>L8-05 [Input Phase Loss Protection Sel]</i> to enable and disable PF detection.</li> </ul>			
Code	Name	Causes	Possible Solutions
R-DNE	Remote Drive Disable	<ul style="list-style-type: none"> <li>The digital input set to <i>H1-xx = BD [MFDI Function Selection = Remote Drive Disable]</i> activated.</li> <li>The digital input set to <i>H1-xx = IBD [!Remote Drive Disable]</i> deactivated.</li> </ul>	Examine the statuses of the digital input terminals set to <i>H1-xx = BD or IBD</i>
<b>Note:</b> If the drive detects this error, the terminal set to <i>H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm]</i> will activate.			
Code	Name	Causes	Possible Solutions
rUn	Motor Switch during Run	The drive received a <i>Motor 2 Selection [H1-xx = 16]</i> during run.	Make sure that the drive receives the Motor 2 Selection while the drive is stopped.
<b>Note:</b> If the drive detects this error, the terminal set to <i>H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm]</i> will activate.			
Code	Name	Causes	Possible Solutions
SE	Modbus Test Mode Error	MEMOBUS/Modbus communications self-diagnostics [ <i>H1-xx = 67</i> ] was done while the drive was running.	Stop the drive and do MEMOBUS/Modbus communications self-diagnostics.
<b>Note:</b> If drive detects this error, the terminal set to <i>H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm]</i> will activate.			
Code	Name	Causes	Possible Solutions
SPCNR	Single Phase Converter Not Ready	When <i>YC-14 = 1 [Behavior when SPC is Not Ready = Coast to Stop - Alarm]</i> , the digital input set to <i>H1-xx = BE [MFDI Function Selection = Single Phase Converter Ready NC]</i> deactivated to show that the attached converter is faulted or not ready.	<ul style="list-style-type: none"> <li>Examine the wiring between the drive and converter.</li> <li>Examine the error code on converter.</li> </ul>
<b>Note:</b> If the drive detects this error, the terminal set to <i>H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm]</i> will activate.			
Code	Name	Causes	Possible Solutions
STo	Safe Torque OFF	Safe Disable inputs H1-HC and H2-HC are open.	<ul style="list-style-type: none"> <li>Make sure that the Safe Disable signal is input from an external source to terminal H1-HC and H2-HC.</li> <li>When the Safe Disable function is not in use, use a jumper to connect terminals H1-HC and H2-HC.</li> </ul>
		There is internal damage to the two Safe Disable channels.	Replace the board or the drive. Contact Yaskawa or your nearest sales representative to replace the board.
<b>Note:</b> <ul style="list-style-type: none"> <li>The drive will not output an alarm signal for this alarm.</li> <li>If the drive detects this error, the terminal set to <i>H2-01 to H2-03 = 21 [MFDO Function Selection = Safe Torque OFF]</i> will activate.</li> </ul>			

## 2.5 Minor Faults/Alarms

Code	Name	Causes	Possible Solutions
SToF	Safe Torque OFF Hardware	One of the two terminals H1-HC or H2-HC received the Safe Disable input signal.	<ul style="list-style-type: none"> <li>Make sure that the Safe Disable signal is input from an external source to terminals H1-HC or H2-HC.</li> <li>When the Safe Disable function is not in use, use a jumper to connect terminals H1-HC and H2-HC.</li> </ul>
		The Safe Disable input signal is wired incorrectly.	
		There is internal damage to one Safe Disable channel.	Replace the board or the drive. Contact Yaskawa or your nearest sales representative to replace the board.
<b>Note:</b> If the drive detects this error, the terminal set to <i>H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm]</i> will activate.			
Code	Name	Causes	Possible Solutions
TiM	Keypad Time Not Set	There is a battery in the keypad, but you have not set the date and time.	Use the keypad to set the date and time.
<b>Note:</b> <ul style="list-style-type: none"> <li>Parameter <i>o4-24 [bAT Detection selection]</i> enables and disables <i>TiM</i> detection.</li> <li>If the drive detects this error, the terminal set to <i>H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm]</i> will activate.</li> </ul>			
Code	Name	Causes	Possible Solutions
TrPC	IGBT Maintenance Time (90%)	The IGBT is at 90% of its performance life estimate.	Replace the IGBT or the drive. For more information, contact Yaskawa or your nearest sales representative.
<b>Note:</b> If the drive detects this error, the terminal set to <i>H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm]</i> will activate.			
Code	Name	Causes	Possible Solutions
UL3	Undertorque Detection 1	A fault occurred on the machine. Example: There is a broken pulley belt.	Examine the machine and remove the cause of the fault.
		The parameters are incorrect for the load.	Adjust <i>L6-02 [Torque Detection Level 1]</i> and <i>L6-03 [Torque Detection Time 1]</i> settings.
<b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if the drive output current is less than the level set in <i>L6-02</i> for longer than <i>L6-03</i>.</li> <li>If the drive detects this error, the terminal set to <i>H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm]</i> will activate.</li> <li>If the drive detects this error, it will operate the motor as specified by the Stopping Method set in <i>L6-01 [Torque Detection Selection 1]</i>.</li> </ul>			
Code	Name	Causes	Possible Solutions
UL4	Undertorque Detection 2	A fault occurred on the machine. Example: There is a broken pulley belt.	Examine the machine and remove the cause of the fault.
		The parameters are incorrect for the load.	Adjust <i>L6-05 [Torque Detection Level 2]</i> and <i>L6-06 [Torque Detection Time 2]</i> settings.
<b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if the drive output current is less than the level set in <i>L6-05</i> for longer than <i>L6-06</i>.</li> <li>If detected, the terminal set to <i>H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm]</i> will activate.</li> <li>If the drive detects this error, it will operate the motor as specified by the Stopping Method set in <i>L6-04 [Torque Detection Selection 2]</i>.</li> </ul>			
Code	Name	Causes	Possible Solutions
UL6	Underload or Belt Break Detected	The output current decreased less than the motor underload curve set in <i>L6-14 [Motor Underload Level @ Min Freq]</i> for longer than the time set in <i>L6-03 [Torque Detection Time 1]</i> .	Examine parameters <i>L6-13 [Motor Underload Curve Select]</i> and <i>L6-14</i> .
		The belt has broken disconnecting the motor from the load.	
<b>Note:</b> If the drive detects this error, the terminal set to <i>H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm]</i> will activate.			
Code	Name	Causes	Possible Solutions
Uv	Undervoltage	The drive input power voltage is changing too much.	<ul style="list-style-type: none"> <li>Examine the input power for problems.</li> <li>Make the drive input power stable.</li> <li>If the input power supply is good, examine the magnetic contactor on the main circuit side for problems.</li> </ul>
		There is a phase loss in the drive input power.	Correct errors with the wiring for main circuit drive input power.
		There is loose wiring in the drive input power terminals.	Tighten the terminal screws to the correct tightening torque.
		There was a loss of power.	Use a better power supply.
		The main circuit capacitors have become unserviceable.	Examine the capacitor maintenance time in monitor <i>U4-05 [Capacitor Maintenance]</i> . If <i>U4-05</i> is more than 90%, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.

Code	Name	Causes	Possible Solutions
		The drive input power transformer is too small and voltage drops when the power is switched on.	<ul style="list-style-type: none"> <li>Check for an alarm when a molded-case circuit breaker, Leakage Breaker (ELCB or GFCI) (with overcurrent protective function), or magnetic contactor is ON.</li> <li>Check the capacity of the drive power supply transformer.</li> </ul>
		Air inside the drive is too hot.	Check the ambient temperature of the drive.
		The Charge LED is broken.	Replace the control board or the entire drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.
<p><b>Note:</b></p> <ul style="list-style-type: none"> <li>The drive detects this error if one of these conditions is correct when the Run command has not been input (while the drive is stopped). <ul style="list-style-type: none"> <li>The DC bus voltage &lt; L2-05 [Undervoltage Detection Lvl (Uv1)].</li> <li>The Contactor that prevents inrush current in the drive was opened.</li> <li>There is low voltage in the control drive input power.</li> </ul> </li> <li>If the drive detects this error, the terminal set to H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm] will activate.</li> </ul>			

## 2.6 Parameter Setting Errors

Parameter setting errors occur when multiple parameter settings do not agree, or when parameter setting values are not correct. Refer to the table in this section, examine the parameter setting that caused the error, and remove the cause of the error. You must first correct the parameter setting errors before you can operate the drive. The drive will not send notification signals for the faults and alarms when these parameter setting errors occur.

Code	Name	Causes	Possible Solutions
oPE01	Drive Capacity Setting Error	The value set in <i>o2-04 [Drive Model (KVA) Selection]</i> does not agree with the drive model.	Set <i>o2-04</i> to the correct value.
Code	Name	Causes	Possible Solutions
oPE02	Parameter Range Setting Error	Parameters settings are not in the applicable setting range.	<ol style="list-style-type: none"> <li>Push  to show <i>U1-18 [oPE Fault Parameter]</i>, and find parameters that are not in the applicable setting range.</li> <li>Correct the parameter settings.</li> </ol> <p><b>Note:</b> If more than one error occurs at the same time, other <i>oPExx</i> errors have priority over <i>oPE02</i>.</p>
		You set $E2-01 \leq E2-03$ [ <i>Motor Rated Current (FLA) ≤ Motor No-Load Current</i> ].	Make sure that $E2-01 > E2-03$ . <b>Note:</b> If it is necessary to set $E2-01 < E2-03$ , first lower the value set in <i>E2-03</i> , and then set <i>E2-01</i> .
		The settings for these parameters do not agree: <ul style="list-style-type: none"> <li><i>L8-12 [Ambient Temperature Setting] = 60 °C</i> and <i>L8-35 = 1 or 3 [Installation Method Selection = Side-by-Side Mounting or IP55/UL Type 12]</i> for models 2011 to 2114 and 4005 to 4124</li> <li><i>L8-35 = 1 or 3</i> for models 2143 to 2396 and 4156 to 4720</li> </ul>	Set $L8-35 = 0$ or $2$ [ <i>IP20/UL Open Type or IP20/UL Type 1</i> ].
		You set $S3-09 < S3-10$ [ <i>PI2 Control Output Upper Limit &lt; PI2 Control Output Lower Limit</i> ].	Make sure that $S3-09 > S3-10$ at all times.
		You set $S3-13 > S3-15$ [ <i>PI2 Control Low Feedback Lvl &gt; PI2 Control High Feedback Lvl</i> ].	Make sure that $S3-13 < S3-15$ at all times.
		The settings for these parameters do not agree: <ul style="list-style-type: none"> <li><math>o1-17 = 4</math> [<i>F3 Key Function Selection = RELAY (ON/OFF H2-XX = A9)</i>]</li> <li><math>H2-xx \neq A9</math> [<i>MFDO Function Selection ≠ RELAY Operator Control</i>]</li> </ul>	<ul style="list-style-type: none"> <li>Set <math>H2-xx = A9</math> to an MFDO.</li> <li>Change the parameter setting to <math>o1-17 \neq 4</math>.</li> </ul>
Code	Name	Causes	Possible Solutions
oPE03	Multi-Function Input Setting Err	The settings for these parameters do not agree: <ul style="list-style-type: none"> <li><i>F3-10 to F3-25 [Terminal D1 to DF Function Selection]</i></li> <li><i>H1-01 to H1-08 [Terminals S1 to S8 Function Selection]</i></li> <li><i>H7-01 to H7-04 [Virtual Multi-Function Inputs 1 to 4]</i></li> </ul>	Correct the parameter settings.
		The settings for MFDI overlap. <b>Note:</b> This does not include $H1-xx = 20$ to $2F$ [ <i>MFDI Function Selection = External Fault</i> ] and [ <i>Reserved</i> ].	Set the parameters correctly to prevent MFDI function overlap.
		These pairs of MFDI functions are not set to Digital Inputs ( $H1-xx$ , <i>F3-10 to F3-25</i> , and <i>H7-01 to H7-04</i> ) at the same time: <ul style="list-style-type: none"> <li>Setting values <math>10</math> [<i>Up Command</i>] and <math>11</math> [<i>Down Command</i>]</li> <li>Setting values <math>42</math> [<i>Run Command (2-Wire Sequence 2)</i>] and <math>43</math> [<i>FWD/REV (2-Wire Sequence 2)</i>]</li> </ul>	Set the MFDI pairs.
		A minimum of two of these MFDI combinations are set to Digital Inputs ( $H1-xx$ , <i>F3-10 to F3-25</i> , and <i>H7-01 to H7-04</i> ) at the same time: <ul style="list-style-type: none"> <li>Setting values <math>10</math> [<i>Up Command</i>] and <math>11</math> [<i>Down Command</i>]</li> <li>Setting value <math>1E</math> [<i>Reference Sample Hold</i>]</li> <li>Setting values <math>44</math> to <math>46</math> [<i>Add Offset Frequency 1 to 3 (d7-01 to d7-03)</i>]</li> </ul>	Remove the function settings that are not in use.

Code	Name	Causes	Possible Solutions
		The parameter settings are enabled at the same time. <ul style="list-style-type: none"> <li>• <i>b5-01 [PID Mode Setting]</i></li> <li>• <i>H1-xx = 10 [Up Command]</i></li> <li>• <i>H1-xx = 11 [Down Command]</i></li> </ul>	<ul style="list-style-type: none"> <li>• Set <i>b5-01 = 0 [Disabled]</i>.</li> <li>• Remove the function Up/Down command settings.</li> </ul>
		These commands are set in Digital Inputs ( <i>H1-xx, F3-10 to F3-25, and H7-01 to H7-04</i> ) at the same time: <ul style="list-style-type: none"> <li>• Setting values <i>61 [Speed Search from Fmax]</i> and <i>62 [Speed Search from Fref]</i></li> <li>• Setting values <i>65, 66, 7A, 7B [KEB Ride-Thru 1 or 2 Activate]</i> and <i>68 [High Slip Braking (HSB) Activate]</i></li> <li>• Setting values <i>65, 66 [KEB Ride-Thru 1 Activate]</i> and <i>7A, 7B [KEB Ride-Thru 2 Activate]</i></li> <li>• Setting values <i>40, 41 [Forward RUN (2-Wire), Reverse RUN (2-Wire)]</i> and <i>42, 43 [Run Command (2-Wire Sequence 2), FWD/REV (2-Wire Sequence 2)]</i></li> </ul>	Remove the function settings that are not in use.
		These groups of MFDI functions are not set to Digital Inputs ( <i>H1-xx, F3-10 to F3-25, and H7-01 to H7-04</i> ) at the same time: <ul style="list-style-type: none"> <li>• Setting values <i>3E [PID Setpoint Selection 1]</i> and <i>3F [PID Setpoint Selection 2]</i></li> <li>• Setting values <i>83 [Dedicated Multi-Setpoint YA-02]</i>, <i>84 [Dedicated Multi-Setpoint YA-03]</i>, and <i>85 [Dedicated Multi-Setpoint YA-04]</i></li> </ul>	Set the MFDI groups correctly.
		Two of these three MFDI functions are set to Digital Inputs ( <i>H1-xx, F3-10 to F3-25, and H7-01 to H7-04</i> ) at the same time: <ul style="list-style-type: none"> <li>• Setting value <i>50 [Motor Pre-heat 2]</i></li> <li>• Setting value <i>60 [DC Injection Braking Command]</i></li> <li>• Setting value <i>6A [Drive Enable]</i></li> </ul>	Remove the function setting that are not in use and use only one function.
		Settings for N.C. and N.O. input [ <i>H1-xx</i> ] for these functions were selected at the same time: <ul style="list-style-type: none"> <li>• Setting value <i>15 [Fast Stop (N.O.)]</i></li> <li>• Setting value <i>17 [Fast Stop (N.C.)]</i></li> </ul>	Remove one of the function settings.
		These settings were entered while <i>H1-xx = 2 [External Reference 1/2 Selection]</i> : <ul style="list-style-type: none"> <li>• <i>b1-15 = 4 [Frequency Reference Selection 2 = Pulse Train Input]</i></li> <li>• <i>H6-01 ≠ 0 [Terminal RP Pulse Train Function ≠ Frequency Reference]</i></li> </ul>	Set <i>H6-01 = 0</i> .
		These settings were entered while <i>H1-xx = 2 [External Reference 1/2 Selection]</i> : <ul style="list-style-type: none"> <li>• <i>b1-15 = 3 [Option PCB]</i> or <i>b1-16 = 3 [Run Command Selection 2 = Option PCB]</i></li> <li>• No option card is connected to the drive.</li> </ul>	Connect an input option card to the drive.
		These settings were entered while <i>H1-xx = 2 [External Reference 1/2 Selection]</i> : <ul style="list-style-type: none"> <li>• <i>b1-15 = 1 [Analog Input]</i></li> <li>• <i>H3-02 ≠ 0 [Terminal A1 Function Selection ≠ Frequency Reference]</i> or <i>H3-10 ≠ 0 [Terminal A2 Function Selection ≠ Frequency Reference]</i></li> </ul>	Set <i>H3-02 = 0</i> or <i>H3-10 = 0</i> .
		These MFDI/MFDO functions are set at the same time: <ul style="list-style-type: none"> <li>• <i>H1-xx ≠ 6A [Drive Enable]</i> and <i>H1-xx ≠ 70 [Drive Enable 2]</i></li> <li>• <i>H2-xx = 38 [Drive Enabled]</i></li> </ul>	<ul style="list-style-type: none"> <li>• Set <i>H1-xx = 6A</i> or <i>70</i>.</li> <li>• Change the MFDO setting.</li> </ul>
		These MFDI functions are set at the same time: <ul style="list-style-type: none"> <li>• <i>H1-xx = 6A [Drive Enable]</i></li> <li>• <i>H1-xx = 70 [Drive Enable 2]</i></li> </ul>	Remove one of the function settings.
		These MFDI functions are set at the same time: <ul style="list-style-type: none"> <li>• <i>H1-xx = 67 [Communications Test Mode]</i></li> <li>• <i>H1-xx = AF</i> or <i>B0 [Emergency Override FWD or Emergency Override REV]</i></li> </ul>	Remove one of the function settings.

## 2.6 Parameter Setting Errors

Code	Name	Causes	Possible Solutions
		<p>These parameters are set at the same time:</p> <ul style="list-style-type: none"> <li>• <math>H1-xx = 62</math> [Speed Search from Freq]</li> <li>• <math>H5-22 = 1</math> [Speed Search from MODBUS = Enabled]</li> </ul>	Remove one of the function settings.
		<p>Parameter <math>S3-01 \neq 0</math> [PI2 Control Enable Selection ≠ Disabled] and MFDI set for <math>H1-xx = AD</math> [Select PI2 Control PI Parameters] is ON.</p>	<ul style="list-style-type: none"> <li>• Set <math>S3-01 = 0</math> to use <math>H1-xx = AD</math> for the adjustments of <math>S3-06</math> [PI2 Control Proportional Gain] and <math>S3-07</math> [PI2 Control Integral Time] instead of the primary PI controller Proportional and Integral adjustments.</li> <li>• When PI2 Control is necessary, remove the MFDI function setting.</li> </ul>
Code	Name	Causes	Possible Solutions
oPE05	Run Cmd/Freq Ref Source Sel Err	<p>The setting to assign the Run command or frequency reference to an option card or the pulse train input is incorrect.</p>	Correct the parameter settings.
		<p><math>b1-01 = 3</math> [Frequency Reference Selection 1 = Option PCB] is set, but there is no option card connected to the drive.</p>	Connect an option card to the drive.
		<p><math>b1-02 = 3</math> [Run Command Selection 1 = Option PCB] is set, but there is no option card connected to the drive.</p>	
		<p>These parameters are set at the same time:</p> <ul style="list-style-type: none"> <li>• <math>b1-01 = 4</math> [Pulse Train Input]</li> <li>• <math>H6-01 \neq 0</math> [Terminal RP Pulse Train Function ≠ Frequency Reference]</li> </ul>	Set $H6-01 = 0$ .
		<p>These parameters are set at the same time:</p> <ul style="list-style-type: none"> <li>• <math>F3-01 = 6</math> [Digital Input Function Selection = BCD (5-digit), 0.01 Hz]</li> <li>• <math>F3-03 = 0, 1</math> [Digital Input Data Length Select = 8-bit, 12-bit]</li> </ul>	Set $F3-03 = 2$ [16-bit].
		<p>These parameters are set at the same time:</p> <ul style="list-style-type: none"> <li>• <math>b1-01 = 3</math> [Frequency Reference Selection 1 = Option PCB]</li> <li>• <math>F2-01 = 0</math> or <math>2</math> [Analog Input Function Selection = 3 Independent Channels or 3 Additional Channels]</li> </ul>	Correct the parameter settings.
		<p>These parameters are set and there is an AI-A3 option card connected to the drive:</p> <ul style="list-style-type: none"> <li>• <math>H1-xx = 2</math> [External Reference 1/2 Selection]</li> <li>• <math>b1-15 = 3</math> [Frequency Reference Selection 2 = Option PCB]</li> <li>• <math>F2-01 = 0</math> [Analog Input Function Selection = 3 Independent Channels]</li> </ul>	Correct the parameter settings.
Code	Name	Causes	Possible Solutions
oPE07	Analog Input Selection Error	<p>The settings for <math>H3-02</math>, <math>H3-06</math>, <math>H3-10</math> [MFAI Function Selection] and <math>H7-30</math> [Virtual Analog Input Selection] overlap.</p>	<p>Set <math>H3-02</math>, <math>H3-06</math>, <math>H3-10</math>, and <math>H7-30</math> correctly to prevent overlap.</p> <p><b>Note:</b> It is possible to set these functions to multiple analog input terminals at the same time:</p> <ul style="list-style-type: none"> <li>• Setting value <math>0</math> [Frequency Reference]</li> <li>• Setting values <math>F</math> and <math>1F</math> [Not Used]</li> </ul>
		<p>These parameters are set at the same time:</p> <ul style="list-style-type: none"> <li>• <math>H3-02</math>, <math>H3-06</math>, <math>H3-10</math>, <math>H7-30 = B</math> [PID Feedback]</li> <li>• <math>H6-01 = 1</math> [Terminal RP Pulse Train Function = PID Feedback Value]</li> </ul>	Remove the function settings that are not in use.
		<p>These parameters are set at the same time:</p> <ul style="list-style-type: none"> <li>• <math>H3-02</math>, <math>H3-06</math>, <math>H3-10</math>, <math>H7-30 = C</math> [PID Setpoint]</li> <li>• <math>H6-01 = 2</math> [PID Setpoint Value]</li> </ul>	
		<p>These parameters are set at the same time:</p> <ul style="list-style-type: none"> <li>• <math>H3-02</math>, <math>H3-06</math>, <math>H3-10</math>, <math>H3-40</math>, <math>H3-41</math>, <math>H3-42</math>, <math>H7-30 = 24</math> [PID Feedback Backup]</li> <li>• <math>Y4-41 = 1</math> [Diff Lvl Src Fdbk Backup Select = Enabled]</li> </ul>	<ul style="list-style-type: none"> <li>• Use only <math>H3-xx = 2D</math> [Differential Level Source] as a backup PID feedback and remove the function setting of <math>H3-xx = 24</math>.</li> <li>• Use <math>H3-xx = 24</math> as a backup PID feedback and set <math>Y4-41 = 0</math> [Disabled] to not let the drive use <math>H3-xx = 2D</math> as a backup PID feedback.</li> </ul>

Code	Name	Causes	Possible Solutions
		These parameters are set at the same time when $F2-01 = 2$ [Analog Input Function Selection = 3 Additional Channels]: <ul style="list-style-type: none"> <li><math>F2-05, F2-09, F2-13</math> [Terminal Vx Function Selection], <math>H3-40, H3-41, H3-42 = B</math> [PID Feedback]</li> <li><math>H6-01 = 1</math></li> </ul>	<ul style="list-style-type: none"> <li>Remove the function settings that are not in use.</li> <li>When you use <math>H6-01</math> and <math>F2-05, F2-09, F2-13</math> at the same time, set <math>F2-01 \neq 2</math>.</li> </ul>
		These parameters are set at the same time when $F2-01 = 2$ : <ul style="list-style-type: none"> <li><math>F2-05, F2-09, F2-13, H3-40, H3-41, H3-42 = C</math> [PID Setpoint]</li> <li><math>H6-01 = 2</math></li> </ul>	
		The settings for $F2-05, F2-09,$ and $F2-13$ overlap when $F2-01 = 2$ .	<ul style="list-style-type: none"> <li>Set the parameters correctly to prevent overlap.</li> <li>Set <math>F2-01 \neq 2</math>.</li> </ul>
		The settings for $F2-05, F2-09, F2-13$ and the settings for these parameters overlap when $F2-01 = 2$ : <ul style="list-style-type: none"> <li><math>H3-02, H3-06, H3-10</math></li> <li><math>H3-40, H3-41, H3-42</math></li> <li><math>H7-30</math></li> </ul>	
		The settings for these parameters overlap: <ul style="list-style-type: none"> <li><math>H3-02, H3-06, H3-10</math></li> <li><math>H3-40, H3-41, H3-42</math></li> <li><math>H7-30</math></li> </ul>	
Code	Name	Causes	Possible Solutions
oPE08	Parameter Selection Error	You set a function that is not compatible with the control method set in $A1-02$ [Control Method Selection].	<ol style="list-style-type: none"> <li>Push  to show <math>U1-18</math> [oPE Fault Parameter], and find parameters that are not in the applicable setting range.</li> <li>Correct the parameter settings.</li> </ol> <p><b>Note:</b> If more than one error occurs at the same time, other oPExx errors have priority over oPE02.</p>
		When $A1-02 = 0$ [V/f], you set these parameters: <ul style="list-style-type: none"> <li><math>S1-01 = 1</math> [Dynamic Noise Control = Enabled]</li> <li><math>Y4-42 \neq 0</math> [Output Disconnect Detection Sel ≠ Disabled]</li> </ul>	Set $S1-01 = 0$ or $Y4-42 = 0$ .
		When $A1-02 = 0$ [V/f], you used $H1-xx = 16$ [MFDDI Function Selection = Motor 2 Selection].	Correct the parameter setting.
		When $A1-02 = 5$ [OLV/PM], you set $E5-02$ to $E5-07$ [PM Motor Parameters] = 0.	<ul style="list-style-type: none"> <li>Set <math>E5-01</math> [PM Motor Code Selection] correctly as specified by the motor.</li> <li>For specialized motors, refer to the motor test report and set <math>E5-xx</math> correctly.</li> </ul>
		When $A1-02 = 5$ , you used these parameter settings: <ul style="list-style-type: none"> <li><math>E5-09 = 0.0</math> [PM Back-EMF <math>V_{peak}</math> (mV/(rad/s)) = 0.0 mV/(rad/s)]</li> <li><math>E5-24 = 0.0</math> [PM Back-EMF L-L <math>V_{rms}</math> (mV/rpm) = 0.0 mV/min<sup>-1</sup>]</li> </ul>	Set $E5-09$ or $E5-24$ to the correct value.
		When $A1-02 = 5$ , you set $E5-09 \neq 0$ and $E5-24 \neq 0$ .	Set $E5-09 = 0$ or $E5-24 = 0$ .
		When $A1-02 = 8$ [EZOLV], you used these parameter settings: <ul style="list-style-type: none"> <li><math>E9-01 = 1, 2</math> [Motor Type Selection = Permanent Magnet (PM), Synchronous Reluctance (SynRM)]</li> <li><math>b3-24 = 2</math> [Speed Search Method Selection = Current Detection 2]</li> </ul>	When $E9-01 = 1$ or $2$ , set $b3-24 = 1$ [Speed Estimation].
		You set $L6-02$ [Torque Detection Level 1] < $L6-14$ [Motor Underload Level @ Min Freq].	Set parameters to be $L6-02 \geq L6-14$ .

## 2.6 Parameter Setting Errors

Code	Name	Causes	Possible Solutions
oPE09	PID Control Selection Fault	These parameters are set at the same time: <ul style="list-style-type: none"> <li>• <math>b5-01 = 1</math></li> <li>• <math>b5-11 = 1</math> [PID Output Reverse Selection = Negative Output Accepted]</li> </ul> And one of these parameters is set: <ul style="list-style-type: none"> <li>• <math>d2-02 \neq 0.0</math> [Frequency Reference Lower Limit <math>\neq 0.0\%</math>]</li> <li>• <math>Y1-06 \neq 0.0</math> [Minimum Speed <math>\neq 0.0\%</math>]</li> <li>• <math>Y4-12 \neq 0.0</math> [Thrust Frequency <math>\neq 0.0\%</math>]</li> <li>• <math>Y1-01 \neq 0</math> [Multiplex Mode <math>\neq</math> Drive Only]</li> <li>• <math>YF-01 \neq 0</math> [PI Aux Control Selection <math>\neq</math> Disabled]</li> </ul>	Correct the parameter settings.
		These parameters are set at the same time: <ul style="list-style-type: none"> <li>• <math>Y2-01 = 5</math> [Sleep Level Type = Output Frequency (non-PID)]</li> <li>• <math>Y2-02</math> [Sleep Level] <math>&gt; 0.0</math> Hz</li> <li>• <math>Y4-17</math> [Utility Start Delay Time] <math>&gt; 0.0</math> min</li> </ul>	Correct the parameter settings.
<b>Note:</b> The drive detects this error if the PID control function selection is incorrect. (When $b5-01 = 1$ [PID Mode Setting = Standard])			
Code	Name	Causes	Possible Solutions
oPE10	V/f Data Setting Error	The parameters that set the V/f pattern do not satisfy these conditions: <ul style="list-style-type: none"> <li>• For motor 1: <math>E1-09 \leq E1-07 &lt; E1-06 \leq E1-11 \leq E1-04</math> [Minimum Output Frequency <math>\leq</math> Mid Point A Frequency <math>&lt;</math> Base Frequency <math>\leq</math> Mid Point B Frequency <math>\leq</math> Maximum Output Frequency]</li> <li>• For motor 2: <math>E3-09 \leq E3-07 &lt; E3-06 \leq E3-11 \leq E3-04</math> [Minimum Output Frequency <math>\leq</math> Mid Point A Frequency <math>&lt;</math> Base Frequency <math>\leq</math> Mid Point B Frequency <math>\leq</math> Maximum Output Frequency]</li> </ul>	Set the parameters correctly to satisfy the conditions.
Code	Name	Causes	Possible Solutions
oPE11	Carrier Frequency Setting Error	These parameters are set at the same time: <ul style="list-style-type: none"> <li>• <math>C6-05 &gt; 6</math> [Carrier Freq Proportional Gain <math>&gt; 6</math>]</li> <li>• <math>C6-04 &gt; C6-03</math> [Carrier Frequency Lower Limit <math>&gt;</math> Carrier Frequency Upper Limit]</li> </ul> <b>Note:</b> When $C6-05 < 7$ , $C6-04$ becomes disabled. $C6-03$ stays active.	Set $C6-02$ to $C6-05$ correctly.
		$C6-02$ to $C6-05$ settings are not in the applicable setting range.	
Code	Name	Causes	Possible Solutions
oPE16	Energy Saving Constants Error	The Energy Saving parameters are not set in the applicable setting range.	Make sure that $E5-xx$ is set correctly as specified by the motor nameplate data.
		These parameters are set at the same time: <ul style="list-style-type: none"> <li>• <math>b8-01 = 1</math> [Energy Saving Control Selection = Enabled]</li> <li>• <math>S1-01 = 1</math> [Dynamic Noise Control = Enabled]</li> </ul>	Disable Energy Saving Control or Dynamic Noise Control.
Code	Name	Causes	Possible Solutions
oPE33	Digital Output Selection Error	These two parameters are set at the same time: <ul style="list-style-type: none"> <li>• <math>H2-60 \neq F</math> [Term M1-M2 Secondary Function <math>\neq</math> Not Used]</li> <li>• <math>H2-01 = 1xx</math> [Term M1-M2 Function Selection = Inverse output of xx]</li> </ul>	Clear the $H2-01$ to $H2-03 = 1xx$ [Inverse output of xx] settings. <b>Note:</b> It is not possible to set $H2-01$ to $H2-03 = 1xx$ [Inverse output of xx] when using output functions for logic operations ( $H2-60$ , $H2-63$ , $H2-66 \neq F$ ).
		These two parameters are set at the same time: <ul style="list-style-type: none"> <li>• <math>H2-63 \neq F</math> [Term M3-M4 Secondary Function <math>\neq</math> Not Used]</li> <li>• <math>H2-02 = 1xx</math> [Term M3-M4 Function Selection = Inverse output of xx]</li> </ul>	
		These two parameters are set at the same time: <ul style="list-style-type: none"> <li>• <math>H2-66 \neq F</math> [Term MD-ME-MF Secondary Function <math>\neq</math> Not Used]</li> <li>• <math>H2-03 = 1xx</math> [Term MD-ME-MF Function Selection = Inverse output of xx]</li> </ul>	

## 2.7 Auto-Tuning Errors

This table gives information about errors detected during Auto-Tuning. If the drive detects an Auto-Tuning error, the keypad will show the error and the motor will coast to stop. The drive will not send notification signals for faults and alarms when Auto-Tuning errors occur.

Two types of Auto-Tuning errors are: *Endx* and *Erx*. *Endx* identifies that Auto-Tuning has successfully completed with calculation errors. Find and repair the cause of the error and do Auto-Tuning again, or set the motor parameters manually. You can use the drive in the application if you cannot find the cause of the *Endx* error.

*Erx* identifies that Auto-Tuning was not successful. Find and repair the cause of the error and do Auto-Tuning again.

Code	Name	Causes	Possible Solutions
End1	Excessive Rated Voltage Setting	The torque reference was more than 20% during Auto-Tuning or the no-load current that was measured after Auto-Tuning is more than 80%.	<ul style="list-style-type: none"> <li>Make sure that the input motor nameplate data is correct.</li> <li>Do Auto-Tuning again and correctly set the motor nameplate data.</li> <li>If you can uncouple the motor and load, remove the motor from the machine and do Rotational Auto-Tuning again.</li> <li>If you cannot uncouple the motor and load, use the results from Auto-Tuning.</li> </ul>
Code	Name	Causes	Possible Solutions
End2	Iron Core Saturation Coefficient	The motor nameplate data entered during Auto-Tuning is incorrect.	<ul style="list-style-type: none"> <li>Make sure that the input motor nameplate data is correct.</li> <li>Do Auto-Tuning again and correctly set the motor nameplate data.</li> </ul>
Code	Name	Causes	Possible Solutions
End3	Rated Current Setting Alarm	The rated current value is incorrect.	Do Auto-Tuning again and set the correct rated current shown on the motor nameplate.
Code	Name	Causes	Possible Solutions
End4	Adjusted Slip Calculation Error	The Auto-Tuning results were not in the applicable parameter setting range.	<ul style="list-style-type: none"> <li>Make sure the input motor nameplate data is correct.</li> <li>Do Rotational Auto-Tuning again and correctly set the motor nameplate data.</li> <li>If you cannot uncouple the motor and load, do Stationary Auto-Tuning 2.</li> </ul>
		The motor rated slip that was measured after Stationary Auto-Tuning was 0.2 Hz or lower.	
		The secondary resistor measurement results were not in the applicable range.	
Code	Name	Causes	Possible Solutions
End5	Resistance Tuning Error	The Auto-Tuning results of the Line-to-Line Resistance were not in the applicable range.	<ul style="list-style-type: none"> <li>Make sure that the input motor nameplate data is correct.</li> <li>Examine and repair damaged motor wiring.</li> </ul>
Code	Name	Causes	Possible Solutions
End6	Leakage Inductance Alarm	The Auto-Tuning results were not in the applicable parameter setting range.	Make sure that the input motor nameplate data is correct, and do Auto-Tuning again.
		<i>A1-02 [Control Method Selection]</i> setting is not applicable.	<ul style="list-style-type: none"> <li>Examine the value set in <i>A1-02</i>.</li> <li>Make sure that the input motor nameplate data is correct, and do Auto-Tuning again.</li> </ul>
Code	Name	Causes	Possible Solutions
End7	No-Load Current Alarm	The Auto-Tuning results of the motor no-load current value were not in the applicable range.	Examine and repair damaged motor wiring.
		Auto-Tuning results were less than 5% of the motor rated current.	Make sure that the input motor nameplate data is correct, and do Auto-Tuning again.
Code	Name	Causes	Possible Solutions
End8	HFI Alarm	<ul style="list-style-type: none"> <li>Inductance saliency ratio (<i>E5-07/E5-06</i>) is too small.</li> <li>The drive cannot find the <i>n8-36 [HFI Frequency Level for L Tuning]</i> value.</li> </ul>	<ul style="list-style-type: none"> <li>Set the correct value on the motor nameplate to <i>E5-xx [PM Motor Settings]</i> or do rotational/stationary Auto-Tuning.</li> <li>When it is necessary to set <i>n8-35 = 1 [Initial Pole Detection Method = High Frequency Injection]</i>, make sure that there is no unusual noise in the low speed range (10% or less) and that the motor does not rotate in reverse at start.</li> </ul> <p><b>Note:</b> If the drive detects <i>End8</i>, it will automatically set <i>n8-35 = 0 [Pull-in]</i>. Do not change the settings unless necessary.</p>

## 2.7 Auto-Tuning Errors

Code	Name	Causes	Possible Solutions
End9	Initial Pole Detection Alarm	The drive cannot calculate the correct value for <i>n8-84</i> [Polarity Detection Current] during High Frequency Injection Tuning.	When <i>n8-35</i> = 1 [Initial Pole Detection Method = High Frequency Injection], make sure that the motor does not rotate in reverse at start. <b>Note:</b> If the drive detects <i>End9</i> , it will automatically set <i>n8-35</i> = 0 [Pull-in]. Do not change the settings unless necessary.
Code	Name	Causes	Possible Solutions
Er-01	Motor Data Error	The motor nameplate data entered during Auto-Tuning is incorrect.	<ul style="list-style-type: none"> <li>Make sure that the motor nameplate data is correct.</li> <li>Do Auto-Tuning again and correctly set the motor nameplate data.</li> </ul>
		The combination of the motor rated power and motor rated current do not match.	<ul style="list-style-type: none"> <li>Examine the combination of drive capacity and motor output.</li> <li>Do Auto-Tuning again, and correctly set the motor rated power and motor rated current.</li> </ul>
		The combination of the motor rated current that was entered during Auto-Tuning and <i>E2-03</i> [Motor No-Load Current] do not match.	<ul style="list-style-type: none"> <li>Examine the motor rated current and the no-load current.</li> <li>Set <i>E2-03</i> correctly.</li> <li>Do Auto-Tuning again, and correctly set the motor rated current.</li> </ul>
		The combination of the setting values of Motor Base Frequency and Motor Base Speed do not match.	Do Auto-Tuning again, and correctly set the Motor Base Frequency and Motor Base Speed.
Code	Name	Causes	Possible Solutions
Er-02	Drive in an Alarm State	The motor nameplate data entered during Auto-Tuning is incorrect.	<ul style="list-style-type: none"> <li>Make sure that the motor nameplate data entered in Auto-Tuning is correct.</li> <li>Do Auto-Tuning again and correctly set the motor nameplate data.</li> </ul>
		You did Auto-Tuning while the drive had a minor fault or alarm.	Clear the minor fault or alarm and do Auto-Tuning again.
		There is a defective motor cable or cable connection.	Examine and repair motor wiring.
		The load is too large.	<ul style="list-style-type: none"> <li>Decrease the load.</li> <li>Examine the machine area to see if, for example, the motor shaft is locked.</li> </ul>
		The drive detected a minor fault during Auto-Tuning.	<ol style="list-style-type: none"> <li>Stop Auto-Tuning.</li> <li>Examine the minor fault code and remove the cause of the problem.</li> <li>Do Auto-Tuning again.</li> </ol>
Code	Name	Causes	Possible Solutions
Er-03	STOP Button was Pressed	During Auto-Tuning,  was pushed.	Auto-Tuning did not complete correctly. Do Auto-Tuning again.
Code	Name	Causes	Possible Solutions
Er-04	Line-to-Line Resistance Error	The Auto-Tuning results were not in the applicable parameter setting range.	<ul style="list-style-type: none"> <li>Examine and repair motor wiring.</li> <li>Disconnect the machine from the motor and do Rotational Auto-Tuning again.</li> </ul>
		Auto-Tuning did not complete in a pre-set length of time.	
		There is a defective motor cable or cable connection.	<ul style="list-style-type: none"> <li>Make sure that the input motor nameplate data is correct.</li> <li>Do Auto-Tuning again and correctly set the motor nameplate data.</li> </ul>
		The motor nameplate data entered during Auto-Tuning is incorrect.	
Code	Name	Causes	Possible Solutions
Er-05	No-Load Current Error	The Auto-Tuning results were not in the applicable parameter setting range.	<ul style="list-style-type: none"> <li>Examine and repair motor wiring.</li> <li>Disconnect the machine from the motor and do Rotational Auto-Tuning again.</li> </ul>
		Auto-Tuning did not complete in a pre-set length of time.	
		The motor nameplate data entered during Auto-Tuning is incorrect.	<ul style="list-style-type: none"> <li>Make sure that the input motor nameplate data is correct.</li> <li>Do Auto-Tuning again and correctly set the motor nameplate data.</li> </ul>
		Rotational Auto-Tuning was done with a load that was more than 30% of the rating connected to the motor.	<ul style="list-style-type: none"> <li>Disconnect the machine from the motor and do Rotational Auto-Tuning again.</li> <li>If you cannot uncouple the motor and load, make sure that the load is less than 30% of the motor rating. If a mechanical brake is installed in the motor, release the brake during Rotational Auto-Tuning.</li> </ul>

Code	Name	Causes	Possible Solutions
Er-08	Rated Slip Error	The motor nameplate data entered during Auto-Tuning is incorrect.	<ul style="list-style-type: none"> <li>Make sure that the input motor nameplate data is correct.</li> <li>Do Auto-Tuning again and correctly set the motor nameplate data.</li> </ul>
		Auto-Tuning did not complete in a pre-set length of time.	<ul style="list-style-type: none"> <li>Examine and repair the motor wiring.</li> <li>If the motor and machine are connected during Rotational Auto-Tuning, decouple the motor from the machinery.</li> </ul>
		The Auto-Tuning results were not in the applicable parameter setting range.	
		Rotational Auto-Tuning was done with a load that was more than 30% of the rating connected to the motor.	<ul style="list-style-type: none"> <li>Disconnect the machine from the motor and do Rotational Auto-Tuning again.</li> <li>If you cannot uncouple the motor and load, make sure that the load is less than 30% of the motor rating. If a mechanical brake is installed in the motor, release the brake during Rotational Auto-Tuning.</li> </ul>
Code	Name	Causes	Possible Solutions
Er-09	Acceleration Error	The motor did not accelerate for the specified acceleration time.	<ol style="list-style-type: none"> <li>Increase the value set in <i>Cl-01 [Acceleration Time 1]</i>.</li> <li>Disconnect the machine from the motor and do Rotational Auto-Tuning again.</li> </ol>
		Rotational Auto-Tuning was done with a load that was more than 30% of the rating connected to the motor.	<ul style="list-style-type: none"> <li>Disconnect the machine from the motor and do Rotational Auto-Tuning again.</li> <li>If you cannot uncouple the motor and load, make sure that the load is less than 30% of the motor rating. If a mechanical brake is installed in the motor, release the brake during Rotational Auto-Tuning.</li> </ul>
Code	Name	Causes	Possible Solutions
Er-12	Current Detection Error	There is a phase loss in the drive input power. (U/T1, V/T2, W/T3)	Examine and repair motor wiring.
		The current exceeded the current rating of the drive.	<ul style="list-style-type: none"> <li>Check the motor wiring for any short circuits between the wires.</li> <li>Check and turn ON any magnetic contactors used between motors.</li> <li>Replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> </ul>
		The output current is too low.	
		You tried Auto-Tuning without a motor connected to the drive.	Connect the motor and do Auto-Tuning.
		There was a current detection signal error.	Replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.
Code	Name	Causes	Possible Solutions
Er-13	Leakage Inductance Error	The motor rated current value is incorrect.	Correctly set the rated current indicated on the motor nameplate and do Auto-Tuning again.
		The drive could not complete tuning for leakage inductance in fewer than 300 s.	Examine and repair motor wiring.
Code	Name	Causes	Possible Solutions
Er-18	Back EMF Error	The result of the induced voltage tuning was not in the applicable range.	<ol style="list-style-type: none"> <li>Make sure that the input motor nameplate data is correct.</li> <li>Do Auto-Tuning again and correctly set the motor nameplate data.</li> </ol>
Code	Name	Causes	Possible Solutions
Er-19	PM Inductance Error	The Auto-Tuning results of the PM motor inductance were not in the applicable range.	<ol style="list-style-type: none"> <li>Make sure that the input motor nameplate data is correct.</li> <li>Do Auto-Tuning again and correctly set the motor nameplate data.</li> </ol>
Code	Name	Causes	Possible Solutions
Er-20	Stator Resistance Error	The Auto-Tuning results of the PM Motor Stator Resistance were not in the applicable range.	<ol style="list-style-type: none"> <li>Make sure that the input motor nameplate data is correct.</li> <li>Do Auto-Tuning again and correctly set the motor nameplate data.</li> </ol>
Code	Name	Causes	Possible Solutions
Er-25	HighFreq Inject Param Tuning Err	The motor data is incorrect.	<p>Do Stationary Auto-Tuning again.</p> <p><b>Note:</b> If the drive detects <i>Er-25</i> after you do Stationary Auto-Tuning, it is possible that the motor cannot use high frequency injection. For more information, contact Yaskawa or your nearest sales representative.</p>

## 2.8 Backup Function Operating Mode Display and Errors

### ◆ Operating Mode Display

When you use the backup function from the keypad, the keypad will show messages related to the current operation. These messages will not identify errors in the drive operation.

Keypad Display	Name	Display	State
Drive and Keypad mismatch. Should the parameters be restored?	Detection of inconsistency between the drive and keypad	Normally displayed	The drive detected the connection of a keypad from a different drive. Select [Yes] to copy parameters backed up in the keypad to the connected drive.
Restore Restore from keypad	Restoring parameters	Flashing	The parameters stored in the keypad have been restored to the drive.
End	Backup/restore/verify operation ended normally	Normally displayed	The parameter backup, restore, or verify operation ended normally.
Backup Backup from Drive	Backing up parameters	Flashing	The parameters stored in the drive are being backed up to the keypad.
Verify Keypad & Drive	Verifying parameters	Flashing	The parameter settings stored in the keypad and the parameter settings in the drive align or are being compared.

### ◆ Backup Function Runtime Errors

When an error occurs, the keypad shows a code to identify the error.

The table in this section shows the error codes. Refer to this table to remove the cause of the errors.

**Note:**

Push any key on the keypad to clear an error.

Code	Name	Causes	Possible Solutions
CPEr	Control Mode Mismatch	The keypad setting and drive setting for <i>A1-02</i> [ <i>Control Method Selection</i> ] do not agree.	<ol style="list-style-type: none"> <li>Set <i>A1-02</i> on the drive to the same value that is on the keypad.</li> <li>Restore the parameters.</li> </ol>
Code	Name	Causes	Possible Solutions
CPyE	Error Writing Data	Parameter restore did not end correctly.	Restore the parameters.
Code	Name	Causes	Possible Solutions
CSEr	Control Mode Mismatch	The keypad is broken.	Replace the keypad.
Code	Name	Causes	Possible Solutions
dFPS	Drive Model Mismatch	You tried to restore parameters to a different drive model than the one that you backed up.	<ol style="list-style-type: none"> <li>Examine the drive model that you used to back up the parameters.</li> <li>Restore the parameters.</li> </ol>
Code	Name	Causes	Possible Solutions
iFEr	Keypad Communication Error	There was a communications error between the keypad and the drive.	Examine the connector or cable connection.
Code	Name	Causes	Possible Solutions
ndAT	Error Received Data	The parameter settings for model and specifications (power supply voltage and capacity) are different between the keypad and the drive.	<ol style="list-style-type: none"> <li>Make sure that drive model and the value set in <i>o2-04</i> [<i>Drive Model (KVA) Selection</i>] agree.</li> <li>Restore the parameters.</li> </ol>
		The parameters are not stored in the keypad.	<ol style="list-style-type: none"> <li>Connect a keypad that has the correct parameters.</li> <li>Restore the parameters.</li> </ol>
Code	Name	Causes	Possible Solutions
rdEr	Error Reading Data	You tried to back up the data when <i>o3-02</i> = 0 [ <i>Copy Allowed Selection</i> = Disabled].	Set <i>o3-02</i> = 1 [ <i>Enabled</i> ] and back up again.
Code	Name	Causes	Possible Solutions
vAEr	Voltage Class, Capacity Mismatch	The power supply specifications or drive capacity parameter settings are different between the keypad and the drive.	<ol style="list-style-type: none"> <li>Make sure that drive model and the value set in <i>o2-04</i> [<i>Drive Model (KVA) Selection</i>] agree.</li> <li>Restore the parameters.</li> </ol>

Code	Name	Causes	Possible Solutions
vFyE	Parameters do not Match	The parameters that are backed up in the keypad and the parameters in the drive are not the same.	<ol style="list-style-type: none"><li>1. Restore or backup the parameter again.</li><li>2. Verify the parameters.</li></ol>

## 2.9 Diagnosing and Resetting Faults

When a fault occurs and the drive stops, do the procedures in this section to remove the cause of the fault, then re-energize the drive.

### ◆ Fault and Power Loss Occur at the Same Time

**WARNING! Crush Hazard.** Wear eye protection when you do work on the drive. If you do not use correct safety equipment, it can cause serious injury or death.

**WARNING! Electrical Shock Hazard.** After the drive blows a fuse or trips a GFCI, do not immediately energize the drive or operate peripheral devices. Wait for the time specified on the warning label at a minimum and make sure that all indicators are OFF. Then check the wiring and peripheral device ratings to find the cause of the problem. If you do not know the cause of the problem, contact Yaskawa before you energize the drive or peripheral devices. If you do not fix the problem before you operate the drive or peripheral devices, it can cause serious injury or death.

1. Supply power to the control circuit from the external 24 V input.
2. Use monitor parameters U2-xx [Fault Trace] to show the fault code and data about the operating status of the drive immediately before the fault occurred.
3. Use the information in the Troubleshooting tables to remove the fault.

**Note:**

1. To find the faults that were triggered, check the fault history in U2-02 [Previous Fault]. To find information about drive status (such as frequency, current, and voltage) when the faults were triggered, check U2-03 to U2-20.
2. If the fault display stays after you re-energize the drive, remove the cause of the fault and reset.



### ◆ Fault Occurs Without Power Loss

1. Examine the fault code shown on the keypad.
2. Use the information in the Troubleshooting tables to remove the fault.
3. Do a fault reset.

### ◆ Fault Reset

If a fault occurs, you must remove the cause of the fault and re-energize the drive. [Table 2.3](#) lists the different methods to reset the drive after a fault.

**Table 2.3 Fault Reset Methods**

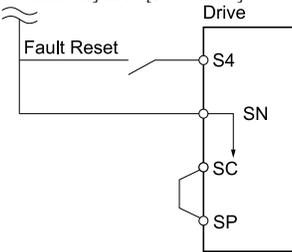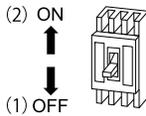Methods	Description
Method 1	While the keypad is showing the fault or alarm code, push <b>F1</b> (Reset) or  on the keypad.
Method 2	<p>Switch ON the MFDI terminal set to H1-xx = 14 [MFDI Function Select = Fault Reset].</p> <p><b>Note:</b> The default setting for H1-04 [Terminal S4 Function Selection] is 14 [Fault Reset].</p> 
Method 3	<ol style="list-style-type: none"> <li>1. De-energize the drive main circuit power supply.</li> <li>2. Energize the drive again after the keypad display goes out.</li> </ol> 

**Note:**

If the drive receives a Run command from a communication option or control circuit terminal, the drive will not reset the fault. Remove the Run command then try to clear the fault. If you do a fault reset when the drive has a Run command, the keypad will show minor fault *CrST* [*Remove RUN Command to Reset*].

## 2.10 Troubleshooting Without Fault Display

### Note:

Make sure that you use a keypad with FLASH number 1004 or later. Keypads with FLASH numbers 1003 and earlier will not show characters correctly.

If the drive or motor operate incorrectly, but the keypad does not show a fault or error code, refer to the items this section.

- Motor hunting and oscillation
- Unsatisfactory motor torque
- Unsatisfactory speed precision
- Unsatisfactory motor torque and speed response
- Motor noise

### ◆ Typical Problems

Symptom	Reference
The Parameter Settings Will Not Change	136
The Motor Does Not Rotate After Entering Run Command	137
The Motor Rotates in the Opposite Direction from the Run Command	138
The Motor Rotates in Only One Direction	138
The Motor Is Too Hot	138
oPE02 Error Occurs When Decreasing the Motor Rated Current Setting	139
The Correct Auto-Tuning Mode Is Not Available	139
The Motor Stalls during Acceleration or Accel/Decel Time Is Too Long	139
The Drive Frequency Reference Is Different than the Controller Frequency Reference Command	140
The Motor Speed Is Not Stable When Using a PM Motor	140
There Is Too Much Motor Oscillation and the Rotation Is Irregular	140
There Is Audible Noise from the Drive or Motor Cables When the Drive Is Energized	140
The Ground Fault Circuit Interrupter (GFCI) Trips During Run	141
Motor Rotation Causes Unexpected Audible Noise from Connected Machinery	141
Motor Rotation Causes Oscillation or Hunting	141
PID Output Fault	141
The Starting Torque Is Not Sufficient	141
The Motor Rotates after the Drive Output Is Shut Off	142
The Output Frequency Is Lower Than the Frequency Reference	142
The Motor Is Making an Audible Noise	142
The Motor Will Not Restart after a Loss of Power	142

### ◆ The Parameter Settings Will Not Change


Causes	Possible Solutions
The drive is operating the motor (the drive is in Drive Mode).	Stop the drive and change to Programming Mode.
Parameter $A1-01 = 0$ [Access Level Selection = Operation Only].	Set $A1-01 = 2$ [Access Level Selection = Advanced Level] or $A1-01 = 3$ [Expert Level].
Parameter $H1-xx = 1B$ [MFDI Function Selection = Programming Lockout].	Activate the terminals to which $H1-xx = 1B$ is set, and then change the parameters.

Causes	Possible Solutions
You entered an incorrect password in A1-04 [Password].	<ul style="list-style-type: none"> <li>Enter the correct password to A1-04 again.</li> <li>If you forgot the password, set the password again with A1-04 and A1-05 [Password Setting].</li> </ul> <p><b>Note:</b> If you set the password, you cannot change these parameters until the password aligns:</p> <ul style="list-style-type: none"> <li>A1-01 [Access Level Selection]</li> <li>A1-02 [Control Method Selection]</li> <li>A1-03 [Initialize Parameters]</li> <li>A2-01 to A2-32 [User Parameter 1 to User Parameter 32]</li> </ul>
The drive detected Uv [Undervoltage].	<ul style="list-style-type: none"> <li>View U1-07 [DC Bus Voltage] to see the power supply voltage.</li> <li>Examine the main circuit wiring.</li> </ul>

## ◆ The Motor Does Not Rotate After Entering Run Command

Causes	Possible Solutions
The drive is not in Drive Mode.	<ol style="list-style-type: none"> <li>Make sure that the keypad shows [Rdy].</li> <li>If the keypad does not show [Rdy], go back to the Home screen.</li> </ol>
The drive stopped,  was pushed, and changed the Run command source to the keypad.	<p>Do one of these two:</p> <ul style="list-style-type: none"> <li>Push .</li> <li>Re-energize the drive.</li> </ul> <p><b>Note:</b> Set o2-01 = 0 [LO/RE Key Function Selection = Disabled] to prevent changing the Run command source with .</p>
Auto-Tuning completed.	<p>Go back to the Home screen on the keypad.</p> <p><b>Note:</b> When Auto-Tuning completes, the drive changes to Programming Mode. The drive will not accept a Run command unless the drive is in Drive Mode.</p>
The drive received a fast stop command.	Turn off the fast stop input signal.
The settings for the source that supplies the Run command are incorrect.	Set b1-02 [Run Command Selection 1] correctly.
The frequency reference source is set incorrectly.	Set b1-01 [Frequency Reference Selection 1] correctly.
There is defective wiring in the control circuit terminals.	<ul style="list-style-type: none"> <li>Correctly wire the drive control circuit terminals.</li> <li>View U1-10 [Input Terminal Status] for input terminal status.</li> </ul>
The settings for voltage input and current input of the master frequency reference are incorrect.	<p>Examine these analog input terminal signal level settings:</p> <ul style="list-style-type: none"> <li>Terminal A1: Jumper switch S1 and H3-01 [Terminal A1 Signal Level Select]</li> <li>Terminal A2: Jumper switch S1 and H3-09 [Terminal A2 Signal Level Select]</li> <li>Terminal A3: Jumper switch S1 and H3-05 [Terminal A3 Signal Level Select]</li> </ul>
The selection for the sinking/sourcing mode and the internal/external power supply is incorrect.	<ul style="list-style-type: none"> <li>For sinking mode, close the circuit between terminals SC-SP with a wire jumper.</li> <li>For sourcing mode, close the circuit between terminals SC-SN with a wire jumper.</li> <li>For external power supply, remove the wire jumper.</li> </ul>
The frequency reference is too low.	<ul style="list-style-type: none"> <li>View U1-01 [Freq Reference].</li> <li>Increase the frequency reference to a value higher than E1-09 [Minimum Output Frequency].</li> </ul>
The MFAI setting is incorrect.	<ul style="list-style-type: none"> <li>Make sure that the functions set to the MFAI are correct. The frequency reference is 0 when H3-02, H3-10, H3-06 = 1 [MFAI Function Selection = Frequency Gain] and voltage (current) is not input.</li> <li>View U1-13 to U1-15 [Terminal A1, A2, A3 Input Voltage] to see if the analog input values set to terminals A1, A2, and A3 are applicable.</li> </ul>
 was pushed.	<p>Turn the Run command OFF then ON from an external input.</p> <p><b>Note:</b> When you push  during operation, the drive will ramp to stop. Set o2-02 = 0 [STOP Key Function Selection = Disabled] to disable the  function.</p>
The 2-wire sequence and 3-wire sequence are set incorrectly.	<ul style="list-style-type: none"> <li>Set one of the parameters H1-03 to H1-08 [Terminals S3 to S8 Function Select] to 0 [3-Wire Sequence] to enable the 3-wire sequence.</li> <li>If a 2-wire sequence is necessary, make sure that H1-03 to H1-08 ≠ 0.</li> </ul>

### ◆ The Motor Rotates in the Opposite Direction from the Run Command

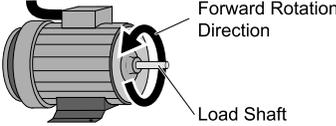Causes	Possible Solutions
The phase wiring between the drive and motor is incorrect.	<ul style="list-style-type: none"> <li>Examine the wiring between the drive and motor.</li> <li>Connect drive output terminals U/T1, V/T2, and W/T3 in the correct sequence to agree with motor terminals U, V, and W.</li> <li>Switch two motor cables U, V, and W to reverse motor direction.</li> </ul>
The forward direction for the motor is set incorrectly.	<ul style="list-style-type: none"> <li>Connect drive output terminals U/T1, V/T2, and W/T3 in the correct sequence to agree with motor terminals U, V, and W.</li> <li>Switch two motor cables U, V, and W to reverse motor direction.</li> </ul> <div style="text-align: center;">  <p>The diagram shows a motor with a load shaft. An arrow indicates the 'Forward Rotation Direction' is counter-clockwise when viewed from the shaft side.</p> </div> <p style="text-align: center;"><b>Figure 2.1 Forward Rotating Motor</b></p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>For Yaskawa motors, the forward direction is counterclockwise when looking from the motor shaft side.</li> <li>Refer to the motor specifications, and make sure that the forward rotation direction is correct for the application. The forward rotation direction of motors can be different for different motor manufacturers and types.</li> </ul>
The signal connections for forward run and reverse run on the drive control circuit terminals and control panel side are incorrect.	Correctly wire the control circuit.
The motor is running at almost 0 Hz and the Speed Search estimated the speed to be in the opposite direction.	Set $b3-14 = 0$ [ <i>Bi-directional Speed Search = Disabled</i> ], then the drive will only do speed search in the specified direction.

### ◆ The Motor Rotates in Only One Direction

Causes	Possible Solutions
The drive will not let the motor rotate in reverse.	Set $b1-04 = 0$ [ <i>Reverse Operation Selection = Reverse Enabled</i> ].
The drive did not receive a Reverse run signal and 3-Wire sequence is selected.	Activate the terminals to which $H1-xx = 0$ [ <i>3-Wire Sequence</i> ] is set, and then enable reverse operation.

### ◆ The Motor Is Too Hot

Causes	Possible Solutions
The load is too heavy.	<ul style="list-style-type: none"> <li>Decrease the load.</li> <li>Increase the acceleration and deceleration times.</li> <li>Examine the values set in <math>L1-01</math> [<i>Motor Overload (oL1) Protection</i>], <math>L1-02</math> [<i>Motor Overload Protection Time</i>], and <math>E2-01</math> [<i>Motor Rated Current (FLA)</i>].</li> <li>Use a larger motor.</li> </ul> <p><b>Note:</b> The motor also has a short-term overload rating. Examine this rating carefully before setting drive parameters.</p>
The motor is running continuously at a very low speed.	<ul style="list-style-type: none"> <li>Change the run speed.</li> <li>Use a drive-dedicated motor.</li> </ul>
The drive is operating in a vector control mode, but Auto-Tuning has not been done.	<ul style="list-style-type: none"> <li>Do Auto-Tuning.</li> <li>Calculate motor parameter and set motor parameters.</li> <li>Set <math>A1-02 = 0</math> [<i>Control Method Selection = V/f Control</i>].</li> </ul>
The voltage insulation between motor phases is not sufficient.	<ul style="list-style-type: none"> <li>Use a motor with a voltage tolerance that is higher than the maximum voltage surge.</li> <li>Use a drive-dedicated motor that is rated for use with AC drives for applications that use a motor on drives rated higher than 480 V class.</li> <li>Install an AC reactor on the output side of the drive and set <math>C6-02 = 1</math> [<i>Carrier Frequency Selection = 2.0 kHz</i>].</li> </ul> <p><b>Note:</b> When the motor is connected to the drive output terminals U/T1, V/T2, and W/T3, surges occur between the drive switching and the motor coils. These surges can be three times the drive input power supply voltage (600 V for a 208 V class drive, 1200 V for a 480 V class drive).</p>
The air around the motor is too hot.	<ul style="list-style-type: none"> <li>Measure the ambient temperature.</li> <li>Decrease the temperature in the area until it is in the specified temperature range.</li> </ul>
The motor fan stopped or is clogged.	<ul style="list-style-type: none"> <li>Clean the motor fan.</li> <li>Make the drive environment better.</li> </ul>

### ◆ oPE02 Error Occurs When Decreasing the Motor Rated Current Setting

Causes	Possible Solutions
Motor rated current and the motor no-load current setting in the drive are incorrect.	<ul style="list-style-type: none"> <li>You are trying to set the motor rated current in <i>E2-01 [Motor Rated Current (FLA)]</i> to a value lower than the no-load current set in <i>E2-03 [Motor No-Load Current]</i>.</li> <li>Make sure that value set in <i>E2-01</i> is higher than <i>E2-03</i>.</li> <li>If it is necessary to set <i>E2-01</i> lower than <i>E2-03</i>, first decrease the value set to <i>E2-03</i>, then change the <i>E2-01</i> setting as necessary.</li> </ul>

### ◆ The Correct Auto-Tuning Mode Is Not Available

Causes	Possible Solutions
The desired Auto-Tuning mode is not available for the selected control mode.	Change the motor control method with parameter <i>A1-02 [Control Method Selection]</i> .

### ◆ The Motor Stalls during Acceleration or Accel/Decel Time Is Too Long

Causes	Possible Solutions
The drive and motor system reached the torque limit or current suppression will not let the drive accelerate.	<ul style="list-style-type: none"> <li>Decrease the load.</li> <li>Use a larger motor.</li> </ul> <p><b>Note:</b> Although the drive has a Stall Prevention function and a Torque Compensation Limit function, accelerating too fast or trying to drive a load that is too large can exceed the limits of the motor.</p>
Torque limit is set incorrectly.	Set the torque limit correctly.
The acceleration time setting is too short.	Examine the values set in <i>C1-01, C1-03, C1-05, or C1-07 [Acceleration Times]</i> and set them to applicable values.
The load is too heavy.	<ul style="list-style-type: none"> <li>Increase the acceleration time.</li> <li>Examine the mechanical brake and make sure that it is fully releasing.</li> <li>Decrease the load to make sure that the output current stays less than the motor rated current.</li> <li>Use a larger motor.</li> </ul> <p><b>Note:</b> • In extruder and mixer applications, the load can increase as the temperature decreases. • Although the drive has a Stall Prevention function and a Torque Compensation Limit function, accelerating too fast or trying to drive a load that is too large can exceed the limits of the motor.</p>
The frequency reference is low.	<ul style="list-style-type: none"> <li>Examine <i>E1-04 [Maximum Output Frequency]</i> and increase the setting if it is set too low.</li> <li>Examine <i>U1-01 [Frequency Reference]</i> for the correct frequency reference.</li> <li>Examine the multi-function input terminals to see if a frequency reference signal switch has been set.</li> <li>Examine the low gain level set in <i>H3-03, H3-11, H3-07 [Terminal A1, A2, A3 Gain Setting]</i> when you use MFAL.</li> </ul>
The frequency reference is set incorrectly.	<p>When <i>H3-02, H3-06, H3-10 = 1 [MFAI Function Selection = Frequency Gain]</i> are set, see if voltage (current) has been set.</p> <ul style="list-style-type: none"> <li>Check the values set in <i>H3-02, H3-06, and H3-10</i>.</li> <li>Use <i>U1-13 to U1-15 [Terminal A1, A2, A3 Input Voltage]</i> to make sure that the analog input values set to terminals A1, A2, and A3 are applicable.</li> </ul>
The motor characteristics and drive parameter settings are not compatible.	<ul style="list-style-type: none"> <li>Set the correct V/f pattern to agree with the characteristics of the motor.</li> <li>Examine the V/f pattern set in <i>E1-03 [V/f Pattern Selection]</i>.</li> <li>Perform Rotational Auto-Tuning.</li> </ul>
The drive is operating in vector control mode, but Auto-Tuning is not completed.	<ul style="list-style-type: none"> <li>Do Auto-Tuning.</li> <li>Calculate motor data and reset motor parameters.</li> <li>Set <i>A1-02 = 0 [Control Method Selection = V/f Control]</i>.</li> </ul>
The Stall Prevention level during acceleration setting is too low.	<p>Increase the value set in <i>L3-02 [Stall Prevent Level during Accel]</i>.</p> <p><b>Note:</b> If the <i>L3-02</i> value is too low, the acceleration time can be unsatisfactorily long.</p>
The Stall Prevention level during run setting is too low.	<p>Increase the value set in <i>L3-06 [Stall Prevent Level during Run]</i>.</p> <p><b>Note:</b> If the <i>L3-06</i> value is too low, speed will decrease while the drive outputs torque.</p>
Drive reached the limitations of the V/f motor control method.	<ul style="list-style-type: none"> <li>When the motor cable is longer than 50 m (164 ft), do Auto-Tuning for line-to-line resistance.</li> <li>Set the V/f pattern to "High Starting Torque".</li> <li>Use a Vector Control method.</li> </ul> <p><b>Note:</b> V/f control method does not provide high torque at low speeds.</p>

### ◆ The Drive Frequency Reference Is Different than the Controller Frequency Reference Command

Causes	Possible Solutions
The analog input gain and bias for the frequency reference input are set incorrectly.	Examine the gain and bias settings for the analog inputs that set the frequency reference. <ul style="list-style-type: none"> <li>Terminal A1: H3-03 [Terminal A1 Gain Setting], H3-04 [Terminal A1 Bias Setting]</li> <li>Terminal A2: H3-11 [Terminal A2 Gain Setting], H3-12 [Terminal A2 Bias Setting]</li> <li>Terminal A3: H3-07 [Terminal A3 Gain Setting], H3-08 [Terminal A3 Bias Setting]</li> </ul>
The drive is receiving frequency bias signals from analog input terminals A1 to A3 and the sum of all signals makes the frequency reference.	<ul style="list-style-type: none"> <li>Examine parameters H3-02, H3-10, H3-06 [MFAI Function Select]. If two or more of these parameters are set to 0, change the settings.</li> <li>Use U1-13 to U1-15 [Terminal A1, A2, A3 Input Voltage] to make sure that the analog input values set to terminals A1, A2, and A3 are applicable.</li> </ul>
The motor rotates faster than the frequency reference at low speed.	Set E1-09 > 0 [Minimum Output Frequency]. <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>The recommended setting for E1-09 is 0.5 Hz.</li> <li>When frequency reference &lt; E1-09, the drive output will turn OFF.</li> </ul>
PID control is enabled.	If PID control is not necessary, set b5-01 = 0 [PID Mode Setting = Disabled]. <p><b>Note:</b></p> <p>When PID control is enabled, the drive adjusts the output frequency as specified by the target value. The drive will only accelerate to the maximum output frequency set in E1-04 [Maximum Output Frequency] while PID control is active.</p>

### ◆ The Motor Speed Is Not Stable When Using a PM Motor

Causes	Possible Solutions
Parameter E5-01 [PM Motor Code Selection] is set incorrectly.	Refer to "Motor Performance Fine-Tuning" in the technical manual.
The drive is operating the motor at more than the specified speed control range.	Examine the speed control range and adjust the speed.
The motor is hunting.	Adjust these parameters to have the largest effect: <ul style="list-style-type: none"> <li>n8-55 [Motor to Load Inertia Ratio]</li> <li>n8-45 [Speed Feedback Detection Gain]</li> <li>C4-02 [Torque Compensation Delay Time]</li> </ul>
Hunting occurs at start.	Increase the value set in C2-01 [S-Curve Time @ Start of Accel].
Too much current is flowing through the drive.	Set E5-01 correctly as specified by the motor. For special-purpose motors, enter the correct value to E5-xx as specified by the motor test report.

### ◆ There Is Too Much Motor Oscillation and the Rotation Is Irregular

Causes	Possible Solutions
Unsatisfactory balance of motor phases.	<ul style="list-style-type: none"> <li>Make sure that the drive input power voltage supplies stable power.</li> <li>Set L8-05 = 0 [Input Phase Loss Protect Select = Disabled].</li> </ul>
The motor is hunting.	Set n1-01 = 1 [Hunting Prevention Selection = Enabled].

### ◆ There Is Audible Noise from the Drive or Motor Cables when You Energize the Drive

Causes	Possible Solutions
The relay switching in the drive is making too much noise.	<ul style="list-style-type: none"> <li>Use C6-02 [Carrier Frequency Selection] to decrease the carrier frequency.</li> <li>Connect a noise filter to the input side of the drive power supply.</li> <li>Connect a noise filter to the output side of the drive.</li> <li>Isolate the control circuit wiring from the main circuit wiring.</li> <li>Use a metal cable gland to wire the drive.</li> <li>Shield the periphery of the drive with metal.</li> <li>Make sure that the drive and motor are grounded correctly.</li> <li>Make sure that ground faults have not occurred in the wiring or motor.</li> </ul>

### ◆ The Ground Fault Circuit Interrupter (GFCI) Trips During Run

Causes	Possible Solutions
There is too much leakage current from the drive.	<ul style="list-style-type: none"> <li>• Increase the GFCI sensitivity or use GFCI with a higher threshold.</li> <li>• Use C6-02 [Carrier Frequency Selection] to decrease the carrier frequency.</li> <li>• Decrease the length of the cable used between the drive and the motor.</li> <li>• Install a noise filter or AC reactor on the output side of the drive. Set C6-02 = 1 [2.0 kHz] when connecting an AC reactor.</li> <li>• Disable the internal EMC filter.</li> </ul>

### ◆ Motor Rotation Causes Unexpected Audible Noise from Connected Machinery

Causes	Possible Solutions
The carrier frequency and the resonant frequency of the connected machinery are the same.	<ul style="list-style-type: none"> <li>• Adjust C6-02 to C6-05 [Carrier Frequency].</li> <li>• Set C6-02 = 1 to 6 [Carrier Frequency Selection = Frequency other than Swing PWM].</li> </ul> <p><b>Note:</b> If C6-02 = 7 to A [Carrier Frequency Selection = Swing PWM], the drive will not know if the noise comes from the drive or the machine.</p>
The drive output frequency and the resonant frequency of the connected machinery are the same.	<ul style="list-style-type: none"> <li>• Adjust d3-01 to d3-04 [Jump Frequency].</li> <li>• Put the motor on a rubber pad to decrease vibration.</li> </ul>

### ◆ Motor Rotation Causes Oscillation or Hunting

Causes	Possible Solutions
The frequency reference is assigned to an external source, and there is electrical interference in the signal.	<p>Make sure that electrical interference does not have an effect on the signal lines.</p> <ul style="list-style-type: none"> <li>• Isolate control circuit wiring from main circuit wiring.</li> <li>• Use twisted-pair cables or shielded wiring for the control circuit.</li> <li>• Increase the value of H3-13 [Analog Input Filter Time Constant].</li> </ul>
The cable between the drive and motor is too long.	<ul style="list-style-type: none"> <li>• Do Auto-Tuning.</li> <li>• Make the wiring as short as possible.</li> </ul>
The PID parameters are not sufficiently adjusted.	Adjust b5-xx [PID control].

### ◆ PID Output Fault

Causes	Possible Solutions
There is no PID feedback input.	<ul style="list-style-type: none"> <li>• Examine the MFAI terminal settings.</li> <li>• See if H3-02, H3-10, H3-06 = B [MFAI Function Select = PID Feedback] is set.</li> <li>• Make sure that the MFAI terminal settings agree with the signal inputs.</li> <li>• Examine the connection of the feedback signal.</li> <li>• Make sure that b5-xx [PID Control] is set correctly.</li> </ul> <p><b>Note:</b> If there is no PID feedback input to the terminal, the detected value is 0, which causes a PID fault and also causes the drive to operate at maximum frequency.</p>
The detection level and the target value do not agree.	<p>Use H3-03, H3-11, H3-07 [Terminal A1, A2, A3 Gain Setting] to adjust PID target and feedback signal scaling.</p> <p><b>Note:</b> PID control keeps the difference between the target value and detection value at 0. Set the input level for the values relative to each other.</p>
Reverse drive output frequency and speed detection. When output frequency increases, the sensor detects a speed decrease.	Set b5-09 = 1 [PID Output Level Selection = Reverse output (reverse acting)].

### ◆ The Starting Torque Is Not Sufficient

Causes	Possible Solutions
Auto-Tuning has not been done in vector control method.	Do Auto-Tuning.
The control method was changed after doing Auto-Tuning.	Do Auto-Tuning again.
Stationary Auto-Tuning for Line-to-Line Resistance was done.	Do Rotational Auto-Tuning.

◆ The Motor Rotates after the Drive Output Is Shut Off

Causes	Possible Solutions
DC Injection Braking is too low and the drive cannot decelerate correctly.	<ul style="list-style-type: none"> <li>• Increase the value set in <i>b2-02 [DC Injection Braking Current]</i>.</li> <li>• Increase the value set in <i>b2-04 [DC Inject Braking Time at Stop]</i>.</li> </ul>
The stopping method makes the drive coast to stop.	Set <i>b1-03 = 0</i> or <i>2 [Stopping Method Selection = Ramp to Stop, DC Injection Braking to Stop]</i> .

◆ The Output Frequency Is Lower Than the Frequency Reference

Causes	Possible Solutions
The frequency reference is in the Jump frequency range.	Adjust <i>d3-01</i> to <i>d3-03 [Jump Frequency 1 to 3]</i> and <i>d3-04 [Jump Frequency Width]</i> . <b>Note:</b> Enabling the Jump frequency prevents the drive from outputting the frequencies specified in the Jump range.
The upper limit for the frequency reference has been exceeded.	Set <i>E1-04 [Maximum Output Frequency]</i> , <i>d2-01 [Frequency Reference Upper Limit]</i> , and <i>Y1-40 [Maximum Speed]</i> to the best values for the application. <b>Note:</b> This calculation supplies the upper value for the output frequency: The smaller of $E1-04 \times d2-01 / 100$ or <i>Y1-40</i> .
A large load triggered Stall Prevention function during acceleration.	<ul style="list-style-type: none"> <li>• Decrease the load.</li> <li>• Adjust <i>L3-02 [Stall Prevent Level during Accel]</i>.</li> </ul>
<i>L3-01 = 3 [Stall Prevention during Accel = Current Limit Method]</i> has been set.	<ol style="list-style-type: none"> <li>1. Make sure that the V/f pattern and motor parameter settings are appropriate, and set them correctly.</li> <li>2. If this does not solve the problem, and it is not necessary to limit the current level of stall during acceleration, adjust <i>L3-02</i>.</li> <li>3. If this does not solve the problem, set <i>L3-01 = 1 [Enabled]</i>.</li> </ol>
The motor is rotating at this speed: $b2-01 [DC Injection/Zero SpeedThreshold] \leq \text{Motor Speed} < E1-09 [Minimum Output Frequency]$	Set <i>E1-09 &lt; b2-01</i> .

◆ The Motor Is Making an Audible Noise

Causes	Possible Solutions
100% of the rated output current of the drive was exceeded while operating at low speeds.	<ul style="list-style-type: none"> <li>• If the sound is coming from the motor, set <i>L8-38 = 0 [Carrier Frequency Reduction = Disabled]</i>.</li> <li>• If <i>oL2 [Drive Overloaded]</i> occurs frequently after setting <i>L8-38 = 0</i>, replace the drive with a high-capacity drive.</li> </ul>

◆ The Motor Will Not Restart after a Loss of Power

Causes	Possible Solutions
The drive did not receive a Run command after applying power.	<ul style="list-style-type: none"> <li>• Examine the sequence and wiring that enters the Run command.</li> <li>• Set up a relay to make sure that the Run command stays enabled during a loss of power.</li> </ul>
For applications that use 3-wire sequence, the momentary power loss continued for a long time, and the relay that keeps the Run command has been switched off.	Examine the wiring and circuitry for the relay that keeps the Run command enabled during the momentary power loss ride-thru time.

## Parameter List

---

3.1	Section Safety .....	144
3.2	How to Read the Parameter List .....	145
3.3	Parameter Groups .....	146
3.4	A: Initialization Parameters .....	148
3.5	b: Application .....	152
3.6	C: Tuning .....	162
3.7	d: Reference Settings .....	166
3.8	E: Motor Parameters .....	169
3.9	F: Options .....	173
3.10	H: Terminal Functions .....	185
3.11	L: Protection Functions .....	213
3.12	n: Special Adjustment .....	222
3.13	o: Keypad-Related Settings .....	227
3.14	S: Special Applications .....	234
3.15	T: Motor Tuning .....	240
3.16	U: Monitors .....	243
3.17	Y: Application Features .....	258
3.18	Parameters that Change from the Default Settings with A1-02 [Control Method Selection] .....	272
3.19	Parameters Changed by E1-03 [V/f Pattern Selection] .....	275
3.20	Defaults by o2-04 [Drive Model (kVA) Selection] .....	278

## 3.1 Section Safety

 **DANGER**

**Do not ignore the safety messages in this manual.**

If you ignore the safety messages in this manual, it will cause serious injury or death. The manufacturer is not responsible for injuries or damage to equipment.

## 3.2 How to Read the Parameter List

### ◆ Icons and Terms that Identify Parameters and Control Methods

Icon	Description
	The parameter is available when operating the drive with V/f Control.
	The parameter is available when operating the drive with Open Loop Vector Control for PM.
	The parameter is available when operating the drive with EZ Open Loop Vector Control.
Hex.	Hexadecimal numbers that represent MEMOBUS addresses to change parameters over network communication.
RUN	You can change the parameter setting during Run.
Expert	The parameter is available in Expert Mode only. <i>*1</i>

\*1 Set  $A1-01 = 3$  [*Access Level Selection = Expert Level*] to show and set Expert Mode parameters on the keypad.

**Note:**

Gray icons identify parameters that are not available in the specified control method.

## 3.3 Parameter Groups

Represents the type of product parameters.

Parameters	Name
A1	Initialization
A2	User Parameters
b1	Operation Mode Selection
b2	DC Injection Braking and Short Circuit Braking
b3	Speed Search
b4	Timer Function
b5	PID Control
b6	Dwell Function
b8	Energy Saving
C1	Accel & Decel Time
C2	S-Curve Characteristics
C3	Slip Compensation
C4	Torque Compensation
C5	Auto Speed Regulator (ASR)
C6	Carrier Frequency
d1	Frequency Reference
d2	Reference Limits
d3	Jump Frequency
d4	Frequency Ref Up/Down & Hold
d6	Field Weakening
d7	Offset Frequency
E1	V/f Pattern for Motor 1
E2	Motor Parameters
E3	V/f Pattern for Motor 2
E4	Motor 2 Parameters
E5	PM Motor Settings
E9	Motor Setting
F2	Analog Input Option
F3	Digital Input Option
F4	Analog Output Option
F5	Digital Output Option
F6	Communication Options
F7	Ethernet Options
H1	Digital Inputs
H2	Digital Outputs
H3	Analog Inputs
H4	Analog Outputs
H5	Modbus Communication
H6	Pulse Train Input

Parameters	Name
H7	Virtual Inputs / Outputs
L1	Motor Protection
L2	Power Loss Ride Through
L3	Stall Prevention
L4	Speed Detection
L5	Fault Restart
L6	Torque Detection
L7	Torque Limit
L8	Drive Protection
L9	Drive Protection 2
n1	Hunting Prevention
n3	High Slip/Overexcite Braking
n7	EZ Drive
n8	PM Motor Control Tuning
o1	Keypad Display
o2	Keypad Operation
o3	Copy Keypad Function
o4	Maintenance Monitors
o5	Log Function
S1	Dynamic Noise Control
S3	PI2 Control
S6	Protection
T0	Tuning Mode Selection
T1	InductionMotor Auto-Tuning
T2	PM Motor Auto-Tuning
T4	EZ Tuning
U1	Operation Status Monitors
U2	Fault Trace
U3	Fault History
U4	Maintenance Monitors
U5	PID Monitors
U6	Operation Status Monitors
UA	Multiplex
Y1	Application Basics
Y2	PID Sleep and Protection
Y3	Contactormultiplex
Y4	Application Advanced
Y8	De-Scale/De-Rag
YA	Preset Setpoint

Parameters	Name
YC	Foldback Features

Parameters	Name
YF	PI Auxiliary Control

## 3.4 A: Initialization Parameters

### ◆ A1: Initialization

No. (Hex.)	Name	Description	Default (Range)
A1-00 (0100) RUN	Language Selection	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the language for the LCD keypad.</p> <p><b>Note:</b> When you use <i>A1-03 [Initialize Parameters]</i> to initialize the drive, the drive will not reset this parameter.</p> <p>0 : English 1 : Japanese 2 : German 3 : French 4 : Italian 5 : Spanish 6 : Portuguese 7 : Chinese 8 : Czech 9 : Russian 10 : Turkish 11 : Polish 12 : Greek</p>	0 (0 - 12)
A1-01 (0101) RUN	Access Level Selection	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets user access to parameters. The access level controls which parameters the keypad will display and which parameters the user can set.</p> <p>0 : Operation Only 1 : User Parameters 2 : Advanced Level 3 : Expert Level 4 : Lock Parameters</p>	2 (0 - 4)
A1-02 (0102)	Control Method Selection	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the control method for the drive application and the motor.</p> <p>0 : V/f Control 5 : PM Open Loop Vector 8 : EZ Vector Control</p>	0 (0 - 8)
A1-03 (0103)	Initialize Parameters	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets parameters to default values.</p> <p>0 : No Initialization 1110 : User Initialization 2220 : 2-Wire Initialization 3330 : 3-Wire Initialization 8008 : Pump 8009 : Pump w/ PID 8010 : Fan 8011 : Fan w/ PID</p>	0 (0 - 8011)
A1-04 (0104)	Password	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Entry point for the password set in <i>A1-05 [Password Setting]</i>. The user can view the settings of parameters that are locked without entering the password. Enter the correct password in this parameter to change parameter settings.</p>	0000 (0000 - 9999)
A1-05 (0105)	Password Setting	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Set the password to lock parameters and prevent changes to parameter settings. Enter the correct password in <i>A1-04 [Password]</i> to unlock parameters and accept changes.</p>	0000 (0000 - 9999)
A1-06 (0127)	Application Preset	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the drive to operate in selected application conditions.</p> <p><b>Note:</b> You cannot set this parameter. This parameter functions as a monitor only.</p> <p>0 : No Preset Selected 8 : Pump 9 : Pump w/ PID 10 : Fan 11 : Fan w/ PID</p>	0 (0, 8 - 11)

No. (Hex.)	Name	Description	Default (Range)
A1-11 (111D) Expert	Firmware Update Lock	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Protects the drive firmware. When you enable the protection, you cannot update the drive firmware. 0 : Disabled 1 : Enabled	0 (0, 1)
A1-12 (1564)	Bluetooth ID	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the password necessary to use Bluetooth to control the drive with a smartphone or tablet.	- (0000 - 9999)

## ◆ A2: User Parameters

No. (Hex.)	Name	Description	Default (Range)
A2-01 (0106)	User Parameter 1	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the parameter number to be shown for number 1 of the [User Custom Parameters] under the main menu. You can select a maximum of 32 parameters for the drive and set them to parameters A2-01 to A2-32.	A1-02 (Determined by A1-01, A1-02)
A2-02 (0107)	User Parameter 2	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the parameter number to be shown for number 2 of the [User Custom Parameters] under the main menu. You can select a maximum of 32 parameters for the drive and set them to parameters A2-01 to A2-32.	b1-01 (Determined by A1-01, A1-02)
A2-03 (0108)	User Parameter 3	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the parameter number to be shown for number 3 of the [User Custom Parameters] under the main menu. You can select a maximum of 32 parameters for the drive and set them to parameters A2-01 to A2-32.	b1-02 (Determined by A1-01, A1-02)
A2-04 (0109)	User Parameter 4	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the parameter number to be shown for number 4 of the [User Custom Parameters] under the main menu. You can select a maximum of 32 parameters for the drive and set them to parameters A2-01 to A2-32.	b1-03 (Determined by A1-01, A1-02)
A2-05 (010A)	User Parameter 5	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the parameter number to be shown for number 5 of the [User Custom Parameters] under the main menu. You can select a maximum of 32 parameters for the drive and set them to parameters A2-01 to A2-32.	C1-01 (Determined by A1-01, A1-02)
A2-06 (010B)	User Parameter 6	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the parameter number to be shown for number 6 of the [User Custom Parameters] under the main menu. You can select a maximum of 32 parameters for the drive and set them to parameters A2-01 to A2-32.	C1-02 (Determined by A1-01, A1-02)
A2-07 (010C)	User Parameter 7	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the parameter number to be shown for number 7 of the [User Custom Parameters] under the main menu. You can select a maximum of 32 parameters for the drive and set them to parameters A2-01 to A2-32.	C6-02 (Determined by A1-01, A1-02)
A2-08 (010D)	User Parameter 8	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the parameter number to be shown for number 8 of the [User Custom Parameters] under the main menu. You can select a maximum of 32 parameters for the drive and set them to parameters A2-01 to A2-32.	d1-01 (Determined by A1-01, A1-02)
A2-09 (010E)	User Parameter 9	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the parameter number to be shown for number 9 of the [User Custom Parameters] under the main menu. You can select a maximum of 32 parameters for the drive and set them to parameters A2-01 to A2-32.	d1-02 (Determined by A1-01, A1-02)
A2-10 (010F)	User Parameter 10	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the parameter number to be shown for number 10 of the [User Custom Parameters] under the main menu. You can select a maximum of 32 parameters for the drive and set them to parameters A2-01 to A2-32.	d1-03 (Determined by A1-01, A1-02)
A2-11 (0110)	User Parameter 11	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the parameter number to be shown for number 11 of the [User Custom Parameters] under the main menu. You can select a maximum of 32 parameters for the drive and set them to parameters A2-01 to A2-32.	d1-04 (Determined by A1-01, A1-02)
A2-12 (0111)	User Parameter 12	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the parameter number to be shown for number 12 of the [User Custom Parameters] under the main menu. You can select a maximum of 32 parameters for the drive and set them to parameters A2-01 to A2-32.	d1-17 (Determined by A1-01, A1-02)
A2-13 (0112)	User Parameter 13	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the parameter number to be shown for number 13 of the [User Custom Parameters] under the main menu. You can select a maximum of 32 parameters for the drive and set them to parameters A2-01 to A2-32.	E1-01 (Determined by A1-01, A1-02)

### 3.4 A: Initialization Parameters

No. (Hex.)	Name	Description	Default (Range)
A2-14 (0113)	User Parameter 14	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the parameter number to be shown for number 14 of the [User Custom Parameters] under the main menu. You can select a maximum of 32 parameters for the drive and set them to parameters A2-01 to A2-32.	E1-03 (Determined by A1-01, A1-02)
A2-15 (0114)	User Parameter 15	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the parameter number to be shown for number 15 of the [User Custom Parameters] under the main menu. You can select a maximum of 32 parameters for the drive and set them to parameters A2-01 to A2-32.	E1-04 (Determined by A1-01, A1-02)
A2-16 (0115)	User Parameter 16	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the parameter number to be shown for number 16 of the [User Custom Parameters] under the main menu. You can select a maximum of 32 parameters for the drive and set them to parameters A2-01 to A2-32.	E1-05 (Determined by A1-01, A1-02)
A2-17 (0116)	User Parameter 17	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the parameter number to be shown for number 17 of the [User Custom Parameters] under the main menu. You can select a maximum of 32 parameters for the drive and set them to parameters A2-01 to A2-32. You can set A2-17 to A2-32 when A2-33 = 0 [User Parameter Auto Selection = Disabled: Manual Entry Required].	E1-06 (Determined by A1-01, A1-02)
A2-18 (0117)	User Parameter 18	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the parameter number to be shown for number 18 of the [User Custom Parameters] under the main menu. You can select a maximum of 32 parameters for the drive and set them to parameters A2-01 to A2-32. You can set A2-17 to A2-32 when A2-33 = 0 [User Parameter Auto Selection = Disabled: Manual Entry Required].	E1-09 (Determined by A1-01, A1-02)
A2-19 (0118)	User Parameter 19	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the parameter number to be shown for number 19 of the [User Custom Parameters] under the main menu. You can select a maximum of 32 parameters for the drive and set them to parameters A2-01 to A2-32. You can set A2-17 to A2-32 when A2-33 = 0 [User Parameter Auto Selection = Disabled: Manual Entry Required].	E1-13 (Determined by A1-01, A1-02)
A2-20 (0119)	User Parameter 20	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the parameter number to be shown for number 20 of the [User Custom Parameters] under the main menu. You can select a maximum of 32 parameters for the drive and set them to parameters A2-01 to A2-32. You can set A2-17 to A2-32 when A2-33 = 0 [User Parameter Auto Selection = Disabled: Manual Entry Required].	E2-01 (Determined by A1-01, A1-02)
A2-21 (011A)	User Parameter 21	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the parameter number to be shown for number 21 of the [User Custom Parameters] under the main menu. You can select a maximum of 32 parameters for the drive and set them to parameters A2-01 to A2-32. You can set A2-17 to A2-32 when A2-33 = 0 [User Parameter Auto Selection = Disabled: Manual Entry Required].	E2-04 (Determined by A1-01, A1-02)
A2-22 (011B)	User Parameter 22	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the parameter number to be shown for number 22 of the [User Custom Parameters] under the main menu. You can select a maximum of 32 parameters for the drive and set them to parameters A2-01 to A2-32. You can set A2-17 to A2-32 when A2-33 = 0 [User Parameter Auto Selection = Disabled: Manual Entry Required].	E2-11 (Determined by A1-01, A1-02)
A2-23 (011C)	User Parameter 23	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the parameter number to be shown for number 23 of the [User Custom Parameters] under the main menu. You can select a maximum of 32 parameters for the drive and set them to parameters A2-01 to A2-32. You can set A2-17 to A2-32 when A2-33 = 0 [User Parameter Auto Selection = Disabled: Manual Entry Required].	H4-02 (Determined by A1-01, A1-02)
A2-24 (011D)	User Parameter 24	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the parameter number to be shown for number 24 of the [User Custom Parameters] under the main menu. You can select a maximum of 32 parameters for the drive and set them to parameters A2-01 to A2-32. You can set A2-17 to A2-32 when A2-33 = 0 [User Parameter Auto Selection = Disabled: Manual Entry Required].	L1-01 (Determined by A1-01, A1-02)
A2-25 (011E)	User Parameter 25	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the parameter number to be shown for number 25 of the [User Custom Parameters] under the main menu. You can select a maximum of 32 parameters for the drive and set them to parameters A2-01 to A2-32. You can set A2-17 to A2-32 when A2-33 = 0 [User Parameter Auto Selection = Disabled: Manual Entry Required].	L3-04 (Determined by A1-01, A1-02)
A2-26 (011F)	User Parameter 26	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the parameter number to be shown for number 26 of the [User Custom Parameters] under the main menu. You can select a maximum of 32 parameters for the drive and set them to parameters A2-01 to A2-32. You can set A2-17 to A2-32 when A2-33 = 0 [User Parameter Auto Selection = Disabled: Manual Entry Required].	- (Determined by A1-01, A1-02)
A2-27 (0120)	User Parameter 27	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the parameter number to be shown for number 27 of the [User Custom Parameters] under the main menu. You can select a maximum of 32 parameters for the drive and set them to parameters A2-01 to A2-32. You can set A2-17 to A2-32 when A2-33 = 0 [User Parameter Auto Selection = Disabled: Manual Entry Required].	- (Determined by A1-01, A1-02)
A2-28 (0121)	User Parameter 28	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the parameter number to be shown for number 28 of the [User Custom Parameters] under the main menu. You can select a maximum of 32 parameters for the drive and set them to parameters A2-01 to A2-32. You can set A2-17 to A2-32 when A2-33 = 0 [User Parameter Auto Selection = Disabled: Manual Entry Required].	- (Determined by A1-01, A1-02)

No. (Hex.)	Name	Description	Default (Range)
A2-29 (0122)	User Parameter 29	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the parameter number to be shown for number 29 of the [User Custom Parameters] under the main menu. You can select a maximum of 32 parameters for the drive and set them to parameters A2-01 to A2-32. You can set A2-17 to A2-32 when A2-33 = 0 [User Parameter Auto Selection = Disabled: Manual Entry Required].	- (Determined by A1-01, A1-02)
A2-30 (0123)	User Parameter 30	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the parameter number to be shown for number 30 of the [User Custom Parameters] under the main menu. You can select a maximum of 32 parameters for the drive and set them to parameters A2-01 to A2-32. You can set A2-17 to A2-32 when A2-33 = 0 [User Parameter Auto Selection = Disabled: Manual Entry Required].	- (Determined by A1-01, A1-02)
A2-31 (0124)	User Parameter 31	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the parameter number to be shown for number 31 of the [User Custom Parameters] under the main menu. You can select a maximum of 32 parameters for the drive and set them to parameters A2-01 to A2-32. You can set A2-17 to A2-32 when A2-33 = 0 [User Parameter Auto Selection = Disabled: Manual Entry Required].	- (Determined by A1-01, A1-02)
A2-32 (0125)	User Parameter 32	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the parameter number to be shown for number 32 of the [User Custom Parameters] under the main menu. You can select a maximum of 32 parameters for the drive and set them to parameters A2-01 to A2-32. You can set A2-17 to A2-32 when A2-33 = 0 [User Parameter Auto Selection = Disabled: Manual Entry Required].	- (Determined by A1-01, A1-02)
A2-33 (0126)	User Parameter Auto Selection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the automatic save feature for changes to parameters A2-17 to A2-32 [User Parameters 17 to 32]. 0 : Disabled: Manual Entry Required 1 : Enabled: Auto Save Recent Parmns	0 (0, 1)

## 3.5 b: Application

### ◆ b1: Operation Mode Selection

No. (Hex.)	Name	Description	Default (Range)
b1-01 (0180)	Frequency Reference Selection 1	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the input method for the frequency reference.</p> <p>0 : Keypad 1 : Analog Input 2 : Memobus/Modbus Communications 3 : Option PCB 4 : Pulse Train Input</p>	1 (0 - 4)
b1-02 (0181)	Run Command Selection 1	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the input method for the Run command.</p> <p>0 : Keypad 1 : Digital Input 2 : Memobus/Modbus Communications 3 : Option PCB</p>	1 (0 - 3)
b1-03 (0182)	Stopping Method Selection	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the method to stop the motor after removing a Run command or entering a Stop command.</p> <p><b>Note:</b> When <i>A1-02 = 5 or 8</i> [Control Method Selection = <i>OLV/PM</i> or <i>EZOLV</i>], the setting range is 0, 1, 3.</p> <p>0 : Ramp to Stop 1 : Coast to Stop 2 : DC Injection Braking to Stop 3 : Coast to Stop with Timer</p>	1 (0 - 3)
b1-04 (0183)	Reverse Operation Selection	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the reverse operation function. Disable reverse operation in fan or pump applications where reverse rotation is dangerous.</p> <p>0 : Reverse Enabled 1 : Reverse Disabled</p>	1 (0, 1)
b1-07 (0186)	LOCAL/REMOTE Run Selection	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets drive response to an existing Run command when the drive receives a second Run command from a different location.</p> <p>0 : Disregard Existing RUN Command 1 : Accept Existing RUN Command</p>	0 (0, 1)
b1-08 (0187)	Run Command Select in PRG Mode	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the conditions for the drive to accept a Run command entered from an external source when using the keypad to set parameters.</p> <p>0 : Disregard RUN while Programming 1 : Accept RUN while Programming 2 : Allow Programming Only at Stop</p>	0 (0 - 2)
b1-11 (01DF)	Run Delay @ Stop	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the amount of time that the drive will not accept the Run command again after the Run command is removed.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>This parameter will operate when the drive goes to sleep then wakes up.</li> <li>The time set in this parameter does not apply for faults or Auto-Restarts.</li> <li>When there is an active Run command while the time set in <i>b1-11</i> is active, the keypad will show a [Start Delay] message as specified by the <i>o1-82</i> [Message Screen Display] display format.</li> </ul>	0.0 s (0.0 - 6000.0 s)
b1-12 (01E0)	Run Delay Memory Selection	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets how the drive saves Run Delay Timer to the EEPROM during power loss.</p> <p>0 : Disabled 1 : Only at Stop 2 : Running &amp; Stop</p>	2 (0 - 2)

No. (Hex.)	Name	Description	Default (Range)
b1-14 (01C3)	Phase Order Selection	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the phase order for output terminals U/T1, V/T2, and W/T3. This parameter can align the Forward Run command from the drive and the forward direction of the motor without changing wiring.</p> <p><b>Note:</b> When you use A1-03 [Initialize Parameters] to initialize the drive, the drive will not reset this parameter.</p> <p>0 : Standard 1 : Switch Phase Order</p>	0 (0, 1)
b1-15 (01C4)	Frequency Reference Selection 2	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the input method for the frequency reference.</p> <p>0 : Keypad 1 : Analog Input 2 : Memobus/Modbus Communications 3 : Option PCB 4 : Pulse Train Input</p>	0 (0 - 4)
b1-16 (01C5)	Run Command Selection 2	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the input method for Run Command 2 when the user switches the control circuit terminals ON/OFF to change the Run command source.</p> <p>0 : Keypad 1 : Digital Input 2 : Memobus/Modbus Communications 3 : Option PCB</p>	0 (0 - 3)
b1-17 (01C6)	Run Command at Power Up	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets drive response when the CPU changes from de-energized to energized and there is an active Run command. Set this parameter in applications where energizing or de-energizing the drive enables the Run command. When the CPU stays energized during loss of power, L2-01 [Power Loss Ride Through Select] sets operation.</p> <p>0 : Disregard Existing RUN Command 1 : Accept Existing RUN Command</p>	1 (0, 1)
b1-40 (3BCF)	Deceleration Abort Time	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the maximum time until the drive shuts off the output to decelerate to stop.</p> <p><b>Note:</b> Set this parameter to 0.0 s to disable this function.</p>	0.0 s (0.0 - 6000.0 s)

## ◆ b2: DC Injection Braking and Short Circuit Braking

No. (Hex.)	Name	Description	Default (Range)
b2-01 (0189)	DC Injection/Zero SpeedThreshold	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the frequency to start DC Injection Braking or Short Circuit Braking near the end of a stop ramp.</p> <p><b>Note:</b> This parameter is available when b1-03 = 0 [Stopping Method Selection = Ramp to Stop].</p>	Determined by A1-02 (0.0 - 10.0 Hz)
b2-02 (018A)	DC Injection Braking Current	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the DC Injection Braking current as a percentage of the drive rated current.</p>	50% (0 - 100%)
b2-03 (018B)	DC Inject Braking Time at Start	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the DC Injection Braking Time at start.</p>	0.00 s (0.00 - 10.00 s)
b2-04 (018C)	DC Inject Braking Time at Stop	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the DC Injection Braking Time at stop.</p>	Determined by A1-02 (0.00 - 10.00 s)
b2-09 (01E1)	Pre-heat Current 2	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the percentage of motor rated output current used with MFDI H1-xx = 50 [MFDI Function Selection = Motor Pre-heat 2] for the motor pre-heat function.</p>	5% (0 - 100%)
b2-12 (01BA)	Short Circuit Brake Time @ Start	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the Short Circuit Braking time at start.</p>	0.00 s (0.00 - 25.50 s)
b2-13 (01BB)	Short Circuit Brake Time @ Stop	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the Short Circuit Braking time at stop.</p>	Determined by A1-02 (0.00 - 25.50 s)
b2-18 (0177)	Short Circuit Braking Current	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the Short Circuit Braking Current as a percentage of the motor rated current.</p> <p><b>Note:</b> Parameter A1-02 [Control Method Selection] selects which parameter is the motor rated current.</p> <ul style="list-style-type: none"> <li>A1-02 = 5 [OLV/PM]: E5-03 [PM Motor Rated Current (FLA)]</li> <li>A1-02 = 8 [EZOLV]: E9-06 [Motor Rated Current (FLA)]</li> </ul>	100.0% (0.0 - 200.0%)

### ◆ b3: Speed Search

No. (Hex.)	Name	Description	Default (Range)
b3-01 (0191)	Speed Search at Start Selection	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the drive to do a Speed Search each time the drive receives a Run command.</p> <p>0 : Disabled 1 : Enabled</p>	0 (0, 1)
b3-02 (0192)	SpeedSearch Deactivation Current	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the current level that stops Speed Search as a percentage of the drive rated output current. Usually it is not necessary to change this setting.</p>	120% (0 - 200%)
b3-03 (0193)	Speed Search Deceleration Time	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the deceleration time during Speed Search operation. Set the length of time to decelerate from the maximum output frequency to the minimum output frequency.</p> <p><b>Note:</b> When <math>A1-02 = 8</math> [Control Method Selection = EZOLV], this parameter takes effect only in Expert Mode.</p>	2.0 s (0.1 - 10.0 s)
b3-04 (0194)	V/f Gain during Speed Search	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the ratio used to reduce the V/f during searches to reduce the output current during speed searches.</p>	Determined by o2-04 (10 - 100)
b3-05 (0195)	Speed Search Delay Time	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the Speed Search delay time to activate a magnetic contactor installed between the drive and motor.</p>	0.2 s (0.0 - 100.0 s)
b3-06 (0196) Expert	Speed Estimation Current Level 1	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the level of current that flows to the motor during Speed Estimation Speed Search as a coefficient of <math>E2-03</math> [Motor No-Load Current] or <math>E4-03</math> [Motor 2 Rated No-Load Current]. Usually it is not necessary to change this setting.</p>	Determined by o2-04 (0.0 - 2.0)
b3-07 (0197) Expert	Speed Estimation Current Level 2	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the level of current that flows to the motor during Speed Estimation Speed Search as a coefficient of <math>E2-03</math> [Motor No-Load Current] or <math>E4-03</math> [Motor 2 Rated No-Load Current]. Usually it is not necessary to change this setting.</p>	1.0 (0.0 - 3.0)
b3-08 (0198)	Speed Estimation ACR P Gain	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the proportional gain for the automatic current regulator during Speed Estimation Speed Search. Also adjusts speed search responsiveness. Usually it is not necessary to change this setting.</p>	Determined by A1-02 and o2-04 (0.00 - 6.00)
b3-09 (0199)	Speed Estimation ACR I Time	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the integral time for the automatic current regulator during Speed Estimation Speed Search. Also adjusts speed search responsiveness. Usually it is not necessary to change this setting.</p>	Determined by A1-02 when $A1-02 \neq 5$ 20.0 when $A1-02 = 5$ (0.0 - 1000.0 ms)
b3-10 (019A) Expert	Speed Estimation Detection Gain	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the gain to correct estimated frequencies from Speed Estimation Speed Search.</p> <p><b>Note:</b> When <math>A1-02 = 8</math> [Control Method Selection = EZOLV], the default setting is 1.00 and the setting range is 1.00 - 1.10.</p>	1.05 (1.00 - 1.20)
b3-11 (019B) Expert	Spd Est Method Switch-over Level	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Uses the quantity of voltage in the motor to automatically switch the search method within the type of speed measurement.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>• 208 V class at 100% = 200 V</li> <li>• 480 V class at 100% = 400 V</li> </ul>	5.0% (0.5 - 100.0%)
b3-12 (019C) Expert	Speed Search Current Deadband	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the minimum current detection level during Speed Search. If the drive does not do Speed Estimation, increase this setting in 0.1-unit increments.</p>	determined by o2-04 (2.0 - 10.0)

No. (Hex.)	Name	Description	Default (Range)
b3-14 (019E)	Bi-directional Speed Search	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the direction of Speed Search to the direction of the frequency reference or in the motor rotation direction as detected by the drive.</p> <p>0 : Disabled 1 : Enabled</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>The initial value of <i>b3-14</i> is different for different <i>A1-02</i> [Control Method Selection] settings when you set these parameters: <ul style="list-style-type: none"> <li>-<i>A1-02</i> = 0, 8 [Control Method Selection = V/f, EZOLV]</li> <li>-<i>E9-01</i> = 0 [Motor Type Selection = Induction (IM)]</li> <li>-<i>b3-24</i> = 1 [Speed Search Method Selection = Speed Estimation Speed Search]</li> </ul> </li> <li>The initial value of <i>b3-14</i> is 0 when you set these parameters: <ul style="list-style-type: none"> <li>-<i>A1-02</i> = 0, 8</li> <li>-<i>E9-01</i> = 0</li> <li>-<i>b3-24</i> = 2 [Current Detection 2]</li> </ul> </li> <li>The initial value of <i>b3-14</i> is different for different <i>A1-02</i> [Control Method Selection] settings when you set these parameters: <ul style="list-style-type: none"> <li>-<i>A1-02</i> = 8 [EZOLV]</li> <li>-<i>E9-01</i> = 1, 2 [Permanent Magnet (PM), Synchronous Reluctance (SynRM)]</li> </ul> </li> <li>When you change <i>A1-02</i>, <i>b3-24</i>, and <i>E9-01</i>, also set <i>b3-14</i>.</li> </ul>	Determined by <i>A1-02</i> , <i>b3-24</i> , and <i>E9-01</i> (0, 1)
b3-17 (01F0) Expert	Speed Est Retry Current Level	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the current level for the search retry function in Speed Estimation Speed Search as a percentage where drive rated current is a setting value of 100%.</p>	110% (0 - 200%)
b3-18 (01F1) Expert	Speed Est Retry Detection Time	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the length of time that the drive will wait to retry Speed Estimation Speed Search when too much current flow stopped the Speed Search.</p>	0.10 s (0.00 - 1.00 s)
b3-19 (01F2)	Speed Search Restart Attempts	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the number of times to restart Speed Search if Speed Search does not complete.</p>	3 times (0 - 10 times)
b3-24 (01C0)	Speed Search Method Selection	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the Speed Search method when you start the motor or when you return power after a momentary power loss.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>The default setting is different for different control methods. <ul style="list-style-type: none"> <li>-<i>A1-02</i> = 0 [Control Method Selection = V/f]: 2</li> <li>-<i>A1-02</i> = 8 [EZOLV] and <i>E9-01</i> = 0 [Motor Type Selection = Induction (IM)]: 2</li> <li>-<i>A1-02</i> = 8 and <i>E9-01</i> ≠ 0: 1</li> </ul> </li> <li>When <i>A1-02</i> = 8 and <i>E9-01</i> = 1, 2, set <i>b3-24</i> = 1. If <i>b3-24</i> = 2, the drive will detect <i>oPE08</i> [Parameter Selection Error].</li> </ul> <p>1 : Speed Estimation 2 : Current Detection 2</p>	Determined by <i>A1-02</i> (1, 2)
b3-25 (01C8) Expert	Speed Search Wait Time	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the length of time the drive will wait to start the Speed Search Retry function.</p>	0.5 s (0.0 - 30.0 s)
b3-26 (01C7) Expert	Direction Determination Level	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the level to find the motor rotation direction. Increase the value if the drive cannot find the direction.</p>	1000 (40 to 60000)
b3-27 (01C9) Expert	Speed Search RUN/BB Priority	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the conditions necessary to start Speed Search.</p> <p>0 : SS Only if RUN Applied Before BB 1 : SS Regardless of RUN/BB Sequence</p>	0 (0, 1)
b3-29 (077C) Expert	Speed Search Back-EMF Threshold	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the induced voltage for motors that use Speed Search. The drive will start Speed Search when the motor induced voltage level is the same as the setting value. Usually it is not necessary to change this setting.</p>	10% (0 - 10%)
b3-31 (0BC0) Expert	Spd Search Current Reference Lvl	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the current level that decreases the output current during Current Detection Speed Search.</p>	1.50 (1.50 - 3.50)
b3-32 (0BC1) Expert	Spd Search Current Complete Lvl	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the current level that completes Speed Search.</p>	1.20 (0.00 - 1.49)
b3-39 (1B8F) Expert	Regen Judgment Lv of Spd Search	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the level to determine the regenerative state during speed search. Usually it is not necessary to change this setting.</p>	15% (0 - 50%)

### 3.5 b: Application

No. (Hex.)	Name	Description	Default (Range)
b3-54 (3123)	Search Time	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the length of time that the drive will run Speed Search.	400 ms (10 - 2000 ms)
b3-55 (3124) Expert	Current Increment Time	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the length of time that the drive will increase the current from zero current to the setting value of b3-06 [Speed Estimation Current Level 1].	10 ms (10 - 2000 ms)
b3-56 (3126)	InverseRotationSearch WaitTime	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the wait time until the drive starts inverse rotation search after it completes forward search when you do inverse rotation search during Current Detection Speed Search.	Determined by o2-04 (0.1 - 5.0 s)

### ◆ b4: Timer Function

No. (Hex.)	Name	Description	Default (Range)
b4-01 (01A3)	Timer Function ON-Delay Time	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the ON-delay time for the timer input.	0.0 s (0.0 - 3000.0 s)
b4-02 (01A4)	Timer Function OFF-Delay Time	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the OFF-delay time for the timer input.	0.0 s (0.0 - 3000.0 s)
b4-03 (0B30) Expert	Terminal M1-M2 ON-Delay Time	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the delay time to activate the contact after the function set in H2-01 activates.	0 ms (0 - 65000 ms)
b4-04 (0B31) Expert	Terminal M1-M2 OFF-Delay Time	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the delay time to deactivate the contact after the function set in H2-01 deactivates.	0 ms (0 - 65000 ms)
b4-05 (0B32) Expert	Terminal M3-M4 ON-Delay Time	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the delay time to activate the contact after the function set in H2-02 activates.	0 ms (0 - 65000 ms)
b4-06 (0B33) Expert	Terminal M3-M4 OFF-Delay Time	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the delay time to deactivate the contact after the function set in H2-02 deactivates.	0 ms (0 - 65000 ms)
b4-07 (0B34) Expert	Terminal MD-ME-MF ON-Delay Time	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the delay time to activate the contact after the function set in H2-03 activates.	0 ms (0 - 65000 ms)
b4-08 (0B35) Expert	Terminal MD-ME-MF OFF-Delay Time	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the delay time to deactivate the contact after the function set in H2-03 deactivates.	0 ms (0 - 65000 ms)

### ◆ b5: PID Control

No. (Hex.)	Name	Description	Default (Range)
b5-01 (01A5)	PID Mode Setting	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the type of PID control. 0 : Disabled 1 : Standard	0 (0, 1)
b5-02 (01A6) RUN	Proportional Gain (P)	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the proportional gain (P) that is applied to PID input.	1.00 (0.00 - 25.00)
b5-03 (01A7) RUN	Integral Time (I)	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the integral time (I) that is applied to PID input.	1.0 s (0.0 - 360.0 s)
b5-04 (01A8) RUN	Integral Limit	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the upper limit for integral control (I) as a percentage of the Maximum Output Frequency. <b>Note:</b> Parameter A1-02 [Control Method Selection] selects which parameter is the maximum output frequency. • A1-02 ≠ 8 [EZOLV]: E1-04 [Maximum Output Frequency] • A1-02 = 8: E9-02 [Maximum Speed]	100.0% (0.0 - 100.0%)

No. (Hex.)	Name	Description	Default (Range)
b5-05 (01A9) RUN	Derivative Time (D)	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the derivative time (D) for PID control. This parameter adjusts system responsiveness.	0.00 s (0.00 - 10.00 s)
b5-06 (01AA) RUN	PID Output Limit	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the maximum possible output from the PID controller as a percentage of the Maximum Output Frequency. <b>Note:</b> Parameter <i>A1-02 [Control Method Selection]</i> selects which parameter is the maximum output frequency. • <i>A1-02 ≠ 8 [EZOLV]: E1-04 [Maximum Output Frequency]</i> • <i>A1-02 = 8: E9-02 [Maximum Speed]</i>	100.0% (0.0 - 100.0%)
b5-07 (01AB) RUN	PID Offset Adjustment	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the offset for the PID control output as a percentage of the Maximum Output Frequency. <b>Note:</b> Parameter <i>A1-02 [Control Method Selection]</i> selects which parameter is the maximum output frequency. • <i>A1-02 ≠ 8 [EZOLV]: E1-04 [Maximum Output Frequency]</i> • <i>A1-02 = 8: E9-02 [Maximum Speed]</i>	0.0% (-100.0 - +100.0%)
b5-08 (01AC) RUN Expert	PID Primary Delay Time Constant	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the primary delay time constant for the PID control output. Usually it is not necessary to change this setting.	0.00 s (0.00 - 10.00 s)
b5-09 (01AD)	PID Output Level Selection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the polarity of the PID output. 0 : Normal Output (Direct Acting) 1 : Reverse Output (Reverse Acting)	0 (0, 1)
b5-10 (01AE) RUN	PID Output Gain Setting	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the amount of gain to apply to the PID output.	1.00 (0.00 - 25.00)
b5-11 (01AF)	PID Output Reverse Selection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the function that enables and disables reverse motor rotation for negative PID control output. 0 : Lower Limit is Zero 1 : Negative Output Accepted	0 (0, 1)
b5-17 (01B5) RUN	PID Accel/Decel Time	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Raises or lowers the PID setpoint using the acceleration and deceleration times set to the drive. This is a soft-starter for the PID setpoint.	0.0 s (0.0 - 6000.0 s)
b5-18 (01DC)	PID Setpoint Selection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the function that enables and disables <i>YA-01 to YA-04 [Setpoint 1 to Setpoint 4]</i> . 0 : Disabled 1 : Enabled	0 (0, 1)
b5-28 (01EA)	PID Feedback Square Root Sel	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Enables and disables the square root of the PID Feedback compared to the PID Setpoint to set an appropriate drive output for the correct system regulation. 0 : Disabled 1 : Enabled	0 (0, 1)
b5-29 (01EB)	PID Feedback Square Root Gain	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the multiplier applied to the square root of the feedback.	0.00 (0.00 - 2.00)
b5-30 (01EC)	PID Feedback Offset	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets PID feedback Offset as a percentage of maximum frequency.	0.00% (0.00 - 100.00%)
b5-34 (019F) RUN	PID Output Lower Limit Level	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the output lower limit for the PID control as a percentage of the Maximum Output Frequency. <b>Note:</b> Parameter <i>A1-02 [Control Method Selection]</i> selects which parameter is the maximum output frequency. • <i>A1-02 ≠ 8 [EZOLV]: E1-04 [Maximum Output Frequency]</i> • <i>A1-02 = 8: E9-02 [Maximum Speed]</i>	0.0% (-100.0 - +100.0%)
b5-35 (01A0) RUN	PID Input Limit Level	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the output upper limit for the PID control as a percentage of the Maximum Output Frequency. <b>Note:</b> Parameter <i>A1-02 [Control Method Selection]</i> selects which parameter is the maximum output frequency. • <i>A1-02 ≠ 8 [EZOLV]: E1-04 [Maximum Output Frequency]</i> • <i>A1-02 = 8: E9-02 [Maximum Speed]</i>	1000.0% (0.0 - 1000.0%)

### 3.5 b: Application

No. (Hex.)	Name	Description	Default (Range)
b5-38 (01FE)	PID User Unit Display Scaling	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the value that the drive sets or shows as the PID setpoint when at the maximum output frequency.	100.00 (0.01 - 600.00)
b5-39 (01FF)	PID User Unit Display Digits	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the number of digits to set and show the PID setpoint. 0 : No Decimal Places (XXXXX) 1 : One Decimal Places (XXXX.X) 2 : Two Decimal Places (XXX.XX) 3 : Three Decimal Places (XX.XXX)	2 (0 - 3)
b5-41 (0160)	PID Output 2 Unit	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the display units in U5-14 [PID Out2 Upr4 Digits] and U5-15 [PID Out2 Lwr4 Digits]. 0 : "WC: inches of water column 1 : PSI: pounds per square inch 2 : GPM: gallons/min 3 : °F: Fahrenheit 4 : ft <sup>3</sup> /min: cubic feet/min 5 : m <sup>3</sup> /h: cubic meters/hour 6 : L/h: liters/hour 7 : L/s: liters/sec 8 : bar: bar 9 : Pa: Pascal 10 : °C: Celsius 11 : m: meters 12 : ft: feet 13 : L/min: liters/min 14 : m <sup>3</sup> /min: cubic meters/min 15 : "Hg: Inch Mercury 16 : kPa: kilopascal 48 : %: Percent 49 : Custom(b5-68~70) 50 : None	0 (0 - 50)
b5-42 (0161) RUN	PID Output 2 Calc Mode	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets how to calculate the original PID output. 0 : Linear 1 : Square Root 2 : Quadratic 3 : Cubic <b>Note:</b> Used for U5-14 [PID Out2 Upr4 Digits] and U5-15 [PID Out2 Lwr4 Digits] only.	0 (0 - 3)
b5-43 (0162) RUN	PID Out2 Monitor MAX Upper4 Dig	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the upper 4 digits of the maximum monitor value. Used with b5-44 [PID Out2 Monitor MAX Lower4 Dig] to set maximum monitor value of U5-14 [PID Out2 Upr4 Digits] and U5-15 [PID Out2 Lwr4 Digits] at maximum frequency. <b>Note:</b> Used for U5-14 [PID Out2 Upr4 Digits] and U5-15 [PID Out2 Lwr4 Digits] only.	0 (0 - 9999)
b5-44 (0163) RUN	PID Out2 Monitor MAX Lower4 Dig	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the lower 4 digits of the maximum monitor value. Used with b5-43 [PID Out2 Monitor MAX Upper4 Dig] to set maximum monitor value of U5-14 [PID Out2 Upr4 Digits] and U5-15 [PID Out2 Lwr4 Digits] at maximum frequency. <b>Note:</b> Used for U5-14 [PID Out2 Upr4 Digits] and U5-15 [PID Out2 Lwr4 Digits] only.	0.00 (0.00 - 99.99)
b5-45 (0164) RUN	PID Out2 Monitor MIN for Linear	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the minimum display value to show when at zero speed. Only effective when b5-42 = 0 [PID Output 2 Calc Mode = Linear]. <b>Note:</b> Used for U5-14 [PID Out2 Upr4 Digits] and U5-15 [PID Out2 Lwr4 Digits] only.	0.0 (0.0 - 999.9)

No. (Hex.)	Name	Description	Default (Range)
b5-46 (0165)	PID Unit Display Selection	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the units-text for the PID Display.</p> <p>0 : "WC: inches of water column  1 : PSI: pounds per square inch  2 : GPM: gallons/min  3 : °F: Fahrenheit  4 : ft³/min: cubic feet/min  5 : m³/h: cubic meters/hour  6 : L/h: liters/hour  7 : L/s: liters/sec  8 : bar: bar  9 : Pa: Pascal  10 : °C: Celsius  11 : m: meters  12 : ft: feet  13 : L/min: liters/min  14 : m³/min: cubic meters/min  15 : "Hg: Inch Mercury  16 : kPa: kilopascal  48 : %: Percent  49 : Custom(b5-68~70)  50 : None</p>	48 (0 - 50)
b5-53 (0B8F) RUN	PID Integrator Ramp Limit	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the responsiveness of PID control when the PID feedback changes quickly.</p>	0.0 Hz (0.0 - 10.0 Hz)
b5-68 (3C1F)	System Unit Custom Character 1	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the first character of the custom unit display when <i>b5-46 = 49 [PID Unit Display Selection = Custom (B5-68~70)]</i> or when <i>b5-41 = 49 [PID Output 2 Unit = Custom (B5-68~70)]</i>.</p>	41 (20 - 7A)
b5-69 (3C20)	System Unit Custom Character 2	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the second character of the custom unit display when <i>b5-46 = 49 [PID Unit Display Selection = Custom (B5-68~70)]</i> or when <i>b5-41 = 49 [PID Output 2 Unit = Custom (B5-68~70)]</i>.</p>	41 (20 - 7A)
b5-70 (3C21)	System Unit Custom Character 3	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the third character of the custom unit display when <i>b5-46 = 49 [PID Unit Display Selection = Custom (B5-68~70)]</i> or when <i>b5-41 = 49 [PID Output 2 Unit = Custom (B5-68~70)]</i>.</p>	41 (20 - 7A)
b5-71 (3C22)	Min PID Transducer Scaling	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the minimum PID level corresponding to the lowest analog input signal level.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>To enable this parameter, you must set <i>b5-71 &lt; b5-38 [PID User Unit Display Scaling]</i>. If you set <i>b5-71 &gt; b5-38</i>, the drive will disable all PID analog inputs.</li> <li>Parameters <i>b5-46 [PID Unit Display Selection]</i>, <i>b5-38</i>, and <i>b5-39 [PID User Unit Display Digits]</i> set the unit, scaling, and resolution.</li> </ul>	0.00 (-99.99 - +99.99)
b5-82 (31B0)	Feedback Loss 4 ~ 20mA Detect Sel	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the drive to do a 4 to 20 mA wire-break detection on the analog input set for PID feedback.</p> <p>0 : Disabled  1 : Alarm Only  2 : Fault  3 : Run At b5-83</p>	2 (0 - 3)
b5-83 (31B1) RUN	Feedback Loss GoTo Frequency	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the speed at which the drive will run if the drive detects a 4 to 20 mA wire-break on the PID Feedback and <i>b5-82 = 3 [Feedback Loss 4 ~ 20mA Detect Sel = Run At b5-83]</i>.</p> <p><b>Note:</b></p> <p>When <i>A1-02 = 8 [Control Method Selection = EZ Vector Control]</i>, the range is 0.0 to 120.0 Hz.</p>	0.0 Hz (0.0 - 400.0 Hz)
b5-84 (31B2) RUN	Feedback Loss Loss Of Prime Lvl	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the level at which the drive will detect Loss of Prime in the pump.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>Loss of Prime condition occurs when the measured quantity set by <i>Y1-18 [Prime Loss Detection Method]</i> decreases to this level for the time set in <i>Y1-20 [Loss of Prime Time]</i> and the output frequency is at the <i>Y4-02 [Pre-Charge Frequency]</i> level.</li> <li>The drive will respond to the Loss of Prime condition as specified by <i>Y1-22 [Loss of Prime Selection]</i>.</li> <li>Display unit and scaling are dependent on System Units.</li> </ul>	0.0 A (0.0 - 1000.0 A)

### 3.5 b: Application

No. (Hex.)	Name	Description	Default (Range)
b5-85 (31B3) RUN	Feedback Loss GoTo Freq Timeout	<p><input type="checkbox"/> V/f <input type="checkbox"/> OL/VP/M <input type="checkbox"/> EZOLV</p> <p>When b5-82 = 3 [Feedback Loss 4 ~ 20mA Detect Sel = Run At b5-83] and the Feedback signal is lost, the drive will run at the b5-83 [Feedback Loss Goto Frequency] speed for this length of time, after which the drive will fault on FDBKL [WIRE Break].</p> <p><b>Note:</b> Set this parameter to 0 s to disable the function.</p>	0 s (0 - 6000 s)
b5-86 (31B4) RUN	Feedback Loss Start Delay	<p><input type="checkbox"/> V/f <input type="checkbox"/> OL/VP/M <input type="checkbox"/> EZOLV</p> <p>When you initiate a Run command, the drive will wait for this length of time before it will fault on FDBKL [WIRE Break] or use parameter b5-83 [Feedback Loss Goto Frequency].</p>	0.0 s (0.0 - 120.0 s)

### ◆ b6: Dwell Function

No. (Hex.)	Name	Description	Default (Range)
b6-01 (01B6)	Dwell Reference at Start	<p><input type="checkbox"/> V/f <input type="checkbox"/> OL/VP/M <input type="checkbox"/> EZOLV</p> <p>Sets the output frequency that the drive will hold momentarily when the motor starts.</p>	0.0 (Determined by A1-02)
b6-02 (01B7)	Dwell Time at Start	<p><input type="checkbox"/> V/f <input type="checkbox"/> OL/VP/M <input type="checkbox"/> EZOLV</p> <p>Sets the length of time that the drive will hold the output frequency when the motor starts.</p>	0.0 s (0.0 - 10.0 s)
b6-03 (01B8)	Dwell Reference at Stop	<p><input type="checkbox"/> V/f <input type="checkbox"/> OL/VP/M <input type="checkbox"/> EZOLV</p> <p>Sets the output frequency that the drive will hold momentarily when ramping to stop the motor.</p>	0.0 (Determined by A1-02)
b6-04 (01B9)	Dwell Time at Stop	<p><input type="checkbox"/> V/f <input type="checkbox"/> OL/VP/M <input type="checkbox"/> EZOLV</p> <p>Sets the length of time for the drive to hold the output frequency when ramping to stop the motor.</p>	0.0 s (0.0 - 10.0 s)

### ◆ b8: Energy Saving

No. (Hex.)	Name	Description	Default (Range)
b8-01 (01CC)	Energy Saving Control Selection	<p><input type="checkbox"/> V/f <input type="checkbox"/> OL/VP/M <input type="checkbox"/> EZOLV</p> <p>Sets the Energy-saving control function. 0 : Disabled 1 : Enabled</p>	0 (0, 1)
b8-04 (01CF) Expert	Energy Saving Coefficient Value	<p><input type="checkbox"/> V/f <input type="checkbox"/> OL/VP/M <input type="checkbox"/> EZOLV</p> <p>Sets the Energy-saving control coefficient to maintain maximum motor efficiency. The default setting is for Yaskawa motors.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>When you do Rotational Auto-Tuning, the drive will automatically set the energy-saving coefficient.</li> <li>The minimum values and the maximum values are different for different drive models. -2011 to 2024, 4005 and 4008: 0.0 - 2000.0 -2031 to 2396, 4011 to 4720: 0.00 - 655.00</li> </ul>	Determined by E2-11 and $\alpha 2-04$ (0.00 - 655.00)
b8-05 (01D0) Expert	Power Detection Filter Time	<p><input type="checkbox"/> V/f <input type="checkbox"/> OL/VP/M <input type="checkbox"/> EZOLV</p> <p>Sets the time constant to measure output power.</p>	20 ms (0 - 2000 ms)
b8-06 (01D1) Expert	Search Operation Voltage Limit	<p><input type="checkbox"/> V/f <input type="checkbox"/> OL/VP/M <input type="checkbox"/> EZOLV</p> <p>Sets the voltage limit for Search Operation as a percentage of the motor rated voltage.</p>	0% (0 - 100%)
b8-19 (0B40) Expert	E-Save Search Frequency	<p><input type="checkbox"/> V/f <input type="checkbox"/> OL/VP/M <input type="checkbox"/> EZOLV</p> <p>Sets the frequency of Energy-saving control search operations. Usually it is not necessary to change this setting.</p>	Determined by A1-02 (10 - 300 Hz)
b8-20 (0B41) Expert	E-Save Search Width	<p><input type="checkbox"/> V/f <input type="checkbox"/> OL/VP/M <input type="checkbox"/> EZOLV</p> <p>Sets the amplitude of Energy-saving control search operations.</p>	1.0 degrees (0.1 - 5.0 degrees)

No. (Hex.)	Name	Description	Default (Range)
b8-28 (0B8B) Expert	Over Excitation Action Selection	<p>V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV <input checked="" type="checkbox"/></p> <p>Sets the function for excitation operation.</p> <p>0 : Disabled 1 : Enabled</p>	0 (0, 1)
b8-29 (0B8C)	Energy Saving Priority Selection	<p>V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV <input checked="" type="checkbox"/></p> <p>Sets the priority of drive response between changes to the load or Energy-saving control. Enable this to prioritize energy-saving control. Disable this to prioritize tracking related to fast load changes, and prevent motor stall.</p> <p>0 : Priority: Drive Response 1 : Priority: Energy Savings</p>	0 (0, 1)

## 3.6 C: Tuning

### ◆ C1: Accel & Decel Time

No. (Hex.)	Name	Description	Default (Range)
C1-01 (0200) RUN	Acceleration Time 1	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the length of time to accelerate from zero to maximum output frequency.</p> <p><b>Note:</b> When <math>C1-10 = 0</math> [Accel/Decel Time Setting Units = 0.01 s (0.00 to 600.00 s)], the setting range is 0.00 to 600.00 s.</p>	10.0 s (0.0 - 6000.0 s)
C1-02 (0201) RUN	Deceleration Time 1	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the length of time to decelerate from maximum output frequency to zero.</p> <p><b>Note:</b> When <math>C1-10 = 0</math> [Accel/Decel Time Setting Units = 0.01 s (0.00 to 600.00 s)], the setting range is 0.00 to 600.00 s.</p>	10.0 s (0.0 - 6000.0 s)
C1-03 (0202) RUN	Acceleration Time 2	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the length of time to accelerate from zero to maximum output frequency.</p> <p><b>Note:</b> When <math>C1-10 = 0</math> [Accel/Decel Time Setting Units = 0.01 s (0.00 to 600.00 s)], the setting range is 0.00 to 600.00 s.</p>	10.0 s (0.0 - 6000.0 s)
C1-04 (0203) RUN	Deceleration Time 2	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the length of time to decelerate from maximum output frequency to zero.</p> <p><b>Note:</b> When <math>C1-10 = 0</math> [Accel/Decel Time Setting Units = 0.01 s (0.00 to 600.00 s)], the setting range is 0.00 to 600.00 s.</p>	10.0 s (0.0 - 6000.0 s)
C1-05 (0204) RUN	Acceleration Time 3	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the length of time to accelerate from zero to maximum output frequency.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>Set <math>A1-02 = 0</math> [Control Method Selection = V/f Control] and <math>H1-xx = 16</math> [MFDI Function Selection = Motor 2 Selection] to enable this parameter.</li> <li>When <math>C1-10 = 0</math> [Accel/Decel Time Setting Units = 0.01 s (0.00 to 600.00 s)], the setting range is 0.00 to 600.00 s.</li> </ul>	10.0 s (0.0 - 6000.0 s)
C1-06 (0205) RUN	Deceleration Time 3	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the length of time to decelerate from maximum output frequency to zero.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>Set <math>A1-02 = 0</math> [Control Method Selection = V/f Control] and <math>H1-xx = 16</math> [MFDI Function Selection = Motor 2 Selection] to enable this parameter.</li> <li>When <math>C1-10 = 0</math> [Accel/Decel Time Setting Units = 0.01 s (0.00 to 600.00 s)], the setting range is 0.00 to 600.00 s.</li> </ul>	10.0 s (0.0 - 6000.0 s)
C1-07 (0206) RUN	Acceleration Time 4	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the length of time to accelerate from zero to maximum output frequency.</p> <p><b>Note:</b> When <math>C1-10 = 0</math> [Accel/Decel Time Setting Units = 0.01 s (0.00 to 600.00 s)], the setting range is 0.00 to 600.00 s.</p>	10.0 s (0.0 - 6000.0 s)
C1-08 (0207) RUN	Deceleration Time 4	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the length of time to decelerate from maximum output frequency to zero.</p> <p><b>Note:</b> When <math>C1-10 = 0</math> [Accel/Decel Time Setting Units = 0.01 s (0.00 to 600.00 s)], the setting range is 0.00 to 600.00 s.</p>	10.0 s (0.0 - 6000.0 s)
C1-09 (0208) RUN	Fast Stop Time	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the length of time that the drive will decelerate to zero for a Fast Stop.</p> <p><b>Note:</b> If you decelerate the drive too quickly, the drive will detect an <i>ov</i> [Overvoltage] fault and shut off the output, and the motor will coast to stop. To prevent motor coasting and stop the motor quickly and safely, make sure to set a Fast Stop time in <math>C1-09</math>.</p>	10.0 s (0.0 - 6000.0 s)
C1-10 (0209)	Accel/Decel Time Setting Units	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the setting units for <math>C1-01</math> to <math>C1-08</math> [Accel/Decel Times 1 to 4], <math>C1-09</math> [Fast Stop Time], <math>L2-06</math> [Kinetic Energy Backup Decel Time], and <math>L2-07</math> [Kinetic Energy Backup Accel Time].</p> <p>0 : 0.01 s (0.00 to 600.00 s) 1 : 0.1 s (0.0 to 6000.0 s)</p>	1 (0, 1)
C1-11 (020A)	Accel/Decel Time Switching Frequency	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the frequency at which the drive will automatically change acceleration and deceleration times.</p>	Determined by A1-02 (0.0 - 400.0 Hz)

## ◆ C2: S-Curve Characteristics

No. (Hex.)	Name	Description	Default (Range)
C2-01 (020B)	S-Curve Time @ Start of Accel	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the S-curve acceleration time at start.	Determined by A1-02 (0.00 - 10.00 s)
C2-02 (020C)	S-Curve Time @ End of Accel	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the S-curve acceleration time at completion.	0.20 s (0.00 - 10.00 s)
C2-03 (020D)	S-Curve Time @ Start of Decel	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the S-curve deceleration time at start.	0.20 s (0.00 - 10.00 s)
C2-04 (020E)	S-Curve Time @ End of Decel	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the S-curve deceleration time at completion.	0.00 s (0.00 - 10.00 s)

## ◆ C3: Slip Compensation

No. (Hex.)	Name	Description	Default (Range)
C3-01 (020F) RUN Expert	Slip Compensation Gain	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the gain for the slip compensation function. Usually it is not necessary to change this setting. <b>Note:</b> Correctly set these parameters before you change the slip compensation gain: • E2-01 [Motor Rated Current (FLA)] • E2-02 [Motor Rated Slip] • E2-03 [Motor No-Load Current]	0.0 (0.0 - 2.5)
C3-02 (0210) RUN Expert	Slip Compensation Delay Time	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the slip compensation delay time when speed is unstable or when the slip compensation response is too slow. Usually it is not necessary to change this setting.	Determined by A1-02 (0 - 10000 ms)
C3-03 (0211) Expert	Slip Compensation Limit	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the upper limit for the slip compensation function as a percentage of the motor rated slip.	200% (0 - 250%)
C3-04 (0212) Expert	Slip Compensation at Regen	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the slip compensation function during regenerative operation. 0 : Disabled 1 : Enabled Above 6Hz 2 : Enabled Above Defined Range	0 (0 - 2)
C3-21 (033E) RUN Expert	Motor 2 Slip Compensation Gain	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the gain for the motor 2 slip compensation function. Usually it is not necessary to change this setting. <b>Note:</b> • Set A1-02 = 0 [Control Method Selection = V/f Control] and H1-xx = 16 [MFDI Function Selection = Motor 2 Selection] to enable this parameter. • Correctly set these parameters before you change the slip compensation gain: –E4-01 [Motor 2 Rated Current] –E4-02 [Motor 2 Rated Slip] –E4-03 [Motor 2 Rated No-Load Current]	0.0 (0.0 - 2.5)
C3-22 (0241) RUN Expert	Motor 2 Slip Comp Delay Time	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the slip compensation delay time for motor 2 when speed is unstable or when the slip compensation response is too slow. Usually it is not necessary to change this setting. <b>Note:</b> Set A1-02 = 0 [Control Method Selection = V/f Control] and H1-xx = 16 [MFDI Function Selection = Motor 2 Selection] to enable this parameter.	2000 (0 - 10000 ms)
C3-23 (0242) Expert	Motor 2 Slip Compensation Limit	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the upper limit for the slip compensation function as a percentage of the motor 2 rated slip. <b>Note:</b> Set A1-02 = 0 [Control Method Selection = V/f Control] and H1-xx = 16 [MFDI Function Selection = Motor 2 Selection] to enable this parameter.	200% (0 - 250%)

### 3.6 C: Tuning

No. (Hex.)	Name	Description	Default (Range)
C3-24 (0243) Expert	Motor 2 Slip Comp during Regen	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the slip compensation during regenerative operation function for motor 2.</p> <p>0 : Disabled 1 : Enabled Above 6Hz 2 : Enabled Above Defined Range</p> <p><b>Note:</b> Set A1-02 = 0 [Control Method Selection = V/f Control] and H1-xx = 16 [MFDI Function Selection = Motor 2 Selection] to enable this parameter.</p>	0 (0 - 2)
C3-29 (1B5D) RUN Expert	Slip Compensation Gain @ Low Spd	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the slip compensation gain at low speed. Usually it is not necessary to change this setting.</p>	0.0 (0.0 - 2.5)

### ◆ C4: Torque Compensation

No. (Hex.)	Name	Description	Default (Range)
C4-01 (0215) RUN	Torque Compensation Gain	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the gain for the torque compensation function. Use this parameter value for motor 1 when you operate multiple motors.</p> <p><b>Note:</b> If A1-02 = 8 [Control Method Selection = EZOLV], you cannot change the setting while the drive is running.</p>	Determined by A1-02 (0.00 - 2.50)
C4-02 (0216) RUN	Torque Compensation Delay Time	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the torque compensation delay time. Usually it is not necessary to change this setting.</p> <p><b>Note:</b> When A1-02 = 5, 8 [Control Method Selection = OLV/PM, EZOLV], you cannot change the setting while the drive is running.</p>	Determined by A1-02 (0 - 60000 ms)
C4-07 (0341) RUN	Motor 2 Torque Compensation Gain	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the gain for motor 2 torque compensation function when you use the Motor Switch function.</p>	1.00 (0.00 - 2.50)
C4-23 (1583) Expert	Current Control Gain	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the Current control gain. Usually it is not necessary to change this parameter.</p>	1.00 (0.50 - 2.50)

### ◆ C5: Auto Speed Regulator (ASR)

No. (Hex.)	Name	Description	Default (Range)
C5-01 (021B) RUN	ASR Proportional Gain 1	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the gain to adjust ASR response.</p>	Determined by A1-02 (0.00 - 300.00)
C5-02 (021C) RUN	ASR Integral Time 1	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the ASR integral time.</p>	Determined by A1-02 (0.000 - 60.000 s)
C5-03 (021D) RUN	ASR Proportional Gain 2	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the gain to adjust ASR response.</p>	Determined by A1-02 (0.00 - 300.00)
C5-04 (021E) RUN	ASR Integral Time 2	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the ASR integral time.</p>	Determined by A1-02 (0.000 - 60.000 s)
C5-06 (0220)	ASR Delay Time	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the filter time constant of the torque reference output from the speed loop. Usually it is not necessary to change this setting.</p>	Determined by A1-02 (0.000 - 0.500 s)
C5-07 (0221)	ASR Gain Switchover Frequency	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the frequency where the drive will switch between these parameters: C5-01 and C5-03 [ASR Proportional Gain 1/2] C5-02 and C5-04 [ASR Integral Time 1/2]</p>	Determined by A1-02 (Determined by A1-02)
C5-08 (0222)	ASR Integral Limit	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Set the upper limit of the ASR integral amount as a percentage of the rated load.</p>	400% (0 - 400%)

## ◆ C6: Carrier Frequency

No. (Hex.)	Name	Description	Default (Range)
C6-02 (0224)	Carrier Frequency Selection	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the carrier frequency for the transistors in the drive.</p> <p>1 : 2.0 kHz            2 : 5.0 kHz            3 : 8.0 kHz            4 : 10.0 kHz            5 : 12.5 kHz            7 : Swing PWM1 (Audible Sound 1)            8 : Swing PWM2 (Audible Sound 2)            9 : Swing PWM3 (Audible Sound 3)            A : Swing PWM4 (Audible Sound 4)            B : Leakage Current Rejection PWM            F : User Defined (C6-03 to C6-05)</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>The carrier frequency for Swing PWM 1 to 4 is equivalent to 2.0 kHz. Swing PWM applies a special PWM pattern to decrease the audible noise.</li> <li>When <math>A1-02 = 5</math> or <math>8</math> [Control Method Selection = OLV/PM or EZOLV], you cannot set to 7 to A</li> <li>Setting B uses a PWM pattern that decreases the leakage current that the drive detects over long wiring distances. This can help decrease alarm detection and decrease problems with the current monitor from leakage current over long wiring distances.</li> </ul>	Determined by A1-02 and o2-04 (Determined by A1-02)
C6-03 (0225)	Carrier Frequency Upper Limit	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the upper limit of the carrier frequency. Set <math>C6-02 = F</math> [Carrier Frequency Selection = User Defined (C6-03 to C6-05)] to set this parameter.</p>	Determined by C6-02 (1.0 - 12.5 kHz)
C6-04 (0226)	Carrier Frequency Lower Limit	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the lower limit of the carrier frequency. Set <math>C6-02 = F</math> [Carrier Frequency Selection = User Defined (C6-03 to C6-05)] to set this parameter.</p>	Determined by C6-02 (1.0 - 12.5 kHz)
C6-05 (0227)	Carrier Freq Proportional Gain	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the proportional gain for the carrier frequency. Set <math>C6-02 = F</math> [Carrier Frequency Selection = User Defined (C6-03 to C6-05)] to set this parameter.</p>	Determined by C6-02 (0 - 99)

## 3.7 d: Reference Settings

### ◆ d1: Frequency Reference

No. (Hex.)	Name	Description	Default (Range)
d1-01 (0280) RUN	Reference 1	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the frequency reference in the units from o1-03 [Frequency Display Unit Selection].	0.00 Hz (0.00 - 400.00 Hz)
d1-02 (0281) RUN	Reference 2	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the frequency reference in the units from o1-03 [Frequency Display Unit Selection].	0.00 Hz (0.00 - 400.00 Hz)
d1-03 (0282) RUN	Reference 3	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the frequency reference in the units from o1-03 [Frequency Display Unit Selection].	0.00 Hz (0.00 - 400.00 Hz)
d1-04 (0283) RUN	Reference 4	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the frequency reference in the units from o1-03 [Frequency Display Unit Selection].	0.00 Hz (0.00 - 400.00 Hz)
d1-05 (0284) RUN	Reference 5	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the frequency reference in the units from o1-03 [Frequency Display Unit Selection].	0.00 Hz (0.00 - 400.00 Hz)
d1-06 (0285) RUN	Reference 6	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the frequency reference in the units from o1-03 [Frequency Display Unit Selection].	0.00 Hz (0.00 - 400.00 Hz)
d1-07 (0286) RUN	Reference 7	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the frequency reference in the units from o1-03 [Frequency Display Unit Selection].	0.00 Hz (0.00 - 400.00 Hz)
d1-08 (0287) RUN	Reference 8	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the frequency reference in the units from o1-03 [Frequency Display Unit Selection].	0.00 Hz (0.00 - 400.00 Hz)
d1-09 (0288) RUN	Reference 9	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the frequency reference in the units from o1-03 [Frequency Display Unit Selection].	0.00 Hz (0.00 - 400.00 Hz)
d1-10 (028B) RUN	Reference 10	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the frequency reference in the units from o1-03 [Frequency Display Unit Selection].	0.00 Hz (0.00 - 400.00 Hz)
d1-11 (028C) RUN	Reference 11	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the frequency reference in the units from o1-03 [Frequency Display Unit Selection].	0.00 Hz (0.00 - 400.00 Hz)
d1-12 (028D) RUN	Reference 12	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the frequency reference in the units from o1-03 [Frequency Display Unit Selection].	0.00 Hz (0.00 - 400.00 Hz)
d1-13 (028E) RUN	Reference 13	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the frequency reference in the units from o1-03 [Frequency Display Unit Selection].	0.00 Hz (0.00 - 400.00 Hz)
d1-14 (028F) RUN	Reference 14	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the frequency reference in the units from o1-03 [Frequency Display Unit Selection].	0.00 Hz (0.00 - 400.00 Hz)
d1-15 (0290) RUN	Reference 15	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the frequency reference in the units from o1-03 [Frequency Display Unit Selection].	0.00 Hz (0.00 - 400.00 Hz)
d1-16 (0291) RUN	Reference 16	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the frequency reference in the units from o1-03 [Frequency Display Unit Selection].	0.00 Hz (0.00 - 400.00 Hz)
d1-17 (0292) RUN	Jog Reference	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the Jog frequency reference in the units from o1-03 [Frequency Display Unit Selection]. Set H1-xx = 6 [MF/DI Function Selection = Jog Reference Selection] to use the Jog frequency reference.	6.00 Hz (0.00 - 400.00 Hz)

### ◆ d2: Reference Limits

No. (Hex.)	Name	Description	Default (Range)
d2-01 (0289)	Frequency Reference Upper Limit	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets maximum limit for all frequency references. The maximum output frequency is 100%.</p> <p><b>Note:</b> Parameter <i>A1-02 [Control Method Selection]</i> selects which parameter is the maximum output frequency.</p> <ul style="list-style-type: none"> <li>• <i>A1-02 ≠ 8 [EZOLV]: E1-04 [Maximum Output Frequency]</i></li> <li>• <i>A1-02 = 8: E9-02 [Motor Max Revolutions]</i></li> </ul>	100.0% (0.0 - 110.0%)
d2-02 (028A)	Frequency Reference Lower Limit	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets minimum limit for all frequency references. The maximum output frequency is 100%.</p> <p><b>Note:</b> Parameter <i>A1-02 [Control Method Selection]</i> selects which parameter is the maximum output frequency.</p> <ul style="list-style-type: none"> <li>• <i>A1-02 ≠ 8 [EZOLV]: E1-04 [Maximum Output Frequency]</i></li> <li>• <i>A1-02 = 8: E9-02 [Motor Max Revolutions]</i></li> </ul>	0.0% (0.0 - 110.0%)
d2-03 (0293)	Analog Frequency Ref Lower Limit	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the lower limit for the master frequency reference (the first frequency of the multi-step speed reference) as a percentage. The maximum output frequency is 100%.</p> <p><b>Note:</b> Parameter <i>A1-02 [Control Method Selection]</i> selects which parameter is the maximum output frequency.</p> <ul style="list-style-type: none"> <li>• <i>A1-02 ≠ 8: E1-04 [Maximum Output Frequency]</i></li> <li>• <i>A1-02 = 8: E9-02 [Maximum Speed]</i></li> </ul>	0.0% (0.0 - 110.0%)

### ◆ d3: Jump Frequency

No. (Hex.)	Name	Description	Default (Range)
d3-01 (0294)	Jump Frequency 1	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the median value of the frequency band that the drive will avoid.</p>	0.0 Hz (0.0 - 400.0 Hz)
d3-02 (0295)	Jump Frequency 2	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the median value of the frequency band that the drive will avoid.</p>	0.0 Hz (0.0 - 400.0 Hz)
d3-03 (0296)	Jump Frequency 3	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the median value of the frequency band that the drive will avoid.</p>	0.0 Hz (0.0 - 400.0 Hz)
d3-04 (0297)	Jump Frequency Width	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the width of the frequency band that the drive will avoid.</p>	1.0 Hz (Determined by A1-02)

### ◆ d4: Frequency Ref Up/Down & Hold

No. (Hex.)	Name	Description	Default (Range)
d4-01 (0298)	Freq Reference Hold Selection	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the function that saves the frequency reference after a Stop command or when de-energizing the drive.</p> <p>Set <i>H1-xx [MFDI Function Selection]</i> to one of these values to enable this parameter:</p> <ul style="list-style-type: none"> <li>• <i>A [Accel/Decel Ramp Hold]</i></li> <li>• <i>10/11 [Up/Down Command]</i></li> </ul> <p>0 : Disabled 1 : Enabled</p>	0 (0, 1)
d4-10 (02B6)	Up/Down Freq Lower Limit Select	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the lower frequency limit for the Up/Down function.</p> <p>0 : Greater of d2-02 or Analog 1 : d2-02</p>	0 (0, 1)

### ◆ d6: Field Weakening

No. (Hex.)	Name	Description	Default (Range)
d6-01 (02A0)	Field Weakening Level	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the drive output voltage as a percentage of E1-05 [Maximum Output Voltage] when H1-xx = 63 [Field Weakening] is activated.</p>	80% (0 - 100%)
d6-02 (02A1)	Field Weakening Frequency Limit	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the minimum output frequency to start field weakening.</p>	0.0 Hz (0.0 - 400.0 Hz)

### ◆ d7: Offset Frequency

No. (Hex.)	Name	Description	Default (Range)
d7-01 (02B2) RUN	Offset Frequency 1	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Uses H1-xx = 44 [MFDI Function Select = Add Offset Frequency 1 (d7-01)] as a percentage of the Maximum Output Frequency to add or subtract the set frequency to/from the frequency reference.</p> <p><b>Note:</b> Parameter A1-02 [Control Method Selection] selects which parameter is the maximum output frequency.  <ul style="list-style-type: none"> <li>• A1-02 ≠ 8 [EZOLV]: E1-04 [Maximum Output Frequency]</li> <li>• A1-02 = 8: E9-02 [Maximum Speed]</li> </ul> </p>	0.0% (-100.0 - +100.0%)
d7-02 (02B3) RUN	Offset Frequency 2	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Uses H1-xx = 45 [MFDI Function Select = Add Offset Frequency 2 (d7-02)] as a percentage of the Maximum Output Frequency to add or subtract the set frequency to/from the frequency reference.</p> <p><b>Note:</b> Parameter A1-02 [Control Method Selection] selects which parameter is the maximum output frequency.  <ul style="list-style-type: none"> <li>• A1-02 ≠ 8 [EZOLV]: E1-04 [Maximum Output Frequency]</li> <li>• A1-02 = 8: E9-02 [Maximum Speed]</li> </ul> </p>	0.0% (-100.0 - +100.0%)
d7-03 (02B4) RUN	Offset Frequency 3	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Uses H1-xx = 46 [MFDI Function Select = Add Offset Frequency 3 (d7-03)] as a percentage of the Maximum Output Frequency to add or subtract the set frequency to/from the frequency reference.</p> <p><b>Note:</b> Parameter A1-02 [Control Method Selection] selects which parameter is the maximum output frequency.  <ul style="list-style-type: none"> <li>• A1-02 ≠ 8 [EZOLV]: E1-04 [Maximum Output Frequency]</li> <li>• A1-02 = 8: E9-02 [Maximum Speed]</li> </ul> </p>	0.0% (-100.0 - +100.0%)

## 3.8 E: Motor Parameters

### ◆ E1: V/f Pattern for Motor 1

No. (Hex.)	Name	Description	Default (Range)
E1-01 (0300)	Input AC Supply Voltage	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the drive input voltage.</p> <p><b>NOTICE: Damage to Equipment.</b> Set E1-01 [Input AC Supply Voltage] to align with the drive input voltage (not motor voltage). If this parameter is incorrect, the protective functions of the drive will not operate correctly and it can cause damage to the drive.</p>	<p>208 V Class: 240 V, 480 V Class: 480 V</p> <p>(208 V Class: 155 - 255 V, 480 V Class: 310 - 510 V)</p>
E1-03 (0302)	V/f Pattern Selection	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the V/f pattern for the drive and motor. You can use one of the preset patterns or you can make a custom pattern.</p> <p>0 : Const Trq, 50Hz base, 50Hz max            1 : Const Trq, 60Hz base, 60Hz max            2 : Const Trq, 50Hz base, 60Hz max            3 : Const Trq, 60Hz base, 72Hz max            4 : VT, 50Hz, 65% Vmid reduction            5 : VT, 50Hz, 50% Vmid reduction            6 : VT, 60 Hz, 65% Vmid reduction            7 : VT, 60Hz, 50% Vmid reduction            8 : High Trq, 50Hz, 25% Vmin boost            9 : High Trq, 50Hz, 65% Vmin boost            A : High Trq, 60Hz, 25% Vmin boost            B : High Trq, 60Hz, 65% Vmin boost            C : High Freq, 60Hz base, 90Hz max            D : High Freq, 60Hz base, 120Hz max            E : High Freq, 60Hz base, 180Hz max            F : Custom</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>Set the correct V/f pattern for the application and operation area. An incorrect V/f pattern can decrease motor torque and increase current from overexcitation.</li> <li>Parameter A1-03 [Initialize Parameters] will not initialize the value of E1-03.</li> </ul>	<p>F</p> <p>(Determined by A1-02)</p>
E1-04 (0303)	Maximum Output Frequency	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the maximum output frequency for the V/f pattern.</p>	<p>Determined by A1-02 and E5-01</p> <p>(Determined by A1-02 and E5-01)</p>
E1-05 (0304)	Maximum Output Voltage	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the maximum output voltage for the V/f pattern.</p>	<p>208 V Class: 230.0 V, 480 V Class: 460.0 V</p> <p>(208 V Class: 0.0 - 255.0 V, 480 V Class: 0.0 - 510.0 V)</p>
E1-06 (0305)	Base Frequency	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the base frequency for the V/f pattern.</p>	<p>Determined by A1-02 and E5-01</p> <p>(0.0 - E1-04)</p>
E1-07 (0306)	Mid Point A Frequency	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets a middle output frequency for the V/f pattern.</p>	<p>Determined by E1-03</p> <p>(0.0 - E1-04)</p>
E1-08 (0307)	Mid Point A Voltage	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets a middle output voltage for the V/f pattern.</p>	<p>Determined by o2-04</p> <p>(208 V Class: 0.0 - 255.0 V, 480 V Class: 0.0 - 510.0 V)</p>
E1-09 (0308)	Minimum Output Frequency	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the minimum output frequency for the V/f pattern.</p>	<p>Determined by A1-02 and E5-01</p> <p>(Determined by A1-02, E1-04, and E5-01)</p>
E1-10 (0309)	Minimum Output Voltage	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the minimum output voltage for the V/f pattern.</p>	<p>Determined by E1-03</p> <p>(208 V Class: 0.0 - 255.0 V, 480 V Class: 0.0 - 510.0 V)</p>
E1-11 (030A) Expert	Mid Point B Frequency	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets a middle output frequency for the V/f pattern.</p>	<p>0.0 Hz</p> <p>(0.0 - E1-04)</p>

### 3.8 E: Motor Parameters

No. (Hex.)	Name	Description	Default (Range)
E1-12 (030B) Expert	Mid Point B Voltage	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets a middle point voltage for the V/f pattern.	0.0 V (208 V Class: 0.0 - 255.0 V, 480 V Class: 0.0 - 510.0 V)
E1-13 (030C) Expert	Base Voltage	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the base voltage for the V/f pattern.	0.0 V (208 V Class: 0.0 - 255.0 V, 480 V Class: 0.0 - 510.0 V)

### ◆ E2: Motor Parameters

No. (Hex.)	Name	Description	Default (Range)
E2-01 (030E)	Motor Rated Current (FLA)	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the motor rated current in amps.	Determined by o2-04 (10% to 200% of the drive rated current)
E2-02 (030F)	Motor Rated Slip	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets motor rated slip.	Determined by o2-04 (0.000 - 20.000 Hz)
E2-03 (0310)	Motor No-Load Current	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the no-load current for the motor in amps when operating at the rated frequency and the no-load voltage.	Determined by o2-04 (0 to E2-01)
E2-04 (0311)	Motor Pole Count	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the number of motor poles.	4 (2 - 120)
E2-05 (0312)	Motor Line-to-Line Resistance	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the line-to-line resistance for the motor stator windings.	Determined by o2-04 (0.000 - 65.000 Ω)
E2-06 (0313)	Motor Leakage Inductance	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the voltage drop from motor leakage inductance when the motor is operating at the rated frequency and rated current. This value is a percentage of Motor Rated Voltage.	Determined by o2-04 (0.0 - 60.0%)
E2-10 (0317)	Motor Iron Loss	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the motor iron loss.	Determined by o2-04 (0 - 65535 W)
E2-11 (0318)	Motor Rated Power	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the motor rated output in the units from o1-58 [Motor Power Unit Selection].	Determined by o2-04 (0.00 - 650.00 HP)

### ◆ E3: V/f Pattern for Motor 2

No. (Hex.)	Name	Description	Default (Range)
E3-01 (0319)	Motor 2 Control Mode Selection	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the control method for motor 2. <b>Note:</b> • Parameter L1-01 [Motor Overload (oL1) Protection] sets the protection operation of oL1 [Motor Overload] the same as Motor 1. • When you use parameter A1-03 [Initialize Parameters] to initialize the drive, this parameter is not reset. 0 : V/f Control	0 (0)
E3-04 (031A)	Motor 2 Maximum Output Frequency	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Set the maximum output frequency for the motor 2 V/f pattern.	Determined by E3-01 (40.0 - 400.0 Hz)
E3-05 (031B)	Motor 2 Maximum Output Voltage	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the maximum output voltage for the motor 2 V/f pattern.	Determined by E3-01 (208 V Class: 0.0 - 255.0 V, 480 V Class: 0.0 - 510.0 V)
E3-06 (031C)	Motor 2 Base Frequency	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the base frequency for the motor 2 V/f pattern.	Determined by E3-01 (0.0 - E3-04)
E3-07 (031D)	Motor 2 Mid Point A Frequency	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets a middle output frequency for the motor 2 V/f pattern.	Determined by E3-01 (0.0 - E3-04)
E3-08 (031E)	Motor 2 Mid Point A Voltage	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets a middle output voltage for the motor 2 V/f pattern.	Determined by E3-01 (208 V Class: 0.0 - 255.0 V, 480 V Class: 0.0 - 510.0 V)
E3-09 (031F)	Motor 2 Minimum Output Frequency	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the minimum output frequency for the motor 2 V/f pattern.	Determined by E3-01 (0.0 - E3-04)

No. (Hex.)	Name	Description	Default (Range)
E3-10 (0320)	Motor 2 Minimum Output Voltage	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the minimum output voltage for the motor 2 V/f pattern.	Determined by E3-01 (208 V Class: 0.0 - 255.0 V, 480 V Class)
E3-11 (0345) Expert	Motor 2 Mid Point B Frequency	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets a middle output frequency for the motor 2 V/f pattern. Set this parameter to adjust the V/f pattern for the constant output range. Usually it is not necessary to change this parameter.	0.0 Hz (0.0 - E3-04)
E3-12 (0346) Expert	Motor 2 Mid Point B Voltage	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets a middle output voltage for the motor 2 V/f pattern. Set this parameter to adjust the V/f pattern for the constant output range. Usually it is not necessary to change this parameter.	0.0 V (208 V Class: 0.0 - 255.0 V, 480 V Class: 0.0 - 510.0 V)
E3-13 (0347) Expert	Motor 2 Base Voltage	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the base voltage for the motor 2 V/f pattern. Set this parameter to adjust the V/f pattern for the constant output range. Usually it is not necessary to change this parameter.	0.0 V (208 V Class: 0.0 - 255.0 V, 480 V Class: 0.0 - 510.0 V)

### ◆ E4: Motor 2 Parameters

No. (Hex.)	Name	Description	Default (Range)
E4-01 (0321)	Motor 2 Rated Current	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the motor rated current for motor 2 in amps.	Determined by o2-04 (10% to 200% of the drive rated current)
E4-02 (0322)	Motor 2 Rated Slip	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the motor rated slip for motor 2.	Determined by o2-04 (0.000 - 20.000 Hz)
E4-03 (0323)	Motor 2 Rated No-Load Current	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the no-load current for motor 2 in amps when operating at the rated frequency and the no-load voltage.	Determined by o2-04 (Less than 0 - E4-01)
E4-04 (0324)	Motor 2 Motor Poles	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the number of poles for motor 2.	4 (2 - 120)
E4-05 (0325)	Motor 2 Line-to-Line Resistance	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the line-to-line resistance for the motor 2 stator windings.	Determined by o2-04 (0.000 - 65.000 Ω)
E4-06 (0326)	Motor 2 Leakage Inductance	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the voltage drop from motor 2 leakage inductance as a percentage of Motor Rated Voltage when motor 2 operates at the rated frequency and rated current.	Determined by o2-04 (0.0 - 60.0%)
E4-10 (0340)	Motor 2 Iron Loss	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the motor iron loss for motor 2.	Determined by o2-04 (0 - 65535 W)
E4-11 (0327)	Motor 2 Rated Power	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the motor rated power in the units from o1-58 [Motor Power Unit Selection].	Determined by o2-04 (0.00 - 650.00 HP)

### ◆ E5: PM Motor Settings

No. (Hex.)	Name	Description	Default (Range)
E5-01 (0329)	PM Motor Code Selection	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the motor code for Yaskawa PM motors. The drive uses the motor code to automatically set some parameters to their correct settings.	FFFF (0000 - FFFF)
E5-02 (032A)	PM Motor Rated Power	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the PM motor rated output in the units set in o1-58 [Motor Power Unit Selection].	Determined by o2-04 (0.13 - 650.00 HP)
E5-03 (032B)	PM Motor Rated Current (FLA)	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the PM motor rated current (FLA).	Determined by o2-04 (10% to 200% of the drive rated current)
E5-04 (032C)	PM Motor Pole Count	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the number of PM motor poles. <b>Note:</b> When A1-02 = 5 or 8 [OLV/PM or EZOLV], the maximum value is 48.	4 (2 - 120)
E5-05 (032D)	PM Motor Resistance (ohms/phase)	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the resistance per phase of a PM motor. Set 50% of the line-to-line resistance.	0.100 Ω (0.000 - 65.000 Ω)
E5-06 (032E)	PM d-axis Inductance (mH/phase)	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the PM motor d-axis inductance.	1.00 mH (0.00 - 300.00 mH)

### 3.8 E: Motor Parameters

No. (Hex.)	Name	Description	Default (Range)
E5-07 (032F)	PM q-axis Inductance (mH/phase)	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the PM motor q-axis inductance.	1.00 mH (0.00 - 600.00 mH)
E5-09 (0331)	PM Back-EMF Vpeak (mV/(rad/s))	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the peak value of PM motor induced voltage.	0.0 mV/(rad/sec) (0.0 - 2000.0 mV/(rad/s))
E5-24 (0353)	PM Back-EMF L-L Vrms (mV/rpm)	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the RMS value for PM motor line voltage.	0.1 mV/min <sup>-1</sup> (0.0 - 6500.0 mV/min <sup>-1</sup> )

### ◆ E9: Motor Setting

No. (Hex.)	Name	Description	Default (Range)
E9-01 (11E4)	Motor Type Selection	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the type of motor. 0 : Induction (IM) 1 : Permanent Magnet (PM) 2 : Synchronous Reluctance (SynRM)	0 (0 - 2)
E9-02 (11E5)	Maximum Speed	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the maximum speed of the motor.	Determined by E9-01 (40.0 - 120.0 Hz)
E9-03 (11E6)	Rated Speed	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the rated rotation speed of the motor.	Determined by E9-01 (100 - 7200 min <sup>-1</sup> )
E9-04 (11E7)	Base Frequency	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the rated frequency of the motor.	Determined by E9-01 (40.0 - 120.0 Hz)
E9-05 (11E8)	Base Voltage	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the rated voltage of the motor.	208 V Class: 230.0 V, 480 V Class: 460.0 V (208 V Class: 0.0 - 255.0 V, 480 V Class: 0.0 - 510.0 V)
E9-06 (11E9)	Motor Rated Current (FLA)	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the motor rated current in amps.	Determined by E9-01 and o2-04 (10% to 200% of the drive rated current)
E9-07 (11EA)	Motor Rated Power	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the motor rated output in the units from o1-58 [Motor Power Unit Selection].	Determined by E9-02 and o2-04 (0.00 - 650.00 kW)
E9-08 (11EB)	Motor Pole Count	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the number of motor poles.	4 (2 to 120)
E9-09 (11EC)	Motor Rated Slip	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the motor rated slip.	0.000 Hz (0.000 - 20.000 Hz)
E9-10 (11ED)	Motor Line-to-Line Resistance	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the line-to-line resistance for the motor stator windings.	Determined by o2-04 (0.000 - 65.000 Ω)

## 3.9 F: Options

### ◆ F2: Analog Input Option

No. (Hex.)	Name	Description	Default (Range)
F2-01 (038F)	Analog Input Function Selection	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the input method for the analog inputs used with AI-A3.            0 : 3 Independent Channels            1 : 3 Channels Added Together            2 : 3 Additional Channels</p>	0 (0 - 2)
F2-02 (0368) RUN	Analog Input Option Card Gain	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the analog reference gain as a percentage when the maximum output frequency is 100%.  <b>Note:</b>            • Set F2-01 = 1 [Analog Input Function Selection = 3 Channels Added Together] to enable this function.            • Parameter A1-02 [Control Method Selection] selects which parameter is the maximum output frequency.            –A1-02 ≠ 8 [EZOLV]: E1-04 [Maximum Output Frequency]            –A1-02 = 8: E9-02 [Maximum Speed]</p>	100.0% (-999.9 - +999.9%)
F2-03 (0369) RUN	Analog Input Option Card Bias	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the analog reference bias as a percentage when the maximum output frequency is 100%.  <b>Note:</b>            • Set F2-01 = 1 [Analog Input Function Selection = 3 Channels Added Together] to enable this function.            • Parameter A1-02 [Control Method Selection] selects which parameter is the maximum output frequency.            –A1-02 ≠ 8 [EZOLV]: E1-04 [Maximum Output Frequency]            –A1-02 = 8: E9-02 [Maximum Speed]</p>	0.0% (-999.9 - +999.9%)
F2-04 (3160)	Terminal V1 Signal Level Select	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the input signal level for MFAI terminal V1.  <b>Note:</b>            • Set F2-01 = 2 [Analog Input Function Selection = 3 Additional Channels] to enable this parameter.            • Use DIP switch S1 on the AI-A3 option card to switch between the voltage input or current input to align with the setting of this parameter.            0 : 0 to 10V (Lower Limit at 0)            1 : -10 to +10V (Bipolar Reference)            2 : 4 to 20 mA</p>	0 (0 - 2)
F2-05 (3161)	Terminal V1 Function Selection	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the function for MFAI terminal V1.  <b>Note:</b>            Set F2-01 = 2 [Analog Input Function Selection = 3 Additional Channels] to enable this parameter.</p>	F (4 - 2D)
F2-06 (3162) RUN	Terminal V1 Gain Setting	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the gain of the analog signal input to MFAI terminal V1.  <b>Note:</b>            Set F2-01 = 2 [Analog Input Function Selection = 3 Additional Channels] to enable this parameter.</p>	100.0% (-999.9 - +999.9%)
F2-07 (3163) RUN	Terminal V1 Bias Setting	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the bias of the analog signal input to MFAI terminal V1.  <b>Note:</b>            Set F2-01 = 2 [Analog Input Function Selection = 3 Additional Channels] to enable this parameter.</p>	0.0% (-999.9 - +999.9%)
F2-08 (3164)	Terminal V2 Signal Level Select	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the input signal level for MFAI terminal V2.  <b>Note:</b>            • Set F2-01 = 2 [Analog Input Function Selection = 3 Additional Channels] to enable this parameter.            • Use DIP switch S1 on the AI-A3 option card to switch between the voltage input or current input to align with the setting of this parameter.            0 : 0 to 10V (Lower Limit at 0)            1 : -10 to +10V (Bipolar Reference)            2 : 4 to 20 mA</p>	0 (0 - 2)

### 3.9 F: Options

No. (Hex.)	Name	Description	Default (Range)
F2-09 (3165)	Terminal V2 Function Selection	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the function for MFAI terminal V2.</p> <p><b>Note:</b> Set <i>F2-01</i> = 2 [<i>Analog Input Function Selection</i> = 3 <i>Additional Channels</i>] to enable this parameter.</p>	F (4 - 2D)
F2-10 (3166) RUN	Terminal V2 Gain Setting	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the gain of the analog signal input to MFAI terminal V2.</p> <p><b>Note:</b> Set <i>F2-01</i> = 2 [<i>Analog Input Function Selection</i> = 3 <i>Additional Channels</i>] to enable this parameter.</p>	100.0% (-999.9 - +999.9%)
F2-11 (3167) RUN	Terminal V2 Bias Setting	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the bias of the analog signal input to MFAI terminal V2.</p> <p><b>Note:</b> Set <i>F2-01</i> = 2 [<i>Analog Input Function Selection</i> = 3 <i>Additional Channels</i>] to enable this parameter.</p>	0.0% (-999.9 - +999.9%)
F2-12 (3168)	Terminal V3 Signal Level Select	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the input signal level for MFAI terminal V3.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>Set <i>F2-01</i> = 2 [<i>Analog Input Function Selection</i> = 3 <i>Additional Channels</i>] to enable this parameter.</li> <li>Use DIP switch S1 on the AI-A3 option card to switch between the voltage input or current input to align with the setting of this parameter.</li> </ul> <p>0 : 0 to 10V (Lower Limit at 0) 1 : -10 to +10V (Bipolar Reference) 2 : 4 to 20 mA</p>	0 (0 - 2)
F2-13 (3169)	Terminal V3 Function Selection	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the function for MFAI terminal V3.</p> <p><b>Note:</b> Set <i>F2-01</i> = 2 [<i>Analog Input Function Selection</i> = 3 <i>Additional Channels</i>] to enable this parameter.</p>	F (4 - 2D)
F2-14 (316A) RUN	Terminal V3 Gain Setting	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the gain of the analog signal input to MFAI terminal V3.</p> <p><b>Note:</b> Set <i>F2-01</i> = 2 [<i>Analog Input Function Selection</i> = 3 <i>Additional Channels</i>] to enable this parameter.</p>	100.0% (-999.9 - +999.9%)
F2-15 (316B) RUN	Terminal V3 Bias Setting	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the bias of the analog signal input to MFAI terminal V3.</p> <p><b>Note:</b> Set <i>F2-01</i> = 2 [<i>Analog Input Function Selection</i> = 3 <i>Additional Channels</i>] to enable this parameter.</p>	0.0% (-999.9 - +999.9%)

### ◆ F3: Digital Input Option

No. (Hex.)	Name	Description	Default (Range)
F3-01 (0390)	Digital Input Function Selection	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the data format of digital input signals. This parameter is enabled when <i>o1-03</i> = 0 or 1 [<i>Frequency Display Unit Selection</i> = 0.01 Hz or 0.01% (100% = <i>E1-04</i>)].</p> <p><b>Note:</b> When <i>o1-03</i> = 2 or 3 [<i>Revolutions Per Minute (RPM)</i> or <i>User Units (o1-10 &amp; o1-11)</i>], the input signal will be BCD. The <i>o1-03</i> value sets the setting units.</p> <p>0 : BCD, 1% units 1 : BCD, 0.1% units 2 : BCD, 0.01% units 3 : BCD, 1 Hz units 4 : BCD, 0.1 Hz units 5 : BCD, 0.01 Hz units 6 : BCD (5-digit), 0.02 Hz 7 : Binary input 8 : Multi-Function Digital Input</p>	8 (0 - 8)
F3-03 (03B9)	Digital Input Data Length Select	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the number of bits to set the frequency reference with <i>DI-A3</i>.</p> <p>0 : 8-bit 1 : 12-bit 2 : 16-bit</p>	2 (0 - 2)

No. (Hex.)	Name	Description	Default (Range)
F3-10 (0BE3) Expert	Terminal D0 Function Selection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the function for terminal D0 of the DI-A3 option when $F3-01 = 8$ [Digital Input Function Selection = Multi-Function Digital Input].	F (1 - 1FF)
F3-11 (0BE4) Expert	Terminal D1 Function Selection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the function for terminal D1 of the DI-A3 option when $F3-01 = 8$ [Digital Input Function Selection = Multi-Function Digital Input].	F (1 - 1FF)
F3-12 (0BE5) Expert	Terminal D2 Function Selection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the function for terminal D2 of the DI-A3 option when $F3-01 = 8$ [Digital Input Function Selection = Multi-Function Digital Input].	F (1 - 1FF)
F3-13 (0BE6) Expert	Terminal D3 Function Selection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the function for terminal D3 of the DI-A3 option when $F3-01 = 8$ [Digital Input Function Selection = Multi-Function Digital Input].	F (1 - 1FF)
F3-14 (0BE7) Expert	Terminal D4 Function Selection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the function for terminal D4 of the DI-A3 option when $F3-01 = 8$ [Digital Input Function Selection = Multi-Function Digital Input].	F (1 - 1FF)
F3-15 (0BE8) Expert	Terminal D5 Function Selection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the function for terminal D5 of the DI-A3 option when $F3-01 = 8$ [Digital Input Function Selection = Multi-Function Digital Input].	F (1 - 1FF)
F3-16 (0BE9) Expert	Terminal D6 Function Selection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the function for terminal D6 of the DI-A3 option when $F3-01 = 8$ [Digital Input Function Selection = Multi-Function Digital Input].	F (1 - 1FF)
F3-17 (0BEA) Expert	Terminal D7 Function Selection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the function for terminal D7 of the DI-A3 option when $F3-01 = 8$ [Digital Input Function Selection = Multi-Function Digital Input].	F (1 - 1FF)
F3-18 (0BEB) Expert	Terminal D8 Function Selection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the function for terminal D8 of the DI-A3 option when $F3-01 = 8$ [Digital Input Function Selection = Multi-Function Digital Input].	F (1 - 1FF)
F3-19 (0BEC) Expert	Terminal D9 Function Selection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the function for terminal D9 of the DI-A3 option when $F3-01 = 8$ [Digital Input Function Selection = Multi-Function Digital Input].	F (1 - 1FF)
F3-20 (0BED) Expert	Terminal DA Function Selection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the function for terminal DA of the DI-A3 option when $F3-01 = 8$ [Digital Input Function Selection = Multi-Function Digital Input].	F (1 - 1FF)
F3-21 (0BEE) Expert	Terminal DB Function Selection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the function for terminal DB of the DI-A3 option when $F3-01 = 8$ [Digital Input Function Selection = Multi-Function Digital Input].	F (1 - 1FF)
F3-22 (0BEF) Expert	Terminal DC Function Selection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the function for terminal DC of the DI-A3 option when $F3-01 = 8$ [Digital Input Function Selection = Multi-Function Digital Input].	F (1 - 1FF)
F3-23 (0BF0) Expert	Terminal DD Function Selection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the function for terminal DD of the DI-A3 option when $F3-01 = 8$ [Digital Input Function Selection = Multi-Function Digital Input].	F (1 - 1FF)
F3-24 (0BF1) Expert	Terminal DE Function Selection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the function for terminal DE of the DI-A3 option when $F3-01 = 8$ [Digital Input Function Selection = Multi-Function Digital Input].	F (1 - 1FF)
F3-25 (0BF2) Expert	Terminal DF Function Selection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the function for terminal DF of the DI-A3 option when $F3-01 = 8$ [Digital Input Function Selection = Multi-Function Digital Input].	F (1 - 1FF)

### ◆ F4: Analog Monitor Option

No. (Hex.)	Name	Description	Default (Range)
F4-01 (0391)	Terminal V1 Function Selection	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the monitor signal output from terminal V1. Set the x-xx part of the Ux-xx [Monitor]. For example, set F4-01 = 102 to monitor U1-02 [Output Frequency].</p>	102 (000 - 1299)
F4-02 (0392) RUN	Terminal V1 Gain	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the gain of the monitor signal that is sent from terminal V1. Sets the analog signal output level from the terminal V1 at 10 V or 20 mA as 100% when an output for monitoring items is 100%.</p>	100.0% (-999.9 - +999.9%)
F4-03 (0393)	Terminal V2 Function Selection	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the monitor signal output from terminal V2. Set the x-xx part of the Ux-xx [Monitor]. For example, set F4-03 = 103 to monitor U1-03 [Output Current].</p>	103 (000 - 1299)
F4-04 (0394) RUN	Terminal V2 Gain	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the gain of the monitor signal that is sent from terminal V2. Sets the analog signal output level from terminal V2 at 10 V or 20 mA as 100% when an output for monitoring items is 100%.</p>	50.0% (-999.9 - +999.9%)
F4-05 (0395) RUN	Terminal V1 Bias	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the bias of the monitor signal that is sent from terminal V1. When an output for monitoring items is 0%, this parameter sets the analog signal output level from the V1 terminal as a percentage of 10 V or 20 mA.</p>	0.0% (-999.9 - +999.9%)
F4-06 (0396) RUN	Terminal V2 Bias	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the bias of the monitor signal that is sent from terminal V2. Set the level of the analog signal sent from the V2 terminal at 10 V or 20 mA as 100% when an output for monitoring items is 0%.</p>	0.0% (-999.9 - +999.9%)
F4-07 (0397)	Terminal V1 Signal Level	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the output signal level for terminal V1. 0 : 0 to 10 V 1 : -10 to 10 V</p>	0 (0, 1)
F4-08 (0398)	Terminal V2 Signal Level	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the output signal level for terminal V2. 0 : 0 to 10 V 1 : -10 to 10 V</p>	0 (0, 1)

### ◆ F5: Digital Output Option

No. (Hex.)	Name	Description	Default (Range)
F5-01 (0399)	Terminal P1-PC Function Select	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the function of terminal P1-PC on the DO-A3 option. Set F5-09 = 2 [DO-A3 Output Mode Selection = Programmable (F5-01 to F5-08)] to enable this function.</p>	0 (0 - 1FF)
F5-02 (039A)	Terminal P2-PC Function Select	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the function of terminal P2-PC on the DO-A3 option. Set F5-09 = 2 [DO-A3 Output Mode Selection = Programmable (F5-01 to F5-08)] to enable this function.</p>	1 (0 - 1FF)
F5-03 (039B)	Terminal P3-PC Function Select	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the function of terminal P3-PC on the DO-A3 option. Set F5-09 = 2 [DO-A3 Output Mode Selection = Programmable (F5-01 to F5-08)] to enable this function.</p>	2 (0 - 1FF)
F5-04 (039C)	Terminal P4-PC Function Select	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the function of terminal P4-PC on the DO-A3 option. Set F5-09 = 2 [DO-A3 Output Mode Selection = Programmable (F5-01 to F5-08)] to enable this function.</p>	4 (0 - 1FF)
F5-05 (039D)	Terminal P5-PC Function Select	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the function of terminal P5-PC on the DO-A3 option. Set F5-09 = 2 [DO-A3 Output Mode Selection = Programmable (F5-01 to F5-08)] to enable this function.</p>	6 (0 - 1FF)
F5-06 (039E)	Terminal P6-PC Function Select	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the function of terminal P6-PC on the DO-A3 option. Set F5-09 = 2 [DO-A3 Output Mode Selection = Programmable (F5-01 to F5-08)] to enable this function.</p>	37 (0 - 1FF)
F5-07 (039F)	Terminal M1-M2 Function Select	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the function of terminal M3-M2 on the DO-A3 option. Set F5-09 = 2 [DO-A3 Output Mode Selection = Programmable (F5-01 to F5-08)] to enable this function.</p>	F (0 - 1FF)

No. (Hex.)	Name	Description	Default (Range)
F5-08 (03A0)	Terminal M3-M4 Function Select	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the function of terminal M3-M4 on the DO-A3 option. Set $F5-09 = 2$ [DO-A3 Output Mode Selection = Programmable (F5-01 to F5-08)] to enable this function.	F (0 - 1FF)
F5-09 (03A1)	DO-A3 Output Mode Selection	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the output mode of signals from the DO-A3 option. 0 : Predefined Individual Outputs 1 : Binary Output 2 : Programmable (F5-01 to F5-08)	0 (0 - 2)

## ◆ F6: Communication Options

No. (Hex.)	Name	Description	Default (Range)
F6-01 (03A2)	Communication Error Selection	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the method to stop the motor or let the motor continue operating when the drive detects <i>bUS</i> [Option Communication Error]. 0 : Ramp to Stop 1 : Coast to Stop 2 : Fast Stop (Use C1-09) 3 : Alarm Only 4 : Alarm (Run at d1-04) 5 : Alarm - Ramp Stop	1 (0 - 5)
F6-02 (03A3)	Comm External Fault (EF0) Detect	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the conditions at which <i>EF0</i> [Option Card External Fault] is detected. 0 : Always Detected 1 : Detected during RUN Only	0 (0, 1)
F6-03 (03A4)	Comm External Fault (EF0) Select	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the method to stop the motor or let the motor continue operating when the drive detects an <i>EF0</i> [Option Card External Fault]. 0 : Ramp to Stop 1 : Coast to Stop 2 : Fast Stop (Use C1-09) 3 : Alarm Only	1 (0 - 3)
F6-04 (03A5)	bUS Error Detection Time	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the delay time for the drive to detect <i>bUS</i> [Option Communication Error]. <b>Note:</b> When you install an option card in the drive, the parameter value changes to 0.0 s.	2.0 s (0.0 - 5.0 s)
F6-06 (03A7)	Torque Reference/Limit by Comm	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the function that enables and disables the torque reference and torque limit received from the communication option. 0 : Disabled 1 : Enabled	0 (0, 1)
F6-07 (03A8)	Multi-Step Ref @ NetRef/ ComRef	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the function that enables and disables the multi-step speed reference when the frequency reference source is NetRef or ComRef (communication option card or MEMOBUS/Modbus communications). 0 : Disable Multi-Step References 1 : Enable Multi-Step References	0 (0, 1)
F6-08 (036A)	Comm Parameter Reset @Initialize	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the function to initialize <i>F6-xx</i> and <i>F7-xx</i> parameters when the drive is initialized with <i>A1-03</i> [Initialize Parameters]. 0 : No Reset - Parameters Retained 1 : Reset Back to Factory Default	0 (0, 1)
F6-14 (03BB)	BUS Error Auto Reset	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the automatic reset function for <i>bUS</i> [Option Communication Errors]. 0 : Disable 1 : Enabled	0 (0, 1)
F6-15 (0B5B)	Comm. Option Parameters Reload	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the update method when you change <i>F6-xx</i> , <i>F7-xx</i> [Communication Options]. 0 : Reload at Next Power Cycle 1 : Reload Now 2 : Cancel Reload Request	0 (0 - 2)

### 3.9 F: Options

No. (Hex.)	Name	Description	Default (Range)
F6-16 (0B8A)	Gateway Mode	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the gateway mode operation and the number of connected slave drives.</p> <p>0 : Disabled            1 : Enabled: 1 Slave Drives            2 : Enabled: 2 Slave Drives            3 : Enabled: 3 Slave Drives            4 : Enabled: 4 Slave Drives</p>	0 (0 to 4)
F6-30 (03CB)	PROFIBUS-DP Node Address	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the node address for PROFIBUS-DP communication. Restart the drive after you change the parameter setting.</p> <p><b>Note:</b>            Be sure to set an address that is different than all other node addresses. Do not set this parameter to 0.</p>	0 (0 - 125)
F6-31 (03CC)	PROFIBUS-DP Clear Mode Selection	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets what the drive will do after it receives the Clear Mode command.</p> <p>0 : Reset            1 : Hold Previous State</p>	0 (0, 1)
F6-32 (03CD)	PROFIBUS-DP Data Format Select	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the data format of PROFIBUS-DP communication. Restart the drive after you change the parameter setting.</p> <p>0 : PPO Type            1 : Conventional            2 : PPO (bit0)            3 : PPO (Enter)            4 : Conventional (Enter)            5 : PPO (bit0, Enter)</p>	0 (0 - 5)
F6-35 (03D0)	CANopen Node ID Selection	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the node address for CANopen communication. Restart the drive after you change the parameter setting.</p> <p><b>Note:</b>            Be sure to set an address that is different than all other node addresses. Do not set this parameter to 0. Incorrect parameter settings will cause <i>AEr</i> [Station Address Setting Error] errors and the L.ERR LED on the option will come on.</p>	0 (0 - 126)
F6-36 (03D1)	CANopen Communication Speed	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the CANopen communications speed. Restart the drive after you change the parameter setting.</p> <p>0 : Auto-detection            1 : 10 kbps            2 : 20 kbps            3 : 50 kbps            4 : 125 kbps            5 : 250 kbps            6 : 500 kbps            7 : 800 kbps            8 : 1 Mbps</p>	6 (0 - 8)
F6-45 (02FB)	BACnet Node Address	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the node address for BACnet communication.</p> <p><b>Note:</b>            Be sure to set an address that is different than all other node addresses. Do not set this parameter to 0.</p>	1 (0 - 127)
F6-46 (02FC)	BACnet Baud Rate	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the BACnet communications speed.</p> <p>0 : 1200 bps            1 : 2400 bps            2 : 4800 bps            3 : 9600 bps            4 : 19.2 kbps            5 : 38.4 kbps            6 : 57.6 kbps            7 : 76.8 kbps            8 : 115.2 kbps</p>	3 (0 - 8)
F6-47 (02FD)	Rx to Tx Wait Time	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the wait time for the drive to receive and send BACnet communication.</p>	5 ms (5 - 65 ms)
F6-48 (02FE)	BACnet Device Object Identifier0	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the last word of BACnet communication addresses.</p>	0 (0 - FFFF)

No. (Hex.)	Name	Description	Default (Range)
F6-49 (02FF)	BACnet Device Object Identifier1	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the last word of BACnet communication addresses.	0 (0 - 3F)
F6-50 (03C1)	DeviceNet MAC Address	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the MAC address for DeviceNet communication. Restart the drive after you change the parameter setting. <b>Note:</b> Be sure to set a MAC address that is different than all other node addresses. Do not set this parameter to 0. Incorrect parameter settings will cause <i>AEr</i> [Station Address Setting Error] errors and the MS LED on the option will flash.	64 (0 - 64)
F6-51 (03C2)	DeviceNet Baud Rate	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the DeviceNet communications speed. Restart the drive after you change the parameter setting. 0 : 125 kbps 1 : 250 kbps 2 : 500 kbps 3 : Adjustable from Network 4 : Detect Automatically	4 (0 - 4)
F6-52 (03C3)	DeviceNet PCA Setting	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the format of data that the DeviceNet communication master sends to the drive.	21 (0 - 255)
F6-53 (03C4)	DeviceNet PPA Setting	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the format of data that the drive sends to the DeviceNet communication master.	71 (0 - 255)
F6-54 (03C5)	DeviceNet Idle Fault Detection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the function to detect <i>EF0</i> [Option Card External Fault] when the drive does not receive data from the DeviceNet master. 0 : Enabled 1 : Disabled, No Fault Detection 2 : Vendor Specific 3 : RUN Forward 4 : Reverse run	0 (0 - 4)
F6-55 (03C6)	DeviceNet Baud Rate Monitor	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the function to see the actual DeviceNet communications speed using the keypad. This parameter functions as a monitor only. 0 : 125 kbps 1 : 250 kbps 2 : 500 kbps	0 (0 - 2)
F6-56 (03D7)	DeviceNet Speed Scaling	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the speed scale for DeviceNet communication.	0 (-15 - +15)
F6-57 (03D8)	DeviceNet Current Scaling	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the current scale of the DeviceNet communication master.	0 (-15 - +15)
F6-58 (03D9)	DeviceNet Torque Scaling	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the torque scale of the DeviceNet communication master.	0 (-15 - +15)
F6-59 (03DA)	DeviceNet Power Scaling	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the power scale of the DeviceNet communication master.	0 (-15 - +15)
F6-60 (03DB)	DeviceNet Voltage Scaling	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the voltage scale of the DeviceNet communication master.	0 (-15 - +15)
F6-61 (03DC)	DeviceNet Time Scaling	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the time scale of the DeviceNet communication master.	0 (-15 - +15)
F6-62 (03DD)	DeviceNet Heartbeat Interval	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the heartbeat for DeviceNet communication. Set this parameter to 0 to disable the heartbeat function.	0 (0 - 10)
F6-63 (03DE)	DeviceNet Network MAC ID	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the function to see the actual DeviceNet MAC address using the keypad. This parameter functions as a monitor only.	63 (0 - 63)
F6-64 (03DF)	Dynamic Out Assembly 109 Param1	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets Configurable Output 1 written to the MEMOBUS register.	0000H (0000H - FFFFH)
F6-65 (03E0)	Dynamic Out Assembly 109 Param2	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets Configurable Output 2 written to the MEMOBUS register.	0000H (0000H - FFFFH)
F6-66 (03E1)	Dynamic Out Assembly 109 Param3	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets Configurable Output 3 written to the MEMOBUS register.	0000H (0000H - FFFFH)
F6-67 (03E2)	Dynamic Out Assembly 109 Param4	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets Configurable Output 4 written to the MEMOBUS register.	0000H (0000H - FFFFH)

### 3.9 F: Options

No. (Hex.)	Name	Description	Default (Range)
F6-68 (03E3)	Dynamic In Assembly 159 Param 1	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets Configurable Input 1 read from the MEMOBUS register.	0000H (0000H - FFFFH)
F6-69 (03E4)	Dynamic In Assembly 159 Param 2	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets Configurable Input 2 read from the MEMOBUS register.	0000H (0000H - FFFFH)
F6-70 (03C7)	Dynamic In Assembly 159 Param 3	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets Configurable Input 3 read from the MEMOBUS register.	0000H (0000H - FFFFH)
F6-71 (03C8)	Dynamic In Assembly 159 Param 4	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets Configurable Input 4 read from the MEMOBUS register.	0000H (0000H - FFFFH)
F6-75 (0B20)	Protocol Selection	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the protocol for the SI-J3 option card. 1 : N2 (Metasys) 2 : P1 (APOGEE FLN)	2 (1, 2)
F6-76 (0B21)	P1/N2 Communications Fault	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Enables and disables <i>bUS [Option Communication Error]</i> fault detection for the SI-J3 option card. 0 : Disabled 1 : Enabled	1 (0, 1)
F6-77 (0B22)	P1/N2 Fault Time	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the length of time before the drive will clear a <i>bUS [Option Communication Error]</i> fault for the SI-J3 option card.	2.0 s (0.0 - 10.0 s)
F6-78 (0B23)	P1/N2 Address	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the network node address for the SI-J3 option card.	1 (0 - 255)
F6-79 (0B24)	Baud Rate for P1	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the baud rate for the P1 protocol with the SI-J3 option card. 2 : 4800 bps 3 : 9600 bps	3 (2, 3)

### ◆ F7: Ethernet Options

No. (Hex.)	Name	Description	Default (Range)
F7-01 (03E5)	IP Address 1	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the first octet of the IP Address for the device that is connecting to the network. Restart the drive after you change this parameter. <b>Note:</b> When <i>F7-13 = 0 [Address Mode at Startup = Static]</i> : • Use parameters <i>F7-01 to F7-04 [IP Address 1 to 4]</i> to set the IP Address. Be sure to set a different IP address for each drive on the network. • Also set parameters <i>F7-05 to F7-12 [Subnet Mask 1 to 4, Gateway Address 1 to 4]</i> .	192 (0 - 255)
F7-02 (03E6)	IP Address 2	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the second octet of the IP Address for the device that is connecting to the network. Restart the drive after you change this parameter. <b>Note:</b> When <i>F7-13 = 0 [Address Mode at Startup = Static]</i> : • Use parameters <i>F7-01 to F7-04 [IP Address 1 to 4]</i> to set the IP Address. Be sure to set a different IP address for each drive on the network. • Also set parameters <i>F7-05 to F7-12 [Subnet Mask 1 to 4, Gateway Address 1 to 4]</i> .	168 (0 - 255)
F7-03 (03E7)	IP Address 3	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the third octet of the IP Address for the device that is connecting to the network. Restart the drive after you change this parameter. <b>Note:</b> When <i>F7-13 = 0 [Address Mode at Startup = Static]</i> : • Use parameters <i>F7-01 to F7-04 [IP Address 1 to 4]</i> to set the IP Address. Be sure to set a different IP address for each drive on the network. • Also set parameters <i>F7-05 to F7-12 [Subnet Mask 1 to 4, Gateway Address 1 to 4]</i> .	1 (0 - 255)
F7-04 (03E8)	IP Address 4	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the fourth octet of the IP Address for the device that is connecting to the network. Restart the drive after you change this parameter. <b>Note:</b> When <i>F7-13 = 0 [Address Mode at Startup = Static]</i> : • Use parameters <i>F7-01 to F7-04 [IP Address 1 to 4]</i> to set the IP Address. Be sure to set a different IP address for each drive on the network. • Also set parameters <i>F7-05 to F7-12 [Subnet Mask 1 to 4, Gateway Address 1 to 4]</i> .	20 (0 - 255)

No. (Hex.)	Name	Description	Default (Range)
F7-05 (03E9)	Subnet Mask 1	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the first octet of the subnet mask of the connected network. <b>Note:</b> Set this parameter when $F7-13 = 0$ [Address Mode at Startup = Static].	255 (0 - 255)
F7-06 (03EA)	Subnet Mask 2	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the second octet of the subnet mask of the connected network. <b>Note:</b> Set this parameter when $F7-13 = 0$ [Address Mode at Startup = Static].	255 (0 - 255)
F7-07 (03EB)	Subnet Mask 3	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the third octet of the subnet mask of the connected network. <b>Note:</b> Set this parameter when $F7-13 = 0$ [Address Mode at Startup = Static].	255 (0 - 255)
F7-08 (03EC)	Subnet Mask 4	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the fourth octet of the subnet mask of the connected network. <b>Note:</b> Set this parameter when $F7-13 = 0$ [Address Mode at Startup = Static].	0 (0 - 255)
F7-09 (03ED)	Gateway Address 1	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the first octet of the gateway address of the connected network. <b>Note:</b> Set this parameter when $F7-13 = 0$ [Address Mode at Startup = Static].	192 (0 - 255)
F7-10 (03EE)	Gateway Address 2	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the second octet of the gateway address of the connected network. <b>Note:</b> Set this parameter when $F7-13 = 0$ [Address Mode at Startup = Static].	168 (0 - 255)
F7-11 (03EF)	Gateway Address 3	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the third octet of the gateway address of the connected network. <b>Note:</b> Set this parameter when $F7-13 = 0$ [Address Mode at Startup = Static].	1 (0 - 255)
F7-12 (03F0)	Gateway Address 4	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the fourth octet of the gateway address of the connected network. <b>Note:</b> Set this parameter when $F7-13 = 0$ [Address Mode at Startup = Static].	1 (0 - 255)
F7-13 (03F1)	Address Mode at Startup	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the method to set option card IP addresses. 0 : Static 1 : BOOTP 2 : DHCP <b>Note:</b> • The following setting values are available when using the PROFINET communication option card (SI-EP3). -0: Static -2: DHCP • When $F7-13 = 0$ , set parameters $F7-01$ to $F7-12$ [IP Address 1 to Gateway Address 4] to set the IP Address. Be sure to set a different IP address for each drive on the network.	2 (0 - 2)
F7-14 (03F2)	Duplex Mode Selection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the duplex mode setting method. 0 : Half/Half 1 : Auto/Auto 2 : Full/Full 3 : Half/Auto 4 : Half/Full 5 : Auto/Half 6 : Auto/Full 7 : Full/Half 8 : Full/Auto	1 (0 - 8)
F7-15 (03F3)	Communication Speed Selection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the communications speed. 10 : 10/10 Mbps 100 : 100/100 Mbps 101 : 10/100 Mbps 102 : 100/10 Mbps	10 (10, 100 - 102)

### 3.9 F: Options

No. (Hex.)	Name	Description	Default (Range)
F7-16 (03F4)	Timeout Value	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>Sets the detection time for a communications timeout.</p> <p><b>Note:</b> Set this parameter to 0.0 to disable the connection timeout function.</p>	0.0 s (0.0 - 30.0 s)
F7-17 (03F5)	EtherNet/IP Speed Scaling Factor	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>Sets the scaling factor for the speed monitor in the EtherNet/IP Class ID 2AH Object.</p>	0 (-15 - +15)
F7-18 (03F6)	EtherNet/IP Current Scale Factor	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>Sets the scaling factor for the output current monitor in the EtherNet/IP Class ID 2AH Object.</p>	0 (-15 - +15)
F7-19 (03F7)	EtherNet/IP Torque Scale Factor	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>Sets the scaling factor for the torque monitor in the EtherNet/IP Class ID 2AH Object.</p>	0 (-15 - +15)
F7-20 (03F8)	EtherNet/IP Power Scaling Factor	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>Sets the scaling factor for the power monitor in the EtherNet/IP Class ID 2AH Object.</p>	0 (-15 - +15)
F7-21 (03F9)	EtherNet/IP Voltage Scale Factor	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>Sets the scaling factor for the voltage monitor in the EtherNet/IP Class ID 2AH Object.</p>	0 (-15 - +15)
F7-22 (03FA)	EtherNet/IP Time Scaling	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>Sets the scaling factor for the time monitor in the EtherNet/IP Class ID 2AH Object.</p>	0 (-15 - +15)
F7-23 (03FB)	Dynamic Out Param 1 for CommCard	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>When you use an Ethernet/IP option, sets Output Assembly 116. The drive writes the values from Output Assembly 116 to the MEMOBUS/Modbus address register that is stored for each parameter. The drive will not write the values from Output Assembly 116 to the registers when the MEMOBUS/Modbus address is 0. When you use a PROFINET option, set this parameter to set to configurable output 1.</p>	0
F7-24 (03FC)	Dynamic Out Param 2 for CommCard	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>When you use an Ethernet/IP option, sets Output Assembly 116. The drive writes the values from Output Assembly 116 to the MEMOBUS/Modbus address register that is stored for each parameter. The drive will not write the values from Output Assembly 116 to the registers when the MEMOBUS/Modbus address is 0. When you use a PROFINET option, set this parameter to set to configurable output 2.</p>	0
F7-25 (03FD)	Dynamic Out Param 3 for CommCard	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>When you use an Ethernet/IP option, sets Output Assembly 116. The drive writes the values from Output Assembly 116 to the MEMOBUS/Modbus address register that is stored for each parameter. The drive will not write the values from Output Assembly 116 to the registers when the MEMOBUS/Modbus address is 0. When you use a PROFINET option, set this parameter to set to configurable output 3.</p>	0
F7-26 (03FE)	Dynamic Out Param 4 for CommCard	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>Sets Output Assembly 116 when you use an Ethernet/IP option. The drive writes the values from Output Assembly 116 to the MEMOBUS/Modbus address register that is stored for each parameter. The drive will not write the values from Output Assembly 116 to the registers when the MEMOBUS/Modbus address is 0. When you use a ProfiNet option, set this parameter to set to configurable output 4.</p>	0
F7-27 (03FF)	Dynamic Out Param 5 for CommCard	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>When you use an Ethernet/IP option, sets Output Assembly 116. The drive writes the values from Output Assembly 116 to the MEMOBUS/Modbus address register that is stored for each parameter. The drive will not write the values from Output Assembly 116 to the registers when the MEMOBUS/Modbus address is 0. When you use a PROFINET option, set this parameter to set to configurable output 5.</p>	0
F7-28 (0370)	Dynamic Out Param 6 for CommCard	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>When you use an Ethernet/IP option, sets Output Assembly 116. The drive writes the values from Output Assembly 116 to the MEMOBUS/Modbus address register that is stored for each parameter. The drive will not write the values from Output Assembly 116 to the registers when the MEMOBUS/Modbus address is 0.</p>	0
F7-29 (0371)	Dynamic Out Param 7 for CommCard	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>When you use an Ethernet/IP option, sets Output Assembly 116. The drive writes the values from Output Assembly 116 to the MEMOBUS/Modbus address register that is stored for each parameter. The drive will not write the values from Output Assembly 116 to the registers when the MEMOBUS/Modbus address is 0.</p>	0
F7-30 (0372)	Dynamic Out Param 8 for CommCard	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>When you use an Ethernet/IP option, sets Output Assembly 116. The drive writes the values from Output Assembly 116 to the MEMOBUS/Modbus address register that is stored for each parameter. The drive will not write the values from Output Assembly 116 to the registers when the MEMOBUS/Modbus address is 0.</p>	0
F7-31 (0373)	Dynamic Out Param 9 for CommCard	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>When you use an Ethernet/IP option, sets Output Assembly 116. The drive writes the values from Output Assembly 116 to the MEMOBUS/Modbus address register that is stored for each parameter. The drive will not write the values from Output Assembly 116 to the registers when the MEMOBUS/Modbus address is 0.</p>	0

No. (Hex.)	Name	Description	Default (Range)
F7-32 (0374)	Dynamic Out Param 10 for CommCard	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> When you use an Ethernet/IP option, sets Output Assembly 116. The drive writes the values from Output Assembly 116 to the MEMOBUS/Modbus address register that is stored for each parameter. The drive will not write the values from Output Assembly 116 to the registers when the MEMOBUS/Modbus address is 0.	0
F7-33 (0375)	Dynamic In Param 1 for CommCard	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets Input Assembly 166 when you use an Ethernet/IP option. The drive sends the values from the MEMOBUS/Modbus address registers stored for each parameter to Input Assembly 166. The drive returns the default register value for the option card when the MEMOBUS/Modbus address is 0 and the value sent to Input Assembly 166 is not defined. When you use a ProfiNet option, set this parameter to set to configurable input 1.	0
F7-34 (0376)	Dynamic In Param 2 for CommCard	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets Input Assembly 166 when you use an Ethernet/IP option. The drive sends the values from the MEMOBUS/Modbus address registers stored for each parameter to Input Assembly 166. The drive returns the default register value for the option card when the MEMOBUS/Modbus address is 0 and the value sent to Input Assembly 166 is not defined. When you use a ProfiNet option, set this parameter to set to configurable input 2.	0
F7-35 (0377)	Dynamic In Param 3 for CommCard	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets Input Assembly 166 when you use an Ethernet/IP option. The drive sends the values from the MEMOBUS/Modbus address registers stored for each parameter to Input Assembly 166. The drive returns the default register value for the option card when the MEMOBUS/Modbus address is 0 and the value sent to Input Assembly 166 is not defined. When you use a ProfiNet option, set this parameter to set to configurable input 3.	0
F7-36 (0378)	Dynamic In Param 4 for CommCard	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets Input Assembly 166 when you use an Ethernet/IP option. The drive sends the values from the MEMOBUS/Modbus address registers stored for each parameter to Input Assembly 166. The drive returns the default register value for the option card when the MEMOBUS/Modbus address is 0 and the value sent to Input Assembly 166 is not defined. When you use a ProfiNet option, set this parameter to set to configurable input 4.	0
F7-37 (0379)	Dynamic In Param 5 for CommCard	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets Input Assembly 166 when you use an Ethernet/IP option. The drive sends the values from the MEMOBUS/Modbus address registers stored for each parameter to Input Assembly 166. The drive returns the default register value for the option card when the MEMOBUS/Modbus address is 0 and the value sent to Input Assembly 166 is not defined. When you use a ProfiNet option, set this parameter to set to configurable input 5.	0
F7-38 (037A)	Dynamic In Param 6 for CommCard	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets Input Assembly 166 when you use an Ethernet/IP option. The drive sends the values from the MEMOBUS/Modbus address registers stored for each parameter to Input Assembly 166. The drive returns the default register value for the option card when the MEMOBUS/Modbus address is 0 and the value sent to Input Assembly 166 is not defined.	0
F7-39 (037B)	Dynamic In Param 7 for CommCard	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets Input Assembly 166 when you use an Ethernet/IP option. The drive sends the values from the MEMOBUS/Modbus address registers stored for each parameter to Input Assembly 166. The drive returns the default register value for the option card when the MEMOBUS/Modbus address is 0 and the value sent to Input Assembly 166 is not defined.	0
F7-40 (037C)	Dynamic In Param 8 for CommCard	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets Input Assembly 166 when you use an Ethernet/IP option. The drive sends the values from the MEMOBUS/Modbus address registers stored for each parameter to Input Assembly 166. The drive returns the default register value for the option card when the MEMOBUS/Modbus address is 0 and the value sent to Input Assembly 166 is not defined.	0
F7-41 (037D)	Dynamic In Param 9 for CommCard	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets Input Assembly 166 when you use an Ethernet/IP option. The drive sends the values from the MEMOBUS/Modbus address registers stored for each parameter to Input Assembly 166. The drive returns the default register value for the option card when the MEMOBUS/Modbus address is 0 and the value sent to Input Assembly 166 is not defined.	0
F7-42 (037E)	Dynamic In Param 10 for CommCard	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets Input Assembly 166 when you use an Ethernet/IP option. The drive sends the values from the MEMOBUS/Modbus address registers stored for each parameter to Input Assembly 166. The drive returns the default register value for the option card when the MEMOBUS/Modbus address is 0 and the value sent to Input Assembly 166 is not defined.	0
F7-60 (0780)	PZD1 Write (Control Word)	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> When you use a Profibus option, set the MEMOBUS/Modbus address for PZD1 (PPO output). PZD1 (PPO output) functions as the STW when <i>F7-60 = 0 to 2</i> .	0
F7-61 (0781)	PZD2 Write (Frequency Reference)	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD2 (PPO output). PZD2 (PPO output) functions as the HSW when <i>F7-61 = 0 to 2</i> .	0
F7-62 (0782)	PZD3 Write	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD3 (PPO output). A value of 0, 1, or 2 will disable the PZD3 (PPO output) write operation to the MEMOBUS/Modbus register.	0

### 3.9 F: Options

No. (Hex.)	Name	Description	Default (Range)
F7-63 (0783)	PZD4 Write	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD4 (PPO output). A value of 0, 1, or 2 will disable the PZD4 (PPO output) write operation to the MEMOBUS/Modbus register.	0
F7-64 (0784)	PZD5 Write	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD5 (PPO output). A value of 0, 1, or 2 will disable the PZD5 (PPO output) write operation to the MEMOBUS/Modbus register.	0
F7-65 (0785)	PZD6 Write	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD6 (PPO output). A value of 0, 1, or 2 will disable the PZD6 (PPO output) write operation to the MEMOBUS/Modbus register.	0
F7-66 (0786)	PZD7 Write	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD7 (PPO output). A value of 0, 1, or 2 will disable the PZD7 (PPO output) write operation to the MEMOBUS/Modbus register.	0
F7-67 (0787)	PZD8 Write	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD8 (PPO output). A value of 0, 1, or 2 will disable the PZD8 (PPO output) write operation to the MEMOBUS/Modbus register.	0
F7-68 (0788)	PZD9 Write	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD9 (PPO output). A value of 0, 1, or 2 will disable the PZD9 (PPO output) write operation to the MEMOBUS/Modbus register.	0
F7-69 (0789)	PZD10 Write	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD10 (PPO output). A value of 0, 1, or 2 will disable the PZD10 (PPO output) write operation to the MEMOBUS/Modbus register.	0
F7-70 (078A)	PZD1 Read (Status Word)	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD1 (PPO input). PZD1 (PPO input) functions as the ZSW when <i>F7-70 = 0</i> .	0
F7-71 (078B)	PZD2 Read (Output Frequency)	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD2 (PPO input). PZD2 (PPO input) functions as the HIW when <i>F7-71 = 0</i> .	0
F7-72 (078C)	PZD3 Read	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD3 (PPO input). A value of 0 will disable the PZD3 (PPO input) load operation from the MEMOBUS/Modbus register.	0
F7-73 (078D)	PZD4 Read	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD4 (PPO input). A value of 0 will disable the PZD4 (PPO input) load operation from the MEMOBUS/Modbus register.	0
F7-74 (078E)	PZD5 Read	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD5 (PPO input). A value of 0 will disable the PZD5 (PPO input) load operation from the MEMOBUS/Modbus register.	0
F7-75 (078F)	PZD6 Read	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD6 (PPO input). A value of 0 will disable the PZD6 (PPO input) load operation from the MEMOBUS/Modbus register.	0
F7-76 (0790)	PZD7 Read	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD7 (PPO input). A value of 0 will disable the PZD7 (PPO input) load operation from the MEMOBUS/Modbus register.	0
F7-77 (0791)	PZD8 Read	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD8 (PPO input). A value of 0 will disable the PZD8 (PPO input) load operation from the MEMOBUS/Modbus register.	0
F7-78 (0792)	PZD9 Read	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD9 (PPO input). A value of 0 will disable the PZD9 (PPO input) load operation from the MEMOBUS/Modbus register.	0
F7-79 (0793)	PZD10 Read	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD10 (PPO input). A value of 0 will disable the PZD10 (PPO input) load operation from the MEMOBUS/Modbus register.	0

## 3.10 H: Terminal Functions

### ◆ H1: Digital Inputs

No. (Hex.)	Name	Description	Default (Range)
H1-01 (0438)	Terminal S1 Function Selection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the function for MFDI terminal S1. <b>Note:</b> The default setting is <i>F</i> when you initialize the drive for <i>3-Wire Initialization</i> [A1-03 = 3330].	40 (1 - 1FF)
H1-02 (0439)	Terminal S2 Function Selection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the function for MFDI terminal S2. <b>Note:</b> The default setting is <i>F</i> when you initialize the drive for <i>3-Wire Initialization</i> [A1-03 = 3330].	41 (1 - 1FF)
H1-03 (0400)	Terminal S3 Function Selection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the function for MFDI terminal S3.	24 (0 - 1FF)
H1-04 (0401)	Terminal S4 Function Selection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the function for MFDI terminal S4.	14 (0 - 1FF)
H1-05 (0402)	Terminal S5 Function Selection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the function for MFDI terminal S5. <b>Note:</b> The default setting is <i>0</i> when the drive is initialized for <i>3-Wire Initialization</i> [A1-03 = 3330].	3 (0 - 1FF)
H1-06 (0403)	Terminal S6 Function Selection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the function for MFDI terminal S6. <b>Note:</b> The default setting is <i>3</i> when the drive is initialized for <i>3-Wire Initialization</i> [A1-03 = 3330].	4 (0 - 1FF)
H1-07 (0404)	Terminal S7 Function Selection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the function for MFDI terminal S7. <b>Note:</b> The default setting is <i>4</i> when the drive is initialized for <i>3-Wire Initialization</i> [A1-03 = 3330].	6 (0 - 1FF)
H1-08 (0405)	Terminal S8 Function Selection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the function for MFDI terminal S8.	8 (0 - 1FF)
H1-40 (0B54)	Mbus Reg 15C0h bit0 Input Func	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the MFDI function assigned to <i>bit 0</i> of the MEMOBUS register <i>15C0</i> (Hex.).	F (1 - 1FF)
H1-41 (0B55)	Mbus Reg 15C0h bit1 Input Func	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the MFDI function assigned to <i>bit 1</i> of the MEMOBUS register <i>15C0</i> (Hex.).	F (1 - 1FF)
H1-42 (0B56)	Mbus Reg 15C0h bit2 Input Func	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the MFDI function assigned to <i>bit 2</i> of the MEMOBUS register <i>15C0</i> (Hex.).	F (1 - 1FF)
H1-61 (39E1) RUN	Terminal S1 On-Delay Time	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the length of time necessary for Terminal S1 to be closed before the drive does the programmed function.	0.00 s (0.00 - 300.00 s)
H1-62 (39E2) RUN	Terminal S2 On-Delay Time	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the length of time necessary for Terminal S2 to be closed before the drive does the programmed function.	0.00 s (0.00 - 300.00 s)
H1-63 (39E3) RUN	Terminal S3 On-Delay Time	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the length of time necessary for Terminal S3 to be closed before the drive does the programmed function.	0.00 s (0.00 - 300.00 s)
H1-64 (39E4) RUN	Terminal S4 On-Delay Time	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the length of time necessary for Terminal S4 to be closed before the drive does the programmed function.	0.00 s (0.00 - 300.00 s)
H1-65 (39E5) RUN	Terminal S5 On-Delay Time	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the length of time necessary for Terminal S5 to be closed before the drive does the programmed function.	0.00 s (0.00 - 300.00 s)
H1-66 (39E6) RUN	Terminal S6 On-Delay Time	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the length of time necessary for Terminal S6 to be closed before the drive does the programmed function.	0.00 s (0.00 - 300.00 s)

### 3.10 H: Terminal Functions

No. (Hex.)	Name	Description	Default (Range)
H1-67 (39E7) RUN	Terminal S7 On-Delay Time	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the length of time necessary for Terminal S7 to be closed before the drive does the programmed function.	0.00 s (0.00 - 300.00 s)
H1-68 (39E8) RUN	Terminal S8 On-Delay Time	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the length of time necessary for Terminal S8 to be closed before the drive does the programmed function.	0.00 s (0.00 - 300.00 s)
H1-71 (39EB) RUN	Terminal S1 Off-Delay Time	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the length of time necessary for Terminal S1 to be open before the drive removes the programmed function.	0.00 s (0.00 - 300.00 s)
H1-72 (39EC) RUN	Terminal S2 Off-Delay Time	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the length of time necessary for Terminal S2 to be open before the drive removes the programmed function.	0.00 s (0.00 - 300.00 s)
H1-73 (39ED) RUN	Terminal S3 Off-Delay Time	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the length of time necessary for Terminal S3 to be open before the drive removes the programmed function.	0.00 s (0.00 - 300.00 s)
H1-74 (39EE) RUN	Terminal S4 Off-Delay Time	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the length of time necessary for Terminal S4 to be open before the drive removes the programmed function.	0.00 s (0.00 - 300.00 s)
H1-75 (39EF) RUN	Terminal S5 Off-Delay Time	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the length of time necessary for Terminal S5 to be open before the drive removes the programmed function.	0.00 s (0.00 - 300.00 s)
H1-76 (39F0) RUN	Terminal S6 Off-Delay Time	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the length of time necessary for Terminal S6 to be open before the drive removes the programmed function.	0.00 s (0.00 - 300.00 s)
H1-77 (39F1) RUN	Terminal S7 Off-Delay Time	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the length of time necessary for Terminal S7 to be open before the drive removes the programmed function.	0.00 s (0.00 - 300.00 s)
H1-78 (39F2) RUN	Terminal S8 Off-Delay Time	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the length of time necessary for Terminal S8 to be open before the drive removes the programmed function.	0.00 s (0.00 - 300.00 s)

### ■ H1-xx: MFDI Setting Values

Setting Value	Function	Description
0	3-Wire Sequence	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the direction of motor rotation for 3-wire sequence.
1	LOCAL/REMOTE Selection	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets drive control for the keypad (LOCAL) or an external source (REMOTE). ON : LOCAL OFF : REMOTE
2	External Reference 1/2 Selection	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the drive to use Run command source 1/2 or Reference command source 1/2 when in REMOTE Mode. ON : b1-15 [Frequency Reference Selection 2], b1-16 [Run Command Selection 2] OFF : b1-01 [Frequency Reference Selection 1], b1-02 [Run Command Selection 1]
3	Multi-Step Speed Reference 1	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Uses speed references d1-01 to d1-16 to set a multi-step speed reference.
4	Multi-Step Speed Reference 2	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Uses speed references d1-01 to d1-16 to set a multi-step speed reference.
5	Multi-Step Speed Reference 3	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Uses speed references d1-01 to d1-16 to set a multi-step speed reference.
6	Jog Reference Selection	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the drive to use the JOG Frequency Reference (JOG command) set in d1-17. The JOG Frequency Reference (JOG command) overrides Frequency References 1 to 16 (d1-01 to d1-16).
7	Accel/Decel Time Selection 1	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the drive to use Acceleration/Deceleration Time 1 [C1-01, C1-02] or Acceleration/Deceleration Time 2 [C1-03, C1-04].

Setting Value	Function	Description
8	Baseblock Command (N.O.)	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the command that stops drive output and coasts the motor to stop when the input is ON. ON : Baseblock (drive output stop) OFF : Normal operation</p>
9	Baseblock Command (N.C.)	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the command that stops drive output and coasts the motor to stop when the input terminal is OFF. ON : Normal operation OFF : Baseblock (drive output stop)</p>
A	Accel/Decel Ramp Hold	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Momentarily pauses motor acceleration and deceleration when the terminal is turned ON, retains the output frequency that was stored in the drive at the time of the pause, and restarts motor operation.</p>
B	Overheat Alarm (oH2)	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the drive to show an oH2 [External Overheat (H1-XX=B)] alarm when the input terminal is ON. The alarm does not have an effect on drive operation.</p>
C	Analog Terminal Enable Selection	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the command that enables or disables the terminals selected in H3-14 [Analog Input Terminal Enable Sel]. ON : Terminal selected with H3-14 is enabled OFF : Terminal selected with H3-14 is disabled</p>
E	ASR Integral Reset	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the command to reset the integral value and use PI control or P control for the speed control loop. ON : P control OFF : PI control</p>
F	Not Used	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Use this setting for unused terminals or to use terminals in through mode.</p>
10	Up Command	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the command to use a push button switch to increase the drive frequency reference. You must also set Setting 11 [Down Command]. ON : Increases the frequency reference. OFF : Holds the current frequency reference.</p>
11	Down Command	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the command to use a push button switch to decrease the drive frequency reference. You must also set Setting 10 [Up Command]. ON : Decreases the frequency reference. OFF : Holds the current frequency reference.</p>
12	Forward Jog	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the command to operate the motor in the forward direction at the Jog Frequency set in d1-17 [Jog Reference].</p>
13	Reverse Jog	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the command to operate the motor in the reverse direction at the Jog Frequency set in d1-17 [Jog Reference].</p>
14	Fault Reset	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the command to reset the current fault when the Run command is inactive.</p> <p><b>Note:</b> The drive ignores the fault reset command when the Run command is active. Remove the Run command before trying to reset a fault.</p>
15	Fast Stop (N.O.)	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the command to ramp to stop in the deceleration time set in C1-09 [Fast Stop Time] when the input terminal is activated while the drive is operating.</p>
16	Motor 2 Selection	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the command for the drive to operate motor 1 or motor 2. Stop the motors before switching. ON : Selects motor 2. OFF : Selects motor 1.</p>
17	Fast Stop (N.C.)	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the command to ramp to stop in the deceleration time set in C1-09 [Fast Stop Time] when the input terminal is activated while the drive is operating.</p>
18	Timer Function	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the command to start the timer function. Use this setting with Timer Output [H2-xx = 12].</p>
19	PID Disable	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the command to disable PID control when b5-01 = 1 [PID Mode Setting = Standard]. ON : PID control disabled OFF : PID control enabled</p>

### 3.10 H: Terminal Functions

Setting Value	Function	Description
1B	Programming Lockout	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the command to prevent parameter changes when the terminal is OFF. ON : Programming Lockout OFF : Parameter Write Prohibit
1E	Reference Sample Hold	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the command to sample the frequency reference at terminals A1, A2, or A3 and hold the frequency reference at that frequency.
20	External Fault (NO-Always-Ramp)	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> When the terminal activates, the drive ramps to stop in the selected deceleration time. Fault relay output terminal MA-MC will turn ON, and MB-MC will turn OFF. The drive always detects external faults whether the drive is stopped or running.
21	External Fault (NC-Always-Ramp)	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> When the terminal deactivates, the drive ramps to stop in the selected deceleration time. Fault relay output terminal MA-MC will turn ON, and MB-MC will turn OFF. The drive always detects external faults whether the drive is stopped or running.
22	External Fault (NO-@Run-Ramp)	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> When the terminal activates during run, the drive ramps to stop in the selected deceleration time. Fault relay output terminal MA-MC will turn ON, and MB-MC will turn OFF. The drive does not detect external faults while the drive is stopped.
23	External Fault (NC-@Run-Ramp)	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> When the terminal deactivates during run, the drive ramps to stop in the selected deceleration time. Fault relay output terminal MA-MC will turn ON, and MB-MC will turn OFF. The drive does not detect external faults while the drive is stopped.
24	External Fault (NO-Always-Coast)	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> When the terminal activates, the drive shuts off the output and the motor coasts to stop. Fault relay output terminal MA-MC will turn ON, and MB-MC will turn OFF. The drive always detects external faults whether the drive is stopped or running.
25	External Fault (NC-Always-Coast)	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> When the terminal deactivates, the drive shuts off the output and the motor coasts to stop. Fault relay output terminal MA-MC will turn ON, and MB-MC will turn OFF. The drive always detects external faults whether the drive is stopped or running.
26	External Fault (NO-@Run-Coast)	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> When the terminal activates during run, the drive shuts off the output and the motor coasts to stop. Fault relay output terminal MA-MC will turn ON, and MB-MC will turn OFF. The drive does not detect external faults while the drive is stopped.
27	External Fault (NC-@Run-Coast)	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> When the terminal deactivates during run, the drive shuts off the output and the motor coasts to stop. Fault relay output terminal MA-MC will turn ON, and MB-MC will turn OFF. The drive does not detect external faults while the drive is stopped.
28	External Fault (NO-Always-FStop)	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> When the terminal activates, the drive stops the motor in the deceleration time set to <i>C1-09 [Fast Stop Time]</i> . Fault relay output terminal MA-MC turns ON, and MB-MC turns OFF. Stopped drives and running drives will detect external faults.
29	External Fault (NC-Always-FStop)	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> When the terminal deactivates, the drive stops the motor in the deceleration time set to <i>C1-09 [Fast Stop Time]</i> . Fault relay output terminal MA-MC turns ON, and MB-MC turns OFF. Stopped drives and running drives will detect external faults.
2A	External Fault (NO-@Run-FStop)	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> When the terminal activates during run, the drive stops the motor in the deceleration time set to <i>C1-09 [Fast Stop Time]</i> . Fault relay output terminal MA-MC turns ON, and MB-MC turns OFF. Stopped drives will not detect external faults.
2B	External Fault (NC-@Run-FStop)	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> When the terminal deactivates during run, the drive stops the motor in the deceleration time set to <i>C1-09 [Fast Stop Time]</i> . Fault relay output terminal MA-MC turns ON, and MB-MC turns OFF. Stopped drives will not detect external faults.
2C	External Fault (NO-Always-Alarm)	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> When the terminal activates, the keypad shows <i>EFx [External Fault (Terminal Sx)]</i> and the output terminal set for Alarm [ <i>H2-01 to H2-03 = 10</i> ] activates. The drive continues operation. The drive always detects external faults whether the drive is stopped or running.
2D	External Fault (NC-Always-Alarm)	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> When the terminal deactivates, the keypad shows <i>EFx [External Fault (Terminal Sx)]</i> and the output terminal set for Alarm [ <i>H2-01 to H2-03 = 10</i> ] activates. The drive continues operation. The drive always detects external faults whether the drive is stopped or running.
2E	External Fault (NO-@Run-Alarm)	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> When the terminal activates during run, the keypad shows <i>EFx [External Fault (Terminal Sx)]</i> and the output terminal set for Alarm [ <i>H2-01 to H2-03 = 10</i> ] activates. The drive continues operation. The drive does not detect external faults while the drive is stopped.
2F	External Fault (NC-@Run-Alarm)	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> When the terminal deactivates during run, the keypad shows <i>EFx [External Fault (Terminal Sx)]</i> and the output terminal set for Alarm [ <i>H2-01 to H2-03 = 10</i> ] activates. The drive continues operation. The drive does not detect external faults while the drive is stopped.
30	PID Integrator Reset	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the command to reset and hold the PID control integral to 0 when the terminal is ON.
31	PID Integrator Hold	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the command to hold the integral value of the PID control while the terminal is activated.
32	Multi-Step Speed Reference 4	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Uses speed references <i>d1-01 to d1-16</i> to set a multi-step speed reference.

Setting Value	Function	Description
34	PID Soft Starter Disable	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the PID soft starter function. ON : Disable OFF : Enabled</p>
35	PID Input (Error) Invert	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the command to turn the terminal ON and OFF to switch the PID input level (polarity).</p>
3E	PID Setpoint Selection 1	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the function to switch the PID setpoint to <i>YA-02 [Setpoint 2]</i> or <i>YA-04 [Setpoint 4]</i>. Set this function and <i>H1-xx = 3F [PID Setpoint Selection 2]</i> at the same time.</p> <p><b>Note:</b> If you use this function and one of <i>H1-xx = 83 to 85 [Dedicated Multi-Setpoint YA-02 to YA-04]</i> at the same time, the drive will detect an <i>oPE03 [Multi-Function Input Setting Err]</i>. ON : <i>YA-02</i> or <i>YA-04</i> is PID setpoint. OFF : The frequency reference, <i>YA-01 [Setpoint 1]</i>, or <i>YA-03 [Setpoint 3]</i> is PID setpoint.</p>
3F	PID Setpoint Selection 2	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the function to switch the PID setpoint to <i>YA-03 [Setpoint 3]</i> or <i>YA-04 [Setpoint 4]</i>. Set this function and <i>H1-xx = 3E [PID Setpoint Selection 1]</i> at the same time.</p> <p><b>Note:</b> If you use this function and one of <i>H1-xx = 83 to 85 [Dedicated Multi-Setpoint YA-02 to YA-04]</i> at the same time, the drive will detect an <i>oPE03 [Multi-Function Input Setting Err]</i>. ON : <i>YA-03</i> or <i>YA-04</i> is PID setpoint. OFF : The frequency reference, <i>YA-01 [Setpoint 1]</i>, or <i>YA-02 [Setpoint 2]</i> is PID setpoint.</p>
40	Forward RUN (2-Wire)	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the Forward Run command for 2-wire sequence 1. Set this function and <i>H1-xx = 41 [Reverse RUN (2-Wire)]</i> together.</p> <p>ON : Forward Run OFF : Stop</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>If you turn ON the Forward Run command terminal and the Reverse Run command terminal, it will cause an <i>EF [FWD/REV Run Command Input Error]</i> alarm and the motor will ramp to stop.</li> <li>Initialize the drive with a 2-wire sequence to set the Forward Run command to terminal S1.</li> <li>This function will not operate at the same time as <i>H1-xx = 42, 43 [Run Command (2-Wire Sequence 2), FWD/REV (2-Wire Sequence 2)]</i>.</li> </ul>
41	Reverse RUN (2-Wire)	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the Forward Run command for 2-wire sequence 1. Set this function and <i>H1-xx = 40 [Forward RUN (2-Wire)]</i> together.</p> <p>ON : Reverse Run OFF : Stop</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>If you turn ON the Forward Run command terminal and the Reverse Run command terminal, it will cause an <i>EF [FWD/REV Run Command Input Error]</i> alarm and the motor will ramp to stop.</li> <li>Initialize the drive with a 2-wire sequence to set the Reverse Run command to terminal S2.</li> <li>This function will not operate at the same time as <i>H1-xx = 42, 43 [Run Command (2-Wire Sequence 2), FWD/REV (2-Wire Sequence 2)]</i>.</li> </ul>
42	Run Command (2-Wire Sequence 2)	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the Run command for 2-wire sequence 2. Set this function and <i>H1-xx = 43 [FWD/REV (2-Wire Sequence 2)]</i> together.</p> <p>ON : Run OFF : Stop</p> <p><b>Note:</b> This function will not operate at the same time as <i>H1-xx = 40, 41 [Forward RUN (2-Wire), Reverse RUN (2-Wire)]</i>.</p>
43	FWD/REV (2-Wire Sequence 2)	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the direction of motor rotation for 2-wire sequence 2. Set this function and <i>H1-xx = 42 [Run Command (2-Wire Sequence 2)]</i> together.</p> <p>ON : Reverse Run OFF : Forward Run</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>You must input the Run command to rotate the motor.</li> <li>This function will not operate at the same time as <i>H1-xx = 40, 41 [Forward RUN (2-Wire), Reverse RUN (2-Wire)]</i>.</li> </ul>
44	Add Offset Frequency 1 (d7-01)	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the function to add the offset frequency set in <i>d7-01 [Offset Frequency 1]</i> to the frequency reference when the terminal activates.</p>
45	Add Offset Frequency 2 (d7-02)	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the function to add the offset frequency set in <i>d7-02 [Offset Frequency 2]</i> to the frequency reference when the terminal activates.</p>
46	Add Offset Frequency 3 (d7-03)	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the function to add the offset frequency set in <i>d7-03 [Offset Frequency 3]</i> to the frequency reference when the terminal activates.</p>
50	Motor Pre-heat 2	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the command to apply the motor pre-heat current set in <i>b2-09 [Pre-heat Current 2]</i>.</p>

### 3.10 H: Terminal Functions

Setting Value	Function	Description
60	DC Injection Braking Command	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>Sets the command to use DC Injection Braking to stop the motor.</p> <p><b>Note:</b> When <math>A1-02 = 8</math> [Control Method Selection = EZOLV], this function is available with a PM motor.</p>
61	Speed Search from Fmax	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>Sets the function to use an external reference to start speed search although <math>b3-01 = 0</math> [Speed Search Selection at Start = Disabled] to not allow speed search at start.</p> <p><b>Note:</b> The drive will detect <math>oPE03</math> [Multi-Function Input Setting Err] when <math>H1-xx = 61</math> [Speed Search from Fmax] and <math>H1-xx = 62</math> [Speed Search from Fref] are set at the same time.</p>
62	Speed Search from Fref	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>Sets the function to use an external reference to start speed search although <math>b3-01 = 0</math> [Speed Search Selection at Start = Disabled] to not allow speed search at start.</p> <p><b>Note:</b> The drive will detect <math>oPE03</math> [Multi-Function Input Setting Err] when <math>H1-xx = 61</math> [Speed Search from Fmax] and <math>H1-xx = 62</math> [Speed Search from Fref] are set at the same time.</p>
63	Field Weakening	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>Sets the function to send the Field Weakening Level and Field Weakening Frequency Limit commands set in <math>d6-01</math> [Field Weakening Level] and <math>d6-02</math> [Field Weakening Frequency Limit] when the input terminal is activated.</p>
65	KEB Ride-Thru 1 Activate (N.C.)	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>Sets operation of the KEB1 function through the KEB Ride-Thru 1 (N.C.).</p> <p>ON : Normal operation OFF : Deceleration during momentary power loss</p>
66	KEB Ride-Thru 1 Activate (N.O.)	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>Sets operation of the KEB1 function through the KEB Ride-Thru 1 (N.O.).</p> <p>ON : Deceleration during momentary power loss OFF : Normal operation</p>
67	Communications Test Mode	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>Set the function for the drive to self-test RS-485 serial communications operation.</p>
68	High Slip Braking (HSB) Activate	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>Sets the command to use high-slip braking to stop the motor.</p>
6A	Drive Enable	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>Sets the function to show <math>dnE</math> [Drive Disabled] on the keypad and ignore Run commands when the terminal is OFF.</p>
6E	Bypass HAND Command	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>This selection is only for use in an FP605 bypass configuration.</p>
70	Drive Enable 2	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>Sets the function to show <math>dnE</math> [Drive Enabled] on the keypad and ignore Run commands when the terminal is OFF.</p> <p>ON : Run command is accepted. OFF : Run command is disabled. When the drive is running, it stops according to <math>b1-03</math> setting.</p>
77	ASR Gain (C5-03) Select	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>Sets the function to switch the ASR proportional gain to <math>C5-01</math> [ASR Proportional Gain 1] or <math>C5-03</math> [ASR Proportional Gain 2].</p> <p>ON : C5-03 OFF : C5-01</p>
7A	KEB Ride-Thru 2 Activate (N.C.)	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>Sets operation of the KEB2 function through the KEB Ride-Thru 2 (N.C.).</p> <p>ON : Normal operation OFF : Deceleration during momentary power loss</p>
7B	KEB Ride-Thru 2 Activate (N.O.)	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>Sets operation of the KEB2 function through the KEB Ride-Thru 2 (N.O.).</p> <p>ON : Deceleration during momentary power loss OFF : Normal operation</p>
7C	Short Circuit Braking (N.O.)	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>Sets operation of Short Circuit Braking (N.O.).</p> <p>ON : Short Circuit Braking is enabled. OFF : Normal operation</p> <p><b>Note:</b> When <math>A1-02 = 8</math> [Control Method Selection = EZOLV], this function is available only when you use a PM motor.</p>

Setting Value	Function	Description
7D	Short Circuit Braking (N.C.)	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets operation of Short Circuit Braking (N.C.).  ON : Normal operation  OFF : Short Circuit Braking is enabled.  <b>Note:</b>  When <math>A1-02 = 8</math> [Control Method Selection = EZOLV], this function is available only when you use a PM motor.</p>
82	PI Switch to Aux	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets <math>YF-xx</math> [PI Auxiliary Control] parameters as primary PI loop parameters and disables <math>b5-xx</math> [PID Control].  <b>Note:</b>  When this input is active, <math>YF-xx</math> [PI Auxiliary Control] parameters will always be the primary PI loop parameters. Parameter <math>YF-20</math> [PI Aux Main PI Speed Control] does not have an effect.</p>
83	Dedicated Multi-Setpoint YA-02	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the function to set the PID setpoint to <math>YA-02</math> [Setpoint 2].  <b>Note:</b>  If you use this function and one of <math>H1-xx = 3E</math> or <math>3F</math> [PID Setpoint Selection 1 or 2] at the same time, the drive will detect an <math>oPE03</math> [Multi-Function Input Setting Err].  ON : <math>YA-02</math> is PID setpoint.  OFF : <math>YA-01</math> [Setpoint 1], <math>YA-03</math> [Setpoint 3], or <math>YA-04</math> [Setpoint 4] is PID setpoint.</p>
84	Dedicated Multi-Setpoint YA-03	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the function to set the PID setpoint to <math>YA-03</math> [Setpoint 3]. Set this function and <math>H1-xx = 83</math> [Dedicated Multi-Setpoint YA-02] at the same time.  <b>Note:</b>  If you use this function and one of <math>H1-xx = 3E</math> or <math>3F</math> [PID Setpoint Selection 1 or 2] at the same time, the drive will detect an <math>oPE03</math> [Multi-Function Input Setting Err].  ON : <math>YA-03</math> is PID setpoint.  OFF : <math>YA-01</math> [Setpoint 1], <math>YA-02</math> [Setpoint 2], or <math>YA-04</math> [Setpoint 4] is PID setpoint.</p>
85	Dedicated Multi-Setpoint YA-04	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the function to set the PID setpoint to <math>YA-04</math> [Setpoint 4]. Set this function, <math>H1-xx = 83</math> [Dedicated Multi-Setpoint YA-02], and <math>H1-xx = 84</math> [Dedicated Multi-Setpoint YA-03] at the same time.  <b>Note:</b>  If you use this function and one of <math>H1-xx = 3E</math> or <math>3F</math> [PID Setpoint Selection 1 or 2] at the same time, the drive will detect an <math>oPE03</math> [Multi-Function Input Setting Err].  ON : <math>YA-04</math> is PID setpoint.  OFF : <math>YA-01</math> [Setpoint 1], <math>YA-02</math> [Setpoint 2], or <math>YA-03</math> [Setpoint 3] is PID setpoint.</p>
88	Thermostat Fault	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the drive to show the <math>VLTS</math> [Thermostat Fault] when the input terminal is ON.  <b>Note:</b>  This function is active when the drive is running.</p>
A8	PI2 Control Disable	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the command to disable the PI2 Control function. Parameter <math>S3-12</math> [PI2 Control Disable Mode Sel] sets the output performance.  ON : Enabled  OFF : Disabled</p>
AA	PI2 Control Inverse Operation	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the command to change the sign of the PI2 Control input.</p>
AB	PI2 Control Integral Reset	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the command to reset the PI2 Control integral value.  <b>Note:</b>  This input has priority over <math>H1-xx = AC</math> [MFDI Function Selection = PI2 Control Integral Hold].</p>
AC	PI2 Control Integral Hold	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the command to lock the PI2 Control integral value.</p>
AD	Select PI2 Control PI Parameters	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the command to use the <math>S3-06</math> [PI2 Control Proportional Gain] and <math>S3-07</math> [PI2 Control Integral Time] values instead of the <math>b5-02</math> [Proportional Gain (P)] and <math>b5-03</math> [Integral Time (I)] values. Set <math>S3-01 = 0</math> [PI2 Control Enable Selection = Disabled] to enable this function.  <b>Note:</b>  This multi-function input does not have an effect on PI2 Control. Use this input for the primary PI controller (<math>b5-xx</math>).</p>
AF	Emergency Override FWD	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the command to use the speed set in <math>S6-02</math> [Emergency Override Ref Selection] to run the drive in the forward direction.</p>
B0	Emergency Override REV	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the command to use the speed set in <math>S6-02</math> [Emergency Override Ref Selection] to run the drive in the reverse direction.</p>
B8	Low City Pressure	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the command to show that there is not sufficient pressure at the inlet to the pump.  OFF : Insufficient pressure is present on the inlet to the pump</p>

### 3.10 H: Terminal Functions

Setting Value	Function	Description
B9	Disable Pre-charge	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the command to disable the Pre-charge function. ON : Pre-charge function is disabled</p>
BB	Low Water Level	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the drive to show an <i>LWL</i> [Low Water Level] fault when the input terminal is ON. ON : Low Water Level Fault OFF : Reservoir/Tank is filled to normal level.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>The drive detects an <i>LWL</i> fault when the drive is running including Sleep Boost and Feedback Drop Detection.</li> <li>The drive will not detect an <i>LWL</i> fault when the drive is in JOG, Pre-Charge, or Emergency Override.</li> <li>While in Pre-Charge, when you close the Low Water Level digital input, the drive will exit out of Pre-Charge immediately and ignore the <i>Y4-03</i> [Pre-Charge Time] setting.</li> </ul>
BC	High Water Level	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the drive to show an <i>HWL</i> [High Water Level] fault when the input terminal is ON. ON : High Water Level Fault OFF : Reservoir/Tank is filled to normal level.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>The drive detects an <i>HWL</i> fault when the drive is running.</li> <li>The drive will not detect an <i>HWL</i> fault when the drive is stopped, sleeping, or in Emergency Override.</li> </ul>
BD	Remote Drive Disable	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the function to stop or prohibit the drive operation when the input terminal is ON. ON : Stops and prohibits the drive from running. OFF : If MFDI was previously ON, drive will enter Pre-Charge mode if it is programmed.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>Remote Drive Disable function is disabled during Emergency Override.</li> <li>These functions will activate even when the Remote Drive Disable function is enabled: -H1-xx = 50 [MFDI Function Selection = Motor Pre-heat 2] -H1-xx = 60 [MFDI Function Selection = DC Injection Braking Command]</li> </ul>
BE	Single Phase Converter Ready NC	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the function to send a signal from Single Phase Converter to the attached drive that the converter is in a NOT READY or FAULTED state when the input terminal is OFF. ON : Single Phase Converter is in a normal state. OFF : Single Phase Converter is in a NOT READY or FAULTED state.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>You can program this function to <i>H1-01</i> to <i>H1-08</i> [Terminal S1 to S8 Function Select], but you cannot program this function to: -H1-40 to H1-42 [Extend MFDI1 to MFDI3 Function Selection] -H7-01 to H7-04 [Virtual Multi-Function Input 1 to 4]</li> </ul>
188	!Thermostat Fault	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the drive to show the <i>VLTS</i> [Thermostat Fault] when the input terminal is OFF.</p> <p><b>Note:</b></p> <p>This function is active when the drive is running.</p>
1A8	!PI2 Control Disable	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the command to disable the PI2 Control function. Parameter <i>S3-12</i> [PI2 Control Disable Mode Sel] sets the output performance. ON : Disabled OFF : Enabled</p>
1B8	!Low City Pressure	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the command to show that there is not sufficient pressure at the inlet to the pump. ON : Insufficient pressure is present on the inlet to the pump</p>
1BB	!Low Water Level	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the drive to show an <i>LWL</i> [Low Water Level] fault when the input terminal is OFF. ON : Reservoir/Tank is filled to normal level. OFF : Low Water Level Fault</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>The drive detects an <i>LWL</i> fault when the drive is running including Sleep Boost and Feedback Drop Detection.</li> <li>The drive will not detect an <i>LWL</i> fault when the drive is in JOG, Pre-Charge, or Emergency Override.</li> <li>While in Pre-Charge, when you close the Low Water Level digital input, the drive will exit out of Pre-Charge immediately and ignore the <i>Y4-03</i> [Pre-Charge Time] setting.</li> </ul>

Setting Value	Function	Description
IBC	!High Water Level	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the drive to show an <i>HWL</i> [High Water Level] fault when the input terminal is OFF.  ON : Reservoir/Tank is filled to normal level.  OFF : High Water Level Fault</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>The drive detects an <i>HWL</i> fault when the drive is running.</li> <li>The drive will not detect an <i>HWL</i> fault when the drive is stopped, sleeping, or in Emergency Override.</li> </ul>
IBD	!Remote Drive Disable	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the function to stop or prohibit the drive operation when the input terminal is OFF.  ON : If MFDI was previously ON, drive will enter Pre-Charge mode if it is programmed.  OFF : Stops and prohibits the drive from running.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>Remote Drive Disable function is disabled during Emergency Override.</li> <li>These functions will activate even when the Remote Drive Disable function is enabled: <ul style="list-style-type: none"> <li>-H1-xx = 50 [MFDI Function Selection = Motor Pre-heat 2]</li> <li>-H1-xx = 60 [MFDI Function Selection = DC Injection Braking Command]</li> </ul> </li> </ul>

## ◆ H2: Digital Outputs

No. (Hex.)	Name	Description	Default (Range)
H2-01 (040B)	Term M1-M2 Function Selection	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the function for MFDO terminal M1-M2.</p> <p><b>Note:</b></p> <p>When you do not use the terminal or when you use the terminal in through mode, set this parameter to <i>F</i>.</p>	0 (0 - 1FF)
H2-02 (040C)	Term M3-M4 Function Selection	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the function for MFDO terminal M3-M4.</p> <p><b>Note:</b></p> <p>When you do not use the terminal or when you use the terminal in through mode, set this parameter to <i>F</i>.</p>	1 (0 - 1FF)
H2-03 (040D)	Term MD-ME-MF Function Selection	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the function for MFDO terminal MD-ME-MF.</p> <p><b>Note:</b></p> <p>When you do not use this terminal, or when you will use the terminal in through mode, set this parameter to <i>F</i>.</p>	2 (0 - 1FF)
H2-06 (0437)	Watt Hour Output Unit Selection	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the unit for the output signal when <i>H2-01</i> to <i>H2-03</i> = 39 [MFDI Function Selection = Watt Hour Pulse Output].</p> <p>0 : 0.1 kWh units  1 : 1 kWh units  2 : 10 kWh units  3 : 100 kWh units  4 : 1000 kWh units</p>	0 (0 - 4)
H2-07 (0B3A) Expert	Modbus Register 1 Address Select	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the address of the MEMOBUS/Modbus register output to the MFDO terminal.</p>	0001 (0001 - 1FFF)
H2-08 (0B3B) Expert	Modbus Register 1 Bit Select	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the bit of the MEMOBUS/Modbus register output to the MFDO terminal.</p>	0000 (0000 - FFFF)
H2-09 (0B3C) Expert	Modbus Register 2 Address Select	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the address of the MEMOBUS/Modbus register output to the MFDO terminal.</p>	0001 (0001 - 1FFF)
H2-10 (0B3D) Expert	Modbus Register 2 Bit Select	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the bit of the MEMOBUS/Modbus register output to the MFDO terminal.</p>	0000 (0000 - FFFF)
H2-40 (0B58) Expert	Mbus Reg 15E0h bit0 Output Func	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the MFDO for bit 0 of MEMOBUS register 15E0 (Hex.).</p>	F (0 - 1FF)
H2-41 (0B59) Expert	Mbus Reg 15E0h bit1 Output Func	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the MFDO for bit 1 of MEMOBUS register 15E0 (Hex.).</p>	F (0 - 1FF)

### 3.10 H: Terminal Functions

No. (Hex.)	Name	Description	Default (Range)
H2-42 (0B5A) Expert	Mbus Reg 15E0h bit2 Output Func	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the MFDO for bit 2 of MEMOBUS register 15E0 (Hex.).	F (0 - 1FF)
H2-60 (1B46) Expert	Term M1-M2 Secondary Function	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the second function for terminal M1-M2. Outputs the logical calculation results of the terminals assigned to functions by H2-01 [Term M1-M2 Function Selection].	F (0 - FF)
H2-61 (1B47) Expert	Terminal M1-M2 Logical Operation	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the logical operation for the functions set in H2-01 [Term M1-M2 Function Selection] and H2-60 [Term M1-M2 Secondary Function].	0 (0 - 8)
H2-62 (1B48) Expert	Terminal M1-M2 Delay Time	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the minimum on time used to output the logical calculation results from terminal M1-M2.	0.1 s (0.0 - 25.0 s)
H2-63 (1B49) Expert	Term M3-M4 Secondary Function	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the second function for terminal M3-M4. Outputs the logical calculation results of the terminals assigned to functions by H2-02 [Term M3-M4 Function Selection].	F (0 - FF)
H2-64 (1B4A) Expert	Terminal M3-M4 Logical Operation	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the logical operation for the functions set in H2-02 [Term M3-M4 Function Selection] and H2-63 [Term M3-M4 Secondary Function].	0 (0 - 8)
H2-65 (1B4B) Expert	Terminal M3-M4 Delay Time	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the minimum on time used to output the logical calculation results from terminal M3-M4.	0.1 s (0.0 - 25.0 s)
H2-66 (1B4C) Expert	Term MD-ME-MF Secondary Function	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the second function for terminal MD-ME-MF. Outputs the logical calculation results of the terminals assigned to functions by H2-03 [Terminal MD-ME-MF Function Selection].	F (0 - FF)
H2-67 (1B4D) Expert	Terminal MD-ME-MF Logical Operation	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the logical operation for the functions set in H2-03 [Term MD-ME-MF Function Selection] and H2-66 [Term MD-ME-MF Secondary Function].	0 (0 - 8)
H2-68 (1B4E) Expert	Terminal MD-ME-MF Delay Time	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the minimum on time used to output the logical calculation results from terminal MD-ME-MF.	0.1 s (0.0 - 25.0 s)

#### ■ H2-xx: MFDO Setting Values

Setting Value	Function	Description
0	During Run	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> The terminal activates when you input a Run command and when the drive is outputting voltage. ON : Drive is running OFF : Drive is stopping
1	Zero Speed	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> The terminal activates when the output frequency < E1-09 [Minimum Output Frequency]. <b>Note:</b> Parameter E1-09 is the reference in all control methods. ON : Output frequency < E1-09. OFF : Output frequency ≥ E1-09.
2	Speed Agree 1	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> The terminal activates when the output frequency is in the range of the frequency reference ± L4-02 [Speed Agree Detection Width]. <b>Note:</b> The detection function operates in the two motor rotation directions. ON : The output frequency is in the range of "frequency reference ± L4-02". OFF : The output frequency does not align with the frequency reference although the drive is running.
3	User-Set Speed Agree 1	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> The terminal activates when the output frequency is in the range of L4-01 [Speed Agree Detection Level] ± L4-02 [Speed Agree Detection Width] and in the range of the frequency reference ± L4-02. <b>Note:</b> The detection function operates in the two motor rotation directions. The drive uses the L4-01 value as the forward/reverse detection level. ON : The output frequency is in the range of "L4-01 ± L4-02" and the range of frequency reference ± L4-02. OFF : The output frequency is not in the range of "L4-01 ± L4-02" or the range of frequency reference ± L4-02.

Setting Value	Function	Description
4	Frequency Detection 1	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>The terminal deactivates when the output frequency &gt; "L4-01 [Speed Agree Detection Level] + L4-02 [Speed Agree Detection Width]". After the terminal deactivates, the terminal stays deactivated until the output frequency is at the value of L4-01.</p> <p><b>Note:</b> The detection function operates in the two motor rotation directions. The drive uses the L4-01 value as the forward/reverse detection level. ON : The output frequency &lt; L4-01, or the output frequency ≤ "L4-01 + L4-02" OFF : The output frequency &gt; "L4-01 + L4-02"</p>
5	Frequency Detection 2	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>The terminal activates when the output frequency &gt; L4-01 [Speed Agree Detection Level]. After the terminal activates, the terminal stays activated until the output frequency is at the value of "L4-01 - L4-02 [Speed Agree Detection Width]".</p> <p><b>Note:</b> The detection function operates in the two motor rotation directions. The drive uses the L4-01 value as the forward/reverse detection level. ON : The output frequency &gt; L4-01 OFF : The output frequency &lt; "L4-01 - L4-02", or the output frequency ≤ L4-01</p>
6	Drive Ready	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>The terminal activates when the drive is ready and running.</p>
7	DC Bus Undervoltage	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>The terminal activates when the DC bus voltage or control circuit power supply is at the voltage set in L2-05 [Undervoltage Detection Lvl (Uv1)] or less. The terminal also activates when there is a fault with the DC bus voltage.</p> <p>ON : The DC bus voltage ≤ L2-05 OFF : The DC bus voltage &gt; L2-05</p>
8	During Baseblock (N.O.)	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>The terminal activates during baseblock. When the drive is in baseblock, the drive output transistor stops switching and does not make DC bus voltage.</p> <p>ON : During baseblock OFF : The drive is not in baseblock.</p>
9	Frequency Reference from Keypad	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Shows the selected frequency reference source.</p> <p>ON : The keypad is the frequency reference source. OFF : Parameter b1-01 [Frequency Reference Selection 1] is the frequency reference source.</p>
A	Run Command from Keypad	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Shows the selected Run command source.</p> <p>ON : The keypad is the Run command source. OFF : Parameter b1-02 or b1-16 [Run Command Selection 1 or 2] is the Run command source.</p>
B	Torque Detection 1 (N.O.)	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>The terminal activates when the drive detects overtorque or undertorque.</p> <p>ON : The output current/torque &gt; L6-02 [Torque Detection Level 1], or the output current/torque &lt; L6-02 for longer than the time set in L6-03 [Torque Detection Time 1].</p>
C	Frequency Reference Loss	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>The terminal activates when the drive detects a loss of frequency reference.</p>
E	Fault	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>The terminal activates when the drive detects a fault.</p> <p><b>Note:</b> The terminal will not activate for CPF00 and CPF01 [Control Circuit Error] faults.</p>
F	Not Used	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Use this setting for unused terminals or to use terminals in through mode. Also use this setting as the PLC contact output via MEMOBUS/Modbus or the communication option. This signal does not function if you do not configure signals from the PLC.</p>
10	Alarm	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>The terminal activates when the drive detects a minor fault.</p>
11	Fault Reset Command Active	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>The terminal activates when the drive receives the Reset command from the control circuit terminal, serial communications, or the communication option.</p>
12	Timer Output	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the terminal as the timer output. Use this setting with the timer input set in H1-xx = 18 [MFDI Function Selection = Timer Function].</p>
13	Speed Agree 2	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>The terminal activates when the output frequency is in the range of the frequency reference ± L4-04 [Speed Agree Detection Width (+/-)].</p> <p><b>Note:</b> The detection function operates in the two motor rotation directions. ON : The output frequency is in the range of "frequency reference ± L4-04". OFF : The output frequency is not in the range of "frequency reference ± L4-04".</p>

### 3.10 H: Terminal Functions

Setting Value	Function	Description
14	User-Set Speed Agree 2	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>The terminal activates when the output frequency is in the range of <math>L4-03</math> [Speed Agree Detection Level (+/-)] <math>\pm</math> <math>L4-04</math> [Speed Agree Detection Width (+/-)] and in the range of the frequency reference <math>\pm</math> <math>L4-04</math>.</p> <p><b>Note:</b> The detection level set in <math>L4-03</math> is a signed value. The drive will only detect in one direction. ON : The output frequency is in the range of "<math>L4-03 \pm L4-04</math>" and the range of frequency reference <math>\pm</math> <math>L4-04</math>. OFF : The output frequency is not in the range of "<math>L4-03 \pm L4-04</math>" or the range of frequency reference <math>\pm</math> <math>L4-04</math>.</p>
15	Frequency Detection 3	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>The terminal deactivates when the output frequency <math>&gt;</math> "<math>L4-03</math> [Speed Agree Detection Level (+/-)] + <math>L4-04</math> [Speed Agree Detection Width (+/-)]". After the terminal deactivates, the terminal stays deactivated until the output frequency is at the value of <math>L4-03</math>.</p> <p><b>Note:</b> The detection level set in <math>L4-03</math> is a signed value. The drive will only detect in one direction. ON : The output frequency <math>&lt;</math> <math>L4-03</math>, or the output frequency <math>\leq L4-03 + L4-04</math>. OFF : The output frequency <math>&gt;</math> "<math>L4-03 + L4-04</math>".</p>
16	Frequency Detection 4	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>The terminal activates when the output frequency <math>&gt;</math> <math>L4-03</math> [Speed Agree Detection Level (+/-)]. After the terminal activates, the terminal stays activated until the output frequency is at the value of "<math>L4-03 - L4-04</math>".</p> <p><b>Note:</b> The detection level set in <math>L4-03</math> is a signed value. The drive will only detect in one direction. ON : The output frequency <math>&gt;</math> <math>L4-03</math>. OFF : The output frequency <math>&lt;</math> "<math>L4-03 - L4-04</math>", or the output frequency <math>\leq L4-03</math>.</p>
17	Torque Detection 1 (N.C.)	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>The terminal deactivates when the drive detects overtorque or undertorque. OFF : The output current/torque <math>&gt;</math> <math>L6-02</math> [Torque Detection Level 1], or the output current/torque <math>&lt;</math> <math>L6-02</math> for longer than the time set in <math>L6-03</math> [Torque Detection Time 1].</p>
18	Torque Detection 2 (N.O.)	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>The terminal activates when the drive detects overtorque or undertorque. ON : The output current/torque <math>&gt;</math> <math>L6-05</math> [Torque Detection Level 2], or the output current/torque <math>&lt;</math> <math>L6-05</math> for longer than the time set in <math>L6-06</math> [Torque Detection Time 2].</p>
19	Torque Detection 2 (N.C.)	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>The terminal deactivates when the drive detects overtorque or undertorque. OFF : The output current/torque <math>&gt;</math> <math>L6-05</math> [Torque Detection Level 2], or the output current/torque <math>&lt;</math> <math>L6-05</math> for longer than the time set in <math>L6-06</math> [Torque Detection Time 2].</p>
1A	During Reverse	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>The terminal activates when the motor operates in the reverse direction. ON : The motor is operating in the reverse direction. OFF : The motor is operating in the forward direction or the motor stopped.</p>
1B	During Baseblock (N.C.)	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>The terminal deactivates during baseblock. When the drive is in baseblock, the drive output transistor stops switching and does not make DC bus voltage. ON : The drive is not in baseblock. OFF : During baseblock</p>
1C	Motor 2 Selected	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>The terminal activates when you select motor 2. ON : Motor 2 Selected OFF : Motor 1 Selected</p>
1E	Executing Auto-Restart	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>The terminal activates when the Auto Restart function is trying to restart after a fault.</p>
1F	Motor Overload Alarm (oL1)	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>The terminal activates when the electronic thermal protection value of the motor overload protective function is a minimum of 90% of the detection level.</p>
20	Drive Overheat Pre-Alarm (oH)	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>The terminal activates when the drive heatsink temperature is at the level set with <math>L8-02</math> [Overheat Alarm Level].</p>
21	Safe Torque OFF	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>The terminal activates (safety stop state) when the safety circuit and safety diagnosis circuit are operating correctly and when terminals H1-HC and H2-HC are OFF (Open). ON : Safety stop state OFF : Safety circuit fault or RUN/READY</p>

Setting Value	Function	Description
2F	Maintenance Notification	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>The terminal activates when drive components are at their estimated maintenance period. Tells you about the maintenance period for these items:</p> <ul style="list-style-type: none"> <li>• IGBT</li> <li>• Cooling Fan</li> <li>• Capacitor</li> <li>• Soft charge bypass relay</li> </ul>
30	During Torque Limit	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>The terminal activates when the torque reference is the torque limit set with <i>L7 parameters, H3-02, H3-06, or H3-10 [MFAI Function Selection]</i>.</p>
37	During Frequency Output	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>The terminal activates when the drive outputs frequency. ON : The drive is outputting frequency. OFF : The drive is not outputting frequency.</p>
38	Drive Enabled	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>This terminal activates when the <i>H1-xx = 6A [Drive Enable]</i> terminal activates.</p>
39	Watt Hour Pulse Output	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Outputs the pulse that shows the watt hours.</p>
3A	Drive Overheat Alarm	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>The terminal activates when the drive heatsink temperature is at the <i>L8-02 [Overheat Alarm Level]</i> setting while <i>L8-03 = 4 [Overheat Pre-Alarm Selection = Operate at Reduced Speed (L8-19)]</i> and the drive is running.</p>
3C	LOCAL Control Selected	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>The terminal activates when the Run command source or frequency reference source is LOCAL. ON : LOCAL OFF : REMOTE</p>
3D	During Speed Search	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>The terminal activates when the drive is doing speed search.</p>
42	Pressure Reached	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>The terminal activates when the pressure feedback is at the Pressure Setpoint.</p>
4A	During KEB Ride-Thru	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>The terminal activates during KEB Ride-Thru.</p>
4B	During Short Circuit Braking	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>The terminal activates during Short Circuit Braking. <b>Note:</b> When <i>A1-02 = 8 [Control Method Selection = EZOLV]</i>, this function is available only when you use a PM motor.</p>
4C	During Fast Stop	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>The terminal activates when the fast stop is in operation.</p>
4D	oH Pre-Alarm Reduction Limit	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>The terminal activates when <i>L8-03 = 4 [Overheat Pre-Alarm Selection = Operate at Reduced Speed (L8-19)]</i> and <i>oH [Heatsink Overheat]</i> does not clear after the drive decreases the frequency for 10 cycles.</p>
58	UL6 Underload Detected	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>The terminal activates when the drive detected <i>UL6 [Underload or Belt Break Detected]</i>.</p>
60	Internal Cooling Fan Failure	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>The terminal activates when the drive detects a cooling fan failure in the drive.</p>
61	Pole Position Detection Complete	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>The terminal activates when drive receives a Run command and the drive detects the motor magnetic pole position of the PM motor.</p>
62	Modbus Reg 1 Status Satisfied	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>The terminal activates when the bit specified by <i>H2-08 [Modbus Register 1 Bit Select]</i> for the MEMOBUS register address set with <i>H2-07 [Modbus Register 1 Address Select]</i> activates.</p>
63	Modbus Reg 2 Status Satisfied	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>The terminal activates when the bit specified by <i>H2-10 [Modbus Register 2 Bit Select]</i> for the MEMOBUS register address set with <i>H2-09 [Modbus Register 2 Address Select]</i> activates.</p>
69	External Power 24V Supply	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>The terminal activates when there is an external 24V power supply between terminals PS-AC. ON : The external 24V power supply is supplying power. OFF : The external 24V power supply is not supplying power.</p>
6A	Data Logger Error	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>The terminal activates when the drive detects a <i>LoG [Com Error / Abnormal SD card]</i>.</p>

### 3.10 H: Terminal Functions

Setting Value	Function	Description
71	Low PI2 Control Feedback Level	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> The terminal activates when the PI2 Control Feedback Level is less than S3-13 [PI2 Control Low Feedback Lvl].
72	High PI2 Control Feedback Level	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> The terminal activates when the PI2 Control Feedback Level is more than S3-15 [PI2 Control High Feedback Lvl].
89	Output Current Lim	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> The terminal activates when the output current limit is limiting the drive output speed.
8A	Pump 2 Control	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the function to do a contactor control for a second pump. ON : Pump 2 Running <b>Note:</b> You can use this function only when you set Y1-01 = 1 [Multiplex Mode = Contactor Multiplex].
8B	Pump 3 Control	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the function to do a contactor control for a third pump. ON : Pump 3 Running <b>Note:</b> You can use this function only when you set Y1-01 = 1 [Multiplex Mode = Contactor Multiplex] and Y3-00 [Number of Lag Pumps in System] > 1.
8C	Pump 4 Control	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the function to do a contactor control for a fourth pump. ON : Pump 4 Running <b>Note:</b> You can use this function only when you set Y1-01 = 1 [Multiplex Mode = Contactor Multiplex] and Y3-00 [Number of Lag Pumps in System] > 2.
8D	Pump 5 Control	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the function to do a contactor control for a fifth pump. ON : Pump 5 Running <b>Note:</b> You can use this function only when you set Y1-01 = 1 [Multiplex Mode = Contactor Multiplex] and Y3-00 [Number of Lag Pumps in System] > 3.
8E	Pump 6 Control	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the function to do a contactor control for a sixth pump. ON : Pump 6 Running <b>Note:</b> You can use this function only when you set Y1-01 = 1 [Multiplex Mode = Contactor Multiplex] and Y3-00 [Number of Lag Pumps in System] > 4.
94	Loss of Prime	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> The terminal activates when the drive is in an LOP [Loss of Prime] condition.
95	Thermostat Fault	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> The terminal activates when the terminal set for H1-xx = 88 [MFDI Function Selection = Thermostat Fault] is active.
96	High Feedback	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> The terminal activates when the drive is in a High Feedback Condition as specified by Y1-11 [High Feedback Level] and Y1-12 [High Feedback Lvl Fault Dly Time] and when the drive detects an HFB [High Feedback Sensed] fault or an HIFB [High Feedback Sensed] alarm.
97	Low Feedback	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> The terminal activates when the drive is in a Low Feedback Condition as specified by Y1-08 [Low Feedback Level] and Y1-09 [Low Feedback Lvl Fault Dly Time] and when the drive detects an LFB [Low Feedback Sensed] fault or an LOFB [High Feedback Sensed] alarm.
9E	Low PI Auxiliary Control Level	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> The terminal activates when the PI Aux Feedback Level is less than YF-09 [PI Aux Control Low Level Detect] or if the drive detects an LOAUX [Low PI Aux Feedback Level] fault.
9F	High PI Auxiliary Control Level	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> The terminal activates when the PI Aux Feedback Level is more than YF-12 [PI Aux Control High Level Detect] or if the drive detects an HIAUX [High PI Aux Feedback Level] fault.
A9	RELAY Operator Control	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> The terminal changes to OFF or ON when you push the RELAY ( <b>F3</b> ) button. When the terminal is ON, push <b>F3</b> to turn it OFF. When the terminal is OFF, push <b>F3</b> to turn in ON. <b>Note:</b> Set A1-01 = 3 [Access Level Selection = Expert Level] to enable this setting value.
AA	Utility Delay	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> The terminal activates when the drive is stopped and is waiting for the timer set in Y4-17 [Utility Start Delay] to expire.

Setting Value	Function	Description
AB	Thrust Mode	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> The terminal activates when the output frequency is between 0.0 Hz and the value set in <i>Y4-12 [Thrust Frequency]</i> and the Thrust Bearing function is active.
AC	Setpoint Not Maintained	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> The terminal activates when the drive detects <i>NMS [Setpoint Not Met]</i> condition.
B8	Pump Fault	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> The terminal activates when one of these faults is active: <i>LFB [Low Feedback Sensed]</i> , <i>HFB [High Feedback Sensed]</i> , <i>NMS [Setpoint Not Met]</i> , or <i>EFx [External Fault (Terminal Sx)]</i> .
B9	Transducer Loss	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> The terminal activates when the current into the analog input associated with PID feedback is more than 21 mA or less than 3 mA, or an <i>FDBKL [WIRE Break] Fault</i> or an <i>FDBKL [Feedback Loss Wire Break] Alarm</i> is active.
BA	PI Auxiliary Control Active	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> The terminal activates when the PI Auxiliary Controller has an effect on the output speed.
BB	Differential Feedback Exceeded	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> The terminal activates when the difference between the PID Feedback and the value from the terminal set for <i>H3-xx = 2D [Differential Feedback]</i> is more than <i>Y4-18 [Differential Level]</i> for the time set in <i>Y4-19 [Differential Lvl Detection Time]</i> .
BC	Sleep Active	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> The terminal activates when the Sleep function is active and the drive is not operating. <b>Note:</b> The terminal will not activate for Sleep Boost function.
BD	Start Delay	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> The terminal activates when the Feedback is more than the start level or the Feedback is less than the Inverse PID and the start timer is timing. <b>Note:</b> You must set <i>Y1-04 [Sleep Wake-up Level] ≠ 0</i> and <i>Y1-05 [Sleep Wake-up Level Delay Time] ≠ 0</i> to use this function.
BE	Pre-Charge	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> The terminal activates when the drive is in Pre-Charge Mode.
C3	Main Feedback Lost	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> The terminal activates when the drive loses the main PID feedback.
C4	Backup Feedback Lost	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> The terminal activates when the drive loses the backup PID feedback.
C5	De-Scale Active	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the drive to go into the De-Scale function when the output terminal is ON. ON : De-Scale is running <b>Note:</b> De-Scale function is disabled and will be reset during Emergency Override.
100	!During Run	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> The terminal deactivates when you input a Run command and when the drive is outputting voltage. ON : Drive is stopping OFF : Drive is running
101	!Zero Speed	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> The terminal deactivates when the output frequency < <i>E1-09 [Minimum Output Frequency]</i> . <b>Note:</b> Parameter <i>E1-09</i> is the reference in all control methods. ON : Output frequency ≥ value of <i>E1-09</i> . OFF : Output frequency < value of <i>E1-09</i> .
102	!Speed Agree 1	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> The terminal deactivates when the output frequency is in the range of the frequency reference ± <i>L4-02 [Speed Agree Detection Width]</i> . <b>Note:</b> The detection function operates in the two motor rotation directions. ON : The output frequency does not align with the frequency reference although the drive is running. OFF : The output frequency is in the range of "frequency reference ± <i>L4-02</i> ".
103	!User-Set Speed Agree 1	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> The terminal deactivates when the output frequency is in the range of <i>L4-01 [Speed Agree Detection Level] ± L4-02 [Speed Agree Detection Width]</i> and in the range of the frequency reference ± <i>L4-02</i> . <b>Note:</b> The detection function operates in the two motor rotation directions. The drive uses the <i>L4-01</i> value as the forward/reverse detection level. ON : The output frequency is not in the range of " <i>L4-01 ± L4-02</i> " or the range of frequency reference ± <i>L4-02</i> . OFF : The output frequency is in the range of " <i>L4-01 ± L4-02</i> " and the range of frequency reference ± <i>L4-02</i> .

### 3.10 H: Terminal Functions

Setting Value	Function	Description
105	!Frequency Detection 2	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>The terminal deactivates when the output frequency &gt; L4-01 [Speed Agree Detection Level]. After the terminal deactivates, the terminal stays deactivated until the output frequency is at the value of "L4-01 - L4-02 [Speed Agree Detection Width]".</p> <p><b>Note:</b> The detection function operates in the two motor rotation directions. The drive uses the L4-01 value as the forward/reverse detection level.</p> <p>ON : The output frequency &lt; "L4-01 - L4-02", or the output frequency ≤ L4-01 OFF : The output frequency &gt; L4-01</p>
106	!Drive Ready	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>The terminal deactivates when the drive is ready and running.</p>
107	!DC Bus Undervoltage	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>The terminal deactivates when the DC bus voltage or control circuit power supply is at the voltage set in L2-05 [Undervoltage Detection Lvl (Uv1)] or less. The terminal also deactivates when there is a fault with the DC bus voltage.</p> <p>ON : The DC bus voltage &gt; L2-05 OFF : The DC bus voltage ≤ L2-05</p>
108	!During Baseblock (N.O.)	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>The terminal deactivates during baseblock. When the drive is in baseblock, the drive output transistor stops switching and does not make DC bus voltage.</p> <p>ON : The drive is not in baseblock. OFF : During baseblock.</p>
109	!Frequency Reference from Keypad	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows the selected frequency reference source.</p> <p>ON : Parameter b1-01 [Frequency Reference Selection 1] is the frequency reference source. OFF : The keypad is the frequency reference source.</p>
10A	!Run Command from Keypad	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows the selected Run command source.</p> <p>ON : b1-02 [Run Command Selection 1] or b1-16 [Run Command Selection 2] is the Run command source. OFF : The keypad is the Run command source.</p>
10B	!Torque Detection 1 (N.O.)	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>The terminal deactivates when the drive detects overtorque or undertorque.</p> <p>OFF : The output current/torque &gt; L6-02 [Torque Detection Level 1], or &lt; L6-02 for longer than the time set with L6-03 [Torque Detection Time 1].</p>
10C	!Frequency Reference Loss	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>The terminal deactivates when the drive detects a loss of frequency reference.</p>
10E	!Fault	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>The terminal deactivates when the drive detects a fault.</p> <p><b>Note:</b> The terminal will not deactivate for CPF00 and CPF01 [Control Circuit Error] faults.</p>
110	!Alarm	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>The terminal deactivates when the drive detects a minor fault.</p>
111	!Fault Reset Command Active	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>The terminal deactivates when the drive receives the Reset command from the control circuit terminal, serial communications, or the communication option.</p>
112	!Timer Output	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the terminal as the timer output. Use this setting with the timer input set in H1-xx = 118 [MFDI Function Selection = !Timer Function].</p>
113	!Speed Agree 2	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>The terminal deactivates when the output frequency is in the range of the frequency reference ± L4-04 [Speed Agree Detection Width (+/-)].</p> <p><b>Note:</b> The detection function operates in the two motor rotation directions.</p> <p>ON : The output frequency is not in the range of "frequency reference ± L4-04". OFF : The output frequency is in the range of "frequency reference ± L4-04".</p>
114	!User-Set Speed Agree 2	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>The terminal deactivates when the output frequency is in the range of L4-03 [Speed Agree Detection Level (+/-)] ± L4-04 [Speed Agree Detection Width (+/-)] and in the range of the frequency reference ± L4-04.</p> <p><b>Note:</b> The detection level set in L4-03 is a signed value. The drive will only detect in one direction.</p> <p>ON : The output frequency is not in the range of "L4-03 ± L4-04" or the range of frequency reference ± L4-04. OFF : The output frequency is in the range of "L4-03 ± L4-04" and the range of frequency reference ± L4-04.</p>

Setting Value	Function	Description
115	!Frequency Detection 3	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>The terminal activates when the output frequency &gt; "L4-03 [Speed Agree Detection Level (+/-)] + L4-04 [Speed Agree Detection Width (+/-)]". After the terminal activates, the terminal stays activated until the output frequency is at the value of L4-03.</p> <p><b>Note:</b> The detection level set in L4-03 is a signed value. The drive will only detect in one direction. ON : The output frequency &gt; "L4-03 + L4-04" OFF : The output frequency &lt; L4-03, or the output frequency ≤ "L4-03 + L4-04"</p>
116	!Frequency Detection 4	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>The terminal deactivates when the output frequency &gt; L4-03 [Speed Agree Detection Level (+/-)]. After the terminal deactivates, the terminal stays deactivated until the output frequency is at the value of "L4-03 - L4-04".</p> <p><b>Note:</b> The detection level set in L4-03 is a signed value. The drive will only detect in one direction. ON : The output frequency &lt; "L4-03 - L4-04", or the output frequency ≤ L4-03 OFF : The output frequency &gt; L4-03</p>
117	!Torque Detection 1 (N.C.)	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>The terminal activates when the drive detects overtorque or undertorque. ON : The output current/torque &gt; L6-02 [Torque Detection Level 1], or the output current/torque &lt; L6-02 for longer than the time set in L6-03 [Torque Detection Time 1].</p>
118	!Torque Detection 2 (N.O.)	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>The terminal deactivates when the drive detects overtorque or undertorque. OFF : The output current/torque &gt; L6-05 [Torque Detection Level 2], or the output current/torque &lt; L6-05 for longer than the time set in L6-06 [Torque Detection Time 2].</p>
119	!Torque Detection 2 (N.C.)	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>The terminal activates when the drive detects overtorque or undertorque. ON : The output current/torque &gt; L6-05 [Torque Detection Level 2], or the output current/torque &lt; L6-05 for longer than the time set in L6-06 [Torque Detection Time 2].</p>
11A	!During Reverse	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>The terminal deactivates when the motor operates in the reverse direction. ON : The motor is operating in the forward direction or the motor stopped. OFF : The motor is operating in the reverse direction.</p>
11B	!During Baseblock (N.C.)	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>The terminal activates during baseblock. When the drive is in baseblock, the drive output transistor stops switching and does not make DC bus voltage. ON : During baseblock. OFF : The drive is not in baseblock.</p>
11C	!Motor 2 Selected	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>The terminal deactivates when motor 2 is selected. ON : Motor 1 Selection OFF : Motor 2 Selection</p>
11E	!Executing Auto-Restart	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>The terminal deactivates when the Auto Restart function is trying to restart after a fault.</p>
11F	!Motor Overload Alarm (oL1)	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>The terminal deactivates when the electronic thermal protection value of the motor overload protective function is a minimum of 90% of the detection level.</p>
120	!Drive Overheat Pre-Alarm (oH)	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>The terminal deactivates when the drive heatsink temperature is at the level set with L8-02 [Overheat Alarm Level].</p>
121	!Safe Torque OFF	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>The terminal deactivates (safety stop state) when the safety circuit and safety diagnosis circuit are operating correctly and when terminals H1-HC and H2-HC are OFF (Open). ON : Safety circuit fault or RUN/READY OFF : Safety stop state</p>
12F	!Maintenance Notification	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>The terminal deactivates when drive components are at their estimated maintenance period. Tells the user about the maintenance period for these items:</p> <ul style="list-style-type: none"> <li>• IGBT</li> <li>• Cooling fan</li> <li>• Capacitor</li> <li>• Soft charge bypass relay</li> </ul>
130	!During Torque Limit	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>The terminal deactivates when the torque reference is the torque limit set with L7 parameters, H3-02, or H3-10 [MFAI Function Selection].</p>

### 3.10 H: Terminal Functions

Setting Value	Function	Description
137	!During Frequency Output	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>The terminal deactivates when the drive outputs frequency.            ON : The drive is not outputting frequency.            OFF : The drive is outputting frequency.</p>
138	!Drive Enabled	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>This terminal deactivates when the <math>H1-xx = 6A</math> [Drive Enable] terminal deactivates.</p>
139	!Watt Hour Pulse Output	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Outputs the pulse that shows the watt hours.</p>
13A	!Drive Overheat Alarm	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>The terminal deactivates when the drive heatsink temperature is at the <math>L8-02</math> [Overheat Alarm Level] setting while <math>L8-03 = 4</math> [Overheat Pre-Alarm Selection = Operate at Reduced Speed (L8-19)] and the drive is running.</p>
13C	!LOCAL Control Selected	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>The terminal deactivates when the Run command source or frequency reference source is LOCAL.            ON : REMOTE            OFF : LOCAL</p>
13D	!During Speed Search	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>The terminal deactivates when the drive is doing speed search.</p>
142	!Pressure Reached	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>The terminal deactivates when the pressure feedback is at the Pressure Setpoint.</p>
14A	!During KEB Ride-Thru	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>The terminal deactivates during KEB Ride-Thru.</p>
14B	!During Short Circuit Braking	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>The terminal deactivates during Short Circuit Braking.  <b>Note:</b>            When <math>A1-02 = 8</math> [Control Method Selection = EZOLV], this function is available only when you use a PM motor.</p>
14C	!During Fast Stop	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>The terminal deactivates when the fast stop is in operation.</p>
14D	!oH Pre-Alarm Reduction Limit	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>The terminal deactivates when <math>L8-03 = 4</math> [Overheat Pre-Alarm Selection = Operate at Reduced Speed (L8-19)] and <math>oH</math> [Heatsink Overheat] does not clear after the drive decreases the frequency for 10 cycles.</p>
158	!UL6 Underload Detected	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>The terminal deactivates when the drive detected <math>UL6</math> [Underload or Belt Break Detected].</p>
160	!Internal Cooling Fan Failure	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>The terminal deactivates when the drive detects a cooling fan failure in the drive.</p>
161	!Pole Position Detection Complete	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>The terminal deactivates when drive receives a Run command and the drive detects the motor magnetic pole position of the PM motor.</p>
162	!Modbus Reg 1 Status Satisfied	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>The terminal deactivates when the bit specified by <math>H2-08</math> [Modbus Register 1 Bit Select] for the MEMOBUS register address set with <math>H2-07</math> [Modbus Register 1 Address Select] activates.</p>
163	!Modbus Reg 2 Status Satisfied	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>The terminal deactivates when the bit specified by <math>H2-10</math> [Modbus Register 2 Bit Select] for the MEMOBUS register address set with <math>H2-09</math> [Modbus Register 2 Address Select] activates.</p>
169	!External Power 24V Supply	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>The terminal deactivates when there is an external 24V power supply between terminals PS-AC.            ON : The external 24V power supply is not supplying power.            OFF : The external 24V power supply is supplying power.</p>
16A	!Data Logger Error	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>The terminal deactivates when the drive detects <math>LoG</math> [Com Error / Abnormal SD card].</p>
171	!Low PI2 Control Feedback Level	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>The terminal deactivates when the PI2 Control Feedback Level is less than <math>S3-13</math> [PI2 Control Low Feedback Lvl].</p>
172	!High PI2 Control Feedback Level	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>The terminal deactivates when the PI2 Control Feedback Level is more than <math>S3-15</math> [PI2 Control High Feedback Lvl].</p>
189	!Output Current Lim	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>The terminal deactivates when the output current limit is limiting the drive output speed.</p>

Setting Value	Function	Description
18A	!Pump 2 Control	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the function to do a contactor control for a second pump. OFF : Pump 2 Running</p> <p><b>Note:</b> You can use this function only when you set <math>Y1-01 = 1</math> [Multiplex Mode = Contactor Multiplex].</p>
18B	!Pump 3 Control	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the function to do a contactor control for a third pump. OFF : Pump 3 Running</p> <p><b>Note:</b> You can use this function only when you set <math>Y1-01 = 1</math> [Multiplex Mode = Contactor Multiplex] and <math>Y3-00</math> [Number of Lag Pumps in System] &gt; 1.</p>
18C	!Pump 4 Control	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the function to do a contactor control for a fourth pump. OFF : Pump 4 Running</p> <p><b>Note:</b> You can use this function only when you set <math>Y1-01 = 1</math> [Multiplex Mode = Contactor Multiplex] and <math>Y3-00</math> [Number of Lag Pumps in System] &gt; 2.</p>
18D	!Pump 5 Control	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the function to do a contactor control for a fifth pump. OFF : Pump 5 Running</p> <p><b>Note:</b> You can use this function only when you set <math>Y1-01 = 1</math> [Multiplex Mode = Contactor Multiplex] and <math>Y3-00</math> [Number of Lag Pumps in System] &gt; 3.</p>
18E	!Pump 6 Control	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the function to do a contactor control for a sixth pump. OFF : Pump 6 Running</p> <p><b>Note:</b> You can use this function only when you set <math>Y1-01 = 1</math> [Multiplex Mode = Contactor Multiplex] and <math>Y3-00</math> [Number of Lag Pumps in System] &gt; 4.</p>
194	!Loss of Prime	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>The terminal deactivates when the drive is in an LOP [Loss of Prime] condition.</p>
195	!Thermostat Fault	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>The terminal deactivates when the terminal set for <math>H1-xx = 88</math> [MFDI Function Selection = Thermostat Fault] is active.</p>
196	!High Feedback	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>The terminal deactivates when the drive is in a High Feedback Condition as specified by <math>Y1-11</math> [High Feedback Level] and <math>Y1-12</math> [High Feedback Lvl Fault Dly Time] and when the drive detects an HFB [High Feedback Sensed] fault or an HIFB [High Feedback Sensed] alarm.</p>
197	!Low Feedback	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>The terminal deactivates when the drive is in a Low Feedback Condition as specified by <math>Y1-08</math> [Low Feedback Level] and <math>Y1-09</math> [Low Feedback Lvl Fault Dly Time] and when the drive detects an LFB [Low Feedback Sensed] fault or an LOFB [High Feedback Sensed] alarm.</p>
19E	!Low PI Auxiliary Control Level	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>The terminal deactivates when the PI Aux Feedback Level is less than <math>YF-09</math> [PI Aux Control Low Level Detect] or if the drive detects an LOAUX [Low PI Aux Feedback Level] fault.</p>
19F	!High PI Auxiliary Control Level	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>The terminal deactivates when the PI Aux Feedback Level is more than <math>YF-12</math> [PI Aux Control High Level Detect] or if the drive detects an HIAUX [High PI Aux Feedback Level] fault.</p>
1A9	!RELAY Operator Control	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>The terminal changes to OFF or ON when you push the RELAY ( <b>F3</b> ) button. When the terminal is ON, push <b>F3</b> to turn it OFF. When the terminal is OFF, push <b>F3</b> to turn in ON.</p> <p><b>Note:</b> Set <math>A1-01 = 3</math> [Access Level Selection = Expert Level] to enable this setting value.</p>
1AA	!Utility Delay	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>The terminal deactivates when the drive is stopped and is waiting for the timer set in <math>Y4-17</math> [Utility Start Delay] to expire.</p>
1AB	!Thrust Mode	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>The terminal deactivates when the output frequency is between 0.0 Hz and the value set in <math>Y4-12</math> [Thrust Frequency] and the Thrust Bearing function is active.</p>
1AC	!Setpoint Not Maintained	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>The terminal deactivates when the drive detects NMS [Setpoint Not Met] condition.</p>
1B8	!Pump Fault	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>The terminal deactivates when one of these faults is active: LFB [Low Feedback Sensed], HFB [High Feedback Sensed], NMS [Setpoint Not Met], or EFx [External Fault (Terminal Sx)].</p>

### 3.10 H: Terminal Functions

Setting Value	Function	Description
1B9	!Transducer Loss	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> The terminal deactivates when the current into the analog input associated with PID feedback is more than 21 mA or less than 3 mA, or an <i>FDBKL [WIRE Break]</i> Fault or an <i>FDBKL [Feedback Loss Wire Break]</i> Alarm is active.
1BA	!PI Auxiliary Control Active	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> The terminal deactivates when the PI Auxiliary Controller has an effect on the output speed.
1BB	!Differential Feedback Exceeded	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> The terminal deactivates when the difference between the PID Feedback and the value from the terminal set for <i>H3-xx = 2D [Differential Feedback]</i> is more than <i>Y4-18 [Differential Level]</i> for the time set in <i>Y4-19 [Differential Lvl Detection Time]</i> .
1BC	!Sleep Active	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> The terminal deactivates when the Sleep function is active and the drive is not operating. <b>Note:</b> The terminal will not deactivate for Sleep Boost function.
1BD	!Start Delay	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> The terminal deactivates when the Feedback is more than the start level or the Feedback is less than the Inverse PID and the start timer is timing. <b>Note:</b> You must set <i>Y1-04 [Sleep Wake-up Level] ≠ 0</i> and <i>Y1-05 [Sleep Wake-up Level Delay Time] ≠ 0</i> to use this function.
1BE	!Pre-Charge	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> The terminal deactivates when the drive is in Pre-Charge Mode.
1C3	!Main Feedback Lost	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> The terminal deactivates when the drive loses the main PID feedback.
1C4	!Backup Feedback Lost	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> The terminal deactivates when the drive loses the backup PID feedback.
1C5	!De-Scale Active	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the drive to go into the De-Scale function when the output terminal is OFF. OFF : De-Scale is running <b>Note:</b> De-Scale function is disabled and will be reset during Emergency Override.

### ◆ H3: Analog Inputs

No. (Hex.)	Name	Description	Default (Range)
H3-01 (0410)	Terminal A1 Signal Level Select	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the input signal level for MFAI terminal A1. 0 : 0 to 10V (Lower Limit at 0) 2 : 4 to 20 mA 3 : 0 to 20 mA	0 (0 - 3)
H3-02 (0434)	Terminal A1 Function Selection	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets a function for MFAI terminal A1.	0 (0 - 2D)
H3-03 (0411) RUN	Terminal A1 Gain Setting	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the gain of the analog signal input to MFAI terminal A1.	100.0% (-999.9 - +999.9%)
H3-04 (0412) RUN	Terminal A1 Bias Setting	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the bias of the analog signal input to MFAI terminal A1.	0.0% (-999.9 - +999.9%)
H3-05 (0413)	Terminal A3 Signal Level Select	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the input signal level for MFAI terminal A3. 0 : 0-10V (Lower Limit at 0) 2 : 4 to 20 mA 3 : 0 to 20 mA	0 (0 - 3)
H3-06 (0414)	Terminal A3 Function Selection	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the function for MFAI terminal A3.	2 (0 - 2D)
H3-07 (0415) RUN	Terminal A3 Gain Setting	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the gain of the analog signal input to MFAI terminal A3.	100.0% (-999.9 - +999.9%)
H3-08 (0416) RUN	Terminal A3 Bias Setting	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the bias of the analog signal input to MFAI terminal A3.	0.0% (-999.9 - +999.9%)

No. (Hex.)	Name	Description	Default (Range)
H3-09 (0417)	Terminal A2 Signal Level Select	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the input signal level for MFAI terminal A2. 0 : 0-10V (LowLim=0) 2 : 4 to 20 mA 3 : 0 to 20 mA	2 (0 - 3)
H3-10 (0418)	Terminal A2 Function Selection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the function for MFAI terminal A2.	0 (0 - 2D)
H3-11 (0419) RUN	Terminal A2 Gain Setting	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the gain of the analog signal input to MFAI terminal A2.	100.0% (-999.9 - +999.9%)
H3-12 (041A) RUN	Terminal A2 Bias Setting	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the bias of the analog signal input to MFAI terminal A2.	0.0% (-999.9 - +999.9%)
H3-13 (041B)	Analog Input FilterTime Constant	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the time constant for primary delay filters on MFAI terminals.	0.03 s (0.00 - 2.00 s)
H3-14 (041C)	Analog Input Terminal Enable Sel	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the enabled terminal or terminals when $H1-xx = C$ [MFDI Function Select = Analog Terminal Enable Selection] is ON. 1 : Terminal A1 only 2 : Terminal A2 only 3 : Terminals A1 and A2 4 : Terminal A3 only 5 : Terminals A1 and A3 6 : Terminals A2 and A3 7 : Terminals A1, A2, and A3	7 (1 - 7)
H3-16 (02F0)	Terminal A1 Offset	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the offset level for analog signals input to terminal A1. Usually it is not necessary to change this setting.	0 (-500 - +500)
H3-17 (02F1)	Terminal A2 Offset	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the offset level for analog signals input to terminal A2. Usually it is not necessary to change this setting.	0 (-500 - +500)
H3-18 (02F2)	Terminal A3 Offset	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the offset level for analog signals input to terminal A3. Usually it is not necessary to change this setting.	0 (-500 - +500)
H3-40 (0B5C) Expert	Mbus Reg 15C1h Input Function	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the MEMOBUS AI1 function.	F (4 - 2D)
H3-41 (0B5F) Expert	Mbus Reg 15C2h Input Function	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the MEMOBUS AI2 function.	F (4 - 2D)
H3-42 (0B62) Expert	Mbus Reg 15C3h Input Function	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the MEMOBUS AI3 function.	F (4 - 2D)
H3-43 (117F)	Mbus Reg Inputs FilterTime Const	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the time constant to apply a primary delay filter to the MEMOBUS analog input register values.	0.00 s (0.00 - 2.00 s)

### ■ H3-xx: MFAI Setting Values

Setting Value	Function	Description
0	Frequency Reference	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> The input value from the MFAI terminal set with this function becomes the master frequency reference.
1	Frequency Gain	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> The drive multiplies the analog frequency reference with the input value from the MFAI set with this function.
2	Auxiliary Frequency Reference 1	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets Reference 2 through multi-step speed reference to enable the command reference (Auxiliary Frequency Reference 1) from the analog input terminal set here. This value is a percentage where the Maximum Output Frequency setting is a setting value of 100%. <b>Note:</b> Parameter $A1-02$ [Control Method Selection] selects which parameter is the maximum output frequency. • $A1-02 \neq 8$ [EZOLV]: $E1-04$ [Maximum Output Frequency] • $A1-02 = 8$ : $E9-02$ [Maximum Speed]

### 3.10 H: Terminal Functions

Setting Value	Function	Description
3	Auxiliary Frequency Reference 2	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets Reference 3 through multi-step speed reference to enable the command reference (Auxiliary Frequency Reference 2) from the analog input terminal set here. This value is a percentage where the Maximum Output Frequency setting is a setting value of 100%.</p> <p><b>Note:</b> Parameter <i>A1-02 [Control Method Selection]</i> selects which parameter is the maximum output frequency.  <ul style="list-style-type: none"> <li>• <i>A1-02 ≠ 8 [EZOLV]: E1-04 [Maximum Output Frequency]</i></li> <li>• <i>A1-02 = 8: E9-02 [Maximum Speed]</i></li> </ul> </p>
4	Output Voltage Bias	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Set this parameter to input a bias signal and amplify the output voltage.</p>
5	Accel/Decel Time Gain	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Enters a signal to adjust the gain used for <i>C1-01 to C1-04 [Acceleration/Deceleration Times 1 and 2]</i> and <i>C1-09 [Fast Stop Time]</i> when the full scale analog signal (10 V or 20 mA) is 100%.</p>
6	DC Injection Braking Current	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Enters a signal to adjust the current level used for DC Injection Braking when the drive rated output current is 100%.</p>
7	Torque Detection Level	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Enters a signal to adjust the overtorque/undertorque detection level.</p> <p><b>Note:</b> Use this function with <i>L6-01 [Torque Detection Selection 1]</i>. This parameter functions as an alternative to <i>L6-02 [Torque Detection Level 1]</i>.</p>
8	Stall Prevent Level During Run	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Enters a signal to adjust the stall prevention level during run if the drive rated current is 100%.</p>
9	Output Frequency Lower Limit	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Enters a signal to adjust the output frequency lower limit level as a percentage of the maximum output frequency.</p> <p><b>Note:</b> Parameter <i>A1-02 [Control Method Selection]</i> selects which parameter is the maximum output frequency.  <ul style="list-style-type: none"> <li>• <i>A1-02 ≠ 8 [EZOLV]: E1-04 [Maximum Output Frequency]</i></li> <li>• <i>A1-02 = 8: E9-02 [Maximum Speed]</i></li> </ul> </p>
B	PID Feedback	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Enter the PID feedback value as a percentage of the maximum output frequency.</p> <p><b>Note:</b> Parameter <i>A1-02 [Control Method Selection]</i> selects which parameter is the maximum output frequency.  <ul style="list-style-type: none"> <li>• <i>A1-02 ≠ 8 [EZOLV]: E1-04 [Maximum Output Frequency]</i></li> <li>• <i>A1-02 = 8: E9-02 [Maximum Speed]</i></li> </ul> </p>
C	PID Setpoint	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Enters the PID setpoint as a percentage of the maximum output frequency.</p> <p><b>Note:</b> Parameter <i>A1-02 [Control Method Selection]</i> selects which parameter is the maximum output frequency.  <ul style="list-style-type: none"> <li>• <i>A1-02 ≠ 8 [EZOLV]: E1-04 [Maximum Output Frequency]</i></li> <li>• <i>A1-02 = 8: E9-02 [Maximum Speed]</i></li> </ul> </p>
D	Frequency Bias	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Enters the bias value added to the frequency reference as a percentage of the maximum output frequency.</p> <p><b>Note:</b> Parameter <i>A1-02 [Control Method Selection]</i> selects which parameter is the maximum output frequency.  <ul style="list-style-type: none"> <li>• <i>A1-02 ≠ 8 [EZOLV]: E1-04 [Maximum Output Frequency]</i></li> <li>• <i>A1-02 = 8: E9-02 [Maximum Speed]</i></li> </ul> </p>
E	Motor Temperature (PTC Input)	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Uses the motor Positive Temperature Coefficient (PTC) thermistor to prevent heat damage to the motor as a percentage of the current value when the 10 V analog signal is input.</p>
F	Not Used	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Use this setting for unused terminals or to use terminals in through mode.</p>
10	Forward Torque Limit	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Enters the forward torque limit when the motor rated torque is 100%.</p>
11	Reverse Torque Limit	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Enters the load torque limit if the motor rated torque is 100%.</p>
12	Regenerative Torque Limit	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Enters the regenerative torque limit if the motor rated torque is 100%.</p>
15	General Torque Limit	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Enters the torque limit that is the same for all quadrants for forward, reverse, and regenerative operation if the motor rated torque is 100%.</p>
16	Differential PID Feedback	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Enters the PID differential feedback value if the full scale analog signal (10 V or 20 mA) is 100%.</p>

Setting Value	Function	Description
1F	Not Used	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Use this setting for unused terminals or to use terminals in through mode.
24	PID Feedback Backup	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Enters the PID Feedback Backup signal for the drive to use when it loses the primary PID feedback set for $H3-xx = B$ [PID Feedback]. <b>Note:</b> The full-scale of the analog signal goes from $b5-71$ [Min PID Transducer Scaling] to $b5-38$ [PID User Unit Display Scaling].
25	PI2 Control Setpoint	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Enters the PI2 Control setpoint level as a percentage of the $S3-02$ [PI2 Control Transducer Scale] value. <b>Note:</b> Parameters $S3-03$ [PI2 Control Decimal Place Pos] and $S3-04$ [PI2 Control Unit Selection] set the resolution and unit.
26	PI2 Control Feedback	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Enters the PI2 Control feedback level as a percentage of the $S3-02$ [PI2 Control Transducer Scale] value. <b>Note:</b> Parameters $S3-03$ [PI2 Control Decimal Place Pos] and $S3-04$ [PI2 Control Unit Selection] set the resolution and unit.
27	PI Auxiliary Control Feedback	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Enters the PI Auxiliary Control feedback value when $YF-01 = 1$ [PI Aux Control Selection = Enabled]. <b>Note:</b> • The full-scale of the analog signal goes from $YF-35$ [PI Auxiliary Minimum Transducer Scale] to $YF-02$ [PI Aux Control Transducer Scale]. • Parameter $YF-22$ [PI Aux Level Decimal Place Pos] sets the resolution.
2B	Emergency Override PID Feedback	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> This input is the PID Feedback source when Emergency Override is running in PID mode ( $S6-02 = 2$ or $3$ [Emergency Override Ref Selection = System PID Mode or Independent PID Mode]). <b>Note:</b> • When $S6-02 = 2$ [Emergency Override Ref Selection = System PID Mode], the full-scale of the analog signal goes from $b5-71$ [Min PID Transducer Scaling] to $b5-38$ [PID User Unit Display Scaling]. • When $S6-02 = 3$ [Independent PID Mode], the full-scale of the analog signal goes from $b5-71$ to $S6-03$ [EMOVR Independent PID Scale]. • When you set MEMOBUS register 3A93h bit 4, register 3A95h becomes the Emergency Override Feedback source.
2C	Emergency Override PID Setpoint	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> This input is the PID Setpoint source when Emergency Override is running in PID mode ( $S6-02 = 2$ or $3$ [Emergency Override Ref Selection = System PID Mode or Independent PID Mode]). <b>Note:</b> • When $S6-02 = 2$ [Emergency Override Ref Selection = System PID Mode], the full-scale of the analog signal goes from $b5-71$ [Min PID Transducer Scaling] to $b5-38$ [PID User Unit Display Scaling]. • When $S6-02 = 3$ [Independent PID Mode], the full-scale of the analog signal goes from $b5-71$ to $S6-03$ [EMOVR Independent PID Scale]. • When you set MEMOBUS register 3A93h bit 5, register 3A96h becomes the Emergency Override Setpoint source.
2D	Differential Level Source	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Enters a feedback value to calculate the Differential Level between the <i>Differential Level Source</i> feedback and the primary PID Feedback [ $H3-xx = B$ ]. <b>Note:</b> The full-scale of the analog signal goes from $b5-71$ [Min PID Transducer Scaling] to $b5-38$ [PID User Unit Display Scaling].
2E	Bypass HAND Freq Ref or Setpoint	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> This selection is only for use in an FP605 bypass configuration.

## ◆ H4: Analog Outputs

No. (Hex.)	Name	Description	Default (Range)
H4-01 (041D)	Terminal FM Analog Output Select	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the monitor number to send from MFAO terminal FM. Set the $x-xx$ part of the $Ux-xx$ [Monitor]. For example, set $H4-01 = 102$ to monitor $U1-02$ [Output Frequency].	102 (000 - 1299)
H4-02 (041E) RUN	Terminal FM Analog Output Gain	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the gain of the monitor signal that is sent from MFAO terminal FM. Sets the analog signal output level from the terminal FM at 10 V or 20 mA as 100% when an output for monitoring items is 100%.	100.0% (-999.9 - +999.9%)
H4-03 (041F) RUN	Terminal FM Analog Output Bias	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the bias of the monitor signal that is sent from MFAO terminal FM. Set the level of the analog signal sent from terminal FM at 10 V or 20 mA as 100% when an output for monitoring items is 0%.	0.0% (-999.9 - +999.9%)

### 3.10 H: Terminal Functions

No. (Hex.)	Name	Description	Default (Range)
H4-04 (0420)	Terminal AM Analog Output Select	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the monitoring number to be output from the MFAO terminal AM. Set the x-xx part of the Ux-xx [Monitor]. For example, set H4-04 = 103 to monitor U1-03 [Output Current].	103 (000 - 1299)
H4-05 (0421) RUN	Terminal AM Analog Output Gain	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the gain of the monitor signal that is sent from MFAO terminal AM. When an output for monitoring items is 0%, this parameter sets the analog signal output level from the AM terminal at 10 V or 20 mA as 100%.	50.0% (-999.9 - +999.9%)
H4-06 (0422) RUN	Terminal AM Analog Output Bias	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the bias of the monitor signal that is sent from MFAO terminal AM. When an output for monitoring items is 0%, this parameter sets the analog signal output level from the AM terminal at 10 V or 20 mA as 0%.	0.0% (-999.9 - +999.9%)
H4-07 (0423)	Terminal FM Signal Level Select	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the MFAO terminal FM output signal level. <b>Note:</b> Set jumper S5 on the control circuit terminal block accordingly when you change this parameter. 0 : 0 to 10 Vdc 2 : 4 to 20 mA	0 (0, 2)
H4-08 (0424)	Terminal AM Signal Level Select	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the MFAO terminal AM output signal level. <b>Note:</b> Set jumper S5 on the control circuit terminal block accordingly when you change this parameter. 0 : 0 to 10 Vdc 2 : 4 to 20 mA	0 (0, 2)
H4-20 (0B53)	Analog Power Monitor 100% Level	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the level at 10 V when you set U1-08 [Output Power] for analog output.	0.00 kW (0.00 - 650.00 kW)

### ◆ H5: Modbus Communication

No. (Hex.)	Name	Description	Default (Range)
H5-01 (0425)	Drive Node Address	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the communication slave address for drives. <b>Note:</b> • Re-energize the drive or set H5-20 = 1 [Communication Parameters Reload = Reload Now] after you change the parameter setting. • Setting 0 will not let the drive respond to MEMOBUS/Modbus communications.	1FH (0 - FFH)
H5-02 (0426)	Communication Speed Selection	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the communications speed for MEMOBUS/Modbus communications. <b>Note:</b> Re-energize the drive or set H5-20 = 1 [Communication Parameters Reload = Reload Now] after you change the parameter setting. 0 : 1200 bps 1 : 2400 bps 2 : 4800 bps 3 : 9600 bps 4 : 19.2 kbps 5 : 38.4 kbps 6 : 57.6 kbps 7 : 76.8 kbps 8 : 115.2 kbps	3 (0 - 8)
H5-03 (0427)	Communication Parity Selection	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the communications parity used for MEMOBUS/Modbus communications. <b>Note:</b> Re-energize the drive or set H5-20 = 1 [Communication Parameters Reload = Reload Now] after you change the parameter setting. 0 : No parity 1 : Even parity 2 : Odd parity	0 (0 - 2)

No. (Hex.)	Name	Description	Default (Range)
H5-04 (0428)	Communication Error Stop Method	<b>V/f OLV/PM EZOLV</b> Sets the motor Stopping Method when the drive detects a Modbus Communication Error condition. 0 : Ramp to Stop 1 : Coast to Stop 2 : Fast Stop (Use C1-09) 3 : Alarm Only 4 : Run at H5-34 (CE Go-To-Freq)	3 (0 - 4)
H5-05 (0429)	Comm Fault Detection Selection	<b>V/f OLV/PM EZOLV</b> Sets the function that detects CE [Modbus Communication Error] issues during MEMOBUS/Modbus communications. 0 : Disabled 1 : Enabled	1 (0, 1)
H5-06 (042A)	Drive Transmit Wait Time	<b>V/f OLV/PM EZOLV</b> Sets the time to wait to send a response message after the drive receives a command message from the master. <b>Note:</b> Restart the drive after changing the parameter setting.	5 ms (0 - 65 ms)
H5-09 (0435)	CE Detection Time	<b>V/f OLV/PM EZOLV</b> Sets the detection time for CE [Modbus Communication Error] issues when communication stops.	2.0 s (0.0 - 10.0 s)
H5-10 (0436)	Modbus Register 0025H Unit Sel	<b>V/f OLV/PM EZOLV</b> Sets the unit of measure used for the MEMOBUS/Modbus communications monitor register 0025H (output voltage reference monitor). 0 : 0.1 V units 1 : 1 V units	0 (0, 1)
H5-11 (043C)	Comm ENTER Command Mode	<b>V/f OLV/PM EZOLV</b> Sets the function to make the Enter command necessary to change parameters through MEMOBUS/Modbus communications. 0 : ENTER Command Required 1 : ENTER Command Not Required	0 (0, 1)
H5-12 (043D)	Run Command Method Selection	<b>V/f OLV/PM EZOLV</b> Sets the input method for the Run command when $b1-02 = 2$ [Run Command Selection 1 = Memobus/Modbus Communications] or $b1-16 = 2$ [Run Command Selection 2 = Memobus/Modbus Communications]. 0 : FWD/Stop, REV/Stop 1 : Run/Stop, FWD/REV	0 (0, 1)
H5-18 (11A2)	Motor Speed Filter over Comms	<b>V/f OLV/PM EZOLV</b> Sets the filter time constant used when monitoring motor speed during MEMOBUS/Modbus communications or with a communication option.	0 ms (0 - 100 ms)
H5-20 (0B57)	Communication Parameters Reload	<b>V/f OLV/PM EZOLV</b> Sets the function to immediately enable updated MEMOBUS/Modbus communications parameters. 0 : Reload at Next Power Cycle 1 : Reload Now	0 (0, 1)
H5-22 (11CF)	Speed Search from MODBUS	<b>V/f OLV/PM EZOLV</b> Enables the MEMOBUS/Modbus communication register Speed Search function (bit0 of 15DFH). 0 : Disabled 1 : Enabled	0 (0, 1)
H5-25 (1589) RUN Expert	Function 5A Register 1 Selection	<b>V/f OLV/PM EZOLV</b> Returns the contents of the specified MEMOBUS/Modbus communications register when responding to the master device.	0044H (U1-05) (0000H - FFFFH)
H5-26 (158A) RUN Expert	Function 5A Register 2 Selection	<b>V/f OLV/PM EZOLV</b> Returns the contents of the specified MEMOBUS/Modbus communications register when responding to the master device.	0045H (U1-06) (0000H - FFFFH)
H5-27 (158B) RUN Expert	Function 5A Register 3 Selection	<b>V/f OLV/PM EZOLV</b> Returns the contents of the specified MEMOBUS/Modbus communications register when responding to the master device.	0042H (U1-03) (0000H - FFFFH)
H5-28 (158C) RUN Expert	Function 5A Register 4 Selection	<b>V/f OLV/PM EZOLV</b> Returns the contents of the specified MEMOBUS/Modbus communications register when responding to the master device.	0049H (U1-10) (0000H - FFFFH)

### 3.10 H: Terminal Functions

No. (Hex.)	Name	Description	Default (Range)
H5-33 (3FB3)	Power-up CALL Alarm	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Enables and disables <i>CALL [Serial Comm Transmission Error]</i> alarm detection. 0 : Disabled 1 : Enabled	1 (0, 1)
H5-34 (3FB4) RUN	Comm Error (CE) Go-To-Frequency	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the speed at which the drive will run when <i>H5-04 = 4 [Communication Error Stop Method = Run at H5-34]</i> and there is a <i>CE</i> .	0.0 Hz (0.0 - 400.0 Hz)
H5-35 (3FB5) RUN	Comm Error (CE) Go-To-Timeout	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> When <i>H5-04 = 4 [Communication Error Stop Method = Run at H5-34]</i> and a <i>CE</i> is present, the drive will run at the <i>H5-34 [Comm Error (CE) Go-To-Frequency]</i> speed for this length of time before it triggers a <i>CE</i> fault. <b>Note:</b> Set this parameter to 0 s to disable the time-out.	0 s (0 - 6000 s)
H5-36 (3FB6)	CE Fault Restart Select	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the drive to restart ( <i>L5-01 [Number of Auto-Restart Attempts]</i> ) after a <i>CE</i> fault. 0 : No Retry 1 : Retry	0 (0, 1)

### ◆ H6: Pulse Train Input

No. (Hex.)	Name	Description	Default (Range)
H6-01 (042C)	Terminal RP Pulse Train Function	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the function for pulse train input terminal RP. 0 : Frequency Reference 1 : PID Feedback Value 2 : PID Setpoint Value	0 (0 - 2)
H6-02 (042D) RUN	Terminal RP Frequency Scaling	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the frequency of the pulse train input signal used when the item selected with <i>H6-01 [Terminal RP Pulse Train Function]</i> is input at 100%.	1440 Hz (100 - 32000 Hz)
H6-03 (042E) RUN	Terminal RP Function Gain	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the gain used when the function in <i>H6-01 [Terminal RP Pulse Train Function]</i> is input to terminal RP.	100.0% (0.0 - 1000.0%)
H6-04 (042F) RUN	Terminal RP Function Bias	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the bias used when the function in <i>H6-01 [Terminal RP Pulse Train Function]</i> is input to terminal RP. Sets a value at the time when the pulse train is 0 Hz.	0.0% (-100.0 - 100.0%)
H6-05 (0430) RUN	Terminal RP Filter Time	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the time constant for the pulse train input primary delay filters.	0.10 s (0.00 - 2.00 s)
H6-08 (043F)	Terminal RP Minimum Frequency	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the minimum frequency of the pulse train signal that terminal RP can detect.	0.5 Hz (0.1 - 1000.0 Hz)

### ◆ H7: Virtual Inputs / Outputs

No. (Hex.)	Name	Description	Default (Range)
H7-00 (116F) Expert	Virtual MFIO selection	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the function to enable and disable the virtual I/O function. Set this parameter to 1 to operate the virtual I/O function. 0 : Disabled 1 : Enabled	0 (0, 1)
H7-01 (1185) Expert	Virtual Multi-Function Input 1	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the function that enters the virtual input set in <i>H7-10 [Virtual Multi-Function Output 1]</i> . <b>Note:</b> Settings <i>1B [Programming Lockout]</i> , <i>11B [!Programming Lockout]</i> , and <i>BE [Single Phase Converter Ready NC]</i> are not available.	F (1 - 1FF)

No. (Hex.)	Name	Description	Default (Range)
H7-02 (1186) Expert	Virtual Multi-Function Input 2	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the function that enters the virtual input set in H7-12 [Virtual Multi-Function Output 2]. <b>Note:</b> Settings 1B [Programming Lockout], 11B [!Programming Lockout], and BE [Single Phase Converter Ready NC] are not available.	F (1 - 1FF)
H7-03 (1187) Expert	Virtual Multi-Function Input 3	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the function that enters the virtual input set in H7-14 [Virtual Multi-Function Output 3]. <b>Note:</b> Settings 1B [Programming Lockout], 11B [!Programming Lockout], and BE [Single Phase Converter Ready NC] are not available.	F (1 - 1FF)
H7-04 (1188) Expert	Virtual Multi-Function Input 4	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the function that enters the virtual input set in H7-16 [Virtual Multi-Function Output 4]. <b>Note:</b> Settings 1B [Programming Lockout], 11B [!Programming Lockout], and BE [Single Phase Converter Ready NC] are not available.	F (1 - 1FF)
H7-10 (11A4) Expert	Virtual Multi-Function Output 1	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the function for virtual digital output 1.	F (0 - 1FF)
H7-11 (11A5) Expert	Virtual Output 1 Delay Time	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the minimum ON time for virtual digital output 1.	0.1 s (0.0 - 25.0 s)
H7-12 (11A6) Expert	Virtual Multi-Function Output 2	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the function for virtual digital output 2.	F (0 - 1FF)
H7-13 (11A7) Expert	Virtual Output 2 Delay Time	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the minimum ON time for virtual digital output 2.	0.1 s (0.0 - 25.0 s)
H7-14 (11A8) Expert	Virtual Multi-Function Output 3	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the function for virtual digital output 3.	F (0 - 1FF)
H7-15 (11A9) Expert	Virtual Output 3 Delay Time	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the minimum ON time for virtual digital output 3.	0.1 s (0.0 - 25.0 s)
H7-16 (11AA) Expert	Virtual Multi-Function Output 4	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the function for virtual digital output 4.	F (0 - 1FF)
H7-17 (11AB) Expert	Virtual Output 4 Delay Time	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the minimum ON time for virtual digital output 4.	0.1 s (0.0 - 25.0 s)
H7-30 (1177) Expert	Virtual Analog Input Selection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the virtual analog input function.	F (0 - 2D)
H7-31 (1178) RUN Expert	Virtual Analog Input Gain	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the virtual analog input gain.	100.0% (-999.9 - 999.9%)
H7-32 (1179) RUN Expert	Virtual Analog Input Bias	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the virtual analog input bias.	0.0% (-999.9 - 999.9%)
H7-40 (1163) Expert	Virtual Analog Out Signal Select	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the signal level of the virtual analog output. 0 : 0 to 100% (Absolute Value) 1 : -100 to 100% 2 : 0 to 100% (Lower Limit at 0)	0 (0 - 2)

### 3.10 H: Terminal Functions

No. (Hex.)	Name	Description	Default (Range)
H7-41 (1164) Expert	Virtual Analog Output Function	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the monitor to be output from the virtual analog output. Set the <i>x-xx</i> part of the <i>Ux-xx [Monitor]</i>. For example, set <i>H7-41 = 102</i> to monitor <i>U1-02 [Output Frequency]</i>.</p>	102 (0 - 1299)
H7-42 (1165) Expert	Virtual Analog Output FilterTime	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the time constant for a primary filter of the virtual analog output.</p>	0.00 s (0.00 - 2.00 s)

## 3.11 L: Protection Functions

### ◆ L1: Motor Protection

No. (Hex.)	Name	Description	Default (Range)
L1-01 (0480)	Motor Overload (oL1) Protection	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the motor overload protection with electronic thermal protectors.</p> <p>0 : Disable 1 : Variable Torque 2 : Constant Torque 10:1 Speed Range 3 : Constant Torque 100:1 SpeedRange 4 : PM Variable Torque 5 : PM Constant Torque 6 : Variable Torque (50Hz)</p> <p><b>Note:</b> When only one motor is connected to a drive, set <i>L1-01 = 1 to 6 [Enabled]</i>. External thermal relays are not necessary in these conditions.</p>	Determined by A1-02 (0 - 6)
L1-02 (0481)	Motor Overload Protection Time	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the operation time for the electronic thermal protector of the drive to prevent damage to the motor. Usually it is not necessary to change this setting.</p>	1.0 min (0.1 - 5.0 min)
L1-03 (0482)	Motor Thermistor oH Alarm Select	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets drive operation when the PTC input signal entered into the drive is at the <i>oH3 [Motor Overheat (PTC Input)]</i> detection level.</p> <p>0 : Ramp to Stop 1 : Coast to Stop 2 : Fast Stop (Use C1-09) 3 : Alarm Only</p>	3 (0 - 3)
L1-04 (0483)	Motor Thermistor oH Fault Select	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the drive operation when the PTC input signal to the drive is at the <i>oH4 [Motor Overheat Fault (PTC Input)]</i> detection level.</p> <p>0 : Ramp to Stop 1 : Coast to Stop 2 : Fast Stop (Use C1-09)</p>	1 (0 - 2)
L1-05 (0484)	Motor Thermistor Filter Time	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the primary delay time constant for the PTC input signal entered to the drive. This parameter prevents accidental motor overheat faults.</p>	0.20 s (0.00 - 10.00 s)
L1-08 (1103) Expert	oL1 Current Level	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the reference current for the motor 1 thermal overload detection. When the current level &gt; 0.0 A, you cannot set this value &lt; 10% of drive rated current.</p>	0.0 A (0.0 A or 10% to 150% of the drive rated current)
L1-09 (1104) Expert	oL1 Current Level for Motor 2	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the reference current for the motor 2 thermal overload detection. When the current level &gt; 0.0 A, you cannot set this value &lt; 10% of drive rated current.</p>	0.0 A (0.0 A or 10 to 150% of the drive rated current)
L1-13 (046D)	Motor Overload Memory Selection	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the function that keeps the current electronic thermal protector value after power loss.</p> <p>0 : Disabled 1 : Enabled 2 : Enabled, using RTC</p> <p><b>Note:</b> The drive saves <i>oL</i> status, time and date when there is a power loss. The drive uses this information and time of power up to calculate <i>oL</i>.</p>	2 (0 - 2)
L1-22 (0768) RUN	Leakage Current Filter Time1	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the leakage current detection reduction filter time constant during constant speed run.</p> <p><b>Note:</b> You can set this parameter when <i>C6-02 = B [Carrier Frequency Selection = Leakage Current Detection Reduction Rate PWM]</i>.</p>	Determined by C6-02 (0.0 - 60.0 s)
L1-23 (0769) RUN	Leakage Current Filter Time2	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the leakage current detection reduction filter time constant during acceleration/deceleration.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>You can set this parameter when <i>C6-02 = B [Carrier Frequency Selection = Leakage Current Detection Reduction Rate PWM]</i>.</li> <li>When the setting value increases, the current monitor also starts up slowly. Examine the relevant sequence for problems.</li> </ul>	Determined by C6-02 (0.0 - 60.0 s)

## ◆ L2: Power Loss Ride Through

No. (Hex.)	Name	Description	Default (Range)
L2-01 (0485)	Power Loss Ride Through Select	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>Sets the drive operation after a momentary power loss.</p> <p>0 : Disable 1 : Enabled 2 : Enabled while CPU Power Active 3 : Kinetic Energy Backup: L2-02 4 : Kinetic Energy Backup: CPU Power 5 : Kinetic Energy Backup: DecelStop</p> <p><b>Note:</b> When the CPU is inactive, b1-17 [Run Command at Power Up] sets operation at power up.</p>	2 (0 - 5)
L2-02 (0486)	Power Loss Ride Through Time	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>Sets the maximum time that the drive will wait until it tries to restart after power loss.</p>	Determined by o2-04 (0.0 - 25.5 s)
L2-03 (0487)	Minimum Baseblock Time	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>Sets the minimum time to continue the drive output block (baseblock) after a baseblock.</p>	Determined by o2-04 (0.1 - 5.0 s)
L2-04 (0488)	Powerloss V/f Recovery Ramp Time	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>Sets the time for the drive output voltage to go back to the correct voltage after it completes speed searches.</p>	Determined by o2-04 (0.0 - 5.0 s)
L2-05 (0489)	Undervoltage Detection Lvl (Uv1)	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>Sets the voltage at which the drive triggers a Uv1 [DC Bus Undervoltage] fault or at which it activates the KEB function. Usually it is not necessary to change this setting.</p> <p><b>NOTICE: Damage to Equipment.</b> When you set this parameter to a value lower than the default, you must install an AC reactor on the input side of the power supply. If you do not install an AC reactor, it will cause damage to the drive circuitry.</p>	Determined by o2-04 and E1-01 (208 V Class: 150 - 220 V, 480 V Class: 300 - 440 V)
L2-06 (048A) Expert	Kinetic Energy Backup Decel Time	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>Sets the deceleration time during KEB operation to decrease the maximum output frequency to 0.</p>	0.0 s (0.0 - 6000.0 s)
L2-07 (048B) Expert	Kinetic Energy Backup Accel Time	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>Sets the acceleration time to return the frequency to the frequency reference before a power loss after canceling KEB operation.</p>	0.0 s (0.0 - 6000.0 s)
L2-08 (048C) Expert	Frequency Gain at KEB Start	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>Sets the quantity of output frequency reduction used when KEB operation starts as a percentage of the motor rated slip before starting KEB operation.</p>	100% (0 - 300%)
L2-09 (048D) Expert	KEB Minimum Frequency Level	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>Sets the quantity of output frequency reduction used as a percentage of E2-02 [Motor Rated Slip] when KEB operation starts.</p>	20% (0 - 100%)
L2-10 (048E) Expert	Minimum KEB Time	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>Sets the minimum length of time to operate the KEB after the drive detects a momentary power loss.</p>	50 ms (0 - 25500 ms)
L2-11 (0461) Expert	KEB DC Bus Voltage Setpoint	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>Sets the target value that controls the DC bus voltage to a constant level in Single Drive KEB Ride-Thru 2. Sets the DC bus voltage level that completes the KEB operation for all other KEB methods.</p>	Determined by E1-01 (Determined by E1-01)
L2-29 (0475) Expert	Kinetic Energy Backup Method	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>Sets the KEB function operation mode.</p> <p>0 : Single Drive KEB Ride-Thru 1 1 : Single Drive KEB Ride-Thru 2 3 : System KEB Ride-Thru 2</p>	0 (0 - 3)
L2-30 (045E) Expert	KEB Zero Speed Operation	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>Sets the operation when the output frequency decreases below the zero level (DC braking injection starting frequency) during KEB deceleration when L2-01 = 3 to 5 [Power Loss Ride Through Select = Kinetic Energy Backup: L2-02, Kinetic Energy Backup: CPU Power, or Kinetic Energy Backup: DecelStop].</p> <p>0 : Baseblock 1 : DC/SC Braking</p>	0 (0, 1)
L2-31 (045D) Expert	KEB Start Voltage Offset Level	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>Sets the KEB start voltage offset.</p>	Determined by A1-02 (208 V Class: 0 - 100 V, 480 V Class: 0 - 200 V)

### ◆ L3: Stall Prevention

No. (Hex.)	Name	Description	Default (Range)
L3-01 (048F)	Stall Prevention during Accel	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the method of Stall Prevention During Acceleration.</p> <p>0 : Disabled 1 : Enabled 2 : Intelligent (Ignore Accel Ramp)</p>	1 (0 - 2)
L3-02 (0490)	Stall Prevent Level during Accel	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the output current level to activate the Stall Prevention function during acceleration as a percentage of the drive rated output current.</p>	Determined by L8-38 (0 - 120%)
L3-03 (0491)	Stall Prevent Limit during Accel	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the lower limit for the stall prevention level used in the constant output range as a percentage of the drive rated output current.</p>	50% (0 - 100%)
L3-04 (0492)	Stall Prevention during Decel	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the method that the drive will use to prevent overvoltage faults when decelerating.</p> <p><b>Note:</b> The setting range changes when the A1-02 [Control Method Selection] value changes: • When A1-02 = 5 [OLV/PM], the setting range is 0 to 2. • When A1-02 = 8 [EZOLV], the setting range is 0, 1.</p> <p>0 : Disabled 1 : General Purpose 2 : Intelligent (Ignore Decel Ramp) 4 : Overexcitation/High Flux 5 : Overexcitation/High Flux 2</p>	1 (Determined by A1-02)
L3-05 (0493)	Stall Prevention during RUN	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the function to enable and disable Stall Prevention During Run.</p> <p><b>Note:</b> • An output frequency lower than 6 Hz will disable Stall Prevention during Run. The L3-05 and L3-06 [Stall Prevent Level during Run] settings do not have an effect. • The default setting changes when the A1-02 [Control Method Selection] value changes: –A1-02 = 0, 5 [V/f, OLV/PM]: 2 –A1-02 = 8 [EZOLV]: 3</p> <p>0 : Disabled 1 : Deceleration Time 1 (C1-02) 2 : Deceleration Time 2 (C1-04) 3 : Intelligent</p>	Determined by A1-02 (0 - 3)
L3-06 (0494)	Stall Prevent Level during Run	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the output current level to enable the Stall Prevention function during operation as a percentage of the drive rated output current.</p> <p><b>Note:</b> This parameter is applicable when L3-05 = 1, 2 [Stall Prevention during RUN = Deceleration Time 1 (C1-02), Deceleration Time 2 (C1-04)].</p>	Determined by L8-38 (5 - 120%)
L3-11 (04C7)	Overvoltage Suppression Select	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the overvoltage suppression function.</p> <p>0 : Disabled 1 : Enabled</p>	0 (0, 1)
L3-17 (0462)	DC Bus Regulation Level	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the target value for the DC bus voltage when the overvoltage suppression function and the Decel Stall Prevention function (Intelligent Stall Prevention) are active.</p>	208 V Class: 375 V, 480 V Class: 750 V (208 V Class: 150 - 400 V, 480 V Class: 300 - 800 V)
L3-20 (0465) Expert	DC Bus Voltage Adjustment Gain	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the proportional gain used to control the DC bus voltage.</p>	Determined by A1-02 (0.00 - 5.00)
L3-21 (0466) Expert	OVSuppression Accel/Decel P Gain	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the proportional gain to calculate acceleration and deceleration rates.</p>	1.00 (0.10 - 10.00)
L3-22 (04F9)	PM Stall Prevention Decel Time	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the momentary deceleration time that the drive will use when it tries to accelerate a PM motor and detected motor stalls. This function is applicable when L3-01 = 1 [Stall Prevention during Accel = Enabled].</p>	0.0 s (0.0 - 6000.0 s)
L3-23 (04FD)	Stall P Reduction at Constant HP	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the function to automatically decrease the Stall Prevention Level during Run for Constant Horse Power (CHP) part of the speed range.</p> <p>0 : Use L3-06 for Entire Speed Range 1 : Automatic Reduction @ CHP Region</p>	0 (0, 1)

### 3.11 L: Protection Functions

No. (Hex.)	Name	Description	Default (Range)
L3-24 (046E) Expert	Motor Accel Time @ Rated Torque	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the motor acceleration time to reach the maximum frequency at the motor rated torque for stopped single-drive motors.	Determined by o2-04, E2-11, and E5-01 (0.001 - 10.000 s)
L3-25 (046F) Expert	Load Inertia Ratio	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the ratio between motor inertia and machine inertia.	1.0 (0.1 - 1000.0)
L3-26 (0455) Expert	Additional DC Bus Capacitors	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the capacity for external main circuit capacitors. Usually it is not necessary to change this setting. Sets this parameter when you use the KEB Ride-Thru function.	0 µF (0 to 65000 µF)
L3-27 (0456)	Stall Prevention Detection Time	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets a delay time between reaching the Stall Prevention level and starting the Stall Prevention function.	50 ms (0 - 5000 ms)
L3-35 (0747) Expert	Speed Agree Width for Auto Decel	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the width for speed agreement when L3-04 = 2 [Stall Prevention during Decel = Intelligent (Ignore Decel Ramp)]. Usually it is not necessary to change this setting.	0.00 Hz (0.00 - 1.00 Hz)

### ◆ L4: Speed Detection

No. (Hex.)	Name	Description	Default (Range)
L4-01 (0499)	Speed Agree Detection Level	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the level to detect speed agree or motor speed when H2-01 to H2-03 = 2, 3, 4, 5 [MFDO Function Selection = Speed Agree 1, User-Set Speed Agree 1, Frequency Detection 1, Frequency Detection 2].	0.0 Hz (0.0 - 400.0 Hz)
L4-02 (049A)	Speed Agree Detection Width	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the width to detect speed agree or motor speed when H2-01 to H2-03 = 2, 3, 4, 5 [MFDO Function Selection = Speed Agree 1, User-Set Speed Agree 1, Frequency Detection 1, Frequency Detection 2].	2.0 Hz (0.0 - 20.0 Hz)
L4-03 (049B)	Speed Agree Detection Level (+/-)	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the speed agree detection level or motor speed detection level when H2-01 to H2-03 = 13, 14, 15, 16 [MFDO Function Selection = Speed Agree 2, User-Set Speed Agree 2, Frequency Detection 3, Frequency Detection 4].	0.0 Hz (-400.0 - +400.0 Hz)
L4-04 (049C)	Speed Agree Detection Width (+/-)	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the width to detect speed agree or motor speed when H2-01 to H2-03 = 13, 14, 15, 16 [MFDO Function Selection = Speed Agree 2, User-Set Speed Agree 2, Frequency Detection 3, Frequency Detection 4].	2.0 Hz (0.0 - 20.0 Hz)
L4-05 (049D)	Fref Loss Detection Selection	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the operation when the drive detects a loss of frequency reference. 0 : Stop 1 : Run at (L4-06 x Last Reference)	0 (0, 1)
L4-06 (04C2)	Frequency Reference @Loss of Ref	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the frequency reference as a percentage to continue drive operation after it detects a frequency reference loss. The value is a percentage of the frequency reference before the drive detected the loss.	80.0% (0.0 - 100.0%)
L4-07 (0470)	Speed Agree Detection Selection	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the condition that activates speed detection. 0 : No Detection during Baseblock 1 : Detection Always Enabled	0 (0, 1)

### ◆ L5: Fault Restart

No. (Hex.)	Name	Description	Default (Range)
L5-01 (049E)	Number of Auto-Restart Attempts	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the number of times that the drive will try to restart.	0 (0 - 10 times)
L5-02 (049F)	Fault Contact at Restart Select	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the function that sends signals to the MFDO terminal set for Fault [H2-xx = E] while the drive is automatically restarting. 0 : Active Only when Not Restarting 1 : Always Active	0 (0, 1)

No. (Hex.)	Name	Description	Default (Range)
L5-03 (04A0)	Continuous Method Max Restart T	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the time for which the drive will try to restart. If the drive cannot restart in the time set in L5-03, the drive detects a fault. This is available when L5-05 = 0 [Auto-Restart Method = Continuous/Immediate Attempts].	10.0 s (0.5 - 180.0 s)
L5-04 (046C)	Interval Method Restart Time	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the time interval between each Auto Restart attempt. This function is enabled when L5-05 = 1 [Auto Restart Operation Selection = Use L5-04 Time].	10.0 s (0.5 - 600.0 s)
L5-05 (0467)	Auto-Restart Method	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the count method for the Auto Restart operation. 0 : Continuous/Immediate Attempts 1 : Interval/Attempt after L5-04 sec	0 (0, 1)
L5-07 (0B2A)	Fault Reset Enable Select Grp1	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Use these 4 digits to set the Auto Restart function for oL1 to oL4. From left to right, the digits set oL1, oL2, oL3, and oL4, in order. 0000 : Disabled 0001 : Enabled (—/—/—/oL4) 0010 : Enabled (—/—/oL3/—) 0011 : Enabled (—/—/oL3/oL4) 0100 : Enabled (—/oL2/—/—) 0101 : Enabled (—/oL2/—/oL4) 0110 : Enabled (—/oL2/oL3/—) 0111 : Enabled (—/oL2/oL3/oL4) 1000 : Enabled (oL1/—/—/—) 1001 : Enabled (oL1/—/—/oL4) 1010 : Enabled (oL1/—/oL3/—) 1011 : Enabled (oL1/—/oL3/oL4) 1100 : Enabled (oL1/oL2/—/—) 1101 : Enabled (oL1/oL2/—/oL4) 1110 : Enabled (oL1/oL2/oL3/—) 1111 : Enabled (oL1/oL2/oL3/oL4)	1111 (0000 - 1111)
L5-08 (0B2B)	Fault Reset Enable Select Grp2	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Use these 4 digits to set the Auto Restart function for Uv1, ov, oH1, and GF. From left to right, the digits set Uv1, ov, oH1, and GF, in order. 0000 : Disabled 0001 : Enabled (—/—/—/GF) 0010 : Enabled (—/—/oH1/—) 0011 : Enabled (—/—/oH1/GF) 0100 : Enabled (—/ov/—/—) 0101 : Enabled (—/ov/—/GF) 0110 : Enabled (—/ov/oH1/—) 0111 : Enabled (—/ov/oH1/GF) 1000 : Enabled (Uv1/—/—/—) 1001 : Enabled (Uv1/—/—/GF) 1010 : Enabled (Uv1/—/oH1/—) 1011 : Enabled (Uv1/—/oH1/GF) 1100 : Enabled (Uv1/ov/—/—) 1101 : Enabled (Uv1/ov/—/GF) 1110 : Enabled (Uv1/ov/oH1/—) 1111 : Enabled (Uv1/ov/oH1/GF)	1111 (0000 - 1111)
L5-40 (3670)	Low Feedback Flt Retry Selection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the drive to do an Auto Restart when the drive detects an LFB [Low Feedback Sensed] fault. 0 : No Retry 1 : Retry	0 (0, 1)
L5-41 (3671)	Hi Feedback Flt Retry Selection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the drive to do an Auto Restart when the drive detects an HFB [High Feedback Sensed] fault. 0 : No Retry 1 : Retry	0 (0, 1)
L5-42 (3672)	Feedback Loss Fault Retry Select	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the drive to try an Auto Restart when the drive detects an FDBKL [WIRE Break] fault. 0 : No Retry 1 : Retry	0 (0, 1)

### 3.11 L: Protection Functions

No. (Hex.)	Name	Description	Default (Range)
L5-49 (3679)	Fault Retry Speed Search Select	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the drive to do a speed search at the start of a Fault Retry.</p> <p>0 : Disabled 1 : Enabled</p>	1 (0, 1)
L5-50 (367A)	Setpoint Not Met Fault Retry Sel	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the drive to try an Auto Restart when it detects an <i>NMS [SetPoint Not Met]</i> fault.</p> <p>0 : No Retry 1 : Retry</p>	0 (0, 1)
L5-51 (367B)	Loss of Prime Fault Retry Select	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the drive to try an Auto Restart if it detects an <i>LOP [Loss Of Prime]</i> fault.</p> <p>0 : No Retry 1 : Retry</p>	0 (0, 1)
L5-53 (3251)	Thermostat Fault Retry Selection	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the drive to try an Auto Restart if it detects a <i>VLTS [Thermostat Fault]</i> fault.</p> <p><b>Note:</b> The drive will only restart after the Thermostat digital input de-activates and the <i>L5-04 [Interval Method Restart Time]</i> timer is expired.</p> <p>0 : No Retry 1 : Retry</p>	0 (0, 1)

### ◆ L6: Torque Detection

No. (Hex.)	Name	Description	Default (Range)
L6-01 (04A1)	Torque Detection Selection 1	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets torque detection conditions that will trigger an overtorque or undertorque response from the drive.</p> <p>0 : Disabled 1 : oL @ Speed Agree - Alarm only 2 : oL @ RUN - Alarm only 3 : oL @ Speed Agree - Fault 4 : oL @ RUN - Fault 5 : UL @ Speed Agree - Alarm only 6 : UL @ RUN - Alarm only 7 : UL @ Speed Agree - Fault 8 : UL @ RUN - Fault 9 : UL6 @ Speed Agree - Alarm only 10 : UL6 @ RUN - Alarm only 11 : UL6 @ Speed Agree - Fault 12 : UL6 @ RUN - Fault</p>	0 (0 - 12)
L6-02 (04A2)	Torque Detection Level 1	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the detection level for Overtorque/Undertorque Detection 1. In V/f control, drive rated output current = 100% value. In vector control, motor rated torque = 100% value.</p>	15% (0 - 300%)
L6-03 (04A3)	Torque Detection Time 1	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the detection time for Overtorque/Undertorque Detection 1.</p>	10.0 s (0.0 - 10.0 s)
L6-04 (04A4)	Torque Detection Selection 2	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the speed range that detects overtorque and undertorque and the operation of drives (operation status) after detection.</p> <p>0 : Disabled 1 : oL @ Speed Agree - Alarm only 2 : oL @ RUN - Alarm only 3 : oL @ Speed Agree - Fault 4 : oL @ RUN - Fault 5 : UL @ Speed Agree - Alarm only 6 : UL @ RUN - Alarm only 7 : UL @ Speed Agree - Fault 8 : UL @ RUN - Fault</p>	0 (0 - 8)
L6-05 (04A5)	Torque Detection Level 2	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the detection level for Overtorque/Undertorque Detection 2. In V/f control, drive rated output current = 100% value. In vector control, motor rated torque = 100% value.</p>	150% (0 - 300%)
L6-06 (04A6)	Torque Detection Time 2	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the detection time for Overtorque/Undertorque Detection 2.</p>	0.1 s (0.0 - 10.0 s)

No. (Hex.)	Name	Description	Default (Range)
L6-13 (062E)	Motor Underload Curve Select	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the motor underload protection ( <i>UL6 [Undertorque Detection 6]</i> ) based on motor load and sets the level of <i>L6-02 [Torque Detection Level 1]</i> to refer to Fbase or Fmax. 0 : Base Frequency Enable 1 : Max Frequency Enable	0 (0, 1)
L6-14 (062F)	Motor Underload Level @ Min Freq	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the <i>UL6 [Undertorque Detection 6]</i> detection level at minimum frequency by percentage of drive rated current.	15% (0 - 300%)

### ◆ L7: Torque Limit

No. (Hex.)	Name	Description	Default (Range)
L7-01 (04A7) RUN	Forward Torque Limit	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the torque limit value for forward motoring as a percentage, where motor rated torque is the 100% value.	200% (0 - 300%)
L7-02 (04A8) RUN	Reverse Torque Limit	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the torque limit value for reversed motoring as a percentage, where motor rated torque is the 100% value.	200% (0 - 300%)
L7-03 (04A9) RUN	Forward Regenerative Trq Limit	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the torque limit value for forward regenerative conditions as a percentage of the motor rated torque.	200% (0 - 300%)
L7-04 (04AA) RUN	Reverse Regenerative Trq Limit	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the torque limit value for reversed regenerative conditions as a percentage of the motor rated torque.	200% (0 - 300%)
L7-16 (044D)	Torque Limit Process at Start	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Assigns a time filter to allow the torque limit to build at start. 0 : Disabled 1 : Enabled	1 (0, 1)

### ◆ L8: Drive Protection

No. (Hex.)	Name	Description	Default (Range)
L8-02 (04AE)	Overheat Alarm Level	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the <i>oH</i> detection level temperature.	Determined by o2-04 (50 - 150 °C)
L8-03 (04AF)	Overheat Pre-Alarm Selection	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets drive operation if it detects an <i>oH</i> alarm. 0 : Ramp to Stop 1 : Coast to Stop 2 : Fast Stop (Use C1-09) 3 : Alarm Only 4 : Operate at Reduced Speed (L8-19)	3 (0 - 4)
L8-05 (04B1)	Input Phase Loss Protection Sel	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the function to enable and disable input phase loss detection. 0 : Disabled 1 : Enabled	1 (0, 1)
L8-07 (04B3)	Output Phase Loss Protection Sel	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the function to enable and disable output phase loss detection. The drive starts output phase loss detection when the output current decreases to less than 5% of the drive rated current. <b>Note:</b> The drive can incorrectly start output phase loss detection in these conditions: • The motor rated current is very small compared to the drive rating. • The drive is operating a PM motor with a small load. 0 : Disabled 1 : Fault when one phase is lost 2 : Fault when two phases are lost	1 (0 - 2)

### 3.11 L: Protection Functions

No. (Hex.)	Name	Description	Default (Range)
L8-09 (04B5)	Output Ground Fault Detection	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>Sets the function to enable and disable ground fault protection.</p> <p>0 : Disabled 1 : Enabled</p>	Determined by o2-04 (0, 1)
L8-10 (04B6)	Heatsink Fan Operation Selection	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>Sets operation of the heatsink cooling fan.</p> <p>0 : During Run, w/ L8-11 Off-Delay 1 : Always On 2 : Temperature-Dependent Fan Ctrl.</p>	0 (0 - 2)
L8-11 (04B7)	Heatsink Fan Off-Delay Time	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>Sets the length of time that the drive will wait before it stops the cooling fan after it cancels the Run command when L8-10 = 0 [Heatsink Fan Operation Selection = During Run, w/ L8-11 Off-Delay].</p>	60 s (0 - 300 s)
L8-12 (04B8)	Ambient Temperature Setting	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>Sets the ambient temperature of the drive installation area.</p> <p><b>Note:</b> The setting range changes when the L8-35 [Installation Method Selection] setting changes.</p> <ul style="list-style-type: none"> <li>• When L8-35 = 0 or 2 [IP20/UL Open Type or IP20/UL Type 1]: -10 °C ~ +60 °C</li> <li>• When L8-35 = 1 or 3 [Side-by-Side Mounting or IP55/UL Type 12]: -10 °C ~ +50 °C</li> </ul>	40 °C (Determined by L8-35)
L8-15 (04BB)	Drive oL2 @ Low Speed Protection	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>Sets the function to decrease the drive overload level at which the drive will trigger oL2 [Drive Overload] during low speed operation (6 Hz or slower) to prevent damage to the main circuit transistors.</p> <p><b>Note:</b> Contact Yaskawa or your nearest sales representative before disabling this function at low speeds. If you frequently operate drives with high output current in low speed ranges, it can cause heat stress and decrease the life span of drive IGBTs.</p> <p>0 : Disabled (No Additional Derate) 1 : Enabled (Reduced oL2 Level)</p>	1 (0, 1)
L8-18 (04BE)	Software Current Limit Selection	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>Set the software current limit selection function to prevent damage to the main circuit transistor caused by too much current.</p> <p>0 : Disabled 1 : Enabled</p>	0 (0, 1)
L8-19 (04BF)	Freq Reduction @ oH Pre-Alarm	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>Sets the ratio at which the drive derates the frequency reference during an oH alarm.</p>	20.0% (10.0 - 100.0%)
L8-27 (04DD)	Overcurrent Detection Gain	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>Sets the PM motor overcurrent detection level as a percentage of the motor rated current value.</p> <p><b>Note:</b> Parameter A1-02 [Control Method Selection] selects which parameter is the motor rated current.</p> <ul style="list-style-type: none"> <li>• A1-02 ≠ 8 [EZOLV]: E5-03 [PM Motor Rated Current (FLA)]</li> <li>• A1-02 = 8: E9-06 [Motor Rated Current (FLA)]</li> </ul>	300.0% (0.0 - 1000.0%)
L8-29 (04DF)	Output Unbalance Detection Sel	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>Sets the function to detect LF2 [Output Current Imbalance].</p> <p>0 : Disabled 1 : Enabled</p>	1 (0, 1)
L8-31 (04E1)	LF2 Detection Time	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>Sets the LF2 [Output Current Imbalance] detection time.</p>	3 (1 - 100)
L8-35 (04EC)	Installation Method Selection	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>Sets the type of drive installation.</p> <p>0 : IP20/UL Open Type 1 : Side-by-Side Mounting 2 : IP20/UL Type 1 3 : IP55/UL Type 12</p>	Determined by the drive (0 - 3)
L8-38 (04EF)	Carrier Frequency Reduction	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV</p> <p>Sets the carrier frequency reduction function. The drive decreases the carrier frequency when the output current is more than a specified level.</p> <p>1 : Enabled below 6 Hz 2 : Enabled for All Speeds 3 : Enable at Overload</p>	Determined by o2-04 (1 - 3)

No. (Hex.)	Name	Description	Default (Range)
L8-41 (04F2)	High Current Alarm Selection	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the function to cause an <i>HCA</i> [<i>High Current Alarm</i>] when the output current is more than 150% of the drive rated current.</p> <p>0 : Disabled 1 : Enabled</p>	0 (0, 1)
L8-90 (0175) Expert	STP <sub>o</sub> Detection Level (Low Speed)	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the detection level that the control fault must be equal to or more than to cause an <i>STP<sub>o</sub></i> [<i>Motor Step-Out Detected</i>].</p>	0 times (0 - 5000 times)
L8-97 (3104)	Carrier Freq Reduce during OH	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the function to decrease carrier frequency during oH pre-alarm.</p> <p><b>Note:</b> When <i>A1-02</i> = 8 [<i>Control Method Selection</i> = <i>EZOLV</i>], this parameter is available only when <i>E9-01</i> = 0 [<i>Motor Type Selection</i> = <i>Induction (IM)</i>].</p> <p>0 : Disabled 1 : Enabled</p>	0 (0, 1)

## ◆ L9: Drive Protection 2

No. (Hex.)	Name	Description	Default (Range)
L9-16 (11DC) Expert	FAnI Detect Time	<p><input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the detection time for <i>FAnI</i> [<i>Drive Cooling Fan Fault</i>]. Yaskawa recommends that you do not change this parameter value.</p>	4.0 s (0.0 - 30.0 s)

## 3.12 n: Special Adjustment

### ◆ n1: Hunting Prevention

No. (Hex.)	Name	Description	Default (Range)
n1-01 (0580) Expert	Hunting Prevention Selection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the function to prevent hunting. 0 : Disabled 1 : Enabled (Normal)	1 (0, 1)
n1-02 (0581) Expert	Hunting Prevention Gain Setting	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the performance of the hunting prevention function. Usually it is not necessary to change this parameter.	1.00 (0.00 - 2.50)
n1-03 (0582) Expert	Hunting Prevention Time Constant	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the primary delay time constant of the hunting prevention function. Usually it is not necessary to change this parameter.	Determined by o2-04 (0 - 500 ms)
n1-05 (0530) Expert	Hunting Prevent Gain in Reverse	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the performance of the hunting prevention function. This parameter adjusts Reverse run. Usually it is not necessary to change this parameter.	0.00 (0.00 - 2.50)
n1-13 (1B59) Expert	DC Bus Stabilization Control	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the oscillation suppression function for the DC bus voltage. 0 : Disabled 1 : Enabled	0 (0, 1)
n1-14 (1B5A) Expert	DC Bus Stabilization Time	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Adjusts the responsiveness of the oscillation suppression function for the DC bus voltage. Set <i>n1-13</i> = 1 [ <i>DC Bus Stabilization Control</i> = Enabled] to enable this parameter.	100.0 ms (0.0 - 500.0 ms)

### ◆ n3: High Slip/Overexcite Braking

No. (Hex.)	Name	Description	Default (Range)
n3-01 (0588) Expert	HSB Deceleration Frequency Width	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the amount by which the output frequency is to be lowered during high-slip braking, as a percentage of <i>E1-04</i> [Maximum Output Frequency], which represents the 100% value.	5% (1 - 20%)
n3-02 (0589) Expert	HSB Current Limit Level	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the maximum current output during high-slip braking as a percentage, where <i>E2-01</i> [Motor Rated Current (FLA)] is 100%. Also sets the current suppression to prevent exceeding drive overload tolerance.	Determined by L8-38 (0 - 200%)
n3-03 (058A) Expert	HSB Dwell Time at Stop	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the dwell time, a length of time when high-slip braking is ending and during which the motor speed decreases and runs at a stable speed. For a set length of time, the drive will hold the actual output frequency at the minimum output frequency set in <i>E1-09</i> .	1.0 s (0.0 - 10.0 s)
n3-04 (058B) Expert	HSB Overload Time	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the time used to detect <i>oL7</i> [High Slip Braking Overload], which occurs when the output frequency does not change during high-slip braking. Usually it is not necessary to change this parameter.	40 s (30 - 1200 s)
n3-13 (0531) Expert	OverexcitationBraking (OEB) Gain	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the gain value that the drive multiplies by the V/f pattern output value during overexcitation deceleration to calculate the overexcitation level.	1.10 (1.00 - 1.40)
n3-14 (0532) Expert	OEB High Frequency Injection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the function that injects harmonic signals during overexcitation deceleration. 0 : Disabled 1 : Enabled	0 (0, 1)
n3-21 (0579) Expert	HSB Current Suppression Level	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the upper limit of the current that is suppressed at the time of overexcitation deceleration as a percentage of the drive rated current.	100% (0 - 150%)
n3-23 (057B) Expert	Overexcitation Braking Operation	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the direction of motor rotation where the drive will enable overexcitation. 0 : Disabled 1 : Enabled Only when Rotating FWD 2 : Enabled Only when Rotating REV	0 (0 - 2)

## ◆ n7: EZ Drive

No. (Hex.)	Name	Description	Default (Range)
n7-01 (3111) Expert	Damping Gain for Low Frequency	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> EZOLV Sets the oscillation suppression gain for the low speed range.	1.0 (0.1 - 10.0)
n7-05 (3115) Expert	Response Gain for Load Changes	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> EZOLV Sets the response gain related to changes in the load.	50 (10 - 1000)
n7-07 (3117) Expert	Speed Calculation Gain1	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> EZOLV Sets the speed calculation gain during usual operation. Usually it is not necessary to change this setting.	15.0 (1.0 - 50.0)
n7-08 (3118) Expert	Speed Calculation Gain2	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> EZOLV Sets the speed calculation gain during a speed search. <b>Note:</b> When E9-01 = 1 [Motor Type Selection = Permanent Magnet (PM)], the setting range is 1.0 - 80.0.	25.0 (1.0 - 50.0)
n7-10 (311A) Expert	Pull-in Current Switching Speed	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> EZOLV Parameter n8-51 [Pull-in Current @ Acceleration], is in effect when the output frequency is $\leq$ n7-10, where the speed is set as a percentage of rated speed. <b>Note:</b> • The value set in n8-51 [Pull-in Current @ Acceleration] is enabled for speeds that are not higher than n7-10 during deceleration. The value set in b8-01 [Energy Saving Control Selection] is enabled for speeds higher than n7-10. • If there is a large quantity of oscillation when you operate in the low speed range, increase the setting value. • When it is most important to save energy in the low speed range, decrease the setting value.	10.0% (0.0 - 100.0%)
n7-11 (311B) Expert	Drv Mode Switch Hysteresis Band	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> EZOLV Sets the hysteresis level for Switching Speed set in n7-10 [Pull-in Current Switching Speed]. When the speed is lower than n7-10 + n7-11 during acceleration, the drive enables pull-in current. <b>Note:</b> • The value set in n8-51 [Pull-in Current @ Acceleration] is enabled for speeds that are not higher than n7-10 + n7-11 during acceleration. The value set in b8-01 [Energy Saving Control Selection] is enabled for speeds higher than n7-10 + n7-11. • If there is a large quantity of oscillation when you operate in the low speed range, increase the setting value. • When it is most important to save energy in the low speed range, decrease the setting value.	5.0% (1.0 - 20.0%)
n7-13 (311D) Expert	Pull-in Current Switching Time	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> EZOLV Sets a time to enable the pull-in current commands. If there is a large quantity of oscillation at speeds around n7-10 [Pull-in Current Switching Speed], decrease the setting in decrements of 20 ms.	100 ms (0 - 1000 ms)
n7-17 (3122) Expert	Resistance Temperature Correction	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> EZOLV Sets the function to adjust for changes in the motor resistance value caused by changes in the temperature. 0 : Invalid 1 : Valid (Only 1 time) 2 : Valid (Every time)	1 (0 to 2)

## ◆ n8: PM Motor Control Tuning

No. (Hex.)	Name	Description	Default (Range)
n8-23 (0556) Expert	ACR q Gain @PoleEst	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> EZOLV Sets the proportional gain for current regulator q-axis control when the drive estimates the initial pole. Usually it is not necessary to change this setting.	0 (0 - 2000)
n8-24 (0557) Expert	ACR q Integral Time @PoleEst	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> EZOLV Sets the integral time for current regulator q-axis control when the drive estimates the initial pole. Usually it is not necessary to change this setting.	0.0 ms (0.0 - 100.0 ms)
n8-25 (0558) Expert	ACR q Limit @PoleEst	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> EZOLV Sets the q-axis limit of the current regulator when the drive estimates the initial pole. Usually it is not necessary to change this setting.	0% (0 - 150%)
n8-26 (0559) Expert	ACR d Gain @PoleEst	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> EZOLV Sets the proportional gain for current regulator d-axis control when the drive estimates the initial pole. Usually it is not necessary to change this setting.	500 (0 - 2000)

### 3.12 n: Special Adjustment

No. (Hex.)	Name	Description	Default (Range)
n8-27 (055A) Expert	ACR d Integral Time @PoleEst	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the integral time for current regulator d-axis control when the drive estimates the initial pole. Usually it is not necessary to change this setting.	0.0 ms (0.0 - 100.0 ms)
n8-28 (055B) Expert	ACR d Lim @PoleEst	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the d-axis limit of the current regulator when the drive estimates the initial pole. Usually it is not necessary to change this setting.	100% (0 - 150%)
n8-35 (0562) Expert	Initial Pole Detection Method	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets how the drive detects the position of the rotor at start. <b>Note:</b> • When you operate an SPM motor, set $n8-35 = 0$ . When you operate an IPM motor, set $n8-35 = 0$ to $2$ . • When you set $n8-35 = 1$ , do High Frequency Injection Auto-Tuning. 0 : Pull-in 1 : High Frequency Injection	0 (0, 1)
n8-36 (0563) Expert	HFI Frequency Level for L Tuning	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the injection frequency for high frequency injection. <b>Note:</b> • Set $n8-35 = 1$ [Initial Pole Detection Method = High Frequency Injection] to enable this parameter. • The drive automatically calculates this value when High Frequency Injection Auto-Tuning completes successfully.	500 Hz (200 - 1000 Hz)
n8-37 (0564) Expert	HFI Voltage Amplitude Level	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the high frequency injection amplitude as a percentage where 200 V = 100% for 208 V class drives and 400 V = 100% for a 480 V class drives. Usually it is not necessary to change this setting. <b>Note:</b> • Set $n8-35 = 1$ [Initial Pole Detection Method = High Frequency Injection] to enable this parameter. • The drive automatically calculates this value when High Frequency Injection Auto-Tuning completes successfully.	20.0% (0.0 - 50.0%)
n8-39 (0566) Expert	HFI L/PF Cutoff Freq	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the low-pass filter shut-off frequency for high frequency injection. <b>Note:</b> • Set $n8-35 = 1$ [Initial Pole Detection Method = High Frequency Injection] to enable this parameter. • The drive automatically calculates this value when High Frequency Injection Auto-Tuning completes successfully.	250 Hz (0 - 1000 Hz)
n8-41 (0568) Expert	HFI P Gain	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the response gain for the high frequency injection speed estimation. <b>Note:</b> • Set $n8-35 = 1$ [Initial Pole Detection Method = High Frequency Injection] to enable this parameter. • Set $n8-41 > 0.0$ for IPM motors.	2.5 (-10.0 - +10.0)
n8-42 (0569) Expert	HFI I Time	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the integral time constant for the high frequency injection speed estimation. Usually it is not necessary to change this setting. <b>Note:</b> Set $n8-35 = 1$ [Initial Pole Detection Method = High Frequency Injection] to enable this parameter.	0.10 s (0.00 - 9.99 s)
n8-45 (0538) Expert	Speed Feedback Detection Gain	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the internal speed feedback detection reduction unit gain as a magnification value. Usually it is not necessary to change this setting.	0.80 (0.00 - 10.00)
n8-46 (0539) Expert	PM Phase Compensation Gain	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the gain to compensate for phase differences. Usually it is not necessary to change this setting.	0.3 (0.0 - 10.0)
n8-47 (053A) Expert	Pull-in Current Comp Filter Time	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the time constant the drive uses to align the pull-in current reference value with the actual current value. Usually it is not necessary to change this setting.	5.0 s (0.0 - 100.0 s)
n8-48 (053B) Expert	Pull-in/Light Load Id Current	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the d-axis current that flows to the motor during run at constant speed as a percentage where $E5-03$ [PM Motor Rated Current (FLA)] = 100%.	30% (0 - 200%)
n8-49 (053C) Expert	Heavy Load Id Current	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the d-axis current to that the drive will supply to the motor to run it at a constant speed with a heavy load. Considers $E5-03$ [PM Motor Rated Current (FLA)] to be 100%. Usually it is not necessary to change this setting.	Determined by E5-01 (-200.0 - +200.0%)

No. (Hex.)	Name	Description	Default (Range)
n8-50 (053D) Expert	Medium Load Iq Level (High)	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the load current level to start high efficiency control as a percentage of E5-03 [PM Motor Rated Current (FLA)]. Usually it is not necessary to change this setting.	80% (50 - 255%)
n8-51 (053E) Expert	Pull-in Current @ Acceleration	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the pull-in current allowed to flow during acceleration/deceleration as a percentage of the motor rated current. <b>Note:</b> Parameter A1-02 [Control Method Selection] selects which parameter is the motor rated current. • A1-02 = 5 [OLV/PM]: E5-03 [PM Motor Rated Current (FLA)] • A1-02 = 8 [EZOLV]: E9-06 [Motor Rated Current (FLA)]	Determined by A1-02 (0 - 200%)
n8-52 (053F) Expert	ACR P Gain	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the proportional gain of the current regulator. Usually it is not necessary to change this setting.	10.0 (-100.0 - 100.0)
n8-54 (056D) Expert	Voltage Error Compensation Time	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the time constant that the drive uses when adjusting for voltage errors.	1.00 s (0.00 - 10.00 s)
n8-55 (056E) Expert	Motor to Load Inertia Ratio	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the ratio between motor inertia and machine inertia. 0 : Below 1:10 1 : Between 1:10 and 1:30 2 : Between 1:30 and 1:50 3 : Beyond 1:50	0 (0 - 3)
n8-56 (056F) Expert	PM High Performance Selection	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Usually it is not necessary to change this setting. Sets the high efficiency control method for IPM motor. 0 : Disabled 1 : Enabled (Vd) 2 : Enabled (Vd & Vq)	1 (0 - 2)
n8-62 (057D) Expert	Output Voltage Limit Level	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the output voltage limit to prevent saturation of the output voltage. Usually it is not necessary to change this parameter. <b>Note:</b> • When A1-02 = 8 [Control Method Selection = EZOLV], this parameter is available in Expert Mode. • When A1-02 = 8, the default setting is: -208 V Class: 230.0 V -480 V Class: 460.0 V	208 V Class: 200.0 V, 480 V Class: 400.0 V (208 V Class: 0.0 - 240.0 V, 480 V Class: 0.0 - 480.0 V)
n8-63 (057E) Expert	Output Voltage Limit P Gain	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the proportional gain for output voltage control. Usually it is not necessary to change this setting.	1.00 (0.00 - 100.00)
n8-64 (057F) Expert	Output Voltage Limit I Time	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the integral time for output voltage control. Usually it is not necessary to change this setting.	0.040 s (0.000 - 5.000)
n8-65 (065C) Expert	Speed Fdbk Gain @ oV Suppression	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the gain of internal speed feedback detection suppression while the overvoltage suppression function is operating as a magnification value. Usually it is not necessary to change this parameter.	1.50 (0.00 - 10.00)
n8-66 (0235) Expert	Output Voltage Limit Filter Time	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the filter time constant for output voltage control. Usually it is not necessary to change this setting.	0.020 s (0.000 - 5.000)
n8-74 (05C3)	Light Load Iq Level	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Set n8-48 [Pull-in/Light Load Id Current] to the percentage of load current (q-axis current) that you will apply, where E5-03 [PM Motor Rated Current (FLA)] = a setting value of 100%.	30% (0 - 255%)
n8-75 (05C4)	Medium Load Iq Level (low)	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Set n8-78 [Medium Load Id Current] to the percentage of load current (q-axis current) that you will apply, where E5-03 [PM Motor Rated Current (FLA)] = a setting value of 100%.	50% (0 - 255%)
n8-76 (05CD) Expert	Id Switching Filter Time	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the filter time constant for d-axis current reference. Usually it is not necessary to change this setting.	200 ms (0 - 5000 ms)
n8-77 (05CE)	Heavy Load Iq Level	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Set n8-49 [Heavy Load Id Current] to the percentage of load current (q-axis current) that you will apply, where E5-03 [PM Motor Rated Current (FLA)] = a setting value of 100%.	90% (0 - 255%)

### 3.12 n: Special Adjustment

No. (Hex.)	Name	Description	Default (Range)
n8-78 (05F4)	Medium Load Id Current	<div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span style="background-color: #cccccc; padding: 2px;">OLV/PM</span> <span style="background-color: #cccccc; padding: 2px;">EZOLV</span> </div> <p>Sets the level of the pull-in current for mid-range loads.</p>	0% (-200 - +200%)
n8-79 (05FE) Expert	Pull-in Current @ Deceleration	<div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span style="background-color: #cccccc; padding: 2px;">OLV/PM</span> <span style="background-color: #cccccc; padding: 2px;">EZOLV</span> </div> <p>Sets the pull-in current that can flow during deceleration as a percentage of the <i>E5-03 [PM Motor Rated Current (FLA)]</i>.</p> <p><b>Note:</b> When <i>n8-79 = 0</i>, the drive will use the value set in <i>n8-51 [Pull-in Current @ Acceleration]</i>.</p>	50% (0 - 200%)
n8-84 (02D3) Expert	Polarity Detection Current	<div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span style="background-color: #cccccc; padding: 2px;">OLV/PM</span> <span style="background-color: #cccccc; padding: 2px;">EZOLV</span> </div> <p>Sets the current for processing an estimation of the initial motor magnetic pole as a percentage, where <i>E5-03 [PM Motor Rated Current]</i> is the 100% value.</p>	100% (0 - 150%)
n8-91 (02F7) Expert	Id Limit at Voltage Saturation	<div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span style="background-color: #cccccc; padding: 2px;">OLV/PM</span> <span style="background-color: #cccccc; padding: 2px;">EZOLV</span> </div> <p>Sets the limit value of feedback output voltage limit Id operation. Usually it is not necessary to change this setting.</p>	-50% (-200 - 0%)

## 3.13 o: Keypad-Related Settings

### ◆ o1: Keypad Display

No. (Hex.)	Name	Description	Default (Range)
o1-03 (0502)	Frequency Display Unit Selection	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the display units for the frequency reference and output frequency.</p> <p>0 : 0.01Hz units 1 : 0.01% units 2 : min<sup>-1</sup> (r/min) unit 3 : User Units (o1-09 ~o1-11)</p>	0 (0 - 3)
o1-05 (0504) RUN	LCD Contrast Adjustment	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the contrast of the LCD display on the keypad.</p>	5 (0 - 10)
o1-09 (051C)	Freq. Reference Display Units	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the unit of display for the frequency reference parameters and frequency-related monitors when <i>o1-03 = 3 [Frequency Display Unit Selection = User Units (o1-09 ~ o1-11)]</i>.</p> <p>0 : "WC: inches of water column 1 : PSI: pounds per square inch 2 : GPM: gallons/min 3 : °F: Fahrenheit 4 : ft<sup>3</sup>/min: cubic feet/min 5 : m<sup>3</sup>/h: cubic meters/hour 6 : L/h: liters/hour 7 : L/s: liters/sec 8 : bar: bar 9 : Pa: Pascal 10 : °C: Celsius 11 : m: meters 12 : ft: feet 13 : L/min: liters/min 14 : m<sup>3</sup>/min: cubic meters/min 15 : "Hg: Inch Mercury 16 : kPa: kilopascal 48 : %: Percent 49 : Custom(o1-13~15) 50 : None</p>	50 (0 - 50)
o1-10 (0520)	User Units Maximum Value	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the value that the drive shows as the maximum output frequency.</p>	Determined by o1-03 (1 - 60000)
o1-11 (0521)	User Units Decimal Position	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the number of decimal places for frequency reference and monitor values.</p> <p>0 : No Decimal Places (XXXXX) 1 : One Decimal Places (XXXX.X) 2 : Two Decimal Places (XXX.XX) 3 : Three Decimal Places (XX.XXX)</p>	Determined by o1-03 (0 - 3)
o1-13 (3105)	Freq. Reference Custom Unit 1	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the first character of the custom unit display when <i>o1-03 = 3 [Frequency Display Unit Selection = User Units]</i> and <i>o1-09 = 49 [Freq. Reference Display Units = Custom (o1-13~15)]</i>.</p>	41 (20 - 7A)
o1-14 (3106)	Freq. Reference Custom Unit 2	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the second character of the custom unit display when <i>o1-03 = 3 [Frequency Display Unit Selection = User Units]</i> and <i>o1-09 = 49 [Freq. Reference Display Units = Custom (o1-13~15)]</i>.</p>	41 (20 - 7A)
o1-15 (3107)	Freq. Reference Custom Unit 3	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the third character of the custom unit display when <i>o1-03 = 3 [Frequency Display Unit Selection = User Units]</i> and <i>o1-09 = 49 [Freq. Reference Display Units = Custom (o1-13~15)]</i>.</p>	41 (20 - 7A)
o1-17 (3109)	F3 Key Function Selection	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the action when you push the F3 key and the LCD display text above the F3 key.</p> <p>0 : Standard (based on screen) 1 : MONITOR (shortcut) 4 : RLY (ON/OFF H2-XX = A9)</p>	0 (0 - 4)
o1-18 (310A)	User Defined Parameter 1	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Lets you set values to use as reference information.</p>	0 (0 - 999)

### 3.13 o: Keypad-Related Settings

No. (Hex.)	Name	Description	Default (Range)
o1-19 (310B)	User Defined Parameter 2	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Lets you set values to use as reference information.	0 (0 - 999)
o1-24 (11AD) RUN	Custom Monitor 1	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets Custom Monitor 1. You can set a maximum of 12 monitors as user monitors. This parameter is only available on an LCD keypad.	101 (0, 101 - 1299)
o1-25 (11AE) RUN	Custom Monitor 2	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets Custom Monitor 2. You can set a maximum of 12 monitors as user monitors. This parameter is only available on an LCD keypad.	102 (0, 101 - 1299)
o1-26 (11AF) RUN	Custom Monitor 3	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets Custom Monitor 3. You can set a maximum of 12 monitors as user monitors. This parameter is only available on an LCD keypad.	103 (0, 101 - 1299)
o1-27 (11B0) RUN	Custom Monitor 4	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets Custom Monitor 4. You can set a maximum of 12 monitors as user monitors. This parameter is only available on an LCD keypad.	0 (0, 101 - 1299)
o1-28 (11B1) RUN	Custom Monitor 5	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets Custom Monitor 5. You can set a maximum of 12 monitors as user monitors. This parameter is only available on an LCD keypad.	0 (0, 101 - 1299)
o1-29 (11B2) RUN	Custom Monitor 6	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets Custom Monitor 6. You can set a maximum of 12 monitors as user monitors. This parameter is only available on an LCD keypad.	0 (0, 101 - 1299)
o1-30 (11B3) RUN	Custom Monitor 7	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets Custom Monitor 7. You can set a maximum of 12 monitors as user monitors. This parameter is only available on an LCD keypad.	0 (0, 101 - 1299)
o1-31 (11B4) RUN	Custom Monitor 8	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets Custom Monitor 8. You can set a maximum of 12 monitors as user monitors. This parameter is only available on an LCD keypad.	0 (0, 101 - 1299)
o1-32 (11B5) RUN	Custom Monitor 9	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets Custom Monitor 9. You can set a maximum of 12 monitors as user monitors. This parameter is only available on an LCD keypad.	0 (0, 101 - 1299)
o1-33 (11B6) RUN	Custom Monitor 10	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets Custom Monitor 10. You can set a maximum of 12 monitors as user monitors. This parameter is only available on an LCD keypad.	0 (0, 101 - 1299)
o1-34 (11B7) RUN	Custom Monitor 11	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets Custom Monitor 11. You can set a maximum of 12 monitors as user monitors. This parameter is only available on an LCD keypad.	0 (0, 101 - 1299)
o1-35 (11B8) RUN	Custom Monitor 12	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets Custom Monitor 12. You can set a maximum of 12 monitors as user monitors. This parameter is only available on an LCD keypad.	0 (0, 101 - 1299)
o1-36 (11B9) RUN	LCD Backlight Brightness	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the intensity of the LCD keypad backlight.	5 (1 - 5)
o1-37 (11BA) RUN	LCD Backlight ON/OFF Selection	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the automatic shut off function for the LCD backlight. 0 : OFF 1 : ON	1 (0, 1)
o1-38 (11BB) RUN	LCD Backlight Off-Delay	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the time until the LCD backlight automatically turns off.	60 s (10 - 300 s)
o1-39 (11BC) RUN	Show Initial Setup Screen	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/IPM <input type="checkbox"/> EZOLV Sets the function to show the LCD keypad initial setup screen each time you energize the drive. This parameter is only available with an LCD keypad. 0 : No 1 : Yes	1 (0, 1)

No. (Hex.)	Name	Description	Default (Range)
o1-40 (11BD) RUN	Home Screen Display Selection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the monitor display mode for the Home screen. This parameter is only available with an LCD keypad. 0 : Custom Monitor 1 : Bar Graph 2 : Analog Gauge 3 : Trend Plot	0 (0 - 3)
o1-41 (11C1) RUN	1st Monitor Area Selection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the horizontal range used to display the monitor set in o1-24 [Custom Monitor 1] as a bar graph. This parameter is only available on an LCD keypad. 0 : +/- Area ( - o1-42 ~ o1-42 ) 1 : + Area ( 0 ~ o1-42 )	0 (0, 1)
o1-42 (11C2) RUN	1st Monitor Area Setting	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the horizontal axis value used to display the monitor set in o1-24 [Custom Monitor 1] as a bar graph. This parameter is only available with an LCD keypad.	100.0% (0.0 - 100.0%)
o1-43 (11C3) RUN	2nd Monitor Area Selection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Selects the horizontal range used to display the monitor set in o1-25 [Custom Monitor 2] as a bar graph. This parameter is only available on an LCD keypad. 0 : +/- Area ( - o1-44 ~ o1-44 ) 1 : + Area ( 0 ~ o1-44 )	0 (0, 1)
o1-44 (11C4) RUN	2nd Monitor Area Setting	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the horizontal axis value used to display the monitor set in o1-25 [Custom Monitor 2] as a bar graph. This parameter is only available with an LCD keypad.	100.0% (0.0 - 100.0%)
o1-45 (11C5) RUN	3rd Monitor Area Selection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the horizontal range used to display the monitor set in o1-26 [Custom Monitor 3] as a bar graph. This parameter is only available on an LCD keypad. 0 : +/- Area ( - o1-46 ~ o1-46 ) 1 : + Area ( 0 ~ o1-46 )	0 (0, 1)
o1-46 (11C6) RUN	3rd Monitor Area Setting	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the horizontal axis value used to display the monitor set in o1-26 [Custom Monitor 3] as a bar graph. This parameter is only available with an LCD keypad.	100.0% (0.0 - 100.0%)
o1-47 (11C7) RUN	Trend Plot 1 Scale Minimum Value	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the horizontal axis minimum value used to display the monitor set in o1-24 [Custom Monitor 1] as a trend plot. This parameter is only available with an LCD keypad.	-100.0% (-300.0 - +299.9%)
o1-48 (11C8) RUN	Trend Plot 1 Scale Maximum Value	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the horizontal axis maximum value used to display the monitor set in o1-24 [Custom Monitor 1] as a trend plot. This parameter is only available on an LCD keypad.	100.0% (-299.9 - +300.0%)
o1-49 (11C9) RUN	Trend Plot 2 Scale Minimum Value	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the horizontal axis minimum value used to display the monitor set in o1-25 [Custom Monitor 2] as a trend plot. This parameter is only available with an LCD keypad.	-100.0% (-300.0 - +299.9%)
o1-50 (11CA) RUN	Trend Plot 2 Scale Maximum Value	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the horizontal axis maximum value used to display the monitor set in o1-25 [Custom Monitor 2] as a trend plot. This parameter is only available on an LCD keypad.	100.0% (-299.9 - +300.0%)
o1-51 (11CB) RUN	Trend Plot Time Scale Setting	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the time scale (horizontal axis) to display the trend plot. When you change this setting, the drive automatically adjusts the data sampling time. This parameter is only available with an LCD keypad.	300 s (1 - 3600 s)
o1-55 (11EE) RUN	Analog Gauge Area Selection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the range used to display the monitor set in o1-24 [Custom Monitor 1] as an analog gauge. This parameter is only available with an LCD keypad. 0 : +/- Area ( - o1-56 ~ o1-56 ) 1 : + Area ( 0 ~ o1-56 )	1 (0, 1)
o1-56 (11EF) RUN	Analog Gauge Area Setting	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the value used to display the monitor set in o1-24 [Custom Monitor 1] as an analog meter. This parameter is only available with an LCD keypad.	100.0% (0.0 - 100.0%)
o1-58 (3125)	Motor Power Unit Selection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the setting unit for parameters that set the motor rated power. 0 : kW 1 : HP	1 (0, 1)

### 3.13 o: Keypad-Related Settings

No. (Hex.)	Name	Description	Default (Range)
o1-80 (31BA)	Fault Screen Display	 <p>Sets a full-screen display message to show on the keypad when a fault or CPF occurs.</p> <p><b>Note:</b> Setting o1-80, o1-81 or o1-82 to 0 will cause the status monitor to be available on the home screen.</p> <p>0 : OFF 1 : ON</p>	1 (0, 1)
o1-81 (31BB)	Alarm Screen Display	 <p>Sets a full-screen display message to show on the keypad when an alarm occurs.</p> <p><b>Note:</b> Setting o1-80, o1-81 or o1-82 to 0 will cause the status monitor to be available on the home screen.</p> <p>0 : OFF 1 : ON</p>	1 (0, 1)
o1-82 (31BC)	Message Screen Display	 <p>Sets a full-screen display message to show on the keypad when a status message is active.</p> <p><b>Note:</b> Setting o1-80, o1-81 or o1-82 to 0 will cause the status monitor to be available on the home screen.</p> <p>0 : OFF 1 : ON</p>	1 (0, 1)

### ◆ o2: Keypad Operation

No. (Hex.)	Name	Description	Default (Range)
o2-01 (0505)	LO/RE Key Function Selection	 <p>Sets the function that lets you use  to switch between LOCAL and REMOTE Modes.</p> <p>0 : Disabled 1 : Enabled</p>	1 (0, 1)
o2-02 (0506)	STOP Key Function Selection	 <p>Sets the function to use  on the keypad to stop the drive when the Run command source for the drive is REMOTE (external) and not assigned to the keypad.</p> <p>0 : Disabled 1 : Enabled</p>	1 (0, 1)
o2-03 (0507)	User Parameter Default Value	 <p>Sets the function to keep the settings of changed parameters as user parameter defaults to use during initialization.</p> <p>0 : No change 1 : Set defaults 2 : Clear all</p>	0 (0 - 2)
o2-04 (0508)	Drive Model (KVA) Selection	 <p>Sets the Drive Model code. Set this parameter after you replace the control board.</p>	Determined by the drive (-)
o2-05 (0509)	Home Mode Freq Ref Entry Mode	 <p>Sets the function that makes it necessary to push  to use the keypad to change the frequency reference value while in Drive Mode.</p> <p>0 : ENTER Key Required 1 : Immediate / MOP-style</p>	0 (0, 1)
o2-06 (050A)	Keypad Disconnect Detection	 <p>Sets the function that stops the drive if you disconnect the keypad connection cable from the drive or if you damage the cable while the keypad is the Run command source.</p> <p>0 : Disabled 1 : Enabled</p>	1 (0, 1)
o2-07 (0527)	Keypad RUN Direction @ Power-up	 <p>Sets the direction of motor rotation when the drive is energized and the keypad is the Run command source.</p> <p>0 : Forward 1 : Reverse</p>	0 (0, 1)
o2-09 (050D)	Reserved	-	-

No. (Hex.)	Name	Description	Default (Range)
o2-19 (061F)	Parameter Write during Uv	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Enables and disables the function to change parameter settings during a <i>Uv [DC Bus Undervoltage]</i> condition. Use this parameter with 24 V Power Supply option revision B or later. <b>Note:</b> If you enable this parameter and use a 24 V Power Supply option that is earlier than revision B, the parameter changes can possibly not write correctly and it can cause a <i>CPF06 [EEPROM Memory Data Error]</i> fault. 0 : Disabled 1 : Enabled	0 (0, 1)
o2-20 (381E)	Operator RUN Save at Power Loss	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets whether the drive will save  of the keypad on power-down. 0 : Disabled 1 : Enabled	0 (0, 1)
o2-23 (11F8) RUN	External 24V Powerloss Detection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the function to give a warning if the backup external 24 V power supply turns off when the main circuit power supply is in operation. 0 : Disabled 1 : Enabled	0 (0, 1)
o2-24 (11FE)	LED Light Function Selection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the function to show the LED status rings and keypad LED lamps. <b>Note:</b> When you use <i>A1-03 [Initialize Parameters]</i> to initialize the drive, the drive will not reset this parameter. 0 : Enable Status Ring & Keypad LED 1 : LED Status Ring Disable 2 : Keypad LED Light Disable	2 (0 - 2)
o2-26 (1563)	Alarm Display at Ext. 24V Power	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> When you connect a backup external 24 V power supply, this parameter sets the function to trigger an alarm when the main circuit power supply voltage decreases. <b>Note:</b> The drive will not run when it is operating from one 24-V external power supply. 0 : Disabled 1 : Enabled	1 (0, 1)
o2-27 (1565)	bCE Detection Selection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets drive operation if the Bluetooth device is disconnected when you operate the drive in Bluetooth Mode. 0 : Ramp to Stop 1 : Coast to Stop 2 : Fast Stop (Use <i>C1-09</i> ) 3 : Alarm Only 4 : No Alarm Display	3 (0 - 4)

### ◆ o3: Copy Keypad Function

No. (Hex.)	Name	Description	Default (Range)
o3-01 (0515)	Copy Keypad Function Selection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the function that saves and copies drive parameters to a different drive with the keypad. 0 : Copy Select 1 : Backup (drive → keypad) 2 : Restore (keypad → drive) 3 : Verify (check for mismatch) 4 : Erase (backup data of keypad)	0 (0 - 4)
o3-02 (0516)	Copy Allowed Selection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the copy function when <i>o3-01 = 1 [Copy Keypad Function Selection = Backup (drive → keypad)]</i> . 0 : Disabled 1 : Enabled	0 (0, 1)

### 3.13 o: Keypad-Related Settings

No. (Hex.)	Name	Description	Default (Range)
o3-04 (0B3E)	Select Backup/Restore Location	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the storage location for drive parameters when you back up and restore parameters. This parameter is only available when using an LCD keypad.</p> <p>0 : Memory Location 1 1 : Memory Location 2 2 : Memory Location 3 3 : Memory Location 4</p>	0 (0 - 3)
o3-06 (0BDE)	Auto Parameter Backup Selection	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the function that automatically backs up parameters. This parameter is only available when using an LCD keypad.</p> <p>0 : Disabled 1 : Enabled</p>	1 (0, 1)
o3-07 (0BDF)	Auto Parameter Backup Interval	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the interval at which the automatic parameter backup function saves parameters from the drive to the keypad.</p> <p><b>Note:</b> This parameter is only available when using an LCD keypad.</p> <p>0 : Every 10 minutes 1 : Every 30 minutes 2 : Every 60 minutes 3 : Every 12 hours</p>	1 (0 - 3)

### ◆ o4: Maintenance Monitors

No. (Hex.)	Name	Description	Default (Range)
o4-01 (050B)	Elapsed Operating Time Setting	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the initial value of the cumulative drive operation time in 10-hour units.</p>	0 h (0 - 9999 h)
o4-02 (050C)	Elapsed Operating Time Selection	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the condition that counts the cumulative operation time.</p> <p>0 : U4-01 Shows Total Power-up Time 1 : U4-01 Shows Total RUN Time</p>	1 (0, 1)
o4-03 (050E)	Fan Operation Time Setting	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the value from which to start the cumulative drive cooling fan operation time in 10-hour units.</p>	0 h (0 - 9999 h)
o4-05 (051D)	Capacitor Maintenance Setting	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the U4-05 [CapacitorMaintenance] monitor value.</p>	0% (0 - 150%)
o4-07 (0523)	Softcharge Relay Maintenance Set	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the U4-06 [PreChargeRelayMainte] monitor value.</p>	0% (0 - 150%)
o4-09 (0525)	IGBT Maintenance Setting	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the U4-07 [IGBT Maintenance] monitor value.</p>	0% (0 - 150%)
o4-11 (0510)	Fault Trace/History Init (U2/U3)	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Resets the records of Monitors U2-xx [Fault Trace] and U3-xx [Fault History].</p> <p>0 : Disabled 1 : Enabled</p>	0 (0, 1)
o4-12 (0512)	kWh Monitor Initialization	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Resets the monitor values for U4-10 [kWh, Lower 4 Digits] and U4-11 [kWh, Upper 5 Digits].</p> <p>0 : No Reset 1 : Reset</p>	0 (0, 1)
o4-13 (0528)	RUN Command Counter @ Initialize	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Resets the monitor values for U4-02 [Num of Run Commands], U4-24 [Number of Runs (Low)], and U4-25 [Number of Runs (High)].</p> <p>0 : No Reset 1 : Reset</p>	0 (0, 1)
o4-22 (154F) RUN	Time Format	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the time display format. This parameter is only available when using an LCD keypad.</p> <p>0 : 24 Hour Clock 1 : 12 Hour Clock 2 : 12 Hour JP Clock</p>	1 (0 - 2)

No. (Hex.)	Name	Description	Default (Range)
o4-23 (1550) RUN	Date Format	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the date display format. This parameter is only available on an LCD keypad. 0 : YYYY/MM/DD 1 : DD/MM/YYYY 2 : MM/DD/YYYY	2 (0 - 2)
o4-24 (310F) RUN	bAT Detection Selection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets operation when the drive detects <i>bAT</i> [Keypad Battery Low Voltage] and <i>TiM</i> [Keypad Time Not Set]. 0 : Disable 1 : Enable (Alarm Detected) 2 : Enable (Fault Detected)	0 (0 - 2)

## ◆ o5: Log Function

No. (Hex.)	Name	Description	Default (Range)
o5-01 (1551) RUN	Log Start/Stop Selection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the data log function. This parameter is only available when using an LCD keypad. 0 : OFF 1 : ON	0 (0 - 1)
o5-02 (1552) RUN	Log Sampling Interval	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the data log sampling cycle. This parameter is only available when using an LCD keypad.	100 ms (100 - 60000 ms)
o5-03 (1553) RUN	Log Monitor Data 1	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the data log monitor. This parameter is only available on an LCD keypad.	101 (000, 101 - 1299)
o5-04 (1554) RUN	Log Monitor Data 2	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the data log monitor. This parameter is only available on an LCD keypad.	102 (000, 101 - 1299)
o5-05 (1555) RUN	Log Monitor Data 3	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the data log monitor. This parameter is only available on an LCD keypad.	103 (000, 101 - 1299)
o5-06 (1556) RUN	Log Monitor Data 4	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the data log monitor. This parameter is only available on an LCD keypad.	107 (000, 101 - 1299)
o5-07 (1557) RUN	Log Monitor Data 5	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the data log monitor. This parameter is only available on an LCD keypad.	108 (000, 101 - 1299)
o5-08 (1558) RUN	Log Monitor Data 6	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the data log monitor. This parameter is only available on an LCD keypad. <b>Note:</b> When <i>A1-02</i> = 0 or 5 [Control Method Selection = <i>V/f</i> , <i>OLV/PM</i> ], the default setting is 0.	105 (000, 101 - 1299)
o5-09 (1559) RUN	Log Monitor Data 7	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the data log monitor. This parameter is only available on an LCD keypad.	110 (000, 101 - 1299)
o5-10 (155A) RUN	Log Monitor Data 8	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the data log monitor. This parameter is only available on an LCD keypad.	112 (000, 101 - 1299)
o5-11 (155B) RUN	Log Monitor Data 9	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the data log monitor. This parameter is only available on an LCD keypad.	000 (000, 101 - 1299)
o5-12 (155C) RUN	Log Monitor Data 10	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the data log monitor. This parameter is only available on an LCD keypad.	000 (000, 101 - 1299)

## 3.14 S: Special Applications

### ◆ S1: Dynamic Noise Control

No. (Hex.)	Name	Description	Default (Range)
S1-01 (3200) Expert	Dynamic Noise Control	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the function that decreases the output voltage in variable torque applications to decrease audible noise. 0 : Disabled 1 : Enabled	0 (0, 1)
S1-02 (3201) Expert	Voltage Reduction Rate	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the rate at which the drive will decrease the output voltage as a percentage of the V/f pattern when operating with no load.	50.0% (50.0 - 100.0%)
S1-03 (3202) Expert	Voltage Restoration Level	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the level at which the drive will start to restore the voltage as a percentage of the drive rated torque.	20.0% (0.0 - 90.0%)
S1-04 (3203) Expert	Voltage Restoration Off Level	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the level at which voltage restoration for the V/f pattern is complete as a percentage of the drive rated torque. If the output is more than S1-04, the drive will control the voltage as specified by the V/f pattern setting. <b>Note:</b> The lower limit of this parameter is the value of S1-03 [Voltage Restoration Level] + 10.0%.	50.0% (10.0 - 100.0%)
S1-05 (3204) Expert	Volt Restore Sensitivity Time K	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the level of sensitivity of the output torque and LPF time constant for the voltage reduction rate. You can adjust the level of sensitivity with the load response.	1.000 s (0.000 - 3.000 s)
S1-06 (3205) Expert	Volt Restore Impact Load Time K	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the voltage restoration time constant when you add an impact load.	0.050 s (0.000 - 1.000 s)
S1-07 (324C) Expert	Output Phase Loss Level	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Decreases the output phase loss level when Dynamic Noise control is active.	100.0% (10.0 - 100.0%)

### ◆ S3: PI2 Control

No. (Hex.)	Name	Description	Default (Range)
S3-01 (321A)	PI2 Control Enable Selection	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets when the PI Auxiliary Control function is enabled: 0 : Disabled 1 : Always 2 : Drive Running 3 : Motor Running	0 (0 - 3)
S3-02 (321B) RUN	PI2 Control Transducer Scale	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the full scale (10 V or 20 mA) output of the pressure transducer that is connected to the analog input terminals programmed for PI2 (Setpoint or Feedback). <b>Note:</b> Parameters S3-04 [PI2 Control Unit Selection], S3-03 [PI2 Control Decimal Place Pos], and S3-02 [PI2 Control Transducer Scale] set the unit, resolution, and upper limit.	100.00 (1.00 - 600.00)
S3-03 (321C) RUN	PI2 Control Decimal Place Pos	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the decimal place display for secondary PI units. 0 : No Decimal Places (XXXXX) 1 : One Decimal Places (XXXX.X) 2 : Two Decimal Places (XXX.XX) 3 : Three Decimal Places (XX.XXX)	2 (0 - 3)

No. (Hex.)	Name	Description	Default (Range)
S3-04 (321D) RUN	PI2 Control Unit Selection	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the units displayed for the PI2 Control parameters and monitor.</p> <p>0 : "WC: inches of water column  1 : PSI: pounds per square inch  2 : GPM: gallons/min  3 : °F: Fahrenheit  4 : ft³/min: cubic feet/min  5 : m³/h: cubic meters/hour  6 : L/h: liters/hour  7 : L/s: liters/sec  8 : bar: bar  9 : Pa: Pascal  10 : °C: Celsius  11 : m: meters  12 : ft: feet  13 : L/min: liters/min  14 : m³/min: cubic meters/min  15 : "Hg: Inch Mercury  16 : kPa: kilopascal  48 : %: Percent  49 : Custom(S3-18~20)  50 : None</p>	48 (0 - 50)
S3-05 (321E) RUN	PI2 Control Setpoint	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the PI2 Control target setpoint.</p> <p><b>Note:</b>  Parameters S3-04 [PI2 Control Unit Selection], S3-03 [PI2 Control Decimal Place Pos], and S3-02 [PI2 Control Transducer Scale] set the unit, resolution, and upper limit.</p>	0.00 (0.00 - 600.00)
S3-06 (321F) RUN	PI2 Control Proportional Gain	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the proportional gain of the PI2 Control. Set this parameter to 0.00 to disable proportional control.</p>	1.00 (0.00 - 25.00)
S3-07 (3220) RUN	PI2 Control Integral Time	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the integral time for the suction pressure control. Set this parameter to 0.00 to disable the integrator.</p>	1.0 s (0.0 - 360.0 s)
S3-08 (3221) RUN	PI2 Control Integral Max Limit	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the maximum output possible from the integrator.</p>	100.0% (0.0 - 100.0%)
S3-09 (3222) RUN	PI2 Control Output Upper Limit	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the maximum output possible from the PI Auxiliary Control function.</p>	100.0% (0.0 - 100.0%)
S3-10 (3223) RUN	PI2 Control Output Lower Limit	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the minimum output possible from the PI Auxiliary Control function.</p>	0.0% (-100.0 - +100.0%)
S3-11 (3224)	PI2 Control Output Level Sel	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the PI2 controller output direction.</p> <p>0 : Direct Acting (Normal Output)  1 : Inverse Acting (Reverse Output)</p>	0 (0, 1)
S3-12 (3225) RUN	PI2 Control Disable Mode Sel	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets what U5-20 [PI2 Control Output] will output when disabled.</p> <p>0 : No Output (0%)  1 : Lower Limit (S3-10)  2 : Setpoint</p>	0 (0 - 2)
S3-13 (3226) RUN	PI2 Control Low Feedback Lvl	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the secondary PI low feedback detection level.</p> <p><b>Note:</b>  Parameters S3-04 [PI2 Control Unit Selection], S3-03 [PI2 Control Decimal Place Pos], and S3-02 [PI2 Control Transducer Scale] set the unit, resolution, and upper limit.</p>	0.00 (0.00 - 600.00)
S3-14 (3227) RUN	PI2 Control Low Feedback Time	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the secondary PI low feedback detection delay time in seconds.</p>	1.0 s (0.0 - 25.5 s)

### 3.14 S: Special Applications

No. (Hex.)	Name	Description	Default (Range)
S3-15 (3228) RUN	PI2 Control High Feedback Lvl	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the secondary PI high feedback detection level.</p> <p><b>Note:</b> Parameters <i>S3-04 [PI2 Control Unit Selection]</i>, <i>S3-03 [PI2 Control Decimal Place Pos]</i>, and <i>S3-02 [PI2 Control Transducer Scale]</i> set the unit, resolution, and upper limit.</p>	100.00 (0.00 - 600.00)
S3-16 (3229) RUN	PI2 Control High Feedback Time	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the secondary PI high feedback detection delay time in seconds.</p>	1.0 s (0.0 - 25.5 s)
S3-17 (322A) RUN	PI2 Control Feedback Det Sel	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets when the low and high feedback detection multifunction outputs (71h and 72h) for PI2 Control are active.</p> <p>0 : While PI2 Control Enabled 1 : Always</p> <p><b>Note:</b> Feedback level detection compares PI2 Control Feedback from analog input <i>H3-xx = 26 [MFAI Function Selection = PI2 Control Feedback]</i> to these parameters:  <ul style="list-style-type: none"> <li>• <i>S3-13 [PI2 Control Low Feedback Lvl]</i> for low feedback level detection</li> <li>• <i>S3-15 [PI2 Control High Feedback Lvl]</i> for high feedback level detection</li> </ul> </p>	0 (0, 1)
S3-18 (322B) RUN	PI2 Control Custom Unit 1	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the first character of the PI2 Control custom unit display when <i>S3-04 = 49 [PI2 Control Unit Selection = Custom(S3-18-20)]</i>.</p>	41 (20 - 7A)
S3-19 (322C) RUN	PI2 Control Custom Unit 2	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the second character of the PI2 Control custom unit display when <i>S3-04 = 49 [PI2 Control Unit Selection = Custom(S3-18-20)]</i>.</p>	41 (20 - 7A)
S3-20 (322D) RUN	PI2 Control Custom Unit 3	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the third character of the PI2 Control custom unit display when <i>S3-04 = 49 [PI2 Control Unit Selection = Custom(S3-18-20)]</i>.</p>	41 (20 - 7A)

### ◆ S6: Protection

No. (Hex.)	Name	Description	Default (Range)
S6-01 (3236)	Emergency Override Speed	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the speed command for emergency override mode when <i>S6-02 = 0 [Emergency Override Ref Selection = Use S6-01 Reference]</i>.</p> <p><b>Note:</b>  <ul style="list-style-type: none"> <li>• When <i>A1-02 = 8 [Control Method Selection = EZOLV]</i>, <i>E1-09 [Minimum Output Frequency] (E9-04 [Base Frequency])</i> sets the lower limit, and <i>E1-04 [Maximum Output Frequency] (E9-02 [Maximum Speed])</i> sets the upper limit.</li> <li>• Parameter default is lower-limited to <i>E1-09 (E9-04 when A1-02 = 8)</i>. The default setting will automatically increase when <i>E1-09 (E9-04) &gt; S6-01</i>.</li> </ul> </p>	1.50 Hz (1.50 - 60.00 Hz)
S6-02 (3237)	Emergency Override Ref Selection	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the Emergency Override Speed Source:</p> <p>0 : Use S6-01 Reference 1 : Use Frequency Reference 2 : System PID Mode 3 : Independent PID Mode</p>	0 (0 - 3)
S6-03 (323A)	EMOVR Independent PID Scale	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the scaling on the Emergency PID Feedback and Setpoint (if programmed) Analog Inputs.</p> <p><b>Note:</b>  <ul style="list-style-type: none"> <li>• <i>S6-05 [EMOVR Independent PID Unit Digit]</i> sets the resolution for this parameter.</li> <li>• <i>S6-04 [EMOVR Independent PID Unit]</i> sets the units for this parameter.</li> </ul> </p>	100.00 (0.10 - 600.00)

No. (Hex.)	Name	Description	Default (Range)
S6-04 (323B)	EMOVR Independent PID Unit	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>0 : "WC: inches of water column  1 : PSI: pounds per square inch  2 : GPM: gallons/min  3 : °F: Fahrenheit  4 : ft<sup>3</sup>/min: cubic feet/min  5 : m<sup>3</sup>/h: cubic meters/hour  6 : L/h: liters/hour  7 : L/s: liters/sec  8 : bar: bar  9 : Pa: Pascal  10 : °C: Celsius  11 : m: meters  12 : ft: feet  13 : L/min: liters/min  14 : m<sup>3</sup>/min: cubic meters/min  15 : "Hg: Inch Mercury  16 : kPa: kilopascal  48 : %: Percent  49 : Custom(b5-68~70)  50 : None</p>	48 (0 - 50)
S6-05 (323C)	EMOVR Independent PID Unit Digit	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the number of digits for S6-06 [EMOVR PID Setpoint] when S6-02 = 3[Emergency Override Ref Selection = Independent PID Mode].  0 : No Decimal Places (XXXXX)  1 : One Decimal Places (XXXX.X)  2 : Two Decimal Places (XXX.XX)  3 : Three Decimal Places (XX.XXX)</p>	2 (0 - 3)
S6-06 (323D) RUN	EMOVR PID Setpoint	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the PID Setpoint when S6-02 = 3[Emergency Override Ref Selection = Independent PID Mode].  <b>Note:</b>  When S6-02 = 3: units and resolution are dependent on S6-04 [EMOVR Independent PID Unit] and S6-05 [EMOVR Independent PID Unit Digit]. Value is internally limited to 300% of S6-03 [EMOVR Independent PID Scale].</p>	0.00 (0 - 600.00)
S6-07 (323E)	EMOVR Fault Suppression Mode	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the drive to let Emergency Override disable faults during operation.  0 : Fault Suppression  1 : Test Mode</p>	0 (0, 1)
S6-08 (323F)	EMOVR Drive Enable Input Mode	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets whether the Drive Enable Input (if programmed) must be inactive (drive is disabled) for Emergency Override to function.  0 : Drive Enable Status Ignored  1 : EMOVRun Only When Drive Disabled  <b>Note:</b>  You must program Drive Enable to a Digital Input for this parameter to have an effect.</p>	0 (0, 1)
S6-09 (3240)	Emergency Override Min Speed	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>When Emergency Override is active, the output frequency is lower-limited to this value.  <b>Note:</b>  When A1-02 = 8 [Control Method Selection = EZOLV], the range is 0.00 to 120.00 Hz.</p>	0.00 Hz (0.00 - 400.00 Hz)
S6-10 (3241)	Emergency Override Max Speed	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>When Emergency Override is active, the output frequency is upper-limited to this value.  <b>Note:</b>  • When A1-02 = 8 [Control Method Selection = EZOLV], the range is 0.00 to 120.00 Hz.  • Set this parameter to 0.00 Hz to disable the limit.</p>	0.00 Hz (0.00 - 400.00)

### 3.14 S: Special Applications

No. (Hex.)	Name	Description	Default (Range)
S6-11 (3242) Expert	EMOVR Drive Protection Fault ON	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the bit to enable fault detection during Emergency Override.</p> <p>bit 0 : Uv1 - DC Bus Undervoltage  bit 1 : CoF - Current Offset Fault  bit 2 : Reserved  bit 3 : Err - EEPROM Write Error  bit 4 : Reserved  bit 5 : Reserved  bit 6 : oL2 - Drive Overload  bit 7 : oPr - Operator Connection  bit 8 : PF - Input Phase Loss and SPCNR – Single Phase Converter Not Ready  bit 9 : Reserved  bit 10 : Reserved  bit 11 : oH - Heatsink Overheat  bit 12 : oH1 - Heatsink Overheat  bit 13 : OD - Output Disconnect  bit 14 : FAn1 - Cooling Fan Fault  bit 15 : ov2 - DC Bus Overvoltage 2</p> <p><b>Note:</b>  The drive sets the bits in Hex.</p>	0 (0 - FFFF)
S6-12 (3243) Expert	EMOVR Motor Protection Fault ON	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the bit to enable fault detection during Emergency Override.</p> <p>bit 0 : LF - Output Phase Loss  bit 1 : LF2 - Output Current Imbalance  bit 2 : oH3 - Motor Overheat PTC Input  bit 3 : oH4 - Motor Overheat PTC Input  bit 4 : Reserved  bit 5 : oL1 - Motor Overload  bit 6 : oL3 - Overtorque Detection 1  bit 7 : oL4 - Overtorque Detection 2  bit 8 : oL7 - High Slip Braking Overload  bit 9 : Reserved  bit 10 : UL3 - Undertorque Detection 1  bit 11 : UL4 - Undertorque Detection 2  bit 12 : UL6 - Motor Underload  bit 13 : Reserved  bit 14 : oS - Overspeed  bit 15 : dEv: Speed Deviation</p> <p><b>Note:</b>  The drive sets the bits in Hex.</p>	0 (0 - FFFF)
S6-13 (3244) Expert	EMOVR Option Fault ON	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the bit to enable fault detection during Emergency Override.</p> <p>bit 0 : bUS - Option Communication  bit 1 : CE - Communication Error  bit 2 : Reserved  bit 3 : EF0 - Option Card External Fault  bit 4 : PE1 - PLC Fault 1  bit 5 : PE2 - PLC Fault 2  bit 6 : nSE - Node Setup Error  bit 7 to 15 : Reserved</p> <p><b>Note:</b>  The drive sets the bits in Hex.</p>	0 (0 - FFFF)

No. (Hex.)	Name	Description	Default (Range)
S6-14 (3245) Expert	EMOVR Application 1 Fault ON	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the bit to enable fault detection during Emergency Override.</p> <p>bit 0 : EFX - External Faults  bit 1 : Reserved  bit 2 : HLCE - High Level Communications Error  bit 3 : bAT - Keypad Battery Low Voltage  bit 4 : TiM - Keypad Time Not Set  bit 5 : bCE - Bluetooth Communication Fault  bit 6 to 9 : Reserved  bit 10 : VLTS - Thermostat Fault  bit 11 : LFB - Low Feedback Sensed Fault  bit 12 : HFB - High Feedback Sensed Fault  bit 13 : LOAUX - Low PI Aux Feedback Level  bit 14 : HIAUX - High PI Aux Feedback Level  bit 15 : Reserved</p> <p><b>Note:</b> The drive sets the bits in Hex.</p>	0 (0 - FFFF)
S6-23 (324E)	OV2 Detect Time	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the detection time of <i>ov2</i> [DC Bus Overvoltage 2] in 0.1 s increments.</p> <p><b>Note:</b> Set this parameter to 0.0 s to disable <i>ov2</i> detection.</p>	10.0 s (0.0 - 1200.0 s)

## 3.15 T: Motor Tuning

### ◆ T0: Tuning Mode Selection

No. (Hex.)	Name	Description	Default (Range)
T0-00 (1197)	Tuning Mode Selection	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the type of Auto-Tuning. 0 : Motor Parameter Tuning	0 (0)

### ◆ T1: Induction Motor Auto-Tuning

No. (Hex.)	Name	Description	Default (Range)
T1-00 (0700)	Motor 1/Motor 2 Selection	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets which motor to tune when motor 1/2 switching is enabled. You can only use the keypad to set this parameter. You cannot use external input terminals to set it. <b>Note:</b> This parameter is enabled when $H1-xx = 16$ [Motor 2 Selection] is set. When $H1-xx \neq 16$ the keypad will not show this parameter. 1 : Motor 1 (sets E1-xx, E2-xx) 2 : Motor 2 (sets E3-xx, E4-xx)	1 (1, 2)
T1-01 (0701)	Auto-Tuning Mode Selection	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the type of Auto-Tuning. 0 : Rotational Auto-Tuning 2 : Stationary Line-Line Resistance	0 (0, 2)
T1-02 (0702)	Motor Rated Power	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Uses the units set in $o1-58$ [Motor Power Unit Selection] to set the motor rated output power.	Determined by $o2-04$ (0.00 - 650.00 HP)
T1-03 (0703)	Motor Rated Voltage	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the rated voltage (V) of the motor. Enter the base speed voltage for constant output motors.	Determined by $o2-04$ (208 V Class: 0.0 - 255.5 V, 480 V Class: 0.0 - 511.0 V)
T1-04 (0704)	Motor Rated Current	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the rated current (A) of the motor.	Determined by $o2-04$ (10% to 200% of the drive rated current)
T1-05 (0705)	Motor Base Frequency	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the base frequency (Hz) of the motor.	60.0 Hz (0.0 - 400.0 Hz)
T1-06 (0706)	Number of Motor Poles	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the number of motor poles.	4 (2 to 120)
T1-07 (0707)	Motor Base Speed	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the motor base speed for Auto-Tuning ( $\text{min}^{-1}$ (r/min)).	1750 $\text{min}^{-1}$ (r/min) (0 - 24000 $\text{min}^{-1}$ (r/min))
T1-11 (070B)	Motor Iron Loss	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the iron loss for calculating the energy-saving coefficient.	Determined by E2-11 or E4-11 (0 - 65535 W)

### ◆ T2: PM Motor Auto-Tuning

No. (Hex.)	Name	Description	Default (Range)
T2-01 (0750)	PM Auto-Tuning Selection	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the type of Auto-Tuning for PM motors. 0 : Manual Entry w/ Motor Data Sheet 1 : Stationary (Ld, Lq, R) 2 : Stationary (R Only) 4 : Rotational (Ld, Lq, R, back-EMF) 5 : High Frequency Injection	0 (0 - 5)
T2-02 (0751)	PM Motor Code Selection	<input type="checkbox"/> V/f <input type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Enter the PM motor code as specified by the rotation speed and motor output.	FFFF (0000 - FFFF)

No. (Hex.)	Name	Description	Default (Range)
T2-03 (0752)	PM Motor Type	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the type of PM motor the drive will operate. 0 : IPM motor 1 : SPM motor	1 (0, 1)
T2-04 (0730)	PM Motor Rated Power	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Uses the units set in <i>o1-58 [Motor Power Unit Selection]</i> to set the PM motor rated output power.	Determined by o2-04 (0.00 - 650.00 HP)
T2-05 (0732)	PM Motor Rated Voltage	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the rated voltage (V) of the motor.	208 V Class: 230.0 V, 480 V Class: 460.0 V (208 V Class: 0.0 - 255.0 V, 480 V Class: 0.0 - 510.0 V)
T2-06 (0733)	PM Motor Rated Current	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the rated current (A) of the motor.	Determined by o2-04 (10% to 200% of the drive rated current)
T2-07 (0753)	PM Motor Base Frequency	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the base frequency (Hz) of the motor.	60.0 Hz (0.0 - 400.0 Hz)
T2-08 (0734)	Number of PM Motor Poles	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the number of motor poles.	4 (2 - 120)
T2-10 (0754)	PM Motor Stator Resistance	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the stator resistance for each motor phase. <b>Note:</b> This parameter does not set line-to-line resistance.	Determined by T2-02 (0.000 - 65.000 Ω)
T2-11 (0735)	PM Motor d-Axis Inductance	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the d-axis inductance of the motor on a per phase basis.	Determined by T2-02 (0.00 - 600.00 mH)
T2-12 (0736)	PM Motor q-Axis Inductance	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the q-axis inductance of the motor on a per phase basis.	Determined by T2-02 (0.00 - 600.00 mH)
T2-13 (0755)	Back-EMF Units Selection	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the units that the drive uses to set the induced voltage constant. 0 : mV/(rev/min) 1 : mV/(rad/sec)	0 (0, 1)
T2-14 (0737)	Back-EMF Voltage Constant (Ke)	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the motor induced voltage constant (Ke).	Determined by T2-13 (0.0 - 2000.0)
T2-15 (0756)	Pull-In Current Level	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the level of the pull-in current as a percentage of <i>E5-03 [PM Motor Rated Current (FLA)]</i> . Usually it is not necessary to change this setting.	30% (0 - 120%)

#### ◆ T4: EZ Tuning

No. (Hex.)	Name	Description	Default (Range)
T4-01 (3130)	EZ Tuning Mode Selection	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the type of Auto-Tuning for EZOLV control. 0 : Motor Parameter Setting 1 : Line-to-Line Resistance	0 (0, 1)
T4-02 (3131)	Motor Type Selection	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the type of motor. 0 : Induction (IM) 1 : Permanent Magnet (PM) 2 : Synchronous Reluctance (SynRM)	0 (0, 1, 2)
T4-03 (3132)	Motor Max Revolutions	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the maximum motor revolutions (min <sup>-1</sup> ).	- ((40 to 120 Hz) × 60 × 2 / E9-08)
T4-04 (3133)	Motor Rated Revolutions	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets rated rotation speed (min <sup>-1</sup> ) of the motor.	- ((40 Hz to 120 Hz) × 60 × 2 / E9-08)
T4-05 (3134)	Motor Rated Frequency	<input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> EZOLV Sets the rated frequency (Hz) of the motor.	Determined by E9-01 and o2-04 (40.0 - 120.0 Hz)

### 3.15 T: Motor Tuning

No. (Hex.)	Name	Description	Default (Range)
T4-06 (3135)	Motor Rated Voltage	<div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV/IPM</span> <span style="background-color: black; color: white; padding: 2px;">EZOLV</span> </div> Sets the rated voltage (V) of the motor.	208 V Class: 230.0 V, 480 V Class: 460.0 V (208 V Class: 0.0 - 255.0 V, 480 V Class: 0.0 - 510.0 V)
T4-07 (3136)	Motor Rated Current	<div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV/IPM</span> <span style="background-color: black; color: white; padding: 2px;">EZOLV</span> </div> Sets the rated current (A) of the motor.	Determined by o2-04 (10% to 200% of the drive rated current)
T4-08 (3137)	Motor Rated Capacity	<div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV/IPM</span> <span style="background-color: black; color: white; padding: 2px;">EZOLV</span> </div> Sets the motor rated power in the units set in o1-58 [ <i>Motor Power Unit Selection</i> ].	Determined by E9-10 (0.10 - 650.00 HP)
T4-09 (3138)	Number of Poles	<div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV/IPM</span> <span style="background-color: black; color: white; padding: 2px;">EZOLV</span> </div> Sets the number of motor poles.	Determined by E9-01 (2 - 120)

## 3.16 U: Monitors

### ◆ U1: Operation Status Monitors

No. (Hex.)	Name	Description	MFAO Signal Level
U1-01 (0040)	Frequency Reference	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Shows the frequency reference value. Parameter <i>o1-03</i> [Keypad Display Unit Selection] sets the display units. Unit: 0.01 Hz</p>	10 V = Maximum frequency (0 V to +10 V)
U1-02 (0041)	Output frequency	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Shows the output frequency. Parameter <i>o1-03</i> [Keypad Display Unit Selection] sets the display units. Unit: 0.01 Hz</p>	10 V = Maximum frequency (0 V to +10 V)
U1-03 (0042)	Output Current	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Shows the output current. The keypad shows the value of <i>U1-03</i> in amperes (A). When you use serial communications to show the monitor, the current is "8192 = drive rated current (A)". Use the formula: "Numerals being displayed / 8192 × drive rated current (A)" to use the serial communication current value shown in the monitor. Unit: Determined by the drive model. • 0.01 A: 2011 to 2046, 4005 to 4014 • 0.1 A: 2059 to 2396, 4021 to 4720</p>	10 V = Drive rated current
U1-04 (0043)	Control Method	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Shows the drive control method. 0 : V/f Control 5 : PM Open Loop Vector 8 : EZ Vector Control</p>	No signal output available
U1-05 (0044)	Motor Speed	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Shows the detected motor speed. Parameter <i>o1-03</i> [Keypad Display Unit Selection] sets the display units. Unit: 0.01 Hz</p>	10 V = Maximum frequency (0 V to +10 V)
U1-06 (0045)	Output Voltage Ref	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Shows the output voltage reference. Unit: 0.1 V</p>	208 V class: 10 V = 200 V <sub>rms</sub> 480 V class: 10 V = 400 V <sub>rms</sub>
U1-07 (0046)	DC Bus Voltage	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Shows the DC bus voltage. Unit: 1 V</p>	208 V class: 10 V = 400 V 480 V class: 10 V = 800 V
U1-08 (0047)	Output Power	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Shows the internally-calculated output power. When you change <i>A1-02</i> [Control Method Selection], it will also change the signal level of the analog output. • <i>A1-02</i> = 0: Drive capacity (kW) • <i>A1-02</i> = 5: PM Motor Rated Power [<i>E5-02</i>] (kW) • <i>A1-02</i> = 8: Motor Rated Power [<i>E9-07</i>] (kW) Unit: Determined by the drive model. • 0.01 kW: 2011 to 2046, 4005 to 4014 • 0.1 kW: 2059 to 2396, 4021 to 4720</p>	10 V: Drive capacity (motor rated power) kW (-10 V to +10 V)
U1-09 (0048)	Torque Reference	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Shows the internal torque reference value. Unit: 0.1%</p>	10 V = Motor rated torque (0 V to +10 V)
U1-10 (0049)	Input Terminal Status	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Shows the status of the MFDI terminal where 1 = ON, 0 = OFF. For example, <i>U1-10</i> shows "00000011" when terminals S1 and S2 are ON. bit0 : Terminal S1 (MFDI 1) bit1 : Terminal S2 (MFDI 2) bit2 : Terminal S3 (MFDI 3) bit3 : Terminal S4 (MFDI 4) bit4 : Terminal S5 (MFDI 5) bit5 : Terminal S6 (MFDI 6) bit6 : Terminal S7 (MFDI 7) bit7 : Terminal S8 (MFDI 8)</p>	No signal output available

### 3.16 U: Monitors

No. (Hex.)	Name	Description	MFAO Signal Level
U1-11 (004A)	Output Terminal Status	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows the status of the MFDO terminal where 1 = (ON) and 0 = (OFF). For example, U1-11 shows "00000011" when terminals M1 and M3 are ON.</p> <p><b>Note:</b> When H2-xx = 100 to 1C4 [Inverse Output of Function], the monitor will show the value before inversion.</p> <p>bit 0 : Terminals M1-M2 bit 1 : Terminals M3-M4 bit 2 : Terminals MD-ME-MF bit 3 : Not used (normal value of 0). bit 4 : Not used (normal value of 0). bit 5 : Not used (normal value of 0). bit 6 : Not used (normal value of 0). bit 7 : Fault relay MA/MB-MC</p>	No signal output available
U1-12 (004B)	Drive Status	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows drive status where 1 = ON and 0 = OFF. For example, U1-12 shows "00000101" during run with the Reverse Run command.</p> <p>bit0 : During Run bit1 : During zero-speed bit2 : During reverse bit3 : During fault reset signal input bit4 : During speed agreement bit5 : Drive ready bit6 : During minor fault detection bit7 : During fault detection</p>	No signal output available
U1-13 (004E)	Terminal A1 Level	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows the signal level of terminal A1. Unit: 0.1%</p>	10 V = 100% (0 V to +10 V)
U1-14 (004F)	Terminal A2 Level	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows the signal level of terminal A2. Unit: 0.1%</p>	10 V = 100% (0 V to +10 V)
U1-15 (0050)	Terminal A3 Level	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows the signal level of terminal A3. Unit: 0.1%</p>	10 V = 100% (-10 V to +10 V)
U1-16 (0053)	SFS Output Frequency	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows the output frequency after soft start. Shows the frequency with acceleration and deceleration times and S-curves. Parameter o1-03 [Keypad Display Unit Selection] sets the display units. Unit: 0.01 Hz</p>	10 V = Maximum frequency (0 V to +10 V)
U1-17 (0058)	DI-A3 Input Status	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows the reference value input from DI-A3 option. Shows the input signal for DI-A3 in hexadecimal as set in F3-01 [Digital Input Function Selection]. 3FFFF: Set (1 bit) + Sign (1 bit) + 16 bit</p>	No signal output available
U1-18 (0061)	oPE Fault Parameter	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows the parameter number that caused the oPE02 [Parameter Range Setting Error] or oPE08 [Parameter Selection Error].</p>	No signal output available
U1-19 (0066)	MEMOBUS/Modbus Error Code	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows the contents of the MEMOBUS/Modbus communication error where 1 = "error" and 0 = "no error". For example, U1-19 shows "00000001" when there is a CRC error.</p> <p>bit0 : CRC Error bit1 : Data Length Error bit2 : Not used (normal value of 0). bit3 : Parity Error bit4 : Overrun Error bit5 : Framing Error bit6 : Timed Out bit7 : Not used (normal value of 0).</p>	No signal output available
U1-21 (0077)	AI-A3 Term V1 Level	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows the analog reference of terminal V1 on analog input option card AI-A3. Unit: 0.1%</p>	10 V = 100% (-10 V to +10 V)
U1-22 (072A)	AI-A3 Term V2 Level	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows the analog reference of terminal V2 on analog input option card AI-A3. Unit: 0.1%</p>	10 V = 100% (-10 V to +10 V)

No. (Hex.)	Name	Description	MFAO Signal Level
U1-23 (072B)	AI-A3 Term V3 Level	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the analog reference of terminal V3 on analog input option card AI-A3. Unit: 0.1%	10 V = 100% (-10 V to +10 V)
U1-24 (007D)	Input Pulse Monitor	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the frequency to pulse train input terminal RP. Unit: 1 Hz	Determined by H6-02
U1-25 (004D)	SoftwareNumber Flash	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the FLASH ID.	No signal output available
U1-26 (005B)	SoftwareNumber ROM	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the ROM ID.	No signal output available
U1-50 (1199) Expert	Virtual Analog Input	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the virtual analog input value.	Determined by H7-40
U1-60 (1089)	System Setpoint	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the PID Setpoint. Unit: 0.01% <b>Note:</b> Parameters <i>b5-46 [PID Unit Display Selection]</i> , <i>b5-38 [PID User Unit Display Scaling]</i> , and <i>b5-39 [PID User Unit Display Digits]</i> set the unit, scaling, and resolution.	No signal output available
U1-61 (108A)	System Feedback	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the PID Feedback. Unit: 0.01% <b>Note:</b> Parameters <i>b5-46 [PID Unit Display Selection]</i> , <i>b5-38 [PID User Unit Display Scaling]</i> , and <i>b5-39 [PID User Unit Display Digits]</i> set the unit, scaling, and resolution.	No signal output available
U1-64 (108D)	Motor Speed	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the absolute value of the parameter <i>U1-02 [Output Frequency]</i> converted to RPM. Unit: 1 RPM	No signal output available
U1-99 (3BAE)	Anti-No-Flow Timer	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the value of the anti-no-flow timer. When this value is at the <i>Y2-24 [Anti-No-Flow Detection Time]</i> setting, the anti-no-flow feature starts to decrease the output frequency. Unit: 0.1 s	No signal output available

## ◆ U2: Fault Trace

No. (Hex.)	Name	Description	MFAO Signal Level
U2-01 (0080)	Current Fault	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the fault that the drive has when viewing the monitor.	No signal output available
U2-02 (0081)	Previous Fault	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the fault that occurred most recently.	No signal output available
U2-03 (0082)	Freq Reference@Fault	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the frequency reference at the fault that occurred most recently. Use <i>U1-01 [Frequency Reference]</i> to monitor the frequency reference value. Unit: 0.01 Hz	No signal output available
U2-04 (0083)	Output Freq @ Fault	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the output frequency at the fault that occurred most recently. Use <i>U1-02 [Output Frequency]</i> to monitor the actual output frequency. Unit: 0.01 Hz	No signal output available
U2-05 (0084)	Output Current@Fault	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the output current at the fault that occurred most recently. Use <i>U1-03 [Output Current]</i> to monitor the output current. The keypad shows the value of <i>U1-03</i> in amperes (A). When you use serial communications to show the monitor, the current is "8192 = drive rated current (A)". Use the formula: "Numerals being displayed / 8192 × drive rated current (A)" to use the serial communication current value shown in the monitor. Unit: Determined by the drive model. • 0.01 A: 2011 to 2046, 4005 to 4014 • 0.1 A: 2059 to 2396, 4021 to 4720	No signal output available

### 3.16 U: Monitors

No. (Hex.)	Name	Description	MFAO Signal Level
U2-06 (0085)	Motor Speed @ Fault	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows the motor speed at the fault that occurred most recently. Use <i>U1-05 [Motor Speed]</i> to monitor the motor speed. Unit: 0.01 Hz</p>	No signal output available
U2-07 (0086)	Output Voltage@Fault	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows the output voltage reference at the fault that occurred most recently. Use <i>U1-06 [Output Voltage Ref]</i> to monitor the output voltage reference. Unit: 0.1 V</p>	No signal output available
U2-08 (0087)	DC Bus Voltage@Fault	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows the DC bus voltage at the fault that occurred most recently. Use <i>U1-07 [DC Bus Voltage]</i> to monitor the DC bus voltage. Unit: 1 V</p>	No signal output available
U2-09 (0088)	Output Power @ Fault	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows the output power at the fault that occurred most recently. Use <i>U1-08 [Output Power]</i> to monitor the output power. Unit: 0.1 kW</p>	No signal output available
U2-10 (0089)	Torque Ref @ Fault	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows the torque reference at the fault that occurred most recently as a percentage of the motor rated torque. Use <i>U1-09 [Torque Reference]</i> to monitor the torque reference. Unit: 0.1%</p>	No signal output available
U2-11 (008A)	Input Terminal Status @ Fault	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows the status of the MFDI terminals at the most recent fault where 1 = (ON) and 0 = (OFF). For example, <i>U2-11</i> shows "00000011" when terminals S1 and S2 are ON. Use <i>U1-10 [Input Terminal Status]</i> to monitor the MFDI terminal status. bit0 : Terminal S1 bit1 : Terminal S2 bit2 : Terminal S3 bit3 : Terminal S4 bit4 : Terminal S5 bit5 : Terminal S6 bit6 : Terminal S7 bit7 : Terminal S8</p>	No signal output available
U2-12 (008B)	Output Terminal Status @ Fault	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows the status of the MFDO terminals at the most recent fault where 1 = (ON) and 0 = (OFF). For example, <i>U2-12</i> shows "00000011" when terminals M1 and M3 are ON. Use <i>U1-11 [Output Terminal Status]</i> to monitor the MFDO terminal status. bit 0 : Terminals M1-M2 bit 1 : Terminals M3-M4 bit 2 : Terminals MD-ME-MF bit 3 : Not used (normal value of 0). bit 4 : Not used (normal value of 0). bit 5 : Not used (normal value of 0). bit 6 : Not used (normal value of 0). bit 7 : Fault relay MA/MB-MC</p>	No signal output available
U2-13 (008C)	Operation Status @ Fault	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows the status of the MFDO terminals at the most recent fault where 1 = (ON) and 0 = (OFF). For example, <i>U2-13</i> shows "00000001" during run. Use <i>U1-12 [Drive Status]</i> to monitor the MFDO terminal status. bit0 : During Run bit1 : During zero-speed bit2 : During reverse bit3 : During fault reset signal input bit4 : During speed agreement bit5 : Drive ready bit6 : During minor fault detection bit7 : During fault detection</p>	No signal output available
U2-14 (008D)	Elapsed Time @ Fault	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows the cumulative operation time of the drive at the fault that occurred most recently. Use <i>U4-01 [Cumulative Ope Time]</i> to monitor the cumulative operation time. Unit: 1 h</p>	No signal output available

No. (Hex.)	Name	Description	MFAO Signal Level
U2-15 (07E0)	SFS Output @ Fault	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the output frequency after soft start at the fault that occurred most recently. Use U1-16 [SFS Output Frequency] to monitor the output frequency after soft start. Unit: 0.01 Hz	No signal output available
U2-16 (07E1)	q-Axis Current@Fault	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the q-Axis current of the motor at the fault that occurred most recently. Use U6-01 [Iq Secondary Current] to monitor the q-Axis current of the motor. Unit: 0.1 %	No signal output available
U2-17 (07E2)	d-Axis Current@Fault	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the d-Axis current of the motor at the fault that occurred most recently. Use U6-02 [Id ExcitationCurrent] to monitor the d-Axis current of the motor. Unit: 0.1 %	No signal output available
U2-20 (008E)	Heatsink Temp @Fault	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the heatsink temperature at the fault that occurred most recently. Use U4-08 [Heatsink Temperature] to monitor the temperature of the heatsink. Unit: 1 °C	No signal output available
U2-21 (1166) Expert	STPo Detect @ Fault	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Monitors conditions to detect STPo [Motor Step-Out Detected] faults. The bit for each condition is shown as ON or OFF. bit0 : Excessive current bit1 : Induced voltage deviation bit2 : d-axis current deviation bit3 : Motor lock at startup bit4 : Acceleration stall continue bit5 : Acceleration stall repeat bit6 : Not used (normal value of 0). bit7 : Not used (normal value of 0).	No signal output available
U2-30 (3008)	Fault 1 YYYY	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the year when the most recent fault occurred.	No signal output available
U2-31 (3009)	Fault 1 MMDD	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the month and day when the most recent fault occurred.	No signal output available
U2-32 (300A)	Fault 1 HHMM	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the time when the most recent fault occurred.	No signal output available

### ◆ U3: Fault History

No. (Hex.)	Name	Description	MFAO Signal Level
U3-01 (0090)	1st MostRecent Fault	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the fault history of the most recent fault. <b>Note:</b> The drive saves this fault history to two types of registers at the same time for the MEMOBUS/Modbus communications.	No signal output available
U3-02 (0091)	2nd MostRecent Fault	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the fault history of the second most recent fault. <b>Note:</b> The drive saves this fault history to two types of registers at the same time for the MEMOBUS/Modbus communications.	No signal output available
U3-03 (0092)	3rd MostRecent Fault	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the fault history of the third most recent fault. <b>Note:</b> The drive saves this fault history to two types of registers at the same time for the MEMOBUS/Modbus communications.	No signal output available
U3-04 (0093)	4th MostRecent Fault	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the fault history of the fourth most recent fault. <b>Note:</b> The drive saves this fault history to two types of registers at the same time for the MEMOBUS/Modbus communications.	No signal output available
U3-05 (0804)	5th MostRecent Fault	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the fault history of the fifth most recent fault.	No signal output available

### 3.16 U: Monitors

No. (Hex.)	Name	Description	MFAO Signal Level
U3-06 (0805)	6th MostRecent Fault	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Shows the fault history of the sixth most recent fault.	No signal output available
U3-07 (0806)	7th MostRecent Fault	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Shows the fault history of the seventh most recent fault.	No signal output available
U3-08 (0807)	8th MostRecent Fault	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Shows the fault history of the eighth most recent fault.	No signal output available
U3-09 (0808)	9th MostRecent Fault	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Shows the fault history of the ninth most recent fault.	No signal output available
U3-10 (0809)	10th MostRecentFault	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Shows the fault history of the tenth most recent fault.	No signal output available
U3-11 (0094)	ElapsedTime@1stFault	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Shows the cumulative operation time when the most recent fault occurred. <b>Note:</b> The drive saves this cumulative operation time to two types of registers at the same time for the MEMOBUS/Modbus communications. Unit: 1 h	No signal output available
U3-12 (0095)	ElapsedTime@2ndFault	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Shows the cumulative operation time when the second most recent fault occurred. <b>Note:</b> The drive saves this cumulative operation time to two types of registers at the same time for the MEMOBUS/Modbus communications. Unit: 1 h	No signal output available
U3-13 (0096)	ElapsedTime@3rdFault	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Shows the cumulative operation time when the third most recent fault occurred. <b>Note:</b> The drive saves this cumulative operation time to two types of registers at the same time for the MEMOBUS/Modbus communications. Unit: 1 h	No signal output available
U3-14 (0097)	ElapsedTime@4thFault	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Shows the cumulative operation time when the fourth most recent fault occurred. <b>Note:</b> The drive saves this cumulative operation time to two types of registers at the same time for the MEMOBUS/Modbus communications. Unit: 1 h	No signal output available
U3-15 (080E)	ElapsedTime@5thFault	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Shows the cumulative operation time when the fifth most recent fault occurred. Unit: 1 h	No signal output available
U3-16 (080F)	ElapsedTime@6thFault	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Shows the cumulative operation time when the sixth most recent fault occurred. Unit: 1 h	No signal output available
U3-17 (0810)	ElapsedTime@7thFault	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Shows the cumulative operation time when the seventh most recent fault occurred. Unit: 1 h	No signal output available
U3-18 (0811)	ElapsedTime@8thFault	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Shows the cumulative operation time when the eighth most recent fault occurred. Unit: 1 h	No signal output available
U3-19 (0812)	ElapsedTime@9thFault	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Shows the cumulative operation time when the ninth most recent fault occurred. Unit: 1 h	No signal output available
U3-20 (0813)	ElapsedTime@10 Fault	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Shows the cumulative operation time when the tenth most recent fault occurred. Unit: 1 h	No signal output available
U3-21 (300B)	Fault 1 YYYY	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Shows the year when the most recent fault occurred.	No signal output available
U3-22 (300C)	Fault 1 MMDD	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Shows the month and day when the most recent fault occurred.	No signal output available
U3-23 (300D)	Fault 1 HHMM	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Shows the time when the most recent fault occurred.	No signal output available
U3-24 (300E)	Fault 2 YYYY	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Shows the year when the second most recent fault occurred.	No signal output available

No. (Hex.)	Name	Description	MFAO Signal Level
U3-25 (300F)	Fault 2 MMDD	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the month and day when the second most recent fault occurred.	No signal output available
U3-26 (3010)	Fault 2 HHMM	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the time when the second most recent fault occurred.	No signal output available
U3-27 (3011)	Fault 3 YYYY	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the year when the third most recent fault occurred.	No signal output available
U3-28 (3012)	Fault 3 MMDD	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the month and day when the third most recent fault occurred.	No signal output available
U3-29 (3013)	Fault 3 HHMM	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the time when the third most recent fault occurred.	No signal output available
U3-30 (3014)	Fault 4 YYYY	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the year when the fourth most recent fault occurred.	No signal output available
U3-31 (3015)	Fault 4 MMDD	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the month and day when the fourth most recent fault occurred.	No signal output available
U3-32 (3016)	Fault 4 HHMM	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the time when the fourth most recent fault occurred.	No signal output available
U3-33 (3017)	Fault 5 YYYY	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the year when the fifth most recent fault occurred.	No signal output available
U3-34 (3018)	Fault 5 MMDD	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the month and day when the fifth most recent fault occurred.	No signal output available
U3-35 (3019)	Fault 5 HHMM	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the time when the fifth most recent fault occurred.	No signal output available
U3-36 (301A)	Fault 6 YYYY	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the year when the sixth most recent fault occurred.	No signal output available
U3-37 (301B)	Fault 6 MMDD	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the month and day when the sixth most recent fault occurred.	No signal output available
U3-38 (301C)	Fault 6 HHMM	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the time when the sixth most recent fault occurred.	No signal output available
U3-39 (301D)	Fault 7 YYYY	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the year when the seventh most recent fault occurred.	No signal output available
U3-40 (301E)	Fault 7 MMDD	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the month and day when the seventh most recent fault occurred.	No signal output available
U3-41 (301F)	Fault 7 HHMM	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the time when the seventh most recent fault occurred.	No signal output available
U3-42 (3020)	Fault 8 YYYY	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the year when the eighth most recent fault occurred.	No signal output available
U3-43 (3021)	Fault 8 MMDD	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the month and day when the eighth most recent fault occurred.	No signal output available
U3-44 (3022)	Fault 8 HHMM	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the time when the eighth most recent fault occurred.	No signal output available
U3-45 (3023)	Fault 9 YYYY	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the year when the ninth most recent fault occurred.	No signal output available
U3-46 (3024)	Fault 9 MMDD	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the month and day when the ninth most recent fault occurred.	No signal output available
U3-47 (3025)	Fault 9 HHMM	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the time when the ninth most recent fault occurred.	No signal output available
U3-48 (3026)	Fault 10 YYYY	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the year when the tenth most recent fault occurred.	No signal output available
U3-49 (3027)	Fault 10 MMDD	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the month and day when the tenth most recent fault occurred.	No signal output available
U3-50 (3028)	Fault 10 HHMM	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the time when the tenth most recent fault occurred.	No signal output available

## ◆ U4: Maintenance Monitors

No. (Hex.)	Name	Description	MFAO Signal Level
U4-01 (004C)	Cumulative Ope Time	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows the cumulative operation time of the drive.</p> <p>Use parameter <i>o4-01 [Elapsed Operating Time Setting]</i> to reset this monitor. Use parameter <i>o4-02 [Elapsed Operating Time Selection]</i> to select the cumulative operation times from:</p> <ul style="list-style-type: none"> <li>The time from when the drive is energized until it is de-energized.</li> <li>The time at which the Run command is turned ON.</li> </ul> <p>The maximum value that the monitor will show is <i>99999</i>. After this value is more than <i>99999</i>, the drive automatically resets it and starts to count from <i>0</i> again.</p> <p>Unit: 1 h</p> <p><b>Note:</b> The MEMOBUS/Modbus communication data is shown in 10 h units. Use register 0099H for data in 1 h units.</p>	10 V: 99999 h
U4-02 (0075)	Num of Run Commands	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows how many times that the drive has received a Run command.</p> <p>Use parameter <i>o4-13 [RUN Command Counter @ Initialize]</i> to reset this monitor. The maximum value that the monitor will show is <i>65535</i>. After this value is more than <i>65535</i>, the drive automatically resets it and starts to count from <i>0</i> again.</p> <p>Unit: 1</p>	10 V: 65535 times
U4-03 (0067)	Cooling Fan Ope Time	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows the cumulative operation time of the cooling fans.</p> <p>Use parameter <i>o4-03 [Fan Operation Time Setting]</i> to reset this monitor. The maximum value that the monitor will show is <i>99999</i>. After this value is more than <i>99999</i>, the drive automatically resets it and starts to count from <i>0</i> again.</p> <p>Unit: 1 h</p> <p><b>Note:</b> The MEMOBUS/Modbus communication data is shown in 10 h units. Use register 009BH for data in 1 h units.</p>	10 V: 99999 h
U4-04 (007E)	Cool Fan Maintenance	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows the cumulative operation time of the cooling fans as a percentage of the replacement life of the cooling fans.</p> <p>Use parameter <i>o4-03 [Fan Operation Time Setting]</i> to reset this monitor.</p> <p>Unit: 1%</p> <p><b>Note:</b> Replace the cooling fans when this monitor is 90%.</p>	10 V: 100%
U4-05 (007C)	Capacitor Maintenance	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows the operation time of the electrolytic capacitors for the main circuit and control circuit as a percentage of the replacement life of the electrolytic capacitors.</p> <p>Use parameter <i>o4-05 [Capacitor Maintenance Setting]</i> to reset this monitor.</p> <p>Unit: 1%</p> <p><b>Note:</b> Replace the electrolytic capacitor when this monitor is 90%.</p>	10 V: 100%
U4-06 (07D6)	PreChargeRelayMainte	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows the operation time of the soft charge bypass relay as a percentage of the replacement life of the soft charge bypass relay.</p> <p>Use parameter <i>o4-07 [Softcharge Relay Maintenance Set]</i> to reset this monitor.</p> <p>Unit: 1%</p> <p><b>Note:</b> Replace the drive when this monitor is 90%.</p>	10 V: 100%
U4-07 (07D7)	IGBT Maintenance	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows the operation time of the IGBTs as a percentage of the replacement life of the IGBTs.</p> <p>Set parameter <i>o4-09 [IGBT Maintenance Setting]</i> to reset this monitor.</p> <p>Unit: 1%</p> <p><b>Note:</b> Replace the drive when this monitor is 90%.</p>	10 V: 100%
U4-08 (0068)	Heatsink Temperature	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows the heatsink temperature of the drive.</p> <p>Unit: 1 °C</p>	10 V: 100 °C

No. (Hex.)	Name	Description	MFAO Signal Level
U4-09 (005E)	LED Check	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Turns on the LED Status Ring and all of the keypad LEDs to make sure that the LEDs operate correctly.</p> <ol style="list-style-type: none"> <li>Set <math>o2-24 = 0</math> [<i>LED Light Function Selection = Enable Status Ring &amp; Keypad LED</i>].</li> <li>Push  when U4-09 is the top monitor shown on the keypad. All LEDs on the keypad and LED Status Ring will turn on.</li> </ol> <p><b>Note:</b> When Safety input 2 CH is open (STo), READY will flash.</p>	No signal output available
U4-10 (005C)	kWh, Lower 4 Digits	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Shows the lower 4 digits of the watt hour value for the drive. Unit: 1 kWh</p> <p><b>Note:</b> The watt hour is displayed in 9 digits. Monitor U4-11 [<i>kWh, Upper 5 Digits</i>] shows the upper 5 digits and U4-10 shows the lower 4 digits. Example for 12345678.9 kWh: U4-10: 678.9 kWh U4-11: 12345 MWh</p>	No signal output available
U4-11 (005D)	kWh, Upper 5 Digits	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Shows the upper 5 digits of the watt hour value for the drive. Unit: 1 MWh</p> <p><b>Note:</b> Monitor U4-11 shows the upper 5 digits and U4-10 [<i>kWh, Lower 4 Digits</i>] shows the lower 4 digits. Example for 12345678.9 kWh: U4-10: 678.9 kWh U4-11: 12345 MWh</p>	No signal output available
U4-13 (07CF)	Peak Hold Current	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Shows the hold value of the peak value (rms) for the drive output current. Use U4-14 [<i>PeakHold Output Freq</i>] to show the drive output frequency at the time that the drive holds the output current. The drive will hold the peak hold current at the next start up and restart of the power supply. The drive keeps the held value during baseblock (during stop). The keypad shows the value of U4-13 in amperes (A). When you use serial communications to show the monitor, the current is "8192 = drive rated current (A)." Use the formula: "Numerals being displayed / 8192 × drive rated current (A)" to use the serial communication current value shown in the monitor. Unit: Determined by the drive model. • 0.01 A: 2011 to 2046, 4005 to 4014 • 0.1 A: 2059 to 2396, 4021 to 4720</p>	No signal output available
U4-14 (07D0)	PeakHold Output Freq	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Shows the output frequency at which the peak value (rms) of the drive output current is held. The peak hold current can be monitored by U4-13 [<i>Peak Hold Current</i>]. The peak hold output frequency will be cleared at the next startup and restart of the power supply. The drive keeps the value that was under hold during baseblock (during stop). Unit: 0.01 Hz</p>	No signal output available
U4-16 (07D8)	Motor oL1 Level	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Shows the integrated value of oL1 [<i>Motor Overload</i>] as a percentage of oL1 detection level. Unit: 0.1%</p>	10 V: 100%

No. (Hex.)	Name	Description	MFAO Signal Level
U4-18 (07DA)	Reference Source	<p>  </p> <p>Shows the selected frequency reference source. The keypad shows the frequency reference source as "XY-nn" as specified by these rules: X: External Reference 1/2 Selection [<i>H1-xx = 2</i>] selection status</p> <ul style="list-style-type: none"> <li>• 1: <i>b1-01 [Frequency Reference Selection 1]</i></li> <li>• 2: <i>b1-15 [Frequency Reference Selection 2]</i></li> </ul> <p>Y-nn: Frequency reference source</p> <ul style="list-style-type: none"> <li>• 0-01: Keypad (<i>d1-01 [Reference 1]</i>)</li> <li>• 1-00: Analog input (unassigned)</li> <li>• 1-01: MFAI terminal A1</li> <li>• 1-02: MFAI terminal A2</li> <li>• 1-03: MFAI terminal A3</li> <li>• 2-02 to 2-17: Multi-step speed reference (<i>d1-02 to d1-17 [Reference 2 to 16, Jog Reference]</i>)</li> <li>• 3-01: MEMOBUS/Modbus communications</li> <li>• 4-01: Communication option card</li> <li>• 5-01: Pulse train input</li> <li>• 9-01: Up/Down command</li> </ul> <p><b>Note:</b> Display is Zero filled.</p>	No signal output available
U4-19 (07DB)	Modbus FreqRef (dec)	<p>  </p> <p>Shows the frequency reference sent to the drive from the MEMOBUS/Modbus communications as a decimal. Unit: 0.01%</p>	10 V: Maximum frequency (0 V to +10 V)
U4-20 (07DC)	Option Freq Ref(dec)	<p>  </p> <p>Shows the frequency reference sent to the drive from the communication option as a decimal. Unit: 0.01 %</p>	10 V: Maximum frequency (0 V to +10 V)
U4-21 (07DD)	Run Cmd Source	<p>  </p> <p>Shows the selected Run command source. The keypad shows the Run command source as "XY-nn" as specified by these rules: X: Run command</p> <ul style="list-style-type: none"> <li>• 1: <i>b1-02 [Run Command Selection 1]</i></li> <li>• 2: <i>b1-16 [Run Command Selection 2]</i></li> <li>• 3: JOG, Emergency Override</li> </ul> <p>Y: Run command source</p> <ul style="list-style-type: none"> <li>• 0: Keypad</li> <li>• 1: Control circuit terminal</li> <li>• 3: Memobus/Modbus communications</li> <li>• 4: Communication option card</li> </ul> <p>nn: Run command limit status data</p> <ul style="list-style-type: none"> <li>• 00: No limit status.</li> <li>• 01: The Run command stayed ON when the drive stopped in Programming Mode.</li> <li>• 02: The Run command stayed ON when switching from LOCAL Mode to REMOTE mode, or the Run command was entered during <i>oPE</i> at power-up while <i>b1-17 = 1 [Run Command at Power Up = Accept Existing RUN Command]</i>.</li> <li>• 03: The Run command is in standby after the drive was energized until the soft charge bypass contactor turns ON.</li> </ul> <p><b>Note:</b> The drive will detect <i>Uv1 [DC Bus Undervoltage]</i> or <i>Uv [Undervoltage]</i> if the soft charge bypass contactor does not turn ON after 10 s.</p> <ul style="list-style-type: none"> <li>• 04: Will not restart after run stop.</li> <li>• 05: An MFDI terminal caused a Fast stop or you pushed  on the keypad to ramp the motor to stop.</li> <li>• 06: <i>b1-17 = 0 [Run Command at Power Up = Disregard Existing RUN Command]</i>.</li> <li>• 07: During baseblock while coast to stop with timer.</li> <li>• 08: Frequency reference is less than <i>E1-09 [Minimum Output Frequency]</i> during baseblock.</li> <li>• 09: Waiting for the Enter command from PLC.</li> </ul> <p><b>Note:</b> Display is Zero filled.</p>	No signal output available

No. (Hex.)	Name	Description	MFAO Signal Level
U4-22 (07DE)	Modbus CmdData (hex)	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Shows the operation signal (register 0001H) sent to the drive from MEMOBUS/Modbus communications as a 4-digit hexadecimal number (zero suppress). The keypad shows the operation signal as specified by these rules:</p> <p>bit 0 : Forward run/Stop  bit 1 : Reverse run/Stop  bit 2 : External fault  bit 3 : Fault Reset  bit 4 : Multi-function input 1  bit 5 : Multi-function input 2  bit 6 : Multi-function input 3  bit 7 : Multi-function input 4  bit 8 : Multi-function input 5  bit 9 : Multi-function input 6  bit A : Multi-function input 7  bit B : Multi-function input 8  bit C : Not used (normal value of 0).  bit D : Not used (normal value of 0).  bit E : Not used (normal value of 0).  bit F : Not used (normal value of 0).</p>	No signal output available
U4-23 (07DF)	Option CmdData (hex)	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Shows the operation signal (register 0001H) sent to the drive from MEMOBUS/Modbus communications as a 4-digit hexadecimal number. The keypad shows the operation signal as specified by these rules:</p> <p>bit 0 : Forward run/Stop  bit 1 : Reverse run/Stop  bit 2 : External fault  bit 3 : Fault Reset  bit 4 : Multi-function input 1  bit 5 : Multi-function input 2  bit 6 : Multi-function input 3  bit 7 : Multi-function input 4  bit 8 : Multi-function input 5  bit 9 : Multi-function input 6  bit A : Multi-function input 7  bit B : Multi-function input 8  bit C : Not used (normal value of 0).  bit D : Not used (normal value of 0).  bit E : Not used (normal value of 0).  bit F : Not used (normal value of 0).</p>	No signal output available
U4-24 (07E6)	Number of Runs (Low)	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Shows the lower 4 digits of the drive run count.</p> <p><b>Note:</b>  The drive run count is an 8-digit number. Monitor <i>U4-25 [Number of Runs(High)]</i> shows the upper 4 digits and <i>U4-24</i> shows the lower 4 digits.</p>	10 V: 9999
U4-25 (07E7)	Number of Runs(High)	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Shows the upper 4 digits of the drive run count.</p> <p><b>Note:</b>  The drive run count is an 8-digit number. Monitor <i>U4-25</i> shows the upper 4 digits and <i>U4-24 [Number of Runs (Low)]</i> shows the lower 4 digits.</p>	10 V: 65535
U4-52 (1592)	Torque Ref from Comm	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Shows the torque reference that the drive received from a serial communication option card or from MEMOBUS/Modbus communications as a decimal number.</p> <p>Unit: 0.1%</p>	10 V: 100% (0 V to +10 V)
U4-61 (3096) Expert	Total EMOVR Run Time	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Shows the length of time that the drive operated in Emergency Override Mode.</p> <p>Unit: 1 min</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>The maximum value is 60,000 min.</li> <li>This monitor does not accumulate operation time when <i>S6-07 = 1 [EMOVR Fault Suppression Mode = Test Mode]</i>.</li> </ul>	No signal output available

## ◆ U5: PID Monitors

No. (Hex.)	Name	Description	MFAO Signal Level
U5-01 (0057)	PID Feedback	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows the PID control feedback value. Unit: 0.01%</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>Parameters <i>b5-46 [PID Unit Display Selection]</i>, <i>b5-38 [PID User Unit Display Scaling]</i>, and <i>b5-39 [PID User Unit Display Digits]</i> set the unit, scaling, and resolution.</li> <li>You must use an analog monitor option card AO-A3 to output negative values.</li> </ul>	10 V = Maximum frequency (-10 V to +10 V)
U5-02 (0063)	PID Input	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows the change between the PID setpoint and PID feedback (the quantity of PID input) as a percentage of the maximum output frequency. Unit: 0.01%</p>	10 V: Maximum frequency (0 V to +10 V)
U5-03 (0064)	PID Output	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows the PID control output as a percentage of the maximum output frequency. Unit: 0.01%</p>	10 V: Maximum frequency (0 V to +10 V)
U5-04 (0065)	PID Setpoint	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows the PID setpoint. Unit: 0.01%</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>Parameters <i>b5-46 [PID Unit Display Selection]</i>, <i>b5-38 [PID User Unit Display Scaling]</i>, and <i>b5-39 [PID User Unit Display Digits]</i> set the unit, scaling, and resolution.</li> <li>You must use an analog monitor option card AO-A3 to output negative values.</li> </ul>	10 V = Maximum frequency (-10 V to +10 V)
U5-05 (07D2)	PID DifferentialFdbk	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows the PID differential feedback value as a percentage of the maximum output frequency. This monitor is available after you set <i>H3-02</i>, <i>H3-10</i>, or <i>H3-06 = 16 [MFAI Function Selection = Differential PID Feedback]</i>. Unit: 0.01%</p>	10 V = Maximum frequency (-10 V to +10 V)
U5-06 (07D3)	PID Fdbk-Diff PID Fdbk	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows the difference from calculating <i>U5-05 - U5-01 [PID DifferentialFdbk] - [PID Feedback]</i>. Unit: 0.01%</p> <p><b>Note:</b></p> <p><i>U5-01 [PID Feedback] = U5-06</i> when <i>H3-02</i>, <i>H3-10</i>, or <i>H3-06 ≠ 16 [MFAI Function Selection ≠ Differential PID Feedback]</i>.</p>	10 V = Maximum frequency (-10 V to +10 V)
U5-14 (086B)	PID Out2 Upr4 Digits	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows the custom PI output. Monitor <i>U5-14</i> shows the upper four digits and <i>U5-15 [PID Out2 Lwr4 Digits]</i> shows the lower four digits. The drive uses <i>b5-43 [PID Out2 Monitor MAX Upper4 Dig]</i> and <i>b5-44 [PID Out2 Monitor MAX Lower4 Dig]</i> to scale the monitors. Unit: 1</p> <p><b>Note:</b></p> <p>Parameter <i>b5-41 [PID Output 2 Unit]</i> sets the display unit.</p>	10 V = $b5-43 \times 10000$
U5-15 (086C)	PID Out2 Lwr4 Digits	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows the custom PI output. Monitor <i>U5-14</i> shows the upper four digits and <i>U5-15 [PID Out2 Lwr4 Digits]</i> shows the lower four digits. The drive uses <i>b5-43 [PID Out2 Monitor MAX Upper4 Dig]</i> and <i>b5-44 [PID Out2 Monitor MAX Lower4 Dig]</i> to scale the monitors. Unit: 0.01</p> <p><b>Note:</b></p> <p>Parameter <i>b5-41 [PID Output 2 Unit]</i> sets the display unit.</p>	$b5-43 > 0$ : 10 V = 10000 $b5-43 = 0$ : 10 V = $b5-44$
U5-16 (086D)	PI Aux Ctrl Feedback	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows the PI Auxiliary Control Feedback level from the terminal set for <i>H3-xx = 27 [PI Auxiliary Control Feedback]</i>. Unit: PSI</p> <p><b>Note:</b></p> <p>Parameters <i>YF-21 [PI Aux Ctrl Level Unit Selection]</i> and <i>YF-22 [PI Aux Level Decimal Place Pos]</i> set the unit and resolution.</p>	No signal output available
U5-17 (086E)	PI2 Control Setpoint	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows the PI2 Control setpoint. <b>Note:</b></p> <p>Parameters <i>S3-04 [PI2 Control Unit Selection]</i> and <i>S3-03 [PI2 Control Decimal Place Pos]</i> set the unit and resolution.</p>	10 V = S3-02

No. (Hex.)	Name	Description	MFAO Signal Level
U5-18 (086F)	PI2 Control Feedback	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Shows the PI2 Control Feedback Level from the terminal set for <math>H3-xx = 26</math> [PI2 Control Feedback].</p> <p><b>Note:</b> Parameters <math>S3-04</math> [PI2 Control Unit Selection] and <math>S3-03</math> [PI2 Control Decimal Place Pos] set the unit and resolution.</p>	10 V = S3-02
U5-19 (0870)	PI2 Control Input	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Shows the PI2 Control input (deviation between PI target and feedback).</p> <p><b>Note:</b> Parameters <math>S3-04</math> [PI2 Control Unit Selection] and <math>S3-03</math> [PI2 Control Decimal Place Pos] set the unit and resolution.</p>	10 V = S3-02
U5-20 (0871)	PI2 Control Output	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Shows the PI2 Control output.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>Parameters <math>S3-04</math> [PI2 Control Unit Selection] and <math>S3-03</math> [PI2 Control Decimal Place Pos] set the unit and resolution.</li> <li>The drive operation while <math>H1-xx = A8</math> or <math>1A8</math> [PI2 Control Disable] changes when the <math>S3-12</math> [PI2 Control Disable Mode Sel] setting changes.</li> </ul>	10 V = S3-02
U5-30 (3000)	Time Hr Min HHMM	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Shows the current time (Hours and Minutes).</p>	No signal output available
U5-31 (3001)	Date Year	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Shows the current year.</p>	No signal output available
U5-32 (3002)	Date Mo Day MMDD	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Shows the current date (Month and Date).</p>	No signal output available
U5-33 (3003)	Date Week	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Shows the current date of the week.</p> <p>bit 0 : Sunday bit 1 : Monday bit 2 : Tuesday bit 3 : Wednesday bit 4 : Thursday bit 5 : Friday bit 6 : Saturday bit 7 : Not used (normal value of 0).</p>	No signal output available
U5-79 (3B9A)	PID Feedback Backup	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Shows the PID Feedback Backup [<math>H3-xx = 24</math>] signal that the drive uses when it loses the PID Feedback [<math>H3-xx = B</math>].</p> <p>Unit: 0.01%</p> <p><b>Note:</b> Parameters <math>b5-46</math> [PID Unit Display Selection], <math>b5-38</math> [PID User Unit Display Scaling], and <math>b5-39</math> [PID User Unit Display Digits] set the unit, scaling, and resolution.</p>	No signal output available
U5-81 (3B9C)	Diff Level Source	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Shows the Differential Feedback signal from the terminal set for <math>H3-xx = 2D</math> [Differential Level Source].</p> <p>Unit: 0.00%</p> <p><b>Note:</b> Parameters <math>b5-46</math> [PID Unit Display Selection], <math>b5-38</math> [PID User Unit Display Scaling], and <math>b5-39</math> [PID User Unit Display Digits] set the unit, scaling, and resolution.</p>	No signal output available
U5-99 (1599)	Setpoint	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Shows the PID setpoint command.</p> <p>Unit: 0.01%</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>Parameters <math>b5-46</math> [PID Unit Display Selection], <math>b5-38</math> [PID User Unit Display Scaling], and <math>b5-39</math> [PID User Unit Display Digits] set the unit, scaling, and resolution.</li> <li>You must use an analog monitor option card AO-A3 to output negative values.</li> </ul>	10 V = Maximum frequency (-10 V to +10 V)

## ◆ U6: Operation Status Monitors

No. (Hex.)	Name	Description	MFAO Signal Level
U6-01 (0051)	Iq Secondary Current	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows the value calculated for the motor secondary current (q-Axis) as a percentage of the motor rated secondary current. Unit: 0.1%</p>	10 V: Motor secondary rated current (0 V to +10 V)
U6-02 (0052)	Id ExcitationCurrent	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows the value calculated for the motor excitation current (d-Axis) as a percentage of the motor rated secondary current. Unit: 0.1%</p>	10 V: Motor secondary rated current (0 V to +10 V)
U6-03 (0054)	ASR Input	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows the ASR input value as a percentage of the maximum frequency. Unit: 0.01%</p>	10 V: Maximum frequency (0 V to +10 V)
U6-04 (0055)	ASR Output	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows the ASR output value as a percentage of the motor rated secondary current. Unit: 0.01%</p>	10 V: Motor secondary rated current (0 V to +10 V)
U6-05 (0059)	OutputVoltageRef: Vq	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows the drive internal voltage reference for motor secondary current control (q-Axis). Unit: 0.1 V <b>Note:</b> You must use an analog monitor option card AO-A3 to output negative values.</p>	208 V class: 10 V = 200 V <sub>rms</sub> 480 V class: 10 V = 400 V <sub>rms</sub> (-10 V to +10 V)
U6-06 (005A)	OutputVoltageRef: Vd	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows the drive internal voltage reference for motor excitation current control (d-Axis). Unit: 0.1 V <b>Note:</b> You must use an analog monitor option card AO-A3 to output negative values.</p>	208 V class: 10 V = 200 V <sub>rms</sub> 480 V class: 10 V = 400 V <sub>rms</sub> (-10 V to +10 V)
U6-10 (07C1) Expert	ContAxisDeviation Δθ	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows the deviation between the γδ-Axis that the drive uses for motor control and the dq-Axis. Unit: 0.1 ° <b>Note:</b> You must use an analog monitor option card AO-A3 to output negative values.</p>	5 V: 180 ° (-10 V to +10 V)
U6-14 (07CB) Expert	MagPolePosition(Obs)	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows the value of the flux position estimation. Unit: 0.1 ° <b>Note:</b> You must use an analog monitor option card AO-A3 to output negative values.</p>	10 V: 180 ° (-10 V to +10 V)
U6-17 (07D1) Expert	Energy Save Coeff	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows the total time of direction of motor rotation detections for Speed Estimation Speed Searches. This value adjusts b3-26 [Direction Determination Level]. <b>Note:</b> Upper limit is +32767 and lower limit is -32767.</p>	No signal output available
U6-21 (07D5)	Offset Frequency	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows the total value of d7-01 to d7-03 [Offset Frequency 1 to 3] selected with Add Offset Frequency 1 to 3 [H1-xx = 44 to 46]. Unit: 0.1%</p>	10 V: Maximum Frequency
U6-31 (007B)	TorqueDetect Monitor	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Monitors the torque reference or the output current after applying the filter. Unit: 0.1%</p>	10 V: 100%
U6-36 (0720) Expert	Comm Errors-Host	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows the number of inter-CPU communication errors. When you de-energize the drive, this value resets to 0.</p>	No signal output available
U6-37 (0721) Expert	Comm Errors-Sensor	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows the number of inter-CPU communication errors. When you de-energize the drive, this value resets to 0.</p>	No signal output available
U6-57 (07C4)	PolePolarityDeterVal	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Shows the change from the integrated current when the drive finds the polarity. Unit: 1 <b>Note:</b> If the change from the integrated current is less than 819, increase n8-84 [Polarity Detection Current]. U6-57 = 8192 is equivalent to the motor rated current.</p>	No signal output available

No. (Hex.)	Name	Description	MFAO Signal Level
U6-80 (07B0)	Option IP Address 1	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the currently available local IP Address (1st octet).	No signal output available
U6-81 (07B1)	Option IP Address 2	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the currently available local IP Address (2nd octet).	No signal output available
U6-82 (07B2)	Option IP Address 3	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the currently available local IP Address (3rd octet).	No signal output available
U6-83 (07B3)	Option IP Address 4	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the currently available local IP Address (4th octet).	No signal output available
U6-84 (07B4)	Online Subnet 1	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the currently available subnet mask (1st octet).	No signal output available
U6-85 (07B5)	Online Subnet 2	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the currently available subnet mask (2nd octet).	No signal output available
U6-86 (07B6)	Online Subnet 3	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the currently available subnet mask (3rd octet).	No signal output available
U6-87 (07B7)	Online Subnet 4	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the currently available subnet mask (4th octet).	No signal output available
U6-88 (07B8)	Online Gateway 1	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the currently available Gateway address (1st octet).	No signal output available
U6-89 (07B9)	Online Gateway 2	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the currently available Gateway address (2nd octet).	No signal output available
U6-90 (07F0)	Online Gateway 3	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the currently available Gateway address (3rd octet).	No signal output available
U6-91 (07F1)	Online Gateway 4	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the currently available Gateway address (4th octet).	No signal output available
U6-92 (07F2)	Online Speed	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the currently available communications speed. 10: 10 Mbps 100: 100 Mbps	No signal output available
U6-93 (07F3)	Online Duplex	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the currently available Duplex setting.	No signal output available
U6-98 (07F8)	First Fault	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the contents of the most recent communication options fault (Modbus TCP/IP, EtherNet/IP).	No signal output available
U6-99 (07F9)	Current Fault	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows the contents of current fault from communication options (Modbus TCP/IP, EtherNet/IP).	No signal output available

### ◆ UA: Multiplex

No. (Hex.)	Name	Description	MFAO Signal Level
UA-92 (3BA7)	Pump Status	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Shows pump running status where 0 = (OFF) and 1 = (Running). For example, UA-92 shows "00111111" when the drive and Pump 2 to Pump 6 are running. bit 0 : Drive bit 1 : Pump 2 bit 2 : Pump 3 bit 3 : Pump 4 bit 4 : Pump 5 bit 5 : Pump 6 bit 6 : Not used (normal value of 0). bit 7 : Not used (normal value of 0).	No signal output available

## 3.17 Y: Application Features

### ◆ Y1: Application Basics

No. (Hex.)	Name	Description	Default (Range)
Y1-01 (3C00)	Multiplex Mode	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the base operation mode of the drive controller.            0 : Drive Only            1 : Contactor Multiplex</p>	0 (0, 1)
Y1-04 (3C03) RUN	Sleep Wake-up Level	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the level that feedback must be less than for the time set in Y1-05 [Sleep Wake-up Level Delay Time] to start the system. This level also sets the wake up level when the drive is in Sleep Mode. When Y1-04 &lt; 0, the feedback level must decrease this amount to less than the setpoint.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>When PID operates in reverse mode, the feedback value must increase to more than the start level for the time set in Y1-05 for the system to start.</li> <li>When Y2-01 = 5 [Sleep Level Type = Output Frequency (non-PID)], the drive will ignore this parameter.</li> <li>Parameters b5-46 [PID Unit Display Selection], b5-38 [PID User Unit Display Scaling], and b5-39 [PID User Unit Display Digits] set the unit, scaling, and resolution.</li> <li>Range is 0.00 to 99.99 with a delta symbol (<math>\Delta</math>) to identify Delta to Setpoint.</li> <li>Set this parameter to 0.0 to disable the function.</li> </ul>	0.0 (-999.9 - +999.9)
Y1-05 (3C04) RUN	Sleep Wake-up Level Delay Time	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the drive to start the System again when the feedback decreases to less than Y1-04 [Sleep Wake-up Level] for the time set in this parameter.</p>	1.0 s (0.0 - 3600.0 s)
Y1-06 (3C05) RUN	Minimum Speed	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the minimum frequency at which the drive will run.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>The unit, decimal place, and setting range change when the Y1-07 [Minimum Speed Units] setting changes:            -Y1-07 = 0 [Hz]: The setting range is 0.0 Hz to E1-04 Hz.            -Y1-07 = 1 [RPM]: The setting range is 0 RPM to (E1-04 <math>\times</math> 60) RPM.</li> <li>When A1-02 = 8 [Control Method Selection = EZ Vector Control], the range is 0.0 Hz to (E9-02 <math>\times</math> 2) Hz.</li> </ul>	0.0 Hz Determined by Y1-07
Y1-07 (3C06)	Minimum Speed Units	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the units and decimal place for Y1-06 [Minimum Speed].            0 : Hz            1 : RPM</p> <p><b>Note:</b>            Changing Y1-07 will set Y1-06 [Minimum Speed] to the default value.</p>	0 (0, 1)
Y1-08 (3C07) RUN	Low Feedback Level	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the lower detection level for the PID feedback.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>Parameters b5-46 [PID Unit Display Selection], b5-38 [PID User Unit Display Scaling], and b5-39 [PID User Unit Display Digits] set the unit, scaling, and resolution.</li> <li>Range is 0.00 to 99.99 with a delta symbol (<math>\Delta</math>) to identify Delta to Setpoint.</li> </ul>	0.00% (0.00 - 99.99%)
Y1-09 (3C08) RUN	Low Feedback Lvl Fault Dly Time	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the delay time for the drive to detect an LFB [Low Feedback Sensed] fault after the feedback level decreases to less than the value set in Y1-08 [Low Feedback Level].</p> <p><b>Note:</b>            Set Y1-10 = 0 [Low Feedback Selection = Fault (and Digital Output)] to enable this parameter.</p>	10 s (0 - 3600 s)
Y1-10 (3C09)	Low Feedback Selection	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the drive response when the feedback decreases to less than Y1-08 [Low Feedback Level] for longer than the time set in Y1-09 [Low Feedback Lvl Fault Dly Time].            0 : Fault (and Digital Output)            1 : Alarm (and Digital Output)            2 : Digital Output Only</p>	2 (0 - 2)
Y1-11 (3C0A) RUN	High Feedback Level	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the upper detection level for the PID feedback.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>Parameters b5-46 [PID Unit Display Selection], b5-38 [PID User Unit Display Scaling], and b5-39 [PID User Unit Display Digits] set the unit, scaling, and resolution.</li> <li>Range is 0.00 to 99.99 with a delta symbol (<math>\Delta</math>) to identify Delta to Setpoint.</li> </ul>	0.00% (0.00 - 99.99%)

No. (Hex.)	Name	Description	Default (Range)
Y1-12 (3C0B) RUN	High Feedback Lvl Fault Dly Time	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the delay time between when the drive detects high feedback until the drive faults on an <i>HFBB</i> [ <i>High Feedback Sensed</i> ] fault. <b>Note:</b> This parameter is effective only when <i>Y1-13 = 0</i> [ <i>High Feedback Selection = Fault (and Digital Output)</i> ].	5 s (0 - 3600 s)
Y1-13 (3C0C)	High Feedback Selection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the drive response when the feedback increased to more than <i>Y1-11</i> [ <i>High Feedback Level</i> ] for longer than the time set in <i>Y1-12</i> [ <i>High Feedback Lvl Fault Dly Time</i> ]. 0 : Fault (and Digital Output) 1 : Alarm (and Digital Output) 2 : Digital Output Only	0 (0 - 2)
Y1-14 (3C0D) RUN	Feedback Hysteresis Level	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the hysteresis level for low and high level feedback detection. <b>Note:</b> Parameters <i>b5-46</i> [ <i>PID Unit Display Selection</i> ], <i>b5-38</i> [ <i>PID User Unit Display Scaling</i> ], and <i>b5-39</i> [ <i>PID User Unit Display Digits</i> ] set the unit, scaling, and resolution.	0.0% (0.0 - 10.00%)
Y1-15 (3C0E) RUN	Maximum Setpoint Difference	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets a percentage of difference between the setpoint and the feedback. The difference must be more than this value for the time set in <i>Y1-16</i> [ <i>Not Maintaining Setpoint Time</i> ] to trigger the drive response set in <i>Y1-17</i> [ <i>Not Maintaining Setpoint Sel</i> ]. <b>Note:</b> • Parameters <i>b5-46</i> [ <i>PID Unit Display Selection</i> ], <i>b5-38</i> [ <i>PID User Unit Display Scaling</i> ], and <i>b5-39</i> [ <i>PID User Unit Display Digits</i> ] set the unit, scaling, and resolution. • If there is a fault, the drive will coast to a stop. • Set this parameter to 0.0 to disable the function.	0.0% (0.0 - 6000.0%)
Y1-16 (3C0F) RUN	Not Maintaining Setpoint Time	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the delay time before a Setpoint Not Met condition occurs. The drive must detect the setpoint difference set in <i>Y1-15</i> [ <i>Maximum Setpoint Difference</i> ] before the timer will start. <b>Note:</b> Set <i>Y1-15 = 0</i> [ <i>Maximum Setpoint Difference = 0</i> ] to disable this function.	60 s (0 - 3600 s)
Y1-17 (3C10)	Not Maintaining Setpoint Sel	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the drive response when the feedback increases to more or decreases to less than the setpoint for more than the amount set in <i>Y1-15</i> [ <i>Maximum Setpoint Difference</i> ]. 0 : Fault (and Digital Output) 1 : Alarm (and Digital Output) 2 : Digital Output Only	0 (0 - 2)
Y1-18 (3C11)	Prime Loss Detection Method	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the units and quantity that the drive will use to determine <i>LOP</i> [ <i>Loss of Prime</i> ]. 0 : Current (A) 1 : Power (kW) 2 : Torque (%)	0 (0 - 2)
Y1-19 (3C12) RUN	Prime Loss Level	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the level to detect the <i>LOP</i> [ <i>Loss of Prime</i> ] in the pump during RUN or Sleep Boost Mode. <b>Note:</b> <i>Y1-18</i> [ <i>Prime Loss Detection Method</i> ] selection sets the units for this parameter.	0.0 (0.0 - 1000.0)
Y1-20 (3C13) RUN	Prime Loss Time	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the delay time before the drive detects an <i>LOP</i> [ <i>Loss of Prime</i> ] condition. The timer starts when the drive detects the conditions in <i>Y1-18</i> [ <i>Prime Loss Detection Method</i> ] and <i>Y1-19</i> [ <i>Prime Loss Level</i> ].	20 s (0 - 600 s)
Y1-21 (3C14)	Prime Loss Activation Freq	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the frequency level above which the drive enables Loss of Prime detection. <b>Note:</b> • When <i>A1-02 = 8</i> [ <i>Control Method Selection = EZOLV</i> ], the upper limit is the Hz equivalent of <i>E9-02</i> [ <i>Maximum Speed</i> ]. • When <i>H1-xx = 16</i> [ <i>MFDI Function Selection = Motor 2 Selection</i> ] for Motor 2, the upper limit is the larger value between <i>E1-04</i> [ <i>Maximum Output Frequency</i> ] and <i>E3-04</i> [ <i>Motor 2 Maximum Output Frequency</i> ].	0.0 Hz (0.0 - E1-04 Hz)
Y1-22 (3C15)	Prime Loss Selection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the drive response when the drive is in the Loss of Prime condition. 0 : Fault (and Digital Output) 1 : Alarm (and Digital Output) 2 : Digital Output Only	0 (0 - 2)
Y1-23 (3C16)	Prime Loss Max Restart Time	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the time in minutes that the drive will wait before it tries a restart after a restart fails or after it does not do a restart because of a fault.	0.2 min (0.2 - 6000.0 min)

No. (Hex.)	Name	Description	Default (Range)
Y1-36 (3C23)	High/Low Water DI Fault Det Sel	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets when the MFDI terminals set for <math>H1-xx = BB</math> or <math>BC</math> [Low Water Level or High Water Level] will be active to detect the <i>LWL</i> [Low Water Level] and <i>HWL</i> [High Water Level] faults.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>The drive will not detect <i>LWL</i> and <i>HWL</i> faults during Emergency Override.</li> <li>The drive will not detect <i>LWL</i> until Pre-Charge is complete. The drive will also not detect the fault during JOG.</li> <li>The drive cannot Auto-Restart the faults until the drive is no longer in a low or high water level condition. If the time set for <i>L5-03</i> [Continuous Method Max Restart T] or <i>L5-04</i> [Interval Method Restart Time] past but the low or high water level condition is not cleared, the drive will continue to stay in the Auto-Restart state.</li> </ul> <p>0 : During Run 1 : Always</p>	0 (0, 1)
Y1-40 (3C27) RUN	Maximum Speed	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the maximum speed.</p> <p><b>Note:</b></p> <p>This parameter is not effective when <math>Y1-40 = 0.0</math> Hz or <math>Y1-40 &gt; E1-04</math> [Maximum Output Frequency] <math>\times</math> <i>d2-01</i> [Frequency Reference Upper Limit].</p>	0.0 Hz (Determined by A1-02)

### ◆ Y2: PID Sleep and Protection

No. (Hex.)	Name	Description	Default (Range)
Y2-01 (3C64)	Sleep Level Type	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the data source that the drive uses to know when to activate the Sleep Function.</p> <p>0 : Output Frequency 1 : Output Current 2 : Feedback 3 : Output Speed (RPM) 5 : Output Frequency (non-PID)</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>Feedback depends on PID direction operation.</li> <li>When the Sleep Function is active, the keypad will show the "Sleep" Alarm.</li> </ul>	5 (0 - 5)
Y2-02 (3C65) RUN	Sleep Level	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the level that the level type set in <i>Y2-01</i> [Sleep Level Type] must be at for the time set in <i>Y2-03</i> [Sleep Delay Time] for the drive to enter Sleep Mode.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>Parameters <i>Y2-01</i>, <i>b5-46</i> [PID Unit Display Selection], <i>b5-38</i> [PID User Unit Display Scaling], and <i>b5-39</i> [PID User Unit Display Digits] set the unit, scaling, and resolution.</li> <li>When you set this parameter to 0.0, this function will not be active.</li> <li>When <math>Y2-01 = 5</math> [Output Frequency (non-PID)], the drive will disable the Sleep function when you set this parameter to 0.0.</li> <li>When <math>Y2-01 \neq 5</math>, the drive will set the sleep level to the largest value from <i>d2-02</i> [Frequency Reference Lower Limit], <i>Y1-06</i> [Minimum Speed], and <i>Y4-12</i> [Thrust Frequency] when you set this parameter to 0.0.</li> </ul>	0.0 (0.0 - 6000.0)
Y2-03 (3C66) RUN	Sleep Delay Time	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the delay time before the drive enters Sleep Mode when the drive is at the sleep level set in <i>Y2-02</i> [Sleep Level].</p>	5 s (0 - 3600 s)
Y2-04 (3C67) RUN	Sleep Activation Level	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the level above which the output frequency must increase to activate the Sleep Function when <math>Y2-01 = 0, 3, \text{ or } 5</math> [Sleep Level Type = Output Frequency, Output Speed (RPM), or Output Frequency (non-PID)].</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>When you set this parameter to 0.0, this function will not be active, and the Sleep Function will activate above the minimum speed (largest value from <i>d2-02</i> [Frequency Reference Lower Limit], <i>Y1-06</i> [Minimum Speed], and <i>Y4-12</i> [Thrust Frequency]).</li> <li>The unit for this parameter is usually Hz. When <math>Y2-01 = 3</math> [Sleep Level Type = Output Speed (RPM)], the unit is RPM.</li> </ul>	0.0 (0.0 - 6000.0)
Y2-05 (3C68) RUN	Sleep Boost Level	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the quantity of boost that the drive applies to the setpoint before it goes to sleep.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>Parameters <i>b5-46</i> [PID Unit Display Selection], <i>b5-38</i> [PID User Unit Display Scaling], and <i>b5-39</i> [PID User Unit Display Digits] set the unit, scaling, and resolution.</li> <li>Set this parameter to 0.00 to disable Sleep Boost Function.</li> </ul>	0.00 (0.00 - 600.00)
Y2-06 (3C69) RUN	Sleep Boost Hold Time	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the length of time that the drive will keep the boosted pressure before it goes to sleep.</p>	5.0 s (0.5 - 160.0 s)

No. (Hex.)	Name	Description	Default (Range)
Y2-07 (3C6A) RUN	Sleep Boost Max Time	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the length of time that the system (feedback) has to reach the boosted setpoint. The system must reach the boosted setpoint in the time set in this parameter, or it will go to sleep.	20.0 s (1.0 - 160.0 s)
Y2-08 (3C6B) RUN	Delta Feedback Drop Level	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the level of the PID Error (set-point minus feedback) to deactivate the Sleep Mode operation. <b>Note:</b> • Parameters <i>b5-46 [PID Unit Display Selection]</i> , <i>b5-38 [PID User Unit Display Scaling]</i> , and <i>b5-39 [PID User Unit Display Digits]</i> set the unit, scaling, and resolution. • Set this parameter to 0.00 to disable the function.	0.00 (0.00 - 600.00)
Y2-09 (3C6C) RUN	Feedback Drop Detection Time	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the time during which the software monitors the feedback to detect a flow/no-flow condition. Refer to <i>Y2-08 [Delta Feedback Drop Level]</i> for more information.	10.0 s (0.0 - 3600.0 s)
Y2-23 (3C7A) RUN	Anti-No-Flow Bandwidth	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the quantity of PI error bandwidth that the drive uses to detect an Anti- No-Flow condition. <b>Note:</b> Do not set this parameter value too high, because operation can become unstable.	0.00% (0.00 - 2.00%)
Y2-24 (3C7B) RUN	Anti-No-Flow Detection Time	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the time delay before the drive starts the increased deceleration rate after it detects Anti-No-Flow.	10.0 s (1.0 - 60.0 s)
Y2-25 (3C7C) RUN	Anti-No-Flow Release Level	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the amount below the setpoint which the feedback must decrease before the drive will disengage Anti-No-Flow and return to normal PI operation. <b>Note:</b> Parameters <i>b5-46 [PID Unit Display Selection]</i> , <i>b5-38 [PID User Unit Display Scaling]</i> , and <i>b5-39 [PID User Unit Display Digits]</i> set the unit, scaling, and resolution.	0.30% (0.00 - 10.00%)

### ◆ Y3: Contactor Multiplex

No. (Hex.)	Name	Description	Default (Range)
Y3-00 (3CC7)	Number of Lag Pumps in System	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the number of lag pumps present.	1 (1 - 5)
Y3-01 (3CC8)	Lag Pump Staging Method	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the method to add contactor lag pumps to the system. 0 : Output Frequency 1 : Feedback 2 : Feedback + Output Frequency	0 (0 - 2)
Y3-02 (3CC9)	Lag Pump Shutdown Method	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the method to remove contactor pumps from the system. 0 : Output Frequency 1 : Feedback 2 : Feedback + Output Frequency	0 (0 - 2)
Y3-03 (3CCA) RUN	Multiplex Max Speed Staging Lvl	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the maximum level used for the multiplex pumping operation. <b>Note:</b> • This parameter is active only when <i>Y3-01 = 0</i> or <i>2 [Lag Pump Staging Method = Output Frequency or Feedback + Output Frequency]</i> . • When <i>A1-02 = 8 [Control Method Selection = EZ Vector Control]</i> , the upper limit is the Hz equivalent of <i>E9-02 [Maximum Speed]</i> . While you set <i>H1-xx = 16 [MFDI Function Selection = Motor 2 Selection]</i> , the upper limit is the greater of the <i>E1-04 [Maximum Output Frequency]</i> value and the <i>E3-04 [Motor 2 Maximum Output Frequency]</i> value.	59.0 Hz (0 - E1-04 Hz)
Y3-04 (3CCB) RUN	Add Lag Pump Delta Level	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the level used for the multiplex pumping operation. <b>Note:</b> • This parameter is active only when <i>Y3-01 = 1</i> or <i>2 [Lag Pump Staging Method = Feedback or Feedback + Output Frequency]</i> . • Parameters <i>b5-46 [PID Unit Display Selection]</i> , <i>b5-38 [PID User Unit Display Scaling]</i> , and <i>b5-39 [PID User Unit Display Digits]</i> set the unit, scaling, and resolution. • To prevent excessive cycling, do not set this level too close to the system setpoint.	0.00 (0.00 - 600.00)
Y3-05 (3CCC) RUN	Add Lag Pump Delay Time	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the delay time before the drive adds a pump to the system.	2 s (0 - 3600 s)

### 3.17 Y: Application Features

No. (Hex.)	Name	Description	Default (Range)
Y3-06 (3CCD) RUN	Freq Reduction after Staging	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the upper limit of the output frequency after a lag pump is staged.	0.0 Hz (0.0 - 30.0 Hz)
Y3-07 (3CCE) RUN	Freq Reduction Time after Stage	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the amount of time that the output frequency will be limited after lag pump is staged. <b>Note:</b> Set this parameter to 0.0 s to disable this function.	0.0 s (0.0 - 240.0 s)
Y3-08 (3CCF) RUN	Shutdown Lag Pump Delta Level	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the shutdown level used for the multiplex pumping operation. <b>Note:</b> <ul style="list-style-type: none"> <li>This parameter is active only when Y3-02 = 1 or 2 [Lag Pump Shutdown Method = Feedback or Feedback + Output Frequency].</li> <li>Parameters b5-46 [PID Unit Display Selection], b5-38 [PID User Unit Display Scaling], and b5-39 [PID User Unit Display Digits] set the unit, scaling, and resolution.</li> <li>These parameters set the Pump Shutdown Frequency: <ul style="list-style-type: none"> <li>–Y3-50 [Pump 2 Shutdown Frequency]</li> <li>–Y3-60 [Pump 3 Shutdown Frequency]</li> <li>–Y3-70 [Pump 4 Shutdown Frequency]</li> <li>–Y3-80 [Pump 5 Shutdown Frequency]</li> <li>–Y3-90 [Pump 6 Shutdown Frequency]</li> </ul> </li> <li>To prevent excessive cycling, do not set this level too close to the system setpoint.</li> </ul>	0.00 (0.00 - 600.0)
Y3-09 (3CD0) RUN	Shutdown Lag Pump Delay Time	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the delay time before the drive shuts down one of the lag pump.	5 s (0 - 3600 s)
Y3-10 (3CD1) RUN	Max Setpoint Boost@ De-stage	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the maximum amount of boost that can be added to the setpoint after a de-stage occurs. <b>Note:</b> Parameters b5-46 [PID Unit Display Selection], b5-38 [PID User Unit Display Scaling], and b5-39 [PID User Unit Display Digits] set the unit, scaling, and resolution.	0.00 (-20.0 - +20.0)
Y3-11 (3CD2) RUN	Setpoint Boost Time	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the amount of time that the setpoint will remain boosted after lag pump is de-staged. <b>Note:</b> Set this parameter to 0.0 s to disable this function.	5.0 s (0.0 - 60.0 s)
Y3-12 (3CD3) RUN	Multi Pump Setpoint Increase	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the system setpoint increase each time a new pump is brought online. <b>Note:</b> Parameters b5-46 [PID Unit Display Selection], b5-38 [PID User Unit Display Scaling], and b5-39 [PID User Unit Display Digits] set the unit, scaling, and resolution.	0.00 (0.00 - 600.0)
Y3-13 (3CD4) RUN	Multi Pump Setpoint Decrease	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the system setpoint decrease each time a new pump is brought online. <b>Note:</b> Parameters b5-46 [PID Unit Display Selection], b5-38 [PID User Unit Display Scaling], and b5-39 [PID User Unit Display Digits] set the unit, scaling, and resolution.	0.00 (0.00 - 600.0)
Y3-14 (3CD5) RUN	Multiplex Stabilization Time	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the time used to stabilize the system when the drive adds or shuts down a pump during multiplex operation. <b>Note:</b> <ul style="list-style-type: none"> <li>When a pump is added, the stabilize timer temporarily disables the lead/lag functionality for the programmed time to prevent pump cycling.</li> <li>Set Y1-01 = 1 [Multiplex Mode = Contactor Multiplex] to enable this function. Time pump protection and lead/lag control is suspended during stabilization time.</li> <li>During stabilization time, the pump protection and staging/de-staging is suspended.</li> </ul>	2 s (0 - 3600 s)
Y3-15 (3CD6) RUN	High Feedback Quick De-stage	<b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b> Sets the High Feedback level that will trigger a quick de-stage. The quick de-stage uses an internal 2 s delay. <b>Note:</b> <ul style="list-style-type: none"> <li>Parameters b5-46 [PID Unit Display Selection], b5-38 [PID User Unit Display Scaling], and b5-39 [PID User Unit Display Digits] set the unit, scaling, and resolution.</li> <li>Set this parameter to 0.00 to disable this function.</li> <li>This function is intended for b5-09 = 0 [PID Output Level Selection = Direct Acting] only. If you use this function when b5-09 = 1 [Reverse Acting], it may cause pumps to de-stage incorrectly.</li> </ul>	0.00 (0.00 - 600.00)

No. (Hex.)	Name	Description	Default (Range)
Y3-16 (3CD7) RUN	Low Feedback Quick De-stage	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the Low Feedback level that will trigger a quick de-stage. The quick de-stage uses an internal 2 s delay.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>Parameters <i>b5-46 [PID Unit Display Selection]</i>, <i>b5-38 [PID User Unit Display Scaling]</i>, and <i>b5-39 [PID User Unit Display Digits]</i> set the unit, scaling, and resolution.</li> <li>Set this parameter to 0.00 to disable this function.</li> <li>This function is intended for <i>b5-09 = 1 [PID Output Level Selection = Reverse Acting]</i> only. If you use this function when <i>b5-09 = 0 [Direct Acting]</i>, it may cause pumps to de-stage incorrectly.</li> </ul>	0.00 (0.00 - 600.00)
Y3-30 (3CE5)	Stage Selection Mode	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the method of staging for the pumps.</p> <p>0 : Sequential 1 : Stop History</p>	0 (0, 1)
Y3-31 (3CE6)	De-stage Selection Mode	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the method to remove contactor pumps.</p> <p>0 : Last In, First Out 1 : First In, First Out</p>	0 (0, 1)
Y3-40 (3CEF)	Pre-Charge Helper Pump Select	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets which of the lag pumps can come on during Pre-Charge.</p> <p>0 : Disabled 2 : Pump 2 (MFDO 8A) 3 : Pump 3 (MFDO 8B) 4 : Pump 4 (MFDO 8C) 5 : Pump 5 (MFDO 8D) 6 : Pump 6 (MFDO 8E)</p>	0 (0 - 6)
Y3-41 (3CF0)	Pre-Charge Helper Pump Time	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets how long the helper pump specified in <i>Y3-40 [Pre-Charge Helper Pump Select]</i> is energized.</p> <p><b>Note:</b> Set this parameter to 0.0 to disable this function.</p>	0.0 min (0.0 - 3600.0 min)
Y3-42 (3CF1)	Helper Pump after Pre-Charge	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets whether the helper pump that was used in <i>Y3-40 [Pre-Charge Helper Pump Select]</i> turns off or maintains its state when Pre-Charge is finished:</p> <p>0 : Turn Off 1 : Continue</p>	0 (0, 1)
Y3-43 (3CF2)	Pre-Charge Helper On-Delay Time	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets how long the drive is in the Pre-Charge mode before the helper pump specified in <i>Y3-40 [Pre-Charge Helper Pump Select]</i> energized.</p>	2.0 min (0.0 - 600.0 min)
Y3-50 (3CF9) RUN	Pump 2 Shutdown Frequency	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the shutdown frequency used for Pump 2 in multiplex pumping operation.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>This parameter is active only when <i>Y3-02 = 0 or 2 [Lag Pump Shutdown Method = Output Frequency or Feedback + Output Frequency]</i>.</li> <li>When <i>A1-02 = 8 [Control Method Selection = EZ Vector Control]</i>, the upper limit is the Hz equivalent of <i>E9-02 [Maximum Speed]</i>. While you set <i>H1-xx = 16 [MFDI Function Selection = Motor 2 Selection]</i>, the upper limit is the greater of the <i>E1-04 [Maximum Output Frequency]</i> value and the <i>E3-04 [Motor 2 Maximum Output Frequency]</i> value.</li> </ul>	40.0 Hz (0.0 - E1-04 Hz)
Y3-60 (3CC3) RUN	Pump 3 Shutdown Frequency	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the shutdown frequency used for Pump 3 in multiplex pumping operation.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>This parameter is active only when <i>Y3-02 = 0 or 2 [Lag Pump Shutdown Method = Output Frequency or Feedback + Output Frequency]</i>.</li> <li>When <i>A1-02 = 8 [Control Method Selection = EZ Vector Control]</i>, the upper limit is the Hz equivalent of <i>E9-02 [Maximum Speed]</i>. While you set <i>H1-xx = 16 [MFDI Function Selection = Motor 2 Selection]</i>, the upper limit is the greater of the <i>E1-04 [Maximum Output Frequency]</i> value and the <i>E3-04 [Motor 2 Maximum Output Frequency]</i> value.</li> </ul>	40.0 Hz (0.0 - E1-04 Hz)
Y3-70 (3CC4) RUN	Pump 4 Shutdown Frequency	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the shutdown frequency used for Pump 4 in multiplex pumping operation.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>This parameter is active only when <i>Y3-02 = 0 or 2 [Lag Pump Shutdown Method = Output Frequency or Feedback + Output Frequency]</i>.</li> <li>When <i>A1-02 = 8 [Control Method Selection = EZ Vector Control]</i>, the upper limit is the Hz equivalent of <i>E9-02 [Maximum Speed]</i>. While you set <i>H1-xx = 16 [MFDI Function Selection = Motor 2 Selection]</i>, the upper limit is the greater of the <i>E1-04 [Maximum Output Frequency]</i> value and the <i>E3-04 [Motor 2 Maximum Output Frequency]</i> value.</li> </ul>	40.0 Hz (0.0 - E1-04 Hz)

No. (Hex.)	Name	Description	Default (Range)
Y3-80 (3CC5) RUN	Pump 5 Shutdown Frequency	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the shutdown frequency used for Pump 5 in multiplex pumping operation.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>This parameter is active only when Y3-02 = 0 or 2 [Lag Pump Shutdown Method = Output Frequency or Feedback + Output Frequency].</li> <li>When A1-02 = 8 [Control Method Selection = EZ Vector Control], the upper limit is the Hz equivalent of E9-02 [Maximum Speed]. While you set H1-xx = 16 [MFDI Function Selection = Motor 2 Selection], the upper limit is the greater of the E1-04 [Maximum Output Frequency] value and the E3-04 [Motor 2 Maximum Output Frequency] value.</li> </ul>	40.0 Hz (0.0 - E1-04 Hz)
Y3-90 (3CC6) RUN	Pump 6 Shutdown Frequency	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the shutdown frequency used for Pump 6 in multiplex pumping operation.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>This parameter is active only when Y3-02 = 0 or 2 [Lag Pump Shutdown Method = Output Frequency or Feedback + Output Frequency].</li> <li>When A1-02 = 8 [Control Method Selection = EZ Vector Control], the upper limit is the Hz equivalent of E9-02 [Maximum Speed]. While you set H1-xx = 16 [MFDI Function Selection = Motor 2 Selection], the upper limit is the greater of the E1-04 [Maximum Output Frequency] value and the E3-04 [Motor 2 Maximum Output Frequency] value.</li> </ul>	40.0 Hz (0.0 - E1-04 Hz)

### ◆ Y4: Application Advanced

No. (Hex.)	Name	Description	Default (Range)
Y4-01 (3CFA) RUN	Pre-Charge Level	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the level at which the drive will activate the pre-charge function when the drive is running at the frequency set in Y4-02 [Pre-Charge Frequency].</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>The drive will stop when one of these conditions is true:                             <ul style="list-style-type: none"> <li>The feedback level increases to more than Y4-01</li> <li>The pre-charge time set in Y4-03 [Pre-Charge Time] expires</li> </ul> </li> <li>Parameters b5-46 [PID Unit Display Selection], b5-38 [PID User Unit Display Scaling], and b5-39 [PID User Unit Display Digits] set the unit, scaling, and resolution.</li> </ul>	0.00 (0.00 - 600.00)
Y4-02 (3CFB) RUN	Pre-Charge Frequency	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the frequency at which the pre-charge function will operate.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>When A1-02 = 8 [Control Method Selection = EZOLV], the upper limit is the Hz equivalent of E9-02 [Maximum Speed].</li> <li>When H1-xx = 16 [MFDI Function Selection = Motor 2 Selection] for Motor 2, the upper limit is the larger value between E1-04 [Maximum Output Frequency] and E3-04 [Motor 2 Maximum Output Frequency].</li> </ul>	0.0 Hz (0.0 - E1-04 Hz)
Y4-03 (3CFC) RUN	Pre-Charge Time	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the length of time that the Pre-Charge function will run.</p> <p><b>Note:</b></p> <p>Set this parameter to 0.0 to disable the function.</p>	0.0 min (0.0 - 3600.0 min)
Y4-05 (3CFE) RUN	Pre-Charge Loss of Prime Level	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the level at which the drive will detect loss of prime in the pump.</p> <p><b>Note:</b></p> <p>Parameter Y1-18 [Prime Loss Detection Method] sets units.</p>	0.0 (0.0 - 1000.0)
Y4-11 (3D04) RUN	Thrust Acceleration Time	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the time at which the drive output frequency will ramp up to the reference frequency set in Y4-12 [Thrust Frequency].</p>	1.0 s (0.0 - 600.0 s)
Y4-12 (3D05) RUN	Thrust Frequency	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the Thrust Frequency that the drive will use to know which acceleration and deceleration time to use. The drive will accelerate to this frequency in the Y4-11 [Thrust Acceleration Time] time and decelerate from this frequency in the Y4-13 [Thrust Deceleration Time] time.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>When A1-02 = 8 [Control Method Selection = EZOLV], the upper limit is the Hz equivalent of E9-02 [Maximum Speed].</li> <li>When H1-xx = 16 [MFDI Function Selection = Motor 2 Selection] for Motor 2, the upper limit is the larger value between E1-04 [Maximum Output Frequency] and E3-04 [Motor 2 Maximum Output Frequency].</li> </ul>	0.0 Hz (0.0 - E1-04 Hz)
Y4-13 (3D06) RUN	Thrust Deceleration Time	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the length of time necessary for the drive to go from the Thrust Frequency in Y4-12 [Thrust Frequency] to stop when Thrust Mode is active.</p>	5.0 s (0.0 - 600.0 s)
Y4-17 (3D0A) RUN	Utility Start Delay	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the length of time that the drive will delay starting at power-up.</p>	0.0 min (0.0 - 1000.0 min)

No. (Hex.)	Name	Description	Default (Range)
Y4-18 (3D0B) RUN	Differential Level	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the maximum difference that the drive will allow when it subtracts the Differential Feedback from the Primary PID Feedback.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>The drive will respond as specified by the setting in Y4-20 [Differential Level Detection Selection] when the difference increases to more than the value set in this parameter for the time set in Y4-19 [Differential Level Detection Time].</li> <li>Parameters b5-46 [PID Unit Display Selection], b5-38 [PID User Unit Display Scaling], and b5-39 [PID User Unit Display Digits] set the unit, scaling, and resolution.</li> <li>Set this parameter to 0.00 to disable Differential Feedback Detection.</li> </ul>	0.00% (-99.99 - +99.99%)
Y4-19 (3D0C) RUN	Differential Lvl Detection Time	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the length of time that the difference between PID Feedback and the Differential Feedback must be more than Y4-18 [Differential Level] before the drive will respond as specified by Y4-20 [Differential Level Detection Selection].</p>	10 s (0 - 3600 s)
Y4-20 (3D0D) RUN	Differential Level Detection Sel	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the drive response during a Differential Level Detected condition.</p> <p>0 : Fault (and Digital Out) 1 : Alarm (and Digital Out) 2 : Digital Out Only</p>	0 (0 - 2)
Y4-22 (3D0F) RUN	Low City On-Delay Time	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the length of time that the drive will wait to stop when the drive detects a Low City Pressure condition.</p>	10 s (1 - 1000 s)
Y4-23 (3D10) RUN	Low City Off-Delay Time	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the length of time that the drive will wait to start again after you clear a Low City Pressure condition.</p>	5 s (0 - 1000 s)
Y4-24 (3D11) RUN	Low City Alarm Text	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the alarm message to show on the keypad when the drive detects a Low City Pressure condition.</p> <p>0 : Low City Pressure 1 : Low Suction Pressure 2 : Low Water in Tank</p>	0 (0 - 2)
Y4-36 (3D1D) RUN	Pressure Reached Exit Conditions	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets how the digital output responds to Feedback changes after it activates.</p> <p>0 : Hysteresis Above &amp; Below 1 : Hysteresis 1-Way</p>	1 (0, 1)
Y4-37 (3D1E) RUN	Pressure Reached Hysteresis Lvl	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the hysteresis level that will cause the drive to exit the Pressure Reached condition.</p> <p><b>Note:</b> Parameters b5-46 [PID Unit Display Selection], b5-38 [PID User Unit Display Scaling], and b5-39 [PID User Unit Display Digits] set the unit, scaling, and resolution.</p>	0.30 (0.01 - 10.00)
Y4-38 (3D1F) RUN	Pressure Reached On Delay Time	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the length of time that the drive will wait before it activates the Pressure Reached condition.</p>	1.0 s (0.1 - 60.0 s)
Y4-39 (3D20) RUN	Pressure Reached Off Delay Time	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the length of time that the drive will wait before it deactivates the Pressure Reached condition.</p>	1.0 s (0.1 - 60.0 s)
Y4-40 (3D21) RUN	Pressure Reached Detection Sel	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the drive status that triggers the Pressure Reached Detection digital output.</p> <p>0 : Always 1 : Drive Running 2 : Run Command</p>	0 (0 - 2)
Y4-41 (3D22) RUN	Diff Lvl Src Fdbk Backup Select	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the function to enable or disable <i>Differential Level Source</i> [H3-xx = 2D] as the backup transducer if there is a failure with the primary PID Feedback transducer [H3-xx = B] and the PID Feedback Backup transducer [H3-xx = 24] is not available.</p> <p>0 : Disabled 1 : Enabled</p>	0 (0, 1)

No. (Hex.)	Name	Description	Default (Range)
Y4-42 (3D23)	Output Disconnect Detection Sel	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the drive response when you open the output disconnect then connect it again.</p> <p>0 : Disabled 1 : Alarm - Speed Search 2 : Alarm - Start at Zero 3 : Fault</p> <p><b>Note:</b> When the Output Disconnect is active, the drive internally disables Output Phase Loss Detection of more than one phase.</p>	0 (0 - 3)
Y4-43 (3D24)	Output Disconnect Inject Current	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the level of DC injection current during output disconnect as a percentage of the drive rated current.</p>	30% (5 - 50%)

◆ Y8: De-Scale/De-Rag

No. (Hex.)	Name	Description	Default (Range)
Y8-01 (3DE0)	De-Scale Operation Selection	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the drive De-Scale functionality.</p> <p>0 : Disabled 1 : De-Scale Enabled 2 : Force De-Scale</p>	0 (0 - 2)
Y8-02 (3DE1) RUN	De-Scale Cycle Count	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the number of forward/reverse cycles for the De-Scale function.</p>	1 (1 - 100)
Y8-03 (3DE2) RUN	De-Scale Forward Speed	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the speed during the forward portion of the De-Scale operation.</p> <p><b>Note:</b> When <math>A1-02 = 8</math> [Control Method Selection = EZ Vector Control], the upper limit is the Hz equivalent of <math>E9-02</math> [Maximum Speed]. While you set <math>H1-xx = 16</math> [MFDI Function Selection = Motor 2 Selection], the upper limit is the greater of the <math>E1-04</math> [Maximum Output Frequency] value and the <math>E3-04</math> [Motor 2 Maximum Output Frequency] value.</p>	25.00 Hz (0.00 - E1-04 Hz)
Y8-04 (3DE3) RUN	De-Scale Forward Run Time	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Set the amount of time the drive will run in the forward portion of the De-Scale cycle.</p>	10 s (1 - 6000 s)
Y8-05 (3DE4) RUN	De-Scale Reverse Run Time	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Set the amount of time the drive will run in the reverse portion of the De-Scale cycle.</p>	10 s (1 - 6000 s)
Y8-06 (3DE5) RUN	De-Scale Acceleration Time	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the amount of time it will take the drive to accelerate from zero to the De-Scale frequency reference <math>Y8-03</math> [De-Scale Forward Speed] or <math>Y8-09</math> [De-Scale Reverse Speed].</p> <p><b>Note:</b> Internally limited to the equivalent range of 0.1 s to 6000.0 s acceleration from 0 Hz to Maximum Frequency.</p>	2.0 s (0.1 - 600.0 s)
Y8-07 (3DE6) RUN	De-Scale Deceleration Time	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the amount of time it will take the drive to decelerate from the De-Scale frequency reference <math>Y8-03</math> [De-Scale Forward Speed] or <math>Y8-09</math> [De-Scale Reverse Speed] to zero.</p> <p><b>Note:</b> Internally limited to the equivalent range of 0.1 s to 6000.0 s acceleration from 0 Hz to Maximum Frequency.</p>	2.0 s (0.1 - 600.0 s)
Y8-08 (3DE7) RUN	Run Time before De-Scale	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the number of pump operating hours (<math>U1-16 \neq 0</math> {SFS Output Frequency <math>\neq 0</math>}) before a De-Scale routine will run.</p>	168.0 h (0.1 - 2000.0 h)
Y8-09 (3DE8) RUN	De-Scale Reverse Speed	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the speed during the reverse portion of the De-Scale operation.</p> <p><b>Note:</b> When <math>A1-02 = 8</math> [Control Method Selection = EZ Vector Control], the upper limit is the Hz equivalent of <math>E9-02</math> [Maximum Speed]. While you set <math>H1-xx = 16</math> [MFDI Function Selection = Motor 2 Selection], the upper limit is the greater of the <math>E1-04</math> [Maximum Output Frequency] value and the <math>E3-04</math> [Motor 2 Maximum Output Frequency] value.</p>	25.00 Hz (0.00 - E1-04 Hz)

## ◆ YA: Preset Setpoint

No. (Hex.)	Name	Description	Default (Range)
YA-01 (3E58) RUN	Setpoint 1	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the PID Setpoint when <math>b1-01 = 0</math> [Frequency Reference Selection 1 = Keypad or Multi-Speed Selection].</p> <p><b>Note:</b> Parameters <math>b5-46</math> [PID Unit Display Selection], <math>b5-38</math> [PID User Unit Display Scaling], and <math>b5-39</math> [PID User Unit Display Digits] set the unit, scaling, and resolution.</p>	0.00 (0.00 - 600.00)
YA-02 (3E59) RUN	Setpoint 2	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the PID Setpoint as specified by the Multi-Setpoint digital inputs.</p> <p><b>Note:</b> Parameters <math>b5-46</math> [PID Unit Display Selection], <math>b5-38</math> [PID User Unit Display Scaling], and <math>b5-39</math> [PID User Unit Display Digits] set the unit, scaling, and resolution.</p>	0.00 (0.00 - 600.00)
YA-03 (3E5A) RUN	Setpoint 3	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the PID Setpoint as specified by the Multi-Setpoint digital inputs.</p> <p><b>Note:</b> Parameters <math>b5-46</math> [PID Unit Display Selection], <math>b5-38</math> [PID User Unit Display Scaling], and <math>b5-39</math> [PID User Unit Display Digits] set the unit, scaling, and resolution.</p>	0.00 (0.00 - 600.00)
YA-04 (3E5B) RUN	Setpoint 4	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the PID Setpoint as specified by the Multi-Setpoint digital inputs.</p> <p><b>Note:</b> Parameters <math>b5-46</math> [PID Unit Display Selection], <math>b5-38</math> [PID User Unit Display Scaling], and <math>b5-39</math> [PID User Unit Display Digits] set the unit, scaling, and resolution.</p>	0.00 (0.00 - 600.00)

## ◆ YC: Foldback Features

No. (Hex.)	Name	Description	Default (Range)
YC-01 (3EBC)	Output Current Limit Select	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the function to enable or disable the output current regulator.</p> <p>0 : Disabled 1 : Enabled</p>	0 (0, 1)
YC-02 (3EBD) RUN	Current Limit	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the current limit.</p> <p><b>Note:</b> Value is internally limited to 300% of the drive rated current set in <math>n9-01</math> [Inverter Rated Current].</p>	0.0 A (0.0 - 1000.0 A)
YC-10 (3EC5)	Single Phase Foldback Sel	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the function to enable or disable the single phase ripple regulator.</p> <p>0 : Disabled 1 : Enabled</p>	1 (0, 1)
YC-11 (3EC6)	Ripple Regulator Setpoint	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the ripple regulator setpoint as a percentage of the maximum amount of ripple permitted before the drive detects a PF [Input Phase Loss] fault.</p>	95.0% (0.0 - 200.0%)
YC-14 (3EC9)	Behavior when SPC is Not Ready	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the drive behavior when the Single Phase Converter faults or is not ready.</p> <p>0 : Coast to Stop - Fault 1 : Coast to Stop - Alarm</p>	1 (0, 1)

## ◆ YF: PI Auxiliary Control

No. (Hex.)	Name	Description	Default (Range)
YF-01 (3F50)	PI Aux Control Selection	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the PI Auxiliary Control function. 0 : Disabled 1 : Enabled	0 (0, 1)
YF-02 (3F51) RUN	PI Aux Control Transducer Scale	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the full scale (10 V or 20 mA) output of the pressure transducer connected to the analog input terminal programmed for $H3-xx = 27$ [PI Aux Control Feedback Level]. <b>Note:</b> Parameters YF-21 [PI Aux Ctrl Level Unit Selection] and YF-22 [PI Aux Level Decimal Place Pos] set the unit and resolution.	145.0 (1.0 - 6000.0)
YF-03 (3F52) RUN	PI Aux Control Setpoint	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the level to which the drive will try to regulate. <b>Note:</b> Parameters YF-21 [PI Aux Ctrl Level Unit Selection] and YF-22 [PI Aux Level Decimal Place Pos] set the unit and resolution.	20.0 PSI (0.0 - 6000.0)
YF-04 (3F53) RUN	PI Aux Control Minimum Level	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the level below which the drive must be for longer than YF-05 [PI Aux Control Sleep Delay Time] before the drive goes to sleep and turns off all lag pumps. <b>Note:</b> • Set this parameter to 0.0 to disable the function. • Parameters YF-21 [PI Aux Ctrl Level Unit Selection] and YF-22 [PI Aux Level Decimal Place Pos] set the unit and resolution.	10.0 PSI (0.0 - 6000.0)
YF-05 (3F54) RUN	PI Aux Control Sleep Delay Time	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the length of time that the drive will delay before it goes to sleep after the level is less than YF-04 [PI Aux Control Minimum Level] (when YF-23 = 1 [PI Aux Ctrl Output Level Select = Inverse Acting]) or more than YF-24 [PI Auxiliary Ctrl Maximum Level] (when YF-23 = 0 [Direct Acting]).	5 s (0 - 3600 s)
YF-06 (3F55) RUN	PI Aux Control Wake-up Level	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the level to wake up the drive when the drive after YF-04 [PI Aux Control Minimum Level] or YF-24 [PI Auxiliary Ctrl Maximum Level] put the drive to sleep. <b>Note:</b> • Parameter YF-23 [PI Aux Ctrl Output Level Select] sets the condition to wake up the drive. – YF-23 = 0 [Direct Acting]: The PI Aux Feedback must be less than the level set in this parameter for longer than the time set in YF-07 to wake up. – YF-23 = 1 [Inverse Acting]: The PI Aux Feedback must be more than the level set in this parameter for longer than the time set in YF-07 [PI Aux Control Wake-up Time] to wake up. • Parameters YF-21 [PI Aux Ctrl Level Unit Selection] and YF-22 [PI Aux Level Decimal Place Pos] set the unit and resolution.	30.0 PSI (0.0 - 999.9 PSI)
YF-07 (3F56)	PI Aux Control Wake-up Time	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the time to wake up the drive when the drive after YF-04 [PI Aux Control Minimum Level] or YF-24 [PI Auxiliary Ctrl Maximum Level] put the drive to sleep. <b>Note:</b> Parameter YF-23 [PI Aux Ctrl Output Level Select] sets the condition to wake up the drive. • YF-23 = 0 [Direct Acting]: The PI Aux Feedback must be less than the level set in YF-06 for longer than the time set in YF-07 to wake up. • YF-23 = 1 [Inverse Acting]: The PI Aux Feedback must be more than the level set in YF-06 [PI Aux Control Wake-up Level] for longer than the time set in YF-07 to wake up.	1.0 s (0.0 - 3600.0 s)
YF-08 (3F57) RUN	PI Aux Control Minimum Speed	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the minimum speed at which the drive can run when the PI Auxiliary Control has an effect on the output speed. <b>Note:</b> The drive will use Y1-06 [Minimum Speed] and Y4-12 [Thrust Frequency] as the minimum speed when PI Aux Control does not have an effect on the output speed or when you set YF-08 < Y1-06 and Y4-12.	0.00 Hz (0.00 - 400.00 Hz)
YF-09 (3F58) RUN	PI Aux Control Low Level Detect	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the level below which the drive must be for longer than YF-10 [PI Aux Control Low Lvl Det Time] to respond as specified by YF-11 [PI Aux Control Low Level Det Sel]. <b>Note:</b> • Set this parameter to 0.0 to disable the function. • Parameter YF-10 only applies to when YF-11 = 2 and 3 [Fault and Auto-Restart (time set by YF-15)]. • Range is 0.0 to 999.9 with a delta symbol ( $\Delta$ ) to identify Delta to Setpoint. • Parameters YF-21 [PI Aux Ctrl Level Unit Selection] and YF-22 [PI Aux Level Decimal Place Pos] set the unit and resolution.	0.0 PSI (0.0 - 999.9 PSI)
YF-10 (3F59) RUN	PI Aux Low Level Detection Time	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the length of time that the PI Aux Feedback must be less than YF-09 [PI Aux Control Low Lvl Detection] to trigger a drive response when YF-11 = 2 and 3 [PI Aux Control Low Level Det Sel = Fault and Auto-Restart (time set by YF-15)].	0.1 s (0.0 - 300.0 s)

No. (Hex.)	Name	Description	Default (Range)
YF-11 (3F5A)	PI Aux Control Low Level Det Sel	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets drive response when the PI Aux Feedback decreases to less than YF-09 [PI Aux Control Low Lvl Detection] for longer than YF-10 [PI Aux Control Low Lvl Det Time].</p> <p>0 : No Display 1 : Alarm Only 2 : Fault 3 : Auto-Restart (time set by YF-15)</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>Set YF-01 = 1 [PI Aux Control Selection = Enabled] and YF-09 [PI Aux Control Low Level Detect] &gt; 0 to enable PI Aux Low Level Detection.</li> <li>Parameter YF-10 only applies when YF-11 = 2 or 3.</li> </ul>	1 (0 - 3)
YF-12 (3F5B) RUN	PI Aux Control High Level Detect	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the value above which the level must be for longer than YF-13 [PI Aux High Level Detection Time] to respond as specified by YF-14 [PI Aux Hi Level Detection Select].</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>Set this parameter to 0.0 to disable the function.</li> <li>Parameter YF-13 only applies to when YF-14 = 2 and 3 [Fault and Auto-Restart (time set by YF-15)].</li> <li>Range is 0.0 to 999.9 with a delta symbol (<math>\Delta</math>) to identify Delta to Setpoint.</li> <li>Parameters YF-21 [PI Aux Ctrl Level Unit Selection] and YF-22 [PI Aux Level Decimal Place Pos] set the unit and resolution.</li> </ul>	0.0 PSI (0.0 - 999.9 PSI)
YF-13 (3F5C) RUN	PI Aux High Level Detection Time	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the length of time that the level must be more than YF-12 [PI Aux Control High Level Detect] before the drive will respond when YF-14 = 2, 3 [PI Aux Hi Level Detection Select].</p>	0.1 s (0.0 - 300.0 s)
YF-14 (3F5D)	PI Aux Control Hi Level Det Sel	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the drive response when the PI Aux Feedback increases to more than the YF-12 [PI Aux Control High Level Detect] level for longer than the time set in YF-13 [PI Aux High Level Detection Time].</p> <p>0 : NoDisplay (Digital Output Only) 1 : Alarm Only 2 : Fault 3 : Auto-Restart (time set by YF-15)</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>Set YF-01 = 1 [PI Aux Control Selection = Enabled] and YF-12 [PI Aux Control High Level Detect] &gt; 0 to enable PI Aux High Level Detection.</li> <li>Parameter YF-13 only applies when YF-14 = 2 or 3</li> </ul>	1 (0 - 3)
YF-15 (3F5E)	PI Aux Level Detect Restart Time	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the length of time the drive will wait before it tries an Auto-Restart of LOAUX [Low PI Aux Feedback Level] or HIAUX [High PI Aux Feedback Level] fault.</p>	5.0 min (0.1 - 6000.0 min)
YF-16 (3F5F) RUN	PI Auxiliary Control P Gain	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the proportional gain for the suction pressure control.</p>	2.00 (0.00 - 25.00)
YF-17 (3F60) RUN	PI Auxiliary Control I Time	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the integral time for the suction pressure control.</p> <p><b>Note:</b></p> <p>Set this parameter to 0.0 to disable the integrator.</p>	5.0 s (0.0 - 360.0 s)
YF-18 (3F61)	PI Aux Control Detect Time Unit	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets the time unit for YF-10 [PI Aux Control Low Lvl Det Time] and YF-13 [PI Aux High Level Detection Time].</p> <p>0 : Minutes (min) 1 : Seconds (sec)</p>	1 (0, 1)
YF-19 (3F62)	PI Aux Ctrl Feedback WireBreak	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets how the analog input selected for PI Aux Feedback will respond when it is programmed to receive a 4 mA to 20 mA signal and the signal is lost.</p> <p>0 : Disabled 1 : Alarm Only 2 : Fault (no retry, coast to stop)</p>	2 (0 - 2)
YF-20 (3F63)	PI Aux Main PI Speed Control	<p><b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b></p> <p>Sets if the PI Auxiliary Controller has an effect on output speed.</p> <p>0 : Disabled 1 : Enabled</p>	1 (0, 1)

### 3.17 Y: Application Features

No. (Hex.)	Name	Description	Default (Range)
YF-21 (3F64)	PI Aux Ctrl Level Unit Selection	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Set the units shown for the PI Aux Level parameters and monitors.</p> <p>0 : "WC: inches of water column            1 : PSI: pounds per square inch            2 : GPM: gallons/min            3 : °F: Fahrenheit            4 : ft<sup>3</sup>/min: cubic feet/min            5 : m<sup>3</sup>/h: cubic meters/hour            6 : L/h: liters/hour            7 : L/s: liters/sec            8 : bar: bar            9 : Pa: Pascal            10 : °C: Celsius            11 : m: meters            12 : ft: feet            13 : L/min: liters/min            14 : m<sup>3</sup>/min: cubic meters/min            15 : "Hg: Inch Mercury            16 : kPa: kilopascal            48 : %: Percent            49 : Custom (YF-32 ~ 34)            50 : None</p>	1 (0 - 50)
YF-22 (3F65)	PI Aux Level Decimal Place Pos	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the number of decimal places for the PI Aux Level parameters and monitors.</p> <p>0 : No Decimal Places (XXXXX)            1 : One Decimal Places (XXXX.X)            2 : Two Decimal Places (XXX.XX)            3 : Three Decimal Places (XX.XXX)</p>	1 (0 - 3)
YF-23 (3F66)	PI Aux Ctrl Output Level Select	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the PI Auxiliary Controller to be Direct-acting or Inverse-acting.</p> <p>0 : Direct Acting            1 : Inverse Acting</p>	1 (0, 1)
YF-24 (3F67) RUN	PI Auxiliary Ctrl Maximum Level	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the maximum level for PI Auxiliary Control. When the level is more than this setting for longer than YF-05 [PI Aux Control Sleep Delay Time], the drive will go to sleep and turn off all lag drives.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>Set this parameter to 0.0 to disable the function.</li> <li>Parameters YF-21 [PI Aux Ctrl Level Unit Selection] and YF-22 [PI Aux Level Decimal Place Pos] set the unit and resolution.</li> </ul>	0.0 PSI (0.0 - 6000.0 PSI)
YF-25 (3F68) RUN	PI Aux Control Activation Level	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the level to activate the PI Auxiliary Control.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>The drive response changes when the YF-23 [PI Aux Ctrl Output Level Select] setting changes.               <ul style="list-style-type: none"> <li>–YF-23 = 0 [Direct Acting]: When the PI Aux Feedback level is more than this setting for longer than YF-26 [PI Aux Control Activation Delay], the drive will activate the PI Auxiliary Control to control the output frequency.</li> <li>–YF-23 = 1 [Inverse Acting]: When the PI Aux Feedback level is less than this setting for longer than YF-26, the drive will activate PI Auxiliary Control to control the output frequency.</li> </ul> </li> <li>When you set this parameter to 0.0 PSI, PI Auxiliary Control is always enabled.</li> <li>Parameters YF-21 [PI Aux Ctrl Level Unit Selection] and YF-22 [PI Aux Level Decimal Place Pos] set the unit and resolution.</li> </ul>	0.0 PSI (0.0 - 6000.0 PSI)
YF-26 (3F69) RUN	PI Aux Control Activation Delay	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the delay time to activate the PI Auxiliary Control.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>The drive response changes when the YF-23 [PI Aux Ctrl Output Level Select] setting changes.               <ul style="list-style-type: none"> <li>–YF-23 = 0 [Direct Acting]: When the PI Aux Feedback level is more than YF-25 [PI Aux Control Activation Level] for longer than this time, the drive will activate the PI Auxiliary Control to control the output frequency.</li> <li>–YF-23 = 1 [Inverse Acting]: When the PI Aux Feedback level is less than YF-25 for longer than this time, the drive will activate PI Auxiliary Control to control the output frequency.</li> </ul> </li> <li>When you set this parameter to 0.0 PSI, PI Auxiliary Control is always enabled.</li> </ul>	2 s (0 - 3600 s)
YF-32 (3F6F)	PI Aux Custom Unit Character 1	<p><b>V/f</b> <b>OLV/IPM</b> <b>EZOLV</b></p> <p>Sets the first character of the PI Aux custom unit display when YF-21 = 49 [PI Aux Ctrl Level Unit Selection = Custom (YF-32 ~ 34)].</p>	41 (20 - 7A)

No. (Hex.)	Name	Description	Default (Range)
YF-33 (3F70)	PI Aux Custom Unit Character 2	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the second character of the PI Aux custom unit display when $YF-21 = 49$ [PI Aux Ctrl Level Unit Selection = Custom (YF-32 ~ 34)].	41 (20 - 7A)
YF-34 (3F71)	PI Aux Custom Unit Character 3	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the third character of the PI Aux custom unit display when $YF-21 = 49$ [PI Aux Ctrl Level Unit Selection = Custom (YF-32 ~ 34)].	41 (20 - 7A)
YF-35 (3F72) RUN	PI Aux Minimum Transducer Scale	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the minimum scale output of the pressure transducer that is connected to the terminal set for $H3-xx = 27$ [MFAI Function Selection = PI Auxiliary Control Feedback]. <b>Note:</b> • To enable this parameter, set it to less than $YF-02$ [PI Aux Control Transducer Scale]. If you set it to more than $YF-02$ , it will disable the PI Auxiliary Feedback (set to 0). • Parameters $YF-21$ [PI Aux Ctrl Level Unit Selection] and $YF-22$ [PI Aux Level Decimal Place Pos] set the unit and resolution.	0.0 PSI (-999.9 - +999.9 PSI)
YF-36 (3F73) RUN	PI Aux Lo Hi Lvl Det Hysteresis	<b>V/f</b> <b>OLV/PM</b> <b>EZOLV</b> Sets the Hysteresis Level used for low and high level detection. <b>Note:</b> • When $YF-11 = 3$ [PI Aux Control Low Level Det Sel = Auto-Restart (time set by YF-15)], the PI Aux Feedback level must increase more than the value of $YF-09$ [PI Aux Control Low Level Detect] + $YF-36$ before $YF-15$ [PI Aux Level Detect Restart Time] starts. • When $YF-14 = 3$ [PI Aux Control Hi Level Det Sel = Auto-Restart (time set by YF-15)], the PI Aux Feedback Level must decrease less than the value of $YF-12$ [PI Aux Control High Level Detect] - $YF-36$ before $YF-15$ starts. • Parameters $YF-21$ [PI Aux Ctrl Level Unit Selection] and $YF-22$ [PI Aux Level Decimal Place Pos] set the unit and resolution.	0.0 PSI (0.0 - 100.0 PSI)

## 3.18 Parameters that Change from the Default Settings with A1-02 [Control Method Selection]

The values for parameter *A1-02* changes the default settings for the parameters in these tables:

### ◆ A1-02 = 0 [V/f]

No.	Name	Range	Unit	Control Method (A1-02 Setting)
				V/f (0)
b2-04	DC Inject Braking Time at Stop	0.00 - 10.00	0.01 s	0.50
b2-13	Short Circuit Brake Time @ Stop	0.00 - 25.50	0.01 s	-
b3-08	Speed Estimation ACR P Gain	0.00 - 6.00	0.01	0.50 *1
b3-09	Speed Estimation ACR I Time	0.0 - 1000.0	0.1 ms	2.0
b3-10	Speed Estimation Detection Gain	1.00 - 1.20 *2	0.01	1.05
b3-14	Bi-directional Speed Search	0 - 1	1	0 *3
b3-24	Speed Search Method Selection	1 - 2	1	2
b8-19	E-Save Search Injection Freq	10 - 300	1 Hz	-
C2-01	S-Curve Time @ Start of Accel	0.00 - 10.00	0.01 s	0.20
C3-02	Slip Compensation Delay Time	0 - 10000	1 ms	2000
C4-01	Torque Compensation Gain	0.00 - 2.50	0.01	1.00
C4-02	Torque Compensation Delay Time	0 - 60000	1 ms	200
C5-01	ASR Proportional Gain 1	0.00 - 300.00	0.01	-
C5-02	ASR Integral Time 1	0.000 - 60.000	0.001 s	-
C5-03	ASR Proportional Gain 2	0.00 - 300.00	0.01	-
C5-04	ASR Integral Time 2	0.000 - 60.000	0.001 s	-
C5-06	ASR Delay Time	0.000 - 0.500	0.001 s	-
C6-02	Carrier Frequency Selection	1 - F	1	1 *1
E1-04	Maximum Output Frequency	40.0 - 400.0 *4	0.1 Hz	60.0 *5
E1-05	Maximum Output Voltage	0.0 - 255.0 *6	0.1 V	230.0 *5
E1-06	Base Frequency	0.0 - 400.0 *4	0.1 Hz	60.0 *5
E1-09	Minimum Output Frequency	0.0 - 400.0 *4	0.1 Hz	1.5 *5
L1-01	Motor Overload (oL1) Protection	0 - 6	1	2
L2-31	KEB Start Voltage Offset Level	0 - 100 *6	1 V	0
L3-05	Stall Prevention during RUN	0 - 3	1	2
L3-20	DC Bus Voltage Adjustment Gain	0.00 - 5.00	0.01	1.00
n8-51	Pull-in Current @ Acceleration	0 - 200	1%	-
o1-03	Frequency Display Unit Selection	0 - 3	1	0
o5-08	Log Monitor Data 6	000, 101 - 1299	1	000

\*1 The default setting changes when the setting for *o2-04* [Drive Model Selection] changes.

\*2 The setting range changes when the *A1-02* [Control Method Selection] setting changes.

\*3 When *b3-24* = 1, the default value is 1.

\*4 The setting range varies depending on the setting of *E5-01* [PM Motor Code Selection] when *A1-02* = 5 [Control Method Selection = PM Open Loop Vector].

\*5 The default setting changes when the drive model and *E1-03* [V/f Pattern Selection] change.

\*6 This is the value for 208 V class drives. Double the value for 480 V class drives.

## ◆ A1-02 = 5 and 8 [OLV/PM and EZOLV]

No.	Name	Range	Unit	Control Method (A1-02 Setting)	
				OLV/PM (5)	EZOLV (8)
b2-04	DC Inject Braking Time at Stop	0.00 - 10.00	0.01 s	0.00	0.00
b2-13	Short Circuit Brake Time @ Stop	0.00 - 25.50	0.01 s	0.50	0.00 *1
b3-08	Speed Estimation ACR P Gain	0.00 - 6.00	0.01	0.30	0.60 *2
b3-09	Speed Estimation ACR I Time	0.0 - 1000.0	0.1 ms	2.0	10.0
b3-10	Speed Estimation Detection Gain	1.00 - 1.20 *3	0.01	-	1.00
b3-14	Bi-directional Speed Search	0 - 1	1	-	0
b3-24	Speed Search Method Selection	1 - 2	1	-	1 *4
b8-19	E-Save Search Injection Freq	10 - 300	1 Hz	-	20
C2-01	S-Curve Time @ Start of Accel	0.00 - 10.00	0.01 s	1.00	1.00
C3-02	Slip Compensation Delay Time	0 - 10000	1 ms	-	200
C4-01	Torque Compensation Gain	0.00 - 2.50	0.01	0.00	0.00
C4-02	Torque Compensation Delay Time	0 - 60000	1 ms	100	200
C5-01	ASR Proportional Gain 1	0.00 - 300.00	0.01	-	10.00
C5-02	ASR Integral Time 1	0.000 - 60.000	0.001 s	-	0.500
C5-03	ASR Proportional Gain 2	0.00 - 300.00	0.01	-	10.00
C5-04	ASR Integral Time 2	0.000 - 60.000	0.001 s	-	0.500
C5-06	ASR Delay Time	0.000 - 0.500	0.001 s	-	0.004
C6-02	Carrier Frequency Selection	1 - F	1	2 *2	2 *2
E1-04	Maximum Output Frequency	40.0 - 400.0	0.1 Hz	Determined by E5-01	-
E1-05	Maximum Output Voltage	0.0 - 255.0 *5	0.1 V	Determined by E5-01	-
E1-06	Base Frequency	0.0 - 400.0	0.1 Hz	Determined by E5-01	-
E1-09	Minimum Output Frequency	0.0 - 400.0	0.1 Hz	Determined by E5-01	-
L1-01	Motor Overload (oL1) Protection	0 - 6	1	4	1 *6
L2-31	KEB Start Voltage Offset Level	0 - 100 *5	1 V	50	50
L3-05	Stall Prevention during RUN	0 - 3	1	2	3
L3-20	DC Bus Voltage Adjustment Gain	0.00 - 5.00	0.01	0.65	0.65
n8-51	Pull-in Current @ Acceleration	0 - 200	1%	50	80
o1-03	Frequency Display Unit Selection	0 - 3	1	2	0 *7
o5-08	Log Monitor Data 6	000, 101 - 1299	1	000	105

\*1 Enabled only when E9-01 = 1 [Motor Type Selection = Permanent Magnet (PM)]

\*2 The default setting is different for different models.

- 2011 - 2114, 4005 - 4052: 0.6
- 2143 - 2396, 4065 - 4720: 0.3

\*3 The setting range changes when the A1-02 [Control Method Selection] setting changes.

\*4 The default settings are different for different motor types.

- E9-01 = 0 [Motor Type Selection = Induction (IM)]: 2
- E9-01 = 1, 2 [Permanent Magnet (PM), Synchronous Reluctance (SynRM)]: 1

\*5 This is the value for 208 V class drives. Double the value for 480 V class drives.

\*6 The default settings are different for different motor types.

- E9-01 = 0 [Motor Type Selection = Induction (IM)]: 1
- E9-01 = 1, 2 [Permanent Magnet (PM), Synchronous Reluctance (SynRM)]: 4

### 3.18 Parameters that Change from the Default Settings with A1-02 [Control Method Selection]

---

- \*7 The default settings are different for different motor types.
- $E9-01 = 0$  [Motor Type Selection = Induction (IM)]: 0
  - $E9-01 = 1, 2$  [Permanent Magnet (PM), Synchronous Reluctance (SynRM)]: 1

## 3.19 Parameters Changed by E1-03 [V/f Pattern Selection]

The values for parameters *A1-02 [Control Method Selection]* and *E1-03 [V/f Pattern Selection]* change the default settings for the parameters in these tables:

**Table 3.1 Parameters Changed by E1-03: 2011, 2017 and 4005 to 4011**

No.	E1-03	E1-04	E1-05 <sup>*1</sup>	E1-06	E1-07	E1-08 <sup>*1</sup>	E1-09	E1-10 <sup>*1</sup>
Unit	-	Hz	V	Hz	Hz	V	Hz	V
Setting Value	0	50.0	230.0	50.0	2.5	17.3	1.3	10.4
	1	60.0	230.0	60.0	3.0	17.3	1.5	10.4
	2	60.0	230.0	50.0	3.0	17.3	1.5	10.4
	3	72.0	230.0	60.0	3.0	17.3	1.5	10.4
	4	50.0	230.0	50.0	25.0	40.3	1.3	9.2
	5	50.0	230.0	50.0	25.0	57.5	1.3	10.4
	6	60.0	230.0	60.0	30.0	40.3	1.5	9.2
	7	60.0	230.0	60.0	30.0	57.5	1.5	10.4
	8	50.0	230.0	50.0	2.5	21.9	1.3	12.7
	9	50.0	230.0	50.0	2.5	27.6	1.3	15
	A	60.0	230.0	60.0	3.0	21.9	1.5	12.7
	B	60.0	230.0	60.0	3.0	27.6	1.5	17.3
	C	90.0	230.0	60.0	3.0	17.3	1.5	10.4
	D	120.0	230.0	60.0	3.0	17.3	1.5	10.4
	E	180.0	230.0	60.0	3.0	17.3	1.5	10.4
	F	60.0 <sup>*2</sup>	230.0 <sup>*2</sup>	60.0 <sup>*2</sup>	30.0 <sup>*2</sup>	57.5 <sup>*2</sup>	1.5 <sup>*2</sup>	10.2 <sup>*2</sup>
Control Method (A1-02 Setting)	OLV/PM (5)	<sup>*3</sup>	<sup>*3</sup>	<sup>*3</sup>	-	-	<sup>*3</sup>	-

\*1 This is the value for 208 V class drives. Double the value for 480 V class drives.

\*2 These values are the default settings for *E1-04 to E1-10* and *E3-04 to E3-10 [V/f Pattern for Motor 2]*. These settings are the same as those for the V/f pattern when *E1-03 = 7 [VT, 60 Hz, 50% Vmid reduction]*.

\*3 The default setting varies depending on the setting of *E5-01 [PM Motor Code Selection]*.

### 3.19 Parameters Changed by E1-03 [V/f Pattern Selection]

**Table 3.2 Parameters Changed by E1-03: 2024 to 2169 and 4014 to 4065**

No.	E1-03	E1-04	E1-05 *1	E1-06	E1-07	E1-08 *1	E1-09	E1-10 *1
Unit	-	Hz	V	Hz	Hz	V	Hz	V
Setting Value	0	50.0	230.0	50.0	2.5	16.1	1.3	8.05
	1	60.0	230.0	60.0	3.0	16.1	1.5	8.05
	2	60.0	230.0	50.0	3.0	16.1	1.5	8.05
	3	72.0	230.0	60.0	3.0	16.1	1.5	8.05
	4	50.0	230.0	50.0	25.0	40.3	1.3	6.9
	5	50.0	230.0	50.0	25.0	57.5	1.3	8.05
	6	60.0	230.0	60.0	30.0	40.3	1.5	6.9
	7	60.0	230.0	60.0	30.0	57.5	1.5	8.05
	8	50.0	230.0	50.0	2.5	20.7	1.3	10.4
	9	50.0	230.0	50.0	2.5	26.5	1.3	12.7
	A	60.0	230.0	60.0	3.0	20.7	1.5	10.4
	B	60.0	230.0	60.0	3.0	26.5	1.5	15
	C	90.0	230.0	60.0	3.0	16.1	1.5	8.05
	D	120.0	230.0	60.0	3.0	16.1	1.5	8.05
	E	180.0	230.0	60.0	3.0	16.1	1.5	8.05
	F	60.0 *2	230.0 *2	60.0 *2	30.0 *2	57.5 *2	1.5 *2	8.1 *2
Control Method (A1-02 Setting)	OLV/PM (5)	*3	*3	*3	-	-	*3	-

\*1 This is the value for 208 V class drives. Double the value for 480 V class drives.

\*2 These values are the default settings for E1-04 to E1-10 and E3-04 to E3-10 [V/f Pattern for Motor 2]. These settings are the same as those for the V/f pattern when E1-03 = 7 [VT, 60 Hz, 50% Vmid reduction].

\*3 The default setting varies depending on the setting of E5-01 [PM Motor Code Selection].

**Table 3.3 Parameters Changed by E1-03: 2211 to 2396 and 4077 to 4720**

No.	E1-03	E1-04	E1-05 *1	E1-06	E1-07	E1-08 *1	E1-09	E1-10 *1
Unit	-	Hz	V	Hz	Hz	V	Hz	V
Setting Value	0	50.0	230.0	50.0	2.5	13.8	1.3	6.9
	1	60.0	230.0	60.0	3.0	13.8	1.5	6.9
	2	60.0	230.0	50.0	3.0	13.8	1.5	6.9
	3	72.0	230.0	60.0	3.0	13.8	1.5	6.9
	4	50.0	230.0	50.0	25.0	40.3	1.3	5.75
	5	50.0	230.0	50.0	25.0	57.5	1.3	6.9
	6	60.0	230.0	60.0	30.0	40.3	1.5	5.75
	7	60.0	230.0	60.0	30.0	57.5	1.5	6.9
	8	50.0	230.0	50.0	2.5	17.3	1.3	8.05
	9	50.0	230.0	50.0	2.5	23	1.3	10.4
	A	60.0	230.0	60.0	3.0	17.3	1.5	8.05
	B	60.0	230.0	60.0	3.0	23	1.5	12.7
	C	90.0	230.0	60.0	3.0	13.8	1.5	6.9
	D	120.0	230.0	60.0	3.0	13.8	1.5	6.9
	E	180.0	230.0	60.0	3.0	13.8	1.5	6.9
	F	60.0 *2	230.0 *2	60.0 *2	30.0 *2	57.5 *2	1.5 *2	6.9 *2
Control Method (A1-02 Setting)	OLV/PM (5)	*3	*3	*3	-	-	*3	-

- \*1 This is the value for 208 V class drives. Double the value for 480 V class drives.
- \*2 These values are the default settings for *E1-04 to E1-10* and *E3-04 to E3-10* [*V/f Pattern for Motor 2*]. These settings are the same as those for the V/f pattern when *E1-03 = 7* [*VT, 60 Hz, 50% Vmid reduction*].
- \*3 The default setting varies depending on the setting of *E5-01* [*PM Motor Code Selection*].

## 3.20 Defaults by o2-04 [Drive Model (kVA) Selection]

The values for parameter *o2-04* changes the default settings for the parameters in these tables:

### ◆ 208 V Class

No. */	Name	Unit	Default							
			2011	2017	2024	2031	2046	2059	2075	2088
-	Drive Model	-	2011	2017	2024	2031	2046	2059	2075	2088
o2-04	Drive Model (KVA) Selection	Hex.	65	67	68	6A	6B	6D	6E	6F
E2-11 (E4-11, E5-02)	Motor Rated Power	HP (kW)	3 (2.2)	5 (3.7)	7.5 (5.5)	10 (7.5)	15 (11)	20 (15)	25 (18.5)	30 (22)
b3-04	V/f Gain during Speed Search	%	100	100	100	100	100	100	100	100
b3-06	Speed Estimation Current Level 1	-	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5
b3-08	Speed Estimation ACR P Gain	-	0.50	0.50	0.50	0.50	0.50	0.50	0.50	0.50
b3-11	Spd Est Method Switch-over Level	%	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0
b3-12	Speed Search Current Deadband	-	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5
b3-26	Direction Determination Level	-	1000	1000	1000	1000	1000	1000	1000	1000
b8-04	Energy Saving Coefficient Value	-	156.8	122.9	94.75	72.69	70.44	63.13	57.87	51.79
C6-02	Carrier Frequency Selection	-	2	2	2	2	2	2	2	2
E2-01 (E4-01)	Motor Rated Current (FLA)	A	10.6	16.7	24.2	30.8	46.2	59.4	74.8	88
E2-02 (E4-02)	Motor Rated Slip	Hz	2.90	2.73	1.50	1.30	1.70	1.60	1.67	1.70
E2-03 (E4-03)	Motor No-Load Current	A	3.0	4.5	5.1	8.0	11.2	15.2	15.7	18.5
E2-05 (E4-05)	Motor Line-to-Line Resistance	Ω	1.601	0.771	0.399	0.288	0.230	0.138	0.101	0.079
E2-06 (E4-06)	Motor Leakage Inductance	%	18.4	19.6	18.2	15.5	19.5	17.2	20.1	19.5
E2-10 (E4-10)	Motor Iron Loss	W	77	112	172	262	245	272	505	538
E5-01	PM Motor Code Selection	-	FFFF	FFFF	FFFF	FFFF	FFFF	FFFF	FFFF	FFFF
L2-02	Power Loss Ride Through Time	s	0.7	0.9	1.5	1.8	2.0	2.0	2.0	2.0
L2-03	Minimum Baseblock Time	s	0.5	0.6	0.7	0.8	0.9	1.0	1.0	1.0
L2-04	Powerloss V/f Recovery Ramp Time	s	0.3	0.3	0.3	0.3	0.3	0.6	0.6	0.6

No. */	Name	Unit	Default							
			2011	2017	2024	2031	2046	2059	2075	2088
-	Drive Model	-	2011	2017	2024	2031	2046	2059	2075	2088
o2-04	Drive Model (KVA) Selection	Hex.	65	67	68	6A	6B	6D	6E	6F
E2-11 (E4-11, E5-02)	Motor Rated Power	HP (kW)	3 (2.2)	5 (3.7)	7.5 (5.5)	10 (7.5)	15 (11)	20 (15)	25 (18.5)	30 (22)
L2-05	Undervoltage Detection Lvl (Uv1)	-	190	190	190	190	190	190	190	190
L3-24	Motor Accel Time for Inertia Cal	s	0.145	0.154	0.168	0.175	0.265	0.244	0.317	0.355
L8-02	Overheat Alarm Level	°C	95	95	125	125	125	125	115	115
L8-09	Output Ground Fault Detection	-	0	0	0	0	1	1	1	1
L8-35	Installation Method Selection	-	2 *3	2 *3	2 *3	2 *3	2 *3	2 *3	2 *3	2 *3
L8-38 *2	Carrier Frequency Reduction	-	2	2	2	2	2	2	2	2
n1-01	Hunting Prevention Selection	-	1	1	1	1	1	1	1	1
n1-03	Hunting Prevention Time Constant	ms	10	10	10	10	10	10	10	10

\*1 Parameters in parentheses are for motor 2.

\*2 You can use this parameter only when A1-02 = 0 [Control Method Selection = V/f].

\*3 When you use an IP55/UL Type 12 drive, the factory default setting is 3 [IP55/UL Type 12].

No. */	Name	Unit	Default							
			2114	2143	2169	2211	2273	2343	2396	
-	Drive Model	-	2114	2143	2169	2211	2273	2343	2396	
o2-04	Drive Model (KVA) Selection	Hex.	70	72	73	74	75	76	77	
E2-11 (E4-11, E5-02)	Motor Rated Power	HP (kW)	40 (30)	50 (37)	60 (45)	75 (55)	100 (75)	125 (90)	150 (110)	
b3-04	V/f Gain during Speed Search	%	80	80	80	80	80	80	80	
b3-06	Speed Estimation Current Level 1	-	0.5	0.5	0.5	0.5	0.7	0.7	0.7	
b3-08	Speed Estimation ACR P Gain	-	0.50	0.50	0.50	0.50	0.50	0.50	0.50	
b3-11	Spd Est Method Switch-over Level	%	5.0	5.0	5.0	5.0	5.0	5.0	5.0	
b3-12	Speed Search Current Deadband	-	2.5	2.5	2.5	2.5	2.5	2.5	2.5	
b3-26	Direction Determination Level	-	1000	1000	1000	1000	1000	1000	1000	
b8-04	Energy Saving Coefficient Value	-	46.27	38.16	35.78	31.35	23.10	20.65	18.12	
C6-02	Carrier Frequency Selection	-	2	2	2	1	1	1	1	
E2-01 (E4-01)	Motor Rated Current (FLA)	A	114	143	169	211	273	343	396	

### 3.20 Defaults by o2-04 [Drive Model (kVA) Selection]

No. */	Name	Unit	Default						
			2114	2143	2169	2211	2273	2343	2396
-	Drive Model	-	2114	2143	2169	2211	2273	2343	2396
o2-04	Drive Model (KVA) Selection	Hex.	70	72	73	74	75	76	77
E2-11 (E4-11, E5-02)	Motor Rated Power	HP (kW)	40 (30)	50 (37)	60 (45)	75 (55)	100 (75)	125 (90)	150 (110)
E2-02 (E4-02)	Motor Rated Slip	Hz	1.80	1.33	1.60	1.43	1.39	1.39	1.39
E2-03 (E4-03)	Motor No-Load Current	A	21.9	38.2	44.0	45.6	72.0	72.0	72.0
E2-05 (E4-05)	Motor Line-to-Line Resistance	Ω	0.064	0.039	0.030	0.022	0.023	0.023	0.023
E2-06 (E4-06)	Motor Leakage Inductance	%	20.8	18.8	20.2	20.5	20.0	20.0	20.0
E2-10 (E4-10)	Motor Iron Loss	W	699	823	852	960	1200	1200	1200
E5-01	PM Motor Code Selection	-	FFFF	FFFF	FFFF	FFFF	FFFF	FFFF	FFFF
L2-02	Power Loss Ride Through Time	s	2.0	2.0	2.0	2.0	2.0	2.0	2.0
L2-03	Minimum Baseblock Time	s	1.1	1.1	1.2	1.3	1.5	1.5	1.7
L2-04	Powerloss V/f Recovery Ramp Time	s	0.6	0.6	1	1	1	1	1
L2-05	Undervoltage Detection Lvl (Uv1)	-	190	190	190	190	190	190	190
L3-24	Motor Accel Time for Inertia Cal	s	0.323	0.32	0.387	0.317	0.533	0.592	0.646
L8-02	Overheat Alarm Level	°C	115	110	110	105	105	105	105
L8-09	Output Ground Fault Detection	-	1	1	1	1	1	1	1
L8-35	Installation Method Selection	-	2 *3	2 *3	2 *3	0	0	0	0
L8-38 *2	Carrier Frequency Reduction	-	2	2	2	2	2	2	2
n1-01	Hunting Prevention Selection	-	1	1	1	1	1	1	1
n1-03	Hunting Prevention Time Constant	ms	10	10	10	10	10	100	100

\*1 Parameters in parentheses are for motor 2.

\*2 You can use this parameter only when A1-02 = 0 [Control Method Selection = V/f].

\*3 When you use an IP55/UL Type 12 drive, the factory default setting is 3 [IP55/UL Type 12].

## ◆ 480 V Class

No. */	Name	Unit	Default							
			4005	4008xF	4008xV 4008xT	4011	4014	4021	4027	4034
-	Drive Model	-	4005	4008xF	4008xV 4008xT	4011	4014	4021	4027	4034
o2-04	Drive Model (KVA) Selection	Hex.	95	97	BB	99	9A	9B	9D	9E
E2-11 (E4-11, E5-02)	Motor Rated Power	HP (kW)	3 (2.2)	5 (3.7)	5 (3.7)	7.5 (5.5)	10 (7.5)	15 (11)	20 (15)	25 (18.5)
b3-04	V/f Gain during Speed Search	%	100	100	100	100	100	100	100	100
b3-06	Speed Estimation Current Level 1	-	0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5
b3-08	Speed Estimation ACR P Gain	-	0.50	0.50	0.50	0.50	0.50	0.50	0.50	0.50
b3-11	Spd Est Method Switch-over Level	%	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0
b3-12	Speed Search Current Deadband	-	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5
b3-26	Direction Determination Level	-	1000	1000	1000	1000	1000	1000	1000	1000
b8-04	Energy Saving Coefficient Value	-	313.6	245.8	245.8	189.5	145.38	140.88	126.26	115.74
C6-02	Carrier Frequency Selection	-	2	2	2	2	2	2	2	2
E2-01 (E4-01)	Motor Rated Current (FLA)	A	4.80	7.60	7.60	11.00	14.00	21.0	27.0	34.0
E2-02 (E4-02)	Motor Rated Slip	Hz	3.00	2.70	2.70	1.50	1.30	1.70	1.60	1.67
E2-03 (E4-03)	Motor No-Load Current	A	1.5	2.3	2.3	2.6	4	5.6	7.6	7.8
E2-05 (E4-05)	Motor Line-to-Line Resistance	Ω	6.495	3.333	3.333	1.595	1.152	0.922	0.550	0.403
E2-06 (E4-06)	Motor Leakage Inductance	%	18.7	19.3	19.3	18.2	15.5	19.6	17.2	20.1
E2-10 (E4-10)	Motor Iron Loss	W	77	130	130	193	263	385	440	508
E5-01	PM Motor Code Selection	-	FFFF	FFFF	FFFF	FFFF	FFFF	FFFF	FFFF	FFFF
L2-02	Power Loss Ride Through Time	s	0.7	0.9	0.9	1.3	1.3	1.7	2.0	2.0
L2-03	Minimum Baseblock Time	s	0.5	0.6	0.6	0.7	0.8	0.9	1.0	1.0
L2-04	Powerloss V/f Recovery Ramp Time	s	0.3	0.3	0.3	0.3	0.3	0.3	0.6	0.6
L2-05	Undervoltage Detection Lvl (Uv1)	-	380	380	380	380	380	380	380	380
L3-24	Motor Accel Time for Inertia Cal	s	0.145	0.154	0.154	0.168	0.175	0.265	0.244	0.317

### 3.20 Defaults by o2-04 [Drive Model (kVA) Selection]

No. */	Name	Unit	Default							
			4005	4008xF	4008xV 4008xT	4011	4014	4021	4027	4034
-	Drive Model	-	4005	4008xF	4008xV 4008xT	4011	4014	4021	4027	4034
o2-04	Drive Model (KVA) Selection	Hex.	95	97	BB	99	9A	9B	9D	9E
E2-11 (E4-11, E5-02)	Motor Rated Power	HP (kW)	3 (2.2)	5 (3.7)	5 (3.7)	7.5 (5.5)	10 (7.5)	15 (11)	20 (15)	25 (18.5)
L8-02	Overheat Alarm Level	°C	115	115	95	95	95	127	127	127
L8-09	Output Ground Fault Detection	-	0	0	0	0	0	0	0	0
L8-35	Installation Method Selection	-	2 *2	2	3	2 *2	2 *2	2 *2	2 *2	2 *2
L8-38 *3	Carrier Frequency Reduction	-	2	2	2	2	2	2	2	2
n1-01	Hunting Prevention Selection	-	1	1	1	1	1	1	1	1
n1-03	Hunting Prevention Time Constant	ms	10	10	10	10	10	10	10	10

\*1 Parameters in parentheses are for motor 2.

\*2 When you use an IP55/UL Type 12 drive, the factory default setting is 3 [IP55/UL Type 12].

\*3 You can use this parameter only when A1-02 = 0 [Control Method Selection = V/f].

No. */	Name	Unit	Default							
			4040	4052	4065	4077	4096	4124	4156	
-	Drive Model	-	4040	4052	4065	4077	4096	4124	4156	
o2-04	Drive Model (KVA) Selection	Hex.	9F	A0	A2	A3	A4	A5	A6	
E2-11 (E4-11, E5-02)	Motor Rated Power	HP (kW)	30 (22)	40 (30)	50 (37)	60 (45)	75 (55)	100 (75)	125 (90)	
b3-04	V/f Gain during Speed Search	%	100	100	100	100	80	60	60	
b3-06	Speed Estimation Current Level 1	-	0.5	0.5	0.5	0.5	0.5	0.7	0.7	
b3-08	Speed Estimation ACR P Gain	-	0.50	0.50	0.50	0.50	0.50	0.80	0.80	
b3-11	Spd Est Method Switch-over Level	%	5.0	5.0	5.0	5.0	5.0	5.0	5.0	
b3-12	Speed Search Current Deadband	-	2.5	2.5	2.5	2.5	2.5	2.5	2.5	
b3-26	Direction Determination Level	-	1000	1000	1000	1000	1000	1000	1000	
b8-04	Energy Saving Coefficient Value	-	103.58	92.54	76.32	71.56	67.2	46.2	38.91	
C6-02	Carrier Frequency Selection	-	2	2	2	2	2	2	2	
E2-01 (E4-01)	Motor Rated Current (FLA)	A	40.0	52.0	65.0	77.0	96.0	124.0	156.0	
E2-02 (E4-02)	Motor Rated Slip	Hz	1.70	1.80	1.33	1.60	1.46	1.39	1.40	
E2-03 (E4-03)	Motor No-Load Current	A	9.2	10.9	19.1	22	24	36	40	

No. */	Name	Unit	Default						
			4040	4052	4065	4077	4096	4124	4156
-	Drive Model	-	4040	4052	4065	4077	4096	4124	4156
o2-04	Drive Model (KVA) Selection	Hex.	9F	A0	A2	A3	A4	A5	A6
E2-11 (E4-11, E5-02)	Motor Rated Power	HP (kW)	30 (22)	40 (30)	50 (37)	60 (45)	75 (55)	100 (75)	125 (90)
E2-05 (E4-05)	Motor Line-to-Line Resistance	Ω	0.316	0.269	0.155	0.122	0.088	0.092	0.056
E2-06 (E4-06)	Motor Leakage Inductance	%	23.5	20.7	18.8	19.9	20.0	20.0	20.0
E2-10 (E4-10)	Motor Iron Loss	W	586	750	925	1125	1260	1600	1760
E5-01	PM Motor Code Selection	-	FFFF	FFFF	FFFF	FFFF	FFFF	FFFF	FFFF
L2-02	Power Loss Ride Through Time	s	2.0	2.0	2.0	2.0	2.0	2.0	2.0
L2-03	Minimum Baseblock Time	s	1.0	1.1	1.1	1.2	1.2	1.3	1.5
L2-04	Powerloss V/f Recovery Ramp Time	s	0.6	0.6	0.6	0.6	1.0	1.0	1.0
L2-05	Undervoltage Detection Lvl (Uv1)	-	380	380	380	380	380	380	380
L3-24	Motor Accel Time for Inertia Cal	s	0.355	0.323	0.320	0.387	0.317	0.533	0.592
L8-02	Overheat Alarm Level	°C	123	123	123	120	124	124	110
L8-09	Output Ground Fault Detection	-	1	1	1	1	1	1	1
L8-35	Installation Method Selection	-	2 *2	2 *2	2 *2	2 *2	2 *2	2 *2	2 *2
L8-38 *3	Carrier Frequency Reduction	-	2	2	2	2	2	2	2
n1-01	Hunting Prevention Selection	-	1	1	1	1	1	1	1
n1-03	Hunting Prevention Time Constant	ms	10	10	10	10	10	30	30

\*1 Parameters in parentheses are for motor 2.

\*2 When you use an IP55/UL Type 12 drive, the factory default setting is 3 [IP55/UL Type 12].

\*3 You can use this parameter only when A1-02 = 0 [Control Method Selection = V/f].

No. */	Name	Unit	Default								
			4180	4240	4302	4361	4414	4477	4515	4590	4720
-	Drive Model	-	4180	4240	4302	4361	4414	4477	4515	4590	4720
o2-04	Drive Model (KVA) Selection	Hex.	A7	A8	A9	AA	AC	AD	AE	B1	B2
E2-11 (E4-11, E5-02)	Motor Rated Power	HP (kW)	150 (110)	200 (150)	250 (185)	295 (220)	350 (260)	400 (300)	450 (335)	500 (375)	600 (450)
b3-04	V/f Gain during Speed Search	%	60	60	60	60	60	60	60	60	60
b3-06	Speed Estimation Current Level 1	-	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7

### 3.20 Defaults by o2-04 [Drive Model (kVA) Selection]

No. */	Name	Unit	Default								
			4180	4240	4302	4361	4414	4477	4515	4590	4720
-	Drive Model	-	A7	A8	A9	AA	AC	AD	AE	B1	B2
o2-04	Drive Model (KVA) Selection	Hex.	A7	A8	A9	AA	AC	AD	AE	B1	B2
E2-11 (E4-11, E5-02)	Motor Rated Power	HP (kW)	150 (110)	200 (150)	250 (185)	295 (220)	350 (260)	400 (300)	450 (335)	500 (375)	600 (450)
b3-08	Speed Estimation ACR P Gain	-	0.80	0.80	0.80	0.80	0.80	0.80	0.80	0.80	0.80
b3-11	Spd Est Method Switch-over Level	%	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0
b3-12	Speed Search Current Deadband	-	2.5	2.5	2.5	7.0	7.0	7.0	7.0	7.0	2.5
b3-26	Direction Determination Level	-	1000	1000	1000	1000	1000	1000	1000	1000	1000
b8-04	Energy Saving Coefficient Value	-	36.23	32.79	30.57	27.13	21.76	21.76	21.76	23.84	21.40
C6-02	Carrier Frequency Selection	-	1	1	1	1	1	1	1	1	1
E2-01 (E4-01)	Motor Rated Current (FLA)	A	180.0	240.0	302.0	361.0	414.0	477.0	515.0	590.0	720.0
E2-02 (E4-02)	Motor Rated Slip	Hz	1.40	1.38	1.30	1.30	1.25	1.25	1.25	1.00	1.00
E2-03 (E4-03)	Motor No-Load Current	A	49	58	81	96	130	130	130	130	160
E2-05 (E4-05)	Motor Line-to-Line Resistance	Ω	0.046	0.035	0.025	0.020	0.014	0.014	0.014	0.012	0.010
E2-06 (E4-06)	Motor Leakage Inductance	%	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0
E2-10 (E4-10)	Motor Iron Loss	W	2150	2350	3200	3700	4700	4700	4700	5560	7050
E5-01	PM Motor Code Selection	-	FFFF								
L2-02	Power Loss Ride Through Time	s	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0
L2-03	Minimum Baseblock Time	s	1.7	1.7	1.9	2.0	2.1	2.1	2.1	2.3	2.8
L2-04	Powerloss V/f Recovery Ramp Time	s	1.0	1.0	1.8	1.8	2.0	2.0	2.0	2.2	2.6
L2-05	Undervoltage Detection Lvl (Uv1)	-	380	380	380	380	380	380	380	380	380
L3-24	Motor Accel Time for Inertia Cal	s	0.646	0.673	0.864	0.910	1.392	1.392	1.392	1.667	2.000
L8-02	Overheat Alarm Level	°C	105	120	120	125	125	110	115	133	125
L8-09	Output Ground Fault Detection	-	1	1	1	1	1	1	1	1	1

No. */	Name	Unit	Default								
			4180	4240	4302	4361	4414	4477	4515	4590	4720
-	Drive Model	-	4180	4240	4302	4361	4414	4477	4515	4590	4720
o2-04	Drive Model (KVA) Selection	Hex.	A7	A8	A9	AA	AC	AD	AE	B1	B2
E2-11 (E4-11, E5-02)	Motor Rated Power	HP (kW)	150 (110)	200 (150)	250 (185)	295 (220)	350 (260)	400 (300)	450 (335)	500 (375)	600 (450)
L8-35	Installation Method Selection	-	0	0	0	0	0	0	0	0	0
L8-38 *2	Carrier Frequency Reduction	-	2	2	2	2	2	2	2	2	2
n1-01	Hunting Prevention Selection	-	1	1	1	1	1	1	1	1	1
n1-03	Hunting Prevention Time Constant	ms	30	30	30	100	100	100	100	100	100

\*1 Parameters in parentheses are for motor 2.

\*2 You can use this parameter only when A1-02 = 0 [Control Method Selection = V/f].



# Mechanical & Electrical Installation

---

This chapter explains how to properly mount and install the drive, and to wire the control circuit terminals, motor, and power supply.

<b>4.1</b>	<b>Section Safety .....</b>	<b>288</b>
<b>4.2</b>	<b>Removing/Reattaching Covers .....</b>	<b>290</b>
<b>4.3</b>	<b>Electrical Installation .....</b>	<b>298</b>
<b>4.4</b>	<b>Main Circuit Wiring .....</b>	<b>303</b>
<b>4.5</b>	<b>Control Circuit Wiring .....</b>	<b>328</b>
<b>4.6</b>	<b>Control I/O Connections .....</b>	<b>340</b>
<b>4.7</b>	<b>Connect the Drive to a PC .....</b>	<b>343</b>
<b>4.8</b>	<b>External Interlock .....</b>	<b>344</b>

## 4.1 Section Safety

### DANGER

#### Electrical Shock Hazard

**Do not examine, connect, or disconnect wiring on an energized drive. Before servicing, disconnect all power to the equipment and wait for the time specified on the warning label at a minimum. The internal capacitor stays charged after the drive is de-energized. The charge indicator LED extinguishes when the DC bus voltage decreases below 50 Vdc. When all indicators are OFF, remove the covers before measuring for dangerous voltages to make sure that the drive is safe.**

If you do work on the drive when it is energized, it will cause serious injury or death from electrical shock.

### WARNING

#### Electrical Shock Hazard

**Do not operate the drive when covers are missing. Replace covers and shields before you operate the drive. Use the drive only as specified by the instructions.**

Some figures in this section include drives without covers or safety shields to more clearly show the inside of the drive. If covers or safety shields are missing from the drive, it can cause serious injury or death.

**Ground the neutral point on the power supply of the drives to comply with the EMC Directive before you turn on the EMC filter.**

If you turn ON the EMC filter, but you do not ground the neutral point, it can cause serious injury or death.

**Make sure that the protective ground wire complies with technical standards and local safety regulations. The IEC/EN 61800-5-1:2007 standard specifies that you must wire the power supply to automatically de-energize when the protective ground wire disconnects. You can also connect a protective ground wire that has a minimum cross-sectional area of 10mm<sup>2</sup> (copper wire) or 16 mm<sup>2</sup> (aluminum wire). For drive models on which you cannot use a protective ground wire of 10 mm<sup>2</sup> or more, install two protective ground wires that have the same cross-sectional area.**

If you do not obey the standards and regulations, it can cause serious injury or death. The leakage current of the drive will be more than 3.5 mA.

**When there is a DC component in the protective earthing conductor, the drive can cause a residual current. When a residual current operated protective or monitoring device prevents direct or indirect contact, always use a type B Ground Fault Circuit Interrupter (GFCI) as specified by IEC/EN 60755.**

If you do not use the correct GFCI, it can cause serious injury or death.

**Do not wear loose clothing or jewelry when you do work on the drive. Tighten loose clothing and remove all metal objects, for example watches or rings.**

Loose clothing can catch on the drive and jewelry can conduct electricity and cause serious injury or death.

**Do not remove covers or touch circuit boards while the drive is energized.**

If you touch the internal components of an energized drive, it can cause serious injury or death.

**Only let approved personnel install, wire, maintain, examine, replace parts, and repair the drive.**

If personnel are not approved, it can cause serious injury or death.

**Do not modify the drive body or drive circuitry.**

Modifications to drive body and circuitry can cause serious injury or death, will cause damage to the drive, and will void the warranty. Yaskawa is not responsible for modifications of the product made by the user.

#### Fire Hazard

**Tighten all terminal screws to the correct tightening torque.**

Connections that are too loose or too tight can cause incorrect operation and damage to the drive. Incorrect connections can also cause death or serious injury from fire.

**⚠ WARNING**

**Tighten screws at an angle in the specified range shown in this manual.**

If you tighten the screws at an angle not in the specified range, you can have loose connections that can cause damage to the terminal block or start a fire and cause serious injury or death.

**Damage to Equipment**

**Do not apply incorrect voltage to the main circuit of the drive. Operate the drive in the specified range of the input voltage on the drive nameplate.**

Voltages that are higher than the permitted nameplate tolerance can cause damage to the drive.

**Arc Flash Hazard**

**Obey local codes and Arc Flash safety requirements contained in the Standard for Electrical Safety in the Workplace NFPA 70E (2009 Edition or later) and the Workplace Electrical Safety, Canadian Standards Association (CSA) Z462-12. Obey safe work procedures and use applicable personal protective equipment (PPE).**

If you do not obey these requirements and procedures, it can cause serious injury or death.

**NOTICE**

**Do not let unwanted objects, for example metal shavings or wire clippings, fall into the drive during drive installation. Put a temporary cover over the drive during installation. Remove the temporary cover before start-up.**

Unwanted objects inside of the drive can cause damage to the drive.

**Damage to Equipment**

**When you touch the drive and circuit boards, make sure that you observe correct electrostatic discharge (ESD) procedures.**

If you do not follow procedures, it can cause ESD damage to the drive circuitry.

**Select a motor that is compatible with the load torque and speed range. When 100% continuous torque is necessary at low speed, use an inverter-duty motor or vector-duty motor. When you use a standard fan-cooled motor, decrease the motor torque in the low-speed range.**

If you operate a standard fan-cooled motor at low speed and high torque, it will decrease the cooling effects and can cause heat damage.

**Obey the speed range specification of the motor as specified by the manufacturer. When you must operate the motor outside of its specifications, contact the motor manufacturer.**

If you continuously operate oil-lubricated motors outside of the manufacturer specifications, it can cause damage to the motor bearings.

**When the input voltage is 440 V or higher or the wiring distance is longer than 100 m (328 ft), make sure that the motor insulation voltage is sufficient or use an inverter-duty motor or vector-duty motor with reinforced insulation.**

Motor winding and insulation failure can occur.

**Make sure that all connections are correct after you install the drive and connect peripheral devices.**

Incorrect connections can cause damage to the drive.

**Note:**

- Torque characteristics are different than when you operate the motor directly from line power. Make sure that you understand the load torque characteristics for the application.
- The current rating of submersible motors is usually higher than the current rating of standard motors for a given motor power. Make sure that the rated output current of the drive is equal to or more than the current rating of the motor. If the motor wire length is longer than 100 m (328 ft), select the correct wire gauge to adjust for a loss in voltage and prevent a loss of motor torque.
- Do not use unshielded wire for control wiring. Use shielded, twisted-pair wires and ground the shield to the ground terminal of the drive. Unshielded wire can cause electrical interference and unsatisfactory system performance.

## 4.2 Removing/Reattaching Covers

This section gives information about how to remove and reattach the front cover and terminal cover for wiring and inspection.

Different drive models have different procedures to remove and reattach the covers. Refer to [Table 4.1](#) for more information.

**Table 4.1 Procedures to Remove Covers by Drive Model**


Model	IP20/UL Type 1 and IP20/UL Open Type		IP55/UL Type 12 and IP55/UL Type 12 with Main Switch	
	Procedure	Reference	Procedure	Reference
2011 - 2114 4005 - 4124	Procedure A	<a href="#">290</a>	Procedure C	<a href="#">294</a>
2143 - 2396 4156 - 4720	Procedure B	<a href="#">291</a>	-	-

### ◆ Removing/Reattaching the Cover Using Procedure A

**DANGER! Electrical Shock Hazard.** Do not examine, connect, or disconnect wiring on an energized drive. Before servicing, disconnect all power to the equipment and wait for the time specified on the warning label at a minimum. The internal capacitor stays charged after the drive is de-energized. The charge indicator LED extinguishes when the DC bus voltage decreases below 50 Vdc. When all indicators are OFF, remove the covers before measuring for dangerous voltages to make sure that the drive is safe. If you do work on the drive when it is energized, it will cause serious injury or death from electrical shock.

#### ■ Remove the Front Cover


1. Remove the keypad from the drive.

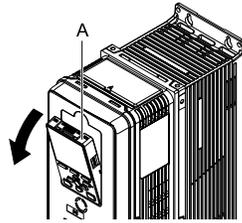

A - Keypad

**Figure 4.1 Remove the Keypad**

2. Loosen the front cover screw.

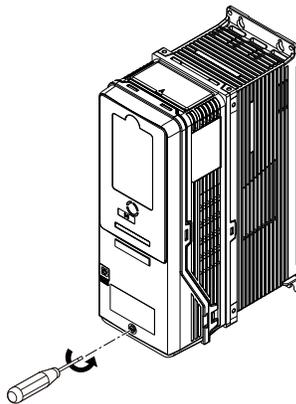

**Figure 4.2 Loosen the Front Cover Screw**

3. Push on the tabs in the sides of the front cover then pull the front cover forward to remove it from the drive.

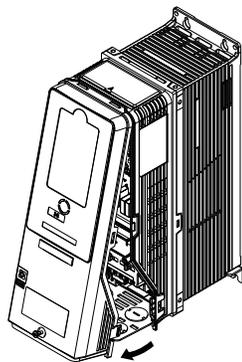


Figure 4.3 Remove the Front Cover

### ■ Reattach the Front Cover

1. Wire the drive and other peripheral devices.
2. Reverse the steps to reattach the cover.

#### Note:

- Make sure that you did not pinch wires or signal lines between the front cover and the drive before you reattach the cover.
- Make sure that the tabs on the sides of the front cover correctly click into the hook.
- Tighten the screws to a tightening torque of 0.98 N·m to 1.33 N·m (8.67 lbf·in to 11.77 lbf·in).

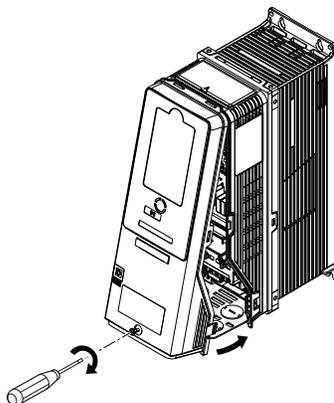


Figure 4.4 Reattach the Front Cover

3. Reattach the keypad to its initial position.


### ◆ Removing/Reattaching the Cover Using Procedure B

**DANGER! Electrical Shock Hazard.** Do not examine, connect, or disconnect wiring on an energized drive. Before servicing, disconnect all power to the equipment and wait for the time specified on the warning label at a minimum. The internal capacitor stays charged after the drive is de-energized. The charge indicator LED extinguishes when the DC bus voltage decreases below 50 Vdc. When all indicators are OFF, remove the covers before measuring for dangerous voltages to make sure that the drive is safe. If you do work on the drive when it is energized, it will cause serious injury or death from electrical shock.

### ■ Remove the Terminal Cover


1. Loosen the screws on the terminal cover, then pull down on the cover.

**CAUTION! Crush Hazard.** Loosen the cover screws. Do not fully remove them. If you fully remove the cover screws, the terminal cover can fall and cause moderate injury.

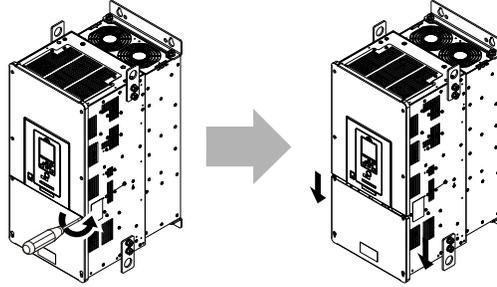

**Figure 4.5 Loosen the Terminal Cover Mounting Screws**


2. Pull the terminal cover away from the drive.

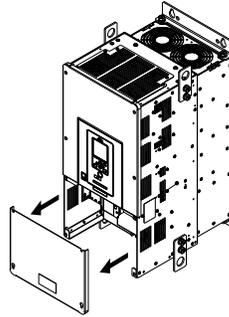

**Figure 4.6 Remove the Terminal Cover**

### ■ Remove the Front Cover


1. Remove the keypad from the drive.

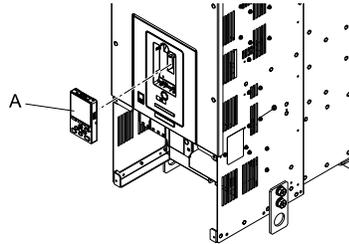

A - Keypad


**Figure 4.7 Remove the Keypad**

2. Loosen the front cover screws.

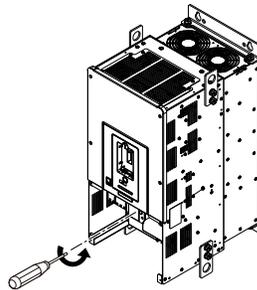

**Figure 4.8 Loosen the Front Cover Screws**


3. Pull part A of the front cover forward to remove the cover from the drive.

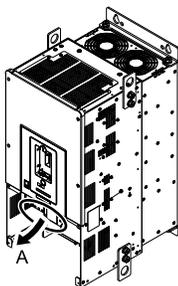

A - Pull forward to remove the front cover.

**Figure 4.9 Pull Forward to Remove the Front Cover**

4. Remove the front cover from the drive.

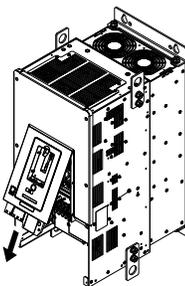


**Figure 4.10 Remove the Front Cover**

### ■ Reattach the Front Cover

Wire the drive and other peripheral devices then reattach the front cover.

1. Move the front cover to connect the hooks at the top of the front cover to the drive.

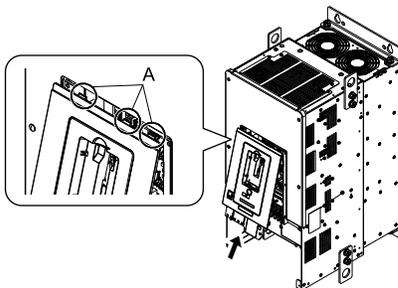

A - Hooks

**Figure 4.11 Reattach the Front Cover**

2. Move the front cover while pushing on the hooks on the left and right sides of the front cover until it clicks into position.

**Note:**

Make sure that you did not pinch wires or signal lines between the front cover and the drive before you reattach the cover.

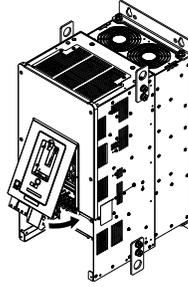


Figure 4.12 Reattach the Front Cover

3. Reattach the keypad to its initial position.

### ■ Reattach the Terminal Cover

Wire the drive and other peripheral devices then reattach the terminal cover.

**Note:**

- Make sure that you do not pinch wires or signal lines between the wiring cover and the drive before you reattach the cover.
- Tighten the screws to a tightening torque of 0.98 N·m to 1.33 N·m (8.67 lbf·in to 11.77 lbf·in).

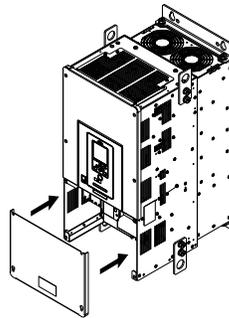


Figure 4.13 Reattach the Terminal Cover

---

## ◆ Removing/Reattaching the Cover Using Procedure C


**DANGER! Electrical Shock Hazard.** Do not examine, connect, or disconnect wiring on an energized drive. Before servicing, disconnect all power to the equipment and wait for the time specified on the warning label at a minimum. The internal capacitor stays charged after the drive is de-energized. The charge indicator LED extinguishes when the DC bus voltage decreases below 50 Vdc. When all indicators are OFF, remove the covers before measuring for dangerous voltages to make sure that the drive is safe. If you do work on the drive when it is energized, it will cause serious injury or death from electrical shock.

### ■ Remove the Front Cover

1. Push in the two tabs on the right side of the IP55/UL Type 12 keypad cover door and pull the door to the left to open.

**NOTICE: Damage to Equipment.** Do not open the IP55/UL Type 12 keypad cover door too far. If you open the door too far, it will fall off.

**NOTICE: Damage to Equipment.** When the IP55/UL Type 12 keypad cover door is open, do not push the keypad key cover. If you push the keypad key cover, it will fall off.

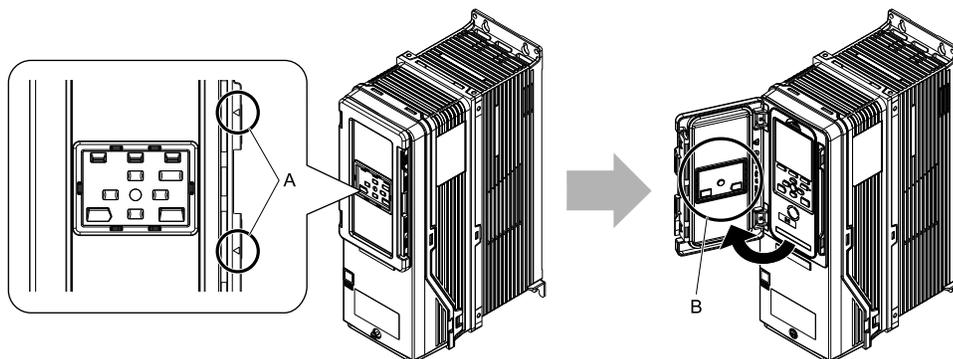


A - Tabs

B - Keypad key cover

Figure 4.14 Open the IP55/UL Type 12 Keypad Cover Door

2. Remove the keypad from the drive.

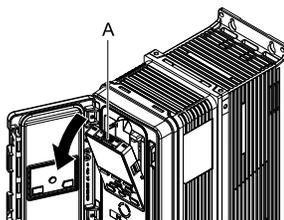

A - Keypad

Figure 4.15 Remove the Keypad

3. Loosen the front cover screw.

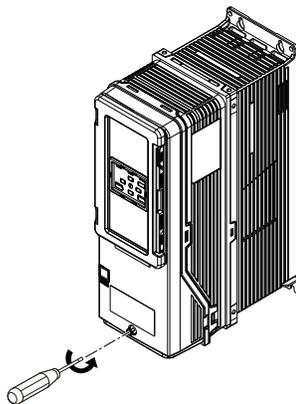


Figure 4.16 Loosen the Front Cover Screw

4. Push in the tabs on the sides of the front cover and pull the front cover forward to remove it from the drive.

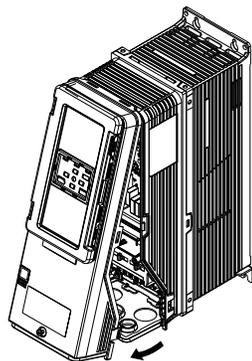



Figure 4.17 Remove the Front Cover

■ **Reattach the Front Cover**

1. Wire the drive and other peripheral devices.
2. Reverse the steps to reattach the cover. Reattach the cover carefully and make sure that the gasket on the conduit bracket does not twist.


**Note:**

- Make sure that you did not pinch wires or signal lines between the front cover and the drive before you reattach the cover.
- Make sure that the tabs on the sides of the front cover correctly click into the hook.
- Tighten the screws to a tightening torque of 0.98 N-m to 1.33 N-m (8.67 lbf-in to 11.77 lbf-in).

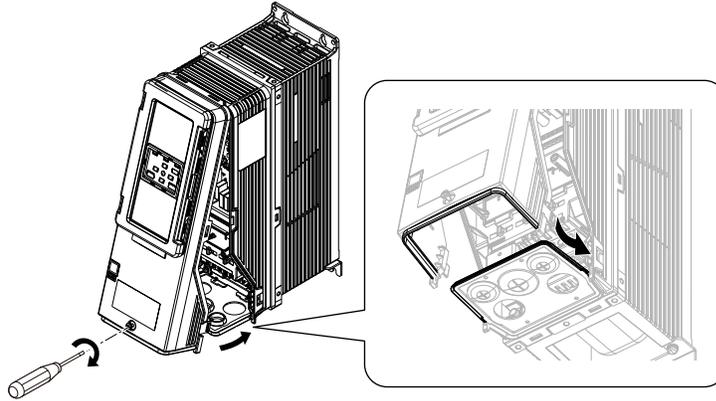

**Figure 4.18 Reattach the Front Cover**


3. Open the IP55/UL Type 12 keypad cover door and reattach the keypad to its initial position, then close the door until the two tabs click into position.

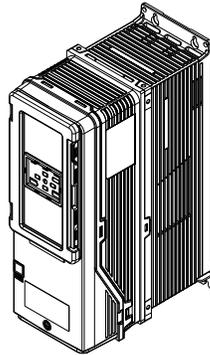

**Figure 4.19 Reattach the Keypad and Close the Keypad Cover Door**

■ **Remove the Main Switch Cover**

1. Make sure that the Main Switch Disconnect Handle is in the OFF position, then loosen the captive front cover screws on the Main Switch.

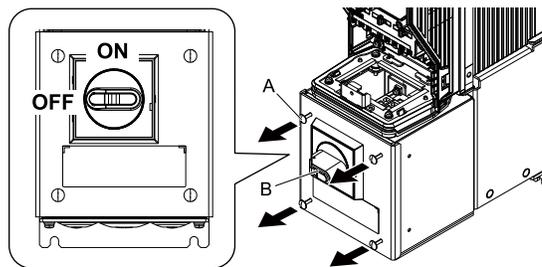


**A - Screws**

**B - Main Switch Disconnect Handle**

**Figure 4.20 Loosen the Screws on the Main Switch Cover**

- Pull the cover forward to remove it from the drive.

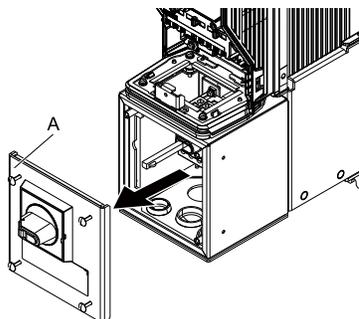


A - Main Switch cover

Figure 4.21 Remove the Main Switch Cover

### ■ Reattach the Main Switch Cover

- Make sure that the Main Switch Disconnect Handle is in the OFF position, then reverse the steps to reattach the cover.

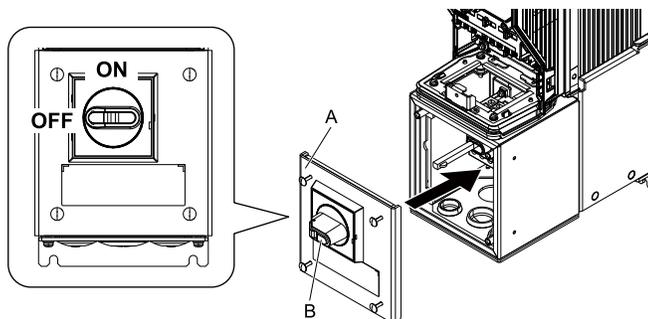

A - Main Switch cover


B - Main Switch Disconnect Handle

Figure 4.22 Reattach the Main Switch Cover

- Tighten the screws on the Main Switch cover.

#### Note:

Tighten the screws to a tightening torque of 0.98 N·m to 1.33 N·m (8.67 lbf·in to 11.77 lbf·in).

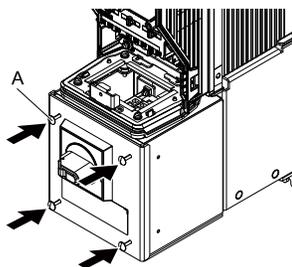

A - Screws

Figure 4.23 Tighten the Screws on the Main Switch Cover

### 4.3 Electrical Installation

**DANGER!** *Electrical Shock Hazard. Do not examine, connect, or disconnect wiring on an energized drive. Before servicing, disconnect all power to the equipment and wait for the time specified on the warning label at a minimum. The internal capacitor stays charged after the drive is de-energized. The charge indicator LED extinguishes when the DC bus voltage decreases below 50 Vdc. When all indicators are OFF, remove the covers before measuring for dangerous voltages to make sure that the drive is safe. If you do work on the drive when it is energized, it will cause serious injury or death from electrical shock.*

**WARNING!** *Electrical Shock Hazard. De-energize the drive and wait 5 minutes minimum until the Charge LED turns off. Remove the front cover and terminal cover to do work on wiring, circuit boards, and other parts. Use terminals for their correct function only. Incorrect wiring, incorrect ground connections, and incorrect repair of protective covers can cause death or serious injury.*

**WARNING!** *Electrical Shock Hazard. Correctly ground the drive before you turn on the EMC filter switch. If you touch electrical equipment that is not grounded, it can cause serious injury or death.*

**WARNING!** *Electrical Shock Hazard. Use the terminals for the drive only for their intended purpose. Refer to the technical manual for more information about the I/O terminals. Wiring and grounding incorrectly or modifying the cover may damage the equipment or cause injury.*

---

#### ◆ Standard Connection Diagram

**WARNING!** *Sudden Movement Hazard. Set the MFDI parameters before you close control circuit switches. Incorrect Run/Stop circuit sequence settings can cause serious injury or death from moving equipment.*

**WARNING!** *Sudden Movement Hazard. Correctly wire the start/stop and safety circuits before you energize the drive. If you momentarily close a digital input terminal, it can start a drive that is programmed for 3-Wire control and cause serious injury or death from moving equipment.*

**WARNING!** *Sudden Movement Hazard. When you use a 3-Wire sequence, set A1-03 = 3330 [Initialize Parameters = 3-Wire Initialization] and make sure that b1-17 = 0 [Run Command at Power Up = Disregard Existing RUN Command]. If you do not correctly set the drive parameters for 3-Wire operation before you energize the drive, the motor can suddenly rotate in reverse when you energize the drive.*

**WARNING!** *Sudden Movement Hazard. Check the I/O signals and the external sequences for the drive before you set the Application Preset function. When you set the Application Preset function (A1-06 ≠ 0), it changes the I/O terminal functions for the drive and it can cause equipment to operate unusually. This can cause serious injury or death.*

**WARNING!** *Fire Hazard. Install sufficient branch circuit short circuit protection as specified by applicable codes and this manual. The drive is suitable for circuits that supply not more than 100,000 RMS symmetrical amperes, 240 Vac maximum (208 V Class), 480 Vac maximum (480 V Class). Incorrect branch circuit short circuit protection can cause serious injury or death.*

**NOTICE:** *When the input voltage is 440 V or higher or the wiring distance is longer than 100 m (328 ft), make sure that the motor insulation voltage is sufficient or use an inverter-duty motor or vector-duty motor with reinforced insulation. Motor winding and insulation failure can occur.*

**Note:**

Do not connect the AC control circuit ground to the drive enclosure. Incorrect ground wiring can cause the control circuit to operate incorrectly.

■ Standard Drive Connection Diagram (Models: 2xxxxB/F/V/W and 4xxxxB/F/V/W without Main Switch)

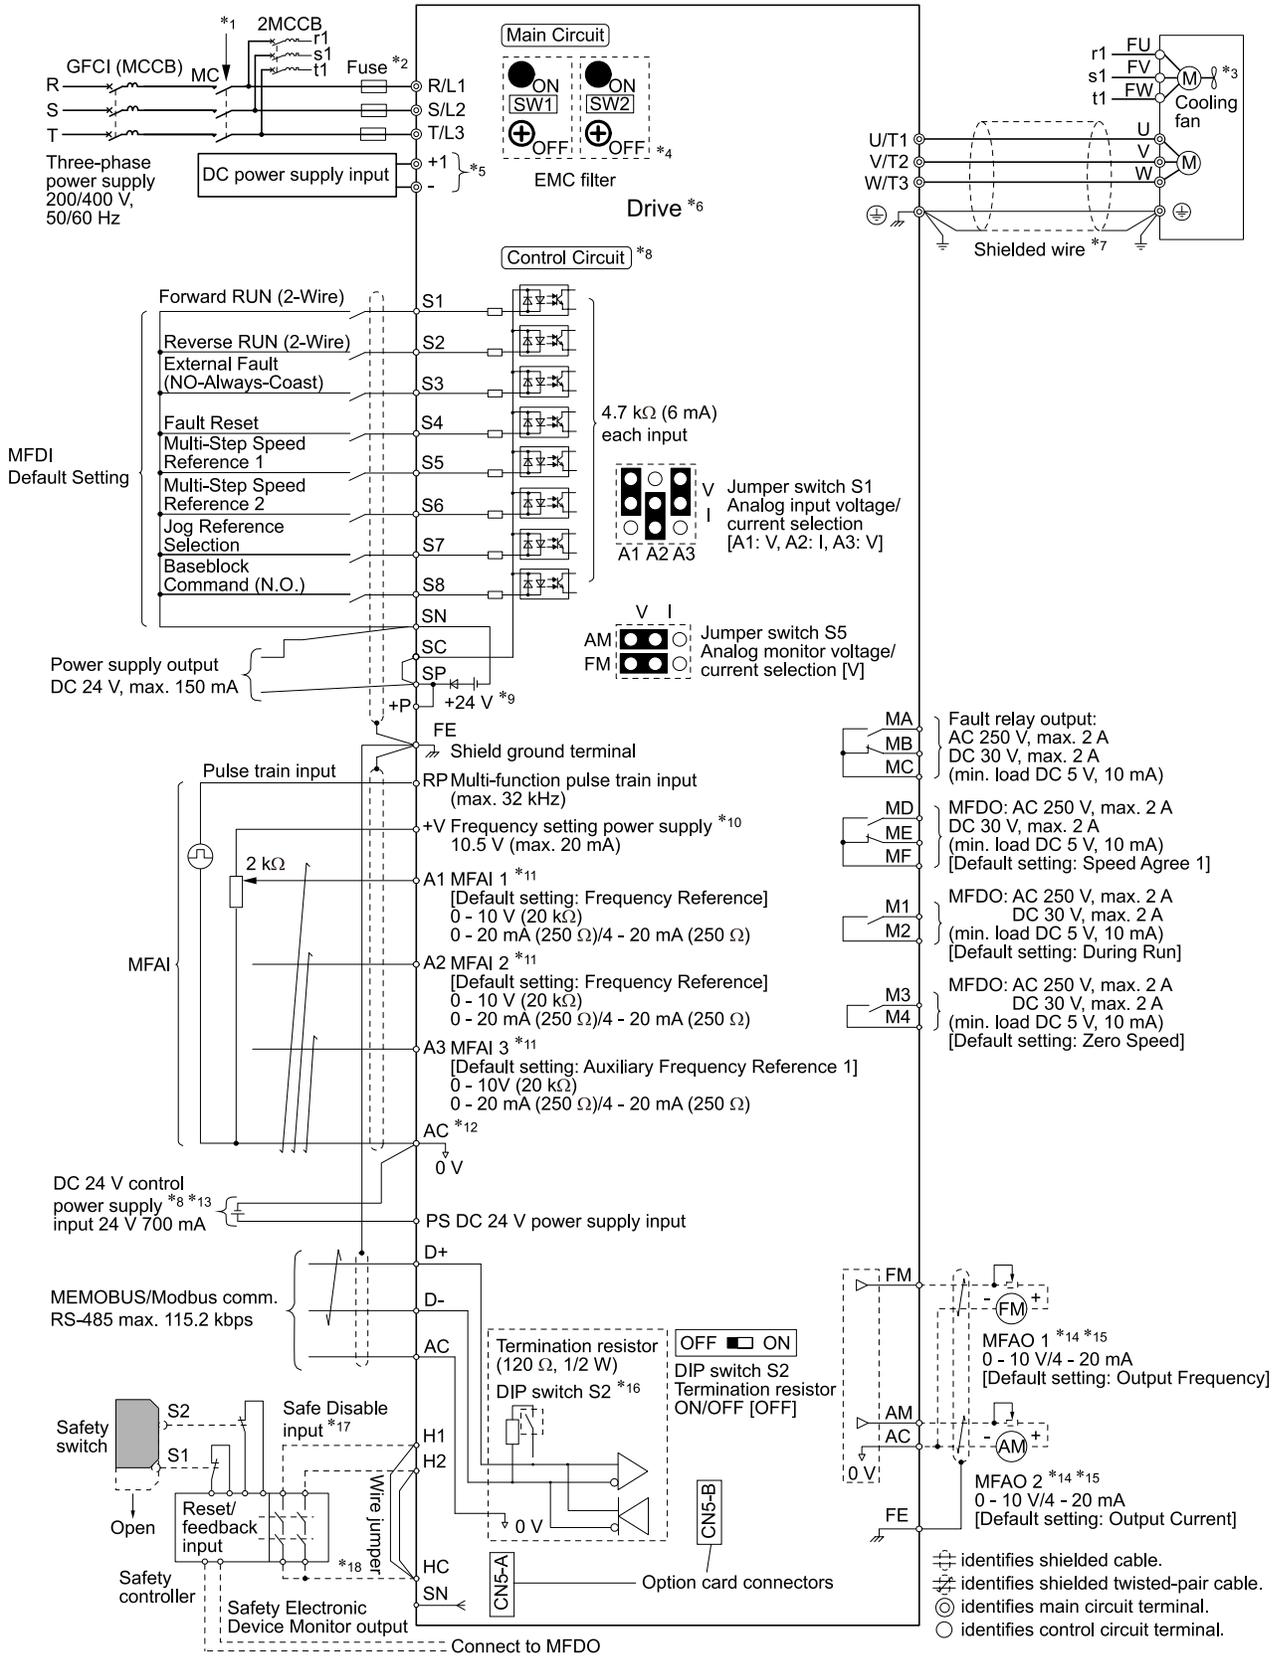


Figure 4.24 Standard Drive Connection Diagram

Mechanical & Electrical Installation

## 4.3 Electrical Installation

---

- \*1 Set the wiring sequence to de-energize the drive with the fault relay output. If the drive outputs a fault during fault restart when you use the fault restart function, set  $L5-02 = 1$  [*Fault Contact at Restart Select = Always Active*] to de-energize the drive. Be careful when you use a cut-off sequence. The default setting for  $L5-02$  is 0 [*Active Only when Not Restarting*].
- \*2 Use branch circuit protection devices as recommended in this manual.
- \*3 Cooling fan wiring is not necessary for self-cooling motors.
- \*4 EMC filter switches are only available on drive models 2xxxC and 4xxxC with the built-in EMC filter for C2.  
**NOTICE: Damage to Equipment.** When you use the drive with a non-grounding, high-resistance grounding, or asymmetric-grounding network, put the EMC Filter screw or screws in the OFF position to disable the built-in EMC filter. If you do not disable the built-in EMC filter, it will cause damage to the drive.
- \*5 Connect DC power supply input to terminals - and +1.  
**WARNING! Fire Hazard.** Only connect factory-recommended devices or circuits to drive terminals - and +1. Do not connect AC power to these terminals. Incorrect wiring can cause damage to the drive and serious injury or death from fire.
- \*6 Refer to [Main Circuit Wiring on page 303](#) and [Wiring the Control Circuit Terminal on page 336](#) for wiring.
- \*7 Use braided shield cable for the drive and motor wiring, or run the wiring through a metal conduit.
- \*8 Connect a 24 V power supply to terminals PS-AC to operate the control circuit while the main circuit power supply is OFF.
- \*9 To set the MFDI power supply (Sinking/Sourcing Mode or internal/external power supply), install or remove a jumper between terminals SC-SP or SC-SN depending on the application.  
**NOTICE: Damage to Equipment.** Do not close the circuit between terminals SP-SN. If you close the circuits between terminals SC-SP and terminals SC-SN at the same time, it will cause damage to the drive.
  - Sinking Mode, Internal power supply: Install the jumper to close the circuit between terminals SC-SP.  
**NOTICE: Damage to Equipment.** Do not close the circuit between terminals SC-SN. If you close the circuits between terminals SC-SP and terminals SC-SN at the same time, it will cause damage to the drive.
  - Sourcing Mode, Internal power supply: Install the jumper to close the circuit between terminals SC-SN.  
**NOTICE: Damage to Equipment.** Do not close the circuit between terminals SC-SP. If you close the circuits between terminals SC-SP and terminals SC-SN at the same time, it will cause damage to the drive.
  - External power supply: Remove the jumper from the MFDI terminals. It is not necessary to close the circuit between terminals SC-SP and terminals SC-SN.
- \*10 The maximum output current capacity for terminal +V on the control circuit is 20 mA.  
**NOTICE: Damage to Equipment.** Do not install a jumper between terminals +V and AC. A closed circuit between these terminals will cause damage to the drive.
- \*11 Jumper switch S1 sets terminals A1, A2, and A3 for voltage or current input signal. The default setting for S1 is voltage input (“V” side) for A1 and A3 and current input (“I” side) for A2.
- \*12 **NOTICE: Do not ground the AC control circuit terminals and only connect the AC terminals according to the product instructions. If you connect the AC terminals incorrectly, it can cause damage to the drive.**
- \*13 Connect the positive lead from an external 24 Vdc power supply to terminal PS and the negative lead to terminal AC.  
**NOTICE: Connect terminals PS and AC correctly for the 24 V power supply. If you connect the wires to the incorrect terminals, it will cause damage to the drive.**
- \*14 Use multi-function analog monitor outputs with analog frequency meters, ammeters, voltmeters, and wattmeters. Do not use monitor outputs with feedback-type signal devices.
- \*15 Jumper switch S5 sets terminal FM and AM for voltage or current output. The default setting for S5 is voltage output (“V” side).
- \*16 Set DIP switch S2 to “ON” to enable the termination resistor in the last drive in a MEMOBUS/Modbus network.
- \*17 Use only Sourcing Mode for Safe Disable input.
- \*18 Disconnect the jumpers between H1 and HC and H2 and HC to use the Safe Disable input.

■ Standard Drive Connection Diagram (Models: 2xxxxT and 4xxxxT with Main Switch)

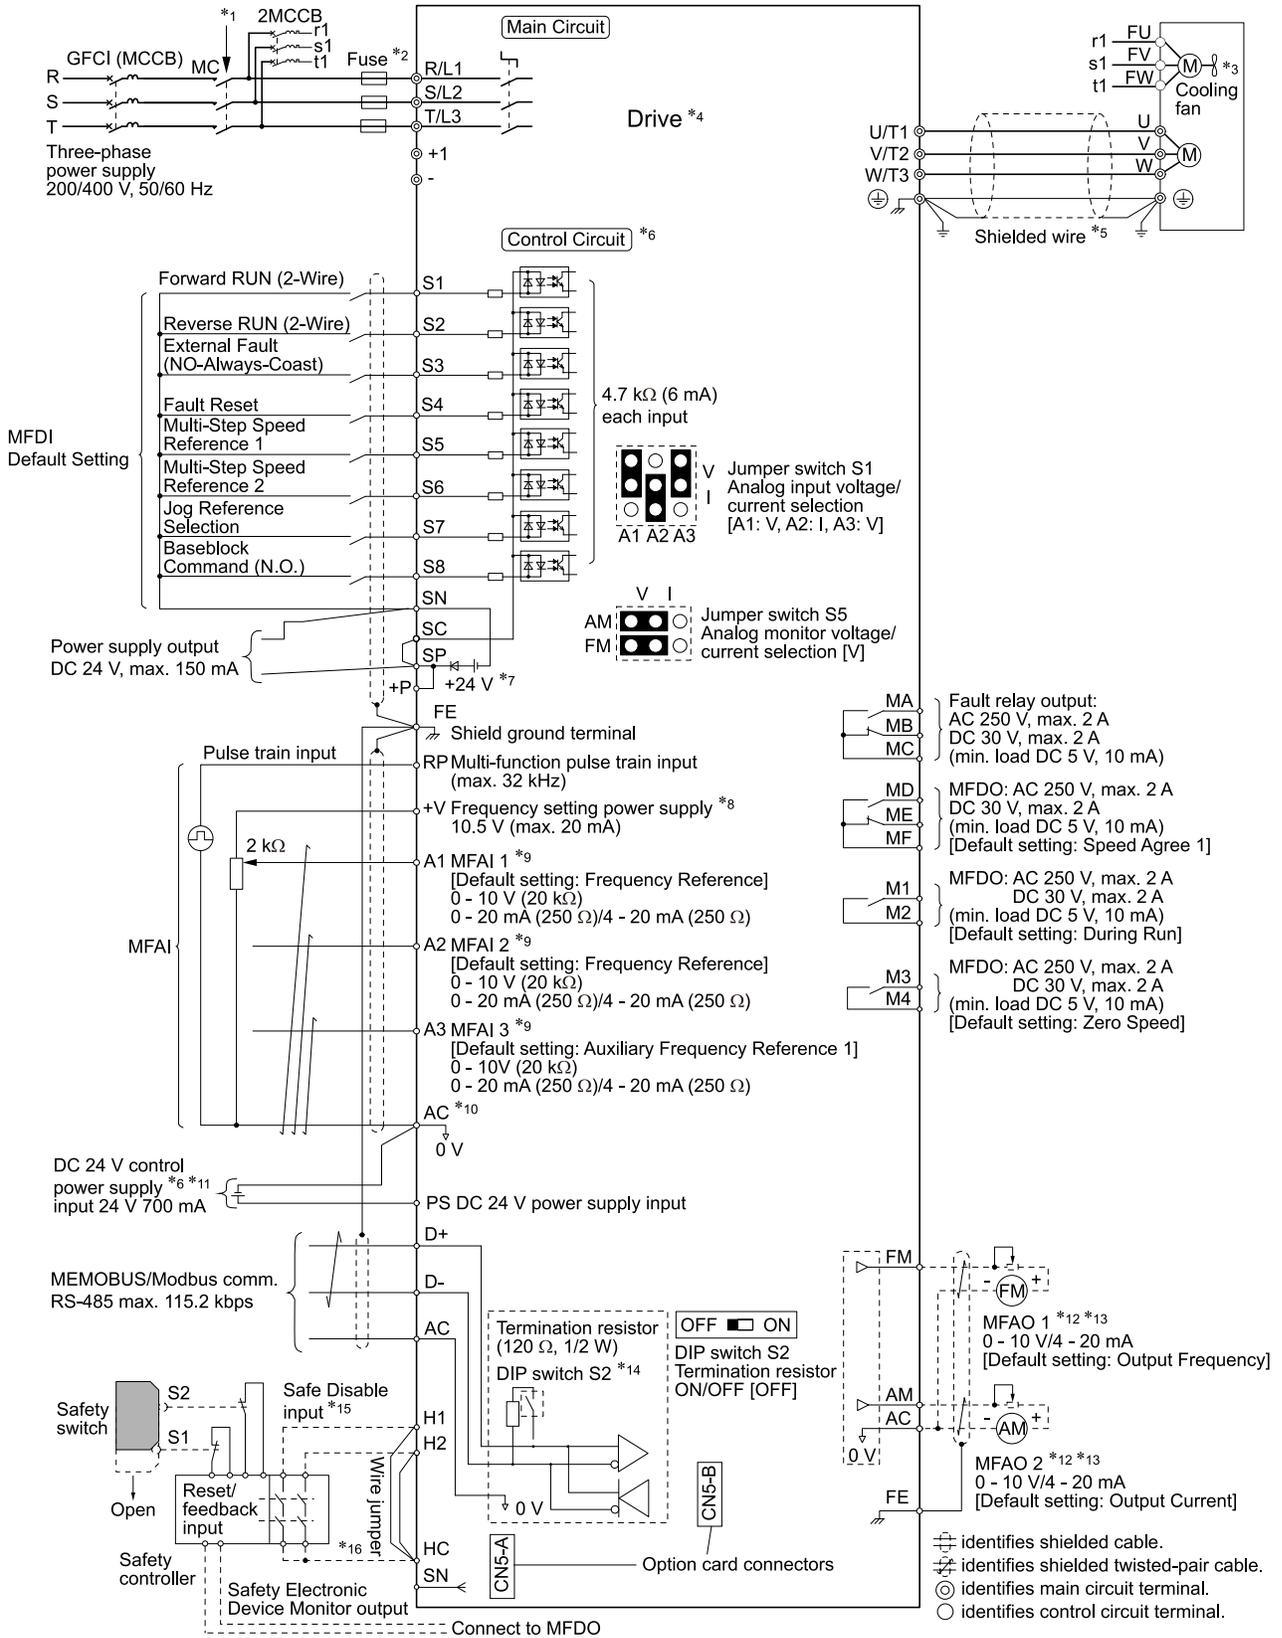


Figure 4.25 Standard Drive Connection Diagram

Mechanical & Electrical Installation

## 4.3 Electrical Installation

---

- \*1 Set the wiring sequence to de-energize the drive with the fault relay output. If the drive outputs a fault during fault restart when you use the fault restart function, set  $L5-02 = 1$  [*Fault Contact at Restart Select = Always Active*] to de-energize the drive. Be careful when you use a cut-off sequence. The default setting for  $L5-02$  is 0 [*Active Only when Not Restarting*].
- \*2 Use branch circuit protection devices as recommended in this manual.
- \*3 Cooling fan wiring is not necessary for self-cooling motors.
- \*4 Refer to [Main Circuit Wiring on page 303](#) and [Wiring the Control Circuit Terminal on page 336](#) for wiring.
- \*5 Use braided shield cable for the drive and motor wiring, or run the wiring through a metal conduit.
- \*6 Connect a 24 V power supply to terminals PS-AC to operate the control circuit while the main circuit power supply is OFF.
- \*7 To set the MFDI power supply (Sinking/Sourcing Mode or internal/external power supply), install or remove a jumper between terminals SC-SP or SC-SN depending on the application.  
**NOTICE: Damage to Equipment. Do not close the circuit between terminals SP-SN. If you close the circuits between terminals SC-SP and terminals SC-SN at the same time, it will cause damage to the drive.**
  - Sinking Mode, Internal power supply: Install the jumper to close the circuit between terminals SC-SP.  
**NOTICE: Damage to Equipment. Do not close the circuit between terminals SC-SN. If you close the circuits between terminals SC-SP and terminals SC-SN at the same time, it will cause damage to the drive.**
  - Sourcing Mode, Internal power supply: Install the jumper to close the circuit between terminals SC-SN.  
**NOTICE: Damage to Equipment. Do not close the circuit between terminals SC-SP. If you close the circuits between terminals SC-SP and terminals SC-SN at the same time, it will cause damage to the drive.**
  - External power supply: Remove the jumper from the MFDI terminals. It is not necessary to close the circuit between terminals SC-SP and terminals SC-SN.
- \*8 The maximum output current capacity for terminal +V on the control circuit is 20 mA.  
**NOTICE: Damage to Equipment. Do not install a jumper between terminals +V and AC. A closed circuit between these terminals will cause damage to the drive.**
- \*9 Jumper switch S1 sets terminals A1, A2, and A3 for voltage or current input signal. The default setting for S1 is voltage input (“V” side) for A1 and A3 and current input (“I” side) for A2.
- \*10 **NOTICE: Do not ground the AC control circuit terminals and only connect the AC terminals according to the product instructions. If you connect the AC terminals incorrectly, it can cause damage to the drive.**
- \*11 Connect the positive lead from an external 24 Vdc power supply to terminal PS and the negative lead to terminal AC.  
**NOTICE: Connect terminals PS and AC correctly for the 24 V power supply. If you connect the wires to the incorrect terminals, it will cause damage to the drive.**
- \*12 Use multi-function analog monitor outputs with analog frequency meters, ammeters, voltmeters, and wattmeters. Do not use monitor outputs with feedback-type signal devices.
- \*13 Jumper switch S5 sets terminal FM and AM for voltage or current output. The default setting for S5 is voltage output (“V” side).
- \*14 Set DIP switch S2 to “ON” to enable the termination resistor in the last drive in a MEMOBUS/Modbus network.
- \*15 Use only Sourcing Mode for Safe Disable input.
- \*16 Disconnect the jumpers between H1 and HC and H2 and HC to use the Safe Disable input.

## 4.4 Main Circuit Wiring

This section gives information about the functions, specifications, and procedures necessary to safely and correctly wire the main circuit in the drive.

**NOTICE: Damage to Equipment.** Do not energize and de-energize the drive more frequently than one time each 30 minutes. If you frequently energize and de-energize the drive, it can cause drive failure.


**Note:**

Soldered wire connections can become loose over time and cause unsatisfactory drive performance.

### ◆ Motor and Main Circuit Connections

**WARNING! Electrical Shock Hazard.** Do not connect terminals R/L1, S/L2, T/L3, U/T1, V/T2, W/T3, -, or +1 to the ground terminal. If you connect these terminals to earth ground, it can cause damage to the drive or serious injury or death.

### ■ Wiring the Main Circuit and Motor (Models: 2xxxxB/F/V/W and 4xxxxB/F/V/W without Main Switch)

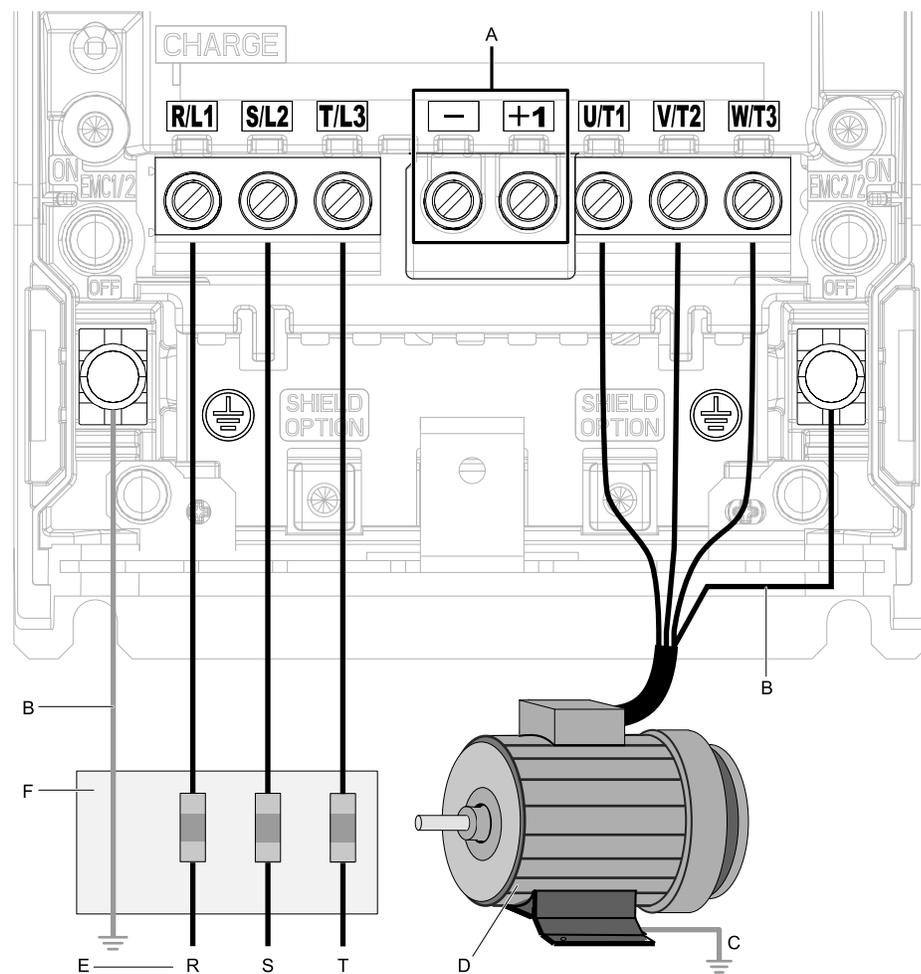

**Note:**

The location of terminals are different for different drive models.

**A - DC bus terminal**

**B - Connect to the drive ground terminal.**


**C - Ground the motor case.**

**D - Three-Phase Motor**

**E - Use R, S, T for input power supply.**

**F - Input Protection (Fuses or Circuit Breakers)**

■ **Wiring the Main Circuit and Motor (Models: 2xxxxT and 4xxxxT with Main Switch)**

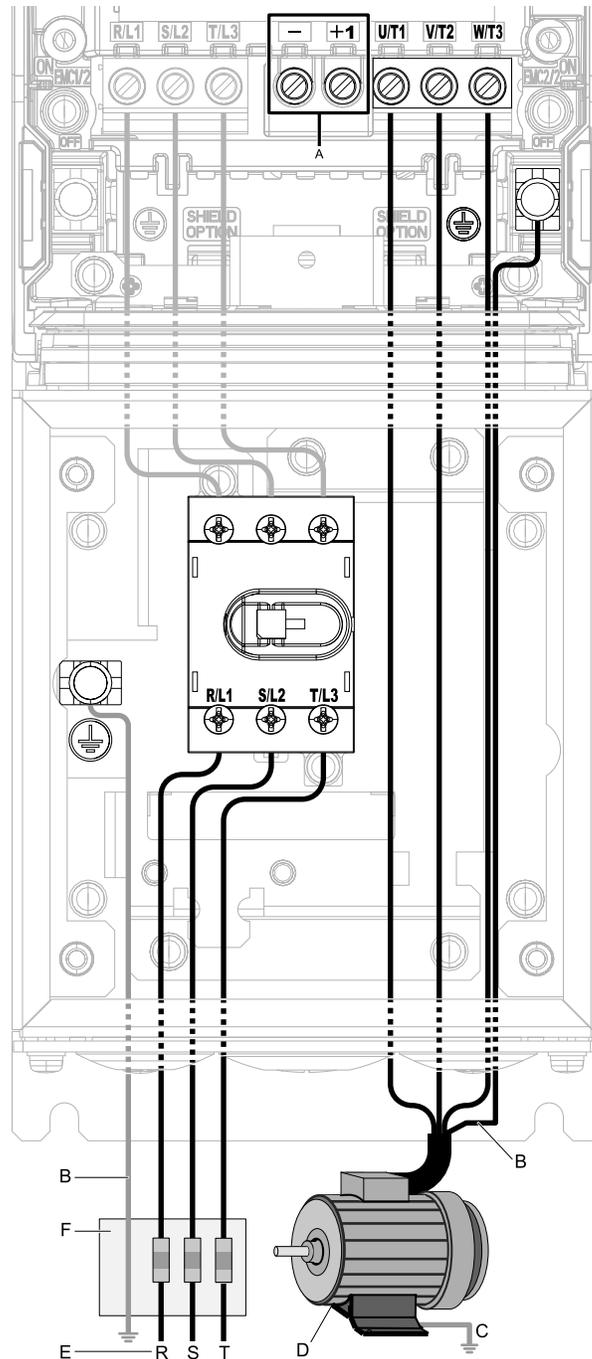

**Note:**


The location of terminals are different for different drive models.

- A - DC bus terminal <sup>\*1</sup>**
- B - Connect to the drive ground terminal.**
- C - Ground the motor case.**
- D - Three-Phase Motor**
- E - Use R, S, T for input power supply.**
- F - Input Protection (Fuses or Circuit Breakers)**

**Figure 4.26 Wiring the Main Circuit and Motor**


<sup>\*1</sup> You cannot use terminals - and +1 on IP55/UL Type 12 drives with Main Switch.

For drive models 2011xT to 2059xT and 4005xT to 4065xT with Main Switch, the tightening torques for the R/L1, S/L2, and T/L3 terminal screws are on a sticker next to the Main Switch terminal block.

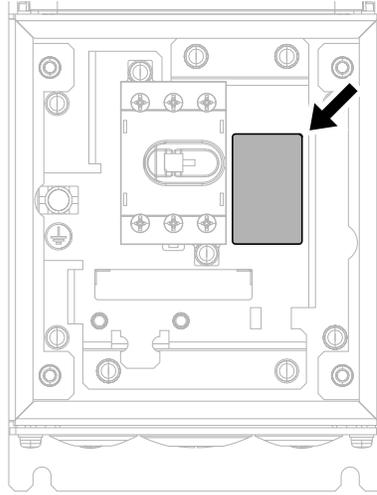

**Figure 4.27 Tightening Torque Display Location (Inside of Main Switch Cover)**

For models 2075xT to 2114xT and 4077xT to 4096xT, the torques for the R/L1, S/L2, and T/L3 terminal screws are on a sticker on the metallic plate of the Main Switch terminal block.

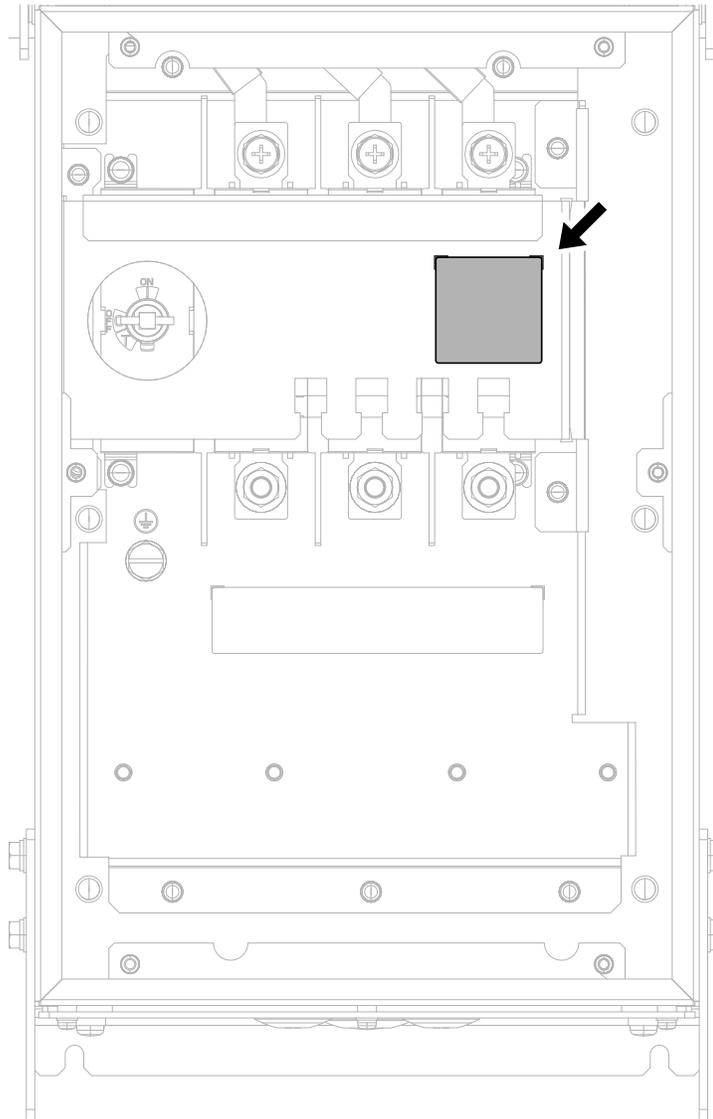

**Figure 4.28 Tightening Torque Display Location (Inside of Main Switch Cover)**

### ◆ Configuration of Main Circuit Terminal Block

Use [Table 4.2](#) or [Table 4.3](#) to find the correct figure for the main circuit terminal block of your drive.

**Table 4.2 Configuration of Main Circuit Terminal Block (Models: 2xxxxB/F/V/W and 4xxxxB/F/V/W)**

Model	Shape of Terminal <sup>*1</sup>	Figure
2011, 2017, 4005 - 4014	European terminal	<a href="#">Figure 4.29</a>
2024, 2031, 4021 - 4034	European terminal	<a href="#">Figure 4.30</a>
2046, 2059, 4040 - 4065	European terminal	<a href="#">Figure 4.31</a>
2075 - 2114, 4077 - 4124	Screw terminal	<a href="#">Figure 4.32</a>
2143, 2169, 4156	Screw terminal	<a href="#">Figure 4.33</a>
2211, 2273, 4180 - 4302 <sup>*2</sup>	Screw terminal	<a href="#">Figure 4.34</a>
2343, 2396, 4361, 4414 <sup>*2</sup>	Screw terminal	<a href="#">Figure 4.35</a>
4477 - 4720 <sup>*2</sup>	Screw terminal	<a href="#">Figure 4.36</a>


\*1 The ground terminal is a screw terminal.

\*2 Drive models 2211 to 2396 and 4180 to 4720 have an unmarked terminal next to terminal +1. You cannot use this terminal for main circuit wiring.

**Table 4.3 Configuration of Main Circuit Terminal Block (Models: 2xxxxT and 4xxxxT)**

Model	Shape of Terminal <sup>*1</sup>	Figure
2011, 2017, 4005 - 4014	European terminal	<a href="#">Figure 4.37</a>
2024, 2031, 4021 - 4034	European terminal	<a href="#">Figure 4.38</a>
2046, 2059, 4040 - 4065	European terminal	<a href="#">Figure 4.39</a>
2075 - 2114, 4077 - 4096	Screw terminal	<a href="#">Figure 4.40</a>

\*1 The ground terminal is a screw terminal.

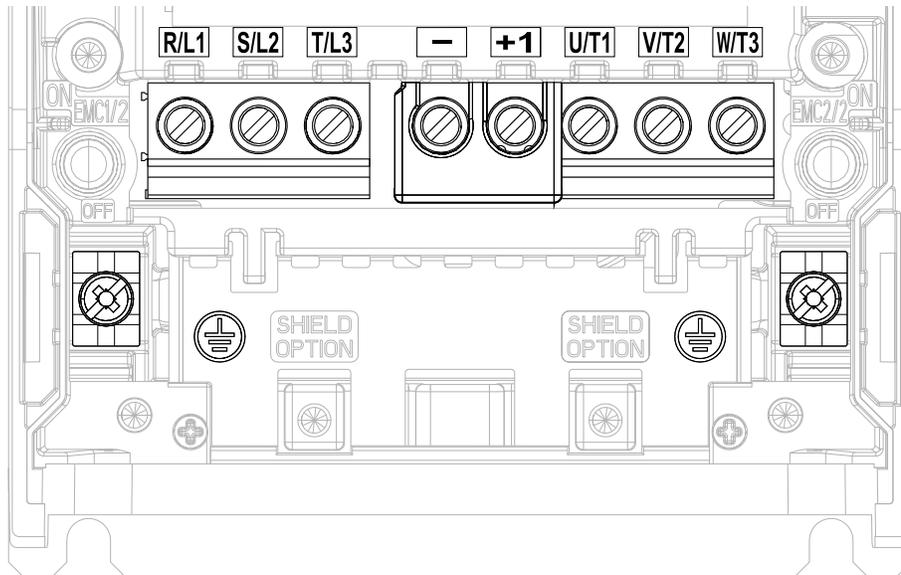

**Figure 4.29 Configuration of Main Circuit Terminal Block (2011, 2017, 4005 - 4014)**

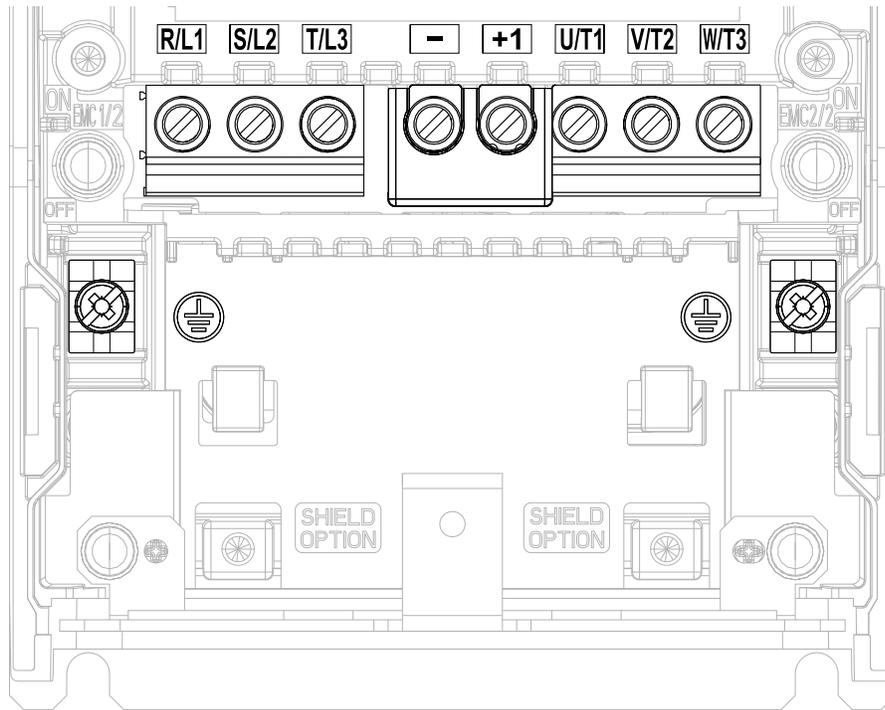


Figure 4.30 Configuration of Main Circuit Terminal Block (2024, 2031, 4021 - 4034)

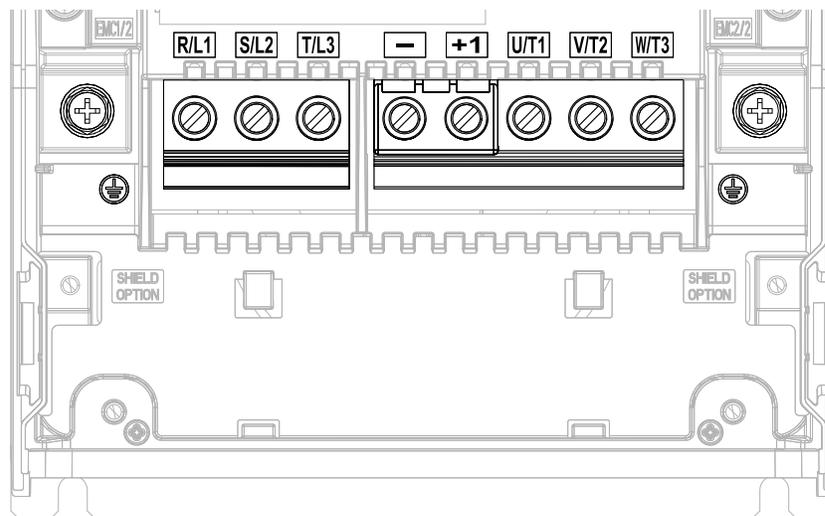


Figure 4.31 Configuration of Main Circuit Terminal Block (2046, 2059, 4040 - 4065)

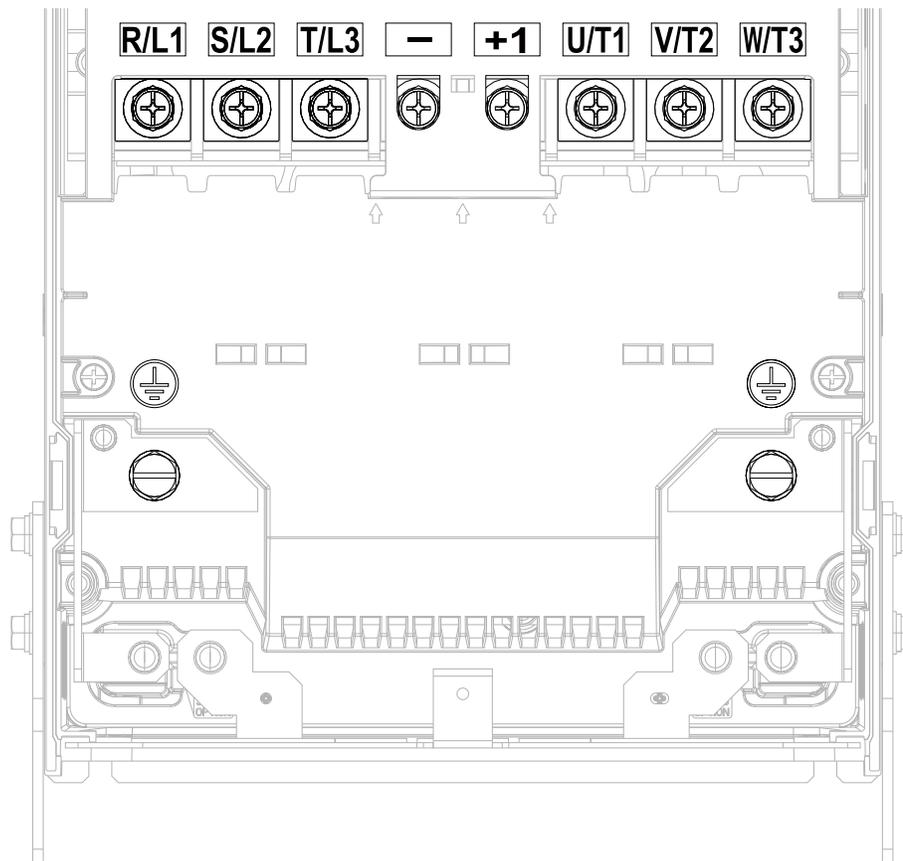


Figure 4.32 Configuration of Main Circuit Terminal Block (2075 - 2114, 4077 - 4124)

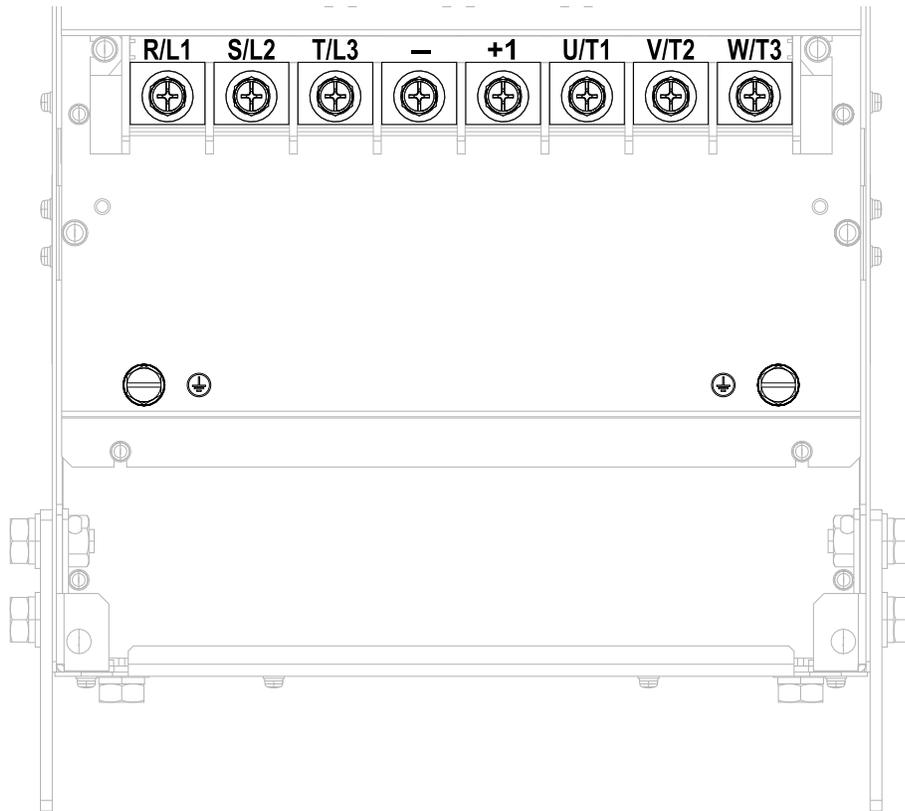


Figure 4.33 Configuration of Main Circuit Terminal Block (2143, 2169, 4156)


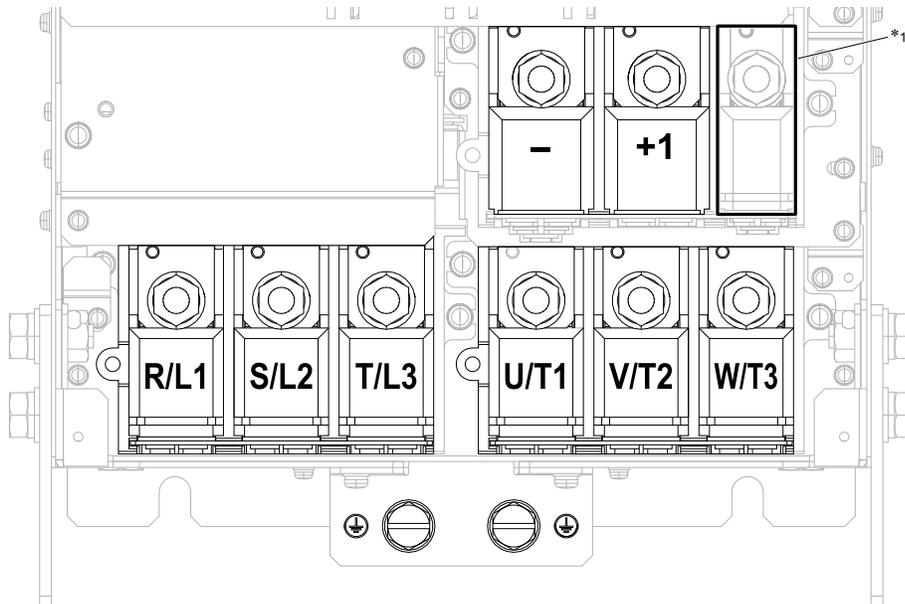



Figure 4.34 Configuration of Main Circuit Terminal Block (2211, 2273, 4180 - 4302)

\*1 You cannot use this unmarked terminal for main circuit wiring.

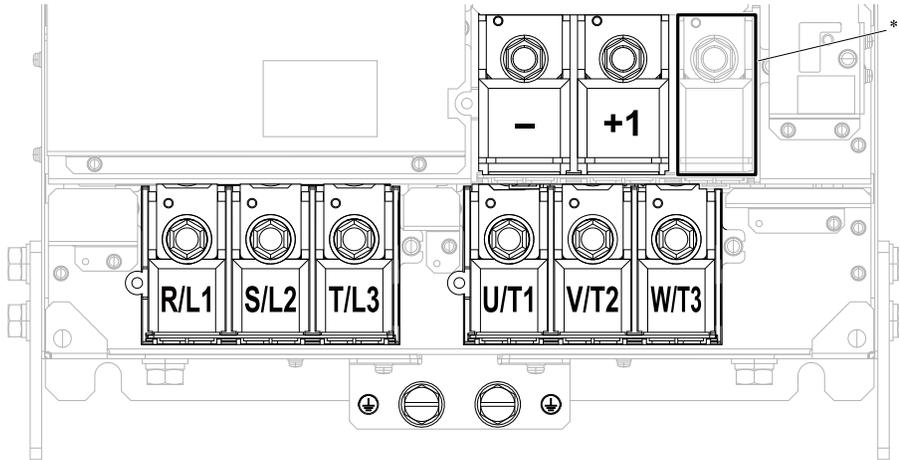

**Figure 4.35 Configuration of Main Circuit Terminal Block (2343, 2396, 4361, 4414)**

\*1 You cannot use this unmarked terminal for main circuit wiring.

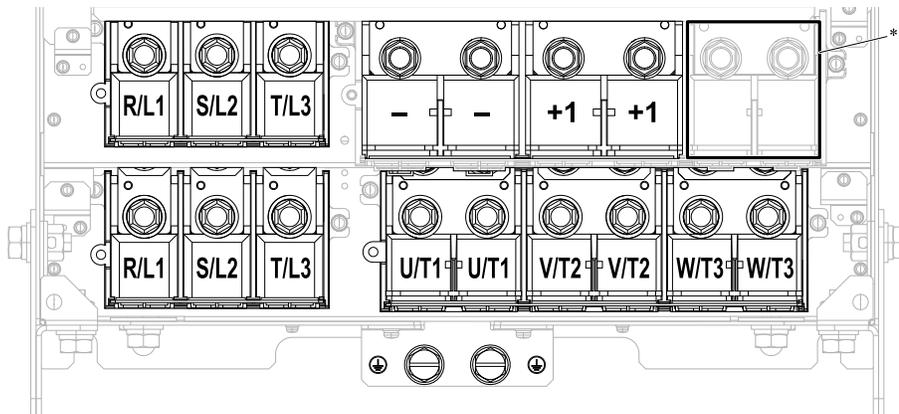

**Figure 4.36 Configuration of Main Circuit Terminal Block (4477 - 4720)**

\*1 You cannot use these unmarked terminals for main circuit wiring.

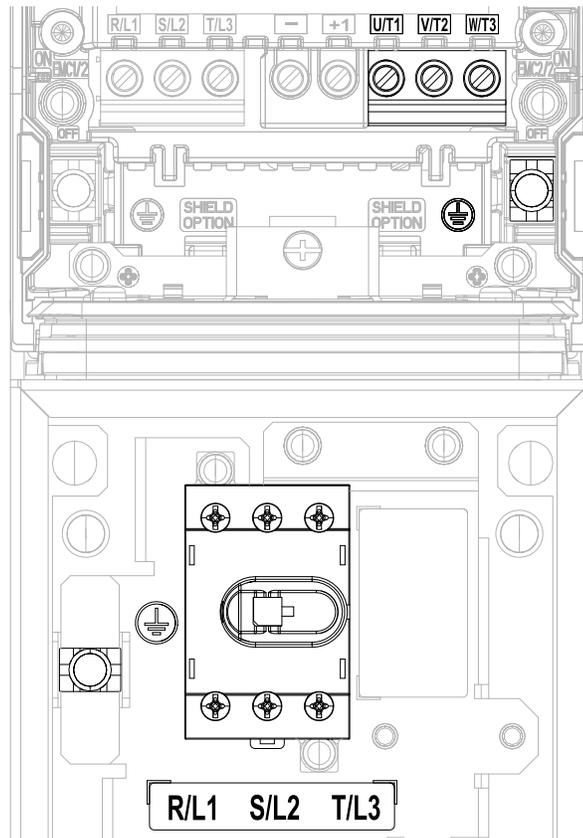


Figure 4.37 Configuration of Main Circuit Terminal Block (2011xT, 2017xT, 4005xT - 4014xT)

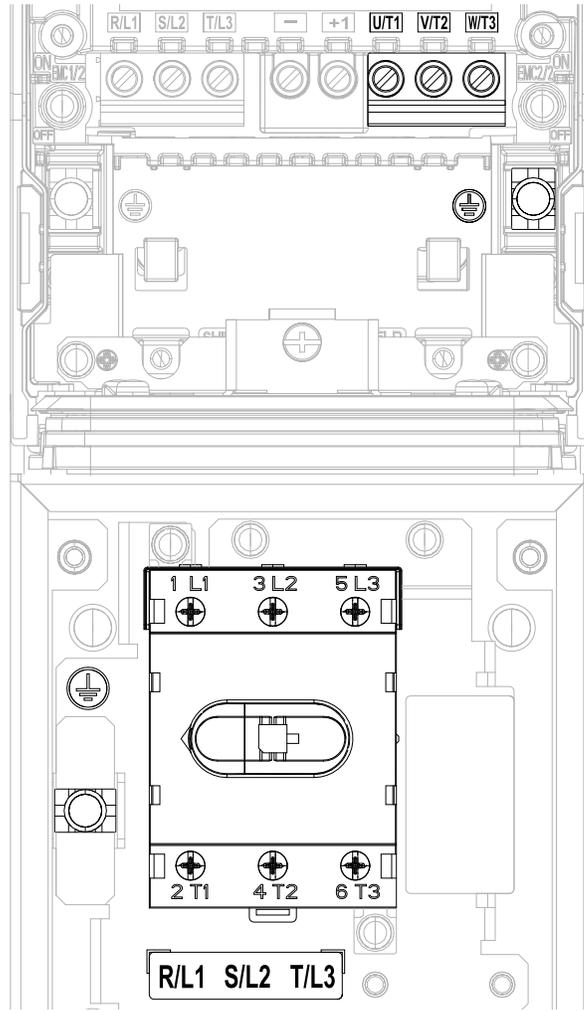


Figure 4.38 Configuration of Main Circuit Terminal Block (2024xT, 2031xT, 4021xT - 4034xT)

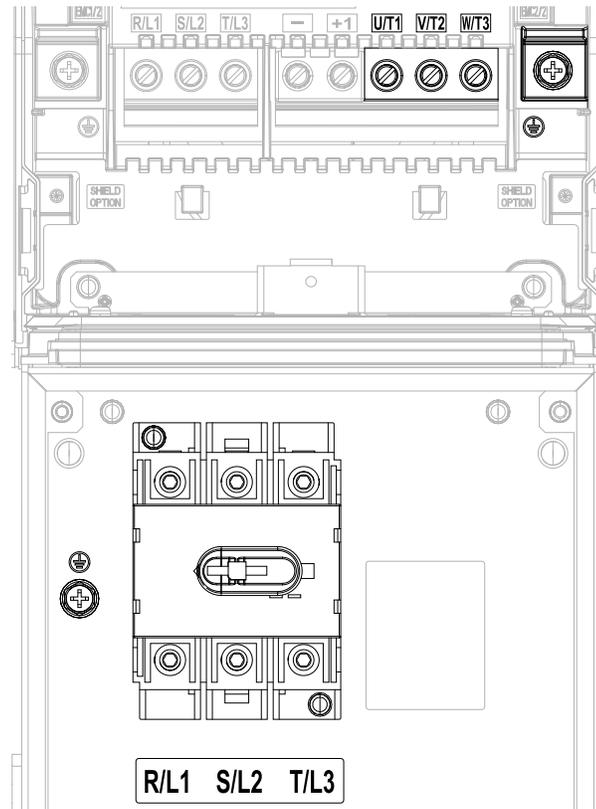


Figure 4.39 Configuration of Main Circuit Terminal Block (2046xT, 2059xT, 4040xT - 4065xT)

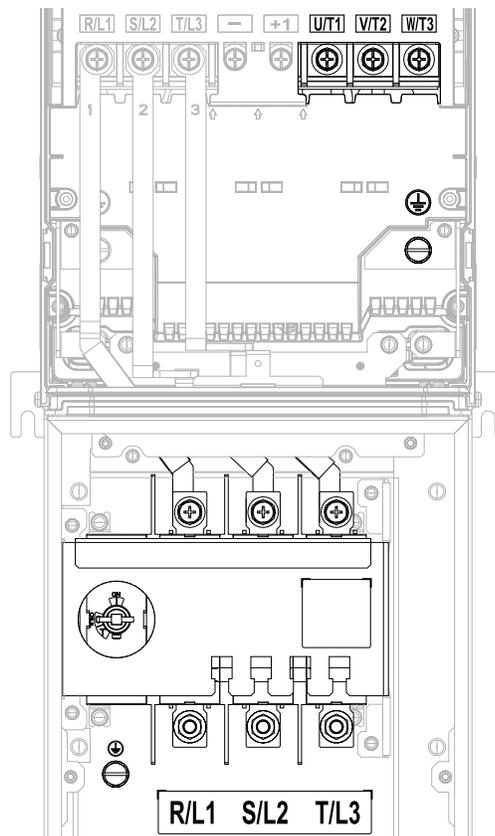


Figure 4.40 Configuration of Main Circuit Terminal Block (2075xT - 2114xT, 4077xT - 4096xT)

## ◆ Main Circuit Terminal Functions

Refer to [Table 4.4](#) for the functions of drive main circuit terminals.

**Table 4.4 Main Circuit Terminal Functions**

Terminal	Function
R/L1	Line side
S/L2	
T/L3	
U/T1	Load side
V/T2	
W/T3	
-	DC input terminal <i>*1</i>
+1	
⊕	Ground terminal

\*1 You cannot use terminals - and +1 on IP55/UL Type 12 drives with Main Switch.

## ◆ Wire Selection

Select the correct wires for main circuit wiring.

Refer to [Wire Gauge and Torque Specifications for UL Listing on page 314](#) for wire gauges and tightening torques as specified by UL standards.

### ■ Wire Selection Precautions

**WARNING! Electrical Shock Hazard.** Make sure that the protective ground wire complies with technical standards and local safety regulations. The IEC/EN 61800-5-1:2007 standard specifies that you must wire the power supply to automatically de-energize when the protective ground wire disconnects. You can also connect a protective ground wire that has a minimum cross-sectional area of 10mm<sup>2</sup> (copper wire) or 16 mm<sup>2</sup> (aluminum wire). For drive models on which you cannot use a protective ground wire of 10 mm<sup>2</sup> or more, install two protective ground wires that have the same cross-sectional area. If you do not obey the standards and regulations, it can cause serious injury or death. The leakage current of the drive will be more than 3.5 mA.

Think about line voltage drop before you select wire gauges. Select wire gauges that drop the voltage by 2% or less of the rated voltage. Increase the wire gauge and the cable length when the risk of voltage drop increases. Calculate line voltage drop with this formula:

$$\text{Line voltage drop (V)} = \sqrt{3} \times \text{wire resistance } (\Omega/\text{km}) \times \text{wiring distance (m)} \times \text{motor rated current (A)} \times 10^{-3}.$$

### ■ Precautions during Wiring

Use terminals +1 and - to connect a regenerative converter or regenerative unit.

### ■ Wire Gauge and Torque Specifications for UL Listing

**WARNING! Electrical Shock Hazard.** Make sure that the protective ground wire complies with technical standards and local safety regulations. The IEC/EN 61800-5-1:2007 standard specifies that you must wire the power supply to automatically de-energize when the protective ground wire disconnects. You can also connect a protective ground wire that has a minimum cross-sectional area of 10mm<sup>2</sup> (copper wire) or 16 mm<sup>2</sup> (aluminum wire). For drive models on which you cannot use a protective ground wire of 10 mm<sup>2</sup> or more, install two protective ground wires that have the same cross-sectional area. If you do not obey the standards and regulations, it can cause serious injury or death. The leakage current of the drive will be more than 3.5 mA.

Refer to [Three-Phase 208 V Class Wire Gauges and Torques \(Models: 2xxxxB/F/V/W without Main Switch\) on page 315](#) and [Three-Phase 480 V Class Wire Gauges and Torques \(Models: 4xxxxB/F/V/W without Main Switch\) on page 318](#) or [Three-Phase 208 V Class Wire Gauges and Torques \(Models: 2xxxxT with Main Switch\) on page 322](#) and [Three-Phase 480 V Class Wire Gauges and Torques \(Models: 4xxxxT with Main Switch\) on page 323](#) for the recommended wire gauges and tightening torques of the main circuit terminals.

**Note:**

The recommended wire gauges are based on drive continuous current ratings with 75 °C (167 °F) 600 V class copper wire. Assume these conditions:

- Ambient temperature: 40 °C (104 °F) or lower
- Wiring distance: 100 m (3281 ft) or shorter
- Normal Duty Rated current value

**Screw Shapes****Table 4.5 Icons to Identify Screw Shapes**

Icon	Screw Shape	Icon	Screw Shape
	Phillips/slot combo (+/-)		Hex bolt (slotted)
	Slotted (-)		Hex self-locking nut
	Pozidriv #2		Hex socket cap (WAF: 4 mm)
	Hex bolt (cross-slotted)		Hex bolt and hex self-locking nut

**Three-Phase 208 V Class Wire Gauges and Torques (Models: 2xxxxB/F/V/W without Main Switch)**

Model	Terminals	Recommended Gauge AWG, kcmil	Applicable Gauge AWG, kcmil (mm <sup>2</sup> ) *1	IP20 Applicable Gauge AWG, kcmil (mm <sup>2</sup> ) *2	Wire Stripping Length *3 mm	Terminal Screw Size and Shape	Tightening Torque N-m (lbf-in)
2011	R/L1, S/L2, T/L3	14	14 - 8 (2.5 - 10)	-	10	M4 	1.5 - 1.7 (13.5 - 15)
	U/T1, V/T2, W/T3	14	14 - 8 (2.5 - 10)	-	10	M4 	1.5 - 1.7 (13.5 - 15)
	-, +1	14	14 - 8 (2.5 - 10)	-	10	M4 	1.5 - 1.7 (13.5 - 15)
		12	14 - 8 (2.5 - 10)	-	-	M5 	2.0 - 2.5 (17.7 - 22.1)
2017	R/L1, S/L2, T/L3	12	14 - 8 (2.5 - 10)	-	10	M4 	1.5 - 1.7 (13.5 - 15)
	U/T1, V/T2, W/T3	10	14 - 8 (2.5 - 10)	-	10	M4 	1.5 - 1.7 (13.5 - 15)
	-, +1	10	14 - 8 (2.5 - 10)	-	10	M4 	1.5 - 1.7 (13.5 - 15)
		10	14 - 8 (2.5 - 10)	-	-	M5 	2.0 - 2.5 (17.7 - 22.1)
2024	R/L1, S/L2, T/L3	10	14 - 8 (2.5 - 10)	-	10	M4 	1.5 - 1.7 (13.5 - 15)
	U/T1, V/T2, W/T3	8	14 - 8 (2.5 - 10)	-	10	M4 	1.5 - 1.7 (13.5 - 15)
	-, +1	8	14 - 8 (2.5 - 10)	-	10	M4 	1.5 - 1.7 (13.5 - 15)
		10	14 - 8 (2.5 - 10)	-	-	M5 	2.0 - 2.5 (17.7 - 22.1)
2031	R/L1, S/L2, T/L3	8	14 - 8 (2.5 - 10)	-	18	M5 	4.1 - 4.5 (36 - 40)
	U/T1, V/T2, W/T3	8	14 - 8 (2.5 - 10)	-	18	M5 	4.1 - 4.5 (36 - 40)
	-, +1	8	14 - 8 (2.5 - 10)	-	18	M5 	4.1 - 4.5 (36 - 40)
		10	14 - 8 (2.5 - 10)	-	-	M6 	4.0 - 5.0 (35.4 - 44.3)

## 4.4 Main Circuit Wiring

Model	Terminals	Recommended Gauge AWG, kcmil	Applicable Gauge AWG, kcmil (mm <sup>2</sup> ) *1	IP20 Applicable Gauge *2 AWG, kcmil (mm <sup>2</sup> ) *1	Wire Stripping Length *3 mm	Terminal Screw Size and Shape	Tightening Torque N·m (lbf·in)
2046	R/L1, S/L2, T/L3	8	14 - 4 (2.5 - 25)	-	18	M5 ⊖	4.1 - 4.5 (36 - 40)
	U/T1, V/T2, W/T3	6	14 - 4 (2.5 - 25)	-	18	M5 ⊖	4.1 - 4.5 (36 - 40)
	-, +1	6	14 - 4 (2.5 - 25)	-	18	M5 ⊖	4.1 - 4.5 (36 - 40)
	⊕	8	14 - 4 (2.5 - 25)	-	-	M6 ⊕	4.0 - 5.0 (35.4 - 44.3)
2059	R/L1, S/L2, T/L3	4	14 - 4 (2.5 - 25)	-	-	M8 ⊕	5.4 - 6.0 (47.8 - 53.1)
	U/T1, V/T2, W/T3	4	14 - 4 (2.5 - 25)	-	-	M8 ⊕	5.4 - 6.0 (47.8 - 53.1)
	-, +1	4	14 - 4 (2.5 - 25)	-	-	M8 ⊕	5.4 - 6.0 (47.8 - 53.1)
	⊕	6	14 - 4 (2.5 - 25)	-	-	M8 ⊖	9.0 - 11 (79.7 - 97.4)
2075	R/L1, S/L2, T/L3	4	8 - 2/0 (10 - 70)	-	-	M8 ⊕	5.4 - 6.0 (47.8 - 53.1)
	U/T1, V/T2, W/T3	3 or 2	8 - 2/0 (10 - 70)	-	-	M8 ⊕	5.4 - 6.0 (47.8 - 53.1)
	-, +1	2	8 - 2/0 (10 - 70)	-	-	M8 ⊕	5.4 - 6.0 (47.8 - 53.1)
	⊕	6	8 - 2/0 (10 - 70)	-	-	M8 ⊖	9.0 - 11 (79.7 - 97.4)
2088	R/L1, S/L2, T/L3	3 or 2	8 - 2/0 (10 - 70)	-	-	M8 ⊕	5.4 - 6.0 (47.8 - 53.1)
	U/T1, V/T2, W/T3	2	8 - 2/0 (10 - 70)	-	-	M8 ⊕	5.4 - 6.0 (47.8 - 53.1)
	-, +1	1	8 - 2/0 (10 - 70)	-	-	M8 ⊕	5.4 - 6.0 (47.8 - 53.1)
	⊕	6	8 - 2/0 (10 - 70)	-	-	M8 ⊖	9.0 - 11 (79.7 - 97.4)
2114	R/L1, S/L2, T/L3	1/0	8 - 2/0 (10 - 70)	-	-	M8 ⊕	5.4 - 6.0 (47.8 - 53.1)
	U/T1, V/T2, W/T3	1/0	8 - 2/0 (10 - 70)	-	-	M8 ⊕	5.4 - 6.0 (47.8 - 53.1)
	-, +1	2/0	8 - 2/0 (10 - 70)	-	-	M8 ⊕	5.4 - 6.0 (47.8 - 53.1)
	⊕	6	8 - 2/0 (10 - 70)	-	-	M8 ⊖	9.0 - 11 (79.7 - 97.4)
2143	R/L1, S/L2, T/L3	2/0	6 - 4/0 (16 - 95)	-	-	M8 ⊕	13.5 - 15 (119.5 - 132.8)
	U/T1, V/T2, W/T3	3/0	6 - 4/0 (16 - 95)	-	-	M8 ⊕	13.5 - 15 (119.5 - 132.8)
	-, +1	3/0	6 - 4/0 (16 - 95)	-	-	M8 ⊕	13.5 - 15 (119.5 - 132.8)
	⊕	4	6 - 4/0 (16 - 95)	-	-	M8 ⊖	9.0 - 11 (79.7 - 97.4)

Model	Terminals	Recommended Gauge AWG, kcmil	Applicable Gauge AWG, kcmil (mm <sup>2</sup> ) *1	IP20 Applicable Gauge *2 AWG, kcmil (mm <sup>2</sup> ) *1	Wire Stripping Length *3 mm	Terminal Screw Size and Shape	Tightening Torque N·m (lbf·in)
2169	R/L1, S/L2, T/L3	3/0	6 - 4/0 (16 - 95)	-	-	M8 	13.5 - 15 (119.5 - 132.8)
	U/T1, V/T2, W/T3	4/0	6 - 4/0 (16 - 95)	-	-	M8 	13.5 - 15 (119.5 - 132.8)
	-, +1	1/0 × 2	6 - 4/0 (16 - 95)	-	-	M8 	13.5 - 15 (119.5 - 132.8)
		4	6 - 4/0 (16 - 95)	-	-	M8 	9.0 - 11 (79.7 - 97.4)
2211	R/L1, S/L2, T/L3	1/0 × 2	3 - 4/0 × 2P (25 - 95 × 2P)	2/0 - 4/0 × 2P (70 - 95 × 2P)	-	M10 	18 - 20 (159.3 - 177)
	U/T1, V/T2, W/T3	1/0 × 2	3 - 4/0 × 2P (25 - 95 × 2P)	2/0 - 4/0 × 2P (70 - 95 × 2P)	-	M10 	18 - 20 (159.3 - 177)
	-, +1	2/0 × 2	2 - 250 × 2P (35 - 120 × 2P)	4/0 - 250 × 2P (95 - 120 × 2P)	-	M10 	18 - 20 (159.3 - 177)
		3 or 2	4 - 350 (25 - 185)	-	-	M10 	18 - 23 (159 - 204)
2273	R/L1, S/L2, T/L3	2/0 × 2	3 - 4/0 × 2P (25 - 95 × 2P)	2/0 - 4/0 × 2P (70 - 95 × 2P)	-	M10 	18 - 20 (159.3 - 177)
	U/T1, V/T2, W/T3	2/0 × 2	3 - 4/0 × 2P (25 - 95 × 2P)	2/0 - 4/0 × 2P (70 - 95 × 2P)	-	M10 	18 - 20 (159.3 - 177)
	-, +1	4/0 × 2	2 - 250 × 2P (35 - 120 × 2P)	4/0 - 250 × 2P (95 - 120 × 2P)	-	M10 	18 - 20 (159.3 - 177)
		2	4 - 350 (25 - 185)	-	-	M10 	18 - 23 (159 - 204)
2343	R/L1, S/L2, T/L3	4/0 × 2	2/0 - 300 × 2P (70 - 150 × 2P)	250 - 300 × 2P (120 - 150 × 2P)	-	M12 	31.5 - 35 (279 - 310)
	U/T1, V/T2, W/T3	4/0 × 2	2/0 - 300 × 2P (70 - 150 × 2P)	250 - 300 × 2P (120 - 150 × 2P)	-	M12 	31.5 - 35 (279 - 310)
	-, +1	250 × 2	4/0 - 400 × 2P (95 - 185 × 2P)	300 - 400 × 2P (150 - 185 × 2P)	-	M12 	31.5 - 35 (279 - 310)
		1/0	1 - 350 (50 - 185)	-	-	M12 	32 - 40 (283 - 354)
2396	R/L1, S/L2, T/L3	250 × 2	2/0 - 300 × 2P (70 - 150 × 2P)	250 - 300 × 2P (120 - 150 × 2P)	-	M12 	31.5 - 35 (279 - 310)
	U/T1, V/T2, W/T3	250 × 2	2/0 - 300 × 2P (70 - 150 × 2P)	250 - 300 × 2P (120 - 150 × 2P)	-	M12 	31.5 - 35 (279 - 310)
	-, +1	350 × 2	4/0 - 400 × 2P (95 - 185 × 2P)	300 - 400 × 2P (150 - 185 × 2P)	-	M12 	31.5 - 35 (279 - 310)
		1/0	1 - 350 (50 - 185)	-	-	M12 	32 - 40 (283 - 354)

\*1 The metric wire gauge values are provided as reference information from equivalent AWG sizes and not exactly the same sizes as the AWG/kcmil values. Obey local safety regulations for wire sizes and make sure that the ferrule or crimp terminals are correct for your size.

\*2 For IP20 protection, use wires that are in the range of applicable gauges.

\*3 Remove insulation from the ends of wires to expose the length of wire shown.

## 4.4 Main Circuit Wiring

### Three-Phase 480 V Class Wire Gauges and Torques (Models: 4xxxxB/F/V/W without Main Switch)

Model	Terminal	Recommended Gauge AWG, kcmil	Applicable Gauge AWG, kcmil (mm <sup>2</sup> ) *1	IP20 Applicable Gauge *2 AWG, kcmil (mm <sup>2</sup> ) *1	Wire Stripping Length *3 mm	Terminal Screw Size and Shape	Tightening Torque N·m (lbf·in)
4005	R/L1, S/L2, T/L3	14	14 - 8 (2.5 - 10)	-	10	M4 ⊖	1.5 - 1.7 (13.5 - 15)
	U/T1, V/T2, W/T3	14	14 - 8 (2.5 - 10)	-	10	M4 ⊖	1.5 - 1.7 (13.5 - 15)
	-, +1	14	14 - 8 (2.5 - 10)	-	10	M4 ⊖	1.5 - 1.7 (13.5 - 15)
	⊕	14	14 - 8 (2.5 - 10)	-	-	M5 ⊕	2.0 - 2.5 (17.7 - 22.1)
4008	R/L1, S/L2, T/L3	14	14 - 8 (2.5 - 10)	-	10	M4 ⊖	1.5 - 1.7 (13.5 - 15)
	U/T1, V/T2, W/T3	14	14 - 8 (2.5 - 10)	-	10	M4 ⊖	1.5 - 1.7 (13.5 - 15)
	-, +1	14	14 - 8 (2.5 - 10)	-	10	M4 ⊖	1.5 - 1.7 (13.5 - 15)
	⊕	14	14 - 8 (2.5 - 10)	-	-	M5 ⊕	2.0 - 2.5 (17.7 - 22.1)
4011	R/L1, S/L2, T/L3	14	14 - 8 (2.5 - 10)	-	10	M4 ⊖	1.5 - 1.7 (13.5 - 15)
	U/T1, V/T2, W/T3	14	14 - 8 (2.5 - 10)	-	10	M4 ⊖	1.5 - 1.7 (13.5 - 15)
	-, +1	14	14 - 8 (2.5 - 10)	-	10	M4 ⊖	1.5 - 1.7 (13.5 - 15)
	⊕	12	14 - 8 (2.5 - 10)	-	-	M5 ⊕	2.0 - 2.5 (17.7 - 22.1)
4014	R/L1, S/L2, T/L3	14	14 - 8 (2.5 - 10)	-	10	M4 ⊖	1.5 - 1.7 (13.5 - 15)
	U/T1, V/T2, W/T3	12	14 - 8 (2.5 - 10)	-	10	M4 ⊖	1.5 - 1.7 (13.5 - 15)
	-, +1	12	14 - 8 (2.5 - 10)	-	10	M4 ⊖	1.5 - 1.7 (13.5 - 15)
	⊕	10	14 - 8 (2.5 - 10)	-	-	M5 ⊕	2.0 - 2.5 (17.7 - 22.1)
4021	R/L1, S/L2, T/L3	10	14 - 8 (2.5 - 10)	-	10	M4 ⊖	1.5 - 1.7 (13.5 - 15)
	U/T1, V/T2, W/T3	10	14 - 8 (2.5 - 10)	-	10	M4 ⊖	1.5 - 1.7 (13.5 - 15)
	-, +1	10	14 - 8 (2.5 - 10)	-	10	M4 ⊖	1.5 - 1.7 (13.5 - 15)
	⊕	10	14 - 8 (2.5 - 10)	-	-	M5 ⊕	2.0 - 2.5 (17.7 - 22.1)
4027	R/L1, S/L2, T/L3	10	14 - 8 (2.5 - 10)	-	10	M4 ⊖	1.5 - 1.7 (13.5 - 15)
	U/T1, V/T2, W/T3	8	14 - 8 (2.5 - 10)	-	10	M4 ⊖	1.5 - 1.7 (13.5 - 15)
	-, +1	8	14 - 8 (2.5 - 10)	-	10	M4 ⊖	1.5 - 1.7 (13.5 - 15)
	⊕	10	14 - 8 (2.5 - 10)	-	-	M5 ⊕	2.0 - 2.5 (17.7 - 22.1)

Model	Terminal	Recommended Gauge AWG, kcmil	Applicable Gauge AWG, kcmil (mm <sup>2</sup> ) *1	IP20 Applicable Gauge *2 AWG, kcmil (mm <sup>2</sup> ) *1	Wire Stripping Length *3 mm	Terminal Screw Size and Shape	Tightening Torque N·m (lbf·in)
4034	R/L1, S/L2, T/L3	8	14 - 8 (2.5 - 10)	-	10	M4 ⊖	1.5 - 1.7 (13.5 - 15)
	U/T1, V/T2, W/T3	8	14 - 8 (2.5 - 10)	-	10	M4 ⊖	1.5 - 1.7 (13.5 - 15)
	-, +1	8	14 - 8 (2.5 - 10)	-	10	M4 ⊖	1.5 - 1.7 (13.5 - 15)
	⊕	10	14 - 8 (2.5 - 10)	-	-	M5 ⊕	2.0 - 2.5 (17.7 - 22.1)
4040	R/L1, S/L2, T/L3	8	14 - 4 (2.5 - 25)	-	18	M5 ⊖	4.1 - 4.5 (36 - 40)
	U/T1, V/T2, W/T3	8	14 - 4 (2.5 - 25)	-	18	M5 ⊖	4.1 - 4.5 (36 - 40)
	-, +1	6	14 - 4 (2.5 - 25)	-	18	M5 ⊖	4.1 - 4.5 (36 - 40)
	⊕	8	14 - 4 (2.5 - 25)	-	-	M6 ⊕	4.0 - 5.0 (35.4 - 44.3)
4052	R/L1, S/L2, T/L3	6	14 - 4 (2.5 - 25)	-	18	M5 ⊖	4.1 - 4.5 (36 - 40)
	U/T1, V/T2, W/T3	6	14 - 4 (2.5 - 25)	-	18	M5 ⊖	4.1 - 4.5 (36 - 40)
	-, +1	4	14 - 4 (2.5 - 25)	-	18	M5 ⊖	4.1 - 4.5 (36 - 40)
	⊕	8	14 - 4 (2.5 - 25)	-	-	M6 ⊕	4.0 - 5.0 (35.4 - 44.3)
4065	R/L1, S/L2, T/L3	4	14 - 4 (2.5 - 25)	-	18	M5 ⊖	4.1 - 4.5 (36 - 40)
	U/T1, V/T2, W/T3	4	14 - 4 (2.5 - 25)	-	18	M5 ⊖	4.1 - 4.5 (36 - 40)
	-, +1	4	14 - 4 (2.5 - 25)	-	18	M5 ⊖	4.1 - 4.5 (36 - 40)
	⊕	6	14 - 4 (2.5 - 25)	-	-	M6 ⊕	4.0 - 5.0 (35.4 - 44.3)
4077	R/L1, S/L2, T/L3	4	8 - 2/0 (10 - 70)	-	-	M8 ⊕	5.4 - 6.0 (47.8 - 53.1)
	U/T1, V/T2, W/T3	3 or 2	8 - 2/0 (10 - 70)	-	-	M8 ⊕	5.4 - 6.0 (47.8 - 53.1)
	-, +1	2	8 - 2/0 (10 - 70)	-	-	M8 ⊕	5.4 - 6.0 (47.8 - 53.1)
	⊕	6	8 - 2/0 (10 - 70)	-	-	M8 ⊖	9.0 - 11 (79.7 - 97.4)
4096	R/L1, S/L2, T/L3	2	8 - 2/0 (10 - 70)	-	-	M8 ⊕	5.4 - 6.0 (47.8 - 53.1)
	U/T1, V/T2, W/T3	1	8 - 2/0 (10 - 70)	-	-	M8 ⊕	5.4 - 6.0 (47.8 - 53.1)
	-, +1	1	8 - 2/0 (10 - 70)	-	-	M8 ⊕	5.4 - 6.0 (47.8 - 53.1)
	⊕	6	8 - 2/0 (10 - 70)	-	-	M8 ⊖	9.0 - 11 (79.7 - 97.4)

## 4.4 Main Circuit Wiring

Model	Terminal	Recommended Gauge AWG, kcmil	Applicable Gauge AWG, kcmil (mm <sup>2</sup> ) *1	IP20 Applicable Gauge *2 AWG, kcmil (mm <sup>2</sup> ) *1	Wire Stripping Length *3 mm	Terminal Screw Size and Shape	Tightening Torque N·m (lbf·in)
4124	R/L1, S/L2, T/L3	1/0	8 - 2/0 (10 - 70)	-	-	M8	5.4 - 6.0 (47.8 - 53.1)
	U/T1, V/T2, W/T3	2/0	8 - 2/0 (10 - 70)	-	-	M8	5.4 - 6.0 (47.8 - 53.1)
	-, +1	2/0	8 - 2/0 (10 - 70)	-	-	M8	5.4 - 6.0 (47.8 - 53.1)
		4	8 - 2/0 (10 - 70)	-	-	M8	9.0 - 11 (79.7 - 97.4)
4156	R/L1, S/L2, T/L3	2/0	6 - 4/0 (16 - 95)	-	-	M8	13.5 - 15 (119.5 - 132.8)
	U/T1, V/T2, W/T3	3/0	6 - 4/0 (16 - 95)	-	-	M8	13.5 - 15 (119.5 - 132.8)
	-, +1	4/0	6 - 4/0 (16 - 95)	-	-	M8	13.5 - 15 (119.5 - 132.8)
		4	6 - 4/0 (16 - 95)	-	-	M8	9.0 - 11 (79.7 - 97.4)
4180	R/L1, S/L2, T/L3	1/0 × 2	3 - 4/0 × 2P (25 - 95 × 2P)	2/0 - 4/0 × 2P (70 - 95 × 2P)	-	M10	18 - 20 (159.3 - 177)
	U/T1, V/T2, W/T3	1/0 × 2	3 - 4/0 × 2P (25 - 95 × 2P)	2/0 - 4/0 × 2P (70 - 95 × 2P)	-	M10	18 - 20 (159.3 - 177)
	-, +1	1/0 × 2	2 - 250 × 2P (35 - 120 × 2P)	4/0 - 250 × 2P (95 - 120 × 2P)	-	M10	18 - 20 (159.3 - 177)
		3 or 2	4 - 350 (25 - 185)	-	-	M10	18 - 23 (159 - 204)
4240	R/L1, S/L2, T/L3	1/0 × 2	3 - 4/0 × 2P (25 - 95 × 2P)	2/0 - 4/0 × 2P (70 - 95 × 2P)	-	M10	18 - 20 (159.3 - 177)
	U/T1, V/T2, W/T3	1/0 × 2	3 - 4/0 × 2P (25 - 95 × 2P)	2/0 - 4/0 × 2P (70 - 95 × 2P)	-	M10	18 - 20 (159.3 - 177)
	-, +1	3/0 × 2	2 - 250 × 2P (35 - 120 × 2P)	4/0 - 250 × 2P (95 - 120 × 2P)	-	M10	18 - 20 (159.3 - 177)
		2	4 - 350 (25 - 185)	-	-	M10	18 - 23 (159 - 204)
4302	R/L1, S/L2, T/L3	3/0 × 2	3 - 4/0 × 2P (25 - 95 × 2P)	2/0 - 4/0 × 2P (70 - 95 × 2P)	-	M10	18 - 20 (159.3 - 177)
	U/T1, V/T2, W/T3	3/0 × 2	3 - 4/0 × 2P (25 - 95 × 2P)	2/0 - 4/0 × 2P (70 - 95 × 2P)	-	M10	18 - 20 (159.3 - 177)
	-, +1	4/0 × 2	2 - 250 × 2P (35 - 120 × 2P)	4/0 - 250 × 2P (95 - 120 × 2P)	-	M10	18 - 20 (159.3 - 177)
		1/0	1 - 350 (50 - 185)	-	-	M10	18 - 23 (159 - 204)
4361	R/L1, S/L2, T/L3	4/0 × 2	2/0 - 300 × 2P (70 - 150 × 2P)	250 - 300 × 2P (120 - 150 × 2P)	-	M12	31.5 - 35 (279 - 310)
	U/T1, V/T2, W/T3	4/0 × 2	2/0 - 300 × 2P (70 - 150 × 2P)	250 - 300 × 2P (120 - 150 × 2P)	-	M12	31.5 - 35 (279 - 310)
	-, +1	300 × 2	4/0 - 400 × 2P (95 - 185 × 2P)	300 - 400 × 2P (150 - 185 × 2P)	-	M12	31.5 - 35 (279 - 310)
		1/0	1 - 350 (50 - 185)	-	-	M12	32 - 40 (283 - 354)

Model	Terminal	Recommended Gauge AWG, kcmil	Applicable Gauge AWG, kcmil (mm <sup>2</sup> ) *1	IP20 Applicable Gauge *2 AWG, kcmil (mm <sup>2</sup> ) *1	Wire Stripping Length *3 mm	Terminal Screw Size and Shape	Tightening Torque N·m (lbf·in)
4414	R/L1, S/L2, T/L3	250 × 2	2/0 - 300 × 2P (70 - 150 × 2P)	250 - 300 × 2P (120 - 150 × 2P)	-	M12 	31.5 - 35 (279 - 310)
	U/T1, V/T2, W/T3	300 × 2	2/0 - 300 × 2P (70 - 150 × 2P)	250 - 300 × 2P (120 - 150 × 2P)	-	M12 	31.5 - 35 (279 - 310)
	-, +1	350 × 2	4/0 - 400 × 2P (95 - 185 × 2P)	300 - 400 × 2P (150 - 185 × 2P)	-	M12 	31.5 - 35 (279 - 310)
		1/0	1 - 350 (50 - 185)	-	-	M12 	32 - 40 (283 - 354)
4477	R/L1, S/L2, T/L3	3/0 × 4	2/0 - 300 × 4P (70 - 150 × 4P)	250 - 300 × 4P (120 - 150 × 4P)	-	M12 	31.5 - 35 (279 - 310)
	U/T1, V/T2, W/T3	3/0 × 4	2/0 - 300 × 4P (70 - 150 × 4P)	250 - 300 × 4P (120 - 150 × 4P)	-	M12 	31.5 - 35 (279 - 310)
	-, +1	4/0 × 4	3/0 - 400 × 4P (95 - 185 × 4P)	300 - 400 × 4P (150 - 185 × 4P)	-	M12 	31.5 - 35 (279 - 310)
		2/0	2/0 - 300 (70 - 150)	-	-	M12 	32 - 40 (283 - 354)
4515	R/L1, S/L2, T/L3	4/0 × 4	2/0 - 300 × 4P (70 - 150 × 4P)	250 - 300 × 4P (120 - 150 × 4P)	-	M12 	31.5 - 35 (279 - 310)
	U/T1, V/T2, W/T3	4/0 × 4	2/0 - 300 × 4P (70 - 150 × 4P)	250 - 300 × 4P (120 - 150 × 4P)	-	M12 	31.5 - 35 (279 - 310)
	-, +1	250 × 4	3/0 - 400 × 4P (95 - 185 × 4P)	300 - 400 × 4P (150 - 185 × 4P)	-	M12 	31.5 - 35 (279 - 310)
		2/0	2/0 - 300 (70 - 150)	-	-	M12 	32 - 40 (283 - 354)
4590	R/L1, S/L2, T/L3	4/0 × 4	2/0 - 300 × 4P (70 - 150 × 4P)	250 - 300 × 4P (120 - 150 × 4P)	-	M12 	31.5 - 35 (279 - 310)
	U/T1, V/T2, W/T3	250 × 4	2/0 - 300 × 4P (70 - 150 × 4P)	250 - 300 × 4P (120 - 150 × 4P)	-	M12 	31.5 - 35 (279 - 310)
	-, +1	300 × 4	3/0 - 400 × 4P (95 - 185 × 4P)	300 - 400 × 4P (150 - 185 × 4P)	-	M12 	31.5 - 35 (279 - 310)
		3/0	2/0 - 300 (70 - 150)	-	-	M12 	32 - 40 (283 - 354)
4720	R/L1, S/L2, T/L3	300 × 4	2/0 - 300 × 4P (70 - 150 × 4P)	250 - 300 × 4P (120 - 150 × 4P)	-	M12 	31.5 - 35 (279 - 310)
	U/T1, V/T2, W/T3	300 × 4	2/0 - 300 × 4P (70 - 150 × 4P)	250 - 300 × 4P (120 - 150 × 4P)	-	M12 	31.5 - 35 (279 - 310)
	-, +1	400 × 4	3/0 - 400 × 4P (95 - 185 × 4P)	300 - 400 × 4P (150 - 185 × 4P)	-	M12 	31.5 - 35 (279 - 310)
		4/0	2/0 - 300 (70 - 150)	-	-	M12 	32 - 40 (283 - 354)

\*1 The metric wire gauge values are provided as reference information from equivalent AWG sizes and not exactly the same sizes as the AWG/kcmil values. Obey local safety regulations for wire sizes and make sure that the ferrule or crimp terminals are correct for your size.

\*2 For IP20 protection, use wires that are in the range of applicable gauges.

\*3 Remove insulation from the ends of wires to expose the length of wire shown.

## 4.4 Main Circuit Wiring

### Three-Phase 208 V Class Wire Gauges and Torques (Models: 2xxxxT with Main Switch)

Model	Terminals <sup>*1</sup>	Recommended Gauge AWG, kcmil	Applicable Gauge AWG, kcmil (mm <sup>2</sup> ) <sup>*2</sup>	Wire Stripping Length <sup>*3</sup> mm	Terminal Screw Size and Shape	Tightening Torque N·m (lbf·in)
2011	R/L1, S/L2, T/L3	14	14 - 8 (2.5 - 10)	9 - 10	M3.5 	0.8 (7.0)
	U/T1, V/T2, W/T3	14	14 - 8 (2.5 - 10)	10	M4 	1.5 - 1.7 (13.5 - 15)
		12	14 - 8 (2.5 - 10)	-	M5 	2.0 - 2.5 (17.7 - 22.1)
2017	R/L1, S/L2, T/L3	12	14 - 8 (2.5 - 10)	9 - 10	M3.5 	0.8 (7.0)
	U/T1, V/T2, W/T3	10	14 - 8 (2.5 - 10)	10	M4 	1.5 - 1.7 (13.5 - 15)
		10	14 - 8 (2.5 - 10)	-	M5 	2.0 - 2.5 (17.7 - 22.1)
2024	R/L1, S/L2, T/L3	10	14 - 4 (2.5 - 25)	AWG 14 - AWG 10: 13 - 14.5 AWG 8 - AWG 4: 10 - 12 <sup>*4</sup>	M5 	2.0 (18.0)
	U/T1, V/T2, W/T3	8	14 - 8 (2.5 - 10)	10	M4 	1.5 - 1.7 (13.5 - 15)
		10	14 - 8 (2.5 - 10)	-	M5 	2.0 - 2.5 (17.7 - 22.1)
2031	R/L1, S/L2, T/L3	8	14 - 4 (2.5 - 25)	AWG 14 - AWG 10: 13 - 14.5 AWG 8 - AWG 4: 10 - 12 <sup>*4</sup>	M5 	2.0 (18.0)
	U/T1, V/T2, W/T3	8	14 - 8 (2.5 - 10)	10	M4 	1.5 - 1.7 (13.5 - 15)
		10	14 - 8 (2.5 - 10)	-	M5 	2.0 - 2.5 (17.7 - 22.1)
2046	R/L1, S/L2, T/L3	8	8 - 1/0 (10 - 50)	18 - 21	M8 	6.2 (55.0)
	U/T1, V/T2, W/T3	6	14 - 4 (2.5 - 25)	18	M5 	4.1 - 4.5 (36 - 40)
		8	14 - 4 (2.5 - 25)	-	M6 	4.0 - 5.0 (35.4 - 44.3)
2059	R/L1, S/L2, T/L3	4	8 - 1/0 (10 - 50)	18 - 21	M8 	6.2 (55.0)
	U/T1, V/T2, W/T3	4	14 - 4 (2.5 - 25)	18	M5 	4.1 - 4.5 (36 - 40)
		6	14 - 4 (2.5 - 25)	-	M6 	4.0 - 5.0 (35.4 - 44.3)
2075	R/L1, S/L2, T/L3	4	8 - 2/0 (10 - 70)	-	M8 	15 - 22 (132.8 - 194.7)
	U/T1, V/T2, W/T3	3 or 2	8 - 2/0 (10 - 70)	-	M8 	5.4 - 6.0 (47.8 - 53.1)
		6	8 - 2/0 (10 - 70)	-	M8 	9.0 - 11 (79.7 - 97.4)
2088	R/L1, S/L2, T/L3	3 or 2	8 - 2/0 (10 - 70)	-	M8 	15 - 22 (132.8 - 194.7)
	U/T1, V/T2, W/T3	2	8 - 2/0 (10 - 70)	-	M8 	5.4 - 6.0 (47.8 - 53.1)
		6	8 - 2/0 (10 - 70)	-	M8 	9.0 - 11 (79.7 - 97.4)

Model	Terminals <sup>*1</sup>	Recommended Gauge AWG, kcmil	Applicable Gauge AWG, kcmil (mm <sup>2</sup> ) <sup>*2</sup>	Wire Stripping Length <sup>*3</sup> mm	Terminal Screw Size and Shape	Tightening Torque N·m (lbf·in)
2114	R/L1, S/L2, T/L3	1/0	8 - 2/0 (10 - 70)	-	M8 	15 - 22 (132.8 - 194.7)
	U/T1, V/T2, W/T3	1/0	8 - 2/0 (10 - 70)	-	M8 	5.4 - 6.0 (47.8 - 53.1)
		6	8 - 2/0 (10 - 70)	-	M8 	9.0 - 11 (79.7 - 97.4)

\*1 You cannot use terminals - and +1 on IP55/UL Type 12 drives with Main Switch.

\*2 The metric wire gauge values are provided as reference information from equivalent AWG sizes and not exactly the same sizes as the AWG/kcmil values. Obey local safety regulations for wire sizes and make sure that the ferrule or crimp terminals are correct for your size.

\*3 Remove insulation from the ends of wires to expose the length of wire shown.

\*4 The wire stripping length is different for different wire gauges.

### Three-Phase 480 V Class Wire Gauges and Torques (Models: 4xxxxT with Main Switch)

Model	Terminal <sup>*1</sup>	Recommended Gauge AWG, kcmil	Applicable Gauge AWG, kcmil (mm <sup>2</sup> ) <sup>*2</sup>	Wire Stripping Length <sup>*3</sup> mm	Terminal Screw Size and Shape	Tightening Torque N·m (lbf·in)
4005	R/L1, S/L2, T/L3	14	14 - 8 (2.5 - 10)	9 - 10	M3.5 	0.8 (7.0)
	U/T1, V/T2, W/T3	14	14 - 8 (2.5 - 10)	10	M4 	1.5 - 1.7 (13.5 - 15)
		14	14 - 8 (2.5 - 10)	-	M5 	2.0 - 2.5 (17.7 - 22.1)
4008	R/L1, S/L2, T/L3	14	14 - 8 (2.5 - 10)	9 - 10	M3.5 	0.8 (7.0)
	U/T1, V/T2, W/T3	14	14 - 8 (2.5 - 10)	10	M4 	1.5 - 1.7 (13.5 - 15)
		14	14 - 8 (2.5 - 10)	-	M5 	2.0 - 2.5 (17.7 - 22.1)
4011	R/L1, S/L2, T/L3	14	14 - 8 (2.5 - 10)	9 - 10	M3.5 	0.8 (7.0)
	U/T1, V/T2, W/T3	14	14 - 8 (2.5 - 10)	10	M4 	1.5 - 1.7 (13.5 - 15)
		12	14 - 8 (2.5 - 10)	-	M5 	2.0 - 2.5 (17.7 - 22.1)
4014	R/L1, S/L2, T/L3	14	14 - 8 (2.5 - 10)	9 - 10	M3.5 	0.8 (7.0)
	U/T1, V/T2, W/T3	12	14 - 8 (2.5 - 10)	10	M4 	1.5 - 1.7 (13.5 - 15)
		10	14 - 8 (2.5 - 10)	-	M5 	2.0 - 2.5 (17.7 - 22.1)
4021	R/L1, S/L2, T/L3	10	14 - 4 (2.5 - 25)	AWG 14 - AWG 10: 13 - 14.5 AWG 8 - AWG 4: 10 - 12 <sup>*4</sup>	M5 	2.0 (18.0)
	U/T1, V/T2, W/T3	10	14 - 8 (2.5 - 10)	10	M4 	1.5 - 1.7 (13.5 - 15)
		10	14 - 8 (2.5 - 10)	-	M5 	2.0 - 2.5 (17.7 - 22.1)

## 4.4 Main Circuit Wiring

Model	Terminal <sup>*1</sup>	Recommended Gauge AWG, kcmil	Applicable Gauge AWG, kcmil (mm <sup>2</sup> ) <sup>*2</sup>	Wire Stripping Length <sup>*3</sup> mm	Terminal Screw Size and Shape	Tightening Torque N·m (lbf·in)
4027	R/L1, S/L2, T/L3	10	14 - 4 (2.5 - 25)	AWG 14 - AWG 10: 13 - 14.5 AWG 8 - AWG 4: 10 - 12 <sup>*4</sup>	M5	2.0 (18.0)
	U/T1, V/T2, W/T3	8	14 - 8 (2.5 - 10)	10	M4	1.5 - 1.7 (13.5 - 15)
		10	14 - 8 (2.5 - 10)	-	M5	2.0 - 2.5 (17.7 - 22.1)
4034	R/L1, S/L2, T/L3	8	14 - 4 (2.5 - 25)	AWG 14 - AWG 10: 13 - 14.5 AWG 8 - AWG 4: 10 - 12 <sup>*4</sup>	M5	2.0 (18.0)
	U/T1, V/T2, W/T3	8	14 - 8 (2.5 - 10)	10	M4	1.5 - 1.7 (13.5 - 15)
		10	14 - 8 (2.5 - 10)	-	M5	2.0 - 2.5 (17.7 - 22.1)
4040	R/L1, S/L2, T/L3	8	8 - 1/0 (10 - 50)	18 - 21	M8	6.2 (55.0)
	U/T1, V/T2, W/T3	8	14 - 4 (2.5 - 25)	18	M5	4.1 - 4.5 (36 - 40)
		8	14 - 4 (2.5 - 25)	-	M6	4.0 - 5.0 (35.4 - 44.3)
4052	R/L1, S/L2, T/L3	6	8 - 1/0 (10 - 50)	18 - 21	M8	6.2 (55.0)
	U/T1, V/T2, W/T3	6	14 - 4 (2.5 - 25)	18	M5	4.1 - 4.5 (36 - 40)
		8	14 - 4 (2.5 - 25)	-	M6	4.0 - 5.0 (35.4 - 44.3)
4065	R/L1, S/L2, T/L3	4	8 - 1/0 (10 - 50)	18 - 21	M8	6.2 (55.0)
	U/T1, V/T2, W/T3	4	14 - 4 (2.5 - 25)	18	M5	4.1 - 4.5 (36 - 40)
		6	14 - 4 (2.5 - 25)	-	M6	4.0 - 5.0 (35.4 - 44.3)
4077	R/L1, S/L2, T/L3	4	8 - 2/0 (10 - 70)	-	M8	15 - 22 (132.8 - 194.7)
	U/T1, V/T2, W/T3	3 or 2	8 - 2/0 (10 - 70)	-	M8	5.4 - 6.0 (47.8 - 53.1)
		6	8 - 2/0 (10 - 70)	-	M8	9.0 - 11 (79.7 - 97.4)
4096	R/L1, S/L2, T/L3	2	8 - 2/0 (10 - 70)	-	M8	15 - 22 (132.8 - 194.7)
	U/T1, V/T2, W/T3	1	8 - 2/0 (10 - 70)	-	M8	5.4 - 6.0 (47.8 - 53.1)
		6	8 - 2/0 (10 - 70)	-	M8	9.0 - 11 (79.7 - 97.4)

\*1 You cannot use terminals - and +1 on IP55/UL Type 12 drives with Main Switch.

\*2 The metric wire gauge values are provided as reference information from equivalent AWG sizes and not exactly the same sizes as the AWG/kcmil values. Obey local safety regulations for wire sizes and make sure that the ferrule or crimp terminals are correct for your size.

\*3 Remove insulation from the ends of wires to expose the length of wire shown.

\*4 The wire stripping length is different for different wire gauges.

## ◆ Main Circuit Terminal and Motor Wiring

This section outlines the various steps, precautions, and checkpoints to wire the main circuit terminals and motor terminals.

**WARNING! Fire Hazard.** Do not connect main power supply wiring to drive motor terminals U/T1, V/T2, and W/T3. Connect main power supply wiring to main circuit input terminals R/L1, S/L2, and T/L3. Incorrect wiring can cause serious injury or death from fire.

**WARNING! Sudden Movement Hazard.** Make sure that you align the phase order for the drive and motor when you connect the motor to drive output terminals U/T1, V/T2, and W/T3. If the phase order is incorrect, it can cause the motor to run in reverse. If the motor accidentally runs in reverse, it can cause serious injury or death.

**NOTICE:** Do not connect phase-advancing capacitors, LC/RC noise filters, or leakage breakers (GFCI) to the motor circuit. If you connect these devices to the output circuits, it can cause damage to the drive and connected equipment.

### ■ Cable Length Between Drive and Motor

When the wiring between the drive and the motor is too long, voltage drop along the motor cable can decrease motor torque, usually at low frequency output. If you use a long motor cable to connect motors in parallel, this is also a problem. Drive output current increases when the leakage current from the cable increases. An increase in leakage current can cause overcurrent and decrease the precision of current detection.

Use L8-27 to adjust the drive carrier frequency. If the system configuration makes the motor wiring distance more than 100 m (328 ft), do not use metal conduits or use isolated cables for each phase to decrease stray capacitance.

**Table 4.6 Carrier Frequency against Cable Length Between Drive and Motor**

Wiring Distance between the Drive and Motor	100 m (328 ft) Maximum
Carrier Frequency	2 kHz or less

**Note:**

- For drive models 2011, 2017 and 4005 to 4014:
  - Shorter than 10 m: No carrier frequency derating from default setting (5 kHz) is necessary.
  - 10 m to 50 m: 5 kHz to 2 kHz is necessary.
  - 50 m and longer: 2 kHz
- To set the carrier frequency in a drive that is operating more than one motor, calculate the cable length as the total distance of wiring to all connected motors.
- When you connect to a PM motor, it can be necessary to adjust the overcurrent detection.

### ■ Ground Wiring

Follow these precautions to wire the ground for one drive or a series of drives.

**WARNING! Electrical Shock Hazard.** Make sure that the protective ground wire complies with technical standards and local safety regulations. The IEC/EN 61800-5-1:2007 standard specifies that you must wire the power supply to automatically de-energize when the protective ground wire disconnects. You can also connect a protective ground wire that has a minimum cross-sectional area of 10mm<sup>2</sup> (copper wire) or 16 mm<sup>2</sup> (aluminum wire). For drive models on which you cannot use a protective ground wire of 10 mm<sup>2</sup> or more, install two protective ground wires that have the same cross-sectional area. If you do not obey the standards and regulations, it can cause serious injury or death. The leakage current of the drive will be more than 3.5 mA.

**WARNING! Electrical Shock Hazard.** Ground the neutral point on the power supply of the drives to comply with the EMC Directive before you turn on the EMC filter. If you turn ON the EMC filter, but you do not ground the neutral point, it can cause serious injury or death.

**WARNING! Electrical Shock Hazard.** Use a ground wire that complies with technical standards on electrical equipment and use the minimum length of ground wire. Incorrect equipment grounding can cause serious injury or death from dangerous electrical potentials on the equipment chassis.

**Note:**

- Only use the drive grounding wire to ground the drive. Do not share the ground wire with other devices, for example, welding machines or large-current electrical equipment. Incorrect equipment grounding can cause incorrect operation of drives and equipment.
- To connect more than one drive to the same grounding circuit, use the instructions in the manual. Incorrect equipment grounding can cause incorrect operation of drives and equipment.

When you install more than one drive, refer to [Figure 4.41](#). Do not loop the grounding wire.

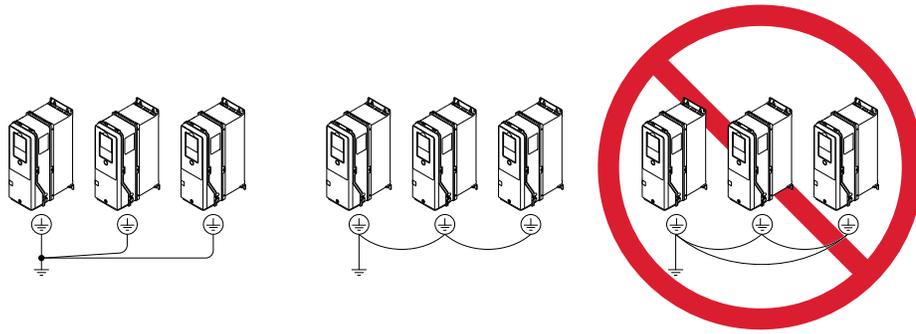


Figure 4.41 Wiring More than One Drive



### ■ Wiring the Main Circuit Terminal Block

**WARNING!** *Electrical Shock Hazard. Before you wire the main circuit terminals, make sure that MCCB and MC are OFF. If you touch electrical equipment when MCCB and MC are ON, it can cause serious injury or death.*

### ■ Main Circuit Configuration

The figures in this section show the different schematics of the drive main circuit. The connections change when the drive capacity changes. The DC power supply for the main circuit also supplies power to the control circuit.

**NOTICE:** *Do not use the negative DC bus terminal “-” as a ground terminal. This terminal is at high DC voltage potential. Incorrect wiring connections can cause damage to the drive.*

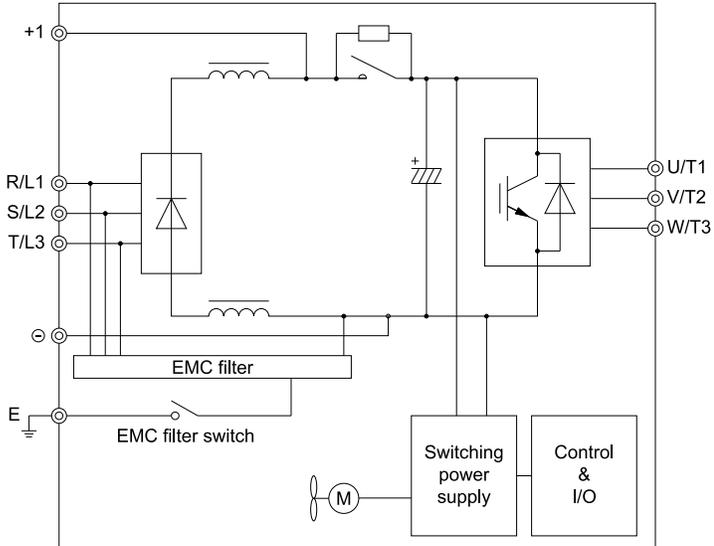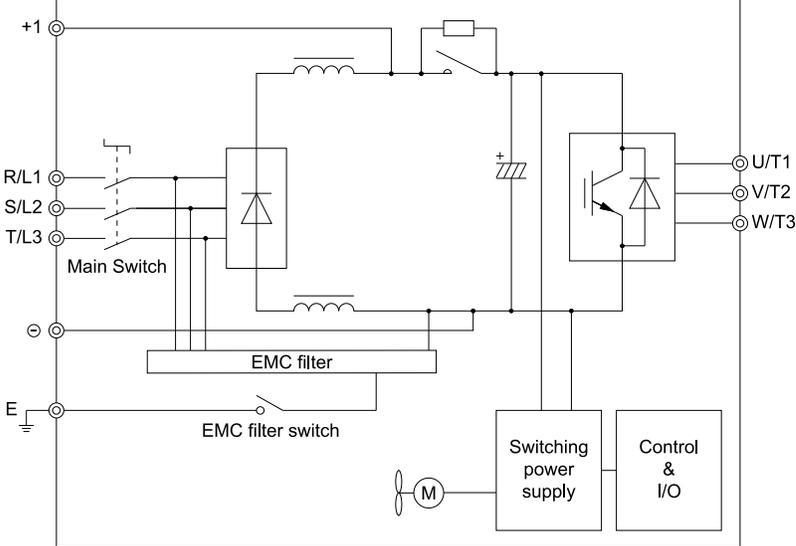Model	Figure
<p>2xxxxB/F/V/W and 4xxxxB/F/V/W without Main Switch 2011 to 2396 4005 to 4720</p>	 <p><b>Note:</b> Drive models 2211 to 2396 and 4180 to 4720 do not have an EMC filter switch or a built-in EMC filter.</p>
<p>2xxxxT and 4xxxxT with Main Switch 2011 to 2114 4005 to 4096</p>	 <p><b>Note:</b> For drive models 2xxxxT and 4xxxxT with Main Switch, you cannot use terminals - and +1.</p>

### ◆ Protection of Main Circuit Terminals


When you wire the main circuit terminals, do not let cable ends go near terminals or the drive. If you use crimped terminals, make sure that you also use insulation caps.

# 4.5 Control Circuit Wiring

This section gives information about how to correctly wire the control circuit.

## ◆ Control Circuit Connection Diagram

Wire the drive control circuit as shown in Figure 4.42.

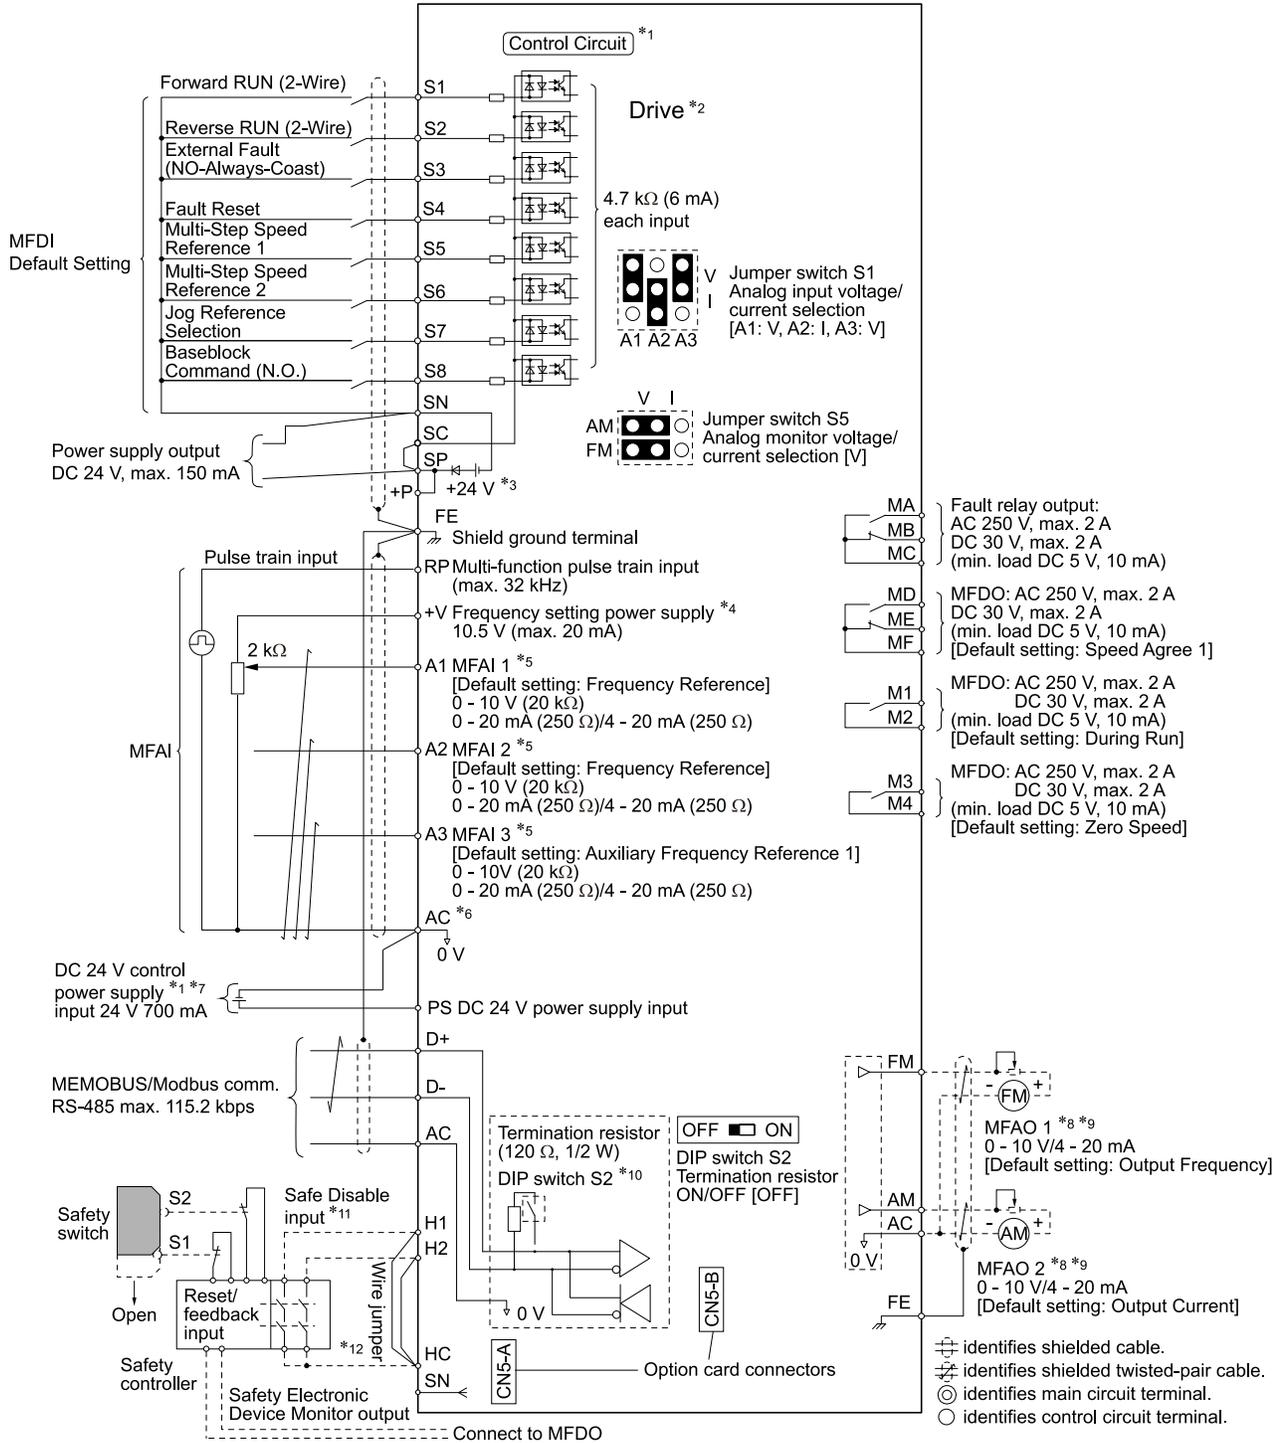

**Figure 4.42 Control Circuit Connection Diagram**

\*1 Connect a 24 V power supply to terminals PS-AC to operate the control circuit while the main circuit power supply is OFF.

\*2 Refer to *Wiring the Control Circuit Terminal on page 336* for control circuit wiring.

- \*3 To set the MFDI power supply (Sinking/Sourcing Mode or internal/external power supply), install or remove a jumper between terminals SC-SP or SC-SN depending on the application.
- NOTICE: Damage to Equipment.** Do not close the circuit between terminals SP-SN. If you close the circuits between terminals SC-SP and terminals SC-SN at the same time, it will cause damage to the drive.
- Sinking Mode, Internal power supply: Install the jumper to close the circuit between terminals SC-SP.  
**NOTICE: Damage to Equipment.** Do not close the circuit between terminals SC-SN. If you close the circuits between terminals SC-SP and terminals SC-SN at the same time, it will cause damage to the drive.
  - Sourcing Mode, Internal power supply: Install the jumper to close the circuit between terminals SC-SN.  
**NOTICE: Damage to Equipment.** Do not close the circuit between terminals SC-SP. If you close the circuits between terminals SC-SP and terminals SC-SN at the same time, it will cause damage to the drive.
  - External power supply: Remove the jumper from the MFDI terminals. It is not necessary to close the circuit between terminals SC-SP and terminals SC-SN.
- \*4 The maximum output current capacity for terminal +V on the control circuit is 20 mA.  
**NOTICE: Damage to Equipment.** Do not install a jumper between terminals +V and AC. A closed circuit between these terminals will cause damage to the drive.
- \*5 Jumper S1 sets terminals A1, A2, and A3 for voltage or current input signal. The default setting for S1 is voltage input (“V” side) for A1 and A3 and current input (“I” side) for A2.
- \*6 **NOTICE: Do not ground the AC control circuit terminals and only connect the AC terminals according to the product instructions. If you connect the AC terminals incorrectly, it can cause damage to the drive.**
- \*7 Connect the positive lead from an external 24 Vdc power supply to terminal PS and the negative lead to terminal AC.  
**NOTICE: Connect terminals PS and AC correctly for the 24 V power supply. If you connect the wires to the incorrect terminals, it will cause damage to the drive.**
- \*8 Use multi-function analog monitor outputs with analog frequency meters, ammeters, voltmeters, and wattmeters. Do not use monitor outputs with feedback-type signal devices.
- \*9 Jumper switch S5 sets terminal FM and AM for voltage or current output. The default setting for S5 is voltage output (“V” side).
- \*10 Set DIP switch S2 to “ON” to enable the termination resistor in the last drive in a MEMOBUS/Modbus network.
- \*11 Use only Sourcing Mode for Safe Disable input.
- \*12 Disconnect the jumpers between H1 and HC and H2 and HC to use the Safe Disable input.

## ◆ Control Circuit Terminal Block Functions

*Hx-xx parameters* set functions for the multi-function input and output terminals.

**WARNING! Sudden Movement Hazard.** Correctly wire and test all control circuits to make sure that the control circuits operate correctly. If you use a drive that has incorrect control circuit wiring or operation, it can cause death or serious injury.

**WARNING! Sudden Movement Hazard.** Check the I/O signals and the external sequences for the drive before you set the Application Preset function. When you set the Application Preset function (A1-06 ≠ 0), it changes the I/O terminal functions for the drive and it can cause equipment to operate unusually. This can cause serious injury or death.

**NOTICE: Damage to Equipment.** Do not energize and de-energize the drive more frequently than one time each 30 minutes. If you frequently energize and de-energize the drive, it can cause drive failure.

**NOTICE: Damage to Equipment.** Do not cycle the Main Switch more than 6000 times. If you cycle the Main Switch more times than the limit, it will cause the contact failure, or you cannot open or close the Main Switch.

**NOTICE: Damage to Equipment.** Make sure that you stop the motor before you turn ON/OFF the Main Switch. If you turn ON/OFF the Main Switch during run, it can cause Main Switch failure.

## ■ Input Terminals

Refer to [Table 4.7](#) for a list of input terminals and functions.

**Table 4.7 Multi-function Input Terminals**

Type	Terminal	Name (Default)	Function (Signal Level)
MFDI	S1	MFDI selection 1 (ON: Forward RUN (2-Wire) OFF: Stop)	Multi-Function Digital Input • Photocoupler • 24 V, 6 mA <b>Note:</b> Install the wire jumpers between terminals SC-SP and SC-SN to set the MFDI power supply (sinking/sourcing mode or internal/external power supply). • Sinking Mode: Install a jumper between terminals SC and SP. <b>NOTICE: Damage to Equipment. Do not close the circuit between terminals SC-SN. If you close the circuits between terminals SC-SP and terminals SC-SN at the same time, it will cause damage to the drive.</b> • Sourcing Mode: Install a jumper between terminals SC and SN. <b>NOTICE: Damage to Equipment. Do not close the circuit between terminals SC-SP. If you close the circuits between terminals SC-SP and terminals SC-SN at the same time, it will cause damage to the drive.</b> • External power supply: No jumper necessary between terminals SC-SN and terminals SC-SP.
	S2	MFDI selection 2 (ON: Reverse RUN (2-Wire) OFF: Stop)	
	S3	MFDI selection 3 (External Fault (NO-Always-Coast))	
	S4	MFDI selection 4 (Fault Reset)	
	S5	MFDI selection 5 (Multi-Step Speed Reference 1)	
	S6	MFDI selection 6 (Multi-Step Speed Reference 2)	
	S7	MFDI selection 7 (Jog Reference Selection)	
	S8	MFDI selection 8 (Baseblock Command (N.O.))	
	SN	MFDI power supply 0 V	
	SC	MFDI selection common	
SP	MFDI power supply +24 Vdc		
Safe Disable Input	H1	Safe Disable input 1	Safe Disable Input Remove the jumper between terminals H1-HC and H2-HC to use the Safe Disable input. • 24 V, 6 mA • ON: Normal operation • OFF: Coasting motor • Internal impedance 4.7 kΩ • OFF Minimum OFF time of 2 ms. <b>NOTICE: Do not close the circuit between terminals HC and SN. A closed circuit between these terminals will cause damage to the drive.</b>
	H2	Safe Disable input 2	
	HC	Safe Disable function common	
Master Frequency Reference	RP	Multi-function pulse train input (Frequency Reference)	• Response frequency: 0 Hz to 32 Hz • H level duty: 30% to 70% • H level voltage: 3.5 V to 13.2 V • L level voltage: 0.0 V to 0.8 V • Input impedance: 3 kΩ
	+V	Power supply for frequency setting	Power Supply for Multi-Function Analog Input • 10.5 V (allowable current 20 mA maximum)
	A1	MFAI 1 (Frequency Reference)	Voltage input or current input Select terminal A1 with Jumper switch S1 and H3-01 [Terminal A1 Signal Level Select]. • 0 V to 10 V/100% (input impedance: 20 kΩ) • 4 mA to 20 mA/100%, 0 mA to 20 mA/100% (input impedance: 250 Ω)
	A2	MFAI 2 (Combined to terminal A1)	Voltage input or current input Select terminal A2 with Jumper switch S1 and H3-09 [Terminal A2 Signal Level Select] • 0 V to 10 V/100% (input impedance: 20 kΩ) • 4 mA to 20 mA/100%, 0 mA to 20 mA/100% (input impedance: 250 Ω)
	A3	MFAI 3 (Auxiliary Frequency Reference 1)	Voltage input or current input Select terminal A3 with Jumper switch S1 and H3-05 [Terminal A3 Signal Level Select] • 0 V to 10 V/100% (input impedance: 20 kΩ) • 4 mA to 20 mA/100%, 0 mA to 20 mA/100% (input impedance: 250 Ω)
	AC	Frequency reference common	Signal Ground for Multi-Function Analog Input • 0 V
	FE	Connecting shielded cable	Frame Earth

■ **Output Terminals**

Refer to [Table 4.8](#) and [Table 4.9](#) for a list of output terminals and functions.

Table 4.8 Control Circuit Output Terminals

Type	Terminal	Name (Default)	Function (Signal Level)
Fault Relay Output	MA	N.O. output (Fault)	Drive Fault Signal Output <ul style="list-style-type: none"> <li>Relay output</li> <li>30 Vdc, 10 mA to 2 A</li> <li>250 Vac, 10 mA to 2 A</li> <li>Minimum load: 5 V, 10 mA (Reference value)</li> </ul>
	MB	N.C. output (Fault)	
	MC	Digital output common	
MFDO	M1	MFDO (During Run)	Multi Function Digital Output <ul style="list-style-type: none"> <li>Relay output</li> <li>30 Vdc, 10 mA to 2 A</li> <li>250 Vac, 10 mA to 2 A</li> <li>Minimum load: 5 V, 10 mA (Reference value)</li> </ul> <b>Note:</b> Do not set functions that frequently switch ON/OFF to MFDO (M1 to M4) because this will decrease the performance life of the relay contacts. Yaskawa estimates switching life at 200,000 times (assumes 1 A, resistive load).
	M2		
	M3		
	M4	MFDO (Zero Speed)	
	MD	N.O. output (Speed Agree 1)	
	ME	N.C. output (Speed Agree 1)	
	MF	Digital output common	

Table 4.9 Control Circuit Monitor Output Terminals

Type	Terminal	Name (Default)	Function (Signal Level)
Monitor Output	FM	MFAO 1 (Output frequency)	Multi Function Analog Output Select voltage or current output. <ul style="list-style-type: none"> <li>0 V to 10 V/0% to 100%</li> <li>4 mA to 20 mA (receiver recommended impedance: 250 Ω)</li> </ul> <b>Note:</b> Select with jumper switch S5 and H4-07 [Terminal FM Signal Level Select] or H4-08 [Terminal AM Signal Level Select].
	AM	MFAO 2 (Output current)	
	AC	Monitor common	
External Power Supply Output	+P	External power supply	0 V <ul style="list-style-type: none"> <li>Power supply for external devices.</li> <li>24 V (150 mA maximum)</li> </ul>

## External Power Supply Input Terminals


Refer to Table 4.10 for a list of the functions of the external power supply input terminals.

Table 4.10 External Power Supply Input Terminals

Type	Terminal	Name (Default)	Function
External Power Supply Input Terminals	PS	External 24 V power supply input	Supplies backup power to the drive control circuit, keypad, and option board. 21.6 VDC to 26.4 VDC, 700 mA
	AC	External 24 V power supply ground	0 V

### Alarm Display When You Use External 24 V Power Supply

When you use an external 24 V power supply, the drive detects an alarm as shown in Table 4.11 if you set o2-23 [External 24V Powerloss Detection] and o2-26 [Alarm Display at Ext. 24V Power] for the main circuit power supply. Set the alarm display as necessary.

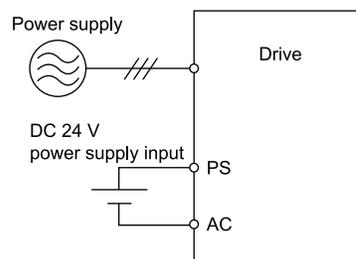

**Table 4.11 Power Supply and Alarm Display**

Main Circuit Power Supply	External 24 V Power Supply	o2-23 [External 24V Powerloss Detection]	o2-26 [Alarm Display at Ext. 24V Power]	Alarm Display
ON	ON	-	-	-
ON	OFF	0 [Disabled]	-	-
		1 [Enabled]	-	L24v [Loss of External Power 24 Supply]
OFF	ON	-	0 [Disabled]	"Ready" LED light flashes quickly
		-	1 [Enabled]	EP24v [External Power 24V Supply]

**Operation When Using External 24 V Power Supply**

To operate the drive, de-energize the main circuit power supply and connect an external 24 V power supply to terminals PS-AC.

Function	Operation	Solution
Keypad	The keypad operates the same as when the main circuit power supply is ON. The drive will not detect oPr [Keypad Connection Fault].	-
Data Log	The data log function operates the same as when the main circuit power supply is ON.	-
Communications by Communication Option or MEMOBUS/Modbus Communication Terminals	Communication operates the same as when the main circuit power supply is ON.	-
MFAI	MFAI operates the same as when the main circuit power supply is ON.	-
MFAO	MFAO operates the same as when the main circuit power supply is ON.	-
MFDI	MFDI does not operate when the main circuit power supply of the drive is OFF.	Connect the external 24 V power supply to the MFDI selection common terminal (SC). *1
MFDO Multi-Function Photocoupler Output Fault Relay Output Terminal	MFDO operates the same as when the main circuit power supply is ON. The operations of MFDO terminals and fault relay output terminals set for H2-xx = E [Fault] are different for different drive software versions.	-
Pulse Train Input	Pulse train input operates the same as when the main circuit power supply is ON.	-
Analog Input Option (AI-A3)	Analog input options operate the same as when the main circuit power supply is ON.	-
Analog Output Option (AO-A3)	Analog output options operate the same as when the main circuit power supply is ON.	-
Digital Input Option (DI-A3)	Digital input options do not operate when the main circuit power supply of the drive is OFF.	Connect the external 24 V power supply to the Input signal common terminal (SC). *1
Digital Output Option (DO-A3)	Digital output options operate the same as when the main circuit power supply is ON.	-


\*1 When you use MFDI and a Digital Input option (DI-A3), wire the terminals as shown in [Wiring MFDI Terminals on page 332](#) or [Wiring Digital Input Option \(DI-A3\) on page 333](#).

**Note:**

Yaskawa recommends that you use different external power supplies for the external power supply input terminals (PS-AC) and MFDI selection common terminal (SC)/Input signal common terminal (SC).

**Wiring MFDI Terminals**

If you de-energize the main circuit power supply, the MFDI terminals will not operate, even when you connect the external 24 V power supply to terminals PS-AC. When you set N.O. functions to H1-xx [MFDI Function Select], MFDI terminals always deactivate. When you set N.C. functions, MFDI terminals always activate. Connect the external 24 V power supply to the MFDI selection common terminal (SC).

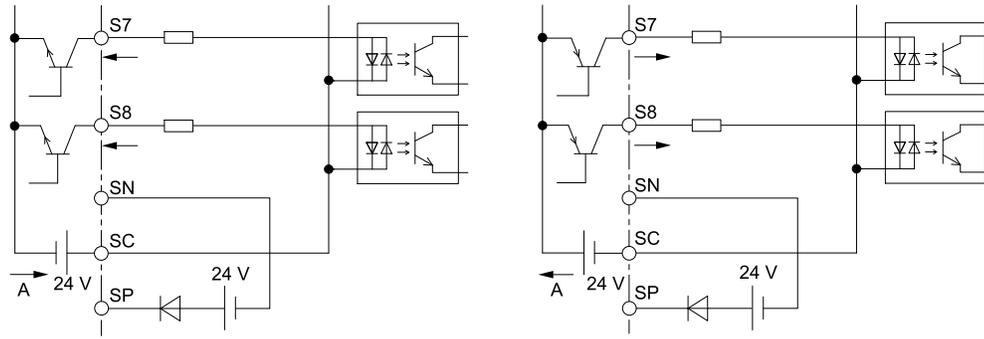


A - External power supply

Figure 4.43 Wiring MFDI Terminals

**Wiring Digital Input Option (DI-A3)**

If you de-energize the main circuit power supply, the Digital Input Option terminals will not operate, even when you connect the external 24 V power supply to terminals PS-AC. When you set N.O. functions to *F3-xx [Terminal Dx Function Selection]*, the input terminals on the digital input option always deactivate. When you set N.C. functions, the input terminals on the digital input option always activate. Connect the external 24 V power supply to the Input signal common terminal (SC).

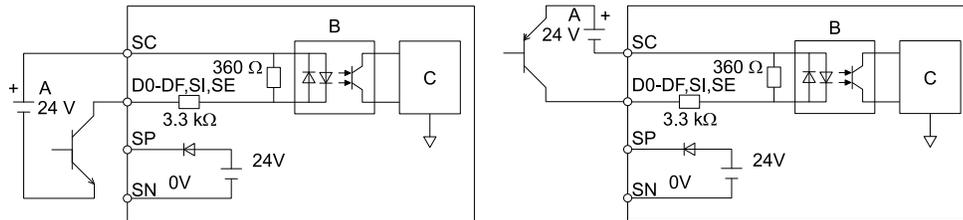

A - External power supply  
B - Photocoupler

C - Signal processor

Figure 4.44 Wiring Digital Input Option (DI-A3)

■ **Serial Communication Terminals**


Refer to [Table 4.12](#) for a list of serial communication terminals and functions.

Table 4.12 Serial Communication Terminals

Type	Terminal	Terminal Name	Function (Signal Level)	
Serial Communication	D+	Communication input/output (+)	MEMOBUS/Modbus communications Use an RS-485 cable to connect the drive.	<ul style="list-style-type: none"> <li>RS-485</li> <li>MEMOBUS/Modbus communications: Maximum 115.2 kbps</li> </ul>
	D-	Communication output (-)	<b>Note:</b> Set DIP switch S2 to ON to enable the termination resistor in the last drive in a MEMOBUS/Modbus network.	
	AC	Signal ground	0 V	
	FE	Option card ground		

◆ **Control Circuit Terminal Configuration**

The control circuit terminals are in the positions shown in [Figure 4.45](#).

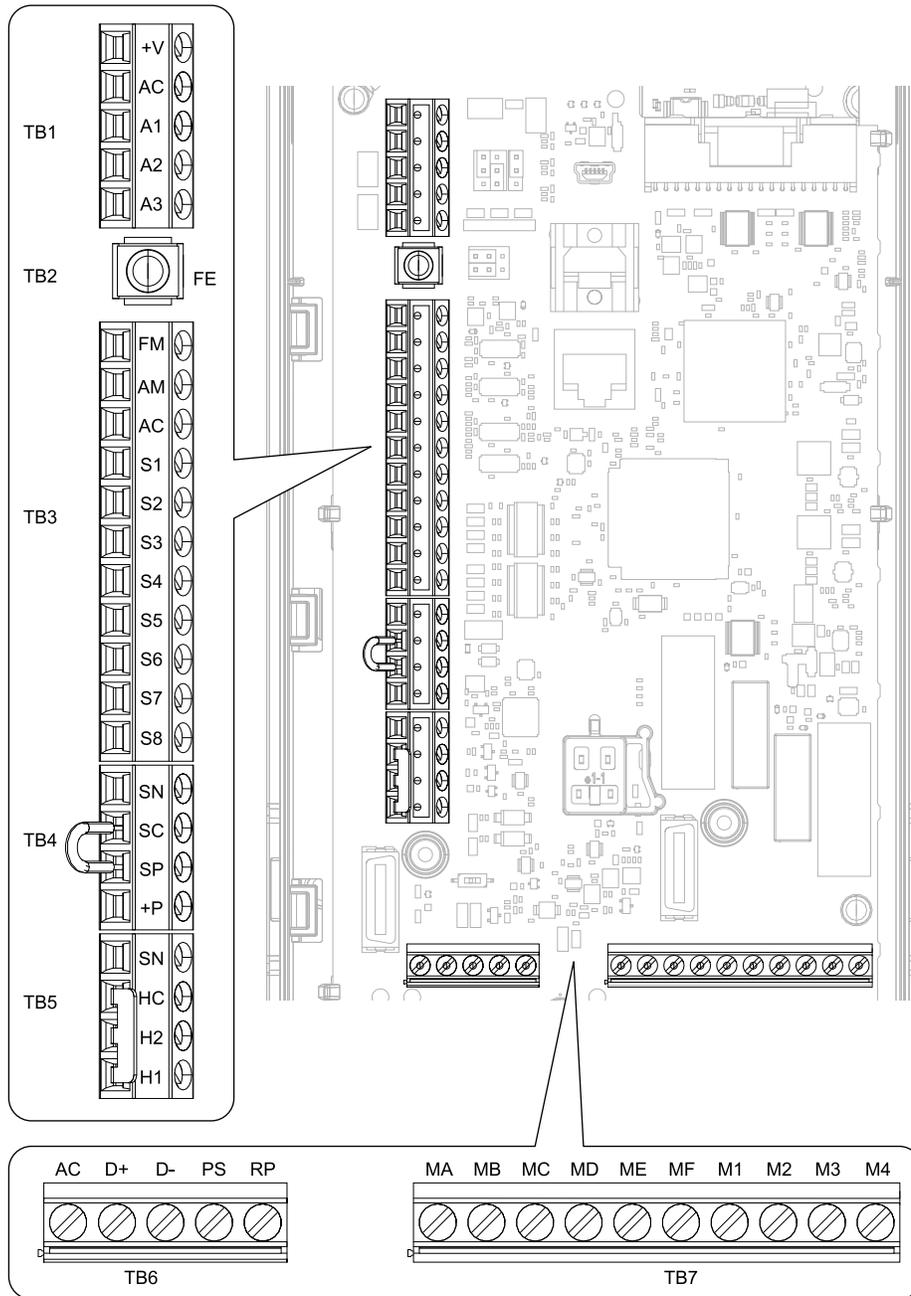

**Figure 4.45 Control Circuit Terminal Arrangement**

The tightening torque for the terminal screws is shown on the reverse side or the lower front side of the front cover.

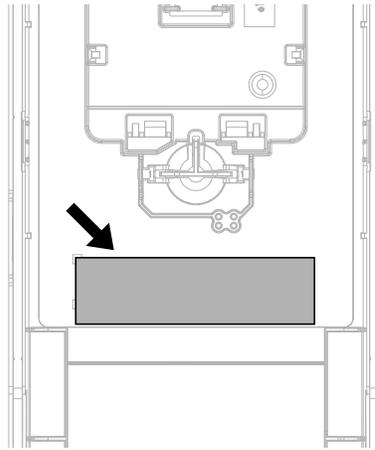


Figure 4.46 Tightening Torque Display Location (Reverse Side of Front Cover)

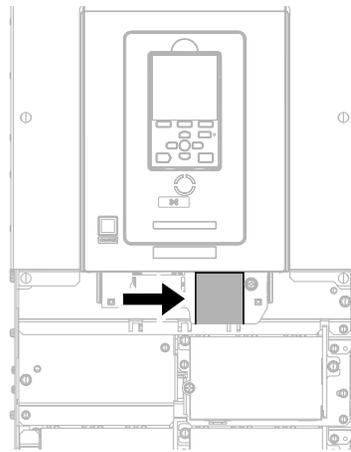


Figure 4.47 Tightening Torque Display Location (Lower Front Side of Front Cover)

### ■ Control Circuit Wire Gauges and Tightening Torques

Use the tables in this section to select the correct wires. Use shielded wire to wire the control circuit terminal block. Use crimp ferrules on the wire ends to make the wiring procedure easier and more reliable.

Table 4.13 Control Circuit Wire Gauges and Tightening Torques

Terminal Block	Terminal	Screw Size	Tightening Torque N·m (lbf·in)	Bare Wire		Crimp Ferrule	
				Recommended Gauge mm <sup>2</sup> (AWG)	Applicable Gauge mm <sup>2</sup> (AWG)	Recommended Gauge mm <sup>2</sup> (AWG)	Applicable Gauge mm <sup>2</sup> (AWG)
TB1	+V, AC, A1, A2, A3	M3	0.5 - 0.6 (4.4 - 5.3)	0.75 (18)	Stranded wire: 0.25 - 1.5 (24 - 16) Solid wire: 0.25 - 1.5 (24 - 16)	0.75 (18)	0.25 - 1.5 (24 - 16)
TB3	FM, AM, AC, S1 - S8						
TB4	SN, SC, SP, +P						
TB5	SN, HC, H1, H2						
TB6	AC, D+, D-, PS, RP						
TB7	MA, MB, MC, MD, ME, MF, M1 - M4						
TB2	FE		1.0 - 1.2 (8.85 - 10.62)	0.75 (18)	Stranded wire: 0.12 - 0.75 (26 - 18) Solid wire: 0.2 - 1.5 (26 - 16)	0.75 (18)	0.25 - 1.5 (24 - 16)

### Crimp Ferrules

Attach an insulated sleeve when you use crimp ferrules. Refer to [Table 4.14](#) for the recommended external dimensions and model numbers of the crimp ferrules.

Use the CRIMPFOX 6, a crimping tool made by PHOENIX CONTACT.

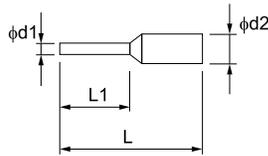


Figure 4.48 External Dimensions of Crimp Ferrules

Table 4.14 Crimp Ferrule Models and Sizes

Wire Gauge mm <sup>2</sup> (AWG)	Model	L (mm)	L1 (mm)	φd1 (mm)	φd2 (mm)
0.25 (24)	AI 0.25-8YE	12.5	8	0.8	2.0
0.34 (22)	AI 0.34-8TQ	12.5	8	0.8	2.0
0.5 (20)	AI 0.5-8WH AI 0.5-8OG	14	8	1.1	2.5
0.75 (18)	AI 0.75-8 GY	14	8	1.3	2.8

### ◆ Wiring the Control Circuit Terminal

**WARNING! Electrical Shock Hazard.** Do not remove covers or touch circuit boards while the drive is energized. If you touch the internal components of an energized drive, it can cause serious injury or death.

**NOTICE:** Do not let wire shields touch other signal lines or equipment. Insulate the wire shields with electrical tape or shrink tubing. If you do not insulate the wire shields, it can cause a short circuit and damage the drive.

**Note:**

- Isolate control circuit wiring from main circuit wiring (terminals R/L1, S/L2, T/L3, U/T1, V/T2, W/T3, -, +1) and other high-power wiring. If the control circuit wires are adjacent to the main circuit wires, electrical interference can cause the drive or the devices around the drive to malfunction.
- Isolate contact output terminals MA, MB, MC and M1-M4, MD, ME, MF from other control circuit wiring. If the output terminal wires are adjacent to other control circuit wires, electrical interference can cause the drive or devices around the drive to malfunction.
- Use a UL Listed Class 2 Power Supply to connect external power to the control terminals. If the power supply for peripheral devices is incorrect, it can cause a decrease in drive performance.
- Connect the shield of shielded cable to the applicable ground terminal. If the grounding is not correct, electrical interference can cause the drive or devices around the drive to malfunction.


Correctly ground the drive terminals and complete main circuit wiring before you wire the control circuit. Remove the keypad and front cover.

1. Refer to [Figure 4.49](#) and wire the control circuit.

**WARNING! Fire Hazard.** Tighten all terminal screws to the correct tightening torque. Connections that are too loose or too tight can cause incorrect operation and damage to the drive. Incorrect connections can also cause death or serious injury from fire.

**Note:**

- Use shielded wires and shielded twisted-pair wires for the control circuit terminal wiring. If the grounding is not correct, electrical interference can cause the drive or devices around it to malfunction.
- Do not use control circuit wiring that is longer than 50 m (164 ft) to supply the frequency reference with an analog signal from a remote source. Wiring that is too long can cause unsatisfactory system performance.

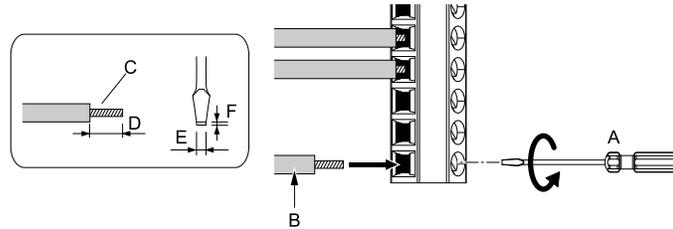

- A - Loosen the screws and put the wire into the opening on the terminal block.
- B - Wire with a crimp ferrule attached, or use wire that is not soldered with the core wires lightly twisted.
- C - Pull back the shielding and lightly twist the end with your fingers to keep the ends from fraying.
- D - If you do not use crimp ferrules, remove approximately 5.5 mm (0.21 in) of the covering at the end of the wire.
- E - Blade width of 2.5 mm (0.1 in) or less
- F - Blade depth of 0.4 mm (0.01 in) or less


**Figure 4.49** Wiring Procedure for the Control Circuit

**WARNING! Fire Hazard.** Tighten all terminal screws to the correct tightening torque. Connections that are too loose or too tight can cause incorrect operation and damage to the drive. Incorrect connections can also cause death or serious injury from fire.

**NOTICE:** Do not solder the core wire. Soldered wire connections can become loose over time and cause unsatisfactory drive performance.

**Note:**

- Refer to [Figure 4.50](#) for information to prepare terminal ends of the shielded wire.
- Connect the shield to terminal FE of the drive.

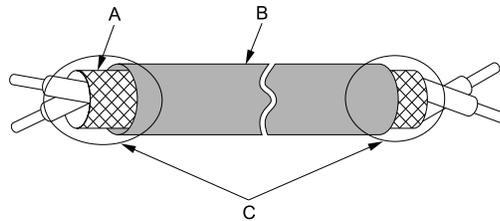


- A - Connect the shield to terminal FE of the drive.
- B - Sheath
- C - Insulate with electrical tape or shrink tubing.

**Figure 4.50** Prepare the Ends of Shielded Wire

**Note:**


If you use multi-conductor shielded cable that is too thick to put through the hook on the drive, you can remove the cable sheath.

**NOTICE: Damage to Equipment.** When you remove the cable sheath, also remove the shield. If you keep the shield on the wire, it can cause a short circuit and damage to the drive.

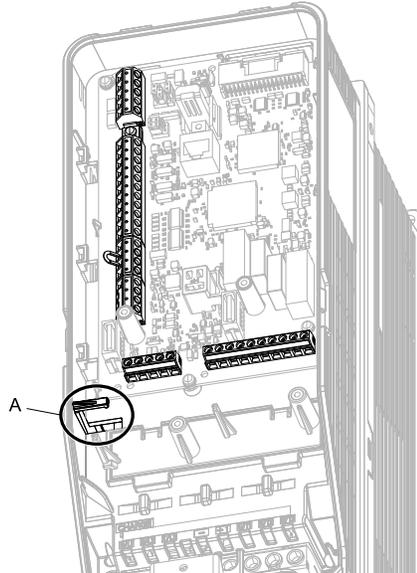

**A - Hook**

2. Put the cables through the clearance of the drive and knock-out holes.

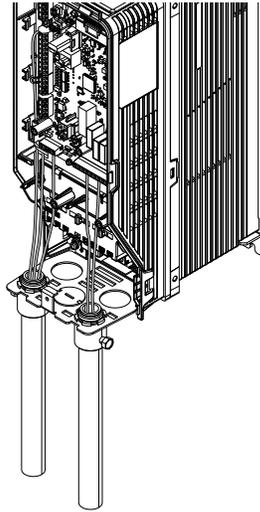

**Figure 4.51 Control Circuit Wiring**

3. Install the front cover and the keypad to their initial positions.

---

### ◆ Switches and Jumpers on the Terminal Board

The terminal board has switches to adapt the drive I/Os to the external control signals as shown in [Figure 4.52](#). Set the switches to select the functions for each terminal.

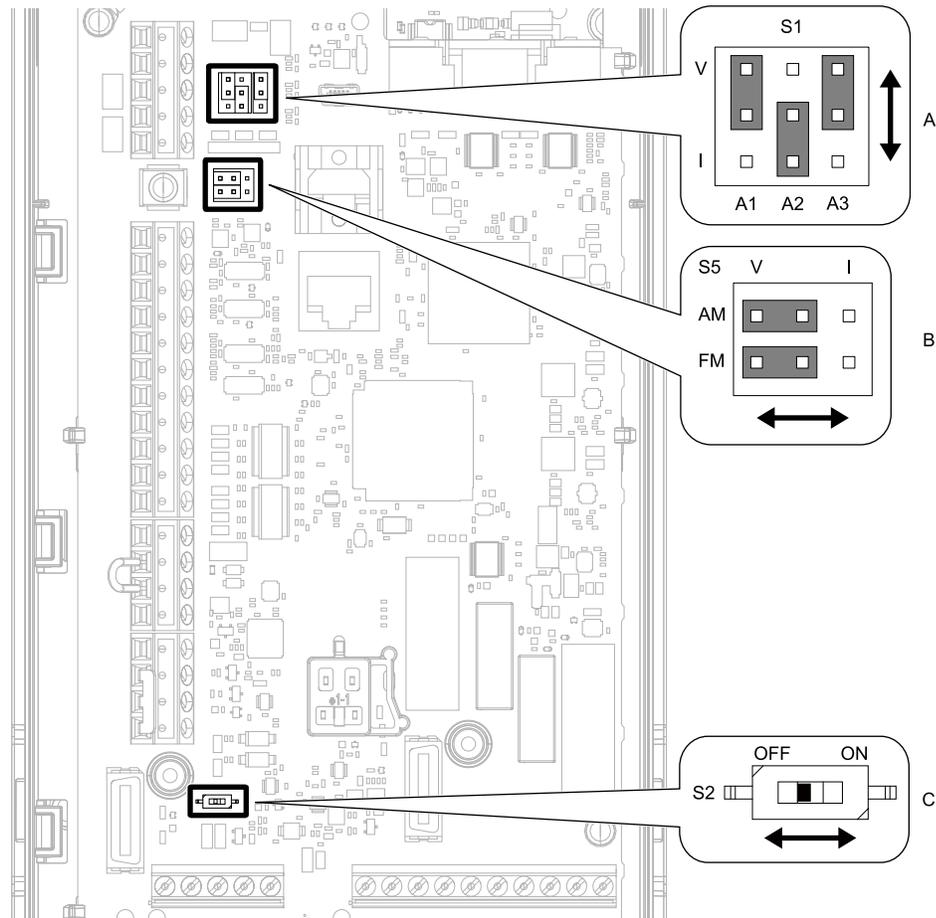


Figure 4.52 Locations of Switches

Table 4.15 I/O Terminals and Switches Functions

Position	Switch	Terminal	Function	Default Setting
A	Jumper switch S1	A1, A2, A3	Sets terminals A1 to A3 to voltage or current output.	A1: V (voltage input) A2: I (current input) A3: V (voltage input)
B	Jumper switch S5	FM, AM	Sets terminals FM and AM to voltage or current output.	FM: V (voltage output) AM: V (voltage output)
C	DIP switch S2	-	Enables and disables the termination resistor of MEMOBUS/Modbus communications.	OFF

## 4.6 Control I/O Connections


This section gives information about the settings for the listed control circuit I/O signals.

- MFDI (terminals S1 to S8)
- MFDO (terminals M1 to M4 and MD to MF)
- MFAI (terminals A1 to A3)
- MFAO (terminals FM, AM)
- MEMOBUS/Modbus communications (terminals D+, D-, AC)

### ◆ Set Sinking Mode/Sourcing Mode

Close the circuit between terminals SC-SP and SC-SN to set the sinking mode/sourcing mode and the internal/external power supply for the MFDI terminals. The default setting for the drive is internal power supply sinking mode.

**NOTICE:** *Damage to Equipment.* Do not close the circuit between terminals SP-SN. If you close the circuits between terminals SC-SP and terminals SC-SN at the same time, it will cause damage to the drive.

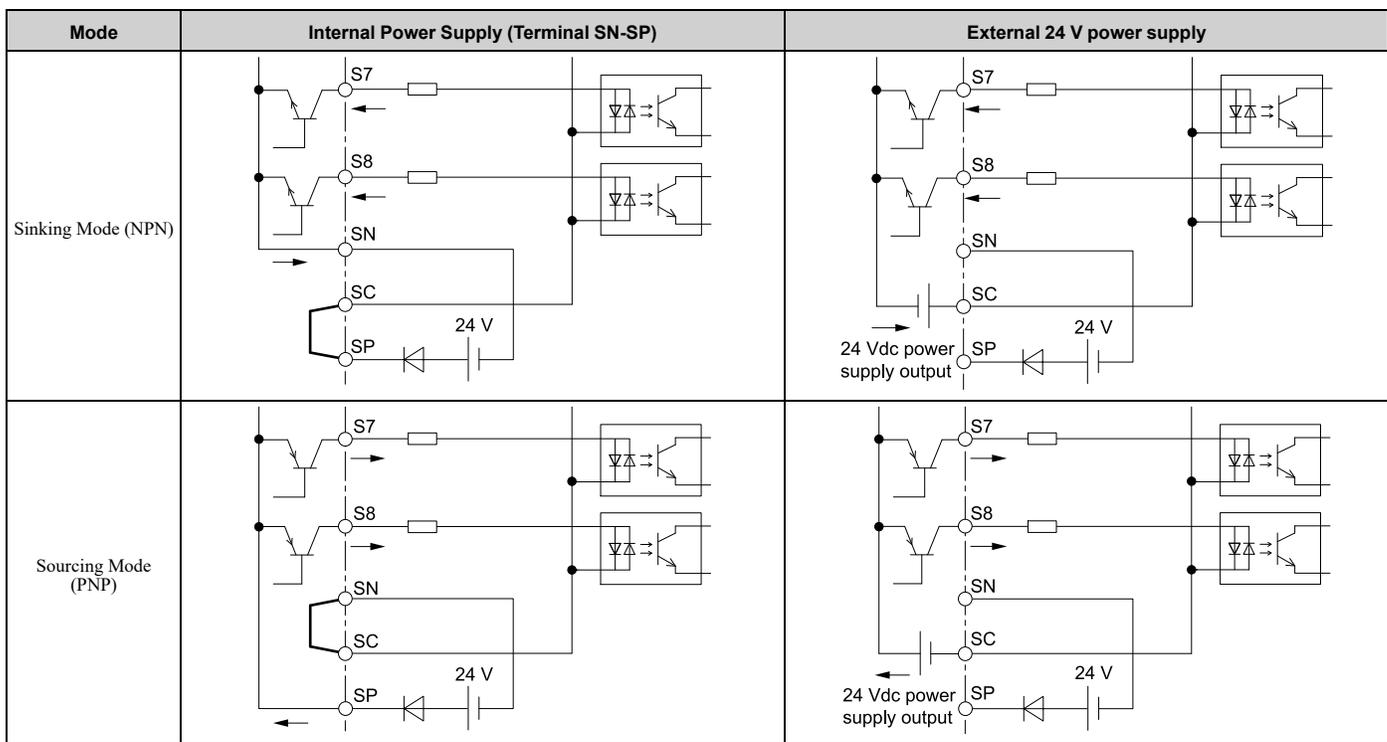

### ◆ Set Input Signals for MFAI Terminals A1 to A3

Use terminals A1 to A3 to input a voltage or a current signal. Set the signal type as shown in [Table 4.16](#).

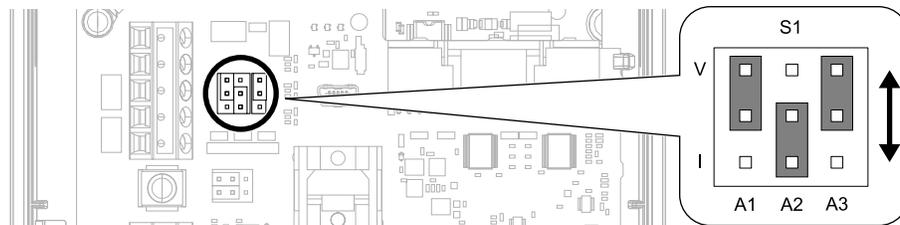


Figure 4.53 Location of Jumper Switch S1

Table 4.16 MFAI Terminals A1 to A3 Signal Settings

Terminal	Types of Input Signals	Parameter	
		No.	Signal Level
A1	Voltage input (Default)	H3-01	0: 0 V to 10 V/0% to 100% (input impedance: 20 k $\Omega$ )
	Current input		2: 4 mA to 20 mA/0% to 100% (input impedance: 250 $\Omega$ ) 3: 0 mA to 20 mA/0% to 100% (input impedance: 250 $\Omega$ )
A2	Voltage input	H3-09	0: 0 V to 10 V/0% to 100% (input impedance: 20 k $\Omega$ )
	Current input (Default)		2: 4 mA to 20 mA/0% to 100% (input impedance: 250 $\Omega$ ) 3: 0 mA to 20 mA/0% to 100% (input impedance: 250 $\Omega$ )
A3	Voltage input (Default)	H3-05	0: 0 V to 10 V/0% to 100% (input impedance: 20 k $\Omega$ )
	Current input		2: 4 mA to 20 mA/0% to 100% (input impedance: 250 $\Omega$ ) 3: 0 mA to 20 mA/0% to 100% (input impedance: 250 $\Omega$ )

**Note:**

Set H3-02, H3-10, H3-05 = 0 [Terminal A1 Function Selection, Terminal A2 Function Selection, Terminal A3 Function Selection = Frequency Reference] to set A1 to A3 to frequency reference. The drive will add the analog input values together to make the frequency reference.

### ◆ Set Output Signals for MFAO Terminals FM, AM

Set the signal type for terminals AM and FM to voltage or current output. Use jumper switch S5 and H4-07, H4-08 [Terminal FM Signal Level Select, Terminal AM Signal Level Select] to set the signal type.


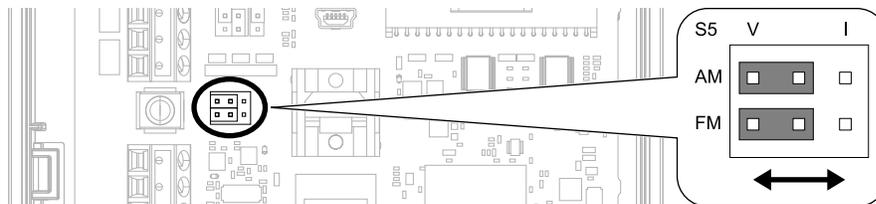


Figure 4.54 Location of Jumper Switch S5

Terminal	Types of Output Signals	Jumper Switch S5	Parameter	
			No.	Signal Level
FM	Voltage output (Default)		H4-07	0: 0 V to 10 V
	Current output			2: 4 mA to 20 mA
AM	Voltage output (Default)		H4-08	0: 0 V to 10 V
	Current output			2: 4 mA to 20 mA

### ◆ Switch ON Termination Resistor for MEMOBUS/Modbus Communications

When the drive is the last slave in a MEMOBUS/Modbus communications, set DIP switch S2 to the ON position. This drive has a built-in termination resistor for the RS-485 interface.

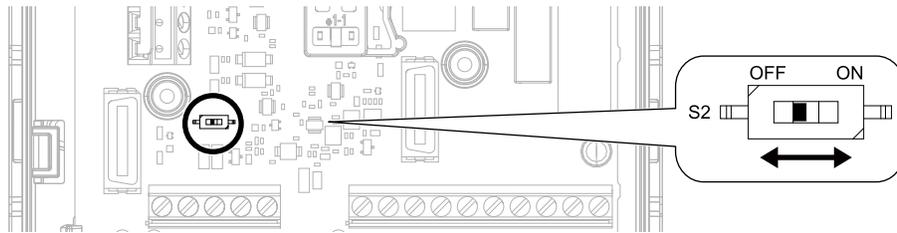

**Figure 4.55 Location of DIP Switch S2**


**Table 4.17 RS-485 Communications Termination Resistor Setting**

DIP Switch S2	Description
ON	The built-in termination resistor is ON.
OFF (Default)	The built-in termination resistor is OFF.

## 4.7 Connect the Drive to a PC

The drive has a mini-B type USB port.

You can use a USB cable (USB 2.0, type: A - mini-B) to connect the drive to a type-A USB port on a PC. Remove the keypad to connect the USB cable to the port on the drive. After you connect the drive to the PC, you can use Yaskawa DriveWizard HVAC software to monitor drive performance and manage parameter settings.

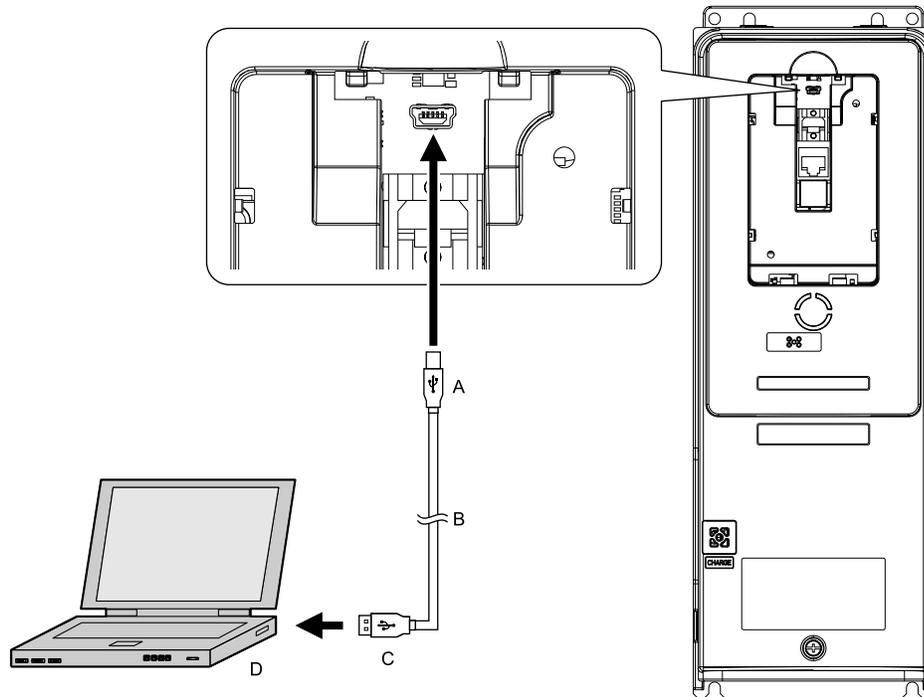


A - Mini-B type connector  
B - USB 2.0, type A - mini-B cable

C - Type-A connector  
D - PC

**Figure 4.56 Connect to a PC (USB)**

Yaskawa recommends that you use a USB cable with connectors connected with shielded wires.

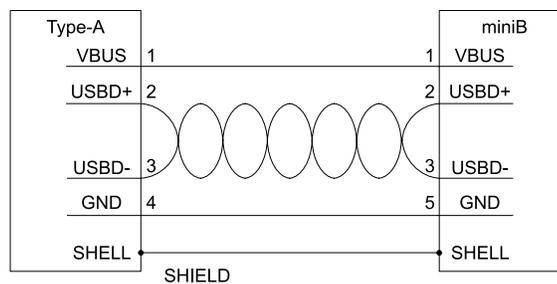

**Figure 4.57 Recommended USB Cable**

### 4.8 External Interlock

For applications that will have unwanted effects on the system if the drive stops, make an interlock between fault relay output (MA, MB, MC) and the MFDO Drive Ready signal.

---

#### ◆ Drive Ready

When the drive is operating or is prepared to accept a Run command, the MFDO terminal to which *Drive Ready* [H2-xx = 6] is set will enter the ON status.

In these conditions, Drive Ready is OFF and the drive ignores Run commands:

- The drive is de-energized
- During a fault
- There is problem with the control power supply
- There is a parameter setting error that will not let the drive run, although a Run command is entered
- An overvoltage or undervoltage fault occurs when the Run command is entered
- The drive is in Programming Mode.

## Startup Procedure and Test Run

---

5.1	Section Safety .....	346
5.2	Drive Main Switch.....	347
5.3	Keypad: Names and Functions.....	349
5.4	LED Status Ring.....	355
5.5	Start-up Procedures .....	357
5.6	Items to Check before Starting Up the Drive .....	361
5.7	Keypad Operation .....	363
5.8	Automatic Parameter Settings Optimized for Specific Applications (Application Presets).....	399
5.9	Auto-Tuning .....	401
5.10	Test Run .....	406
5.11	Fine Tuning during Test Runs (Adjust the Control Function).....	408
5.12	Test Run Checklist .....	411

## 5.1 Section Safety

### **DANGER**

#### **Electrical Shock Hazard**

**Do not examine, connect, or disconnect wiring on an energized drive. Before servicing, disconnect all power to the equipment and wait for the time specified on the warning label at a minimum. The internal capacitor stays charged after the drive is de-energized. The charge indicator LED extinguishes when the DC bus voltage decreases below 50 Vdc. When all indicators are OFF, remove the covers before measuring for dangerous voltages to make sure that the drive is safe.**

If you do work on the drive when it is energized, it will cause serious injury or death from electrical shock.

### **WARNING**

#### **Electrical Shock Hazard**

**Do not operate the drive when covers are missing. Replace covers and shields before you operate the drive. Use the drive only as specified by the instructions.**

Some figures in this section include drives without covers or safety shields to more clearly show the inside of the drive. If covers or safety shields are missing from the drive, it can cause serious injury or death.

**Do not remove covers or touch circuit boards while the drive is energized.**

If you touch the internal components of an energized drive, it can cause serious injury or death.

### **NOTICE**







#### **Sudden Movement Hazard**

**Deactivate the Run command before you switch from Programming Mode to Drive Mode.**

If you switch from Programming Mode to Drive Mode and there is an active Run command, the motor will rotate and the equipment can suddenly start.

## 5.2 Drive Main Switch

Table 5.1 Main Switch and Drive Status

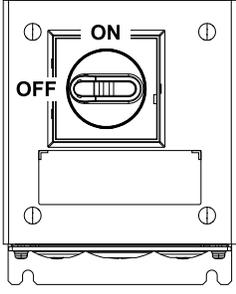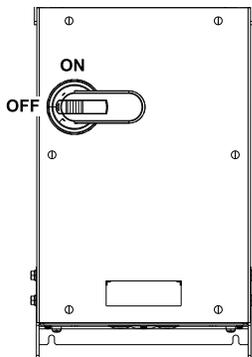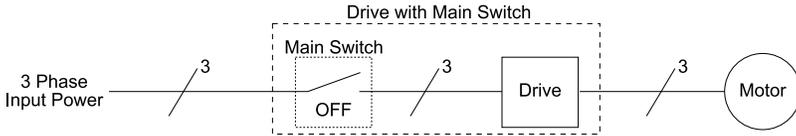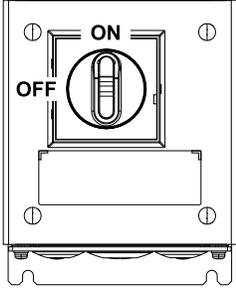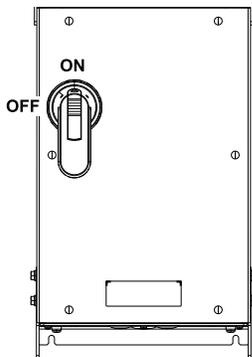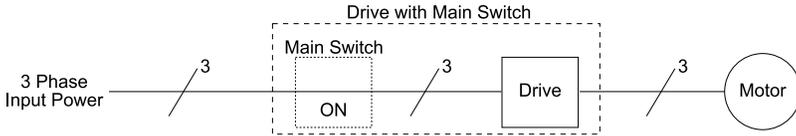Main Switch Status		Drive Status
2011 - 2031 4005 - 4034	2046 - 2114 4040 - 4096	
		 <p>3 Phase Input Power — 3 — Main Switch (OFF) — 3 — Drive — 3 — Motor</p>
		 <p>3 Phase Input Power — 3 — Main Switch (ON) — 3 — Drive — 3 — Motor</p>

### ◆ Use and Lock the Main Switch

When you must touch the motors or machines, for example in maintenance, use the Main Switch to de-energize the drive and lock the Main Switch Disconnect Handle in the OFF position as specified by this procedure.

**Note:**

Yaskawa recommends that you de-energize the drive before you turn the Main Switch from ON to OFF.

**WARNING! Electrical Shock Hazard.** Disconnect all power to the drive and remove all wires to do maintenance on the drive. If you only turn OFF the built-in Main Switch before you do maintenance, there can be high voltage on input terminals R/L1, S/L2, and T/L3 of the Main Switch and touching energized terminals will cause serious injury or death.

**NOTICE: Damage to Equipment.** Do not energize and de-energize the drive more frequently than one time each 30 minutes. If you frequently energize and de-energize the drive, it can cause drive failure.



**NOTICE: Damage to Equipment.** Do not cycle the Main Switch more than 6000 times. If you cycle the Main Switch more times than the limit, it will cause the contact failure, or you cannot open or close the Main Switch.

**NOTICE: Damage to Equipment.** Make sure that you stop the motor before you turn ON/OFF the Main Switch. If you turn ON/OFF the Main Switch during run, it can cause Main Switch failure.

1. Stop the drive and make sure that the motor is completely stopped.

- Turn the Main Switch from ON to OFF.

**Table 5.2 Turn OFF the Main Switch**

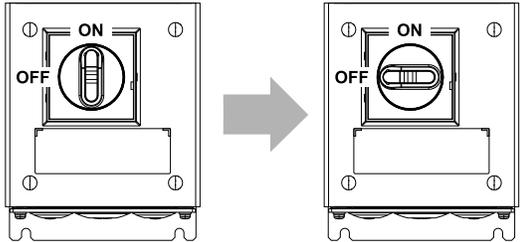
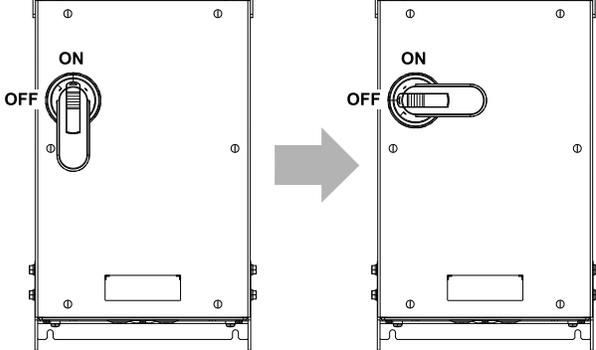
Model	Main Switch Status
2011 - 2031 4005 - 4034	
2046 - 2114 4040 - 4096	

- Put a lock through the hole of the Main Switch.

**Note:**

The lock is not included with the drive.

**Table 5.3 Lock the Main Switch**

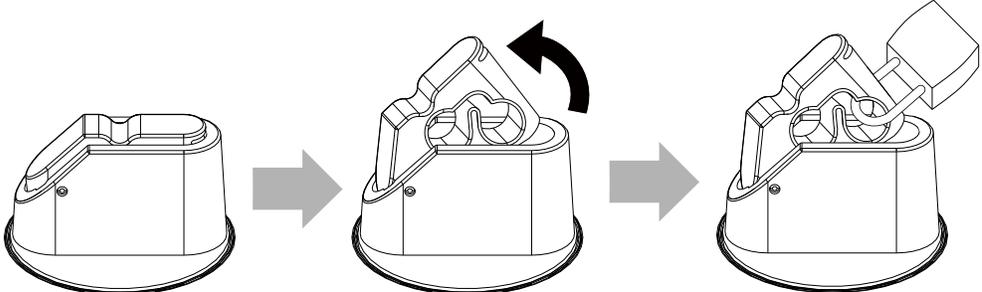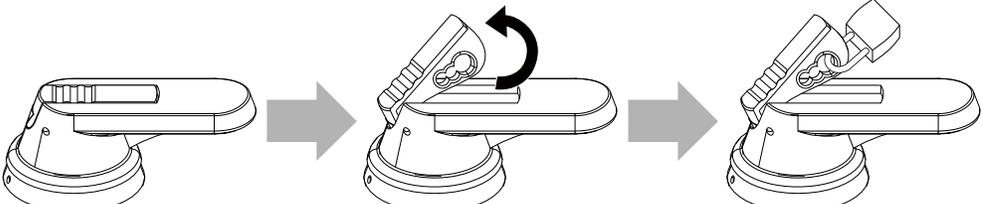Model	Main Switch Status
2011 - 2031 4005 - 4034	
2046 - 2114 4040 - 4096	

# 5.3 Keypad: Names and Functions

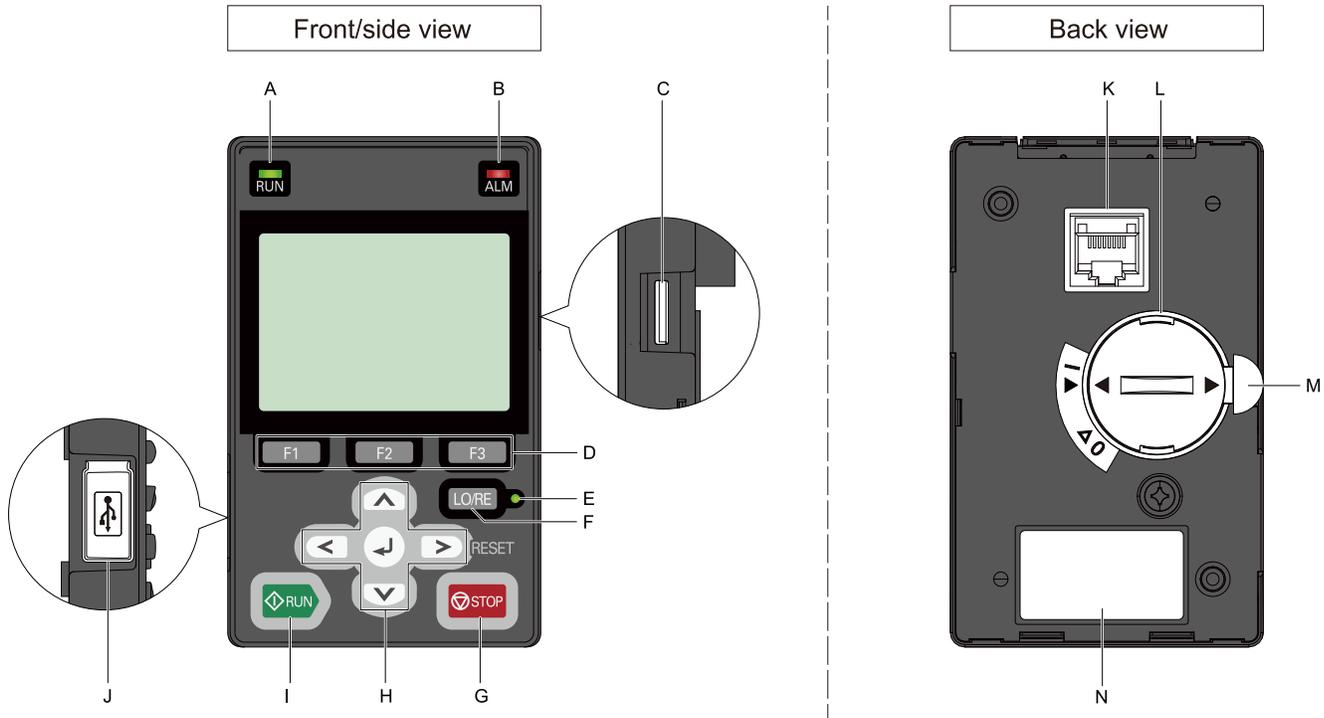


Figure 5.1 Keypad

Table 5.4 Keypad Components and Functions

Symbol	Name	Function
A	RUN LED 	<p>Illuminates to show that the drive is operating the motor. The LED turns OFF when the drive stops. Flashes to show that:</p> <ul style="list-style-type: none"> <li>The drive is decelerating to stop.</li> <li>The drive received a Run command with a frequency reference of 0 Hz, but the drive is not set for zero speed control.</li> </ul> <p>Flashes quickly to show that:</p> <ul style="list-style-type: none"> <li>The drive received a Run command from the MFDI terminals and is switching to REMOTE Mode while the drive is in LOCAL Mode.</li> <li>The drive received a Run command from the MFDI terminals when the drive is not in Drive Mode.</li> <li>The drive received a Fast Stop command.</li> <li>The safety function shut off the drive output.</li> </ul> <ul style="list-style-type: none"> <li>You pushed  on the keypad while the drive is operating in REMOTE Mode.</li> <li>The drive is energized with an active Run command and <i>b1-17 = 0 [Run Command at Power Up = Disregard Existing RUN Command]</i>.</li> </ul>
B	ALM LED 	<p>Illuminates when the drive detects a fault. Flashes when the drive detects:</p> <ul style="list-style-type: none"> <li>Alarm</li> <li>Operation Errors</li> <li>A fault or alarm during Auto-Tuning</li> </ul> <p>The light turns off during regular drive operation. There are no alarms or faults.</p>
C	microSD Card Slot	The insertion point for a microSD card.
D	Function Keys F1, F2, F3 	The menu shown on the keypad sets the functions for function keys. The name of each function is in the lower half of the display window.
E	LO/RE LED 	<p>Illuminated: The keypad controls the Run command (LOCAL Mode). OFF: The control circuit terminal or serial transmission device controls the Run command (REMOTE Mode).</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>LOCAL: Use the keypad to operate the drive. Use the keypad to enter Run/Stop commands and the frequency reference command.</li> <li>REMOTE: Use the control circuit terminals or serial transmission to operate the drive. Use the frequency reference source entered in <i>b1-01</i> and the Run command source selected in <i>b1-02</i>.</li> </ul>

## 5.3 Keypad: Names and Functions

Symbol	Name	Function
F	LO/RE Selection Key 	Switches drive control for the Run command and frequency reference between the keypad (LOCAL) and an external source (REMOTE). <b>Note:</b> • The LOCAL/REMOTE Selection Key continuously stays enabled after the drive stops in Drive Mode. If the application must not switch from REMOTE to LOCAL because it will have a negative effect on system performance, set $o2-01 = 0$ [ <i>LO/RE Key Function Selection = Disabled</i> ] to disable  • The drive will not switch between LOCAL and REMOTE when it is receiving a Run command from an external source.
G	STOP Key 	Stops drive operation. <b>Note:</b> Push  to stop the motor. This will also apply when a Run command (REMOTE Mode) is active at an external Run command source. To disable  priority, set $o2-02 = 0$ [ <i>STOP Key Function Selection = Disabled</i> ].
H	Left Arrow Key 	<ul style="list-style-type: none"> <li>Moves the cursor to the left.</li> <li>Goes back to the previous screen.</li> </ul>
	Up Arrow Key/Down Arrow Key 	<ul style="list-style-type: none"> <li>Scrolls up or down to show the next item or the previous item.</li> <li>Selects parameter numbers, and increments or decrements setting values.</li> </ul>
	Right Arrow Key (RESET) 	<ul style="list-style-type: none"> <li>Moves the cursor to the right.</li> <li>Continues to the next screen.</li> <li>Resets the drive to clear a fault.</li> </ul>
	ENTER Key 	<ul style="list-style-type: none"> <li>Enters parameter values and settings.</li> <li>Selects menu items to move between keypad displays.</li> <li>Selects each mode, parameter, and set value.</li> </ul>
I	RUN Key 	Starts the drive in LOCAL Mode. Starts the operation in Auto-Tuning Mode. <b>Note:</b> Before you use the keypad to operate the motor, push  on the keypad to set the drive to LOCAL Mode.
J	USB Terminal	For factory adjustment
K	RJ-45 Connector	Connects to the drive using an RJ-45 8-pin straight through UTP CAT5e extension cable or keypad connector.
L	Clock Battery Cover	Remove this cover to install or replace the clock battery. <b>Note:</b> • The battery included with the keypad is for operation check. It may be exhausted earlier than the expected battery life described in the manual. • Refer to "Maintenance & Troubleshooting Manual (TOEPYAIGA8001)" for details on replacement procedure. To replace the battery, use a Hitachi Maxell "CR2016 Lithium Manganese Dioxide Lithium Battery" or an equivalent battery with these properties: • Nominal voltage: 3 V • Operating temperature range: -20 °C to +85 °C (-4 °F to +185 °F)
M	Insulation Sheet	An insulating sheet is attached to the keypad battery to prevent battery drain. Remove the insulation sheet before you use the keypad for the first time.
N	Nameplate	Shows the model number of the keypad and other information <b>Note:</b> • "REV" identifies the hardware and software version of the keypad. • "FLASH" identifies the version of the flash memory.

**WARNING! Sudden Movement Hazard.** If you change the control source when  $b1-07 = 1$  [*LOCAL/REMOTE Run Selection = Accept Existing RUN Command*], the drive can start suddenly. Before you change the control source, remove all personnel from the area around the drive, motor, and load. Sudden starts can cause serious injury or death.

◆ LCD Display

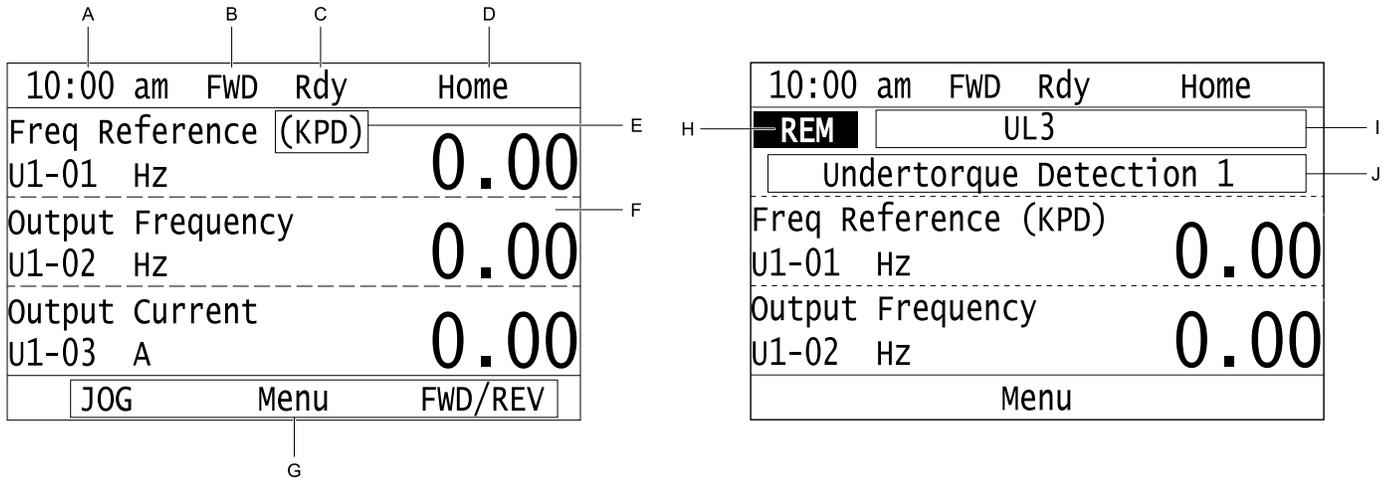


Figure 5.2 LCD Display Indications

Table 5.5 LCD Display Indications and Meanings

Symbol	Name	Description
A	Time display area	Shows the current time. Set the time on the default settings screen.
B	Forward run/Reverse indication	Shows direction of motor rotation. <ul style="list-style-type: none"> <li>• FWD: Shown when set to Forward run.</li> <li>• REV: Shown when set to Reverse run.</li> </ul>
C	Ready	The screen will show Rdy when the drive is ready for operation or when the drive is running.
D	Mode display area	Shows the name of the current mode or screen.
E	Frequency reference source indicator	Shows the current frequency reference source. <ul style="list-style-type: none"> <li>• KPD: keypad</li> <li>• AI: analog input terminal (terminals A1 to A3)</li> <li>• COM: MEMOBUS/Modbus communications</li> <li>• OPT: option card</li> <li>• RP: pulse train input terminal (terminal RP)</li> </ul>
F	Data display area	Shows parameter values, monitor values, and details of the results of operations.
G	Function keys 1 to 3 (F1 to F3)	The function names shown in this area will change when the selected screen changes. Push one of the function keys <b>F1</b> to <b>F3</b> on the keypad to do the function.
H	LOCAL/REMOTE mode or alternative Run command source indication	<ul style="list-style-type: none"> <li>• LOC: The drive is operating in LOCAL Mode.</li> <li>• REM: The drive is operating in REMOTE Mode.</li> <li>• JOG: The drive is operating in JOG Mode.</li> <li>• EMOV: The drive is operating in Emergency Override Mode.</li> </ul>
I	Alarm codes and drive status messages display area	Shows an alarm code or message of drive status.
J	Alarm and message texts display area	Shows a fault, minor fault, alarm, or error name and message text. <p><b>Note:</b> When the drive must show an alarm and a message on the keypad at the same time, the keypad will switch between the alarm code and message text in 2-second intervals.</p>

### ◆ Indicator LEDs and Drive Status

LED	Display	Drive Status
RUN LED 	Illuminated	The drive is operating the motor.
	Flashing	<ul style="list-style-type: none"> <li>The drive is decelerating to stop.</li> <li>The drive received a Run command with a frequency reference of 0 Hz, but the drive is not set for zero speed control.</li> <li>The drive received a DC Injection Braking command.</li> </ul>
	Flashing Quickly	<ul style="list-style-type: none"> <li>The drive received a Run command from the MFDI terminals and is switching to REMOTE Mode while the drive is in LOCAL Mode.</li> <li>The drive received a Run command from an external source and the drive is not in Drive Ready (READY) condition.</li> <li>The drive received a Fast Stop command.</li> <li>The safety function shut off the drive output.</li> <li>You pushed  on the keypad while the drive is operating in REMOTE Mode.</li> <li>The drive is energized with an active Run command and <math>b1-17 = 0</math> [Run Command at Power Up = Disregard Existing RUN Command].</li> <li>When <math>b1-03 = 3</math> [Stopping Method Selection = Coast to Stop with Timer], the Run command is disabled then enabled during the Run wait time.</li> <li>The drive received a DC Injection Braking command.</li> <li>The voltage of the main circuit power supply decreased, and the 24 V power supply is supplying power only the the drive.</li> </ul>
	OFF	The motor is stopped.
ALM LED 	Illuminated	The drive detects a fault.
	Flashing	The drive detected one of the following: <ul style="list-style-type: none"> <li>An alarm</li> <li>An oPE parameter setting error</li> <li>A fault or error during Auto-Tuning</li> </ul> <b>Note:</b> The digital characters displayed on the keypad will also flash.
	OFF	There are no drive faults or alarms.
LO/RE LED 	Illuminated	The keypad controls the Run command (LOCAL Mode).
	OFF	The control circuit terminal or serial transmission device controls the Run command (REMOTE Mode).

### ■ LED Flashing Statuses

Refer to [Figure 5.3](#) for information about the differences between flashing and “flashing quickly”.

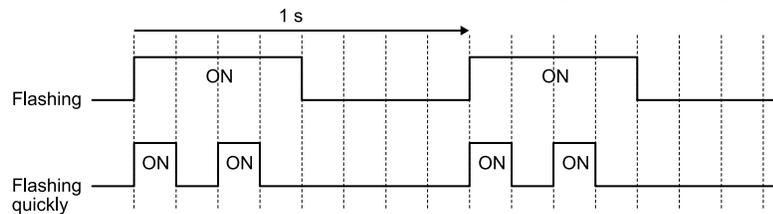


Figure 5.3 LED Flashing Statuses


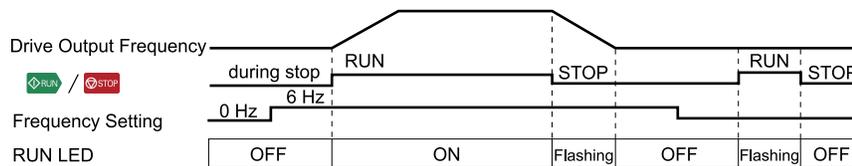


Figure 5.4 Relation between RUN indicator and Drive Operation


◆ Keypad Mode and Menu Displays

10:00 am	FWD	Rdy	Home
Freq Reference (AI)			
U1-01 Hz		0.00	
Output Frequency			
U1-02 Hz		0.00	
Output Current			
U1-03 A		0.00	
Menu			

HOME

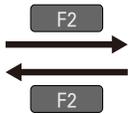

10:00 am	FWD	Rdy	Menu
Monitors			
Parameters			
User Custom Parameters			
Parameter Backup/Restore			
Modified Param / Fault Log			
Auto-Tuning			
Home			

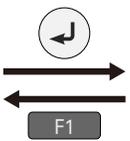


10:00 am	FWD	Rdy	Monitor
Standard Monitor			
Custom Monitor			
Bar Graph			
Analog Gauge			
Trend Plot			
Back		Home	

Monitors

Drive Mode

10:00 am	FWD		Menu
Monitors			
Parameters			
User Custom Parameters			
Parameter Backup/Restore			
Modified Param / Fault Log			
Auto-Tuning			
Home			

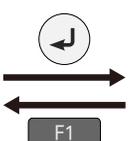

10:00 am	FWD		Parameters
Initialization Parameters			
Application			
Tuning			
References			
Motor Parameters			
Options			
Back		Home	

Parameters


10:00 am	FWD		Menu
Monitors			
Parameters			
User Custom Parameters			
Parameter Backup/Restore			
Modified Param / Fault Log			
Auto-Tuning			
Home			



10:00 am	FWD		Parameters
Application Preset			
A1-06	0	(0)	
Control Method Selection			
A1-02	0	(0)	
Frequency Reference Selection 1			
b1-01	1	(1)	
Back		Home	

User Custom Parameters


10:00 am	FWD		Menu
Monitors			
Parameters			
User Custom Parameters			
Parameter Backup/Restore			
Modified Param / Fault Log			
Auto-Tuning			
Home			

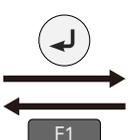

10:00 am	FWD		Backup
Select Items to Backup/Restore			
Standard Parameters			
Back		Home	

Parameter Backup/Restore


10:00 am	FWD		Menu
Monitors			
Parameters			
User Custom Parameters			
Parameter Backup/Restore			
Modified Param / Fault Log			
Auto-Tuning			
Home			

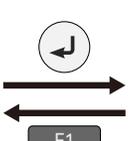

10:00 am	FWD		History
Modified Parameters			
Fault Log			
Back		Home	

Modified Parameters/Fault Log


10:00 am	FWD		Menu
Parameters			
User Custom Parameters			
Parameter Backup/Restore			
Modified Param / Fault Log			
Auto-Tuning			
Initial Setup			
Home			

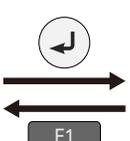

10:00 am	FWD		Auto Tuning
Select Auto-Tuning mode			
Motor Parameter Tuning			
Back		Home	

Auto-Tuning


10:00 am	FWD		Menu
User Custom Parameters			
Parameter Backup/Restore			
Modified Param / Fault Log			
Auto-Tuning			
Initial Setup			
Diagnostic Tools			
Home			

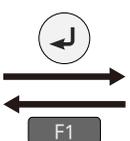

10:00 am	FWD		Init Setup
Language Selection			
Set Date/Time			
Show Initial Setup Screen			
Back		Home	

Initial Setup

10:00 am	FWD		Menu
User Custom Parameters			
Parameter Backup/Restore			
Modified Param / Fault Log			
Auto-Tuning			
Initial Setup			
Diagnostic Tools			
Home			

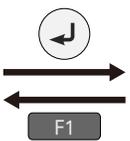

10:00 am	FWD		Tools
Data Logger			
Backlight			
Drive Information			
Back		Home	Setup

Diagnostic Tools

Programming Mode

Startup Procedure and Test Run

Figure 5.5 Keypad Functions and Display Levels

## 5.3 Keypad: Names and Functions

### Note:


- Energize the drive with factory defaults to show the Initial Setup screen. Push **F2** [Home] to show the HOME screen.  
–Select [No] from the [Show Initial Setup Screen] setting to not display the Initial Setup screen.
- Push  from the Home screen to show drive monitors.
- Push  to set *d1-01 [Reference 1]* when the Home screen shows *U1-01 [Frequency Reference]* in LOCAL Mode.
- The keypad will show [Rdy] when the drive is in Drive Mode. The drive is prepared to accept a Run command.
- Set *b1-08 [Run Command Select in PRG Mode]* to accept or reject a Run command from an external source while in Programming Mode.  
–Set *b1-08 = 0 [Disregard RUN while Programming]* to reject the Run command from an external source while in Programming Mode (default).  
–Set *b1-08 = 1 [Accept RUN while Programming]* to accept the Run command from an external source while in Programming Mode.  
–Set *b1-08 = 2 [Allow Programming Only at Stop]* to prevent changes from Drive Mode to Programming Mode while the drive is operating.

**Table 5.6 Drive Mode Screens and Functions**

Mode	Keypad Screen	Function
Drive Mode	Monitors	Sets monitor items to display.
Programming Mode	Parameters	Changes parameter settings.
	User Custom Parameters	Shows the User Parameters.
	Parameter Backup/Restore	Saves parameters to the keypad as backup.
	Modified Parameters/Fault Log	Shows modified parameters and fault history.
	Auto-Tuning	Auto-Tunes the drive.
	Initial Setup Screen	Changes initial settings.
	Diagnostic Tools	Sets data logs and backlight.

## 5.4 LED Status Ring

The LED Status Ring on the drive cover shows the drive operating status.

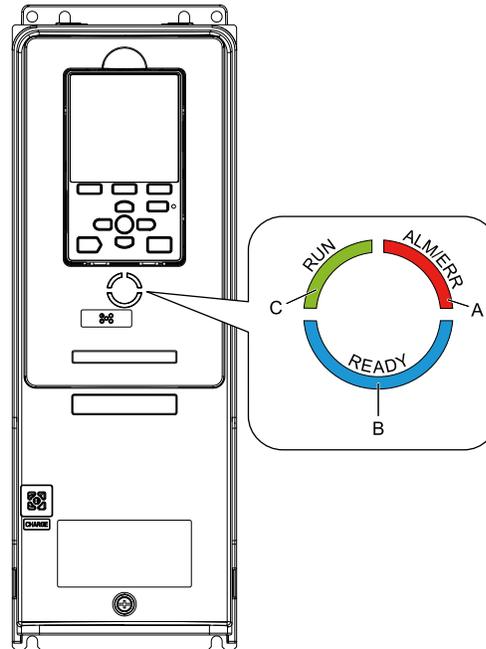

A - ALM/ERR  
B - Ready


C - RUN

LED	Status	Description	
A	ALM/ERR	<p>Illuminated</p> <p>The drive detects a fault.</p> <p>Flashing <i>*!</i></p> <p>The drive detects:</p> <ul style="list-style-type: none"> <li>An alarm</li> <li>An oPE parameter setting error</li> <li>An Auto-Tuning error</li> </ul> <p><b>Note:</b> If the drive detects a fault and an alarm at the same time, the LED will illuminate to identify a fault.</p> <p>OFF</p> <p>There are no drive faults or alarms.</p>	
	B	Ready	<p>Illuminated</p> <p>The drive is operating or is prepared for operation.</p> <p>Flashing <i>*!</i></p> <p>The drive is in <i>STo</i> [<i>Safe Torque OFF</i>] condition.</p> <p>Flashing Quickly <i>*!</i></p> <p>The voltage of the main circuit power supply dropped, and only the external 24 V power supply is providing the power to the drive.</p> <p>OFF</p> <ul style="list-style-type: none"> <li>The drive detects a fault.</li> <li>There is no fault and the drive received a Run command, but the drive cannot operate. For example, in Programming Mode or when  is flashing.</li> </ul>


## 5.4 LED Status Ring

LED	Status	Description	
C	RUN	Illuminated	The drive is in regular operation.
		Flashing <sup>*1</sup>	<ul style="list-style-type: none"> <li>The drive is decelerating to stop.</li> <li>The drive received a Run command with a frequency reference of 0 Hz.</li> <li>The drive received a DC Injection Braking command.</li> </ul>
		Flashing Quickly <sup>*1</sup>	<ul style="list-style-type: none"> <li>The drive received a Run command from the MFDI terminals and is switching to REMOTE Mode while the drive is in LOCAL Mode.</li> <li>The drive received a Run command from the MFDI terminals when the drive is not in Drive Mode.</li> <li>The drive received a Fast Stop command.</li> <li>The safety function shuts off the drive output.</li> <li>The user pushed  on the keypad when the drive is operated from a REMOTE source.</li> <li>The drive is energized with an active Run command and <math>b1-17 = 0</math> [Run Command at Power Up = Disregard Existing RUN Command].</li> <li>The drive is set to coast-to-stop with timer (<math>b1-03 = 3</math> [Stopping Method Selection = Coast to Stop with Timer]), and the Run command is disabled then enabled during the Run wait time.</li> </ul>
		OFF	The motor is stopped.

\*1 Refer to [Figure 5.6](#) for the difference between “flashing” and “flashing quickly”.

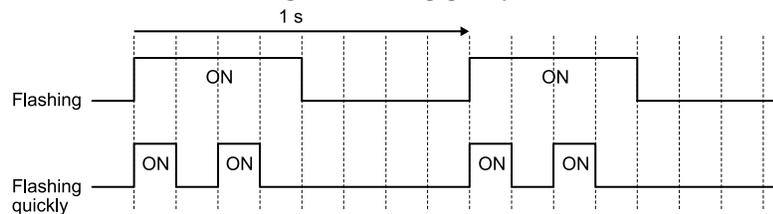

**Figure 5.6 LED Flashing Statuses**

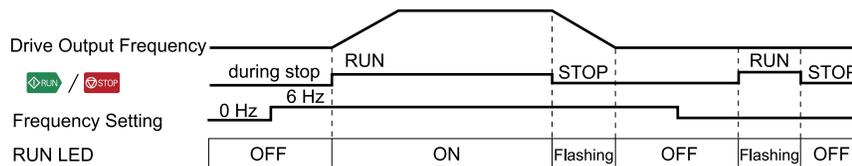

**Figure 5.7 Relation between RUN LED and Drive Operation**

## 5.5 Start-up Procedures

This section gives the basic steps necessary to start up the drive.

Use the flowcharts in this section to find the most applicable start-up method for your application.

This section gives information about only the most basic settings.

**Note:**

Refer to the *A1-06* section to use an Application Preset to set up the drive.

### ◆ Flowchart A: Connect and Run the Motor with Minimum Setting Changes

Flowchart A shows a basic start-up sequence to connect and run a motor with a minimum of setting changes. Settings can change when the application changes.

Use the drive default parameter settings for basic applications where high precision is not necessary.

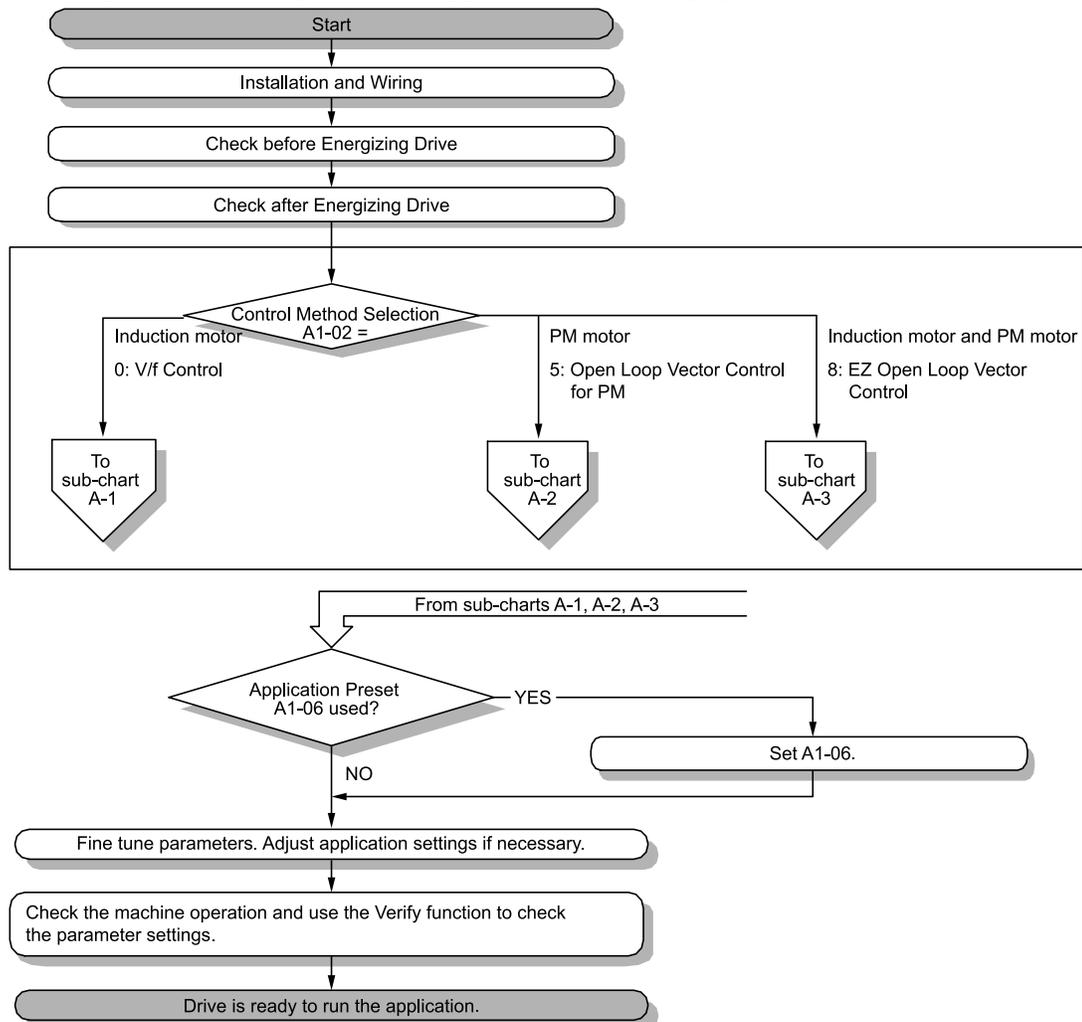


Figure 5.8 Basic Steps before Startup

### ◆ Sub-Chart A-1: Induction Motor Auto-Tuning and Test Run Procedure


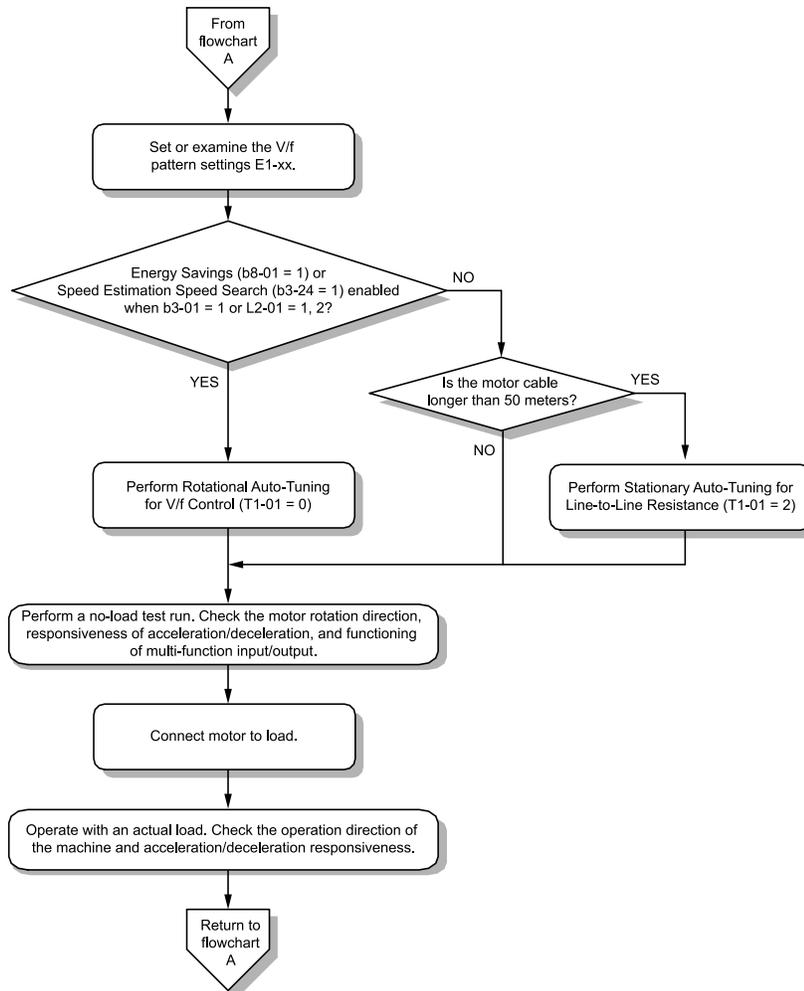


Figure 5.9 Induction Motor Auto-Tuning and Test Run Procedure

### ◆ Sub-Chart A-2: PM Motor Auto-Tuning and Test Run Procedure

Sub-Chart A-2 gives the basic steps to start up the drive for a PM motor.

**WARNING! Crush Hazard.** Test the system to make sure that the drive operates safely after you wire the drive and set parameters. If you do not test the system, it can cause damage to equipment or serious injury or death.

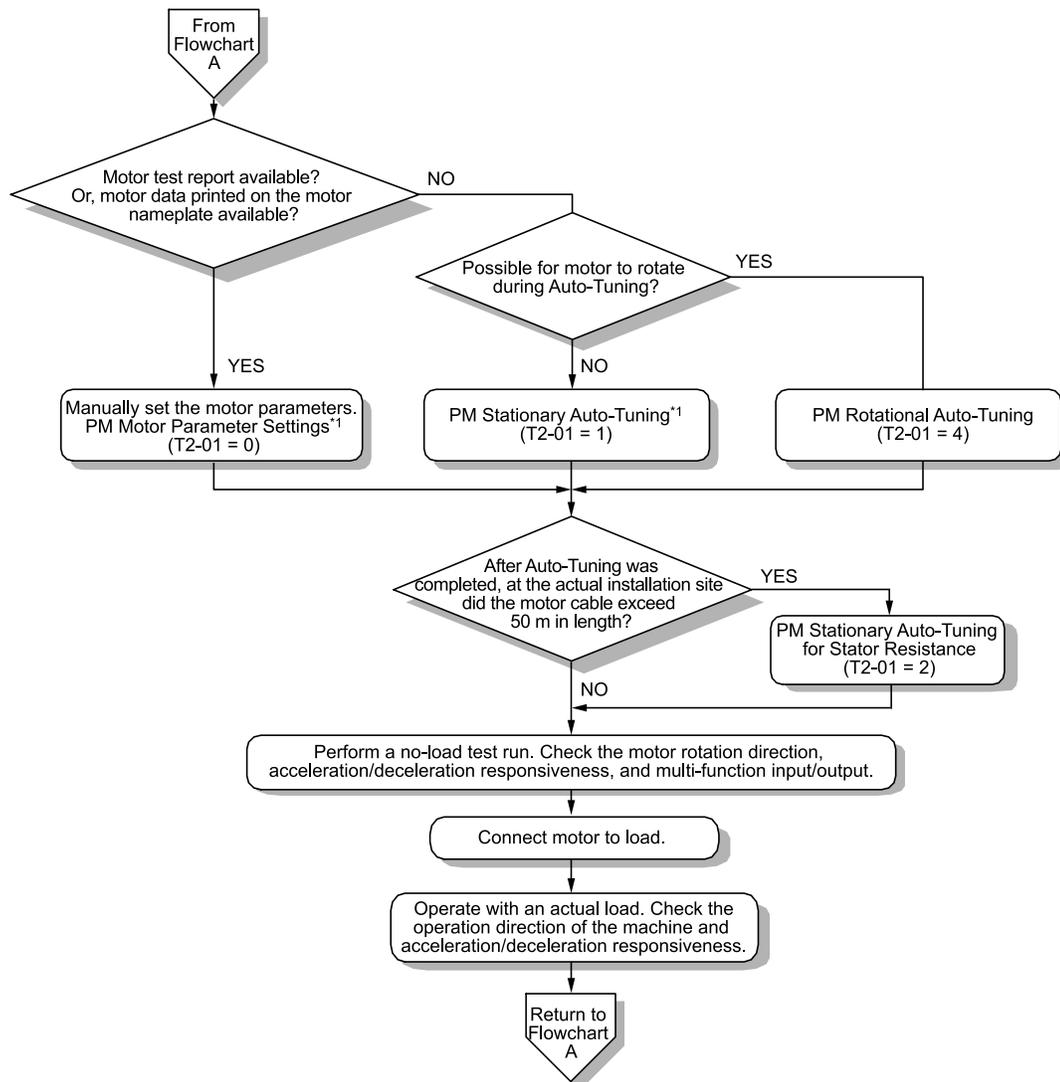

**Figure 5.10 PM Motor Auto-Tuning and Test Run Procedure**

\*1 For PM motors, set *E5-01 [PM Motor Code Selection]* = *FFFF*.

### ◆ Subchart A-3: EZ Open Loop Vector Control Test Run Procedure

Subchart A-3 gives the setup procedure to run a PM motor in EZ Open Loop Vector Control.

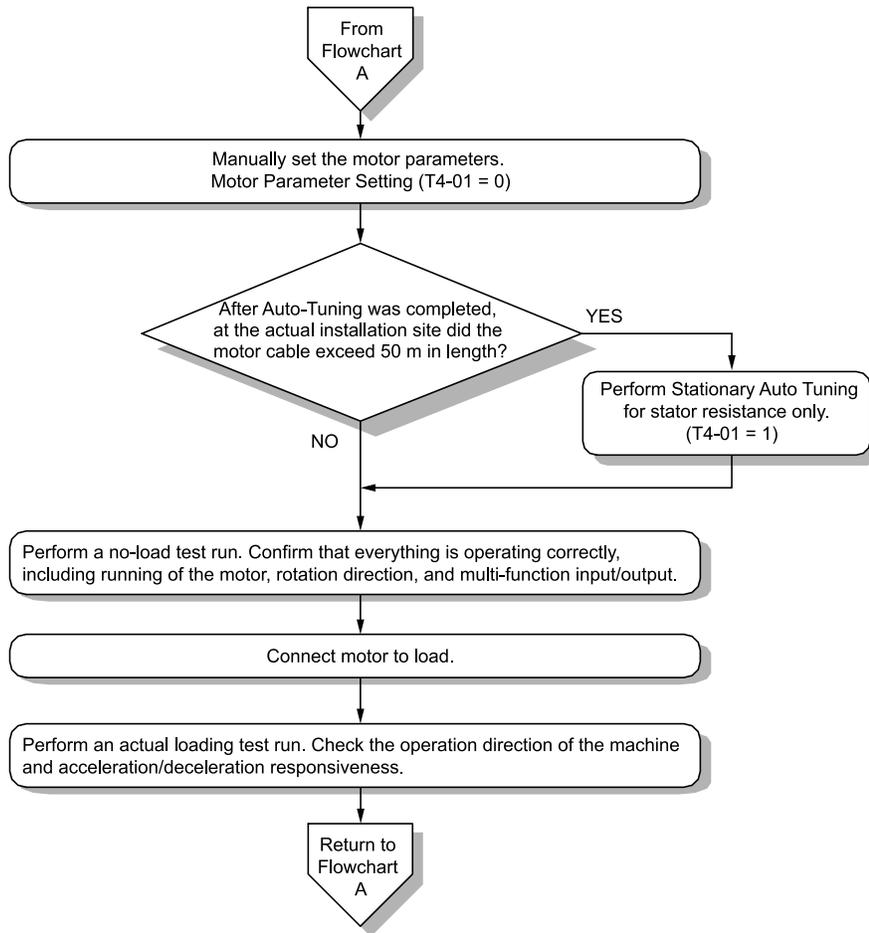


Figure 5.11 Procedure for Test Run of EZ Open Loop Vector Control Method

## 5.6 Items to Check before Starting Up the Drive

### ◆ Check before Energizing the Drive

Examine the items in [Table 5.7](#) before you energize the drive.




**Table 5.7 Items to Check before Energizing the Drive**

Items to Check	Description
Input Power Supply Voltage	The voltage of the input power supply must be: 208 V class: three-phase 200 Vac to 240 Vac 50/60 Hz, 270 Vdc to 340 Vdc 480 V class: three-phase 380 Vac to 480 Vac 50/60 Hz, 510 Vdc to 680 Vdc
	Correctly and safely wire power supply input terminals R/L1, S/L2, T/L3 (use terminals +1 and - for DC power supply input).
	Correctly ground the drive and motor.
Connection between Drive Output Terminals and Motor Terminals	Make sure that you connected drive output terminals U/T1, V/T2, and W/T3 in the correct sequence to agree with motor terminals U, V, and W without loosened screws.
Control Circuit Terminal Wiring	Make sure that you connected the drive control circuit terminals in the correct sequence to agree with devices and switches without loosened screws.
Control Circuit Terminal Status	Turn OFF the inputs from all devices and switches connected to the drive control circuit terminals.
Connection between Machinery and Motor	Disengage all couplings and belts that connect the motor and machinery.

### ◆ Check after Energizing the Drive

Examine the items in [Table 5.8](#) after you energize the drive. The keypad will show these screens depending on the drive status.

**Table 5.8 Display Status after Energizing the Drive**

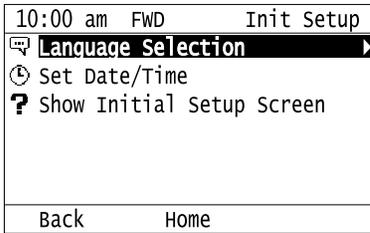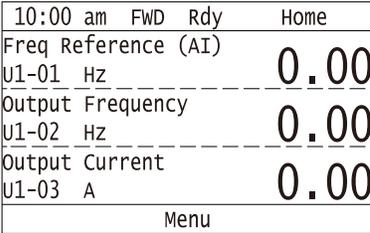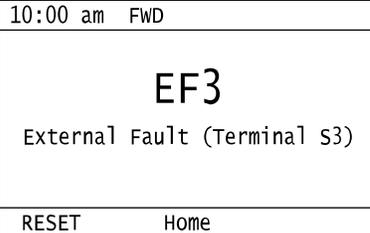Status	Display	Description
During Usual Operation	 <p>Initial Setup Screen or</p>  <p>HOME Screen</p>	<ul style="list-style-type: none"> <li>The data display area will show the Initial Setup screen or the HOME screen</li> <li>Energize the drive with factory defaults to show the Initial Setup screen. Select [No] from the [Show Initial Setup Screen] settings to show the HOME screen without showing the Initial Setup screen.</li> </ul>
When the Drive Detects a Fault		<p>The display changes depending on the fault. Refer to "Troubleshooting" to remove the cause of the fault.  will illuminate.</p> <p><b>Note:</b> If the screen shows a different screen, do these steps to show the fault content again:</p> <ol style="list-style-type: none"> <li>Push  from the HOME screen.</li> <li>Push  (Home) from a different screen than the HOME screen.</li> </ol>

## 5.6 Items to Check before Starting Up the Drive

### Note:

Make sure that you use a keypad with FLASH number 1004 or later. Keypads with FLASH numbers 1003 and earlier will not show characters correctly.


## ◆ Make the Initial Settings

The keypad will show the Initial Setup screen when you energize the drive for the first time. You can set the date and time or the language to show on the keypad.

### Note:

If the keypad does not show the Initial Setup screen, select [Initial Setup] from the Main Menu to show the Initial Setup screen.

1. Make the initial settings for each item.

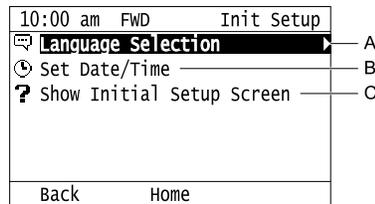

**A - Language Selection**

**C - Show Initial Setup Screen**


**B - Set Date/Time**

### Note:

If you select [Yes] from the [Show Initial Setup Screen] setting, the keypad will show the Initial Setup screen each time the drive is energized.

If you select [NO], the keypad will not show the Initial Setup screen each time the drive is energized, starting with the next time.

2. Push **F2** (Home).

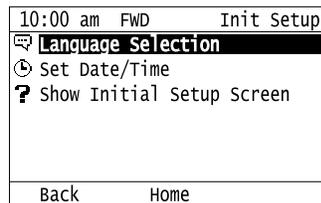

The display shows the HOME screen.

## 5.7 Keypad Operation

### Note:

Make sure that you use a keypad with FLASH number 1004 or later. Keypads with FLASH numbers 1003 and earlier will not show characters correctly.

### ◆ Home Screen Display Selection

This section gives information about the content shown on the HOME screen and the functions that you can control from the HOME screen.

10:00 am	FWD Rdy	Home
Freq Reference(KPD)		0.00
U1-01	Hz	0.00
Output Frequency		0.00
U1-02	Hz	0.00
Output Current		0.00
U1-03	A	0.00
JOG	Menu	FWD/REV

### ■ View Monitors Shown in Home Screen

This figure shows monitor data in the data display area of the HOME screen.

10:00 am	FWD Rdy	Home
Freq Reference (KPD)		0.00
U1-01	Hz	0.00
Output Frequency		0.00
U1-02	Hz	0.00
Output Current		0.00
U1-03	A	0.00
JOG	Menu	FWD/REV

Monitor

- To change what the screen shows, change the setting for *o1-40* [Home display selection].
- When *o1-40* = 0 [Home Screen Display Selection = Custom Monitor], and there is more than one screen, use  or  to switch between screens.

### ■ JOG Operation

Push  to illuminate . Push and hold  [JOG] to run the motor. Release  [JOG] to stop the motor.

### ■ Change Motor between Forward/Reverse Run

You can change the direction of motor rotation when operating the drive from the keypad. Push  to illuminate



Push and hold  [FWD/REV] to toggle the direction of motor rotation between forward and reverse.

### ■ Show the Standard Monitor

Push  to show the standard monitor (*Ux-xx*). When you push  [HOME], the keypad goes back to the home screen.

### Note:

When a fault, minor fault, or an error occurs, push  to show the content of the fault. Push  again to show the standard monitor (*Ux-xx*).

### Change the Frequency Reference Value


1. Push  to access the screen to change the frequency.
2. Push  or  to select the digit to change, then push  or  to change the value.
3. Push  to keep the changes.

**Note:**

The HOME screen must show *U1-01 [Frequency Reference]* or you must set the keypad as the Run command source (REMOTE) to use this function.

### Show the Main Menu

Push  to show the main menu. Push  [HOME] to go back to the HOME screen.

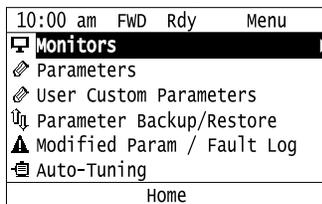

### Show the Monitor


This section shows how to show the standard monitors (*Ux-xx*).

1. Push  [Home] to show the HOME screen.


**Note:**

- When the drive is in HOME Mode, the screen shows [Home] in the upper right-hand corner of the screen.
- If [Home] is not shown on , push  (Back) to show [Home] on .


2. Push  (Menu).

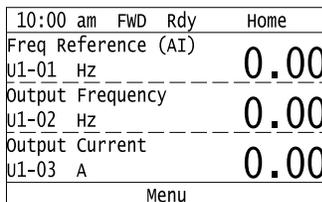

3. Push  or  to select [Monitors], then push .

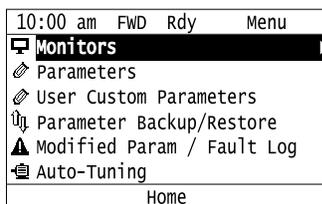

4. Push  or  to select [Standard Monitor], then push .

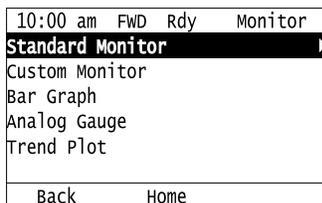

5. Push  or  to select monitor group, then push .

10:00 am	FWD	Rdy	Monitor
<b>U1 Operation Status Monitors</b> ▶			
U2 Fault Trace			
U3 Fault History			
U4 Maintenance Monitors			
U5 PID Monitors			
U6 Operation Status Monitors			
Back		Home	

6. Push  or  to change the monitor number to show the monitor item.

**Note:**

Push  to go back to the previous page.

10:00 am	FWD	Rdy	Monitor
Terminal A1 Input Lv			0.0
U1-13 %			0.0
Terminal A2 Input Lv			0.0
U1-14 %			0.0
Terminal A3 Input Lv			0.0
U1-15 %			0.0
Home			

## ◆ Set Custom Monitors

You can select and register a maximum of 12 monitoring items to regularly show on the keypad. This procedure shows how to set the motor speed to [Custom Monitor 1].

1. Push  (Home) to show the HOME screen.

**Note:**

- The keypad will show [Home] in the top right corner when the HOME screen is active.
- If the keypad does not show [Home] on , push  (Back) to show [Home] on .

2. Push  (Menu).

10:00 am	FWD	Rdy	Home
Freq Reference (AI)			0.00
U1-01 Hz			0.00
Output Frequency			0.00
U1-02 Hz			0.00
Output Current			0.00
U1-03 A			0.00
Menu			

3. Push  or  to select [Monitors], then push .

10:00 am	FWD	Rdy	Menu
<b>Monitors</b> ▶			
Parameters			
User Custom Parameters			
Parameter Backup/Restore			
Modified Param / Fault Log			
Auto-Tuning			
Home			

4. Push  or  to select [Custom Monitor], then push  (Setup).

10:00 am	FWD	Rdy	Monitor
Standard Monitor			
<b>Custom Monitor</b> ▶			
Bar Graph			
Analog Gauge			
Trend Plot			
Back		Home Setup	

5. Push  or  to select [Custom Monitor 1], then push .

10:00 am	FWD	Setup
Custom Monitor 1		
Custom Monitor 2		
Custom Monitor 3		
Custom Monitor 4		
Custom Monitor 5		
Custom Monitor 6		
Back	Home	

6. Push  or  to select the monitor number to register, then push .

Set the x-xx part of monitor *Ux-xx*. For example, to show monitor *U1-05*, set it to “105” as shown in this figure.

10:00 am	FWD	Parameters
Custom Monitor 1		
01-24	105	
Motor Speed		
Default : 101		
Back	Default	

The configuration procedure is complete.

### ◆ Show Custom Monitors

The procedure in this section shows how to show the registered custom monitors.

1. Push  [Home] to show the HOME screen.

**Note:**

- The keypad will [Home] in the top right corner when the HOME screen is active.
- If [Home] is not shown on , push  [Back] to show [Home] on .

2. Push  [Menu].

10:00 am	FWD	Rdy	Home
Freq Reference (AI)			
U1-01	Hz	0.00	
Output Frequency			
U1-02	Hz	0.00	
Output Current			
U1-03	A	0.00	
Menu			

3. Push  or  to select [Monitors], then push .

10:00 am	FWD	Rdy	Menu
Monitors			
Parameters			
User Custom Parameters			
Parameter Backup/Restore			
Modified Param / Fault Log			
Auto-Tuning			
Home			

4. Push  or  to select [Custom Monitor], then push .

10:00 am	FWD	Rdy	Monitor
Standard Monitor			
Custom Monitor			
Bar Graph			
Analog Gauge			
Trend Plot			
Back	Home	Setup	

The keypad shows the selected monitor as shown in this figure.

10:00 am FWD Rdy	Monitor
Motor Speed	
U1-05 Hz	20.00
Output Power	
U1-08 kw	15.0
Terminal A1 Level	
U1-13 %	30.0
Home	

- When there are a minimum of two screens, push  or  to switch between screens.
- If you registered only one custom monitor to [Custom Monitor 1], the screen will show only one monitor. If you registered custom monitors only to [Custom Monitor 1] and [Custom Monitor 2], the screen will show only two monitors.

## ◆ Set the Monitors to Show as a Bar Graph

The procedure in this section shows how to show the frequency reference monitor as a bar graph.

1. Push  [Home] to show the HOME screen.

### Note:

- The keypad will [Home] in the top right corner when the HOME screen is active.
- If [Home] is not shown on , push  [Back] to show [Home] on .

2. Push  [Menu].

10:00 am FWD Rdy	Home
Freq Reference (AI)	
U1-01 Hz	0.00
Output Frequency	
U1-02 Hz	0.00
Output Current	
U1-03 A	0.00
Menu	

3. Push  or  to select [Monitors], then push .

10:00 am FWD Rdy	Menu
 Monitors	
 Parameters	
 User Custom Parameters	
 Parameter Backup/Restore	
 Modified Param / Fault Log	
 Auto-Tuning	
Home	

4. Push  or  to select [Bar Graph], then push  [Setup].

10:00 am FWD Rdy	Monitor
Standard Monitor	
Custom Monitor	
<b>Bar Graph</b>	
Analog Gauge	
Trend Plot	
Back	Home Setup

5. Push  or  to select the location to store the monitor, then push .

10:00 am FWD	Setup
<b>Custom Monitor 1</b>	
Custom Monitor 2	
Custom Monitor 3	
Back	Home

6. Push .

10:00 am	FWD	Setup
Custom Monitor 1		
o1-24	101	(101)
1st Monitor Area Selection		
o1-41	0	(0)
Back	Home	

7. Push  or  to select the monitor number to register, then push .

Monitor Set the x-xx part of the *Ux-xx*. For example, to show monitor *U1-01* [*Frequency Reference*], set it to "101" as shown in this figure.

10:00 am	FWD	Parameters
Custom Monitor 1		
o1-24	101	
Frequency Reference		
Default : 101		
Back	Default	

The configuration procedure is complete.

### ◆ Show Monitors as Bar Graphs

The procedure in this section shows how to show a specific monitor as a bar graph. You can show a maximum of three.

1. Push  (Home) to show the HOME screen.

**Note:**

- When the drive is in HOME Mode, the screen shows [Home] in the upper right-hand corner of the screen.
- If the screen does not show [Home] for , push  (Back), and then push  to show [Home].

2. Push  (Menu).

10:00 am	FWD	Rdy	Home
Freq Reference (AI)			
U1-01	Hz		0.00
Output Frequency			
U1-02	Hz		0.00
Output Current			
U1-03	A		0.00
Menu			

3. Push  or  to select [Monitors], then push .

10:00 am	FWD	Rdy	Menu
Monitors			
Parameters			
User Custom Parameters			
Parameter Backup/Restore			
Modified Param / Fault Log			
Auto-Tuning			
Home			

4. Push  or  to select [Display Bar Graph], then push .

10:00 am	FWD	Rdy	Monitor
Standard Monitor			
Custom Monitor			
Bar Graph			
Analog Gauge			
Trend Plot			
Back	Home	Setup	

The screen will show the monitors as shown in this figure.

10:00 am	FWD	Rdy	Monitor
U1-01	-100%	30.00Hz	100%
U1-02	-100%	30.00Hz	100%
U1-03	-100%	3.00A	100%
Home			

## ◆ Set the Monitors to Show as Analog Gauges

The procedure in this section shows how to show the frequency reference monitor as an analog gauge.

1. Push **F2** [Home] to show the HOME screen.

### Note:

- The keypad will [Home] in the top right corner when the HOME screen is active.
- If [Home] is not shown on **F2**, push **F1** [Back] to show [Home] on **F2**.

2. Push **F2** [Menu].

10:00 am	FWD	Rdy	Home
Freq Reference (AI)			
U1-01 Hz	-----		0.00
Output Frequency			
U1-02 Hz	-----		0.00
Output Current			
U1-03 A	-----		0.00
Menu			

3. Push  or  to select [Monitors], then push .

10:00 am	FWD	Rdy	Menu
Monitors			
Parameters			
User Custom Parameters			
Parameter Backup/Restore			
Modified Param / Fault Log			
Auto-Tuning			
Home			

4. Push  or  to select [Analog Gauge], then push **F3** [Setup].

10:00 am	FWD	Rdy	Monitor
Standard Monitor			
Custom Monitor			
Bar Graph			
Analog Gauge			
Trend Plot			
Back		Home Setup	

5. Push .

10:00 am	FWD	Setup
Analog Gauge		
Custom Monitor 1		
o1-24	101	(101)
Analog Gauge Area Selection		
o1-55	1	(1)
Back		Home

6. Push  or  to select the monitor number to register, then push .

Monitor Set the x-xx part of the  $U_x-xx$ . For example, to show monitor  $U1-01$  [Frequency Reference], set it to "101" as shown in this figure.

10:00 am FWD	Parameters
Custom Monitor 1	
U1-24	<b>101</b>
Frequency Reference	
Default : 101	
Back	Default

The configuration procedure is complete.

### ◆ Show Monitors as an Analog Gauge

The following explains how to display the contents selected for a monitor as an analog gauge.

1. Push **F2** (Home) to show the HOME screen.

**Note:**

- The keypad will show [Home] in the top right corner when the HOME screen is active.
- If [Home] is not on **F2**, push **F1** (Back) to show [Home] on **F2**.

2. Push **F2** (Menu).

10:00 am FWD Rdy	Home
Freq Reference (AI)	
U1-01 Hz	0.00
Output Frequency	
U1-02 Hz	0.00
Output Current	
U1-03 A	0.00
	Menu


3. Push **▲** or **▼** to select [Monitors], then push **↵**.

10:00 am FWD Rdy	Menu
<b>Monitors</b>	
Parameters	
User Custom Parameters	
Parameter Backup/Restore	
Modified Param / Fault Log	
Auto-Tuning	
	Home

4. Push **▲** or **▼** to select [Analog Gauge], then push **↵**.


10:00 am FWD Rdy	Monitor
Standard Monitor	
Custom Monitor	
Bar Graph	
<b>Analog Gauge</b>	
Trend Plot	
Back	Home Setup

It will be displayed as follows.

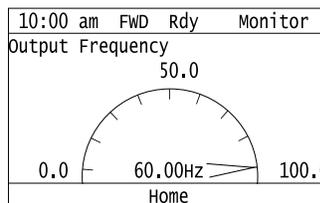

### ◆ Set Monitor Items to Show as a Trend Plot

You must set the items in this figure to display as a trend plot.

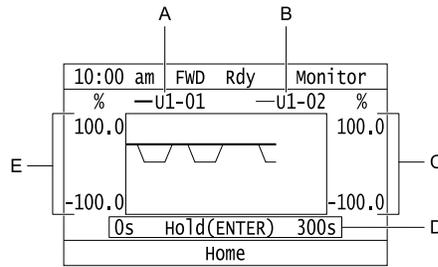

- A - Monitor Parameter 1 (set with [Custom Monitor 1])**    **D - Trend Plot Time Scale**  
**B - Monitor Parameter 2 (set with [Custom Monitor 2])**    **E - Trend Plot 1 Scale Maximum/Minimum Value**  
**C - Trend Plot 2 Scale Maximum/Minimum Value**

## ■ Select Monitor Items to Show as a Trend Plot

The procedure in this section shows how to show the frequency reference monitor as a trend plot.

1. Push **F2** [Home] to show the HOME screen.

**Note:**

- The keypad will [Home] in the top right corner when the HOME screen is active.
- If [Home] is not shown on **F2**, push **F1** [Back] to show [Home] on **F2**.

2. Push **F2** [Menu].

10:00 am	FWD	Rdy	Home
Freq Reference (AI)			
U1-01	Hz		0.00
Output Frequency			
U1-02	Hz		0.00
Output Current			
U1-03	A		0.00
Menu			

3. Push **▲** or **▼** to select [Monitors], then push **↵**.

10:00 am	FWD	Rdy	Menu
Monitors			
Parameters			
User Custom Parameters			
Parameter Backup/Restore			
Modified Param / Fault Log			
Auto-Tuning			
Home			

4. Push **▲** or **▼** to select [Trend Plot], then push **F3** [Setup].

10:00 am	FWD	Rdy	Monitor
Standard Monitor			
Custom Monitor			
Bar Graph			
Analog Gauge			
Trend Plot			
Back Home Setup			

5. Push **▲** or **▼** to select [Custom Monitor 1], then push **↵**.

10:00 am	FWD		Setup
Custom Monitor 1			
Custom Monitor 2			
Trend Plot Time Scale Setting			
Back Home			

6. Push .

10:00 am FWD	Setup
Custom Monitor 1	
o1-24	101 (101)
Trend Plot 1 Scale Minimum Value	
o1-47	-100.0 (-100.0)%
Back	Home

7. Push  or  to select the monitor number to register, then push .

When the *U* parameters are on the display as "Ux-xx", the three digits in "x-xx" identify which monitor to output. For example, to show monitor U1-01 [Frequency Reference], set it to "101" as shown in this figure.

10:00 am FWD	Parameters
Custom Monitor 1	
o1-24	101
Frequency Reference	
Default : 101	
Back	Default

8. Push  or  to select [Trend Plot 1 Scale Minimum Value], then push .

10:00 am FWD	Setup
Custom Monitor 1	
Trend Plot 1 Scale Minimum Value	
o1-47	-100.0 (-100.0)%
Trend Plot 1 Scale Maximum Value	
o1-48	100.0 ( 100.0)%
Back	Home

9. Push  or  to select the specified digit, then push  or  to select the correct number.

10:00 am FWD	Parameters
Trend Plot 1 Scale Minimum Value	
o1-47	-100.0 %
Default : -100.0%	
Range : -300.0~ 99.9	
Back	Default Min/Max

- Push  [Default] to set the parameters to factory defaults.
- Push  [Min/Max] to move between the minimum value and maximum value.

10. Push  to keep the changes.

10:00 am FWD	Parameters
Trend Plot 1 Scale Minimum Value	
o1-47	0020.0 %
Default : -100.0%	
Range : -300.0~ 99.9	
Back	Default Min/Max

11. Push  or  to select [Trend Plot 1 Scale Maximum Value], then push .

10:00 am FWD	Setup
Custom Monitor 1	
Trend Plot 1 Scale Minimum Value	
o1-47	100.0 (-100.0)%
Trend Plot 1 Scale Maximum Value	
o1-48	100.0 ( 100.0)%
Back	Home

12. Push or to select the specified digit, then push or to select the correct number.

10:00 am	FWD	Parameters
Trend Plot 1 Scale Maximum Value		
01-48	0	100.0 %
Default : 100.0%		
Range : 20.1~ 300.0		
Back	Default	Min/Max

- Push [Default] to set the parameters to factory defaults.
- Push [Min/Max] to move between the minimum value and maximum value.

13. Push to keep the changes.

10:00 am	FWD	Parameters
Trend Plot 1 Scale Maximum Value		
01-48	00	80.0 %
Default : 100.0%		
Range : 20.1~ 300.0		
Back	Default	Min/Max

14. Push [Back].

If necessary, use the same procedure to set [Custom Monitor 2].

## ■ Set the Time Scale for the Trend Plot Monitor

The procedure in this section shows how to set the time scale for the trend plot monitor.

1. Push (Home) to show the HOME screen.

### Note:

- The keypad will show [Home] in the top right corner when the HOME screen is active.
- If [Home] is not shown on , push (Back) to show [Home] on .

2. Push (Menu).

10:00 am	FWD	Rdy	Home
Freq Reference (AI)			
U1-01	Hz		0.00
Output Frequency			
U1-02	Hz		0.00
Output Current			
U1-03	A		0.00
Menu			

3. Push or to select [Monitors], then push .

10:00 am	FWD	Rdy	Menu
Monitors			
Parameters			
User Custom Parameters			
Parameter Backup/Restore			
Modified Param / Fault Log			
Auto-Tuning			
Home			

4. Push or to select [Trend Plot], then push (Setup).

10:00 am	FWD	Rdy	Monitor
Standard Monitor			
Custom Monitor			
Bar Graph			
Analog Gauge			
Trend Plot			
Back Home Setup			

5. Push  or  to select [Trend Plot Time Scale Setting], then push .

10:00 am	FWD	Setup
1st Monitor Setting		
2nd Monitor Setting		
<b>Trend Plot Time Scale Setting ▶</b>		
Back	Home	

6. Push  or  to select the specified digit, then push  or  to select the correct number.

10:00 am	FWD	Parameters
Trend Plot Time Scale Setting		
01-51	<b>0</b>	300 sec
Default : 300sec		
Range : 1~3600		
Back	Default	Min/Max

- Push  (Default) to set the parameters to the factory default.
- Push  (Min/Max) to move between the minimum value and maximum value.

7. Push  to keep the changes.

10:00 am	FWD	Parameters
Trend Plot Time Scale Setting		
01-51	<b>1</b>	300 sec
Default : 300sec		
Range : 1~3600		
Back	Default	Min/Max

The configuration procedure is complete.

## ◆ Show Monitor Items as a Trend Plot

The procedure in this section shows how to show the selected monitor data as a trend plot.

1. Push  (Home) to show the HOME screen.

**Note:**

- The keypad will show [Home] in the top right corner when the HOME screen is active.
- If [Home] is not shown on , push  (Back) to show [Home] on .

2. Push  (Menu).

10:00 am	FWD	Rdy	Home
Freq Reference (AI)			
U1-01	Hz	0.00	
Output Frequency			
U1-02	Hz	0.00	
Output Current			
U1-03	A	0.00	
Menu			


3. Push  or  to select [Monitors], then push .

10:00 am	FWD	Rdy	Menu
<b>Monitors ▶</b>			
Parameters			
User Custom Parameters			
Parameter Backup/Restore			
Modified Param / Fault Log			
Auto-Tuning			
Home			

4. Push  or  to select [Trend Plot], then push .

10:00 am FWD Rdy Monitor
Standard Monitor
Custom Monitor
Bar Graph
Analog Gauge
<b>Trend Plot</b>
Back Home Setup

The screen will show the monitors as shown in this figure.

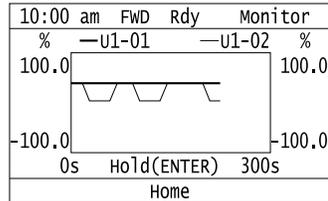

**Note:**

Push  (Hold) to switch between Pause and Restart for the monitor display. The “Hold (ENTER)” message flashes while you pause monitoring.

## ◆ Change Parameter Setting Values

This example shows how to change the setting value for *C1-01 [Acceleration Time 1]*. Do the steps in this procedure to set parameters for the application.

1. Push  (Home) to show the HOME screen.

**Note:**

- When the drive is in HOME Mode, the screen shows [Home] in the upper right-hand corner of the screen.
- If [Home] is not shown above the , push  (Back).

2. Push  (Menu).

10:00 am FWD Rdy Home
Freq Reference (AI)
U1-01 Hz 0.00
Output Frequency
U1-02 Hz 0.00
Output Current
U1-03 A 0.00
Menu

3. Push  or  to select [Parameters], then push .

10:00 am FWD Menu
Monitors
<b>Parameters</b>
User Custom Parameters
Parameter Backup/Restore
Modified Param / Fault Log
Auto-Tuning
Home

4. Push  or  to select [C Tuning], then push .

10:00 am FWD Parameters
A Initialization Parameters
b Application
<b>C Tuning</b>
d References
E Motor Parameters
F Options
Back Home

5. Push or to select [C1 Accel & Decel Time], then push .

10:00 am	FWD	Parameters
C1 Accel & Decel Time ▶		
C2 S-Curve Characteristics		
C3 Slip Compensation		
C4 Torque Compensation		
C6 Carrier Frequency		
Back	Home	

6. Push or to select C1-01, then push .

10:00 am	FWD	Parameters
Acceleration Time 1		
C1-01	10.0	(10.0)sec
Deceleration Time 1		
C1-02	10.0	(10.0)sec
Acceleration Time 2		
C1-03	10.0	(10.0)sec
Back	Home	

7. Push or to select the specified digit, then push or to select the correct number.

10:00 am	FWD	Parameters
Acceleration Time 1		
C1-01	0010.0sec	
Default : 10.0sec		
Range : 0.0~6000.0		
Back	Default	Min/Max

- Push [Default] to set the parameter to factory default.
- Push [Min/Max] to show the minimum value or the maximum value on the display.

8. Push to keep the changes.

10:00 am	FWD	Parameters
Acceleration Time 1		
C1-01	0020.0 sec	
Default : 10.0 sec		
Range : 0.0~6000.0		
Back	Default	Min/Max

9. Continue to change parameters, then push [Back], [Home] to go back to the home screen after you change all the applicable parameters.

## ◆ Examine User Custom Parameters

The User Custom Parameters show the parameters set in A2-01 to A2-32 [User Parameter 1 to User Parameter 32] to let you quickly access and change settings to these parameters.

**Note:**

The User Custom Parameters always show A1-06 [Application Selection] at the top of the list. The A2-01 to A2-32 settings change when the A1-06 setting changes, which makes it easier to set and reference the necessary parameter settings.

1. Push (Home) to show the HOME screen.

**Note:**

- The keypad will show [Home] in the top right corner when the HOME screen is active.
- If [Home] is not shown on , push (Back) to show [Home] on .

2. Push **F2** (Menu).

10:00 am	FWD	Rdy	Home
Freq Reference (AI)			
U1-01	Hz		0.00
Output Frequency			
U1-02	Hz		0.00
Output Current			
U1-03	A		0.00
Menu			

3. Push  or  to select [User Custom Parameters], then push .

10:00 am	FWD		Menu
Monitors			
Parameters			
<b>User Custom Parameters</b>			
Parameter Backup/Restore			
Modified Param / Fault Log			
Auto-Tuning			
Home			

4. Push  or  to show the parameter to examine.

10:00 am	FWD		Parameters
<b>Application Preset</b>			
A1-06	0		(0)
Control Method Selection			
A1-02	0		(0)
Frequency Reference Selection 1			
b1-01	1		(1)
Back		Home	

5. To change the parameter settings, push  or  to select the parameter, then push .

10:00 am	FWD		Parameters
Application Preset			
A1-06	0		(0)
<b>Control Method Selection</b>			
A1-02	0		(0)
Frequency Reference Selection 1			
b1-01	1		(1)
Back		Home	

6. Push  or  to select the digit, then push  or  to change the value.

10:00 am	FWD		Parameters
Control Method Selection			
A1-02		<b>0</b>	
V/f Control			
Default : 0			
Back		Default	

7. Change the value, push .

10:00 am	FWD		Parameters
Control Method Selection			
A1-02		<b>5</b>	
PM Open Loop Vector			
Default : 0			
Back		Default	

The parameter setting procedure is complete.

## ◆ Save a Backup of Parameters

You can save a backup of the drive parameters to the keypad. The keypad can store parameter setting values for a maximum of four drives in different storage areas. Backups of the parameter settings can save time when you set parameters after you replace a drive. When you set up more than one drive, you can copy the parameter settings from a drive that completed a test run to the other drives.

### Note:

- Stop the motor before you back up parameters.
- The drive will not accept a Run command while it makes a backup.

1. Push **F2** (Home) to show the HOME screen.

### Note:

- When the drive is in HOME Mode, the screen shows [Home] in the upper right-hand corner of the screen.
- If the screen does not show [Home] for **F2**, push **F1** (Back), and then push **F2** to show [Home].

2. Push **F2** (Menu).

10:00 am FWD Rdy	Home
Freq Reference (AI)	0.00
U1-01 Hz	0.00
Output Frequency	0.00
U1-02 Hz	0.00
Output Current	0.00
U1-03 A	0.00
Menu	

3. Push **▲** or **▼** to select [Parameter Backup/Restore], then push **↵**.

10:00 am FWD	Menu
Monitors	
Parameters	
User Custom Parameters	
<b>Parameter Backup/Restore</b>	▶
Modified Param / Fault Log	
Auto-Tuning	
Home	

4. Push **▲** or **▼** to select the items to back up, then push **↵**.

10:00 am FWD	Backup
Select Items to Backup/Restore	
<b>Standard Parameters</b>	▶
Back	Home

5. Push **▲** or **▼** to select [Backup (drive → keypad)], then push **↵**.

10:00 am FWD	Backup
Select Desired Action	
<b>Backup (drive → keypad)</b>	▶
Restore (keypad → drive)	
Verify (check for mismatch)	
Erase (backup data of keypad)	
Back	Home

6. Push  or  to select a memory location, then push .

10:00 am	FWD	Backup
Select Backup/Restore Location		
#1	No Data	▶
#2	No Data	
#3	No Data	
#4	No Data	
Back	Home	

The keypad shows “End” when the backup procedure completes successfully.

## ◆ Write Backed-up Parameters to the Drive

You can back up parameters on the keypad and write them to different drives.

### Note:

- Always stop the drive before you start to restore the parameter backups.
- The drive will not accept a Run command while it restores parameters.

1. Push  (Home) to show the HOME screen.

### Note:

- When the drive is in HOME Mode, the screen shows [Home] in the upper right-hand corner of the screen.
- If the screen does not show [Home] for , push  (Back), and then push  to show [Home].

2. Push  (Menu).

10:00 am	FWD	Rdy	Home
Freq Reference (AI)			
U1-01	Hz		0.00
Output Frequency			
U1-02	Hz		0.00
Output Current			
U1-03	A		0.00
Menu			

3. Push  or  to select [Parameter Backup/Restore], then push .

10:00 am	FWD	Menu
Monitors		
Parameters		
User Custom Parameters		
Parameter Backup/Restore		▶
Modified Param / Fault Log		
Auto-Tuning		
Home		

4. Push  or  to select the item to restore, then push .

10:00 am	FWD	Backup
Select Items to Backup/Restore		
Standard Parameters ▶		
Back	Home	

5. Push  or  to select [Restore (keypad → drive)], then push .

10:00 am	FWD	Backup
Select Desired Action		
Backup (drive → keypad)		
Restore (keypad → drive) ▶		
Verify (check for mismatch)		
Erase (backup data of keypad)		
Back	Home	

6. Push  or  to select the backed-up parameter data, then push .

10:00 am	FWD	Backup
Select Backup/Restore Location		
#1	2020/01/01 13:00	0-65
#2	No Data	
#3	No Data	
#4	No Data	
Back		Home

The keypad will show the “End” message when the write process is complete.

**Note:**

Different settings and conditions will change the keypad display.

		A	B
	10:00 am	FWD	Backup
	Select Backup/Restore Location		
E	#1	2020/01/01 14:10	0-65
	#2	2020/01/01 02:10pm	5-65
D	#3	----/--/-- --:--	8-65
C	#4	No Data	
Back		Home	

- A - A1-02 [Control Method Selection] settings
- B - o2-04 [Drive Model (KVA) Selection] settings (2 or 3 digits)
- C - Parameter backup data is not registered
- D - Backup data does not contain the date information
- E - Backup date

### ◆ Verify Keypad Parameters and Drive Parameters

This procedure verifies that the parameter setting values that were backed up in the keypad agree with the parameter setting values in the drive.

**Note:**

- Always stop the drive before you start to verify the parameters.
- The drive will not accept a Run command while it verifies parameters.

1. Push  (Home) to show the HOME screen.

**Note:**

- When the drive is in HOME Mode, the screen shows [Home] in the upper right-hand corner of the screen.
- If the screen does not show [Home] for , push  (Back), and then push  to show [Home].

2. Push  (Menu).

10:00 am	FWD	Rdy	Home
Freq Reference (AI)			
U1-01	Hz	0.00	
Output Frequency			
U1-02	Hz	0.00	
Output Current			
U1-03	A	0.00	
Menu			

3. Push  or  to select [Parameter Backup/Restore], then push .

10:00 am	FWD	Menu
	Monitors	
	Parameters	
	User Custom Parameters	
	Parameter Backup/Restore	
	Modified Param / Fault Log	
	Auto-Tuning	
Home		

4. Push  or  to select the item to verify, then push .

10:00 am	FWD	Backup
Select Items to Backup/Restore		
Standard Parameters ▶		
Back	Home	

5. Push  or  to select [Verify (drive → keypad)], then push .

10:00 am	FWD	Backup
Select desired action.		
Backup (drive → keypad)		
Restore (keypad → drive)		
Verify (check for mismatch) ▶		
Erase (backup data of keypad)		
Back	Home	

6. Push  or  to select the data to verify, then push .

10:00 am	FWD	Backup
Select Backup/Restore Location		
#1 2020/01/01 13:00 0-65 ▶		
#2 No Data		
#3 No Data		
#4 No Data		
Back	Home	

The keypad shows “End” when the parameter settings backed up in the keypad agree with the parameter settings copied to the drive.

**Note:**

The keypad shows *vFyE [Parameters do not Match]* when the parameter settings backed up in the keypad do not agree with the parameter settings copied to the drive. Push one of the keys to return to the screen in Step 6.

## ◆ Delete Parameters Backed Up to the Keypad

This procedure deletes the parameters that were backed up to the keypad.

1. Push  (Home) to show the HOME screen.

**Note:**

- When the drive is in HOME Mode, the screen shows [Home] in the upper right-hand corner of the screen.
- If the screen does not show [Home] for , push  (Back), and then push  to show [Home].

2. Push  (Menu).

10:00 am	FWD	Rdy	Home
Freq Reference (AI)			
U1-01	Hz	0.00	
Output Frequency			
U1-02	Hz	0.00	
Output Current			
U1-03	A	0.00	
Menu			

3. Push  or  to select [Parameter Backup/Restore], then push .

10:00 am FWD	Menu
Monitors	
Parameters	
User Custom Parameters	
<b>Parameter Backup/Restore</b>	▶
Modified Param / Fault Log	
Auto-Tuning	
Home	

4. Push  or  to select the item to verify, then push .

10:00 am FWD	Backup
Select Items to Backup/Restore	
<b>Standard Parameters</b>	▶
Back	Home

5. Push  or  to select [Delete (keypad)], then push .

10:00 am FWD	Backup
Select desired action.	
Backup (drive → keypad)	
Restore (keypad → drive)	
Verify (check for mismatch)	
<b>Erase (backup data of keypad)</b>	▶
Back	Home

6. Push  or  to select the data to delete, then push .

10:00 am FWD	Backup
Select Backup/Restore Location	
<b>#1 2020/01/01 14:10 0-65</b>	▶
#2 2020/01/01 02:10pm 5-65	
#3 ----/--/-- -:-- 8-65	
#4 No Data	
Back	Home

The keypad will show the “End” message when the write process is complete.

### ◆ Check Modified Parameters

This procedure will show all parameters that are not at their default values. This is very useful when you replace a drive. This lets you quickly access and re-edit changed parameters. When all parameters are at their default values, the keypad will show “0 Parameters”.

1. Push  (Home) to show the HOME screen.

**Note:**

- When the drive is in HOME Mode, the screen shows [Home] in the upper right-hand corner of the screen.
- If [Home] is not shown on , push  (Back) to show [Home] on .

2. Push  (Menu).

10:00 am FWD Rdy	Home
Freq Reference (AI)	
U1-01 Hz	0.00
-----	
Output Frequency	
U1-02 Hz	0.00
-----	
Output Current	
U1-03 A	0.00
Menu	

3. Push  or  to select [Modified Param / Fault Log], then push .

10:00 am FWD	Menu
Monitors	
Parameters	
User Custom Parameters	
Parameter Backup/Restore	
<b>Modified Param / Fault Log</b>	<b>▶</b>
Auto-Tuning	
Home	

4. Push  or  to select [Modified Parameters], then push .

10:00 am FWD	History
<b>Modified Parameters</b>	<b>▶</b>
Fault Log	
Back	Home

5. Push .

10:00 am FWD	Modified
User Modified Parameters	
<b>Standard:</b>	<b>▶</b>
<b>2 Parameters Modified</b>	
Back	Home

6. Push  or  to show the parameter to examine.

10:00 am FWD	Modified
<b>Acceleration Time 1</b>	
<b>C1-01</b>	<b>20.0 (10.0)sec</b>
Motor Rated Current (FLA)	
E2-01	97.2 (77.2)A
Back	Home

7. To re-edit a parameter, push  or , select the parameter to edit, then push .

10:00 am FWD	Modified
<b>Acceleration Time 1</b>	
<b>C1-01</b>	<b>20.0 (10.0)sec</b>
Motor Rated Current (FLA)	
E2-01	97.2 (77.2)A
Back	Home

8. Push  or  to select the digit, then push  or  to change the value.

10:00 am FWD	Parameters
Acceleration Time 1	
C1-01	<b>00</b> 20.0 sec
Default : 10.0sec	
Range : 0.0~6000.0	
Back	Default Min/Max

9. When you are done changing the value, push .

10:00 am	FWD	Parameters
Acceleration Time 1		
C1-01	0030.0	sec
Default : 10.0sec		
Range : 0.0~6000.0		
Back	Default	Min/Max

The parameter revision procedure is complete.

### ◆ Restore Modified Parameters to Defaults

This procedure will set all parameters with changed values to their default settings.

1. Push  (Home) to show the HOME screen.

**Note:**

- The keypad will show [Home] in the top right corner when the HOME screen is active.
- If [Home] is not shown on , push  (Back) to show [Home] on .

2. Push  (Menu).

10:00 am	FWD	Rdy	Home
Freq Reference (AI)			
U1-01	Hz		0.00
Output Frequency			
U1-02	Hz		0.00
Output Current			
U1-03	A		0.00
Menu			

3. Push  or  to select [Modified Param / Fault Log], then push .

10:00 am	FWD	Menu
	Monitors	
	Parameters	
	User Custom Parameters	
	Parameter Backup/Restore	
	<b>Modified Param / Fault Log</b>	
	Auto-Tuning	
Home		

4. Push  or  to select [Modified Parameters], then push .

10:00 am	FWD	History
	<b>Modified Parameters</b>	
	Fault Log	
Back Home		

5. Push .

10:00 am	FWD	Modified
User Modified Parameters		
<b>Standard:</b>		
<b>2 Parameters Modified</b>		
Back Home		

6. Push  or  to select the parameters to return to their default settings, then push .

10:00 am	FWD	Modified
Acceleration Time 1		
C1-01	20.0	(10.0)sec
Motor Rated Current (FLA)		
E2-01	97.2	(77.2)A
Back	Home	

7. Push  (Default).

10:00 am	FWD	Parameters
Acceleration Time 1		
C1-01	0020.0	sec
Default : 10.0sec		
Range : 0.0~6000.0		
Back	Default	Min/Max

8. Push .

10:00 am	FWD	Parameters
Acceleration Time 1		
C1-01	0010.0	sec
Default : 10.0sec		
Range : 0.0~6000.0		
Back	Default	Min/Max

The modified parameters are now set to default values.

## ◆ Show Fault History

You can examine a maximum of 10 fault codes and dates and times that the faults occurred.

### Note:

- To monitor the date and time of faults, you must first set the date and time on the keypad.
- If the keypad does not have a clock battery, you must set the date and time each time you energize the drive.

1. Push  (Home) to show the HOME screen.

### Note:

- The keypad will show [Home] in the top right corner when the HOME screen is active.
- If [Home] is not shown on , push  (Back) to show [Home] on .

2. Push  (Menu).

10:00 am	FWD	Rdy	Home
Freq Reference (AI)			
U1-01	Hz		0.00
Output Frequency			
U1-02	Hz		0.00
Output Current			
U1-03	A		0.00
Menu			

3. Push  or  to select [Modified Parameters/Fault History], then push .

10:00 am	FWD	Menu
Monitors		
Parameters		
User Custom Parameters		
Parameter Backup/Restore		
Modified Param / Fault Log		
Auto-Tuning		
Home		

4. Push or to select [Fault History], then push .

10:00 am	FWD	History
	Modified Parameters	
	Fault Log	
Back Home		

5. Push or to show the fault history you will examine.

10:00 am	FWD	History
Fault History Log		
01 ov	2020/01/01 14:00	Overvoltage
02 oc	2020/01/01 13:00	Overcurrent
Back Home		

## ◆ Auto-Tuning the Drive

Auto-Tuning uses motor characteristics to automatically set drive parameters.

Refer to the motor nameplate or the motor test report for the necessary information for Auto-Tuning.

VARTSPEED									
3-PHASE PERMANENT MAGNET MOTOR									
TYPE SST4-					POLES E5-04				
PROTECTION					COOLING				
kW	V	Hz	RATING	A	r/min	r <sub>i</sub>	E5-05		
E5-02	E1-05			E5-03	E1-04, 06	Ld	E5-06		
						Lq	E5-07		
						Ke	E5-09		
INS.	COOLANT TEMP.	°C		ALTITUDE	m	Δθ			
STD			MASS	kg	Δθ'				
BRG NO	DRIVE	OPP			Ki				
SER NO	END	END		YEAR	Kt				
YASKAWA ELECTRIC CORPORATION JAPAN Si									

Figure 5.12 Motor Nameplate (Example)

**WARNING! Sudden Movement Hazard.** Before you do Auto-Tuning, remove all personnel and objects from the area around the drive, motor, and load. The drive and motor can start suddenly during Auto-Tuning and cause serious injury or death.

**WARNING! Electrical Shock Hazard.** During Auto-Tuning, the motor will receive high voltage when the motor is stopped. Do not touch the motor until Auto-Tuning is complete. If you touch a motor that is energized, it can cause serious injury or death.

**WARNING! Sudden Movement Hazard.** Before you do Rotational Auto-Tuning, disconnect the load from the motor. The load can move suddenly and cause serious injury or death.

This procedure shows how to do Rotational Auto-Tuning.

1. Push (Home) to show the HOME screen.


**Note:**

- When the drive is in HOME Mode, the screen shows [Home] in the upper right-hand corner of the screen.
- If the screen does not show [Home] for , push (Back), and then push to show [Home].


2. Push (Menu).

10:00 am	FWD	Rdy	Home
Freq Reference (AI)			
U1-01	Hz	0.00	
Output Frequency			
U1-02	Hz	0.00	
Output Current			
U1-03	A	0.00	
Menu			


3. Push  or  to select [Auto-Tuning], then push .

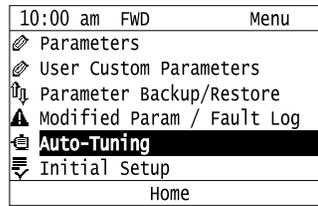

4. Push .

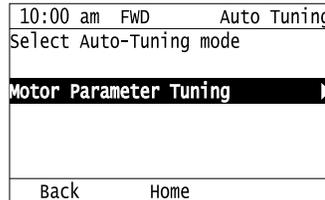


5. Push  or  to select [Rotational Auto-Tuning], then push .

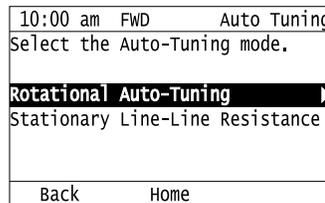


6. Follow the messages shown on the keypad to input the necessary Auto-Tuning data.

Example: Push  or  to select the specified digit, then push  or  to change the number. Push  to save the change and move to the next entry field.

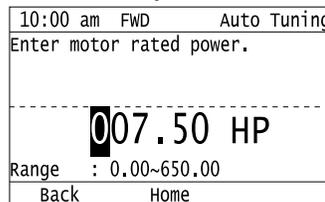

7. Follow the messages shown on the keypad to do the next steps.


8. When the keypad shows the Auto-Tuning start screen, push .

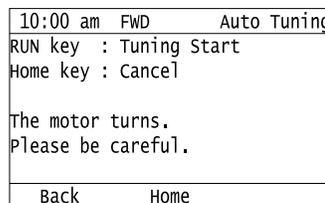

Auto-Tuning starts.


When doing Rotational Auto-Tuning, the motor will stay stopped for approximately one minute with power energized and then the motor will start to rotate.

9. When the keypad shows this screen after Auto-Tuning is complete for 1 or 2 minutes, push  or .

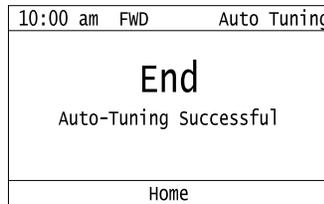

The keypad will show a list of the changed parameters as the result of Auto-Tuning.

10. Push  or  in the parameter change confirmation screen to check the changed parameters, then select [Auto-Tuning Successful] at the bottom of the screen and push .

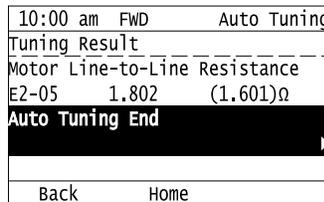


To change a parameter again, push  or  to select the parameter to change, then push  to show the parameter setting screen.

Auto-Tuning is complete.

**Note:**

If the drive detects an error or you push  before Auto-Tuning is complete, Auto-Tuning will stop and the keypad will show an error code. *Endx* identifies that Auto-Tuning was successful with calculation errors. Find and repair the cause of the error and do Auto-Tuning again, or set the motor parameters manually. You can use the drive in the application if you cannot find the cause of the *Endx* error. *Er-xx* identifies that Auto-Tuning was not successful. Find and repair the cause of the error and do Auto-Tuning again.

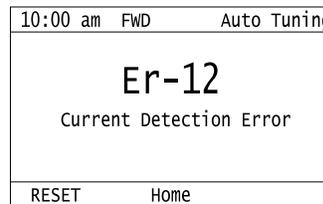

## ◆ Set the Keypad Language Display


The procedure in this section shows how to set the language shown on the keypad.

1. Push  (Home) to show the HOME screen.

**Note:**

- The keypad will show [Home] in the top right corner when the HOME screen is active.
- If [Home] is not shown on , push  (Back), to show [Home] on .

2. Push  (Menu).

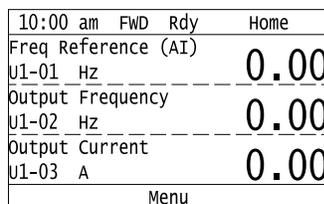

3. Push  or  to select [Initial Settings], then push .

10:00 am	FWD	Menu
	User Custom Parameters	
	Parameter Backup/Restore	
	Modified Param / Fault Log	
	Auto-Tuning	
	<b>Initial Setup</b>	
	Diagnostic Tools	
	Home	

4. Push  or  to select [Language Selection], then push .

10:00 am	FWD	Init Setup
	<b>Language Selection</b>	
	Set Date/Time	
	Show Initial Setup Screen	
	Back	Home

5. Push  or  to select the language, then push .

10:00 am	FWD	Rdy	Init Setup
	Language Selection		
	<b>English</b>		
	日本語 (Japanese)		
	Deutsch		
	Français		
	Italiano		
	Back	Home	

The procedure to set the keypad language is complete.

## ◆ Set the Date and Time

The procedure in this section shows how to set the date and time.

### Note:

- Refer to [Replace the Keypad Battery on page 71](#) for information about the battery installation procedure.
- The drive can detect an alarm when the battery dies or when you do not set the clock. Set *o4-24 = 1 [bAT Detection selection = Enable (Alarm Detected)]* to enable this alarm.
- If the keypad does not have a clock battery, you must set the date and time each time you energize the drive.

1. Push  (Home) to show the HOME screen.


### Note:

- The keypad will show [Home] in the top right corner when the HOME screen is active.
- If [Home] is not shown on , push  (Back) to show [Home] on .


2. Push  (Menu).

10:00 am	FWD	Rdy	Home
Freq Reference (AI)			
U1-01	Hz	0.00	
-----			
Output Frequency			
U1-02	Hz	0.00	
-----			
Output Current			
U1-03	A	0.00	
	Menu		


3. Push  or  to select [Initial Setup], then push .

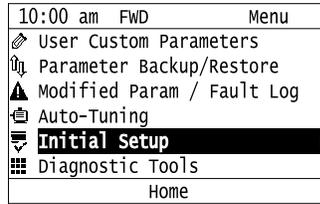


4. Push  or  to select [Set Date/Time], and push .

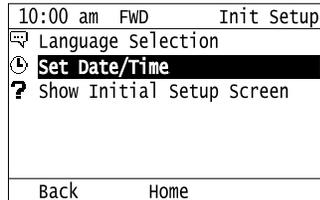


5. Push  or  to select the format of date display, then push .

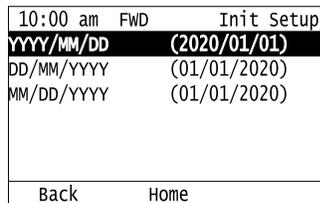


6. Push  or  to select the format of time display, then push .

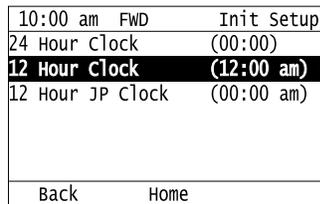


7. Push  or  to select a number from Year/Month/Day, then push  or  to change the value.

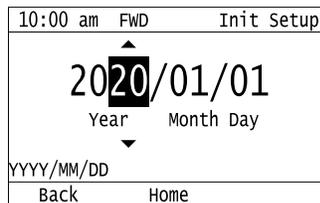


8. When you are done changing the value, push .

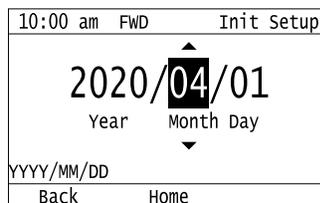

9. Push or to select the hour or minute, then push or to change the value.

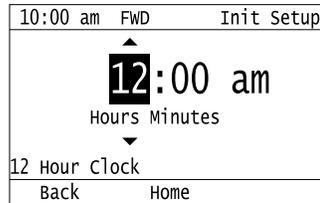

10. When you are done setting the time, push .

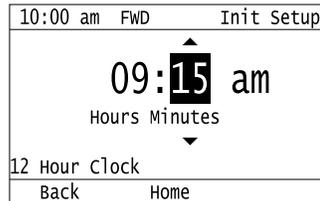

The procedure for setting the date and time is complete.

## ◆ Disable the Initial Setup Screen


Do the steps in this procedure to not show the initial start-up screen when the drive is energized.

1. Push (Home) to show the HOME screen.


### Note:

- When the drive is in HOME Mode, the screen shows [Home] in the upper right-hand corner of the screen.
- If the screen does not show [Home] for , push (Back), and then push to show [Home].


2. Push (Menu).

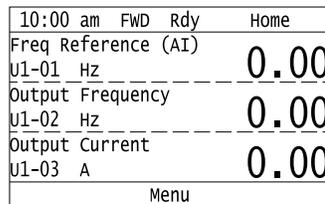

3. Push / to select [Initial Setup], then push .

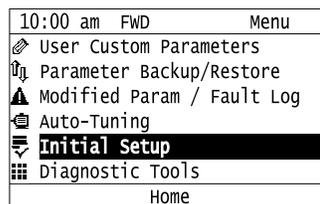

4. Push / to select [Show Initial Setup Screen], then push .

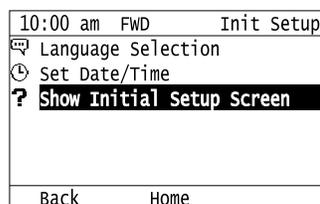

5. Push / to select [No], then push .

10:00 am	FWD	Init Setup
Show Initial Setup Screen		
No		
<b>Yes</b>		
Back	Home	

- [No]: The keypad will not show the Initial Setup Screen when the drive is energized.
- [Yes]: The keypad will show the Initial Setup Screen when the drive is energized.

## ◆ Start Data Logging

The data log function saves drive status information. Monitors *Ux-xx* are the source of log information. The procedure in this section shows how to start logging data.

You can record a maximum of 10 monitors.

1. Insert a microSD card in the keypad.
2. Push (Home) to show the HOME screen.

**Note:**

- When the drive is in HOME Mode, the screen shows [Home] in the upper right-hand corner of the screen.
- If the screen does not show [Home] for , push (Back), and then push to show [Home].

3. Push (Menu).

10:00 am	FWD	Rdy	Home
Freq Reference (AI)			
U1-01	Hz		0.00
Output Frequency			
U1-02	Hz		0.00
Output Current			
U1-03	A		0.00
Menu			

4. Push or to select [Diagnostic Tools], then push .

10:00 am	FWD	Menu
User Custom Parameters		
Parameter Backup/Restore		
Modified Param / Fault Log		
Auto-Tuning		
Initial Setup		
<b>Diagnostic Tools</b>		
Home		

5. Push or to select [Data Logger], then push .

10:00 am	FWD	Tools
<b>Data Logger</b>		
Backlight		
Drive Information		
Back	Home	Setup

6. Push  or  to select [Yes] or [No], then push .

10:00 am	FWD	Tools
Begin Data Logging?		
No		
Yes		
Back	Home	

- [Yes]: Data logging starts.
- [No]: Data logging will not start.

If the drive was logging data when you entered the command, the keypad looks like this:

10:00 am	FWD	Tools
End Data Logging?		
No		
Yes		
Start Time	:2020/01/01 00:00	
Period	:00:10:00	
Back	Home	

## ◆ Configuring the Data Log Content

### ■ Set Monitor to Log

The procedure in this section shows how to set the monitor for which to log data.

1. Push  (Home) to show the HOME screen.

**Note:**

- When the drive is in HOME Mode, the screen shows [Home] in the upper right-hand corner of the screen.
- If the screen does not show [Home] for , push  (Back), and then push  to show [Home].

2. Push  (Menu).

10:00 am	FWD	Rdy	Home
Freq Reference (AI)			
U1-01	Hz	0.00	
Output Frequency			
U1-02	Hz	0.00	
Output Current			
U1-03	A	0.00	
Menu			

3. Push  or  to select [Diagnostic Tools], then push .

10:00 am	FWD	Menu
User Custom Parameters		
Parameter Backup/Restore		
Modified Param / Fault Log		
Auto-Tuning		
Initial Setup		
Diagnostic Tools		
Home		

4. Push  or  to select [Data Logger], then push  (Setup).

10:00 am	FWD	Tools
Data Logger		
Backlight		
Drive Information		
Back	Home	Setup

5. Push  or  to select [Log Monitor], then push .

10:00 am	FWD	Setup
Log Monitor		
Log Sampling Interval		
Back	Home	

6. Push  or  to select the save-destination monitor parameter, then push .

10:00 am	FWD	Setup
Log Monitor		
Log Monitor Data 1		
o5-03	101	(101)
Log Monitor Data 2		
o5-04	102	(102)
Back	Home	

7. Push  or  to select the monitor number to be logged, then push .

10:00 am	FWD	Parameters
Log Monitor Data 1		
o5-03	<b>101</b>	
Frequency Reference		
Default : 101		
Back	Default	

The configuration procedure is complete.

### ■ Set the Sampling Time

The procedure in this section shows how to set the sampling time for data logging.

1. Push  (Home) to show the HOME screen.

**Note:**

- When the drive is in HOME Mode, the screen shows [Home] in the upper right-hand corner of the screen.
- If the screen does not show [Home] for , push  (Back), and then push  to show [Home].

2. Push  (Menu).

10:00 am	FWD	Rdy	Home
Freq Reference (AI)			
U1-01	Hz		0.00
Output Frequency			
U1-02	Hz		0.00
Output Current			
U1-03	A		0.00
Menu			

3. Push  or  to select [Diagnostic Tools], then push .

10:00 am	FWD	Menu
User Custom Parameters		
Parameter Backup/Restore		
Modified Param / Fault Log		
Auto-Tuning		
Initial Setup		
<b>Diagnostic Tools</b>		
Home		

4. Push  or  to select [Data Logger], then push  (Setup).

10:00 am	FWD	Tools
Data Logger		
Backlight		
Drive Information		
Back	Home	Setup

5. Push  or  to select [Log Sampling Interval], then push .

10:00 am	FWD	Setup
Log Monitor		
Log Sampling Interval		
Back	Home	

6. Push  or  to select the digit, then push  or  to change the value.

10:00 am	FWD	Parameters
Log Sampling Interval		
05-02		
00100 ms		
Default : 100ms		
Range : 100~60000		
Back	Default	Min/Max

7. When you complete changing the value, push .

10:00 am	FWD	Parameters
Log Sampling Interval		
05-02		
20000 ms		
Default : 100ms		
Range : 100~60000		
Back	Default	Min/Max

The procedure to set the sampling time is complete.

## ◆ Set Backlight to Automatically Turn OFF

You can set the backlight of the keypad screen to automatically turn OFF after a set length of time since the last key operation on the keypad. The procedure in this section shows how to turn ON and turn OFF the backlight.

1. Push  (Home) to show the HOME screen.

### Note:

- The keypad will show [Home] in the top right corner when the HOME screen is active.
- If [Home] is not shown on , push  (Back) to show [Home] on .

2. Push  (Menu).

10:00 am	FWD	Rdy	Home
Freq Reference (AI)			
U1-01	Hz	-----	0.00
Output Frequency			
U1-02	Hz	-----	0.00
Output Current			
U1-03	A	-----	0.00
Menu			

3. Push  or  to select [Diagnostic Tools], then push .

10:00 am	FWD	Menu
User Custom Parameters		
Parameter Backup/Restore		
Modified Param / Fault Log		
Auto-Tuning		
Initial Setup		
<b>Diagnostic Tools</b>		
Home		

4. Push  or  to select [Backlight], then push .

10:00 am	FWD	Tools
Data Logger		
<b>Backlight</b>		
Drive Information		
Back	Home	Setup

5. Push  or  to select [ON] or [OFF], then push .

10:00 am	FWD	Tools
LCD backlight ON/OFF Selection		
OFF		
<b>ON</b>		
Back	Home	

- [ON]: Backlight is always ON
- [OFF]: Backlight turns OFF after set length of time.

6. Push  (Setup).

10:00 am	FWD	Tools
Data Logger		
<b>Backlight</b>		
Drive Information		
Back	Home	Setup

7. Push .

10:00 am	FWD	Setup
Energy Saving		
<b>LCD Backlight Off-Delay</b>		
01-38	60	(60)sec
Back	Home	

8. Push  or  to select the digit, then push  or  to change the value.

10:00 am	FWD	Parameters
LCD Backlight Off-Delay		
01-38		
	<b>060</b>	sec
Default : 60sec		
Range : 10~300		
Back	Default	Min/Max

9. When you are done changing the value, push .

10:00 am	FWD	Parameters
LCD Backlight Off-Delay		
01-38		
030 sec		
Default : 60sec		
Range : 10~300		
Back	Default	Min/Max

The procedure to set the backlight to turn OFF automatically is complete.

## ◆ Show Information about the Drive

The procedure in this section shows how to show the drive model, maximum applicable motor output, rated output current, software version, and the serial number on the keypad.

1. Push  (Home) to show the HOME screen.

**Note:**

- The keypad will show [Home] in the top right corner when the HOME screen is active.
- If [Home] is not shown on , push  (Back) to show [Home] on .

2. Push  (Menu).

10:00 am	FWD	Rdy	Home
Freq Reference (AI)			
U1-01	Hz		0.00
Output Frequency			
U1-02	Hz		0.00
Output Current			
U1-03	A		0.00
Menu			

3. Push  or  to select [Diagnostic Tools], then push .

10:00 am	FWD	Menu
User Custom Parameters		
Parameter Backup/Restore		
Modified Param / Fault Log		
Auto-Tuning		
Initial Setup		
Diagnostic Tools		
Home		

4. Push  or  to select [Drive Information], then push .

10:00 am	FWD	Tools
Data Logger		
Backlight		
Drive Information		
Back Home		

The keypad will show the drive information.

10:00 am	FWD	Tools
	FP605	A
	200V, 3.0HP	B
	10.60A	C
	<VSPA01010>	D
	S/N: J0065F575310100	E
Back	Home	

**A - Drive Series**

**B - Maximum Applicable Motor Output**

**C - Rated Output Current**

**D - Drive Software Version**

**E - Serial Number**

### ◆ Write Automatically Backed-up Parameters to the Drive

You can automatically back up parameters to the keypad connected to the drive and write those parameters to a drive from the same drive series as specified by the settings of *o3-06 [Auto Parameter Backup Selection]* and *o3-07 [Auto Parameter Backup Interval]*.

**Note:**

- Set *o3-06 = 1 [Auto Parameter Backup Selection = Enabled]* in each drive to which you will write the parameters.
- This operation is not available when the parameters in the keypad and the parameters on the other drives are set to the same values.

1. Connect the keypad to the drive.
2. Push  or  to select [Yes], then push .

10:00 am	FWD	Backup
Drive and keypad mismatch. Should the parameters be restored?		
-----		
No		
Yes 		

3. Push  or  to select [Yes], then push .

10:00 am	FWD	Backup
Starting restore. Are you sure you want to start?		
-----		
No		
Yes 		

The keypad will show the “End” message when the write process is complete.

## 5.8 Automatic Parameter Settings Optimized for Specific Applications (Application Presets)

The drive has application presets to set the necessary parameters for different applications to their best values. To use this function, set  $A1-03 = 8008, 8009, 8010, \text{ or } 8011$  [Initialize Parameters = Pump, Pump w/PID, Fan, Fan w/PID] to change the setting of  $A1-06$  [Application Preset]. To examine the parameters that automatically changed, use [User Custom Parameters] on the Main menu.

**Note:**

- Parameter  $A1-06$  operates only as a monitor. You can read the  $A1-06$  setting but you cannot change the setting directly.
- When you set  $A1-03 = 1110, 2220, \text{ or } 3330$  [User Initialization, 2-Wire Initialization, or 3-Wire Initialization], the drive will reset the  $A1-06$  setting to [0 [General-purpose]].

This section shows the procedure to set an application preset.

1. Push **F2** (Home) to show the HOME screen.

**Note:**

- The keypad will show [Home] in the top right corner when the HOME screen is active.
- If [Home] is not shown on **F2**, push **F1** (Back) to show [Home] on **F2**.

2. Push **F2** (Menu).

10:00 am	FWD	Rdy	Home
Freq Reference (AI)			0.00
U1-01	Hz		0.00
Output Frequency			0.00
U1-02	Hz		0.00
Output Current			0.00
U1-03	A		0.00
Menu			

3. Push **▲** or **▼** to select [Parameters], then push **↵**.

10:00 am	FWD		Menu
Monitors			
<b>Parameters</b>			
User Custom Parameters			
Parameter Backup/Restore			
Modified Param / Fault Log			
Auto-Tuning			
Home			

4. Push **▲** or **▼** to select [A Initialization Parameters], then push **↵**.

10:00 am	FWD		Parameters
<b>A Initialization Parameters</b>			
b Application			
C Tuning			
d References			
E Motor Parameters			
F Options			
Back		Home	

5. Push **▲** or **▼** to select [A1 Initialization], then push **↵**.

10:00 am	FWD		Parameters
<b>A1 Initialization</b>			
A2 User Parameters			
Back		Home	

6. Push  or  to select A1-03 [Initialize Parameters], then push .

10:00 am FWD	Parameters	
Control Method Selection		
A1-02	0	(0)
<b>Initialize Parameters</b>		
A1-03	0	(0)
Password		
A1-04	0	(0)
Back	Home	

7. Push  or  to change the value, then push .

10:00 am FWD	Parameters	
Initialize Parameters		
A1-03	<b>8008</b>	
Pump		
Default : 0		
Back	Default	

The parameter setting procedure is complete.

**Note:**

When the drive changes the setting for application preset, it will also reset the parameters automatically registered to A2-17 to A2-32 [User Parameters 17 to 32] when A2-33 = 1 [User Parameter Auto Selection = Enabled: Auto Save Recent Parm].

## 5.9 Auto-Tuning

Auto-Tuning uses motor characteristics to automatically set drive parameters for vector control. Think about the type of motor, drive control method, and the motor installation environment and select the best Auto-Tuning method.

The keypad will show the messages with prompts to input the necessary parameter information. These prompts are specified by the selected Auto-Tuning method and the control method setting in *A1-02*.

### ◆ Auto-Tuning for Induction Motors

This section gives information about Auto-Tuning for induction motors. Auto-Tuning sets motor parameters *E1-xx*, *E2-xx* (*E3-xx*, *E4-xx* for motor 2).

#### Note:

Do Stationary Auto-Tuning if you cannot do Rotational Auto-Tuning. There can be large differences between the measured results and the motor characteristics when Auto-Tuning is complete. Examine the parameters for the measured motor characteristics after you do Stationary Auto-Tuning.

**Table 5.9 Types of Auto-Tuning for Induction Motors**

Mode	Parameter Settings	Application Conditions and Benefits	Applicable Control Method (A1-02 Setting)
			V/f (0)
Rotational Auto-Tuning	T1-01 = 0	<ul style="list-style-type: none"> <li>When you can decouple the motor and load the motor can rotate freely while Auto-Tuning.</li> <li>When operating motors that have fixed output characteristics.</li> <li>When it is necessary to use motors that have high-precision control.</li> <li>When you cannot decouple the motor and load, but the motor load is less than 30%.</li> </ul>	x
Line-to-Line Resistance	T1-01 = 2	<ul style="list-style-type: none"> <li>After Auto-Tuning, the wiring distance between the drive and motor changed by 50 m or more.</li> <li>When the wiring distance is 50 m or more in the V/f Control mode.</li> <li>When the motor output and drive capacity are different.</li> </ul>	x

### ■ Input Data for Induction Motor Auto-Tuning

To do Auto-Tuning, input data for the items in [Table 5.10](#) that have an "x". Before starting Auto-Tuning, prepare the motor test report or record the information on the motor nameplate as a reference.

**Table 5.10 Input Data for Induction Motor Auto-Tuning**

Input Data	Parameter	Unit	Auto-Tuning Mode (T1-01 Setting)	
			Rotational Auto-Tuning (0)	Line-to-Line Resistance (2)
Motor Rated Power	T1-02	kW	x	x
Motor Rated Voltage	T1-03	V	x	-
Motor Rated Current	T1-04	A	x	x
Motor Base Frequency	T1-05	Hz	x	-
Number of Motor Poles	T1-06	-	x	-
Motor Base Speed	T1-07	min <sup>-1</sup>	x	-
Motor Iron Loss	T1-11	W	x */	-

\*1 Input this value when *A1-02* = 0 [Control Method Selection = V/f Control].

### ◆ Auto-Tuning for Motor Parameters for PM Motor

This section gives information about Auto-Tuning for PM motors. Auto-Tuning sets motor parameters *E1-xx*, *E5-xx*.

Table 5.11 Auto-Tuning for PM Motors

Mode	Parameter Settings	Application Conditions and Benefits	Applicable Control Method (A1-02 Setting)
			OLV/PM (5)
PM Motor Parameter Settings	T2-01 = 0	<ul style="list-style-type: none"> <li>When the information from the motor test report or motor nameplate is available.</li> <li>Rotational/Stationary Auto-Tuning that energizes the motor is not done. Manually input the necessary motor parameters.</li> </ul>	x
PM Stationary Auto-Tuning	T2-01 = 1	<ul style="list-style-type: none"> <li>When the information from the motor test report or motor nameplate is not available.</li> </ul> <p><b>Note:</b> With Stationary Auto-Tuning, the energized drive stays stopped for approximately 1 minute. During this time, the drive automatically measures the necessary motor parameters.</p>	x
PM Stationary Auto-Tuning for Stator Resistance	T2-01 = 2	<ul style="list-style-type: none"> <li>After Auto-Tuning, the wiring distance between the drive and motor changed by 50 m or more.</li> <li>When the motor output and drive capacity are different.</li> </ul>	x
PM Rotational Auto-Tuning	T2-01 = 4	<ul style="list-style-type: none"> <li>When the information from the motor test report or motor nameplate is not available.</li> <li>When you can decouple the motor and load the motor can rotate freely while Auto-Tuning.</li> <li>Values measured during Auto-Tuning are automatically set to the motor parameters.</li> </ul>	x
High Frequency Injection Auto-Tuning	T2-01 = 5	<ul style="list-style-type: none"> <li>Automatically determines the control parameters required to set <math>n8-35 = 1</math> [Initial Pole Detection Method = High Frequency Injection].</li> <li>Applicable to IPM motors only.</li> <li>Perform tuning with the motor connected to the drive.</li> </ul> <p><b>Note:</b> When you want to set <math>n8-35 = 1</math>, perform High Frequency Injection Auto-Tuning. Configure the drive with the data from the motor nameplate before performing High Frequency Injection Auto-Tuning. High Frequency Injection Auto-Tuning automatically makes adjustments while it is stopped but still energized.</p>	x

### ■ Input Data for PM Motor Auto-Tuning

To do Auto-Tuning, input data for the items in Table 5.12 and Table 5.13 that have an "x". Before starting Auto-Tuning, prepare the motor test report or record the information on the motor nameplate as a reference.

Table 5.12 Input Data for PM Motor Auto-Tuning

Input Data	Parameter	Unit	Auto-Tuning Mode (T2-01 Setting)			
			PM Motor Parameter Settings (0)	PM Stationary Auto-Tuning (1)	PM Stationary Auto-Tuning for Stator Resistance (2)	
Control Method Selection	A1-02	-	5			
PM Motor Code Selection	T2-02	-	Motor Code of Yaskawa Motor *1	FFFF *2	-	-
PM Motor Type	T2-03	-	-	-	x	-
PM Motor Rated Power	T2-04	kW	-	x	x	-
PM Motor Rated Voltage	T2-05	V	-	x	x	-
PM Motor Rated Current	T2-06	A	-	x	x	x
PM Motor Base Frequency	T2-07	Hz	-	x	x	-
Number of PM Motor Poles	T2-08	-	-	x	x	-
PM Motor Stator Resistance	T2-10	Ω	x	x	-	-
PM Motor d-Axis Inductance	T2-11	mH	x	x	-	-
PM Motor q-Axis Inductance	T2-12	mH	x	x	-	-
Back-EMF Units Selection	T2-13	-	x	x	-	-

Input Data	Parameter	Unit	Auto-Tuning Mode (T2-01 Setting)		
			PM Motor Parameter Settings (0)	PM Stationary Auto-Tuning (1)	PM Stationary Auto-Tuning for Stator Resistance (2)
Control Method Selection	A1-02	-	5	5	5
PM Motor Code Selection	T2-02	-	Motor Code of Yaskawa Motor */	FFFF *2	-
Back-EMF Voltage Constant (Ke)	T2-14	*3	x	x	-
Pull-In Current Level	T2-15	%	-	-	x

\*1 Set the motor code for a Yaskawa PM motor.

\*2 Set the motor code to FFFF for a PM motor from a different manufacturer.

\*3 Changes when the value set in T2-13 changes.

**Table 5.13 Input Data for PM Motor Auto-Tuning**

Input Data	Parameter	Unit	Auto-Tuning Mode (T2-01 Setting)	
			PM Rotational Auto-Tuning (4)	High Frequency Injection Auto-Tuning (5)
Control Method Selection	A1-02	-	5	5
PM Motor Code Selection	T2-02	-	-	-
PM Motor Type	T2-03	-	x	-
PM Motor Rated Power	T2-04	kW	x	-
PM Motor Rated Voltage	T2-05	V	x	-
PM Motor Rated Current	T2-06	A	x	-
PM Motor Base Frequency	T2-07	Hz	x	-
Number of PM Motor Poles	T2-08	-	x	-
PM Motor Stator Resistance	T2-10	$\Omega$	-	-
PM Motor d-Axis Inductance	T2-11	mH	-	-
PM Motor q-Axis Inductance	T2-12	mH	-	-
Back-EMF Units Selection	T2-13	-	-	-
Back-EMF Voltage Constant (Ke)	T2-14	*1	-	-
Pull-In Current Level	T2-15	%	x	-

\*1 Changes when the value set in T2-13 changes.

## ◆ Auto-Tuning in EZ Open Loop Vector Control Method

This section gives information about the Auto-Tuning mode for EZ Open Loop Vector Control. Auto-Tuning will set the E9-xx parameters.

**Table 5.14 EZ Tuning Mode Selection**

Mode	Parameter Settings	Application Conditions and Benefits	Applicable Control Method (A1-02 Setting)
Motor Parameter Setting	T4-01 = 0	<ul style="list-style-type: none"> <li>Applicable when driving SynRM (Synchronous Reluctance Motors).</li> <li>Suitable for derating torque applications, for example fans and pumps.</li> </ul>	EZOLV (8)
Line-to-Line Resistance	T4-01 = 1	<ul style="list-style-type: none"> <li>After Auto-Tuning, the wiring distance between the drive and motor changed by 50 m or more.</li> <li>When the motor output and drive capacity are different.</li> </ul>	EZOLV (8)

## ■ Auto-Tuning Input Data in EZ Open Loop Vector Control Method

To do Auto-Tuning, input data for the items in [Table 5.15](#) that have an "x". Before starting Auto-Tuning, prepare the motor test report or record the information on the motor nameplate as a reference.

**Table 5.15 Auto-Tuning Input Data in EZ Open Loop Vector Control Method**

Input Data	Parameter	Unit	Auto-Tuning Mode (T4-01 Setting)	
			Motor Parameter Setting (0)	Line-to-Line Resistance (1)
Motor Type Selection	T4-02	-	x	-
Motor Max Revolutions	T4-03	min <sup>-1</sup>	x	-
Motor Rated Revolutions	T4-04	min <sup>-1</sup>	x	-
Motor Rated Frequency	T4-05	Hz	x	-
Motor Rated Voltage	T4-06	V	x	-
PM Motor Rated Current (FLA)	T4-07	A	x	x
PM Motor Rated Power (kW)	T4-08	kW	x	-
Number of Motor Poles	T4-09	-	x	-

## ◆ Precautions before Auto-Tuning

Examine the topics in this section before you start Auto-Tuning.

### ■ Prepare for Basic Auto-Tuning

- You must input data from the motor nameplate or motor test report to do Auto-Tuning. Make sure that this data is available before Auto-Tuning the drive.
- For best performance, make sure that the drive input supply voltage is equal to or more than the motor rated voltage.

#### Note:

Better performance is possible when you use a motor with a rated voltage that is less than the input supply voltage (by 20 V for 208 V class models or by 40 V for 480 V class models). This is very important when operating the motor at more than 90% of base speed, where high torque precision is necessary. If the input power supply is equal to the motor rated voltage, the drive output voltage will not be sufficient, and performance will decrease.

- Push  on the keypad to cancel Auto-Tuning.
- If a Safe Disable input signal is input to the drive during Auto-Tuning, Auto-Tuning measurements will not complete successfully. If this occurs, cancel the Auto-Tuning, then do it again.
- [Table 5.16](#) shows the status of input/output terminals during Auto-Tuning.

**Table 5.16 Status of Input/Output Terminals during Auto-Tuning**

Auto-Tuning Type	Mode		Multi-Function Inputs	Multi-Function Outputs <sup>*1</sup>
Induction Motor Auto-Tuning	Rotational	Rotational Auto-Tuning	Disabled	Functions the same as during usual operation.
	Stationary	Line-to-Line Resistance	Disabled	Keeps the status at the start of Auto-Tuning.
PM Motor Auto-Tuning	Rotational	PM Rotational Auto-Tuning	Disabled	Functions the same as during usual operation.
		PM Motor Parameter Settings	Disabled	Keeps the status at the start of Auto-Tuning.
	Stationary	PM Stationary Auto-Tuning	Disabled	Keeps the status at the start of Auto-Tuning.
		PM Stationary Auto-Tuning for Stator Resistance	Disabled	Keeps the status at the start of Auto-Tuning.
EZ Tuning	Stationary	Motor Parameter Setting	Disabled	Keeps the status at the start of Auto-Tuning.
		Line-to-Line Resistance	Disabled	Keeps the status at the start of Auto-Tuning.

\*1 A terminal to which  $H2-xx = E$  [MFDO Function Selection = Fault] is assigned functions the same as during usual operation.

**WARNING! Crush Hazard.** Wire a sequence that will not let a multi-function output terminal open the holding brake during Stationary Auto-Tuning. If the holding brake is open during Stationary Auto-Tuning, it can cause serious injury or death.

**WARNING! Sudden Movement Hazard.** Before you do Rotational Auto-Tuning, disconnect the load from the motor. The load can move suddenly and cause serious injury or death.

**WARNING! Injury to Personnel.** Rotational Auto-Tuning rotates the motor at 50% or more of the motor rated frequency. Make sure that there are no issues related to safety in the area around the drive and motor. Increased motor frequency can cause serious injury or death.

**WARNING! Electrical Shock Hazard.** During Auto-Tuning, the motor will receive high voltage when the motor is stopped. Do not touch the motor until Auto-Tuning is complete. If you touch a motor that is energized, it can cause serious injury or death.

### ■ Precautions before Rotational Auto-Tuning

**WARNING! Electrical Shock Hazard.** During Auto-Tuning, the motor will receive high voltage when the motor is stopped. Do not touch the motor until Auto-Tuning is complete. If you touch a motor that is energized, it can cause serious injury or death.

- Before you do Rotational Auto-Tuning to prevent drive malfunction, uncouple the motor from the load. If you do Rotational Auto-Tuning with the motor connected to a load that is more than 30% of the motor duty rating, the drive will not correctly calculate the motor parameters and the motor can operate incorrectly.
- When the load is 30% or less of the motor duty rating, you can do Auto-Tuning with the motor connected to a load.
- Make sure that the motor magnetic brake is released.
- Make sure that external force from the machine will not cause the motor to rotate.

### ■ Precautions before Stationary Auto-Tuning

- Make sure that the motor magnetic brake is not open.
- Make sure that external force from the machine will not cause the motor to rotate.

**WARNING! Electrical Shock Hazard.** During Auto-Tuning, the motor will receive high voltage when the motor is stopped. Do not touch the motor until Auto-Tuning is complete. If you touch a motor that is energized, it can cause serious injury or death.

### ■ Precautions before Stationary Auto-Tuning for Line-to-Line Resistance and Stator Resistance Auto-Tuning

In V/f control, when the motor cable is 50 meters (164 feet) or longer, do Stationary Auto-Tuning for Line-to-Line Resistance.

**WARNING! Electrical Shock Hazard.** During Auto-Tuning, the motor will receive high voltage when the motor is stopped. Do not touch the motor until Auto-Tuning is complete. If you touch a motor that is energized, it can cause serious injury or death.

## 5.10 Test Run

After you Auto-Tune the drive, the next step is to do a test run.

**WARNING! Crush Hazard.** Test the system to make sure that the drive operates safely after you wire the drive and set parameters. If you do not test the system, it can cause damage to equipment or serious injury or death.

### ◆ No-Load Test Run

Before connecting the motor to the machine, make sure that you check the operation status of the motor.

#### ■ Precautions before Operation

Before rotating the motor, check these items:

- Check for safety issues near the drive, motor, and machine.
- Make sure that all emergency stop circuits and machine safety mechanisms are operating correctly.

#### ■ Items to Check before Operation


Check these items before operation:

- Is the motor rotating in the forward direction?
- Is the motor rotating smoothly (no unusual sounds or unusual vibrations)?
- Does the motor accelerate/decelerate smoothly?

### ◆ Do a No-Load Test Run

Do these steps for a no-load test run:

1. Energize the drive, or push **F2** to show the HOME screen.  
If [Home] is not shown on **F2**, push **F1** (Back) to show [Home] on **F2**.
2. Push **LO/RE** to illuminate the LOCAL/REMOTE indicator.
3. Push  to show *d1-01 [Reference 1]*, and set it to 6.00 Hz.
4. Push .  
The RUN indicator illuminates, and the motor runs at 6.00 Hz in the forward direction.
5. Make sure that the motor is rotating in the correct direction and that the drive does not show a fault.  
If the drive detects a fault, remove the cause.

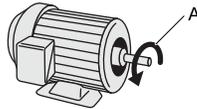

#### A - Forward Rotation of Motor (Counter Clockwise Direction as Seen from Load Shaft)

6. Push  to increase the frequency reference value.  
Change the setting value in increments of 10 Hz if necessary and examine the response.
7. Each time you increase the setting value, use *U1-03 [Output Current]* to check the drive output current.  
When the output current of the drive is not more than the motor rated current, the status is correct.  
Ex.: 6 Hz → 20 Hz → 30 Hz → 40 Hz → 50 Hz → 60 Hz
8. Make sure that the motor rotates correctly, then push .  
The RUN indicator will flash. When the motor stops, the indicator will go out.

### ◆ Actual-Load Test Run

Test the operation without a load, then connect the motor and machine to do a test run.

## ■ Precautions before Operation

Before rotating the motor, check these items:

- Check for safety issues near the drive, motor, and machine.
- Make sure that all emergency stop circuits and machine safety mechanisms are operating correctly.
- Make sure that the motor is fully stopped.
- Connect the motor with the machine.  
Make sure that there are no loose installation screws and that the motor load shafts and machine junctions are correctly secured.
- Keep the keypad near you to push  immediately if there is unusual or incorrect operation.

## ■ Items to Check before Operation

- Make sure that the direction of the machine operation is correct (The motor must rotate in the correct direction).
- Make sure that the motor accelerates and decelerates smoothly.

## ◆ Do an Actual-Load Test Run

Connect the motor and machine, then do the test run with the same procedure you used for the no-load test run.

- Make sure that *U1-03 [Output Current]* is not too high.
  1. Energize the drive, or push  (Home) to show the HOME screen.  
If [Home] is not shown on , push  (Back) to show [Home] on .
  2. Set *d1-01 [Reference 1]* to 6.00 Hz.
  3. Push  to illuminate the LOCAL/REMOTE indicator.
  4. Push .  
The RUN indicator illuminates, and the motor runs at 6.00 Hz in the forward direction.
  5. Make sure that the motor is rotating in the correct direction and that the drive does not show a fault.  
If the drive detects a fault, remove the cause.
  6. Push  to increase the frequency reference value.  
Change the setting value in increments of 10 Hz if necessary and examine the response.
  7. Each time you increase the setting value, use *U1-03 [Output Current]* to check the drive output current.  
When the output current of the drive is not more than the motor rated current, the status is correct.  
Ex.: 6 Hz → 20 Hz → 30 Hz → 40 Hz → 50 Hz → 60 Hz
  8. Make sure that the motor rotates correctly, then push .  
The RUN indicator will flash. When the motor stops, the indicator will go out.
  9. Change the frequency reference and direction of motor rotation, and make sure that there are no unusual sounds or vibrations.
  10. If there are hunting or oscillation errors caused by control function, adjust the settings to stop the errors.

## 5.11 Fine Tuning during Test Runs (Adjust the Control Function)

This section gives information about the adjustment procedures to stop hunting or oscillation errors caused by control function during a test run. Adjust the applicable parameters as specified by your control method and drive status.

- [V/f Control on page 408](#)
- [Open Loop Vector Control for PM Motors on page 409](#)
- [EZ Open Loop Vector Control Method on page 410](#)

**Note:**

This section only lists frequently adjusted parameters. If you must adjust parameters that have a higher degree of precision, contact Yaskawa.

### ◆ V/f Control

**Table 5.17 Parameters for Fine Tuning the Drive (V/f)**

Issue	Parameter Number	Possible Solutions	Default	Recommended Setting
Hunting or oscillation at mid-range speeds (10 Hz to 40 Hz)	n1-02 [Hunting Prevention Gain Setting]	<ul style="list-style-type: none"> <li>• If torque is not sufficient with heavy loads, decrease the setting value.</li> <li>• If hunting or oscillation occur with light loads, increase the setting value.</li> <li>• If hunting occurs with a low-inductance motor, for example a motor with a larger frame size or a high-frequency motor, lower the setting value.</li> </ul>	1.00	0.10 - 2.00
<ul style="list-style-type: none"> <li>• The volume of the motor excitation sound is too high.</li> <li>• Hunting or oscillation at low speeds (10 Hz or lower), or at mid-range speeds (10 Hz to 40 Hz)</li> </ul>	C6-02 [Carrier Frequency Selection]	<ul style="list-style-type: none"> <li>• If the volume of the motor excitation sound is too high, increase the carrier frequency.</li> <li>• If hunting or oscillation occur at low or mid-range speeds, decrease the carrier frequency.</li> </ul>	1 (2 kHz) *1	1 to upper limit value
<ul style="list-style-type: none"> <li>• Unsatisfactory motor torque and speed response</li> <li>• Hunting or oscillation</li> </ul>	C4-02 [Torque Compensation Delay Time]	<ul style="list-style-type: none"> <li>• If torque or speed response are slow, decrease the setting value.</li> <li>• If hunting or oscillation occur, increase the setting value.</li> </ul>	200 ms *2	100 - 1000 ms
<ul style="list-style-type: none"> <li>• Torque at low speeds (10 Hz or lower) is not sufficient.</li> <li>• Hunting or oscillation</li> </ul>	C4-01 [Torque Compensation Gain]	<ul style="list-style-type: none"> <li>• If torque at low speeds (10 Hz or lower) is not sufficient, increase the setting value.</li> <li>• If hunting or oscillation occur with light loads, decrease the setting value.</li> </ul>	1.00	0.50 - 1.50
<ul style="list-style-type: none"> <li>• Torque at low speeds (10 Hz or lower) is not sufficient.</li> <li>• Large initial vibration at start up.</li> </ul>	<ul style="list-style-type: none"> <li>• E1-08 [Mid Point A Voltage]</li> <li>• E1-10 [Minimum Output Voltage]</li> </ul>	<ul style="list-style-type: none"> <li>• If torque at low speeds (10 Hz or lower) is not sufficient, increase the setting value.</li> <li>• If there is large initial vibration at start up, decrease the setting value</li> </ul>	<ul style="list-style-type: none"> <li>• E1-08: 15.0 V *3</li> <li>• E1-10: 9.0 V *3</li> </ul>	Default setting +/- 5 V *4
Speed precision is unsatisfactory. (V/f Control)	C3-01 [Slip Compensation Gain]	Set E2-01 [Motor Rated Current], E2-02 [Motor Rated Slip], and E2-03 [Motor No-Load Current], then adjust C3-01.	0.0 (no slip compensation)	0.5 - 1.5

\*1 The default setting changes when the settings for o2-04 [Drive Model (KVA) Selection] change.

\*2 The default setting changes when the settings for A1-02 [Control Method Selection] and o2-04 [Drive Model (KVA) Selection] change.

\*3 The default setting changes when the settings for A1-02 [Control Method Selection] and E1-03 [V/f Pattern Selection] change.

\*4 Recommended settings are for 208 V class drives. Multiply the voltage by 2 for 480 V class drives.

### ■ Precaution When You Use IE3 Premium Efficiency Motors

IE3 motors have different motor characteristics from IE1 and other motors. Set the parameters as specified by the motor characteristics. If the drive detects oC [Overcurrent] or ov [Overvoltage] during speed search after the drive restores power after a momentary power loss, set these parameters:

- b3-03 [Speed Search Deceleration Time] = default value × 2
- L2-03 [Minimum Baseblock Time] = default value × 2
- L2-04 [Powerloss V/f Recovery Ramp Time] = default value × 2

## ◆ Open Loop Vector Control for PM Motors

Table 5.18 Parameters for Fine Tuning the Drive (A1-02 = 5[OLV/PM])

Issue	Parameter Number	Possible Solutions	Default	Recommended Setting
Unsatisfactory motor performance	E1-xx parameters, E5-xx parameters	<ul style="list-style-type: none"> <li>Check the settings for E1-06, E1-04 [Base Frequency, Maximum Output Frequency].</li> <li>Check the E5-xx and make sure that all motor data has been set correctly.</li> </ul> <p><b>Note:</b> Do not set E5-05 [PM Motor Resistance (ohms/phase)] to a line-to-line resistance value.</p> <ul style="list-style-type: none"> <li>Do Auto-Tuning.</li> </ul>	-	-
Unsatisfactory motor torque and speed response	n8-55 [Motor to Load Inertia Ratio]	Adjust to match the load inertia ratio of the motor and machine.	0	Near the actual load inertia ratio.
	n8-45 [Speed Feedback Detection Gain]	Decrease the setting value in increments of 0.05.	0.80	-
	C4-01 [Torque Compensation Gain]	Adjust the setting value. <b>Note:</b> Setting this value too high can cause overcompensation and motor oscillation.	0.00	1.00
<ul style="list-style-type: none"> <li>Oscillation when the motor starts.</li> <li>Motor stalls.</li> </ul>	n8-51 [Pull-in Current @ Accel/Decel]	Increase the setting value in increments of 5%.	50%	-
	<ul style="list-style-type: none"> <li>b2-02 [DC Injection Braking Current]</li> <li>b2-03 [DC Inject Braking Time at Start]</li> </ul>	Use DC Injection Braking at start. <b>Note:</b> This can cause the motor to rotate in reverse for approximately 1/8 of a turn at start.	<ul style="list-style-type: none"> <li>b2-02: 50%</li> <li>b2-03: 0.00 s</li> </ul>	<ul style="list-style-type: none"> <li>b2-02: Adjust as necessary.</li> <li>b2-03: 0.5 s</li> </ul>
	n8-55 [Motor to Load Inertia Ratio]	Increase the setting value. <b>Note:</b> When operating a single motor or with a minimum amount of inertia, setting this value too high can cause motor oscillation.	0	Near the actual load inertia ratio.
There is too much current during deceleration.	n8-79 [Pull-in Current at Deceleration]	Set $n8-79 < n8-51$ .	50% <b>Note:</b> When $n8-79 = 0$ , the drive will apply the $n8-51$ setting to the pull-in current during deceleration.	Decrease in increments of 5%.
Stalling or oscillation occurs when load is applied during constant speed	n8-47 [Pull-in Current Comp Filter Time]	Decrease the setting value in increments of 0.2 s.	5.0 s	-
	n8-48 [Pull-in/Light Load Id Current]	Increase the setting value in increments of 5%.	30%	-
	n8-55 [Motor to Load Inertia Ratio]	Increase the setting value. <b>Note:</b> When operating a single motor or with a minimum amount of inertia, setting this value too high can cause motor oscillation.	0	Near the actual load inertia ratio.
Hunting or oscillation	n8-45 [Speed Feedback Detection Gain]	Increase the setting value in increments of 0.05.	0.80	-
The drive detects STPo [Motor Step-Out Detected] fault when the load is not too high.	<ul style="list-style-type: none"> <li>E5-09 [PM Back-EMF V<sub>peak</sub> (mV/(rad/s))]</li> <li>E5-24 [PM Back-EMF L-L V<sub>rms</sub> (mV/rpm)]</li> </ul>	<ul style="list-style-type: none"> <li>Adjust the setting value.</li> <li>Examine the motor code on the motor nameplate or the data sheet, then set correct values for E5-09 or E5-24.</li> </ul>	*1	<ul style="list-style-type: none"> <li>Yaskawa motor Set the motor code from the motor nameplate.</li> <li>Motor from another manufacturer Set the values from the test report.</li> </ul>
The drive detected stalling or STPo [Motor Step-Out Detected] at high speed and maximum output voltage.	n8-62 [Output Voltage Limit Level]	Set to a value lower than the actual input voltage.	<ul style="list-style-type: none"> <li>200.0 V</li> <li>400.0 V</li> </ul>	-

\*1 The default setting changes when the settings for E5-01 [Motor Code Selection] and o2-04 [Drive Model (KVA) Selection] change.

◆ EZ Open Loop Vector Control Method

Table 5.19 Parameters for Fine Tuning the Drive (A1-02 = 8[EZOLV])

Issue	Parameter Number	Possible Solutions	Default	Recommended Setting
<ul style="list-style-type: none"> <li>Unsatisfactory motor torque and speed response</li> <li>Hunting or oscillation</li> </ul>	<ul style="list-style-type: none"> <li>High speed C5-01 [ASR Proportional Gain 1]</li> <li>Low speed C5-03 [ASR Proportional Gain 2]</li> </ul>	<ul style="list-style-type: none"> <li>If torque or speed response are slow, increase the setting value in increments of 5.00.</li> <li>If hunting or oscillation occur, decrease the setting value.</li> </ul>	10.00	10.00 to 50.00 <i>*1</i>
	<ul style="list-style-type: none"> <li>High speed C5-02 [ASR Integral Time 1]</li> <li>Low speed C5-04 [ASR Integral Time 2]</li> </ul>	<ul style="list-style-type: none"> <li>If torque or speed response are slow, decrease the setting value.</li> <li>If hunting or oscillation occur, increase the setting value.</li> </ul>	0.500 s	0.300 s to 1.000 s <i>*1</i>
The drive cannot find ASR proportional gain or integral time for low speed or high speed.	C5-07 [ASR Gain Switchover Frequency]	Change the ASR proportional gain and ASR integral time to conform to the output frequency.	0.0%	0.0% to maximum rotation speed
Hunting or oscillation	C5-06 [ASR Delay Time]	If the rigidity of the machine is unsatisfactory and vibration is possible, increase the setting value in increments of 0.010.	0.004 s	0.004 s to 0.020 s <i>*1</i>
Step-out	E9-xx parameters	Refer to the motor nameplate or test report and set E9-xx correctly.	-	-
Oscillation when the motor starts.	n8-51 [Accel / Decel Pull-In Current]	Increase the setting value.	80%	Increase in increments of 5%.
Motor stalls.	L7-01 to L7-04 [Torque Limit]	Increase the setting value.	200%	Increase in increments of 10%.

\*1 The best values for a no-load operation are different than the best values for actual loading operation.

## 5.12 Test Run Checklist

Examine the items in this checklist and check each item before a test run.

Checked	No.	Description
	1	Correctly install and wire the drive as specified by this manual.
	2	Energize the drive.
	3	Set the voltage for the power supply in E1-01 [Input AC Supply Voltage].

Check the applicable items as specified by your control method.

**WARNING! Sudden Movement Hazard.** Correctly wire the start/stop and safety circuits before you energize the drive. If you momentarily close a digital input terminal, it can start a drive that is programmed for 3-Wire control and cause serious injury or death from moving equipment.

**Table 5.20 V/f Control [A1-02 = 0]**

Checked	No.	Description
	4	Select the best V/f pattern for your application and motor characteristics. Example: For a motor with a rated frequency of 60 Hz, set E1-03 = 1 [V/f Pattern Selection = Const Trq, 60Hz base, 60Hz max] as a standard V/f pattern.

**Table 5.21 PM Open Loop Vector Control [A1-02 = 5]**

Checked	No.	Description
	5	Set E5-01 to E5-24 [PM Motor Settings].

Checked	No.	Description
	6	The keypad will show "Rdy" after starting to operate the motor.
	7	To give the Run command and frequency reference from the keypad, push  to set to LOCAL Mode (when in LOCAL Mode,  illuminates).
	8	If the motor rotates in the opposite direction during test run, switch two of the motor cables (U/T1, V/T2, W/T3).
	9	Set E2-01 [Motor Rated Current (FLA)] and L1-01 [Motor Overload (oL1) Protection] correctly for motor thermal protection.
	10	Set the drive for REMOTE Mode when the control circuit terminals supply the Run command and frequency reference (in REMOTE Mode, the  turns OFF).
	11	When terminal A1 is used for the frequency reference: <ul style="list-style-type: none"> <li>• Voltage input <ul style="list-style-type: none"> <li>– Set Jumper switch S1 on the drive to "V".</li> <li>– Set H3-01 = 0 [Terminal A1 Signal Level Select = 0 to 10V (Lower Limit at 0)].</li> <li>– Set H3-02 = 0 [Terminal A1 Function Selection = Frequency Reference].</li> </ul> </li> <li>• Current input <ul style="list-style-type: none"> <li>– Set Jumper switch S1 on the drive to "I".</li> <li>– Set H3-01 = 2, 3 [Terminal A1 Signal Level Select = 4 to 20 mA, 0 to 20 mA].</li> <li>– Set H3-02 = 0 [Terminal A1 Function Selection = Frequency Reference].</li> </ul> </li> </ul>
	12	When terminal A2 is used for the frequency reference: <ul style="list-style-type: none"> <li>• Voltage input <ul style="list-style-type: none"> <li>– Set Jumper switch S1 on the drive to "V".</li> <li>– Set H3-09 = 0 [Terminal A2 Signal Level Select = 0 to 10V (Lower Limit at 0)].</li> <li>– Set H3-10 = 0 [Terminal A2 Function Selection = Frequency Reference].</li> </ul> </li> <li>• Current input <ul style="list-style-type: none"> <li>– Set Jumper switch S1 on the drive to "I".</li> <li>– Set H3-09 = 2, 3 [Terminal A2 Signal Level Select = 4 to 20 mA, 0 to 20 mA].</li> <li>– Set H3-10 = 0 [Terminal A2 Function Selection = Frequency Reference].</li> </ul> </li> </ul>

## 5.12 Test Run Checklist

Checked	No.	Description
	13	<p>When terminal A3 is used for the frequency reference:</p> <ul style="list-style-type: none"> <li>• Voltage input <ul style="list-style-type: none"> <li>– Set Jumper switch S1 on the drive to “V”.</li> <li>– Set H3-05 = 0 [Terminal A3 Signal Level Select = 0 to 10V (Lower Limit at 0)].</li> <li>– Set H3-06 = 0 [Terminal A3 Function Selection = Frequency Reference].</li> </ul> </li> <li>• Current input <ul style="list-style-type: none"> <li>– Set Jumper switch S1 on the drive to “I”.</li> <li>– Set H3-05 = 2, 3 [Terminal A3 Signal Level Select = 4 to 20 mA, 0 to 20 mA].</li> <li>– Set H3-06 = 0 [Terminal A3 Function Selection = Frequency Reference].</li> </ul> </li> </ul>
	14	<p>Make sure that the frequency reference reaches the necessary minimum and maximum values.</p> <p>→ If drive operation is incorrect, make these adjustments:</p> <p>Gain adjustment: Set the maximum voltage and current values, then adjust the analog input gain until the frequency reference reaches the necessary value. (For terminal A1 input: H3-03, for terminal A2 input: H3-11, for terminal A3 input: H3-07)</p> <p>Bias adjustment: Set the maximum voltage/current values, then adjust the analog input bias until the frequency reference reaches the necessary minimum value. (For terminal A1 input: H3-04, for terminal A2 input: H3-12, for terminal A3 input: H3-08)</p>

# Specifications

---

<b>6.1</b>	<b>Section Safety .....</b>	<b>414</b>
<b>6.2</b>	<b>Model Specifications (208 V Class) .....</b>	<b>415</b>
<b>6.3</b>	<b>Model Specifications (480 V Class) .....</b>	<b>416</b>
<b>6.4</b>	<b>Common Drive Specifications .....</b>	<b>418</b>
<b>6.5</b>	<b>Drive Watt Loss .....</b>	<b>421</b>
<b>6.6</b>	<b>Drive Derating .....</b>	<b>423</b>
<b>6.7</b>	<b>Drive Exterior and Mounting Dimensions .....</b>	<b>428</b>
<b>6.8</b>	<b>Knock-Out Hole Dimensions .....</b>	<b>449</b>
<b>6.9</b>	<b>Peripheral Devices and Options .....</b>	<b>458</b>

## 6.1 Section Safety

 **DANGER**

**Do not ignore the safety messages in this manual.**

If you ignore the safety messages in this manual, it will cause serious injury or death. The manufacturer is not responsible for injuries or damage to equipment.

## 6.2 Model Specifications (208 V Class)

**Table 6.1 Rating (208 V Class)**

Model		2011	2017	2024	2031	2046	2059	2075	2088	2114	
Maximum Applicable Motor Output (kW) <sup>*1</sup>		2.2	3.7	5.5	7.5	11	15	18.5	22	30	
Maximum Applicable Motor Output (HP) <sup>*2</sup>		3	5	7.5	10	15	20	25	30	40	
Input	Rated Input Current (A)	AC	8.8	14	20	27	40	54	66	78	106
		DC	10.0	17.0	25	34	49	66	80	95	129
Output	Rated Output Current (A)	10.6	16.7	24.2	30.8	46.2	59.4	74.8	88	114	
Power Supply	Input Power (kVA)	3.7	5.8	8	11	17	22	27	33	44	

- \*1 The maximum applicable motor output is based on 4-pole, general-purpose 220 V motor ratings. The rated output current of the drive output amps must be equal to or more than the motor rated current.
- \*2 The maximum applicable motor output complies with 208 V motor ratings as specified in NEC Table 430.250. The rated output current of the drive output amps must be equal to or more than the motor rated current.

**Table 6.2 Rating (208 V Class)**

Model		2143	2169	2211	2273	2343	2396	
Maximum Applicable Motor Output (kW) <sup>*1</sup>		37	45	55	75	90	110	
Maximum Applicable Motor Output (HP) <sup>*2</sup>		50	60	75	100	125	150	
Input	Rated Input Current (A)	AC	130	157	200	271	324	394
		DC	159	192	245	332	396	482
Output	Rated Output Current (A)	143	169	211	273	343	396	
Power Supply	Input Power (kVA)	54	65	69	94	112	136	

- \*1 The maximum applicable motor output is based on 4-pole, general-purpose 220 V motor ratings. The rated output current of the drive output amps must be equal to or more than the motor rated current.
- \*2 The maximum applicable motor output complies with 208 V motor ratings as specified in NEC Table 430.250. The rated output current of the drive output amps must be equal to or more than the motor rated current.

## 6.3 Model Specifications (480 V Class)

**Table 6.3 Rating (480 V Class)**

Model		4005	4008	4011	4014	4021	4027	4034	4040	
Maximum Applicable Motor Output (kW) at 400 V Output *1		1.5	3	4	5.5	7.5	11	15	18.5	
Maximum Applicable Motor Output (HP) at 460 V Output *2		3	5	7.5	10	15	20	25	30	
Input	Rated Input Current (A) at 400 V Input	AC	4.1	7.1	8.9	11.9	17.5	23.4	31	38
		DC	5.0	8.7	11.0	15.0	21	29	38	47
	Rated Input Current (A) at 460 V Input	AC	3.8	6.2	9	12.1	17.4	23.5	28.7	34
		DC	4.7	7.6	11.0	14.8	21.3	28.8	35.2	41.6
Output	Rated Output Current (A)	4.8	7.6	11	14	21	27	34	40	
Power Supply	Input Power (kVA) at 400 V Input	2.8	4.9	6.2	8.2	12	16	21	26	
	Input Power (kVA) at 460 V Input	3.2	5.2	7	10	14	20	24	28	

\*1 The motor capacity (kW) refers to a IEC 60947-4-1, Annex G 400 V motor. The rated output current of the drive output amps should be equal to or greater than the motor rated current.

\*2 The maximum applicable motor output complies with 460 V motor ratings as specified in NEC Table 430.250. The rated output current of the drive output amps must be equal to or more than the motor rated current.

**Table 6.4 Rating (480 V Class)**

Model		4052	4065	4077	4096	4124	4156	4180	4240	
Maximum Applicable Motor Output (kW) at 400 V Output *1		22	30	37	45	55	75	90	110	
Maximum Applicable Motor Output (HP) at 460 V Output *2		40	50	60	75	100	125	150	200	
Input	Rated Input Current (A) at 400 V Input	AC	44	59.6	74.9	89.2	103	140	170	207
		DC	54	73	92	109	126	171	208	254
	Rated Input Current (A) at 460 V Input	AC	45.9	56.3	68.1	82.8	112	134	171	232
		DC	56.2	69.0	83.4	101	137	164	209	284
Output	Rated Output Current (A)	52	65	77	96	124	156	180	240	
Power Supply	Input Power (kVA) at 400 V Input	30	41	52	62	71	97	112	136	
	Input Power (kVA) at 460 V Input	38	47	57	69	93	111	136	185	

\*1 The motor capacity (kW) refers to a IEC 60947-4-1, Annex G 400 V motor. The rated output current of the drive output amps should be equal to or greater than the motor rated current.

\*2 The maximum applicable motor output complies with 460 V motor ratings as specified in NEC Table 430.250. The rated output current of the drive output amps must be equal to or more than the motor rated current.

**Table 6.5 Rating (480 V Class)**

Model		4302	4361	4414	4477	4515	4590	4720	
Maximum Applicable Motor Output (kW) at 400 V Output *1		160	200	220	250	280	315	375	
Maximum Applicable Motor Output (HP) at 460 V Output *2		250	300	350	400	450	500	600	
Input	Rated Input Current (A) at 400 V Input	AC	300	373	410	465	520	584	694
		DC	367	457	502	570	637	715	850
	Rated Input Current (A) at 460 V Input	AC	289	346	403	460	515	573	686
		DC	354	424	494	563	631	702	840
Output	Rated Output Current (A)	302	361	414	477	515	590	720	

Model		4302	4361	4414	4477	4515	4590	4720
Power Supply	Input Power (kVA) at 400 V Input	197	246	270	306	342	384	457
	Input Power (kVA) at 460 V Input	230	276	321	367	410	457	547

- \*1 The motor capacity (kW) refers to a IEC 60947-4-1, Annex G 400 V motor. The rated output current of the drive output amps should be equal to or greater than the motor rated current.
- \*2 The maximum applicable motor output complies with 460 V motor ratings as specified in NEC Table 430.250. The rated output current of the drive output amps must be equal to or more than the motor rated current.

## 6.4 Common Drive Specifications

### Note:

To get the longest product life, install the drive in an environment that meets the necessary specifications.

**Table 6.6 Control Characteristics**

Item	Specification
Control Methods	<ul style="list-style-type: none"> <li>V/f Control (V/f)</li> <li>PM Open Loop Vector Control (OLV/PM)</li> <li>EZ Open Loop Vector Control (EZOLV)</li> </ul>
Frequency Control Range	<ul style="list-style-type: none"> <li>EZOLV: 0.01 Hz to 120 Hz</li> <li>V/f and OLV/PM: 0.01 Hz to 400 Hz</li> </ul>
Frequency Accuracy (Temperature Fluctuation)	Digital inputs: Within $\pm 0.01\%$ of the maximum output frequency ( $-10\text{ }^{\circ}\text{C}$ to $+40\text{ }^{\circ}\text{C}$ ( $14\text{ }^{\circ}\text{F}$ to $104\text{ }^{\circ}\text{F}$ )) Analog inputs: Within $\pm 0.1\%$ of the maximum output frequency ( $25\text{ }^{\circ}\text{C} \pm 10\text{ }^{\circ}\text{C}$ ( $77\text{ }^{\circ}\text{F} \pm 18\text{ }^{\circ}\text{F}$ ))
Frequency Setting Resolution	Digital inputs: 0.01 Hz Analog inputs: 1/2048 of the maximum output frequency (11-bit)
Output Frequency Resolution	0.001 Hz
Frequency Setting Signal	Main speed frequency reference: 0 Vdc to 10 Vdc (20 k $\Omega$ ), 4 mA to 20 mA (250 $\Omega$ ), 0 mA to 20 mA (250 $\Omega$ ) Main speed reference: Pulse train input (maximum 32 kHz)
Starting Torque	<ul style="list-style-type: none"> <li>V/f: 140%/3 Hz</li> <li>OLV/PM: 100%/10% speed</li> <li>EZOLV: 100%/10% speed</li> </ul>
Speed Control Range	<ul style="list-style-type: none"> <li>For Induction Motors: <ul style="list-style-type: none"> <li>V/f: 1:40</li> <li>EZOLV: 1:10</li> </ul> </li> <li>For Permanent Magnet Motors and Synchronous Reluctance Motors: <ul style="list-style-type: none"> <li>OLV/PM: 1:20</li> <li>EZOLV: 1:10</li> </ul> </li> </ul>
Torque Limits	Parameter settings allow different limits in four quadrants in EZOLV control method.
Accel/Decel Time	0.0 s to 6000.0 s The drive can set two pairs of different acceleration and deceleration times.
V/f Characteristics	Select from 15 pre-defined V/f patterns, or a user-set V/f pattern.
Main Control Functions	Restart After Momentary Power Loss, Speed Search, Overtorque/Undertorque Detection, Torque Limit, 17 Step Speed (max.), Accel/Decel Switch, S-curve Acceleration/Deceleration, 3-wire Sequence, Auto-Tuning (Rotational and Stationary), Dwell Function, Cooling Fan ON/OFF Switch, Slip Compensation, Torque Compensation, Jump Frequency, Upper/Lower Limits for Frequency Reference, DC Injection Braking at Start and Stop, Overexcitation Braking, High Slip Braking, PID Control (with Sleep Function), Energy Saving Control, MEMOBUS/Modbus Communication (RS-485 max. 115.2 kbps), Auto Restart, Application Presets, KEB, Overexcitation Deceleration, Overvoltage Suppression

**Table 6.7 Protection Functions**

Item	Specification
Motor Protection	Electronic thermal overload protection
Momentary Overcurrent Protection	Drive stops when the output current is more than 175% of the drive rated output current.
Overload Protection	Drive stops when the output current is more than these overload tolerances: <ul style="list-style-type: none"> <li>110% of the rated output current for 60 seconds</li> <li>140% of the rated output current for 2.5 seconds when the drive output frequency is 3 Hz</li> </ul> The permitted frequency of overload is one time each 10 minutes. <b>Note:</b> If output frequency < 6 Hz, the drive can trigger the overload protection function when the output current is in the overload tolerance range.
Overvoltage Protection	208 V class: Stops when the DC bus voltage is more than approximately 410 V 480 V class: Stops when the DC bus voltage is more than approximately 820 V
Undervoltage Protection	208 V class: Stops when the DC bus voltage decreases to less than approximately 190 V 480 V class: <ul style="list-style-type: none"> <li>Stops when the DC bus voltage decreases to less than approximately 350 V when you use an input voltage less than 400 V</li> <li>Stops when the DC bus voltage decreases to less than approximately 380 V when you use an input voltage less than 460 V</li> <li>Stops when the DC bus voltage decreases to less than approximately 440 V when you use an input voltage of 460 V or more</li> </ul>

Item	Specification
Momentary Power Loss Ride-thru	Immediately stops when power loss is 15 ms or longer. Continues operation if power loss is shorter than 2 s (depending on parameter settings). <b>Note:</b> Stop time may be shortened depending on the load and motor speed.
Heatsink Overheat Protection	The drive stops when the thermistor detects an IGBT temperature more than approximately 100 °C (212 °F). The trip temperature level is different for different drive models.
Stall Prevention	Stall prevention is available during acceleration, deceleration, and during run.
Ground Fault Protection	Electronic circuit protection <b>Note:</b> This protection detects ground faults during run. The drive will not provide protection when: <ul style="list-style-type: none"> <li>• There is a low-resistance ground fault for the motor cable or terminal block</li> <li>• Energizing the drive when there is a ground fault.</li> </ul>
DC Bus Charge LED	Charge LED illuminates when DC bus voltage is more than 50 V.

Table 6.8 Environment

Item	Specification
Area of Use	Indoors
Power Supply	Overvoltage Category III
Ambient Temperature Setting	IP20/UL Open Type/Heatsink External Mounting: -10 °C to +50 °C (14 °F to 122 °F) IP20/UL Type 1: -10 °C to +40 °C (14 °F to 104 °F) IP55/UL Type 12 Heatsink External Mounting; front side: -10 °C to +50 °C (14 °F to 122 °F) IP55/UL Type 12 Heatsink External Mounting; back side: -10 °C to +40 °C (14 °F to 104 °F) <ul style="list-style-type: none"> <li>• When you install the drive in an enclosure, use a cooling fan or air conditioner to keep the internal air temperature in the permitted range.</li> <li>• Do not let the drive freeze.</li> <li>• You can use IP20/UL Open Type and IP20/UL Type 1 drives at a maximum of 60 °C (140 °F) when you derate the output current.</li> <li>• You can use IP55/UL Type 12 drives at a maximum of 50 °C (122 °F) when you derate the output current.</li> </ul>
Humidity	95% RH or less Do not let condensation form on the drive.
Storage Temperature	-20 °C to +70 °C (-4 °F to +158 °F) (short-term temperature during transportation)
Surrounding Area	Pollution degree 2 or less Install the drive in an area without: <ul style="list-style-type: none"> <li>• Oil mist, corrosive or flammable gas, or dust</li> <li>• Metal powder, oil, water, or other unwanted materials</li> <li>• Radioactive materials or flammable materials, including wood</li> <li>• Harmful gas or fluids</li> <li>• Salt</li> <li>• Direct sunlight</li> </ul>
Altitude	1000 m (3281 ft) maximum <b>Note:</b> Derate the output current by 1% for each 100 m (328 ft) to install the drive in altitudes between 1000 m to 4000 m (3281 ft to 13123 ft). It is not necessary to derate the rated voltage in these conditions: <ul style="list-style-type: none"> <li>• When you install the drive at 2000 m (6562 ft) or lower</li> <li>• When you install the drive between 2000 m to 4000 m (6562 ft to 13123 ft) and ground the neutral point on the power supply.</li> </ul>
Vibration	<ul style="list-style-type: none"> <li>• For models 2xxxxB/F/V/W and 4xxxxB/F/V/W without Main Switch: <ul style="list-style-type: none"> <li>– 10 Hz to 20 Hz: 1 G (9.8 m/s<sup>2</sup>, 32.15 ft/s<sup>2</sup>)</li> <li>– 20 Hz to 55 Hz: <ul style="list-style-type: none"> <li>2011 to 2031, 4005 to 4034: 0.6 G (5.9 m/s<sup>2</sup>, 19.36 ft/s<sup>2</sup>)</li> <li>2046 to 2396, 4040 to 4720: 0.2 G (1.96 m/s<sup>2</sup>, 6.43 ft/s<sup>2</sup>)</li> </ul> </li> </ul> </li> <li>• For models 2xxxxT and 4xxxxT with Main Switch: <ul style="list-style-type: none"> <li>– 10 Hz to 20 Hz: 1 G (9.8 m/s<sup>2</sup>, 32.15 ft/s<sup>2</sup>)</li> <li>– 20 Hz to 55 Hz: 0.2 G (1.96 m/s<sup>2</sup>, 6.43 ft/s<sup>2</sup>)</li> </ul> </li> </ul>
Installation Orientation	Install the drive vertically for sufficient airflow to cool the drive.

## 6.4 Common Drive Specifications

---

**Table 6.9 Standard**

Item	Specification
Harmonized Standard	<ul style="list-style-type: none"><li>• UL 508C</li><li>• EN 61800-3</li><li>• IEC/EN 61800-5-1</li><li>• Two Safe Disable inputs and one EDM output according to EN ISO 13849-1:2015 (PL e (Cat.III)), IEC/EN 61508 SIL3</li></ul>

**Table 6.10 Enclosure Ratings**

Item	Specification
Protection Design	IP20/UL Open Type IP20/UL Type 1 IP55/UL Type 12 IP55/UL Type 12 with Main Switch IP55/UL Type 12 Heatsink External Mounting <b>Note:</b> Install a UL Type 1 kit on an IP20/UL Open Type drive to convert the drive to an IP20/UL Type 1.

## 6.5 Drive Watt Loss

### ◆ 208 V Class

Table 6.11 Drive Watt Loss (NEMA Rating) for Models: 2xxxxB/F/V/W without Main Switch

Model	Rated Output Current A	Carrier Frequency kHz	Interior Unit Loss W	Cooling Fin Loss W	Total Loss W
2011	10.6	5.0	45	86	131
2017	16.7	5.0	56	140	196
2024	24.2	5.0	75	184	259
2031	30.8	5.0	89	244	333
2046	46.2	5.0	116	314	430
2059	59.4	5.0	148	418	566
2075	74.8	5.0	175	538	713
2088	88	5.0	201	615	816
2114	114	5.0	246	780	1026
2143	143	5.0	244	937	1180
2169	169	5.0	279	1132	1411
2211	211	2.0	339	1417	1756
2273	273	2.0	437	1972	2409
2343	343	2.0	517	2004	2522
2396	396	2.0	585	2245	2830

Table 6.12 Drive Watt Loss (NEMA Rating) for Models: 2xxxxT with Main Switch

Model	Rated Output Current A	Carrier Frequency kHz	Interior Unit Loss W	Cooling Fin Loss W	Total Loss W
2011	10.6	5.0	45	86	131
2017	16.7	5.0	57	140	196
2024	24.2	5.0	76	184	260
2031	30.8	5.0	91	244	335
2046	46.2	5.0	118	314	432
2059	59.4	5.0	151	418	569
2075	74.8	5.0	177	538	715
2088	88	5.0	203	615	818
2114	114	5.0	251	780	1031

### ◆ 480 V Class

Table 6.13 Drive Watt Loss (NEMA Rating) for Models: 4xxxxB/F/V/W without Main Switch

Model	Rated Output Current A	Carrier Frequency kHz	Interior Unit Loss W	Cooling Fin Loss W	Total Loss W
4005	4.8	5.0	31	44	75
4008xF <sup>*/</sup>	7.6	5.0	38	70	108
4008xV <sup>*/</sup>	7.6	5.0	46	99	145
4011	11	5.0	56	142	198
4014	14	5.0	66	196	262
4021	21	5.0	89	212	301

## 6.5 Drive Watt Loss

Model	Rated Output Current A	Carrier Frequency kHz	Interior Unit Loss W	Cooling Fin Loss W	Total Loss W
4027	27	5.0	111	285	397
4034	34	5.0	128	327	455
4040	40	5.0	145	373	518
4052	52	5.0	178	470	648
4065	65	5.0	224	600	824
4077	77	5.0	271	819	1090
4096	96	5.0	323	973	1295
4124	124	5.0	423	1294	1717
4156	156	5.0	332	1448	1780
4180	180	2.0	402	1859	2260
4240	240	2.0	426	2106	2532
4302	302	2.0	852	2645	3496
4361	361	2.0	933	2936	3869
4414	414	2.0	901	2825	3727
4477	477	2.0	1172	3814	4986
4515	515	2.0	1242	4236	5479
4590	590	2.0	1325	4632	5957
4720	720	2.0	1597	6235	7831

\*1 The watt loss values are different for different drive protection designs.

**Table 6.14 Drive Watt Loss (NEMA Rating) for Models: 4xxxxT with Main Switch**

Model	Rated Output Current A	Carrier Frequency kHz	Interior Unit Loss W	Cooling Fin Loss W	Total Loss W
4005	4.8	5.0	31	44	75
4008	7.6	5.0	46	99	145
4011	11	5.0	56	142	198
4014	14	5.0	67	196	263
4021	21	5.0	90	212	301
4027	27	5.0	113	285	398
4034	34	5.0	130	327	457
4040	40	5.0	146	373	519
4052	52	5.0	181	470	651
4065	65	5.0	228	600	827
4077	77	5.0	273	819	1093
4096	96	5.0	326	973	1298

## 6.6 Drive Derating

You must derate the drive capacity to operate the drive above the rated temperature, altitude, and default carrier frequency.

### ◆ Carrier Frequency Settings and Rated Current Values

Table 6.15 and Table 6.16 show how the drive rated output current changes when the *C6-02 [Carrier Frequency Selection]* value changes. The output current value changes linearly as the carrier frequency changes. You can use the values from the tables to calculate a frequency that is not shown.

#### Note:

The drive will apply derating for the rated output current value based on the carrier frequency only to the reference output current value of the *oL2 [Drive Overload]*. The derated value for the 100% rated output current in parameters and monitors will not be the same as the rated output current value shown in *Model Specifications (208 V Class) on page 415* and *Model Specifications (480 V Class) on page 416*.

### ■ 208 V Class

Table 6.15 Carrier Frequency and Rated Current Derating

Model	Rated Current (A)				
	2 kHz	5 kHz	8 kHz	10 kHz	12.5 kHz
2011	10.6	10.6	8.9	7.7	6.3
2017	16.7	16.7	14.0	12.2	10.0
2024	24.2	24.2	20.3	17.7	14.5
2031	30.8	30.8	25.8	22.5	18.4
2046	46.2	46.2	38.8	33.8	27.7
2059	59.4	59.4	49.8	43.5	35.6
2075	74.8	74.8	62.8	54.8	44.8
2088	88.0	88.0	73.9	64.5	52.8
2114	114	114	95.7	83.6	68.4
2143	143	143	114.4	95.3	-
2169	169	169	135.2	112.6	-
2211	211	189.2	156.4	134.6	-
2273	273	251.6	219.5	198.1	-
2343	343	315.7	-	-	-
2396	396	373.4	-	-	-

### ■ 480 V Class

Table 6.16 Carrier Frequency and Rated Current Derating

Model	Rated Current (A)				
	2 kHz	5 kHz	8 kHz	10 kHz	12.5 kHz
4005	4.8	4.8	4.0	3.5	2.8
4008	7.6	7.6	6.3	5.5	4.5
4011	11.0	11.0	9.2	8.0	6.6
4014	14.0	14.0	11.7	10.2	8.4
4021	21.0	21.0	17.6	15.4	12.6
4027	27.0	27.0	22.6	19.8	16.2
4034	34.0	34.0	28.5	24.9	20.4
4040	40.0	40.0	33.6	29.3	24.0

## 6.6 Drive Derating

Model	Rated Current (A)				
	2 kHz	5 kHz	8 kHz	10 kHz	12.5 kHz
4052	52.0	52.0	43.6	38.1	31.2
4065	65.0	65.0	54.6	47.6	39.0
4077	77.0	77.0	64.6	56.4	46.2
4096	96.0	96.0	80.6	70.4	57.6
4124	124	124	99.2	82.6	-
4156	156	156	124.8	104	-
4180	180	155.5	118.7	94.2	-
4240	240	212.9	172.3	145.2	-
4302	302	268.8	218.9	185.7	-
4361	361	318.5	254.7	212.2	-
4414	414	369.7	303.3	259	-
4477	477	367.4	-	-	-
4515	515	396.7	-	-	-
4590	590	461.1	-	-	-
4720	720	562.7	-	-	-

### ◆ Derating Depending on Ambient Temperature

When you install drives in a place where ambient temperatures are higher than the rated conditions or install drives side-by-side in the enclosure panel, set L8-12 [Ambient Temperature] and L8-35 [Installation Method Selection]. Derate the output current as specified in Figure 6.1 to Figure 6.4.

No. (Hex.)	Name	Description	Default (Range)
L8-12 (04B8)	Ambient Temperature Setting	<input type="checkbox"/> V/f <input type="checkbox"/> OLVP/PM <input type="checkbox"/> EZOLV Sets the ambient temperature of the drive installation area.	40 °C (Determined by L8-35)

No. (Hex.)	Name	Description	Default (Range)
L8-35 (04EC)	Installation Method Selection	<input type="checkbox"/> V/f <input type="checkbox"/> OLVP/PM <input type="checkbox"/> EZOLV Sets the type of drive installation.	Determined by the drive (0 - 3)

#### Note:

The drive will detect an oPE02 [Parameter Range Setting Error] in these conditions:

- If you set L8-12 = 60 °C and L8-35 = 1 or 3 for models 2011 to 2114 and 4005 to 4124
- If you set L8-35 = 1 or 3 for models 2143 to 2396 and 4156 to 4720

### 0 : IP20/UL Open Type

Use this setting to install an IP20/UL Open Type drive. The applicable output current to operate the drive changes when the ambient temperature changes:

- -10 °C to +50 °C (14 °F to 122 °F): You can operate the drive with 100% output current without derating.
- 50 °C to 60 °C (122 °F to 140 °F): Derate the output current from 100% to 80%.

Make sure that there is 60 mm (2.4 in) minimum of space between drives or between the drive and side of the enclosure panel.

### 1 : Side-by-Side Mounting

Use this setting to install more than one drive Side-by-Side. The applicable output current to operate the drive changes when the ambient temperature changes:

- -10 °C to +40 °C (14 °F to 104 °F): You can operate the drive with 100% output current without derating.
- 40 °C to 50 °C (104 °F to 122 °F): Derate the output current from 100% to 80%.

Make sure that there is 2 mm (0.08 in) minimum of space between drives.

## 2 : IP20/UL Type 1

Use this setting to install an IP20/UL Type 1 drive. The applicable output current to operate the drive changes when the drive model and ambient temperature change:

- For the drive models 4005 and 4008
  - -10 °C to +40 °C (14 °F to 104 °F): You can operate the drive with 100% output current without derating.
  - 40 °C to 60 °C (104 °F to 140 °F): Derate the output current from 100% to 80%.
- For the drive models 4011 to 4027
  - -10 °C to +50 °C (14 °F to 122 °F): You can operate the drive with 100% output current without derating.
  - 50 °C to 60 °C (122 °F to 140 °F): Derate the output current from 100% to 80%.
- For the drive models 4034 to 4065
  - -10 °C to +45 °C (14 °F to 113 °F): You can operate the drive with 100% output current without derating.
  - 45 °C to 50 °C (113 °F to 122 °F): Derate the output current from 100% to 90%.
  - 50 °C to 60 °C (122 °F to 140 °F): Derate the output current from 90% to 70%.
- For the drive models 2011 to 2396 and 4077 to 4720
  - -10 °C to +40 °C (14 °F to 104 °F): You can operate the drive with 100% output current without derating.
  - 40 °C to 60 °C (104 °F to 140 °F): Derate the output current from 100% to 60%.

## 3 : IP55/UL Type 12

Use this setting to install an IP55/UL Type 12 drive. The applicable output current to operate the drive changes when the ambient temperature changes:

- -10 °C to +40 °C (14 °F to 104 °F): You can operate the drive with 100% output current without derating.
- 40 °C to 50 °C (104 °F to 122 °F): Derate the output current from 100% to 80%.

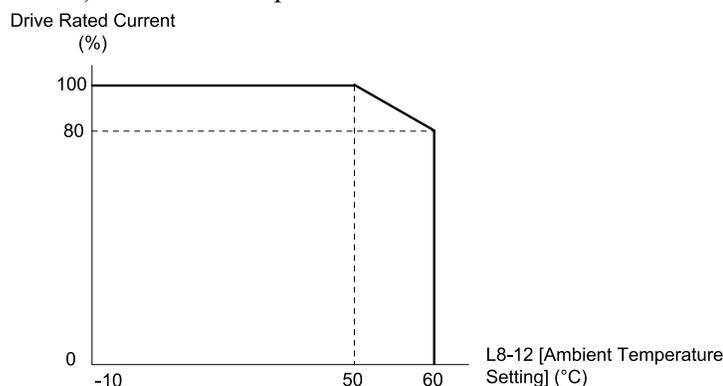


Figure 6.1 Derating for IP20/UL Open Type (L8-35 = 0)


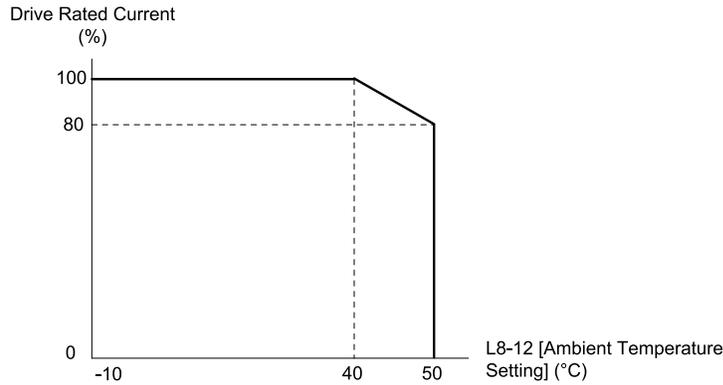


Figure 6.2 Derating for Side-by-Side Mounting (L8-35 = 1)

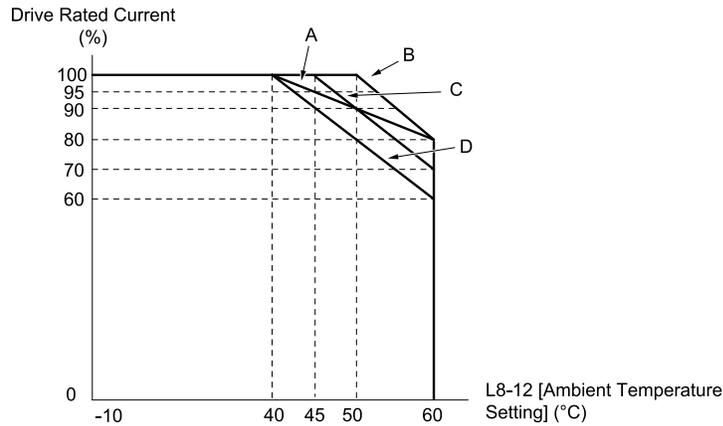

A - Drive Models: 4005, 4008  
 B - Drive Models: 4011 to 4027

C - Drive Models: 4034 to 4065  
 D - Drive Models: 2011 to 2396 and 4077 to 4720

Figure 6.3 Derating for IP20/UL Type 1 (L8-35 = 2)

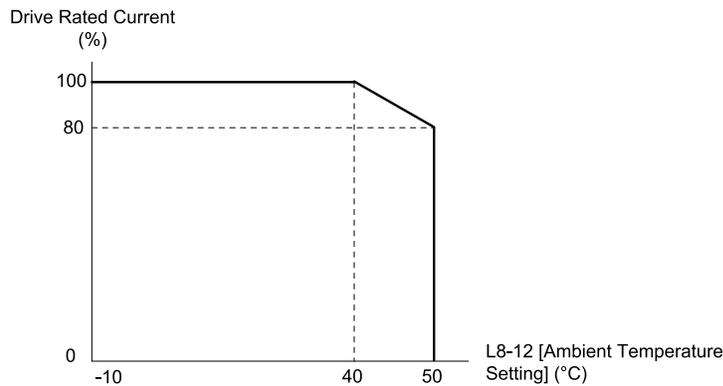


Figure 6.4 Derating for IP55/UL Type 12 (L8-35 = 3)

### ◆ Altitude Derating

Install the drive in a location that has an altitude of 1000 m (3281 ft) or lower.

Derate the output current by 1% for each 100 m (328 ft) to install the drive in altitudes between 1000 to 4000 m (3281 to 13123 ft).

It is not necessary to derate the rated voltage in these conditions:

- Installing the drive at 2000 m (6562 ft) or lower

- Installing the drive between 2000 to 4000 m (6562 to 13123 ft) and grounding the neutral point on the power supply.  
If you do not ground the drive with a neutral network, contact Yaskawa or your nearest sales representative.

## 6.7 Drive Exterior and Mounting Dimensions

### ◆ Drive Models and Exterior/Mounting Dimensions

Table 6.17 Models: 2xxxxB/F and 4xxxxB/F without Main Switch

Model	Reference Pages	
	IP20/UL Open Type Models: 2xxxxB and 4xxxxB	IP20/UL Type 1 Models: 2xxxxF and 4xxxxF
4005, 4008	-	432
2011, 2017 4011, 4014	-	433
2024, 2031 4021 - 4034	-	434
2046, 2059 4040 - 4065	-	435
2075 - 2114 4077 - 4124	-	436
2143, 2169 4156	-	437
2211, 2273 4180 - 4302	429	-
2343, 2396 4361, 4414	430	-
4477 - 4720	432	-

Table 6.18 Models: 2xxxxV and 4xxxxV without Main Switch

Model	Reference Pages
	IP55/UL Type 12 Models: 2xxxxV and 4xxxxV
4005	438
2011, 2017 4008 - 4014	439
2024, 2031 4021 - 4034	440
2046, 2059 4040 - 4065	441
2075 - 2114 4077 - 4124	442
2143, 2169 4156	-
2211, 2273 4180 - 4302	-
2343, 2396 4361, 4414	-
4477 - 4720	-

Table 6.19 Models: 2xxxxT and 4xxxxT with Main Switch

Model	Reference Pages
	IP55/UL Type 12 with Main Switch Models: 2xxxxT and 4xxxxT
4005	443
2011, 2017 4008 - 4014	444

Model	Reference Pages
	IP55/UL Type 12 with Main Switch Models: 2xxxxT and 4xxxxT
2024, 2031 4021 - 4034	445
2046, 2059 4040 - 4065	446
2075 - 2114 4077 - 4096	447

### ◆ IP20/UL Open Type

#### ■ Drive Models: 2211, 2273, 4180 to 4302

**Note:**

When you use non-metric hardware to install the drive, use Type B narrow washers or equivalent and make sure that the size of the screw head and washer are applicable for your drive before installation.

## 6.7 Drive Exterior and Mounting Dimensions

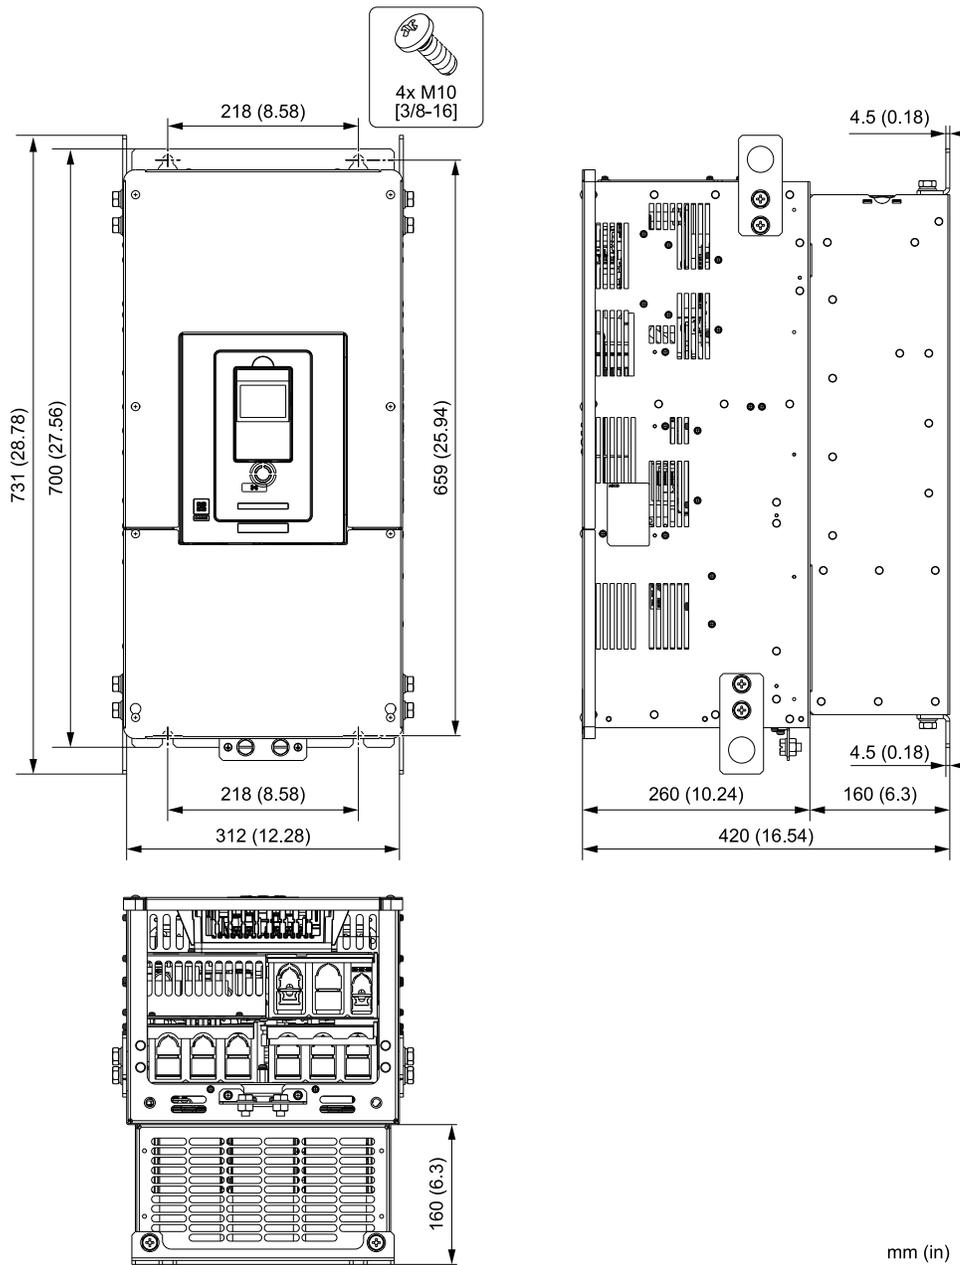


Figure 6.5 Exterior and Mounting Dimensions Diagram 1

Estimated Weight <sup>*1</sup>				
kg (lb)				
2211	2273	4180	4240	4302
58 (127.89)	61 (134.51)	60 (132.30)	62 (136.71)	65 (143.33)

\*1 The estimated weights are for drives with hardware revision D or later. For estimated weights of drives with hardware revision C or earlier, contact Yaskawa or your nearest sales representative. The “REV” column on the nameplate on the right side of the drive identifies the hardware revision.

### ■ Drive Models: 2343, 2396, 4361, 4414

#### Note:

When you use non-metric hardware to install the drive, use Type B narrow washers or equivalent and make sure that the size of the screw head and washer are applicable for your drive before installation.

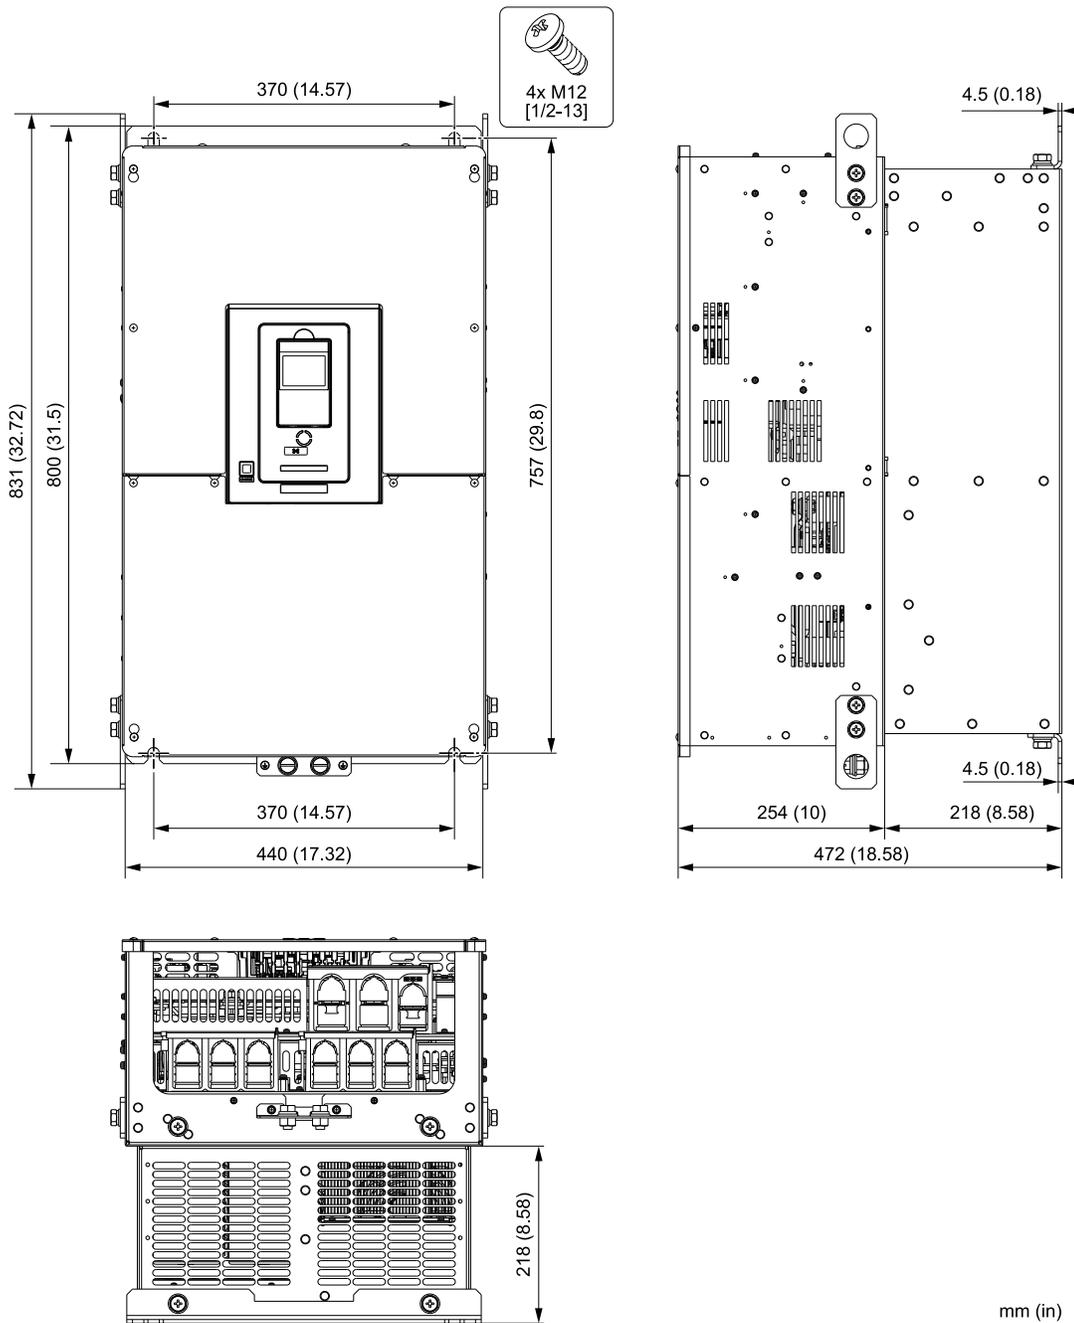


Figure 6.6 Exterior and Mounting Dimensions Diagram 2

Estimated Weight <sup>*1</sup>			
kg (lb)			
2343	2396	4361	4414
100 (220.50)	106 (233.73)	106 (233.73)	112 (246.96)

\*1 The estimated weights are for drives with hardware revision D or later. For estimated weights of drives with hardware revision C or earlier, contact Yaskawa or your nearest sales representative. The “REV” column on the nameplate on the right side of the drive identifies the hardware revision.

■ Drive Models: 4477 to 4720

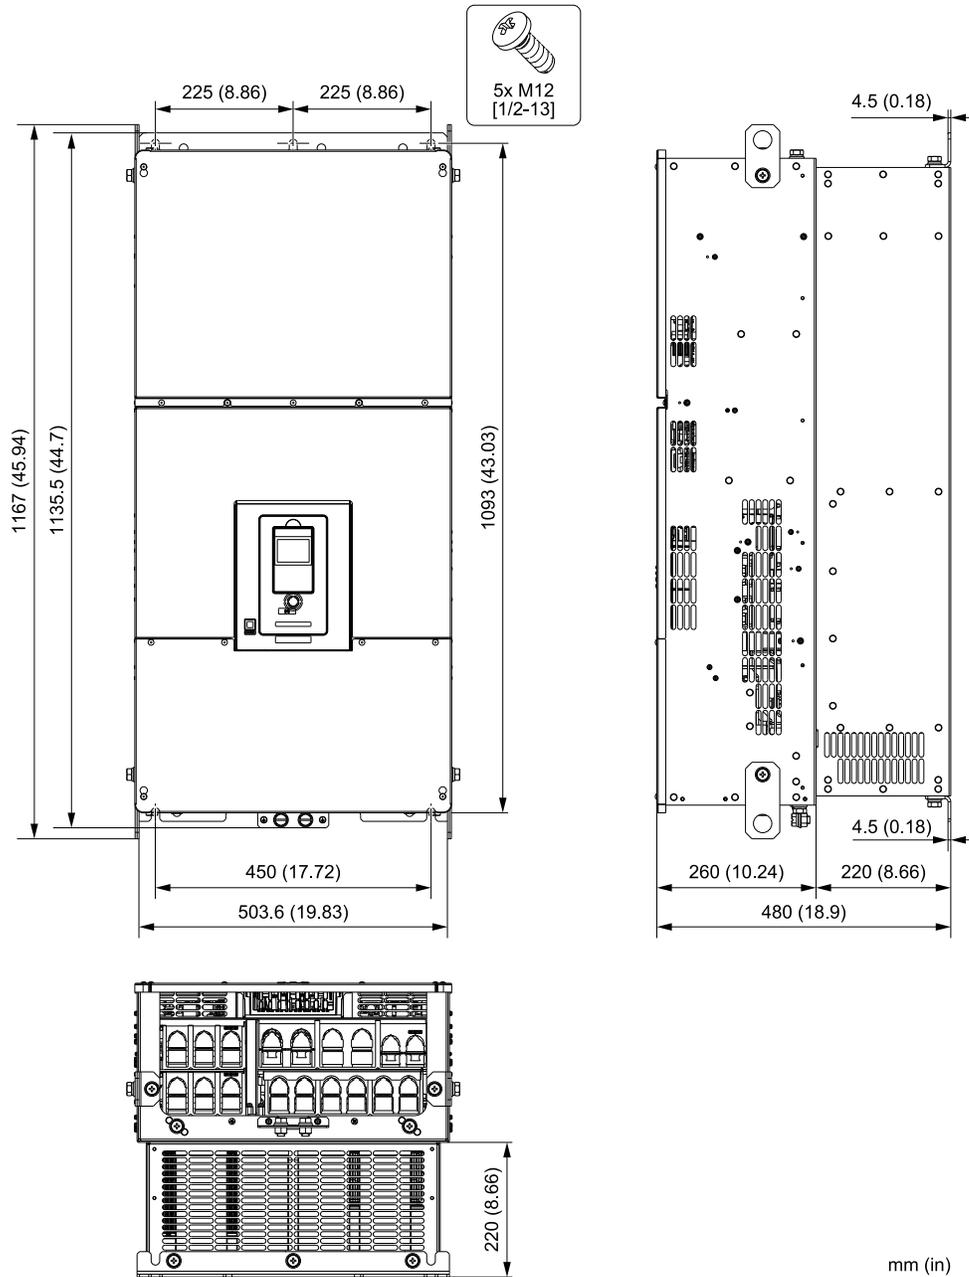


Figure 6.7 Exterior and Mounting Dimensions Diagram 3

Estimated Weight kg (lb)			
4477	4515	4590	4720
190 (418.95)	190 (418.95)	201 (443.21)	199 (438.80)

◆ IP20/UL Type1

■ Drive Models: 4005, 4008

Note:

When you use non-metric hardware to install the drive, use Type B narrow washers or equivalent and make sure that the size of the screw head and washer are applicable for your drive before installation.

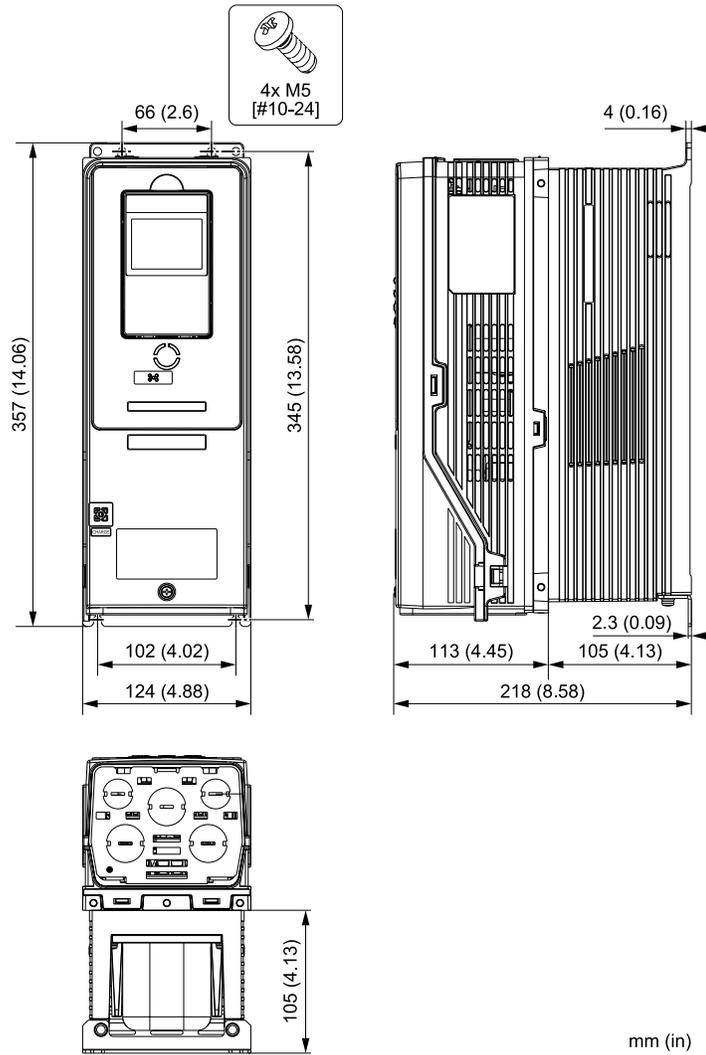


Figure 6.8 Exterior and Mounting Dimensions Diagram 1


Type	Estimated Weight kg (lb)	
	4005	4008
No built-in EMC filter	6.0 (13.2)	7.0 (15.4)
Built-in EMC filter for C2	7.0 (15.4)	7.5 (16.5)

■ Drive Models: 2011, 2017, 4011, 4014

**Note:**

When you use non-metric hardware to install the drive, use Type B narrow washers or equivalent and make sure that the size of the screw head and washer are applicable for your drive before installation.

## 6.7 Drive Exterior and Mounting Dimensions

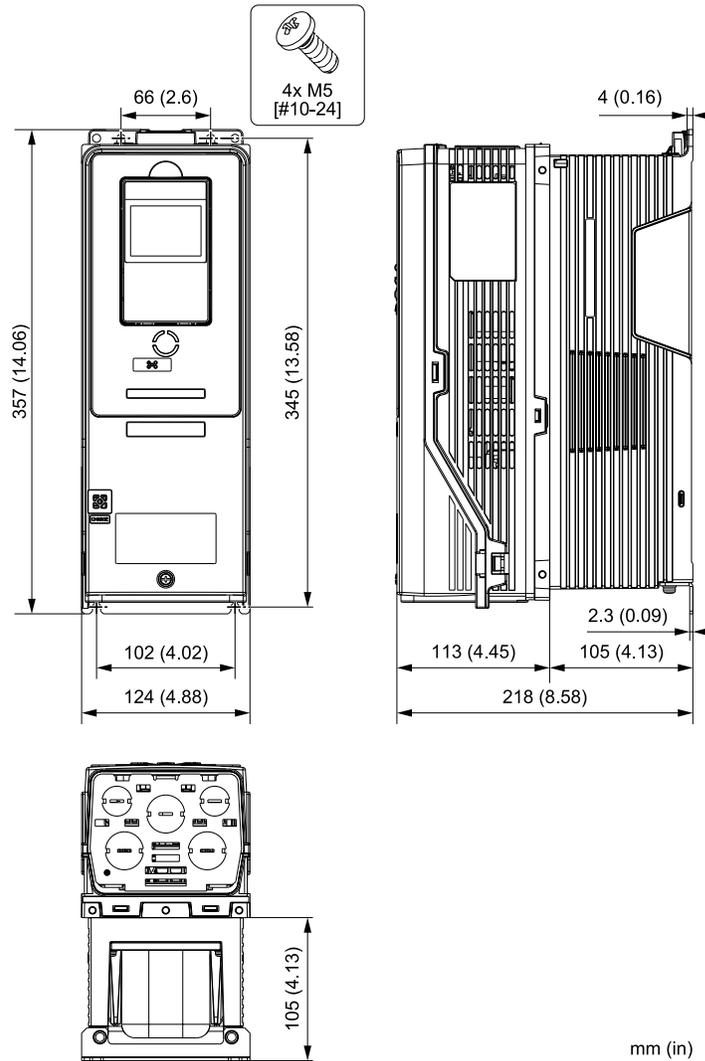

**Figure 6.9 Exterior and Mounting Dimensions Diagram 2**

Type	Estimated Weight kg (lb)			
	2011	2017	4011	4014
No built-in EMC filter	6.0 (13.2)	6.0 (13.2)	6.5 (14.3)	6.5 (14.3)
Built-in EMC filter for C2	6.5 (14.3)	6.5 (14.3)	7.0 (15.4)	7.0 (15.4)

### ■ Drive Models: 2024, 2031, 4021 to 4034

**Note:**

When you use non-metric hardware to install the drive, use Type B narrow washers or equivalent and make sure that the size of the screw head and washer are applicable for your drive before installation.

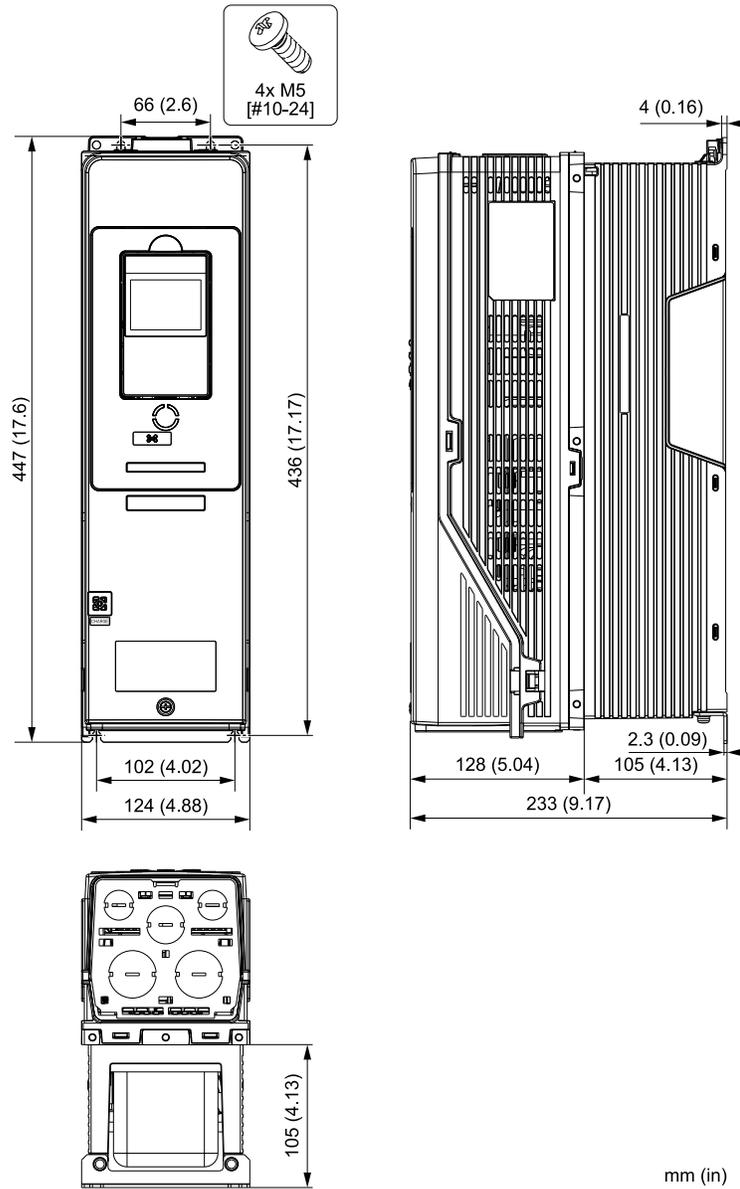


Figure 6.10 Exterior and Mounting Dimensions Diagram 3

Type	Estimated Weight kg (lb)				
	2024	2031	4021	4027	4034
No built-in EMC filter	7.5 (16.5)	8.0 (17.6)	8.0 (17.6)	9.0 (19.8)	10 (22.0)
Built-in EMC filter for C2	8.5 (18.7)	9.0 (19.8)	9.0 (19.8)	10 (22.0)	11 (24.3)

■ Drive Models: 2046, 2059, 4040 to 4065

Note:

When you use non-metric hardware to install the drive, use Type B narrow washers or equivalent and make sure that the size of the screw head and washer are applicable for your drive before installation.

## 6.7 Drive Exterior and Mounting Dimensions

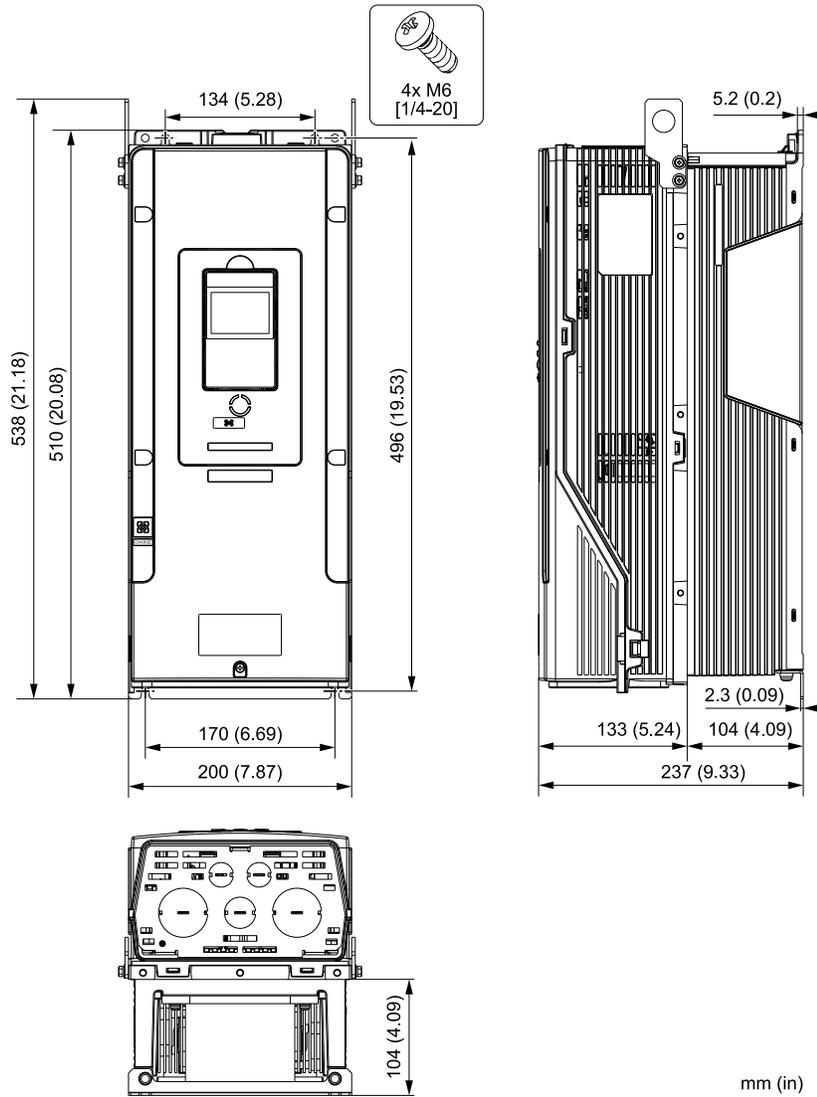


Figure 6.11 Exterior and Mounting Dimensions Diagram 4

Type	Estimated Weight kg (lb)				
	2046	2059	4040	4052	4065
No built-in EMC filter	14 (30.9)	15 (33.1)	15 (33.1)	17 (37.5)	19 (41.9)
Built-in EMC filter for C2	15 (33.1)	16 (35.3)	16 (35.3)	18 (39.7)	20 (44.1)

### ■ Drive Models: 2075 to 2114, 4077 to 4124

**Note:**

When you use non-metric hardware to install the drive, use Type B narrow washers or equivalent and make sure that the size of the screw head and washer are applicable for your drive before installation.

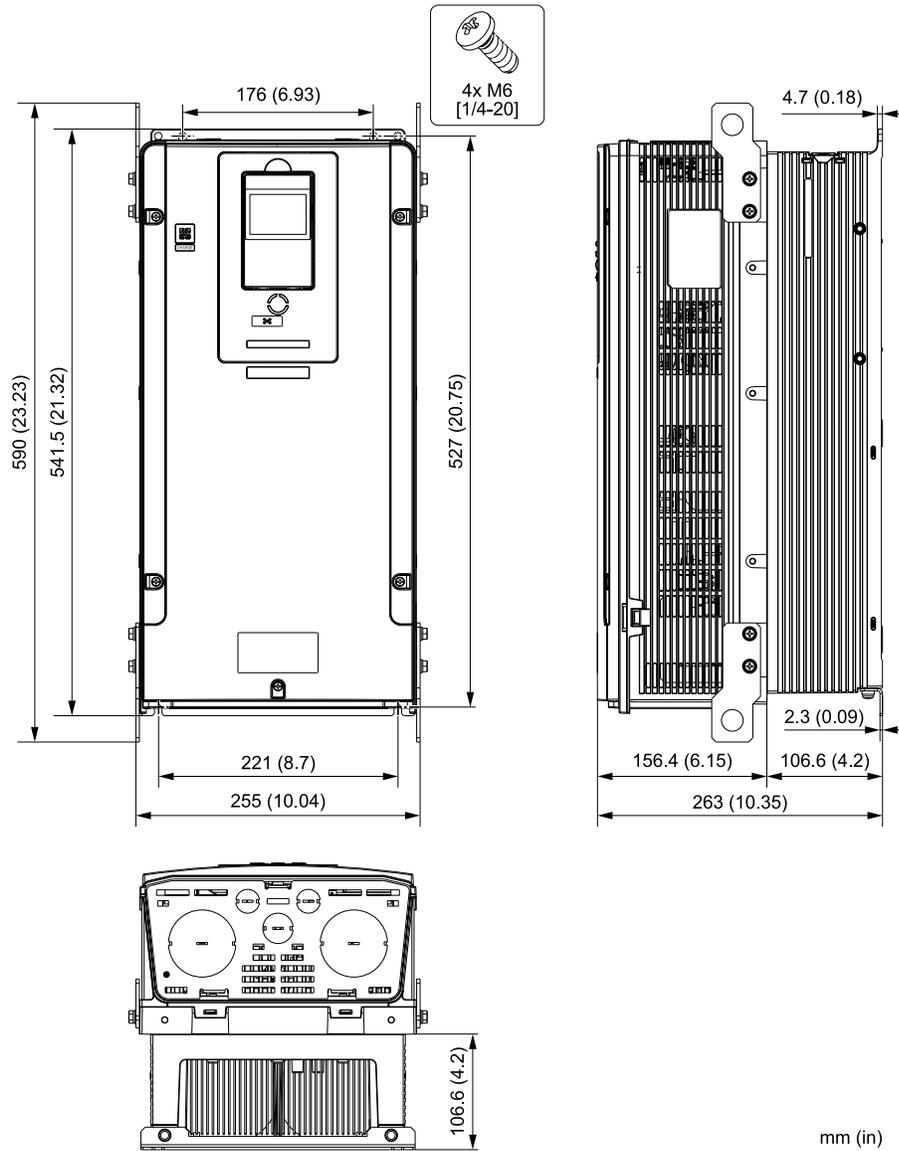


Figure 6.12 Exterior and Mounting Dimensions Diagram 5


Type	Estimated Weight kg (lb)					
	2075	2088	2114	4077	4096	4124
No built-in EMC filter	25 (55.1)	25 (55.1)	28 (61.7)	28 (61.7)	30 (66.1)	32 (70.5)
Built-in EMC filter for C2	25 (55.1)	25 (55.1)	28 (61.7)	28 (61.7)	30 (66.1)	33 (72.8)

■ Drive Models: 2143, 2169, 4156

Note:

When you use non-metric hardware to install the drive, use Type B narrow washers or equivalent and make sure that the size of the screw head and washer are applicable for your drive before installation.

## 6.7 Drive Exterior and Mounting Dimensions

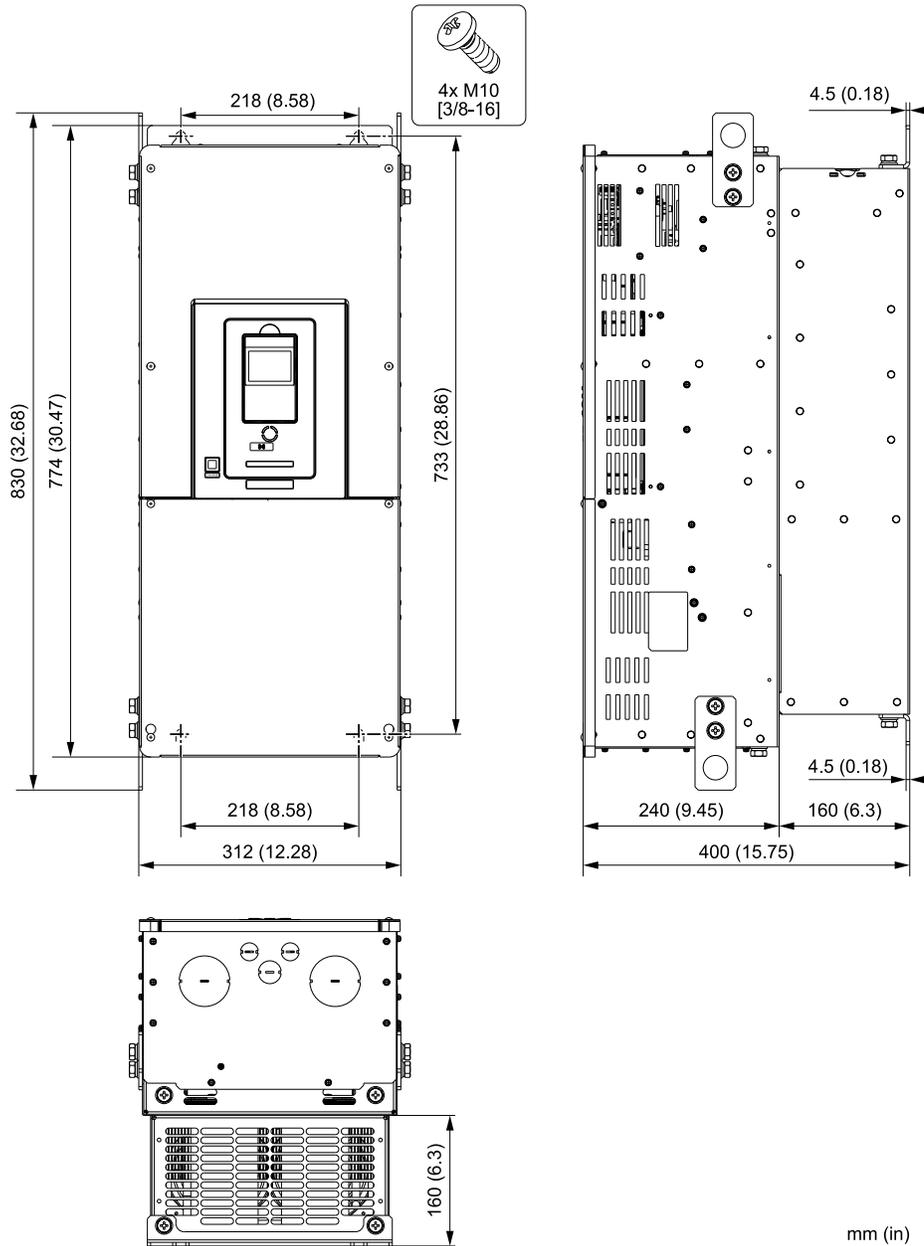

**Figure 6.13 Exterior and Mounting Dimensions Diagram 6**

Type	Estimated Weight kg (lb)		
	2143	2169	4156
No built-in EMC filter	71 (156.5)	74 (163.1)	76 (167.6)
Built-in EMC filter for C2	74 (163.1)	76 (167.6)	78 (172.0)

### ◆ IP55/UL Type 12

#### ■ Drive Model: 4005

**Note:**

When you use non-metric hardware to install the drive, use Type B narrow washers or equivalent and make sure that the size of the screw head and washer are applicable for your drive before installation.

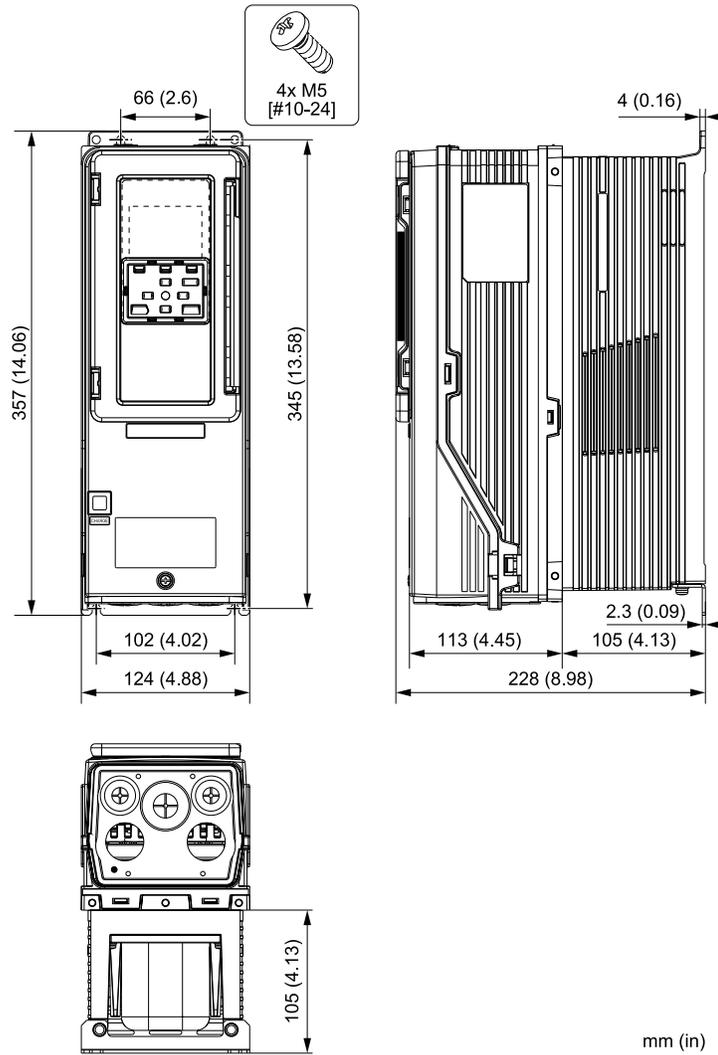


Figure 6.14 Exterior and Mounting Dimensions Diagram 1


Estimated Weight	
kg (lb)	
<b>4005</b>	
6.5 (14.3)	

■ Drive Models: 2011, 2017, 4008 to 4014

Note:

When you use non-metric hardware to install the drive, use Type B narrow washers or equivalent and make sure that the size of the screw head and washer are applicable for your drive before installation.

## 6.7 Drive Exterior and Mounting Dimensions

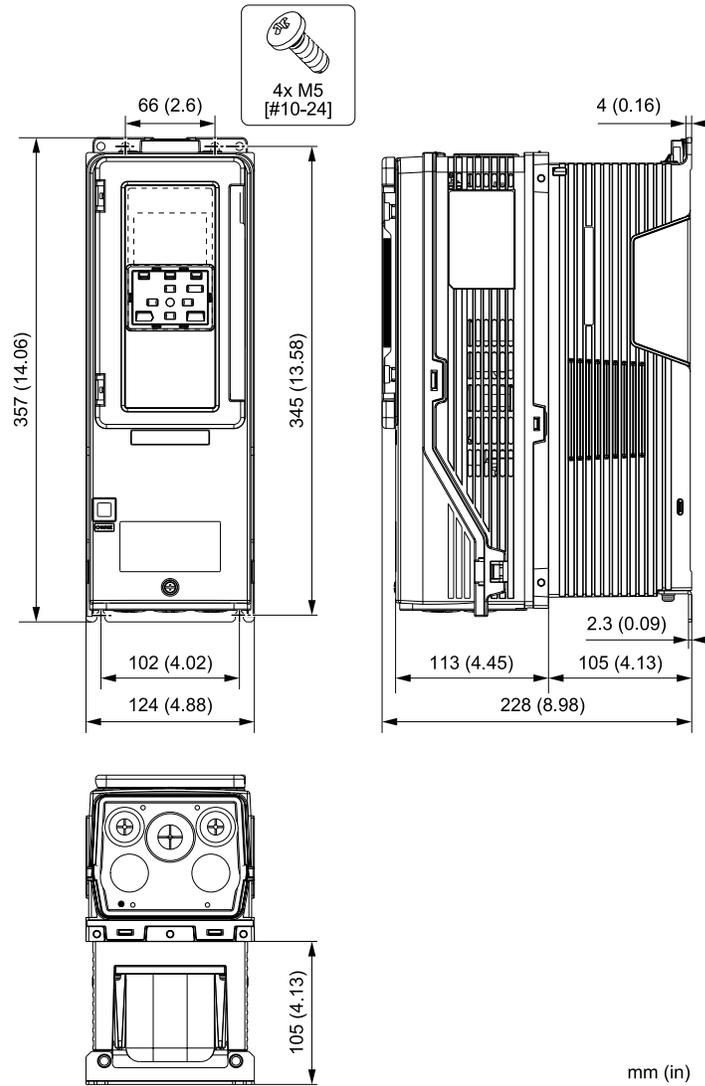

**Figure 6.15 Exterior and Mounting Dimensions Diagram 2**

Estimated Weight kg (lb)				
2011	2017	4008	4011	4014
6.0 (13.2)	6.0 (13.2)	6.5 (14.3)	6.5 (14.3)	6.5 (14.3)

### ■ Drive Models: 2024, 2031, 4021 to 4034

**Note:**

When you use non-metric hardware to install the drive, use Type B narrow washers or equivalent and make sure that the size of the screw head and washer are applicable for your drive before installation.

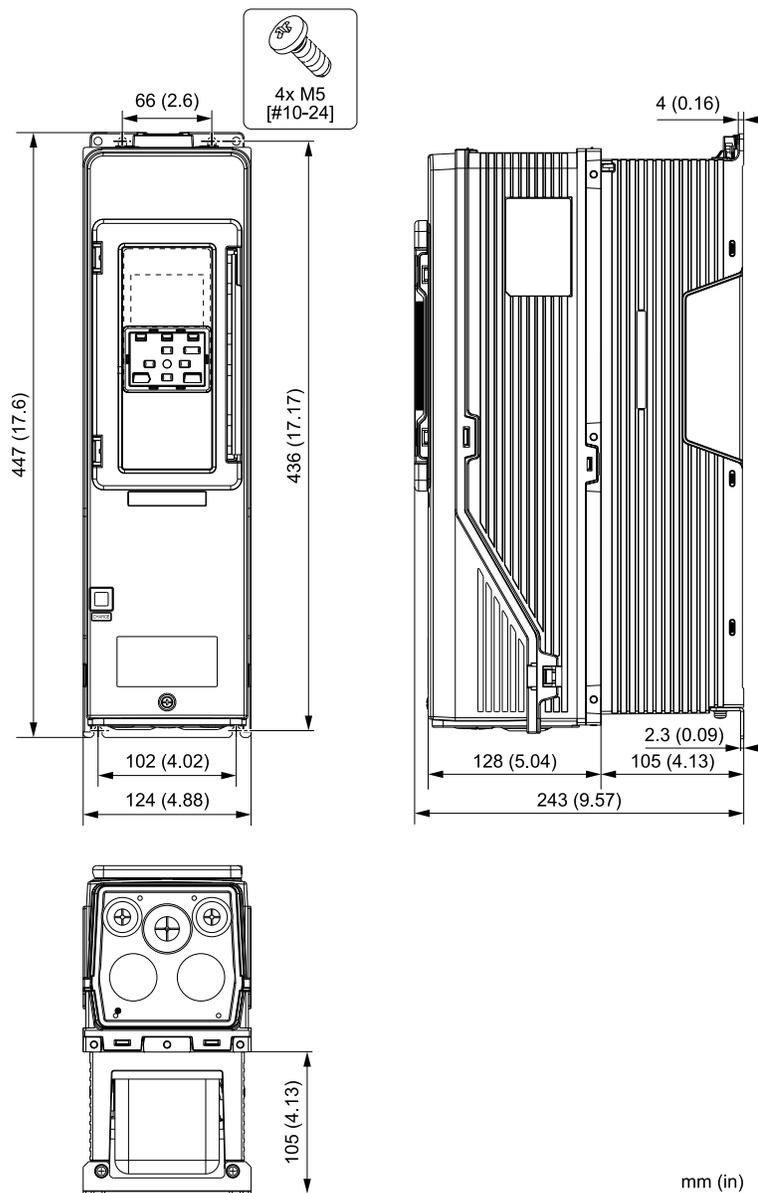


Figure 6.16 Exterior and Mounting Dimensions Diagram 3

Estimated Weight kg (lb)				
2024	2031	4021	4027	4034
7.5 (16.5)	8.0 (17.6)	8.5 (18.7)	9.0 (19.8)	11 (24.3)

■ Drive Models: 2046, 2059, 4040 to 4065

**Note:**

When you use non-metric hardware to install the drive, use Type B narrow washers or equivalent and make sure that the size of the screw head and washer are applicable for your drive before installation.

## 6.7 Drive Exterior and Mounting Dimensions

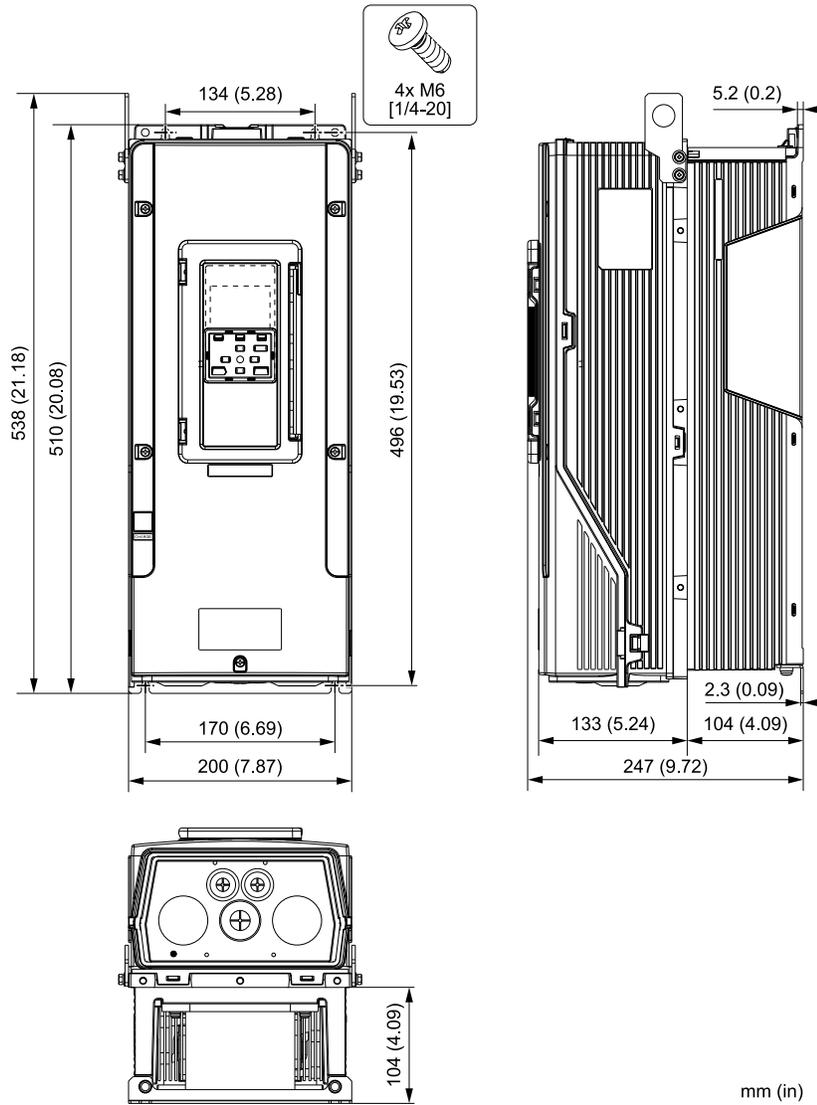


Figure 6.17 Exterior and Mounting Dimensions Diagram 4

Estimated Weight kg (lb)				
2046	2059	4040	4052	4065
14 (30.9)	15 (33.1)	15 (33.1)	17 (37.5)	19 (41.9)

### ■ Drive Models: 2075 to 2114, 4077 to 4124

**Note:**

When you use non-metric hardware to install the drive, use Type B narrow washers or equivalent and make sure that the size of the screw head and washer are applicable for your drive before installation.

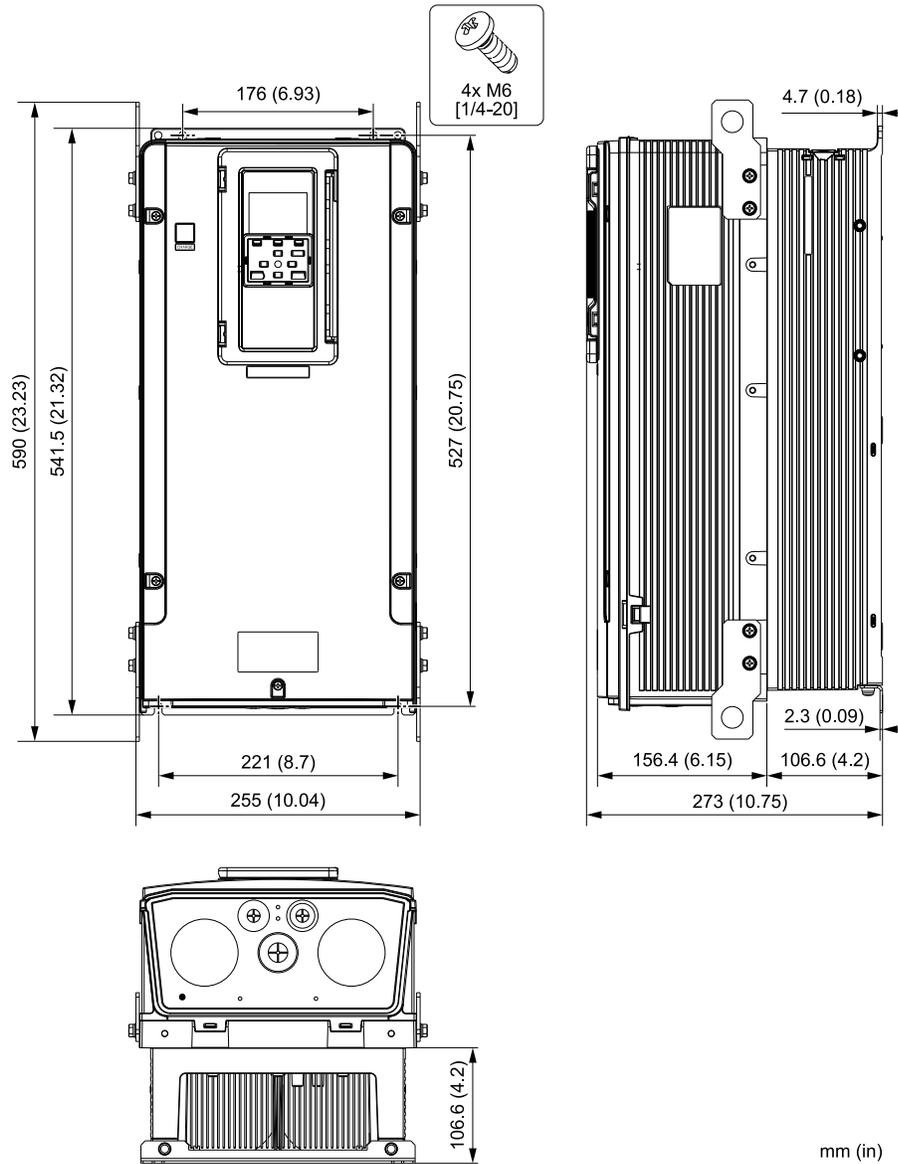


Figure 6.18 Exterior and Mounting Dimensions Diagram 5

Estimated Weight kg (lb)					
2075	2088	2114	4077	4096	4124
25 (55.1)	25 (55.1)	28 (61.7)	28 (61.7)	30 (66.1)	33 (72.8)


◆ IP55/UL Type 12 with Main Switch

■ Drive Model: 4005

Note:

When you use non-metric hardware to install the drive, use Type B narrow washers or equivalent and make sure that the size of the screw head and washer are applicable for your drive before installation.

## 6.7 Drive Exterior and Mounting Dimensions

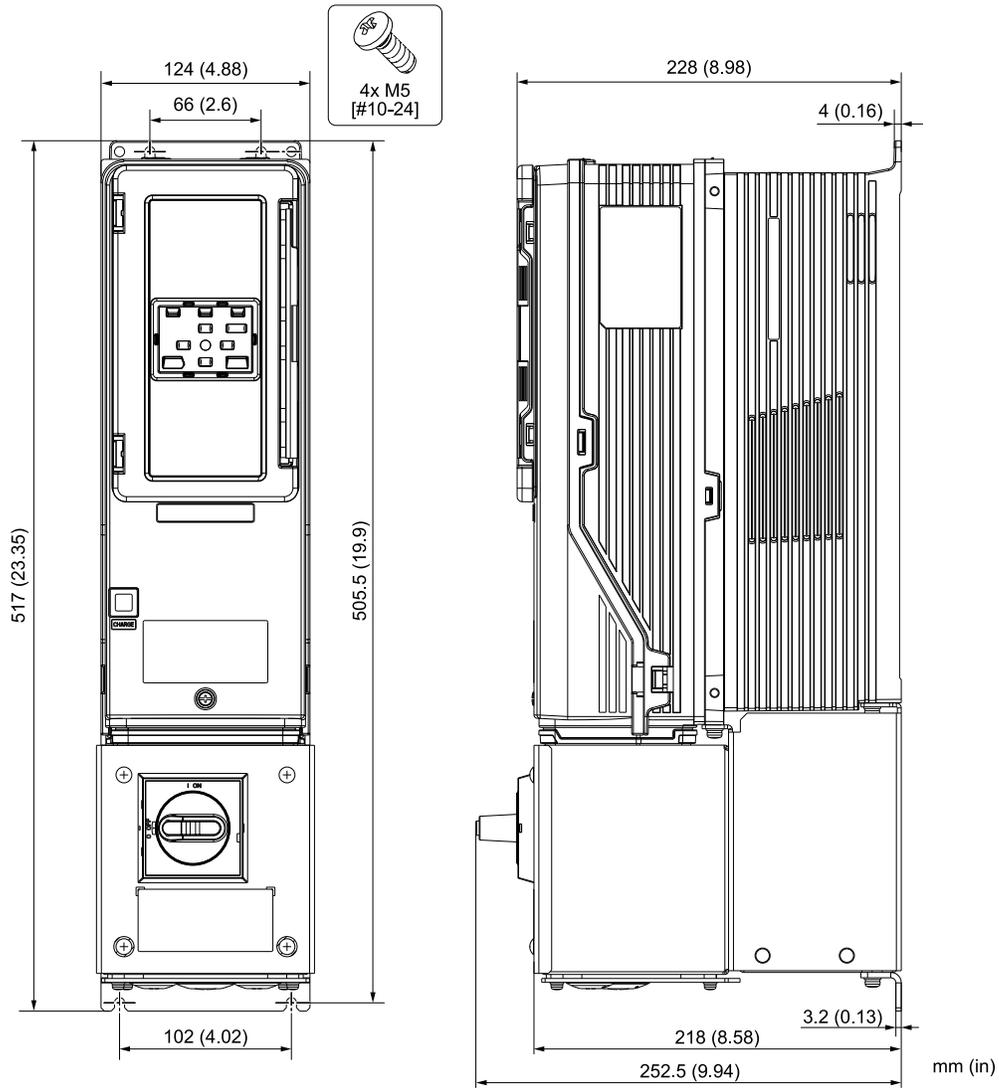

**Figure 6.19 Exterior and Mounting Dimensions Diagram 1**

<b>Estimated Weight</b>
<b>kg (lb)</b>
<b>4005</b>
9.0 (19.8)

### ■ Drive Models: 2011, 2017, 4008 to 4014

**Note:**

When you use non-metric hardware to install the drive, use Type B narrow washers or equivalent and make sure that the size of the screw head and washer are applicable for your drive before installation.

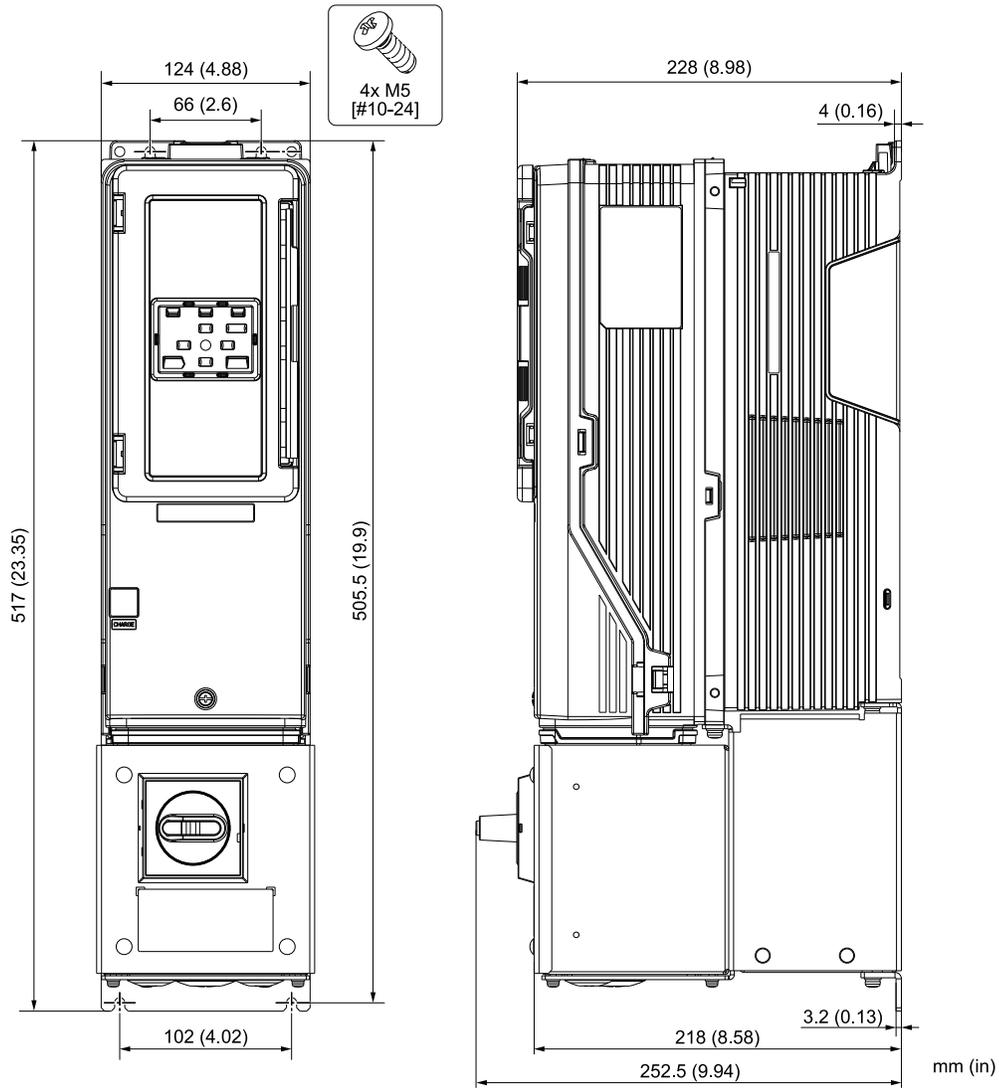


Figure 6.20 Exterior and Mounting Dimensions Diagram 2


Estimated Weight kg (lb)				
2011	2017	4008	4011	4014
9.0 (19.8)	9.0 (19.8)	9.5 (20.9)	9.5 (20.9)	9.5 (20.9)

■ Drive Models: 2024, 2031, 4021 to 4034

Note:

When you use non-metric hardware to install the drive, use Type B narrow washers or equivalent and make sure that the size of the screw head and washer are applicable for your drive before installation.

## 6.7 Drive Exterior and Mounting Dimensions

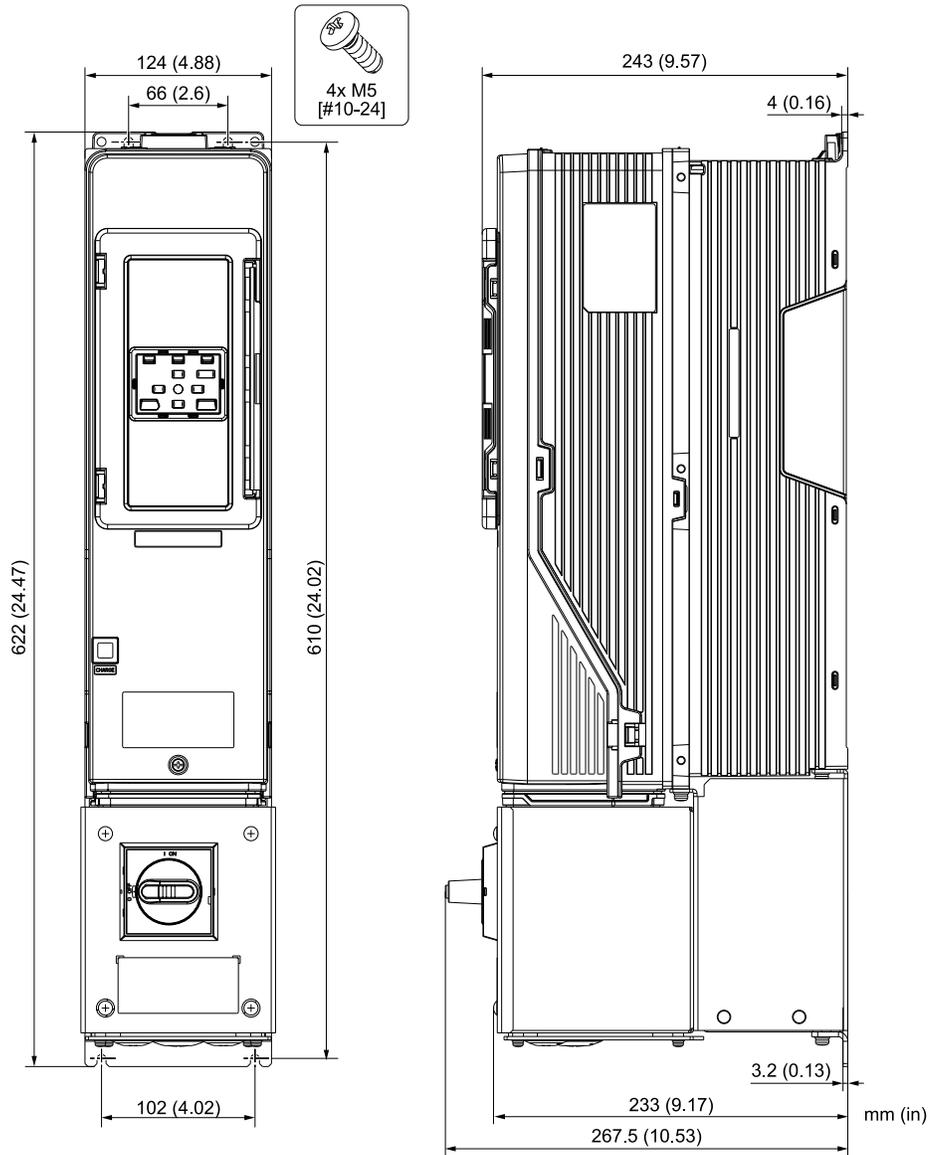

**Figure 6.21 Exterior and Mounting Dimensions Diagram 3**

Estimated Weight kg (lb)				
2024	2031	4021	4027	4034
11 (24.3)	12 (26.5)	12 (26.5)	13 (28.7)	14 (30.9)

### ■ Drive Models: 2046, 2059, 4040 to 4065

**Note:**

When you use non-metric hardware to install the drive, use Type B narrow washers or equivalent and make sure that the size of the screw head and washer are applicable for your drive before installation.

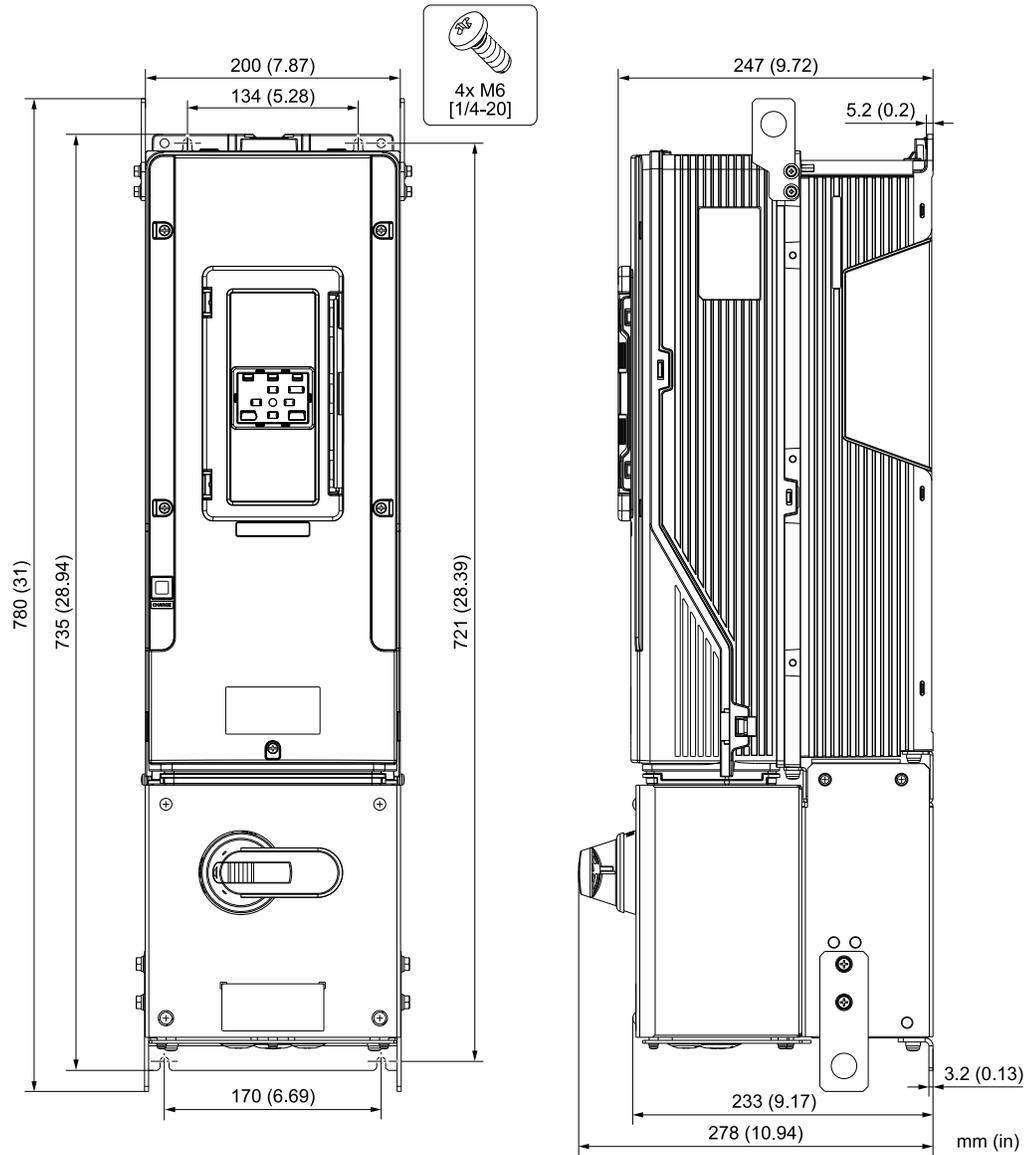


Figure 6.22 Exterior and Mounting Dimensions Diagram 4


Estimated Weight kg (lb)				
2046	2059	4040	4052	4065
21 (46.3)	22 (48.5)	22 (48.5)	24 (52.9)	26 (57.3)

■ Drive Models: 2075 to 2114, 4077 to 4096

Note:

When you use non-metric hardware to install the drive, use Type B narrow washers or equivalent and make sure that the size of the screw head and washer are applicable for your drive before installation.

## 6.7 Drive Exterior and Mounting Dimensions

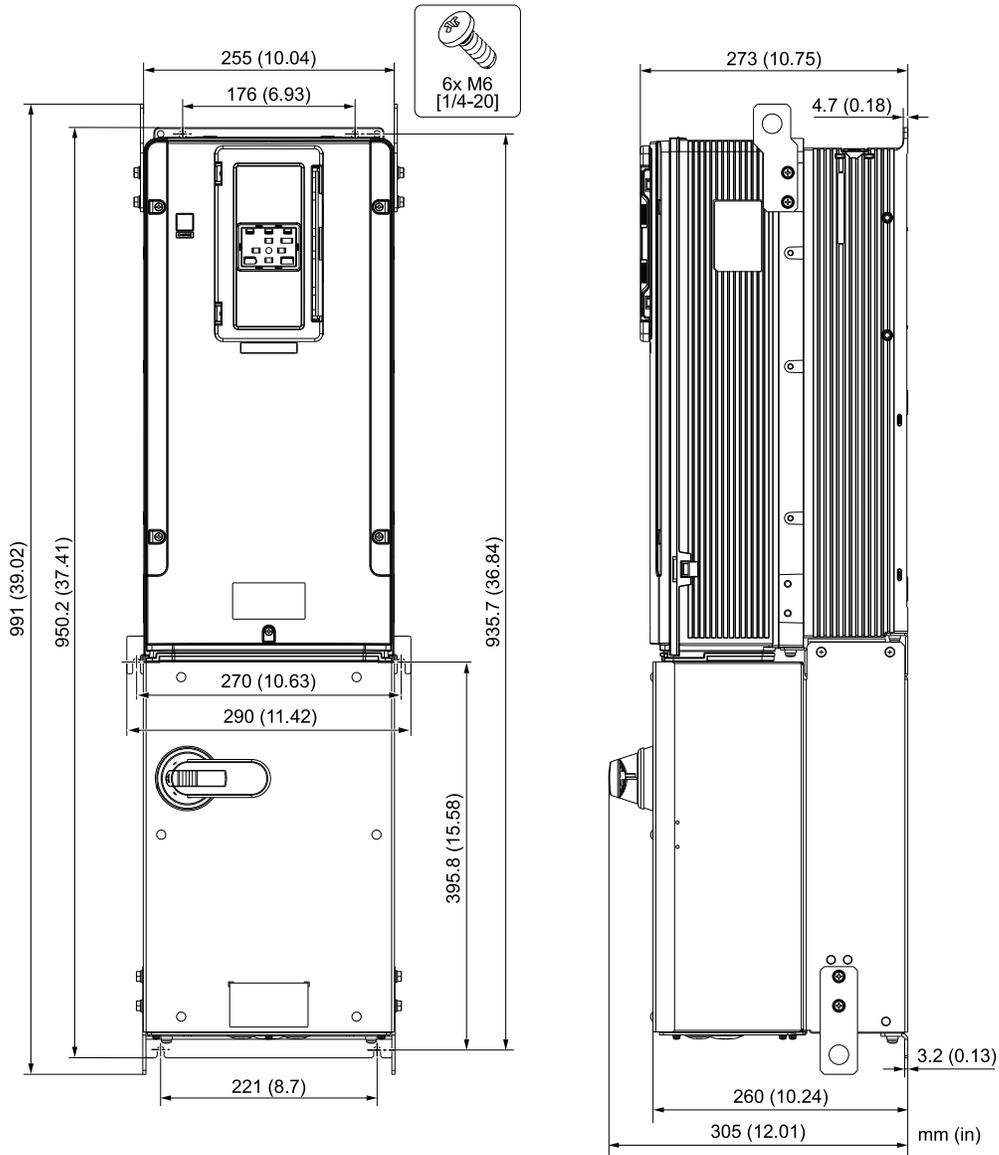

**Figure 6.23 Exterior and Mounting Dimensions Diagram 5**

Estimated Weight kg (lb)				
2075	2088	2114	4077	4096
41 (90.4)	41 (90.4)	44 (97.0)	44 (97.0)	46 (101.4)

## 6.8 Knock-Out Hole Dimensions

### ◆ Drive Models and Knock-Out Hole Dimensions

Table 6.20 Models: 2xxxxF and 4xxxxF without Main Switch

Model	Reference Pages
	IP20/UL Type 1 Models: 2xxxxF and 4xxxxF
4005, 4008	450
2011, 2017 4011, 4014	450
2024, 2031 4021 - 4034	451
2046, 2059 4040 - 4065	451
2075 - 2114 4077 - 4124	452
2143, 2169 4156	452
2211, 2273 4180 - 4302	-
2343, 2396 4361, 4414	-
4477 - 4720	-

Table 6.21 Models: 2xxxxV and 4xxxxV without Main Switch

Model	Reference Pages
	IP55/UL Type 12 Models: 2xxxxV and 4xxxxV
4005	453
2011, 2017 4008 - 4014	453
2024, 2031 4021 - 4034	454
2046, 2059 4040 - 4065	454
2075 - 2114 4077 - 4124	455
2143, 2169 4156	-
2211, 2273 4180 - 4302	-
2343, 2396 4361, 4414	-
4477 - 4720	-

Table 6.22 Models: 2xxxxT and 4xxxxT with Main Switch

Model	Reference Pages
	IP55/UL Type 12 with Main Switch Models: 2xxxxT and 4xxxxT
4005	455
2011, 2017 4008 - 4014	456

## 6.8 Knock-Out Hole Dimensions

Model	Reference Pages
	IP55/UL Type 12 with Main Switch Models: 2xxxxT and 4xxxxT
2024, 2031 4021 - 4034	456
2046, 2059 4040 - 4065	457
2075 - 2114 4077 - 4124	457

### ◆ IP20/UL Type1

#### ■ Drive Models: 4005, 4008

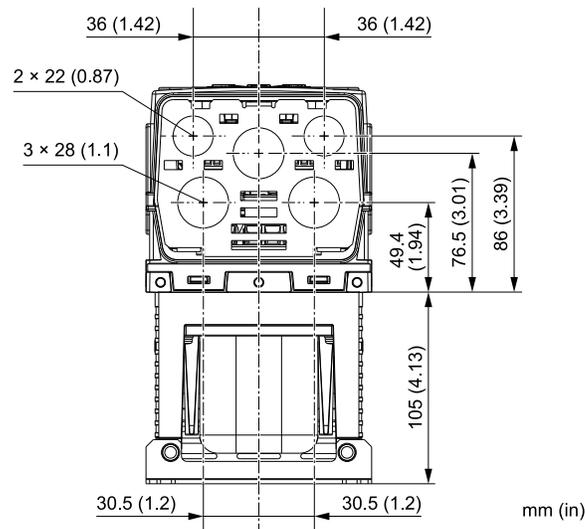


Figure 6.24 Knock-Out Dimensions Diagram 1

#### ■ Drive Models: 2011, 2017, 4011, 4014

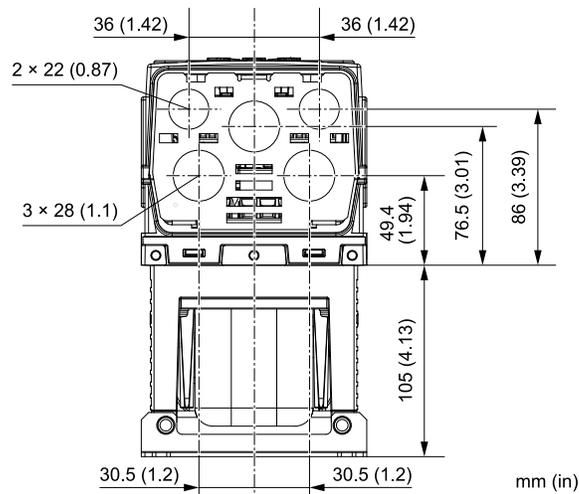


Figure 6.25 Knock-Out Dimensions Diagram 2

■ Drive Models: 2024, 2031, 4021 to 4034

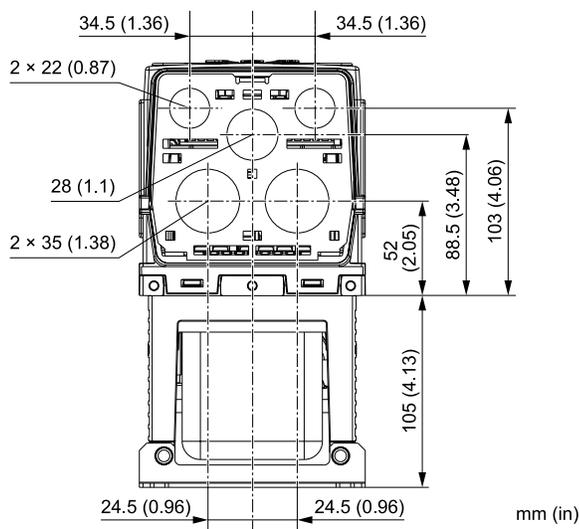


Figure 6.26 Knock-Out Dimensions Diagram 3

■ Drive Models: 2046, 2059, 4040 to 4065

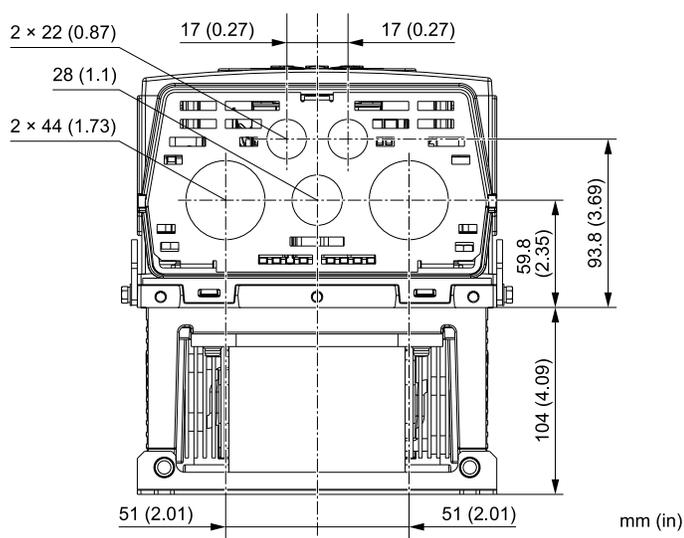


Figure 6.27 Knock-Out Dimensions Diagram 4

■ Drive Models: 2075 to 2114, 4077 to 4124

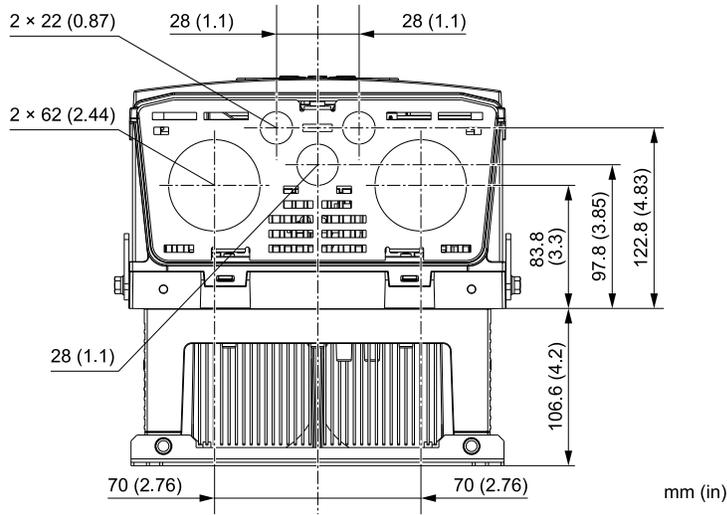


Figure 6.28 Knock-Out Dimensions Diagram 5

■ Drive Models: 2143, 2169, 4156

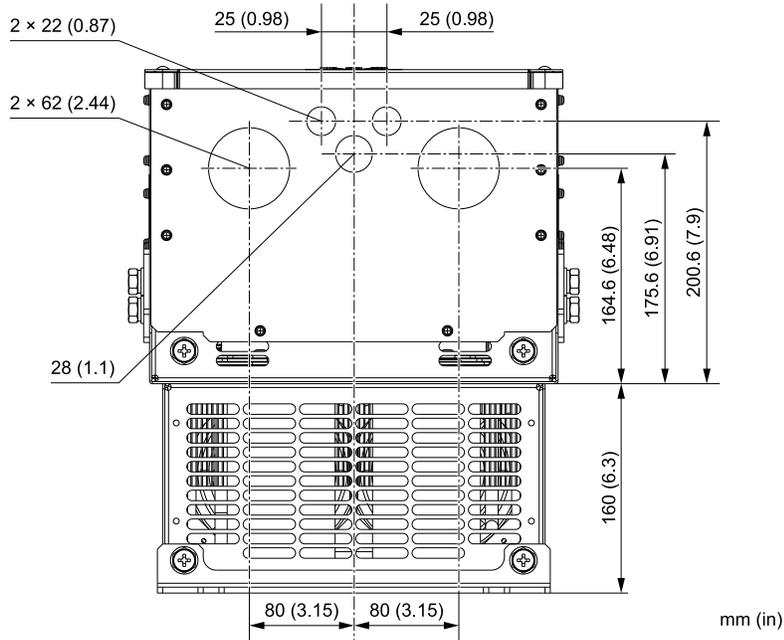


Figure 6.29 Knock-Out Dimensions Diagram 6

◆ IP55/UL Type 12

■ Drive Model: 4005

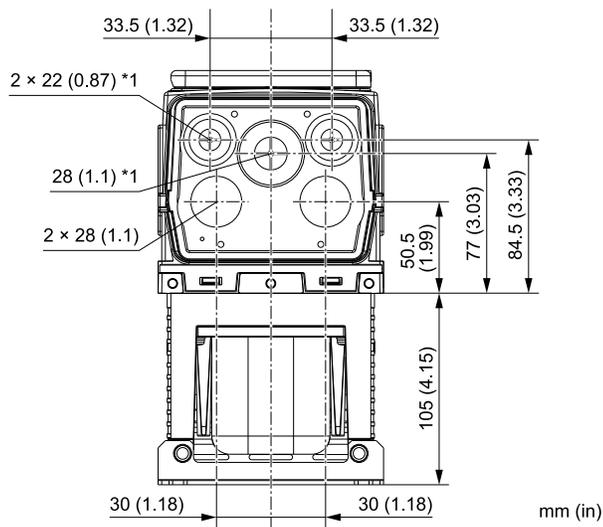


Figure 6.30 Knock-Out Dimensions Diagram 1

\*1 You must install the included rubber waterproofing grommets for knock-out holes that you do not use for control circuit wiring.

■ Drive Models: 2011, 2017, 4008 to 4014

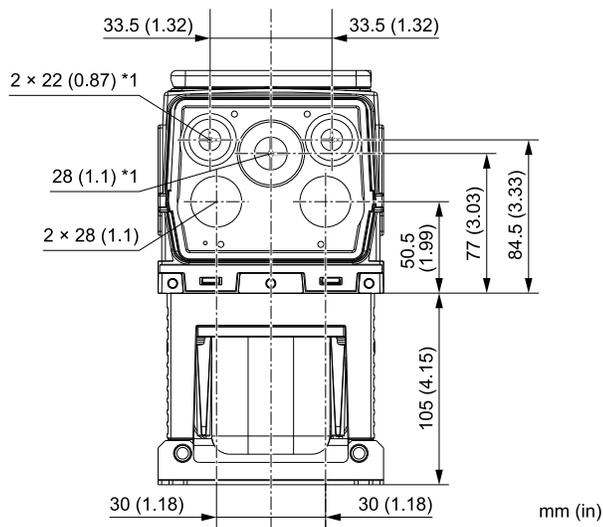


Figure 6.31 Knock-Out Dimensions Diagram 2

\*1 You must install the included rubber waterproofing grommets for knock-out holes that you do not use for control circuit wiring.

■ Drive Models: 2024, 2031, 4021 to 4034

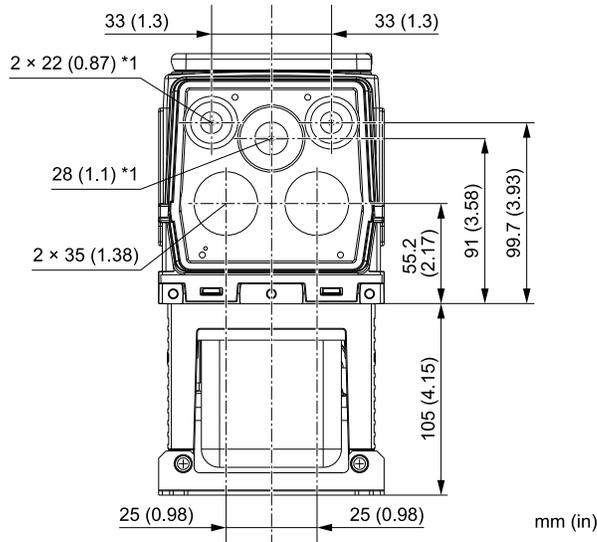


Figure 6.32 Knock-Out Dimensions Diagram 3

\*1 You must install the included rubber waterproofing grommets for knock-out holes that you do not use for control circuit wiring.

■ Drive Models: 2046, 2059, 4040 to 4065


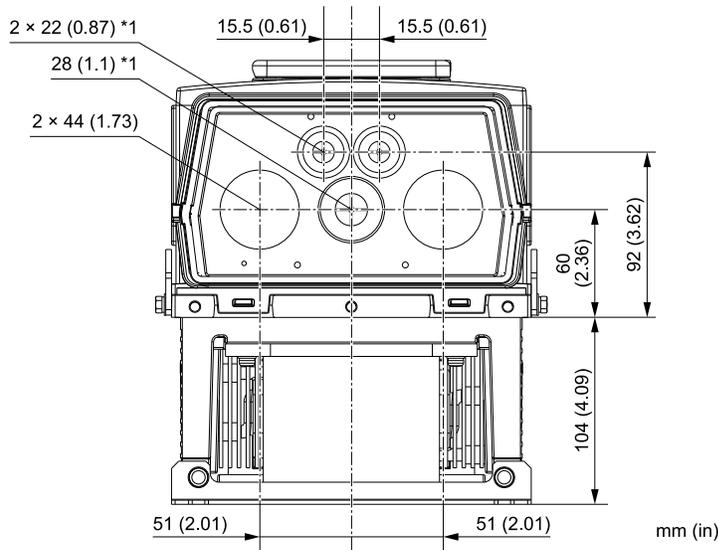


Figure 6.33 Knock-Out Dimensions Diagram 4

\*1 You must install the included rubber waterproofing grommets for knock-out holes that you do not use for control circuit wiring.

### ■ Drive Models: 2075 to 2114, 4077 to 4124

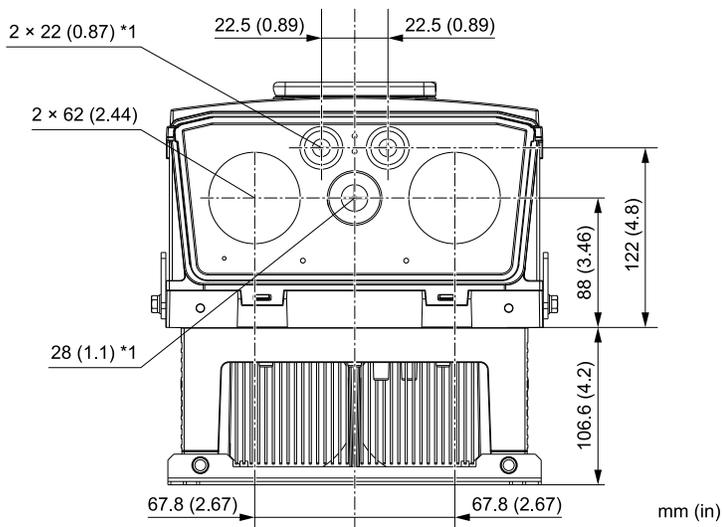


**Figure 6.34 Knock-Out Dimensions Diagram 5**

\*1 You must install the included rubber waterproofing grommets for knock-out holes that you do not use for control circuit wiring.

### ◆ IP55/UL Type 12 with Main Switch

#### ■ Drive Model: 4005

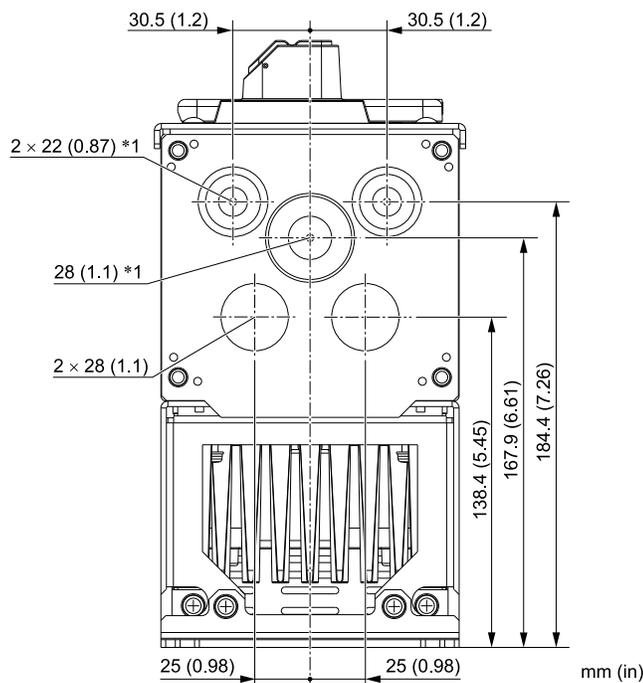

**Figure 6.35 Knock-Out Dimensions Diagram 1**

\*1 You must install the included rubber waterproofing grommets for knock-out holes that you do not use for control circuit wiring.

■ Drive Models: 2011, 2017, 4008 to 4014

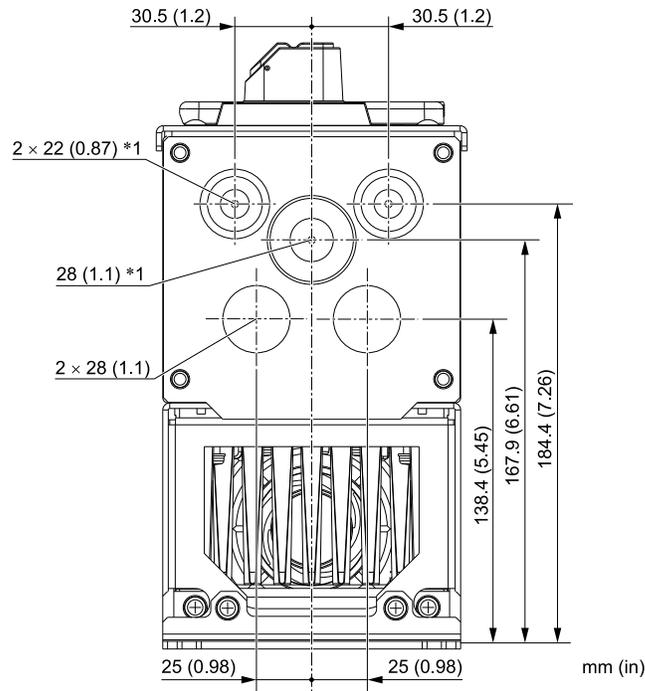


Figure 6.36 Knock-Out Dimensions Diagram 2

\*1 You must install the included rubber waterproofing grommets for knock-out holes that you do not use for control circuit wiring.

■ Drive Models: 2024, 2031, 4021 to 4034

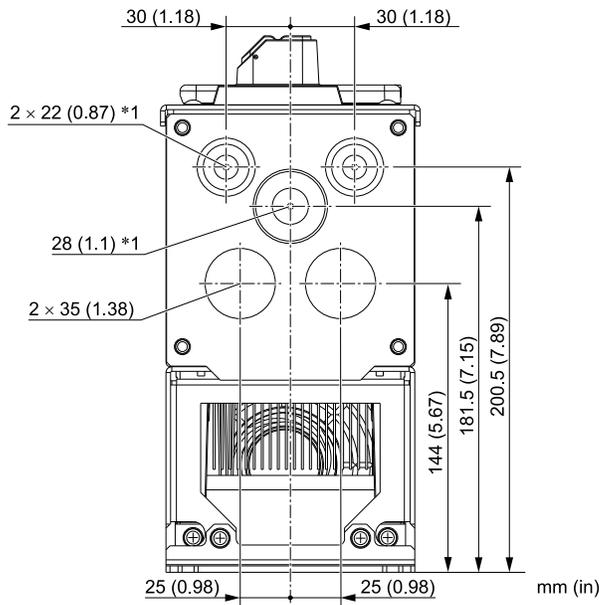


Figure 6.37 Knock-Out Dimensions Diagram 3

\*1 You must install the included rubber waterproofing grommets for knock-out holes that you do not use for control circuit wiring.

### ■ Drive Models: 2046, 2059, 4040 to 4065

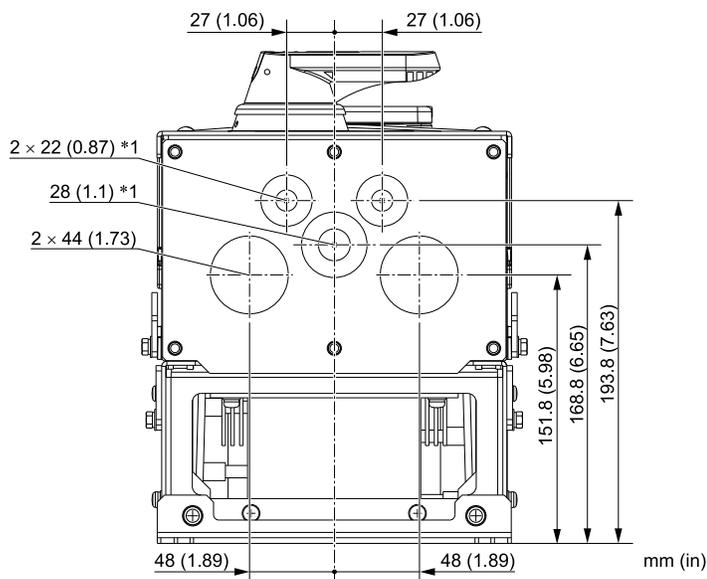


Figure 6.38 Knock-Out Dimensions Diagram 4

\*1 You must install the included rubber waterproofing grommets for knock-out holes that you do not use for control circuit wiring.

### ■ Drive Models: 2075 to 2114, 4077 to 4096

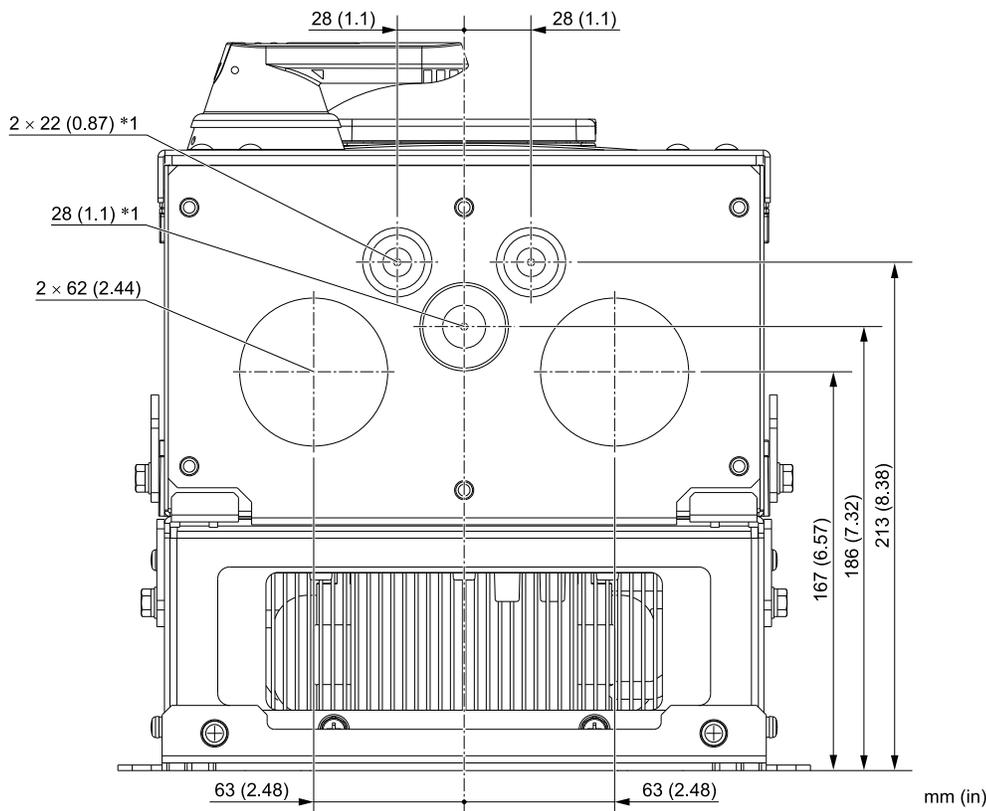


Figure 6.39 Knock-Out Dimensions Diagram 5

\*1 You must install the included rubber waterproofing grommets for knock-out holes that you do not use for control circuit wiring.

## 6.9 Peripheral Devices and Options

There are many available peripheral devices and options for the drive.

Refer to the FP605 Selection Guide (SL.FP605.01) for information about available options, including:

- Main circuit options
- Frequency settings and monitor options
- Keypad options
- Attachment options
- Engineering tools

Contact Yaskawa or your nearest sales representative to make an order.

Refer to the instruction manual for each option for information about option installation and wiring.

# Index

## Numerics

- 24 V power supply
  - Power supply input terminals ..... 331

## A

- Adjustment of control functionality ..... 408
- AEr ..... 111
- Alarm ..... 78, 111
- ALM indicator ..... 349, 352
- ALM/ERR
  - LED status ..... 355
- Altitude
  - Derating ..... 426
- Ambient Temperature Setting
  - Derating ..... 424
- Analog gauge
  - Monitors ..... 369
- Application Preset
  - Operation ..... 399
- Auto-Tuning ..... 401
  - Induction Motor ..... 401
  - PM Motors ..... 401
  - Precautions ..... 404
  - Procedure ..... 386
  - Rotational Auto-Tuning Precautions ..... 405
  - Stationary Auto-Tuning for Line-to-Line Resistance precautions ..... 405
  - Stationary Auto-Tuning Precautions ..... 405
  - Stator resistance Auto-Tuning precautions ..... 405
- Auto-Tuning Error ..... 78, 129
- AUXFB
  - Fault ..... 86
  - Minor Fault ..... 111

## B

- Backlight
  - Timing of shut-off ..... 395
- Backup
  - Parameters (drive to keypad) ..... 378
- Bar graph
  - Monitors ..... 367
- Basic operation
  - Get started ..... 357
- bAT
  - Fault ..... 86
  - Minor Fault ..... 111
- Battery
  - Replacement ..... 71
  - Specifications ..... 71
- bb ..... 111
- bCE
  - Fault ..... 86
  - Minor Fault ..... 111
- Bu-Fb ..... 111
- BuDif ..... 111
- BuFbl ..... 111
- bUS
  - Fault ..... 86
  - Minor Fault ..... 112
- bUSy ..... 112

## C

- CALL ..... 112
- Carrier Frequency
  - Derating ..... 423
- CE
  - Fault ..... 86
  - Minor Fault ..... 112–113
- Checklist
  - Test run ..... 411
- Circulation Fan
  - Replacement ..... 25
- CoF ..... 87
- Control circuit terminals
  - Configuration of terminal block ..... 333
  - I/O terminals function selection switches ..... 338
  - Terminal functions ..... 329
  - Wire gauge ..... 335
  - Wiring ..... 328
  - Wiring procedure for terminal block ..... 336
- Cooling Fan
  - Estimated Lifespan ..... 23
  - Replacement ..... 25
- Copy Function Error ..... 78, 132
- CPEr ..... 132
- CPF00 ..... 87
- CPF01 ..... 87
- CPF02 ..... 87
- CPF03 ..... 87
- CPF06 ..... 88
- CPF07 ..... 88
- CPF08 ..... 88
- CPF11 ..... 88
- CPF12 ..... 88
- CPF13 ..... 88
- CPF14 ..... 88
- CPF16 ..... 89
- CPF17 ..... 89
- CPF18 ..... 89
- CPF19 ..... 89
- CPF20 ..... 89
- CPF21 ..... 89
- CPF22 ..... 89
- CPF23 ..... 89
- CPF24 ..... 90
- CPF26 ..... 90
- CPF27 ..... 90
- CPF28 ..... 90
- CPF29 ..... 90
- CPF30 ..... 90
- CPF31 ..... 90
- CPF32 ..... 90
- CPF33 ..... 91
- CPF34 ..... 91
- CPF35 ..... 91
- CPF36 ..... 91
- CPF37 ..... 91
- CPF38 ..... 91
- CPF39 ..... 91
- CPyE ..... 132
- Crimp ferrule ..... 335
- CrST ..... 113
- CSEr ..... 132

CyPo .....	113
<b>D</b>	
Data log .....	393
Monitor selection .....	393
Sampling time .....	394
Start procedure .....	392
Stop procedure .....	392
Delete	
Delete Backed-up Parameters .....	381
Derating	
Altitude .....	426
Ambient Temperature Setting .....	424
Carrier Frequency .....	423
dEv	
Fault .....	91
Minor Fault .....	113
dFPS .....	132
Diagnosing and Resetting Faults .....	134
DIFF	
Fault .....	92
Minor Fault .....	114
DIP switch .....	338
dnE .....	114
Drive	
Exterior Dimensions Diagram (IP20) .....	429–430, 432
Exterior Dimensions Diagram (IP20/UL Type 1) .....	450–452
Exterior Dimensions Diagram (IP55/UL Type 12 with Main Switch) .....	443–447, 456–457
Exterior Dimensions Diagram (IP55/UL Type 12) .....	438–442, 453–455
Exterior Dimensions Diagram (IP55/UL Type 12 with Main Switch) .....	455
Exterior Dimensions Diagram (UL Type 1) .....	432–437
Inspection .....	20
Long-Term Storage .....	73
Rating (208 V) .....	415
Rating (480 V) .....	416
Drive watt loss .....	421
DS .....	114
dv7 .....	92
<b>E</b>	
EF .....	114
EF0	
Fault .....	92
Minor Fault .....	114
EF1	
Fault .....	92
Minor Fault .....	114
EF2	
Fault .....	92
Minor Fault .....	114
EF3	
Fault .....	92
Minor Fault .....	115
EF4	
Fault .....	93
Minor Fault .....	115
EF5	
Fault .....	93
Minor Fault .....	115
EF6	
Fault .....	93

Minor Fault .....	115
EF7	
Fault .....	93
Minor Fault .....	115
EF8	
Fault .....	93
Minor Fault .....	115
Electrolytic Capacitor	
Estimated Lifespan .....	23
End1 .....	129
End2 .....	129
End3 .....	129
End4 .....	129
End5 .....	129
End6 .....	129
End7 .....	129
End8 .....	129
End9 .....	130
EOF .....	116
EOR .....	116
EP24v .....	116
Er-01 .....	130
Er-02 .....	130
Er-03 .....	130
Er-04 .....	130
Er-05 .....	130
Er-08 .....	131
Er-09 .....	131
Er-12 .....	131
Er-13 .....	131
Er-18 .....	131
Er-19 .....	131
Er-20 .....	131
Er-25 .....	131
Err .....	93
Error Code List .....	79
Exterior Dimensions Diagram (IP20)	
Drive .....	429–430, 432
Exterior Dimensions Diagram (IP20/UL Type 1)	
Drive .....	450–452
Exterior Dimensions Diagram (IP55/UL Type 12 with Main Switch)	
Drive .....	443–447, 455–457
Exterior Dimensions Diagram (IP55/UL Type 12)	
Drive .....	438–442, 453–455
Exterior Dimensions Diagram (UL Type 1)	
Drive .....	432–437
External 24 V power supply	
Power supply input terminals .....	331
<b>F</b>	
FAn1 .....	94
Fault .....	78, 86
Fault Code List .....	79
Fault history	
Display procedure .....	385
Fault Reset .....	134
FDBKL	
Fault .....	94
Minor Fault .....	116
Fine tuning .....	408
FLGT .....	116
FR<MS .....	116
FR<TH .....	116

Frequency reference	
Making changes using keypad.....	363
<b>G</b>	
Getting set up.....	357
GF.....	94
Ground	
Drive.....	325
<b>H</b>	
HCA.....	117
HFB.....	94
HIAUX	
Fault.....	94
Minor Fault.....	117
HIFB.....	117
HLCE.....	95
HOME screen.....	363
HWL.....	95
<b>I</b>	
iFEr.....	132
Induction Motor	
Auto-Tuning.....	401
Inspection	
Drive.....	20
Installation	
Front cover.....	290
Terminal cover.....	290
Interlock	
Circuit example.....	344
<b>J</b>	
Jog operation.....	363
JOG operation.....	363
Jumper switch.....	338
<b>K</b>	
Keypad	
Application Preset.....	399
Backlight setting.....	395
Battery Replacement.....	71
Data log setting.....	393
Display drive information.....	397
Display software version.....	397
HOME screen.....	363
Language selection.....	388
Meaning of indicators.....	349
Method of operation.....	349
Set date and time.....	389
Set time.....	389
Start/stop data logging.....	392
<b>L</b>	
L24v.....	117
Language selection	
Procedure.....	388
LCP.....	117
LED status ring	
ALM/ERR.....	355
Ready.....	355
RUN.....	355
LF.....	95
LF2.....	95
LFB.....	95
LOAUX	
Fault.....	95
Minor Fault.....	117
LOCAL/REMOTE indicator.....	349, 352
LOFB.....	118
LoG.....	118
LOP	
Fault.....	96
Minor Fault.....	118
LSP.....	118
LT-1.....	118
LT-2.....	118
LT-3.....	118
LT-4.....	118
LWL.....	96
LWT.....	119
<b>M</b>	
Main circuit terminals	
Configuration of terminal block.....	306
Line voltage drop.....	314
Wire gauge.....	314
Wiring.....	303
Main menu	
Display procedure.....	363
MEMOBUS/Modbus communications	
Setting for termination resistor.....	341
MEMOBUS/Modbus Communications	
Serial communication terminals.....	333
microSD card	
Insertion slot.....	349
Minor Fault.....	78, 111
Minor Fault Code List.....	79
Monitors	
Data log setting.....	393–394
Display analog gauge.....	369
Display bar graph.....	367
Display procedure.....	364
Set custom monitors.....	365
Show custom monitors.....	366
Start/stop data logging.....	392
Trend Plot Display.....	370
Motor	
Change direction of motor rotation.....	363
Wiring.....	303
Wiring distance.....	325
<b>N</b>	
ndAT.....	132
NMS	
Fault.....	96
Minor Fault.....	119
nSE.....	96
<b>O</b>	
oC.....	96
OD	
Fault.....	97
Minor Fault.....	119
oFA00.....	97
oFA01.....	97
oFA02.....	98
oFA03.....	98
oFA04.....	98
oFA05.....	98

oFA06.....	98	oPE10.....	128
oFA10.....	98	oPE11.....	128
oFA11.....	98	oPE16.....	128
oFA12.....	98	oPE33.....	128
oFA13.....	98	oPr.....	106
oFA14.....	99	Options.....	458
oFA15.....	99	oS	
oFA16.....	99	Fault.....	106
oFA17.....	99	Minor Fault.....	120
oFA30.....	99	ov	
oFA31.....	99	Fault.....	106
oFA32.....	99	Minor Fault.....	120
oFA33.....	99	ov2.....	107
oFA34.....	100	ovEr.....	120
oFA35.....	100	<b>P</b>	
oFA36.....	100	Parameter	
oFA37.....	100	Backup (drive to keypad).....	378
oFA38.....	100	Changing setting values.....	375
oFA39.....	100	Checking modified parameters.....	382
oFA40.....	100	Checking user custom parameters.....	376
oFA41.....	100	Delete Backed-up Parameters.....	381
oFA42.....	101	Restore (Auto Backup).....	398
oFA43.....	101	Restore (keypad to drive).....	379
oFb00.....	101	Restoring default settings.....	384
oFb01.....	101	Verify (keypad and drive).....	380
oFb02.....	101	Parameter Setting Errors.....	78, 124
oFb03.....	101	PASS.....	121
oFb04.....	101	PC	
oFb05.....	101	Connection procedure.....	343
oFb06.....	101	PE1.....	107
oFb10.....	102	PE2.....	107
oFb11.....	102	Peripheral Devices.....	458
oFb12.....	102	PF.....	107, 121
oFb13.....	102	PM Motors	
oFb14.....	102	Auto-Tuning.....	401
oFb15.....	102	Power loss.....	421
oFb16.....	102	<b>R</b>	
oFb17.....	102	R-DNE.....	121
oH		Rating (208 V)	
Fault.....	103	Drive.....	415
Minor Fault.....	119	Rating (480 V)	
oH1.....	103	Drive.....	416
oH2.....	119	rdEr.....	132
oH3		Ready	
Fault.....	103	LED status.....	355
Minor Fault.....	119	Remove	
oH4.....	104	Front cover.....	290
oL1.....	104	Terminal cover.....	290
oL2.....	105	RESET key.....	349
oL3		Restore	
Fault.....	105	Parameters (Auto Backup).....	398
Minor Fault.....	120	Parameters (keypad to drive).....	379
oL4		RJ-45 connector.....	349
Fault.....	105	Rotational Auto-Tuning	
Minor Fault.....	120	Induction Motor.....	401
oL7.....	106	PM Motors.....	401
oPE01.....	124	Precautions.....	405
oPE02.....	124	rUn.....	121
oPE03.....	124	RUN	
oPE05.....	126	LED status.....	355
oPE07.....	126	RUN indicator.....	349, 352
oPE08.....	127	RUN key.....	349
oPE09.....	128		



---

## Revision History

Date of Publication	Revision Number	Section	Revised Content
February 2022	-	-	First Edition. This manual is based on SIEPC7106171FB<1>.



# YASKAWA

## FP605 DRIVE MAINTENANCE & TROUBLESHOOTING

### YASKAWA AMERICA, INC.

2121, Norman Drive South, Waukegan, IL  
60085, U.S.A.  
+1-800-YASKAWA (927-5292)  
[www.yaskawa.com](http://www.yaskawa.com)

### DRIVE CENTER (INVERTER PLANT)

2-13-1, Nishimiyaichi, Yukuhashi, Fukuoka,  
824-8511, Japan  
Phone: +81-930-25-2548  
[www.yaskawa.co.jp](http://www.yaskawa.co.jp)

### YASKAWA EUROPE GmbH

Hauptstraße 185, 65760 Eschborn, Germany  
Phone: +49-6196-569-300  
E-mail: [support@yaskawa.eu.com](mailto:support@yaskawa.eu.com)  
[www.yaskawa.eu.com](http://www.yaskawa.eu.com)

### YASKAWA ELÉTRICO DO BRASIL LTDA.

777, Avenida Piraporinha, Diadema, São  
Paulo, 09950-000, Brasil  
Phone: +55-11-3585-1100  
[www.yaskawa.com.br](http://www.yaskawa.com.br)

In the event that the end user of this product is to be the military and said product is to be employed in any weapons systems or the manufacture thereof, the export will fall under the relevant regulations as stipulated in the Foreign Exchange and Foreign Trade Regulations. Therefore, be sure to follow all procedures and submit all relevant documentation according to any and all rules, regulations and laws that may apply.

Specifications are subject to change without notice for ongoing product modifications and improvements.

Original instructions.

© 2022 YASKAWA America, Inc.

YASKAWA America, Inc.



\*TOEPYAIFP6501\*

TOEPYAIFP6501  
Revision: A <0>-0  
February 2022  
Published in USA